


Reset Taster

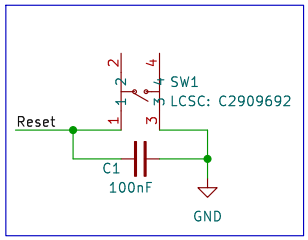


LED

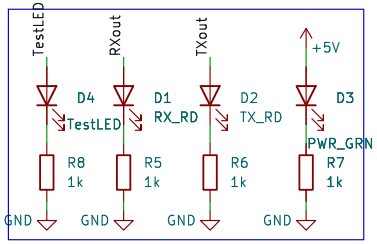


CH340 USB to Serial

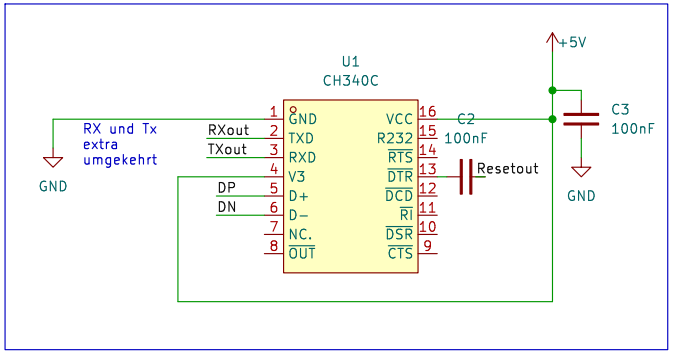


Atmega 328p−Au

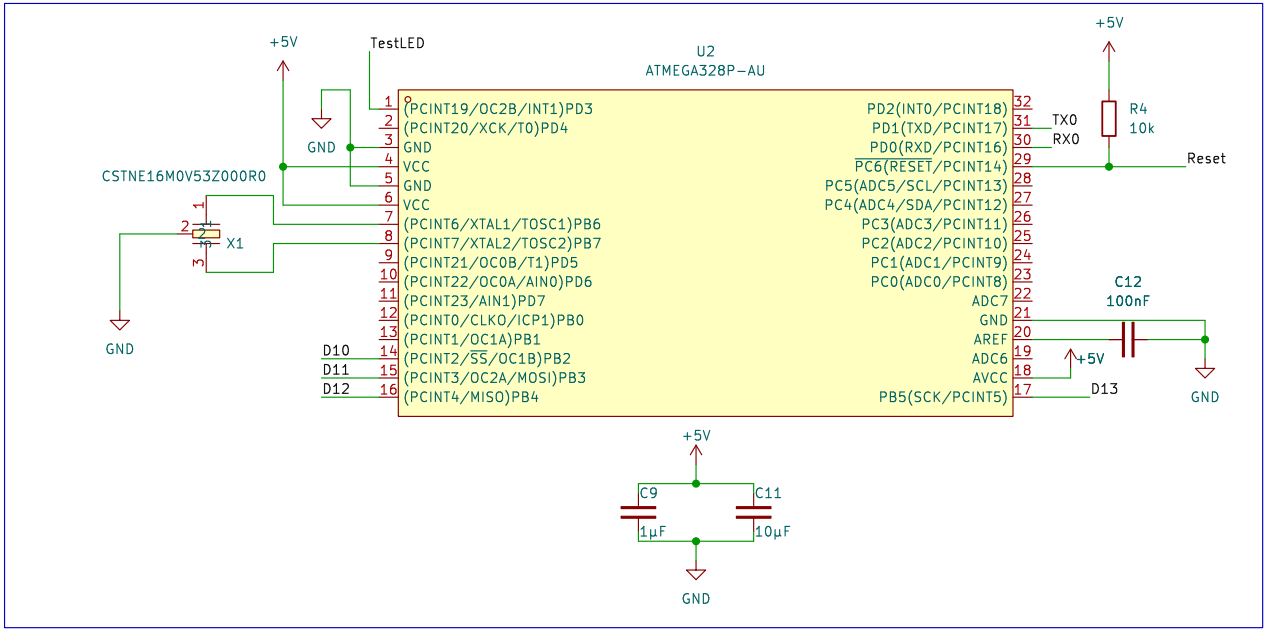


USB−C Anschluss

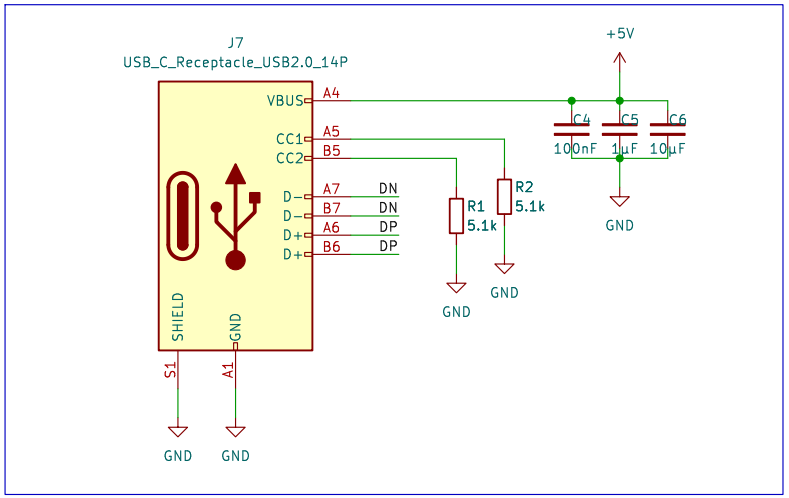


UPLOAD OUT

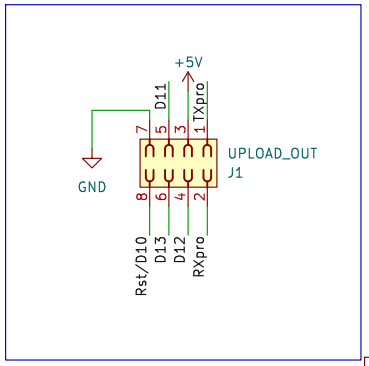

Bootloader/Code Upload

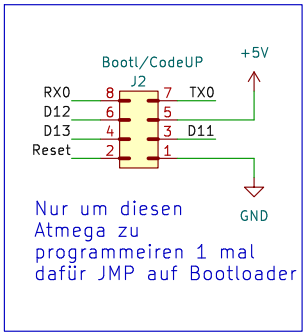

Bootloader/ProgramJUMPER

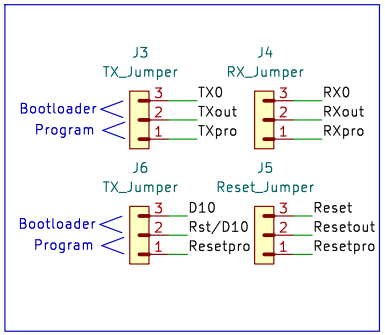

Sheet: /
File: Atmega_Programmer.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. kicad 7.0.10		Id: 1/1