
## **55.Tire Pressure Monitoring System**

## **A: WIRING DIAGRAM**

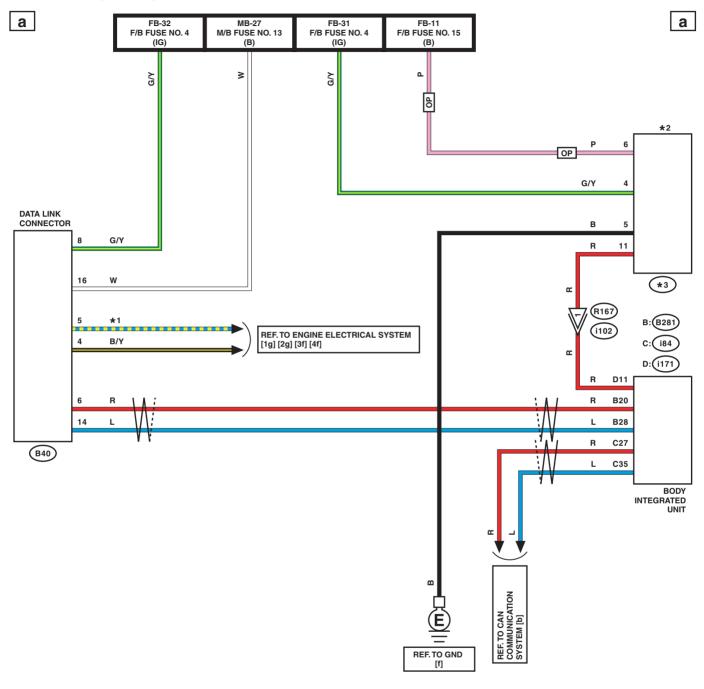


OP: WITHOUT PUSH BUTTON START

\*1 : ENGINE TYPE FA : B/R ENGINE TYPE EJ : B/W

WI-44593

<sup>\*2 :</sup> WITHOUT PUSH BUTTON START : TPMS & KEYLESS ENTRY CM WITH PUSH BUTTON START : TPMS CM

<sup>\*3 :</sup> WITHOUT PUSH BUTTON START : R221 WITH PUSH BUTTON START : R211

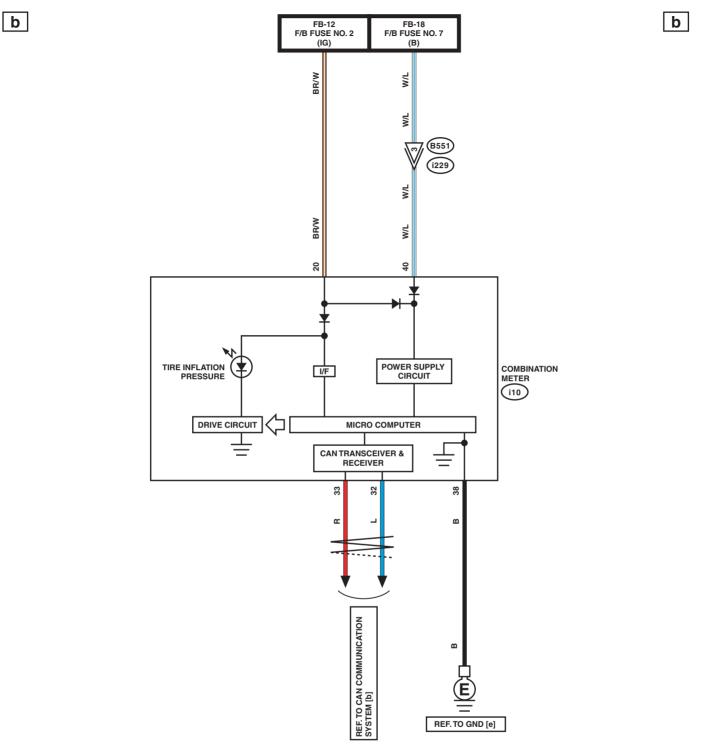

WI-44594

С

## **LIST OF CONNECTORS**



B40 (B)  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	B: B281  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35	1 2 3 4 5 6 7 i 21 22 23 24 25 26 27 2	i10 3 9 10 11 12 13 14 15 16 17 18 19 20 8 29 30 31 32 33 34 35 36 37 38 39 40	C: \( \begin{array}{c c c c c c c c c c c c c c c c c c c
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	D: (171)  1 2 3 4 5 6 7  8 9 10 11 12 13 14 15 16 17  18 19 20 21 22 23 26 27 28 29 30 31	1 2 3 4 5 6 7 8 9 10 11 12	OP: R211 WP: R221 1 2 3 4 5 6 7 8 9 10 11 12	

OP: WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START