
64. Bulkhead Wiring Harness (In Compartment) RH

A: LOCATION

1. ENGINE TYPE FA

	Conn	ector		Connecting to		
No.	Pole	Color	Area	No.	Description	
AB6	30	Υ	D-2		Airbag CM	
AB9	4	Υ	D-2		Passenger's airbag module	
AB65	2	*	D-3	B556	Bulkhead wiring harness	
AD11	2	*	D-3	B579		
AD12	3	*	D-3		Keyless access interior antenna (front)	
B30	8	В	C-5	D1	Front door cord RH	
B57	4	*	B-2		Power transistor	
B87	2	*	B-4		Blower motor	
B88	2	BR	B-2		Evaporator sensor	
B90	17	GR	A-5	R50	Roof cord	
B97	20	*	C-5	R1	Rear wiring harness RH	
B116	8	*	D-3		Select lever	
B163	6	В	B-4		Intake door actuator	
B220	44	*	B-3		Relay holder	
B239	6	*	C-2		Air mix door actuator RH	
B358	2	*	D-3		Select lever illumination	
B386	4	*	C-4		Blower motor relay	
B556	2	*	D-3	AB65	Airbag wiring harness	
B579	2	*	D-3	AD11	Keyless access interior antenna adapter cord	
B583	12	*	C-3	i237	Instrument panel wiring harness	
B584	20	*	C-3	i238		
★: White o	r natural colo	or				

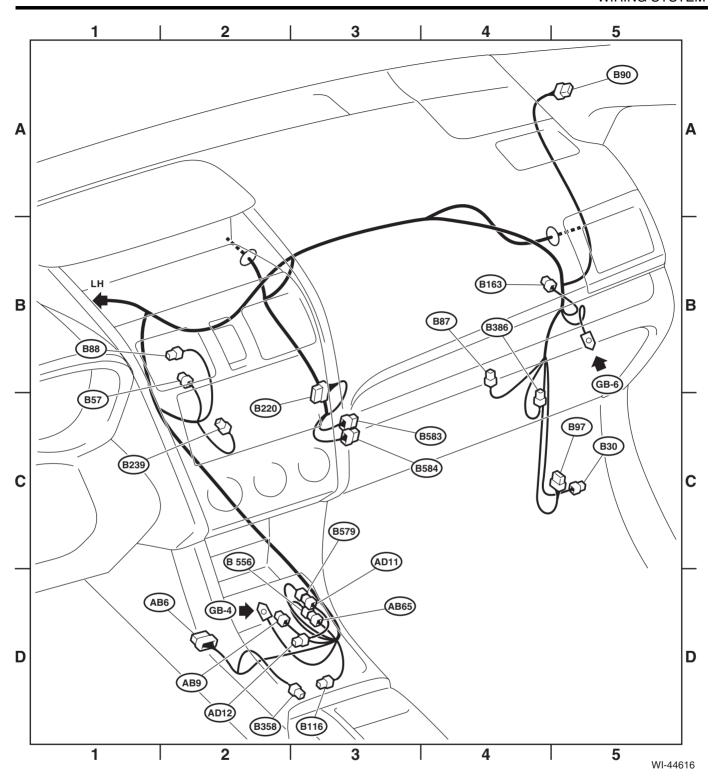

2. ENGINE TYPE EJ

Connector				Connecting to		
No.	Pole	Color	Area	No.	Description	
AB6	30	Υ	D-2		Airbag CM	
AB9	4	Υ	D-2		Passenger's airbag module	
AB65	2	*	D-3	B556	Bulkhead wiring harness	
AD12	3	*		D-3	Keyless access interior antenna (front)	
AD13	10	GR	B4	D-2	Bulkhead wiring harness	
AD14	2	*		D-3	STI illumination	
B1	6	*	B-3		J/C	
B4	10	В	D-2	AD13	Inside front antenna adapter cord	
B30	8	В	C-5	D1	Front door cord RH	
B57	4	*	B-2		Power transistor	
B83	6	*	B-2		J/C	
B87	2	*	B-4		Blower motor	
B88	2	BR	B-2		Evaporator sensor	
B90	17	GR	A-5	R50	Roof cord	
B97	20	*	C-5	R1	Rear wiring harness RH	
B122	8	*	B-3		J/C	
B134	34	*	B-3		ECM	
B135	35	*	B-3			
B136	35	*	B-2			
B137	31	*	B-2			
B163	6	В	B-4		Intake door actuator	
B220	44	*	B-3		Relay holder	
B239	6	*	C-2		Air mix door actuator RH	
B358	2	*	D-3		Select lever illumination	
B380	32	*	C-2		DCCD CM	
B386	4	*	C-4		Blower motor relay	
B556	2	*	D-3	AB65	Airbag wiring harness	
B583	12	*	C-3	i237	Instrument panel wiring harness	
B584	20	*	C-3	i238		

