


6. Airbag System


A: WIRING DIAGRAM

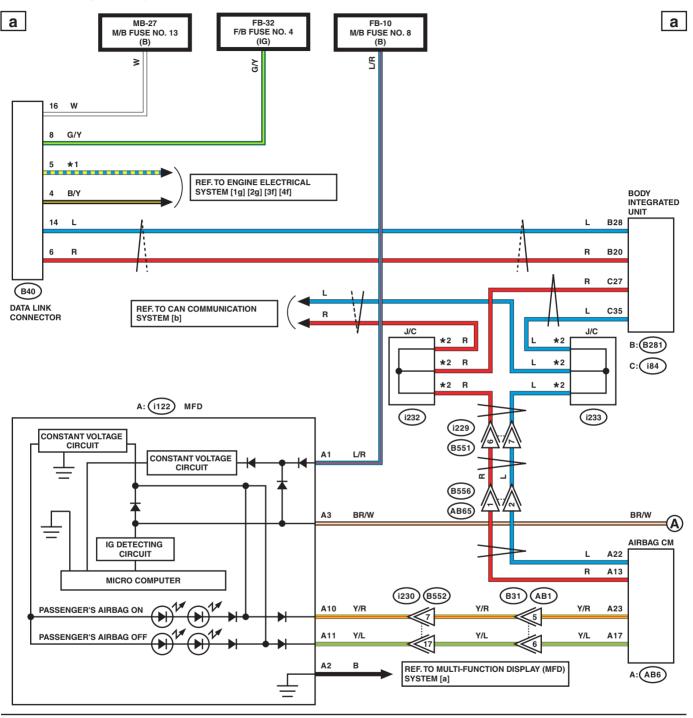


*1 : ENGINE TYPE FA : B/R ENGINE TYPE EJ : B/W *2 :TERMINAL No. OPTIONAL ARRANGEMENT

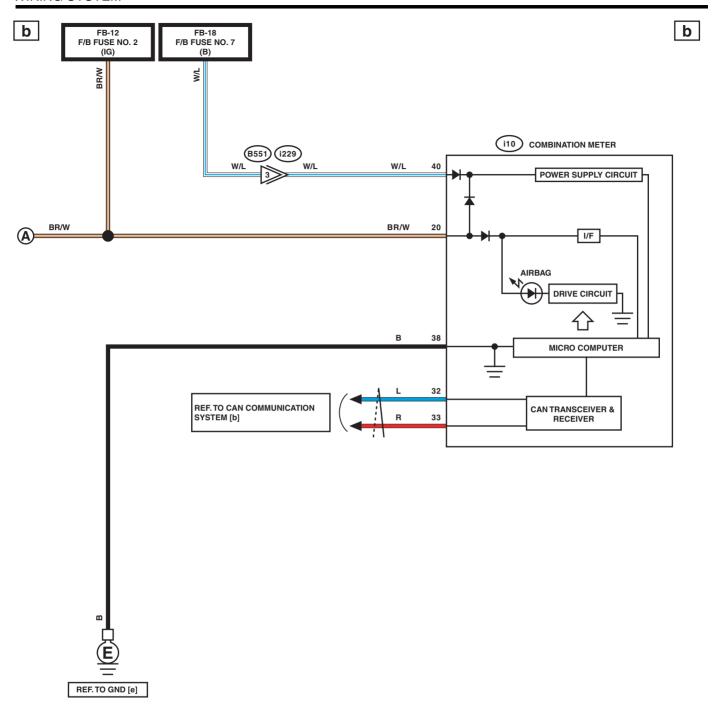

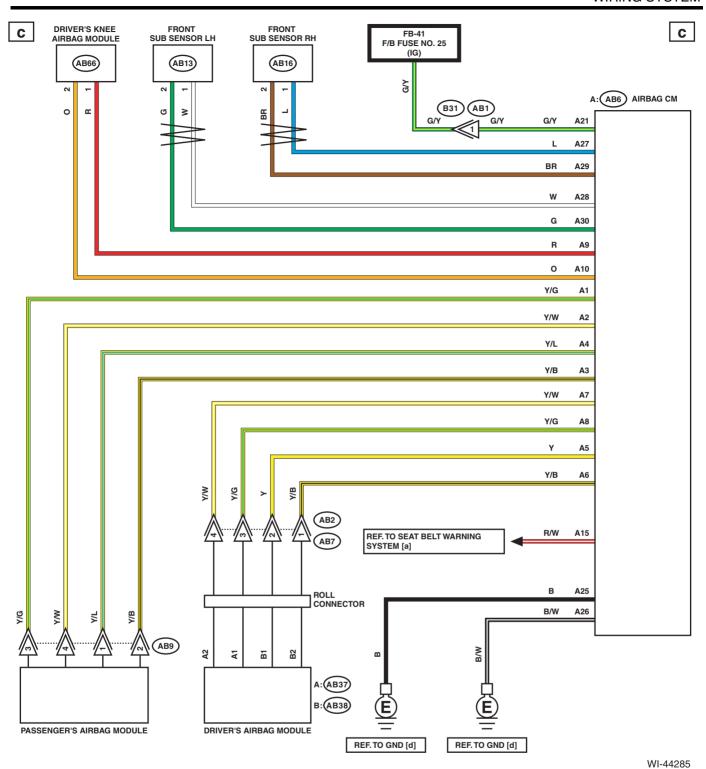

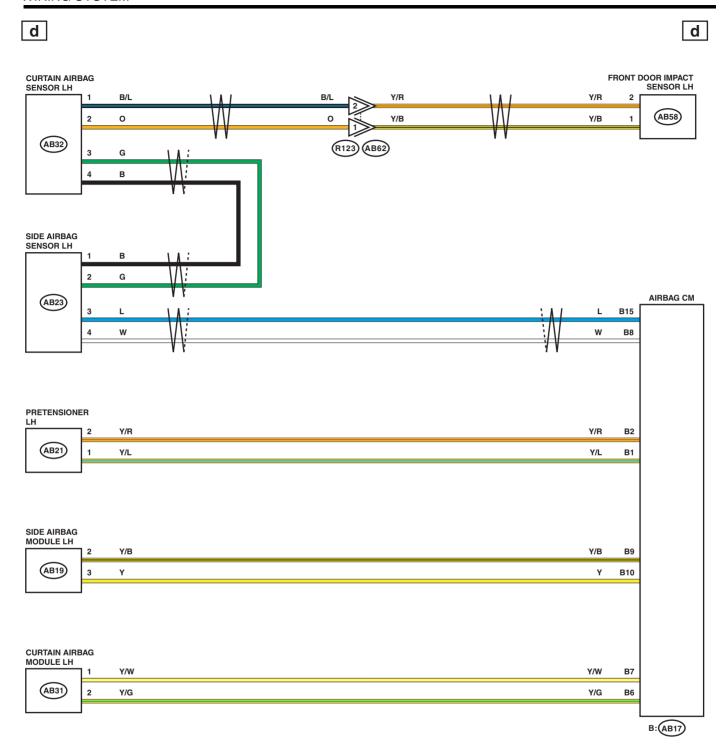

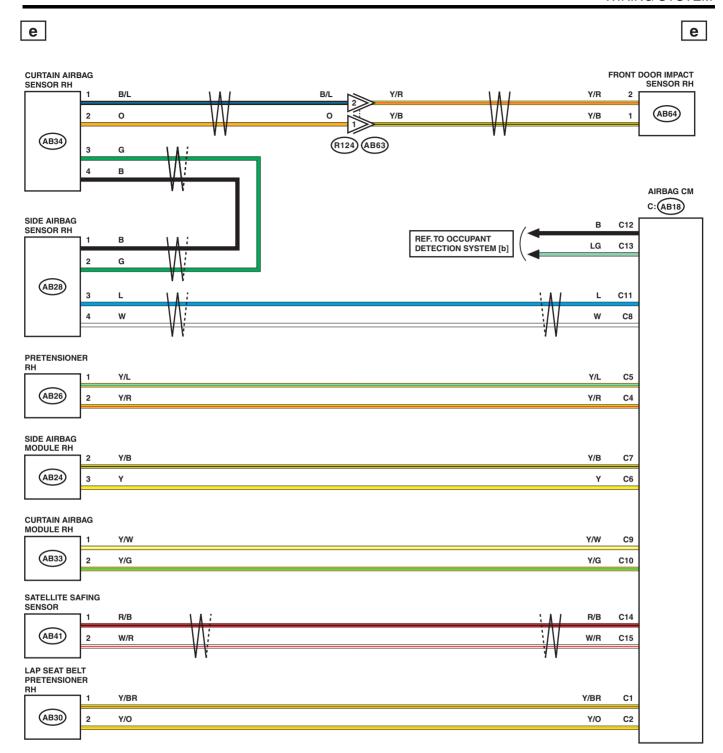


f

LIST OF CONNECTORS

B: (AB17) (Y)

C: (AB18) (Y)



f

AB2 (Y)	A: (AB6) (Y) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30		(Y) (AB13 (AB58) (Y) (Y) (AB16 (AB64) (Y)	B: AB17 (Y) 1 2 3 4 5	C: (AB18) (Y) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	(Y) (AB24) (Y) (1 2 3 4
\sim	(F) (AB28) (AB34) (Y)	AB37 (O) B: AB38 2 2 1	(B) (Y)	(Y) (AB62) (AB63) (1) (1) (2)	B31 (GR) 2 3 4 9 10	B40 (B) 2 3 4 5 6 7 8 0 11 12 13 14 15 16
B: (B281) 1 2 3 4 8 9 10 11 12 13 14 20 21 22 23 28 29 30 31 32	15 16 17 18 19 (B556)		9 10 11 12 13 14 15 16 1 29 30 31 32 33 34 35 36 3		20 21 22 23 24 25 26 27	A: (122) (B) 1 2 3 4 5 6 7 8 9 10 11 12
1 2 3 4 5 6 7 8 9 1011112	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17					