

27.Immobilizer System

A: WIRING DIAGRAM


1. ENGINE TYPE FA (WITHOUT PUSH BUTTON START)

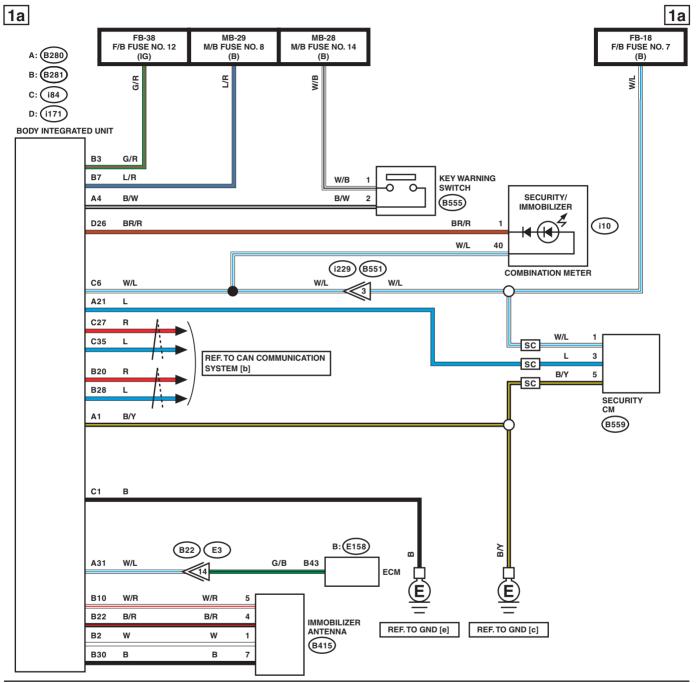


SC : WITH SECURITY CM

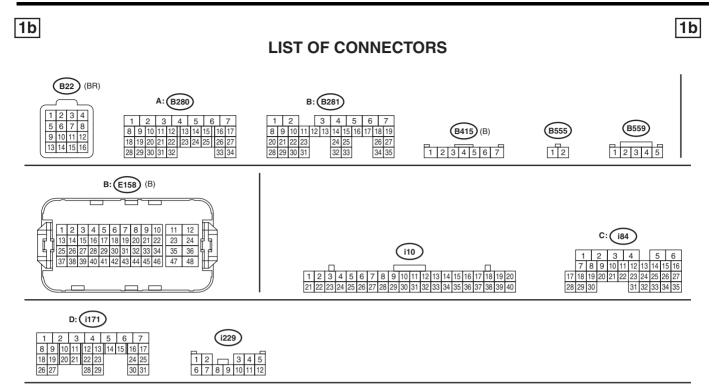

2. ENGINE TYPE FA (WITH PUSH BUTTON START)

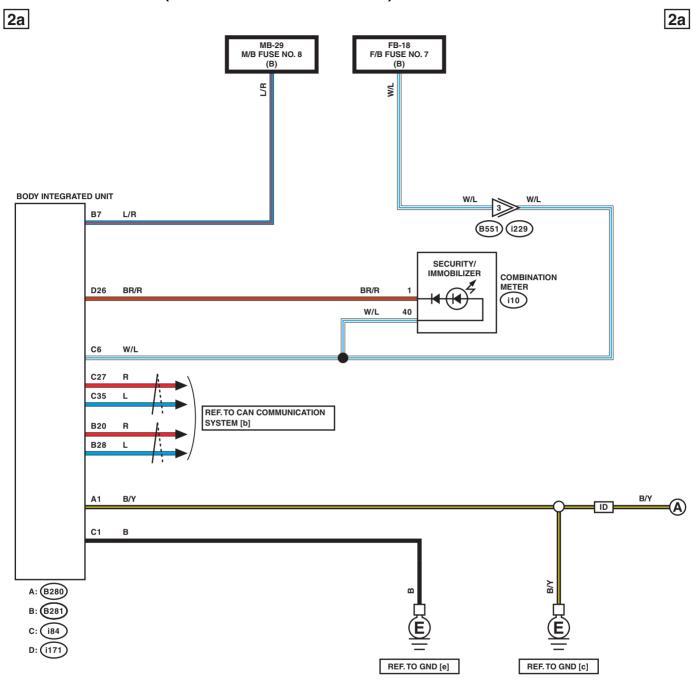


ID: WITH ID CODE BOX

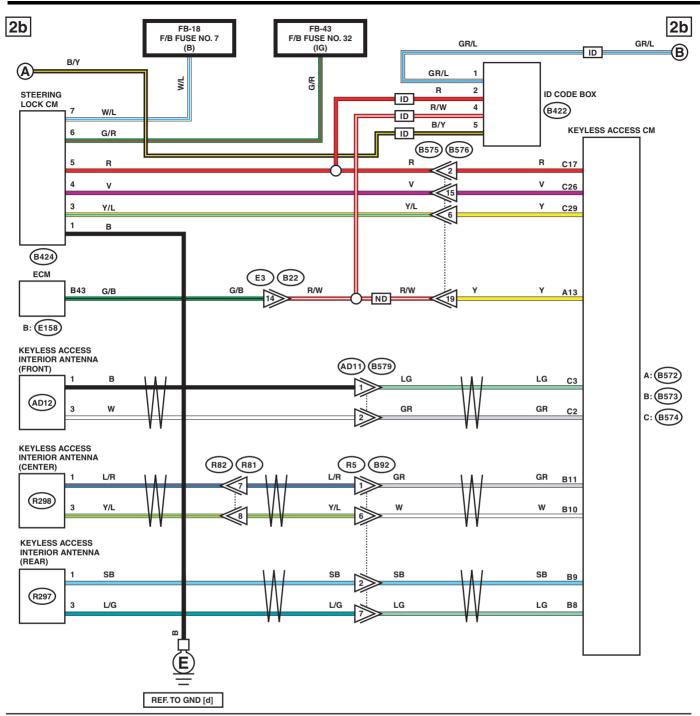

ND : WITHOUT ID CODE BOX

ID: WITH ID CODE BOX

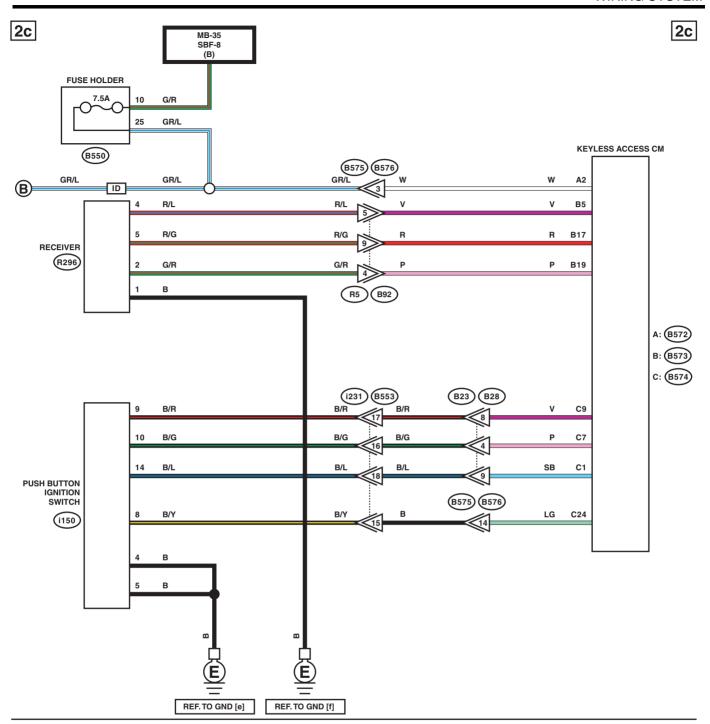


ID: WITH ID CODE BOX

2d 2d LIST OF CONNECTORS (BR) B: (B281) A: (B280) 1 2 3 4 B92 1 2 3 4 5 6 7 3 4 5 6 7 5 6 7 8 9 10 11 12 13 14 15 16 (B422) (AD12) 8 9 10 11 12 13 14 15 16 17 8 9 10 11 12 13 14 15 16 17 18 19 1 2 3 4 5 26 27 34 35 1 2 3 (B550) (B) A: (B572) B: (B573) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 1 2 1 2 3 4 3 4 5 6 7 8 9 10 5 6 7 8 9 10 11 12 13 14 15 16 **B424** (B) 11 12 13 14 15 16 17 18 17 18 19 20 21 22 23 24 25 26 27 28 1 2 3 4 5 6 7 FUSE HOLDER B: (E158) (B) C: (B574) 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 1 2 3 4 5 6 (B575) 7 8 9 10 11 12 13 14 15 16 17 18 37 38 39 40 41 42 43 44 45 46 47 48 B579 1 2 3 4 5 6 7 8 9 10 11 19 20 21 22 23 24 25 26 27 28 29 30 1 2 12 13 14 15 16 17 18 19 20 21 22 D: (171) C: (i84) (i10) (i150)
 1
 2
 3
 4
 5
 6
 7

 8
 9
 10
 11
 12
 13
 14
 15
 16
 17

 18
 19
 20
 21
 22
 23
 24
 25
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 (i229) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 R297 (i231) (B) R298 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 1 2 3 1 2 3 4 5

3. ENGINE TYPE EJ (WITHOUT PUSH BUTTON START)

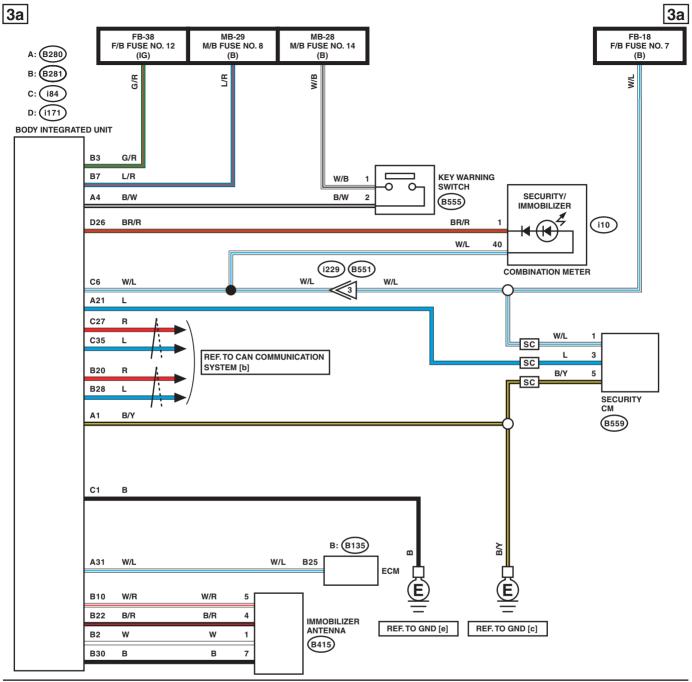

SC : WITH SECURITY CM

3b 3b **LIST OF CONNECTORS** B:(B135) B: (B281) A: B280
 1
 2
 3
 4
 5
 6
 7

 8
 9
 10
 11
 12
 13
 14
 15
 16
 17

 18
 19
 20
 21
 22
 23
 24
 25
 26
 27

 28
 29
 30
 31
 32
 33
 34

 1
 2
 3
 4
 5
 6
 7

 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19

 20
 21
 22
 23
 24
 25
 26
 27


 28
 29
 30
 31
 32
 33
 34
 35
 B415 (B) B555 B559 1 2 3 4 5 1 2 3 4 5 6 7 D: (1171) C: (i84) (i10) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35
 1
 2
 3
 4
 5
 6
 7

 8
 9
 10
 11
 12
 13
 14
 15
 16
 17


 18
 19
 20
 21
 22
 23
 24
 25

 26
 27
 28
 29
 30
 31
(i229) 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40

4. ENGINE TYPE EJ (WITH PUSH BUTTON START)

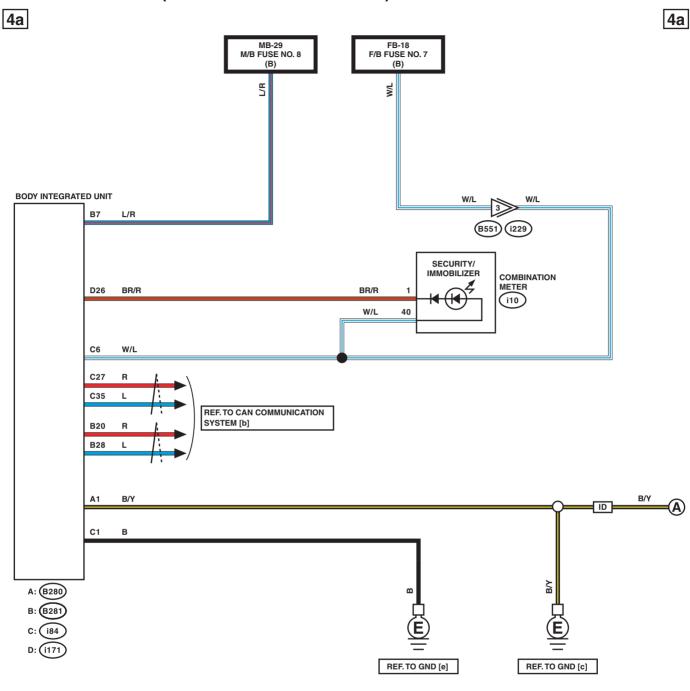


ID: WITH ID CODE BOX

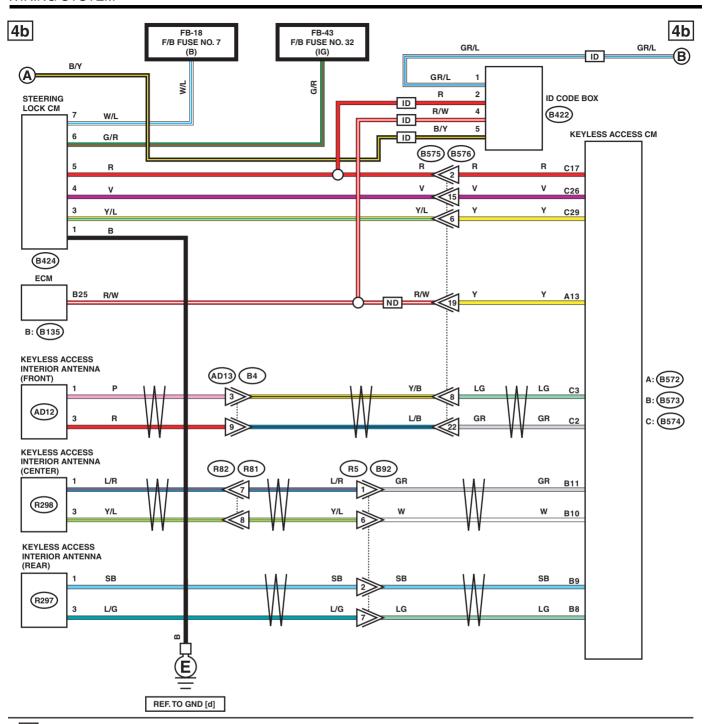

ND: WITHOUT ID CODE BOX

ID: WITH ID CODE BOX

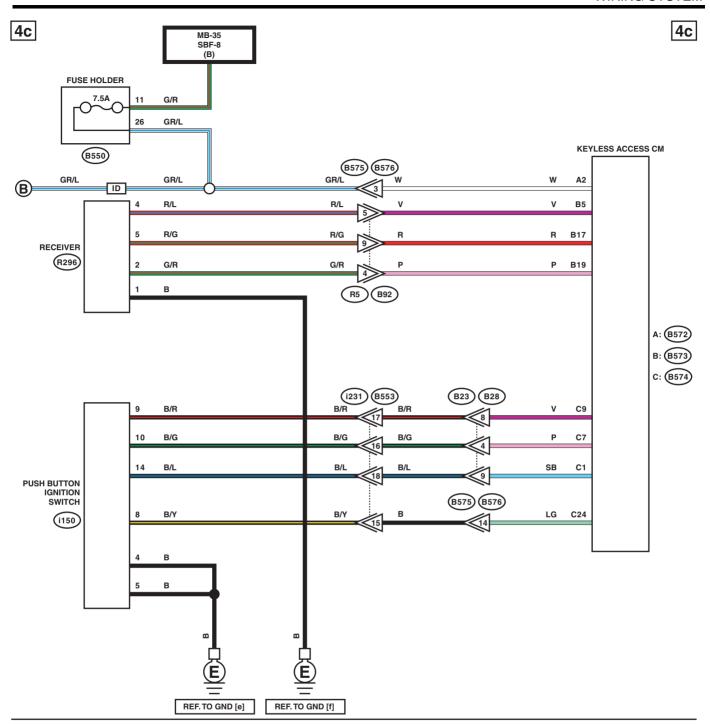

ID: WITH ID CODE BOX

