
## 4. Electrical Component Location

## A: LOCATION

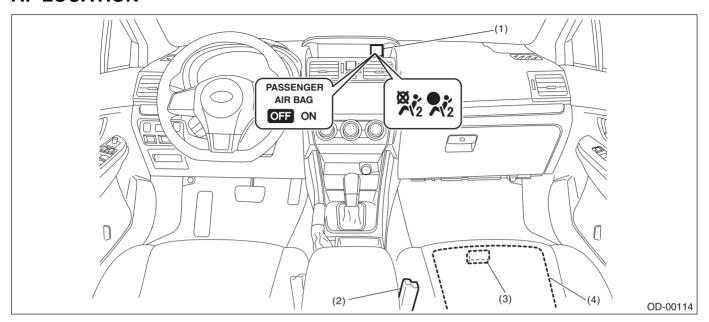

- (1) Airbag ON/OFF indicator light
- (3) Occupant detection control module
- (4) Occupant detection sensor

(2) Buckle switch (passenger's seat)