

Key matrix (right half, COL2ROW, 48 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

Reset Button = DFU bootloader via HWB

Handedness: PD3 low = right

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

nrsk
Sheet: /
File: nrsk-right.kicad_sch
Title: nrsk split keyboard – right half
Size: A2 Date: Rev: 2.0
KiCad E.D.A. 10.0.6 Id: 1/1

Key matrix (right half, COL2ROW, 48 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

Reset Button = DFU bootloader via HWB


Handedness: PD3 low = right

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

nrsk
Sheet: /
File: nrsk-right.kicad_sch
Title: nrsk split keyboard – right half
Size: A2 Date: Rev: 2.0
KiCad E.D.A. 10.0.6 Id: 1/1

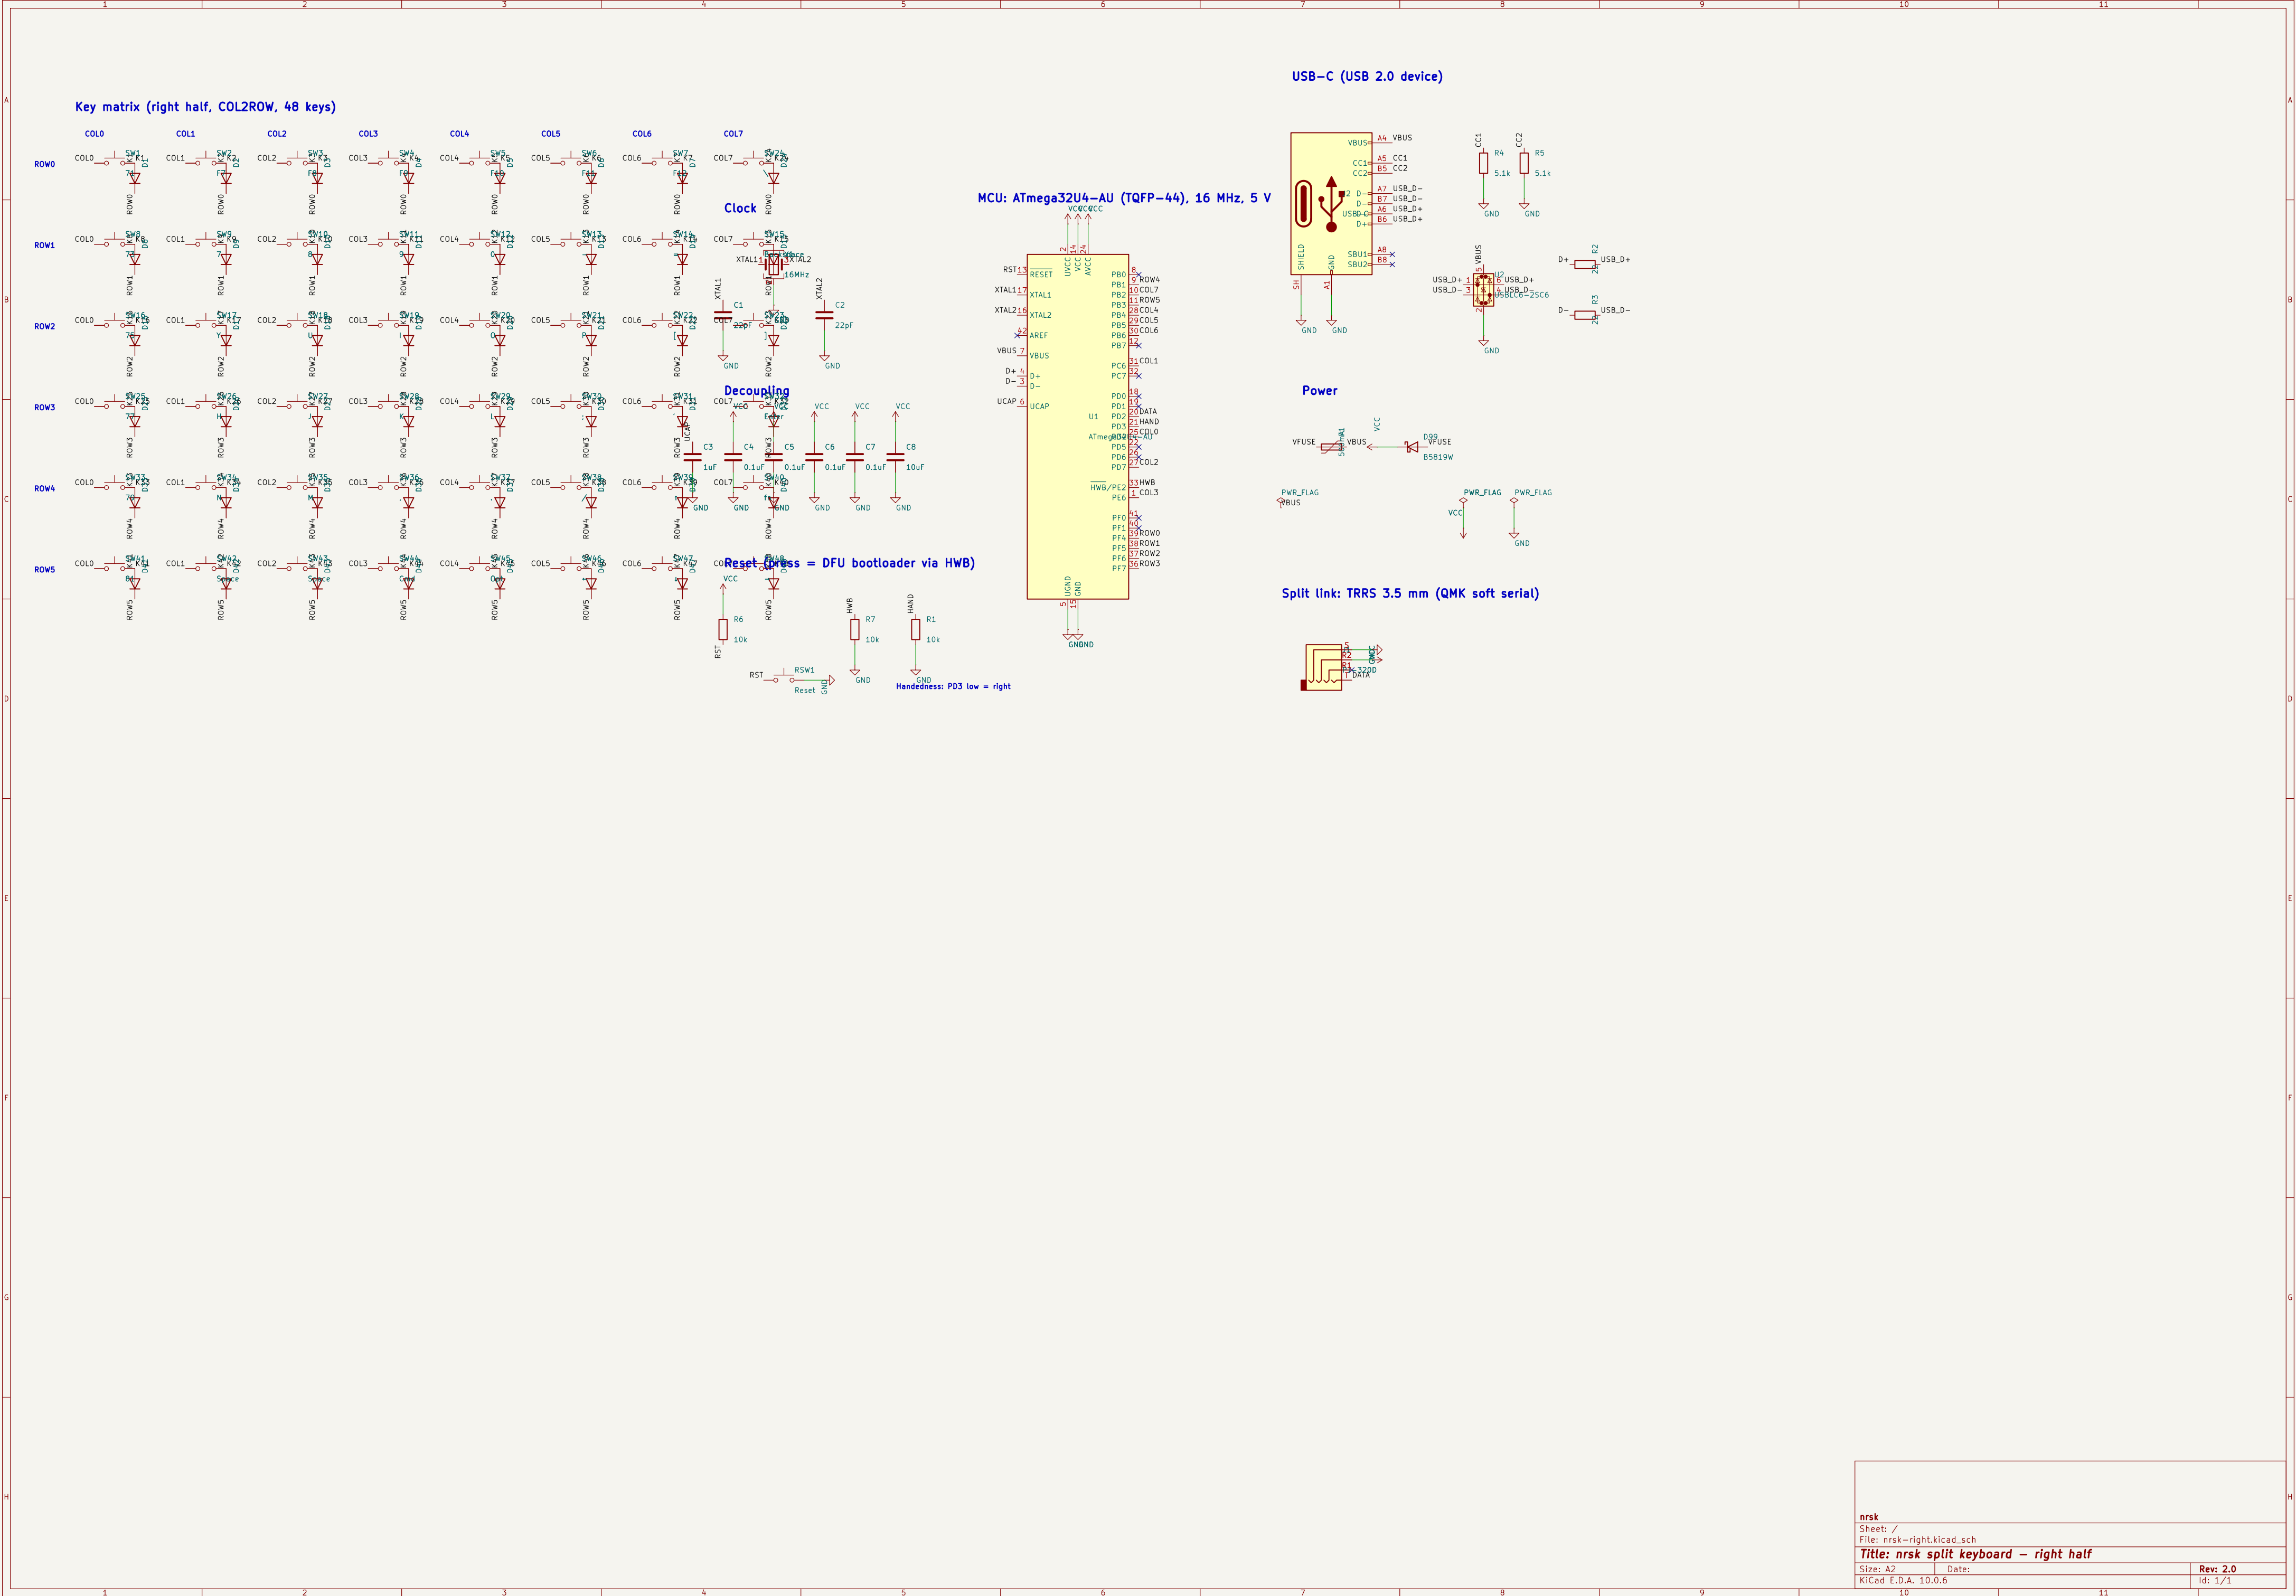

Key matrix (right half, COL2ROW, 48 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

Reset Press = DFU bootloader via HWB


Handedness: PD3 low = right

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

nrsk
Sheet: /
File: nrsk-right.kicad_sch
Title: nrsk split keyboard – right half
Size: A2 Date: Rev: 2.0
KiCad E.D.A. 10.0.6 Id: 1/1

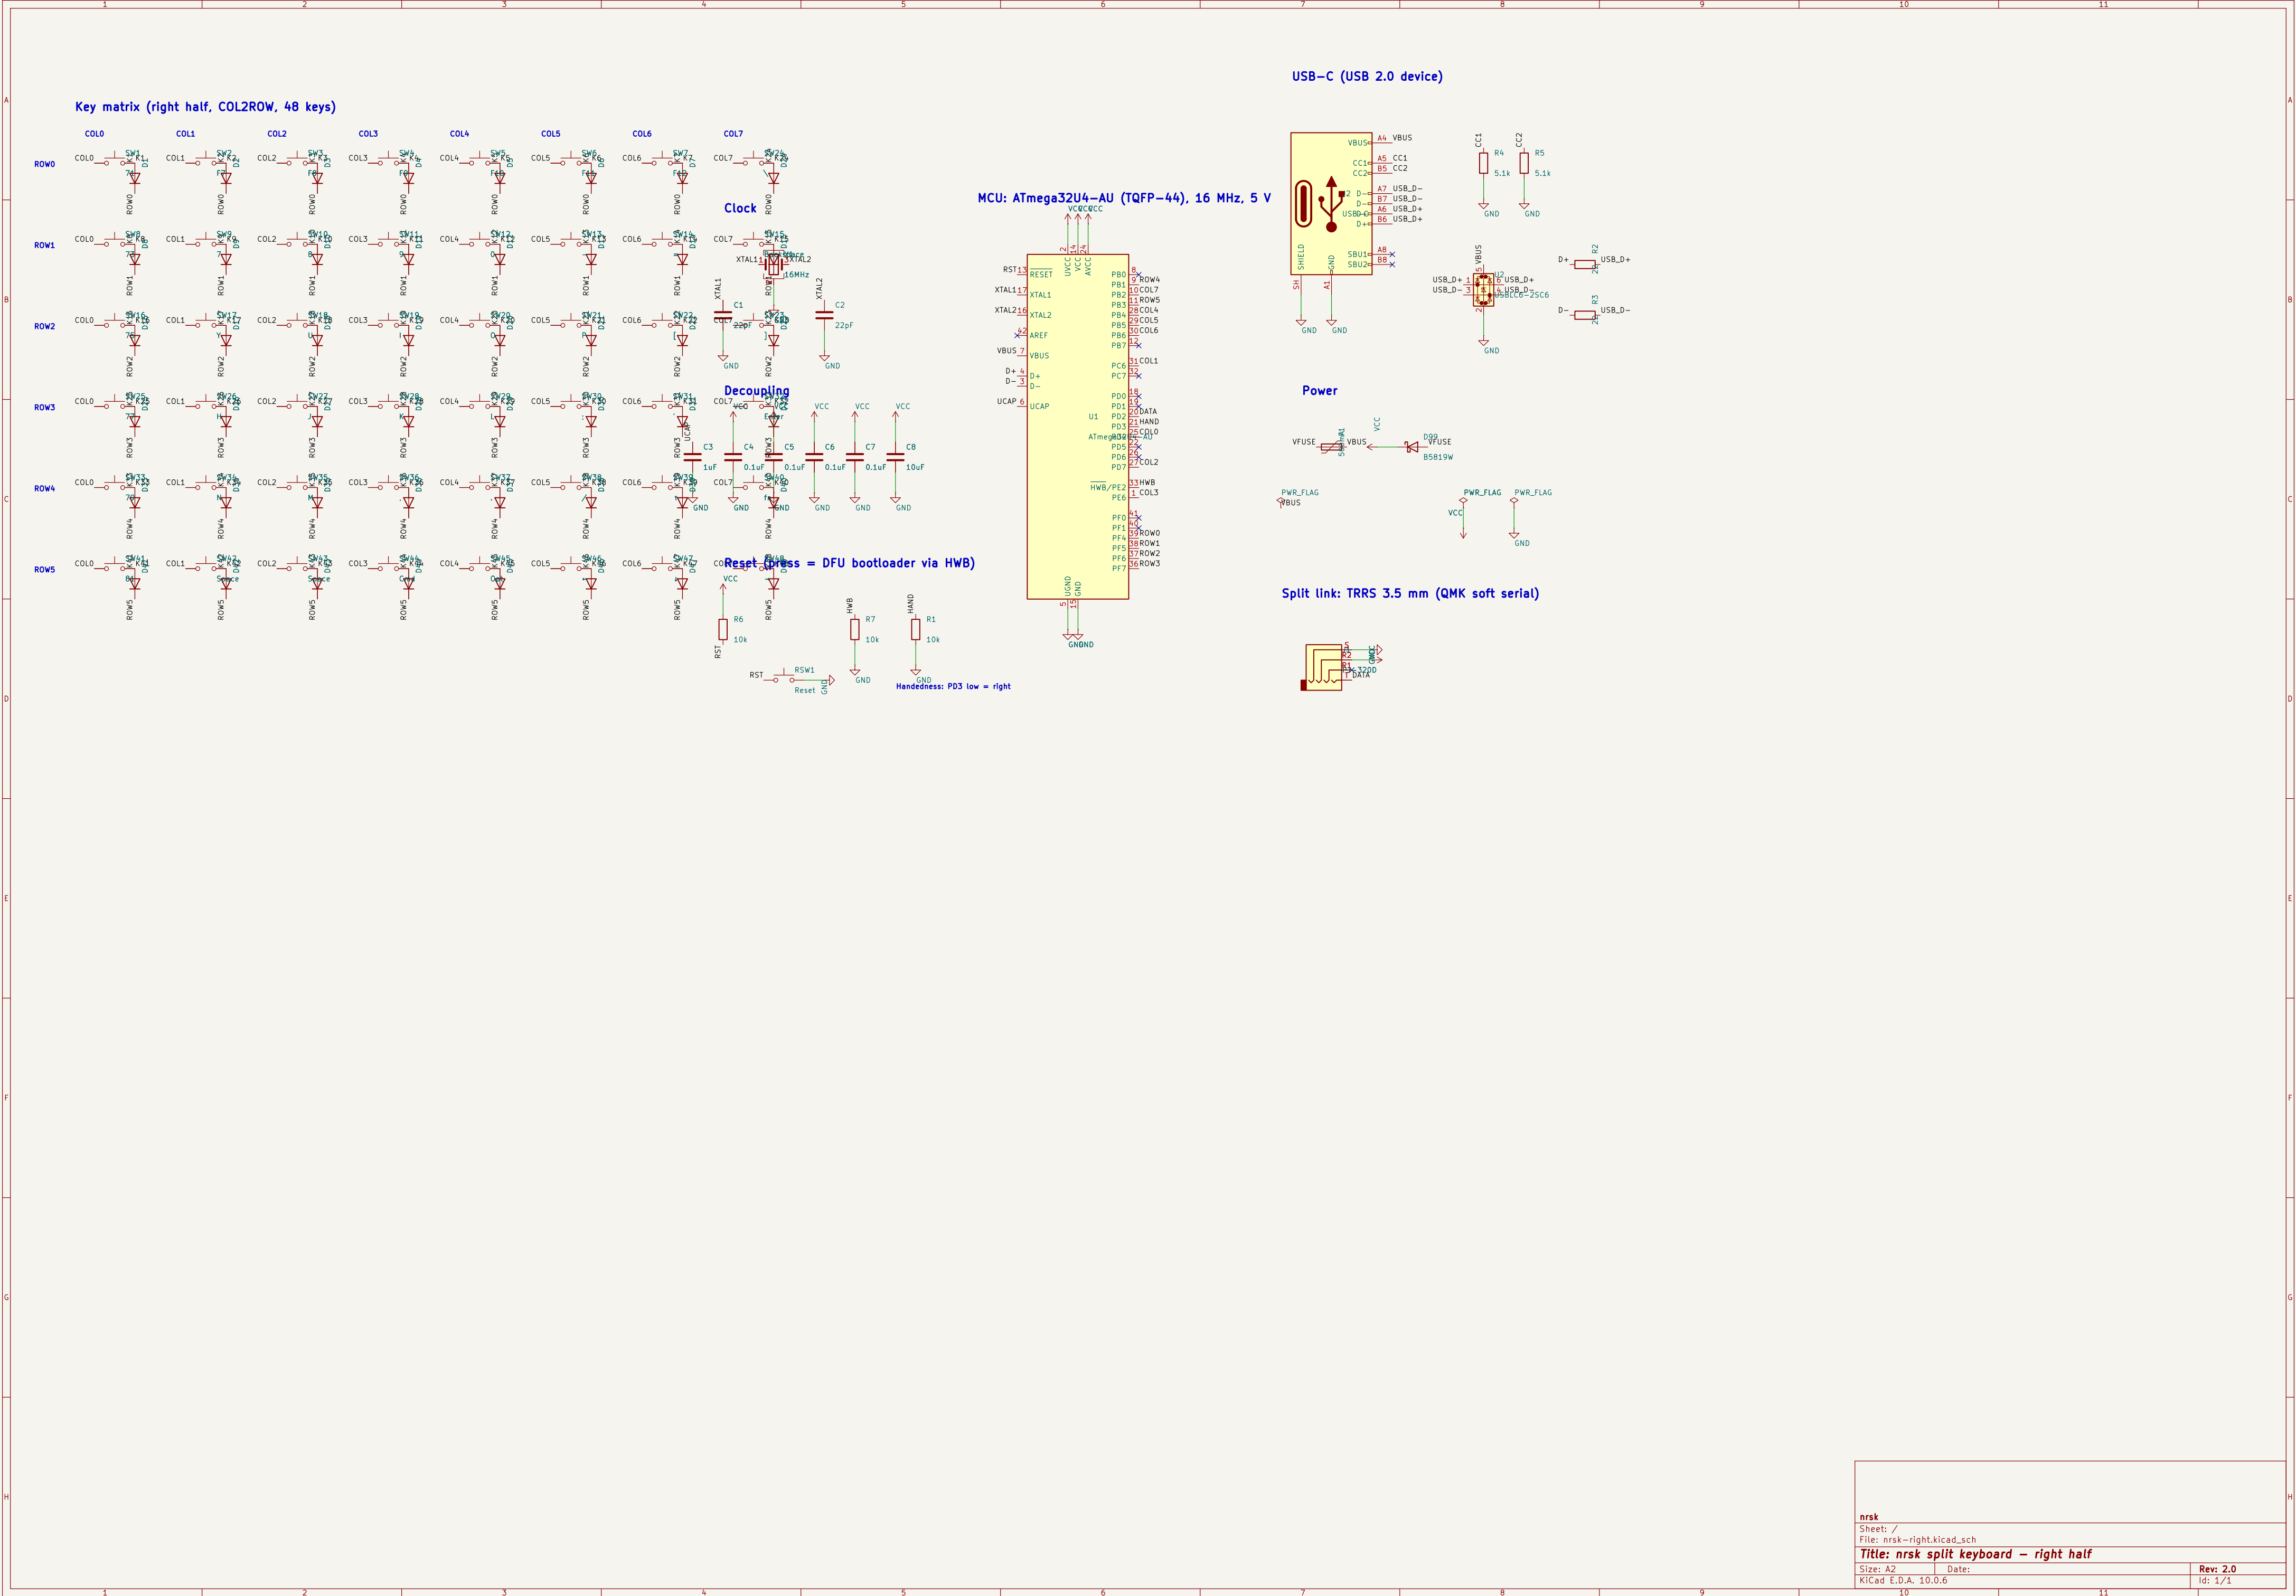

Key matrix (right half, COL2ROW, 48 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

Reset Button = DFU bootloader via HWB

Handedness: PD3 low = right

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

nrsk
Sheet: /
File: nrsk-right.kicad_sch
Title: nrsk split keyboard – right half
Size: A2 Date: Rev: 2.0
KiCad E.D.A. 10.0.6 Id: 1/1

