




XBox2Classic

User's Manual - Rev 1.0



Schematics

Connect to the correspond pin on the FTD232H.

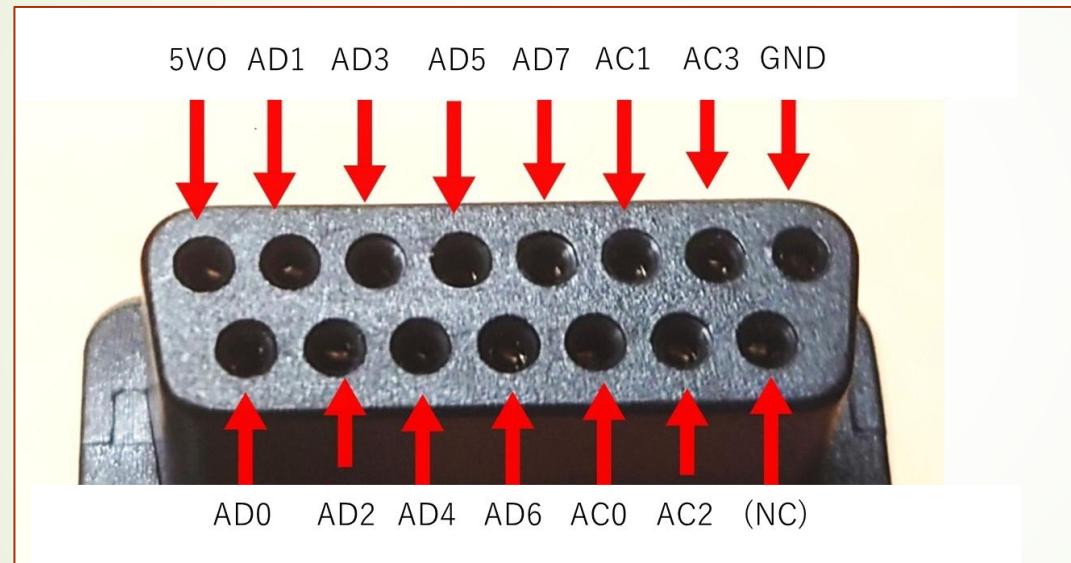


Confirmed with
<https://akizukidensi.com/catalog/g/g106503/>

*NEVER USE **USB BUS POWER**. USE ONLY NEOGEO 5V*
 USBバスパワーは使わずネオジオの+5Vを使うようにしてください

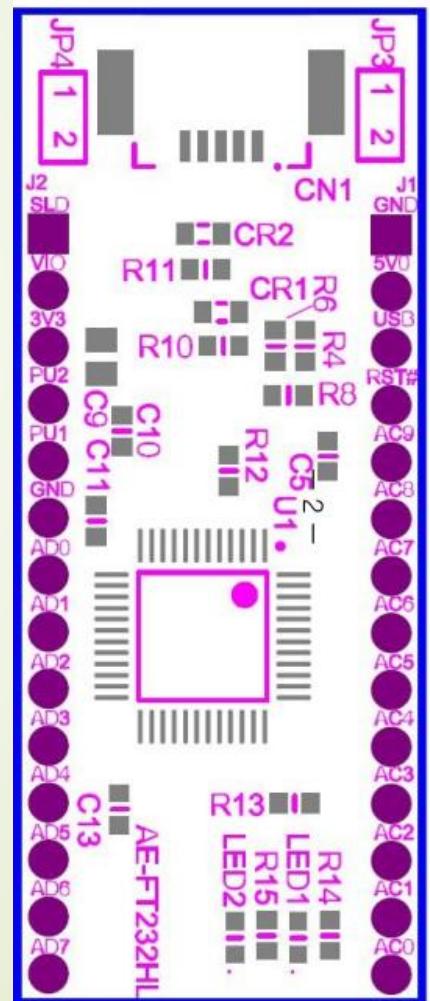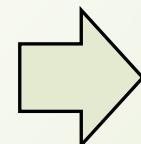


Connection

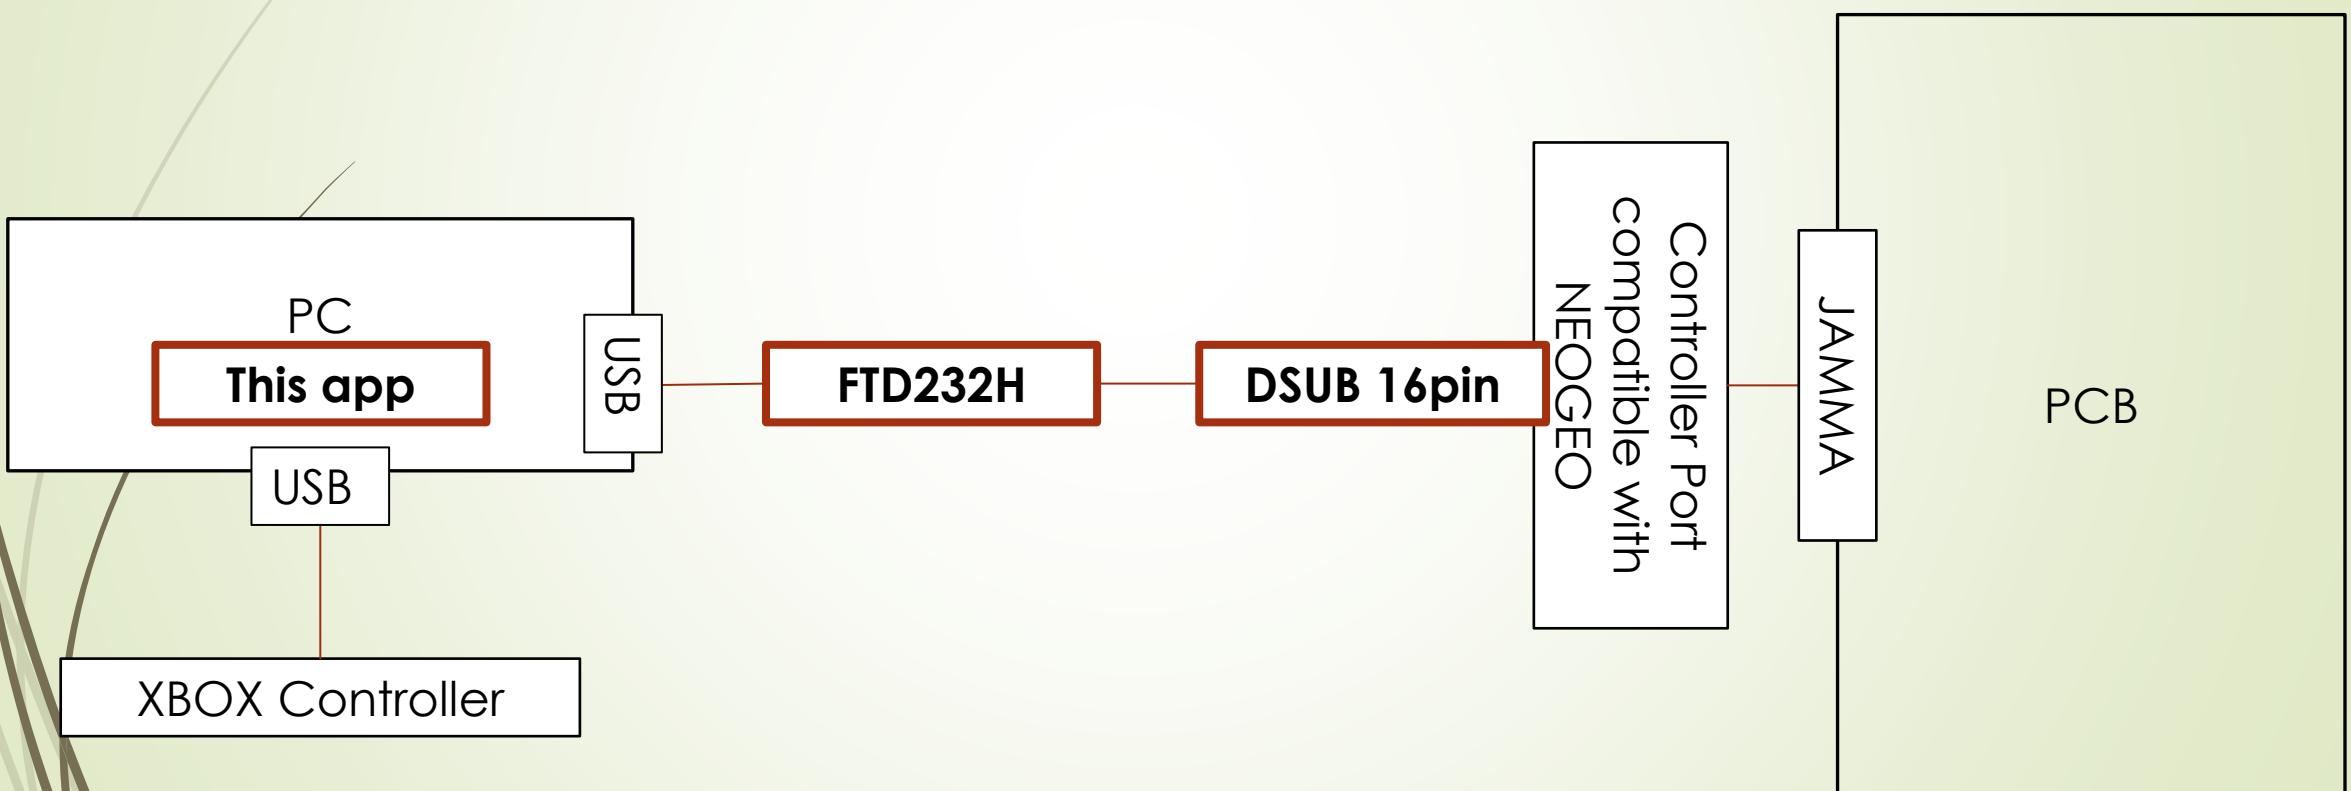


Example Settings

Set the FTDI ID# and **check “Connect”**

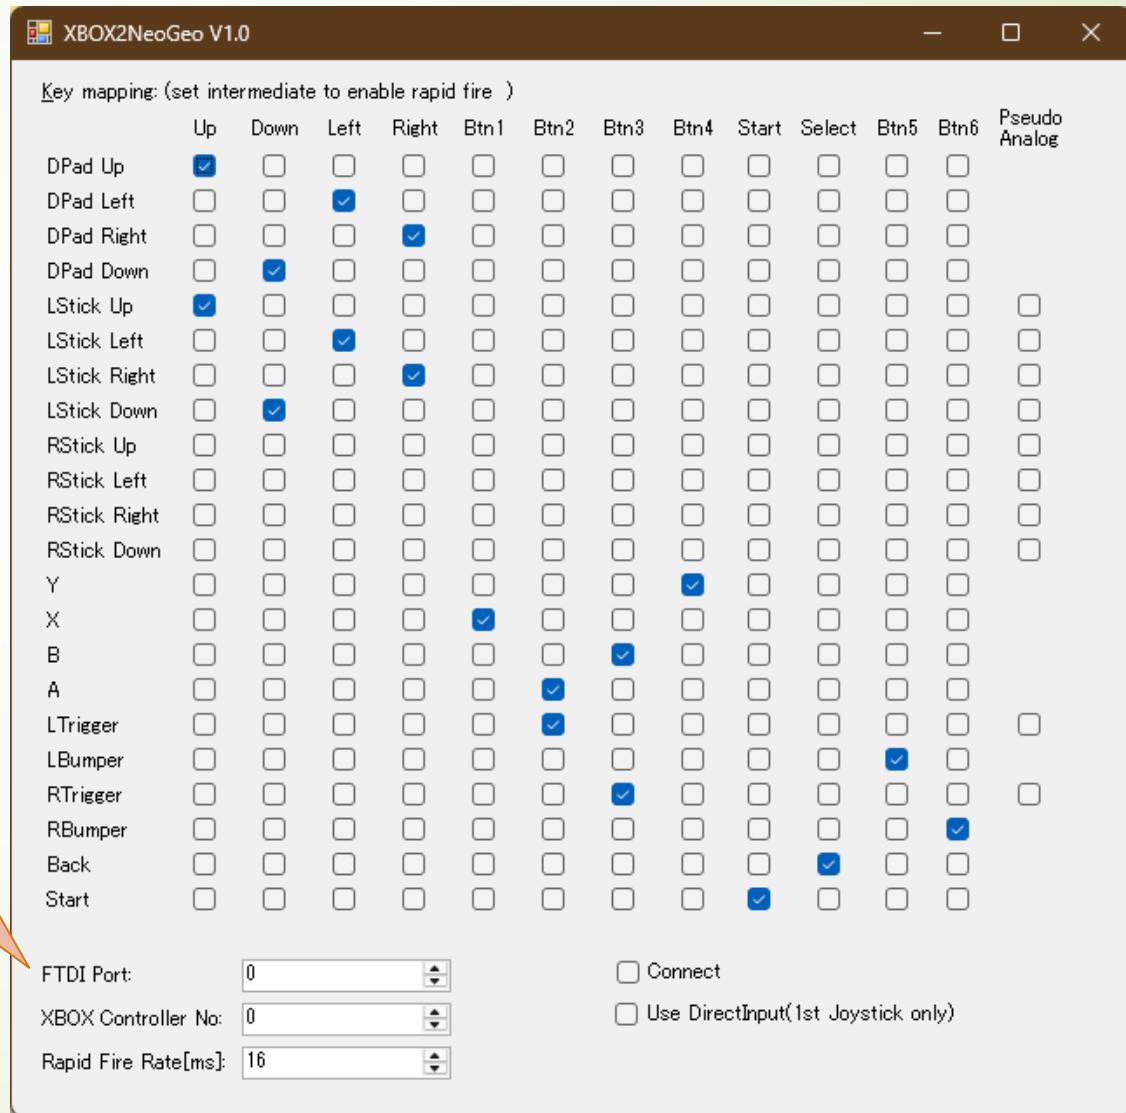

Tips

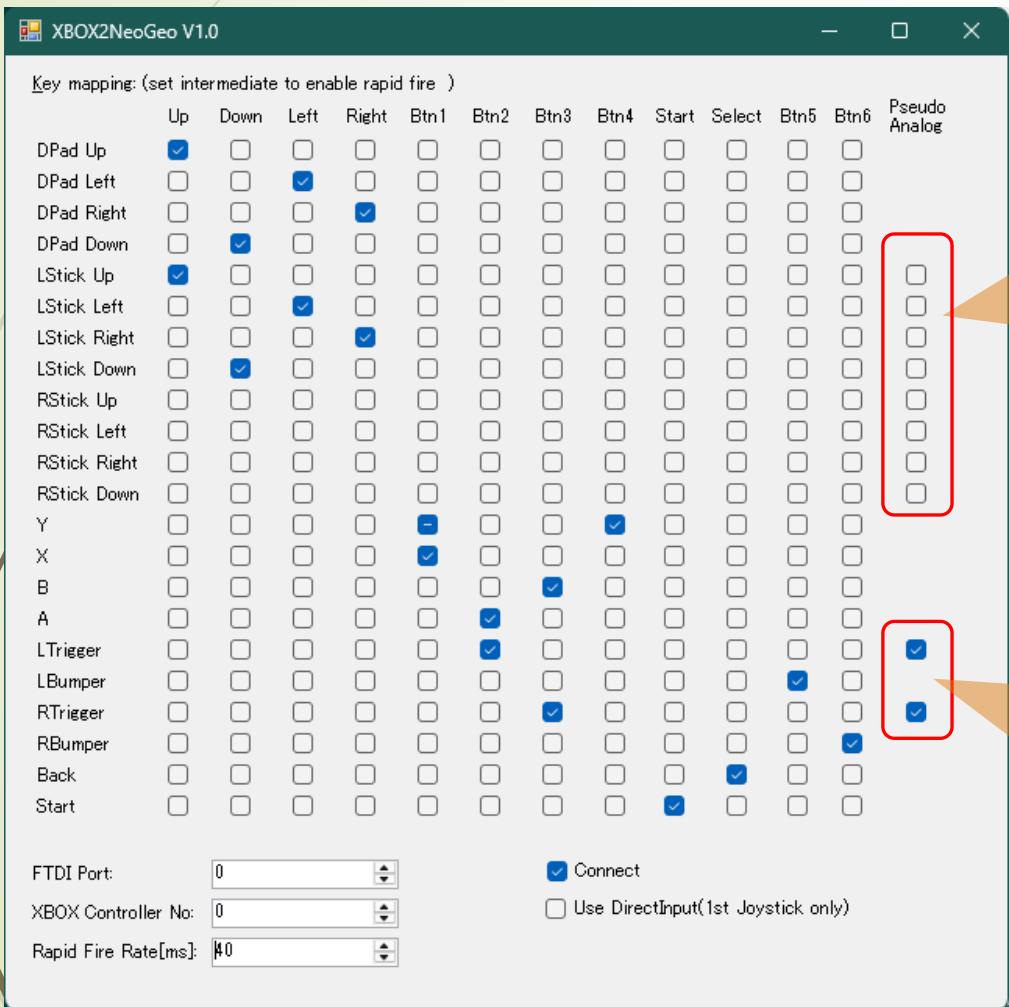

This settings enabled “Pseudo Analog” .

It means…

- Tilt the stick slightly to move slowly.

This settings enabled “Pseudo Analog” .

It means…

- When you press the trigger slightly, the satellite moves slowly.
- When you press the trigger fully, the satellite moves at full speed.