


INSTRUCTION MANUAL

Luxury Health Massage Chair

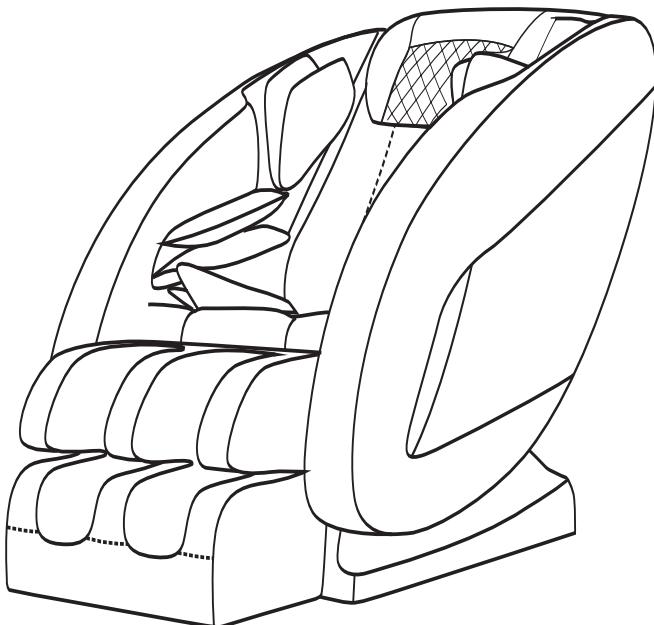


BE SURE TO READ THIS **INSTRUCTION MANUAL** CAREFULLY AND USE IT PROPERLY.
AFTER USE, KEEP THIS MANUAL WITHIN REACH AT ALL TIME FOR FUTURE USE.

IMPORTANT SAFETY INSTRUCTIONS

OPERATING SURROUNDINGS

- Do not use or store the massage chair under damp environment: i.e. bathroom, sauna, spa to avoid any moldy, electric shock, fire or mechanical failure.
- Don't use the massage chair outdoors.
- Don't use the massage chair under dusty, smeary and anoxic conditions.
- Don't place the massage chair near heater, stove or sunlight radiation to avoid inner components overheating to cause fire.
- Make sure to place the massage chair on a flat level ground.
- The bracket part should be placed on the plain ground.
- To avoid an electric shock, please make sure to connect an earth wire.
- Don't use the machine while smoking.

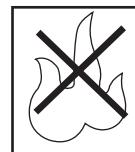

FOLLOWING CONDITIONS SHOULD CONSULT DOCTORS BEFORE USE

- Suffered from malignant tumor.
- Serious heart disease.
- Serious skin disease.
- Serious boned hyperplasia.
- In pregnancy or during the menses.
- Be on the rest cure under the doctor's supervision.
- The back bended exceptionally by the accident or disease.
- Needing peaceful surroundings.
- Arthritis disease.
- Implanted pacemaker for medical purpose.
- Suffered from bowels disease (i.e. gastritis, entritis, diarrhea, hepatitis).
- Serious blood circulation trouble.
- Consciousness trouble.
- Be in hyper pyretic.

⚠ WARNING

Children under 18 ages or special persons(as psychopath, the mental defects, the paralysis) are not allowed to operate the massage chair, in case of electric shock, injuries or mechanism malfunctions.

IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted.

⚠ CAUTIONS

Non-professional technicians are not allowed to dismantle or repair to avoid fire, electrical shock or serious hurt.



Do not flush to the switch when cleaning to avoid insulation fault, electrical shock or short-circuit.



When storing or maintenance, be sure to disconnect the power plug from socket.



Do not detach the plug by wet hands.

Make sure to shut off and detach the power plug when cleaning or storing product.



During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock.

Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover.



When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking.

Clean power plug periodically to avoid fire due to dust.



Do not use it at any unsafe places or on other purposes.

It is the main reason of product damage or accident.



Do not store the machine onto an unstable surface.

Unexpected earthquake or external force will cause damage or injury.



Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.



The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.



IMPORTANT SAFETY INSTRUCTIONS

ⓧ CAUTIONS

Do not modify the structure or change components by unauthorized person.

Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire.



Do not store it near a fire or flammable substances.

It is one of the reasons of causing product torture, deviation or damage.



Should any abnormality occur(i.e. scorching smell), stop using immediately and detach power plug from socket.

Keeping operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance.



Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover.



Only rated voltage must be used.



Stop using immediately if supply cord or power plug be damaged or loosen.



Be sure to keep children away during operating to avoid any hazard.



Do not explore it under sunshine at all time.



If the supply cord is damaged,it must be replaced by the manufacturer or its authorized persons for repaire or maintenance to avoid any hazard.



AI voice input

(AI voice control function will be turned on by default when the chair opens.)

Order entry	Answer
Hello tok	I'm here
Massage open	got it,Massage open
Massage closed	got it,Massage closed
Change massage mode	got it,Change massage mode
Speed fast	got it,Speed fast
Speed slow	got it,Speed slow
Foreward	got it,Foreward
Backward	got it,Backward
Zero gravity	got it,Zero gravity
Airbag strengthened	got it,Airbag strengthened
Airbag weakened	got it,Airbag weakened
Backrest up	got it,Backrest up
Backrest down	got it,Backrest down
Backrest closed	got it,Backrest closed
Turn on the Hip massage	got it,Turn on the Hip massage
Turo off the Hip massage	got it,Turn off the Hip massage
Turn on the foot roller	got it,Turn on the foot roller
Turn off the foot roller	got it,Turn off the foot roller
Turn on the heat	got it,Turn on the heat
Turn off the heat	got it,Turn off the heat
Stop massage	got it,Stop massage
Restart massage	got it,Restart massage

INSTALLATION STEPS OF REMOTE CONTROL BRACKET:

- Step 1: insert the screw rod into the hole;
- Step 2: turn the screw rod clockwise to the end;
- Step 3: install the remote control on the bracket.



HAND CONTROLLER OPERATION INSTRUCTIONS



MASSAGE PROCEDURE INSTRUCTIONS

① Press one time start/Timing/Long press to shut down

Press one time start: When the power is on, press this button and the massage chair enters the automatic mode. The default working time is 15 minutes.

Timing: When the massage chair is working, press this button, the massage chair enters the timed mode, and each time is increased by 5 minutes.

Long press to shut down: When the massage chair is working, press and hold this button until the display screen is turned off.



Full automatic: press this key to set five modes, and select F1 / F2 / F3 / F4 / F5.



Zero gravity: press this key to recline / reset the massage chair.



Hip massage: press this key to turn on / off the cushion massage function.



Constant temperature hot compress: press this key to turn on / off the constant temperature hot compress function of calf and waist.



Press this key to turn on the function / the scraping speed on the screen will display 2 gears by default. Each time you press it, it will increase by one gear. If you press the third gear again, it will turn off the function and turn it on again, and so on.



Pick up: long press this key to adjust the reset and pick up function of massage chair (long press is effective).



Recline: long press this key to adjust the recline function of massage chair (long press is effective).



Automatic airbag: press this key to turn on / off the whole body airbag squeeze massage.



Back automatic: press this key to turn back movement massage on / off.



Shoulder arm pinch: press this key to turn on / off shoulder arm airbag pinch massage.



Head and arm pinching: press this key to turn on / off the head and hip airbag pinching massage.



Leg airbag pinch: press this key to turn on / off leg airbag pinch massage.



Air pressure +: the air bag extrusion force increases.



Air pressure -: the pressure of the air bag is reduced.



Kneading mode: press this key to turn on / off neck kneading massage.



Massage mode: press this key to turn on / off waist massage.



Mode selection: press this key to select the direction of the massage movement (positive / negative).



Speed +: the speed of the massage movement increases.




Speed -: the speed of the massage movement slows down.


Bluetooth connection instructions:

- ① Turn on the Bluetooth voice prompt by default.
- ② Turn on the bluetooth function of mobile phone to search for BluetoothFind native Bluetooth code AMY-888. Turn on the music and start playing when the connection is successful.

Reminder:

Constant temperature hot compress and hip massage need to be turned on or off manually. Automatic mode does not enable these two functions.

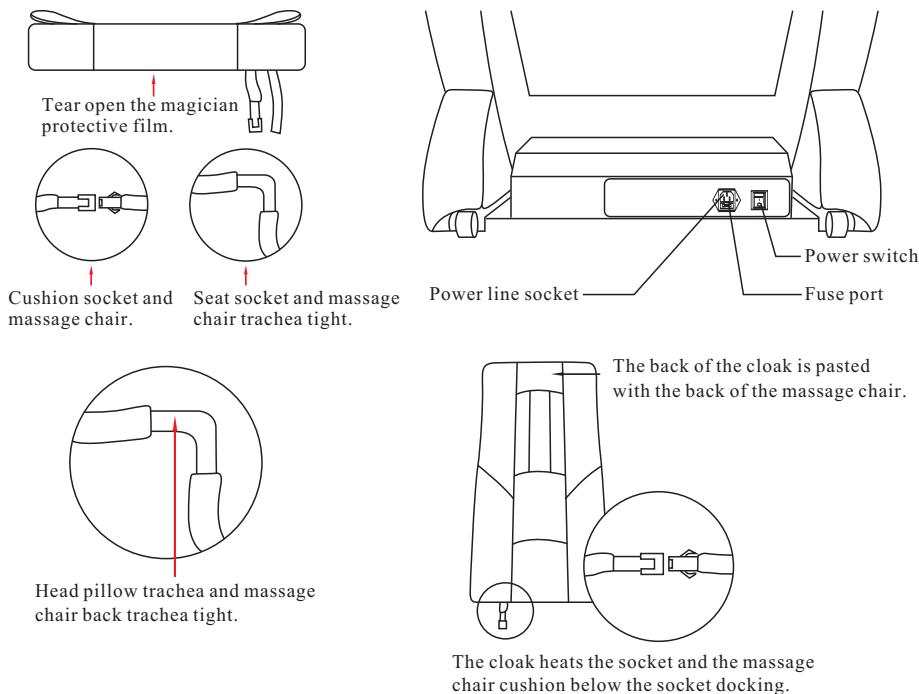


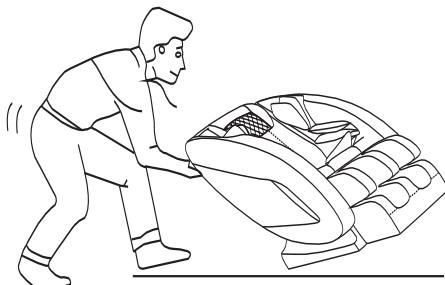

When you move, press the back and raise the front.

Attention

- ① Please check and confirm if the power cord has been pressed under the massage chair.
- ② Whether the ground line is connected well
- ③ Before inserting the plug, make sure that all the operation buttons, including the power switch, are turned off.

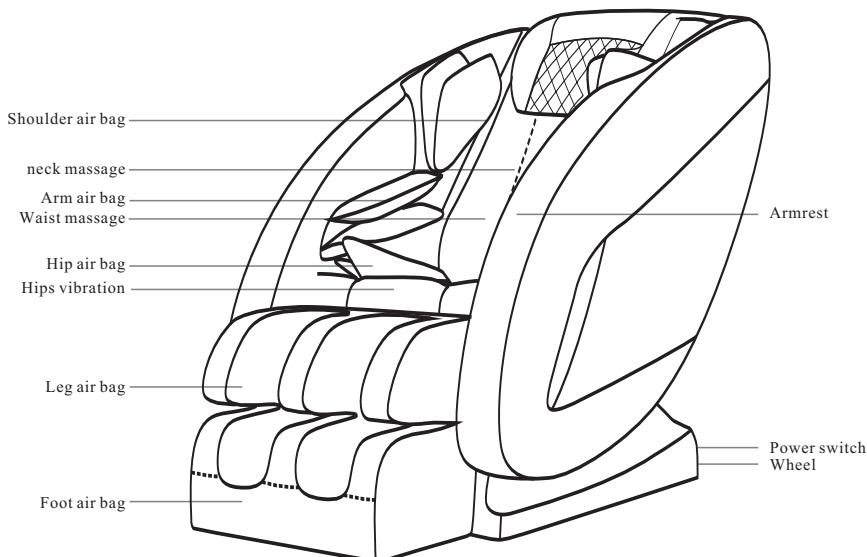

SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When power cord damaged, it must be changed from special power cord or available from other manufacturer or service department.



Warning: Do not dismantle, modify or change components by unauthorized person to avoid electric shock or fire.

DAILY CARE AND MAINTENANCE

Storage guide

- ◎ Do not dismantle back of chair. The electrical shock may happen to touch inner elements of chair.
- ◎ Do not dismantle the machine by unauthorized person to avoid electric shock or fire.
- ◎ Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- ◎ Keep the massage chair clean and free dust. Do not place the massage chair under damp environment.
- ◎ If not in use for a long period, please cover it with a cloth to free dust.
- ◎ Do not place the massage chair under sunlight.

Maintenance

- ◎ Use neutral detergent only.
- ◎ Use neutral detergent to clean back cushion, head cushion and leg cushion. Let it dry.
- ◎ Use detergent and cloth to clean the plastic, pipe and leather material of massage chair.
- ◎ Make sure not to use organic solvents as gasoline, amyl acetate, benzene for cleaning to avoid leather color fades, aging or broken.
- ◎ Do not spray pesticide to avoid electric shock or fire.
- ◎ Please clean with dry cloth to avoid mechanical failure.

Controller maintenance

- ◎ Do not place the massage chair near heater or fire.
- ◎ Keep away from damp to avoid electric shock.
- ◎ Please clean dust with soft cloth or small banister brush.
- ◎ Make sure not to use volatile detergent as benzene, gasoline, amyl acetate.

TROUBLE SHOOTING

Checking is necessary in frequent usage.

Make sure the machine work normally before usage.

Failure phenomenon	Possible cause	Processing method
Sound (running sound) The inflatable sound of the air bag The bleed sound of the air bag Switching sound of solenoid valve Working sound of air pump	When the product works The sound of a mechanical operation	The sound is normal. There is no need to deal with it.
The whole machine is completely out of work	The power plug is not inserted into the socket The socket switch is unopened The massage button is not pressed	Check the power plug and socket, ensure that the plug is in good contact with the socket, press the massage button.
The massage was stopped in the course of a sudden stop	This product has just completed 15 minutes of rated working time and automatically switched to standby mode. Overheating protection of motor over rated use time	If you want to massage once again, please press the key to open, open massage function Shut down, cut off the power supply to motor cooling after use
The power indicator is not on	Fuse damage	Replace the spare fuse in the socket