




Digital Decoupling

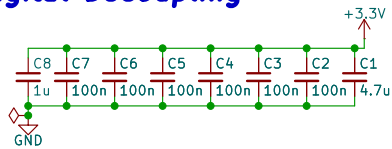


Analog Decoupling

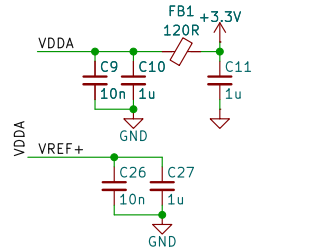


Reset

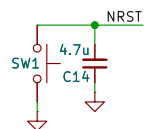


Boot

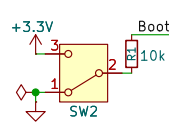


Oscillator 8MHz




GNSS

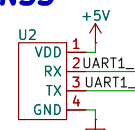


RX Socket

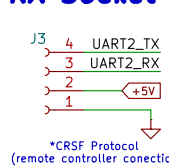


BARO

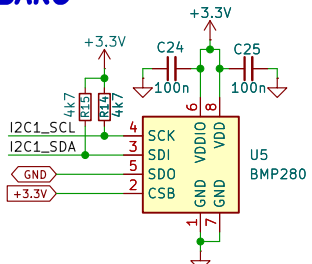


Flash

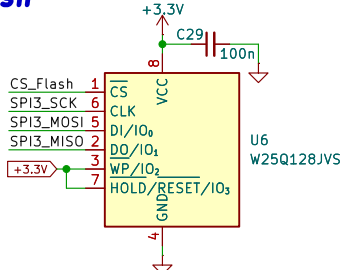


MCU

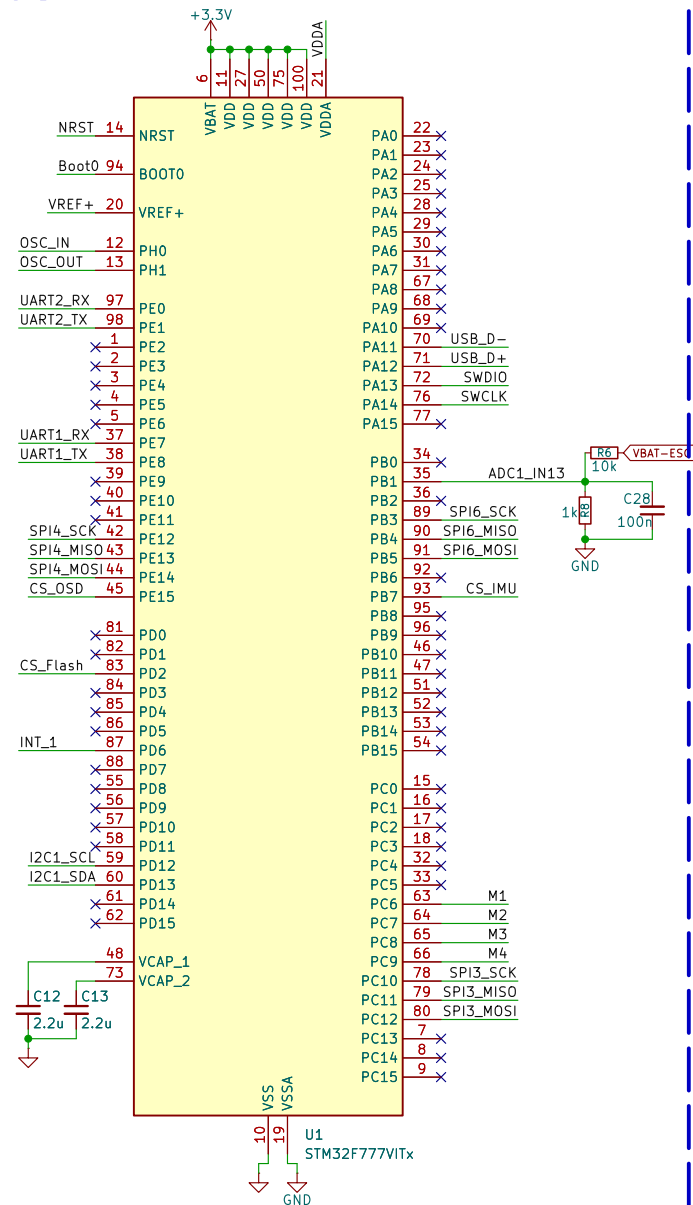


ESD

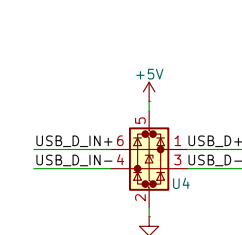

USB-2.0

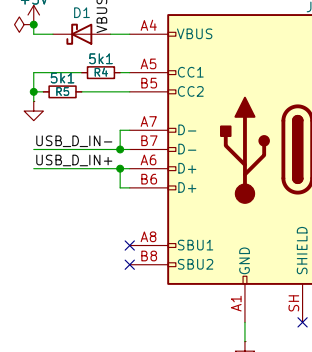


5V 3A Converter

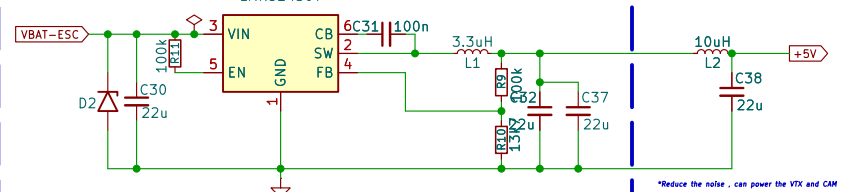


*Reduce the noise, can power the YTX and CAM

LDO Digital 3.3V

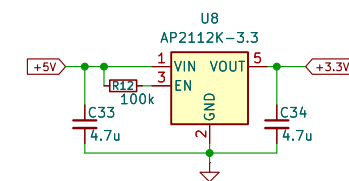


- H1 MountingHole
- H2 MountingHole
- H3 MountingHole
- H4 MountingHole

OSD

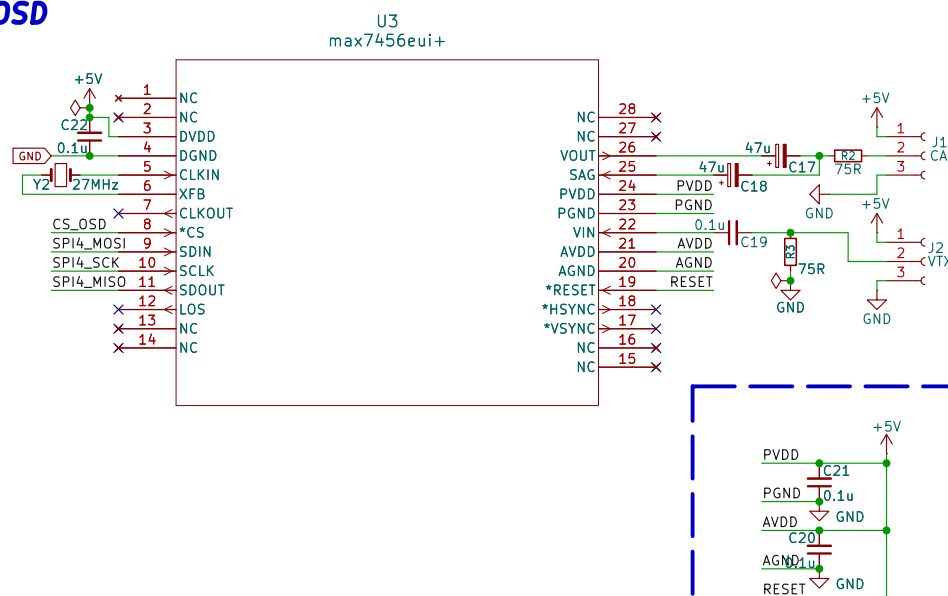


MCU-to-ESC

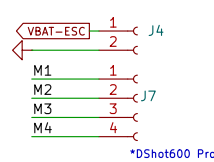


*DSHOT600 Protocol

IMU

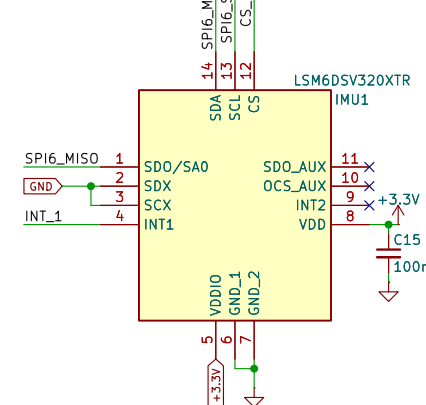

SERIAL

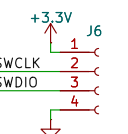

Sheet: /

File: FlightController.kicad_sch

Title:

Size: A3

Date:

Rev:

KiCad E.D.A. 10.0.5

Id: 1/1