
# Part 1 OPERATION OF INSTRUMENTS AND CONTROLS—


Chapter 1-1
Overview of instruments
and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

## Instrument panel overview

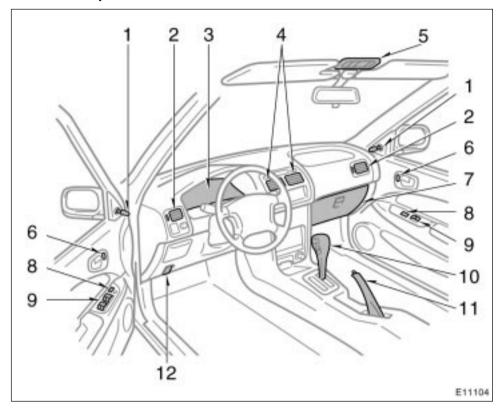


- 1. Rear view mirror remote control levers
- 2. Side vents
- 3. Instrument cluster
- 4. Center vents
- 5. Electric moon roof switch and personal light
- 6. Power door lock switches (vehicles without power windows)
- 7. Glove box
- 8. Power door lock switches (vehicles with power windows)
- 9. Power window switches
- 10. Automatic transmission selector lever or manual transmission gear shift lever
- 11. Parking brake lever
- 12. Hood lock release lever

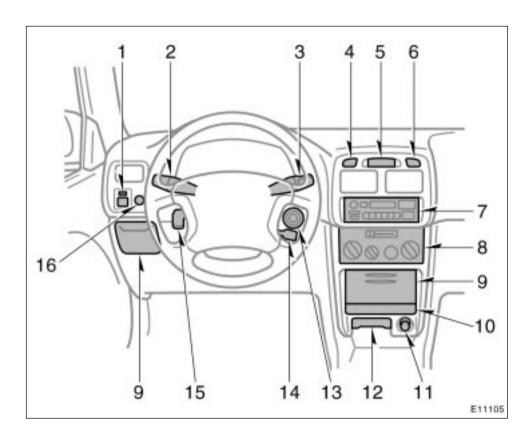

- 1. Power rear view mirror control switch
- 2. Headlight and turn signal switch
- 3. Wiper and washer switches
- 4. Emergency flasher switch
- 5. Clock
- 6. Rear window defogger switch
- 7. Car audio
- 8. Air conditioning controls
- 9. Auxiliary box
- 10. Cup holder
- 11. Cigarette lighter
- 12. Ashtray
- 13. Ignition switch
- 14. Cruise control switch
- 15. Tilt steering lock release lever
- 16. Instrument panel light control knob

### Instrument cluster overview


### **▶**Type A

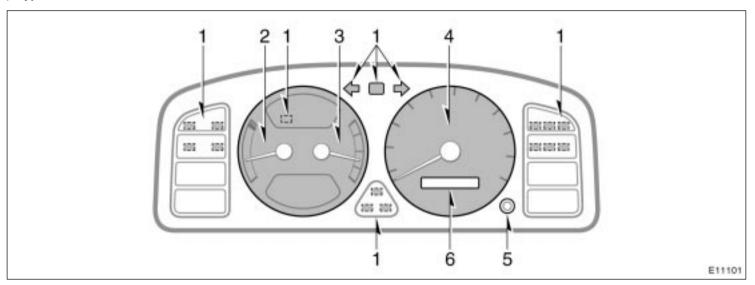

- 1. Service reminder indicators and indicator lights
- 2. Engine coolant temperature gauge
- 3. Fuel gauge

- 4. Speedometer
- 5. Trip meter reset knob
- 6. Odometer and two trip meters


# ▶Type B

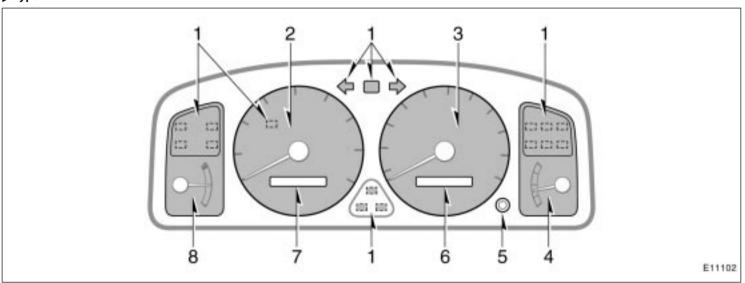

- 1. Service reminder indicators and indicator lights
- 2. Tachometer
- 3. Speedometer

- 4. Fuel gauge
- 5. Trip meter reset knob
- 6. Odometer and two trip meters
- 7. Thermometer
- 8. Engine coolant temperature gauge

# **▶**Type C

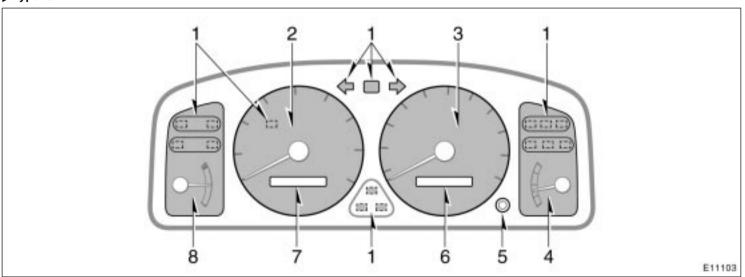

- 1. Service reminder indicators and indicator lights
- 2. Tachometer
- 3. Speedometer

- 4. Fuel gauge
- 5. Trip meter reset knob
- 6. Odometer and two trip meters
- 7. Thermometer
- 8. Engine coolant temperature gauge

## Indicator symbols on the instrument panel

BRAKE (type A) (type B)	Brake system warning light*1
杏	Seat belt reminder light*1
<del>- +</del>	Discharge warning light*1
H	Malfunction indicator lamp*1
9 <del>=</del> /:	Low oil pressure warning light*1
ABS (type A) (ABS) (type B)	Anti-lock brake system warning light*1
	Open door warning light*1

_	
<b>*</b>	SRS airbag warning light*1
<b>₽</b>	Low fuel level warning light*1
<b>A</b>	Low windshield washer fluid level warning light*1
<b>\$</b> \$	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive- off indicator light
CRUISE	Cruise control indicator light*2
ţţţ	Rear window defogger indicator light

<sup>\*1:</sup> For details, see "Service reminder indicators and warning buzzers" in Chapter 1-5.

<sup>\*2:</sup> If this light flashes, see "Cruise control" in Chapter 1-6.