# **SIEMENS**

Document No. 129-463 September 10, 2009

# **Duct Point Temperature Sensor**

#### **Product Description**

The Duct Point Temperature Sensor provides a temperature input to a controller.

#### **Product Numbers**

Product Number	Sensing Element
QAM2030.XXX	10K Ω NTC Type II
QAM2032.XXX	10K Ω NTC Type III
QAM2012.XXX	1K Ω Pt (385α)
QAM2020.XXX	1K Ω Ni Siemens
QAM2021.XXX	1K Ω Ni JCI
.XXX	Insertion Length in
	Inches (mm)
.010	4 (101.6)
.020	8 (203.2)
.045	18 (457.2)

## **Required Tools**

- Drill with 13/32-inch (10.3 mm) bit
- Power screwdriver with standard screw chuck or medium flat-blade screwdriver
- · Wire cutter/stripper

### **Expected Installation Time**

45 minutes

### **Prerequisite**

The appropriate field wiring, within the maximum wiring length, should be routed through the conduit.

#### Installation

**NOTE:** All wiring must comply with National Electric Code (NEC) and local regulations.

1. Drill a 13/32-inch (10.3 mm) hole into the duct at the desired location of the sensor. See Figure 1.

- Remove the conduit box cover and remove gasket. Assemble gasket onto sensor assembly. See Figure 1.
- 3. Insert the sensor tube into the hole.
- Hold the conduit box against the duct and secure the sensor to the duct with the two No. 18-8 self-tapping sheet metal screws supplied with the sensor.
- Attach the flexible conduit and field wiring to the conduit box. Ensure that the conduit and field wiring have enough length to allow the installation/removal of the sensor assembly.


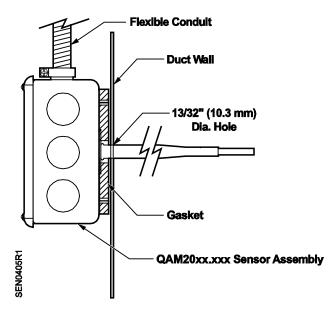


Figure 1. Duct Point Sensor Installation.

- 6. Using the wire nuts provided, attach the sensor wires to the field wiring in the conduit box.
- 7. Replace the conduit box cover.
- 8. Connect the field wires to the controller. See Figure 2.

The installation is now complete.

Item Number 129-463, Rev. BA Page 1 of 2

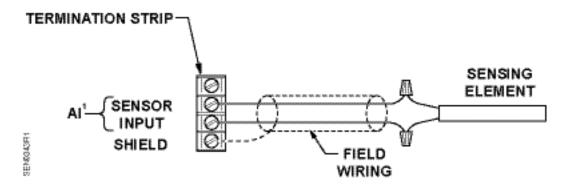

1. Configure the analog input (AI) point for sensor input.

Figure 2. Wiring to the Controller.

- **NOTE:** 1. Some controllers may require a shield termination.
  - 2. For individual panel wiring details, see the appropriate controller manual.

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Product or company names mentioned herein may be the trademarks of their respective owners. © 2009 Siemens Industry, Inc.