

# **ADVANTEST®**

---

## **ADVANTEST CORPORATION**

---

### ***ACLI COMMANDS***

### ***REFERENCE MANUAL***

### ***(UNIX VERSION)***

**MANUAL NUMBER 8141097-19**

---

***Applicable OS's***

***ASX/U-11E***  
***ASX/U-12***  
***ASX/U-30***  
***ASX/U-31***  
***ASX/U-50***  
***ASX/U-73***  
***ASX/U-80***  
***ASX/U-51***

## PREFACE

### Applicable OS's

This manual is applicable to the following operating systems.

- ASX/U-11E
- ASX/U-12
- ASX/U-30
- ASX/U-31
- ASX/U-50
- ASX/U-73
- ASX/U-80
- ASX/U-51

### Registered Trademarks

Sun, Solaris, SunOS and OpenWindows are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S.

FLEXIm, Copyright 1993 Highland Software, Inc. Software Research Associates, Inc. All Rights Reserved.

FLEXIm, Japanese Version is co-copyrighted by Highland Software, Inc. in the U.S. and Software Research Associates, Inc. in the U.S.

## RECORD OF REVISIONS

| Manual Rev | Date      | Remarks                                    | Manual Rev | Date      | Remarks |
|------------|-----------|--------------------------------------------|------------|-----------|---------|
| 01         | Dec 21/88 |                                            | 13         | Apr 20/95 |         |
| 02         | Jul 26/89 |                                            | 14         | Aug 31/95 |         |
| 03         | Sep 22/89 |                                            | 15         | Dec 28/95 |         |
| 04         | Feb 20/90 |                                            | 16         | Jul 10/96 |         |
| 05         | Dec 20/90 |                                            | 17         | Sep 11/98 |         |
| 06         | Dec 27/91 |                                            | 18         | Oct 15/99 |         |
| 07         | Aug 31/92 |                                            | 19         | May 15/02 |         |
| 08         | Sep 24/92 |                                            |            |           |         |
| 09         | Feb 5/93  |                                            |            |           |         |
| 10         | Aug 20/93 | Applicable to the new product code (P No.) |            |           |         |
| 11         | Jul 29/94 |                                            |            |           |         |
| 12         | Mar 20/95 |                                            |            |           |         |

## LIST OF EFFECTIVE PAGES

|         |           |
|---------|-----------|
| Preface | May 15/02 |
| R-1     | May 15/02 |
| P-1     | May 15/02 |
| M-1     | May 15/02 |
| C-1     | May 15/02 |
| 1-1     | May 15/02 |
| 2-1     | May 15/02 |
| 2-2     | May 15/02 |
| 2-3     | May 15/02 |
| 2-4     | May 15/02 |
| 2-5     | May 15/02 |
| 2-6     | May 15/02 |
| 2-7     | May 15/02 |
| 3-1     | May 15/02 |
| 3-2     | May 15/02 |
| 3-3     | May 15/02 |
| 3-4     | May 15/02 |
| 3-5     | May 15/02 |
| 3-6     | May 15/02 |
| 3-7     | May 15/02 |
| 3-8     | May 15/02 |
| 3-9     | May 15/02 |
| 3-10    | May 15/02 |
| 3-11    | May 15/02 |
| 3-12    | May 15/02 |
| 3-13    | May 15/02 |
| 3-14    | May 15/02 |
| 3-15    | May 15/02 |
| 3-16    | May 15/02 |
| 3-17    | May 15/02 |
| 3-18    | May 15/02 |
| 3-19    | May 15/02 |
| 3-20    | May 15/02 |
| 3-21    | May 15/02 |

(All pages were revised.)

Note: Pages with # are revised.  
Pages with ## are added.  
Pages with ( ) are deleted.

## LIST OF RELATED MANUALS

| Manual No. | Manual Title                                                                                                |
|------------|-------------------------------------------------------------------------------------------------------------|
| 8141108    | ADVANSite (UNIX Version) System Introduction                                                                |
| 8141097    | ACLI Commands Reference Manual (UNIX Version)                                                               |
| 8137178    | ADVANSite Test System (UNIX Version)<br>Software Installation/System Start User's Manual                    |
| 8141099    | ADVANSite Test System (UNIX Version)<br>MOST Series User's Program Resource Migration User's Guide          |
| 8138769    | ADVANSite Test System (UNIX Version)<br>ADI Interface Intergration Diagnostics Program Reference Manual     |
| 8116769    | ADVANSite Test System ADI Interface Board<br>Standalone Diagnostics Reference Manual                        |
| 8138771    | ADVANSite Test System (UNIX Version)<br>VMEbus/DR11-W Interface Board Loopback Diagnostics Reference Manual |
| 8188578    | Diagnostics Program Reference Manual for SDI Interface                                                      |

## TABLE OF CONTENTS

|                                    |      |
|------------------------------------|------|
| 1. GENERAL .....                   | 1-1  |
| 1.1 Outline of ACLI .....          | 1-1  |
| 2. UNIX APPLICATION COMMANDS ..... | 2-1  |
| 2.1 PRODUCT .....                  | 2-1  |
| 2.2 CED .....                      | 2-4  |
| 3. ADI APPLICATION COMMANDS .....  | 3-1  |
| 3.1 MTLD .....                     | 3-1  |
| 3.2 FCPY .....                     | 3-3  |
| 3.3 MTXFER .....                   | 3-4  |
| 3.4 XTRANS .....                   | 3-7  |
| 3.5 REV .....                      | 3-9  |
| 3.5.1 Old-type REV .....           | 3-9  |
| 3.5.2 New-type REV .....           | 3-10 |
| 3.6 MTINIT .....                   | 3-12 |
| 3.7 MTREL .....                    | 3-13 |
| 3.8 MOVE .....                     | 3-14 |
| 3.9 GDUMP .....                    | 3-16 |
| 3.10 GLOAD .....                   | 3-18 |
| 3.11 XSKCONV .....                 | 3-20 |
| 3.12 MTBYTE .....                  | 3-21 |

## 1. GENERAL

### 1.1 Outline of ACLI

- (1) ADVANTEST provides utility programs and application packages which can be executed on Solaris(SunOS) operating system and/or UNIX-based operating systems (ASX/U-12 etc.).

Start/execution of these programs are carried out by entering a command in the c-shell state (% prompt).

The commands accepted in the c-shell state are called ACLI (ADVANsite Command Line Interpreter) command.

- (2) ACLI commands can be divided into the following two major categories.
  - Commands to complete the transaction within the Solaris(SunOS) environment.
  - Commands to start in the Solaris(SunOS) environment and to access to the tester processor through ADI (ADVANsite Dedicated Interface).

The former commands in the above are executed only on the SUN workstation. Details on these commands are explained in Chapter 2, "UNIX APPLICATION COMMANDS".

The latter commands in the above are executed with accessing to the tester processor through the SUN workstation. Therefore, plural commands cannot be executed at a time. Details on these commands are explained in Chapter 3, "ADI APPLICATION COMMANDS". The ADI application commands include some commands of the 8-inch floppy disk unit or the magnetic tape unit connected to the tester processor. These commands take effect only when the floppy disk unit or the magnetic tape unit is connected to the tester processor.

## 2. UNIX APPLICATION COMMANDS

### 2.1 PRODUCT

(1) Function

Displays software product information (revision number, etc.) provided by ADVANTEST.  
Possible to output to a file.

(2) Format

```
% PRODUCT{f"- " qualifier}[-product1f.product2...f]
```

- qualifier ..... Following qualifiers can be used.
- all ..... Displays all the software products.  
If -all is specified, product name specification is ignored.
- output {=file}  
..... Outputs to an arbitrary file specified with "file". Displayed in  
SYS\$OUTPUT (VKT screen) when -output is omitted.  
Output to "product.lst" file when "file" is omitted.  
Wildcard cannot be used for "file".  
Not output to SYS\$OUTPUT if -output is specified.
- product1 ..... Software products to be displayed about their information. If all  
product name are omitted, it is equivalent to specifying all. Asterisk  
(\*) of wildcard is equivalent to specification of all software products.  
However, the asterisk cannot make a partial replace of character  
string.

(3) Description

- (a) Information displayed by the command is restricted to that of the software product  
registered in the data base for revision management. The data base for revision  
management is automatically created during installation.
- (b) Data base stores name, P number, revision number, title name, date and label name for  
each software product. The revision number is managed for each software.



## ACLI COMMANDS REFERENCE MANUAL (UNIX VERSION)

## 2.1 PRODUCT

## (4) Example

- (a) Display the software product information registered in the revision control data base as follows:

```
% product -all
```

|                                        |                                                      |                     |                      |        |
|----------------------------------------|------------------------------------------------------|---------------------|----------------------|--------|
| ADVANSite Software Product Information |                                                      |                     | 06-OCT-1989 15:10:30 |        |
| System Software: ASX/U-12              |                                                      |                     |                      |        |
| Version : 2.01                         |                                                      |                     |                      |        |
| CPUtype : SPARC                        |                                                      |                     |                      |        |
| Product                                | P Number<br>Title                                    | Resision [Expected] | Date                 | Label  |
| ASXUBASE                               | PASX12-40S***-1/4<br>SunOS Release 4.1.3             | 1.04 [ ]            | 27-JUL-1989          | ROOT   |
| DIAG3340SU                             | PASX12-40S***-4/4<br>Tester Diagnosis (T3340 Series) | 2.01 [ ]            | 27-JUL-1989          | DG3340 |
| SYSTEST12SU                            | PASX12-40S***-2/4<br>ADI/SYS TEST (T3340 Series)     | 2.01 [ ]            | 27-JUL-1989          | SYST12 |
| TESTUTL12SU                            | PASX12-40S***-3/4<br>Tester Utilities (T3340 Series) | 2.01 [ ]            | 27-JUL-1989          | TUTL12 |
| XATL12SU                               | PXTL12-00S***<br>xatl/u-12 cross compiler            | 1.00 [ ]            | 27-JUL-1989          | XATL12 |

- (b) Display the information of the product "diag3340su" as follows:

```
% product diag3340su
```

|                                        |                                 |                     |                      |        |
|----------------------------------------|---------------------------------|---------------------|----------------------|--------|
| ADVANSite Software Product Information |                                 |                     | 06-OCT-1989 15:10:30 |        |
| System Software: ASX/U-12              |                                 |                     |                      |        |
| Version : 2.01                         |                                 |                     |                      |        |
| CPUtype : SPARC                        |                                 |                     |                      |        |
| Product                                | P Number                        | Revision [Expected] | Date                 | Label  |
|                                        | Title                           |                     |                      |        |
| DIAG3340SU                             | PASX12-40S***-4/4               | 2.01 [ ]            | 27-JUL-1989          | DG3340 |
|                                        | Tester Diagnosis (T3340 Series) |                     |                      |        |

# ACLI COMMANDS REFERENCE MANUAL (UNIX VERSION)

## 2.1 PRODUCT

(c) Write the information of the products “testutl12su” and “xatl12su” to “result.lst”.

```
% Product -output=result.lst testutl12su,xatl12su
% cat result.lst
```

| ADVANSite Software Product Information |                   |                     |             | 06-OCT-1989 15:10:30 |
|----------------------------------------|-------------------|---------------------|-------------|----------------------|
| System Software: ASX/U-12              |                   |                     |             |                      |
| Version : 2.01                         |                   |                     |             |                      |
| CPUtype : SPARC                        |                   |                     |             |                      |
| Product                                | P Number          | Revision [Expected] | Date        | Label                |
| Title                                  |                   |                     |             |                      |
| TESTUTL12SU                            | PASX12-40S***-3/4 | 2.01 [ ]            | 27-JUL-1989 | TUTL12               |
| Tester Utilities (T3340 Series)        |                   |                     |             |                      |
| XATL12SU                               | PXTL12-00S***     | 1.00 [ ]            | 27-JUL-1989 | XATL12               |
| xatl/u-12 cross compiler               |                   |                     |             |                      |

## 2.2 CED

### (1) Introduction

This utility program, CED (Command Environment Definition), is for specifying which product is to be used for a command having the same name in more than one products.

Conventionally the compilation of the ATL language has been executed with command “trans”. In ADVANsite however, it is possible with one system to compile multiple systems (logic tester, memory tester, etc.). In this case, if command “trans” is used, the system cannot determine for which system the compiling command is.

Therefore, in ADVANsite an identifier (normally the number used in the name of the operating system: for example, “12” for ASX/U-12) is added after “trans”, changing the standard compiling command to “transxx”. What the “trans” command needs to be used because of, for example, the compatibility of operation, this CED command is used to specify for which system it is to be used.

### (2) Formats and Their Functions

The following two types of formats can be used as the command format.

|                                                       |   |
|-------------------------------------------------------|---|
| % <u>ced</u> <u>command-name</u> <u>system-type</u> ↵ | ① |
| % <u>ced</u> ↵                                        | ② |

#### ① Format 1: command line mode

|                                                       |
|-------------------------------------------------------|
| % <u>ced</u> <u>command-name</u> <u>system-type</u> ↵ |
|-------------------------------------------------------|

In this format, everything is specified within this command line. It is effective when there is no need to see the previous specifications and when it is used in a c-shell script (.cshrc etc.)

In the command line:

“command\_name” is the name of the command to be modified.

It can be selected out of three commands, “trans”, “tesim”, and “skconv”.

## ACLI COMMANDS REFERENCE MANUAL (UNIX VERSION)

2.2 CED

“system\_type” is the identifier which specifies the product for the command. It can be selected out of those given below.

System                      “system type” to be specified

- ASX/U-11E              11E
- ASX/U-12              12
- ASX/U-30              30
- ASX/U-31              31
- ASX/U-50              50
- ASX/U-73              73
- ASX/U-80              80
- ASX/U-51              51

It is also possible to make the command ineffective by specifying “DEL” for “system\_type”.

**Note 1:** *Command line mode is valid when it is written in .cshrc.*

**Note 2:** *There are some systems which are not available yet and to which this command is meaningless.*

② Format 2: conversational mode

In this format, a system type for a command can be specified while referring to the table of all the currently available settings.

% ced↓

| Command | Available System | Definition |
|---------|------------------|------------|
| skconv  | skconv 12        |            |
| tesim   | tesim 12         |            |
| trans   | trans 12/38      |            |

Command: tesim↓  
System type: 12↓

In this screen:

Under “Command” are available commands of the products which are currently installed.

Under “Available system” are all the available systems which are currently installed.

“Definition” indicates the systems which are defined for the command. If no system is defined, the area is blank.

“command\_name” is the name of the command to be modified.

It can be selected out of three commands. “trans”, “tesim”, and “skconv”.

To exit from CED, enter “exit”.

## ACLI COMMANDS REFERENCE MANUAL (UNIX VERSION)

2.2 CED

“system\_type” is the identifier which specifies the product for the command. It can be selected out of those given below.

System                      “system type” to be specified

- ASX/U-11E              11E
- ASX/U-12              12
- ASX/U-30              30
- ASX/U-31              31
- ASX/U-50              50
- ASX/U-73              73
- ASX/U-80              80
- ASX/U-51              51

It is also possible to make the command ineffective by specifying “del” for “system\_type”.

**Note:**    *There are some systems which are not available yet and to which this command is meaningless.*

### (3) Examples

Some simple examples of CED are given below, assuming that the following products are installed.

% ced↵

| Command Environment: User Initiation                                    |                  |            |
|-------------------------------------------------------------------------|------------------|------------|
| User: asxu2l user      Terminal: tty2      Wed Jun 21 15:43:53 JST 1989 |                  |            |
| Pid: 4245                                                               |                  |            |
| Default file spec: /usr/user                                            |                  |            |
| Command                                                                 | Available System | Definition |
| skconv                                                                  | skconv 12        |            |
| tesim                                                                   | tesim 12         |            |
| trans                                                                   | trans 12/30      |            |
| Command: <u>trans</u>                                                   |                  |            |
| System type: <u>12</u>                                                  |                  |            |

% trans abc↵

XATL/U-12 TEST PLAN COMPILER REV 1.00  
PRO abc.pro COMPILATION OK !!

% ced␣

| Command Environment Definition      |                  |            |
|-------------------------------------|------------------|------------|
| User: asxu2user      Terminal: tty2 |                  |            |
| Pid: 4245                           |                  |            |
| Default file spec: /usr/user        |                  |            |
| Wed Jun 21 15:43:53 JST 1989        |                  |            |
| Command                             | Available System | Definition |
| skconv                              | skconv 12        |            |
| tesim                               | tesim 12         |            |
| trans                               | trans 12/30      | trans12    |

Command: trans␣  
System type: 30␣

% trans abc␣

XATL/U-30 TEST PLAN COMPILER REV 1.00  
PRO abc.pro COMPILATION OK !!

%

#### (4) Error Messages

The followings are the error messages for the CED commands:

- ① CED-W-NOPROD, No product is available:  
The product for the CED command is not installed. In this case, the CED command is meaningless.
- ② CED-W-UNDSYM, undefined symbol: symbol name  
When the "DEL" command is entered to delete a command definition, this warning is displayed if the definition has already been deleted.
- ③ CED-E-NOTINSTAL, product is not installed: product name  
The product specified by the command is not installed even though it is supported by the command.
- ④ CED-E-UNKNOWNCOM, unknown command: command name  
A name not allowed as a command was specified.
- ⑤ CED-E-UNKNOWNATYPE, unknown system type: system type  
A type (number) not allowed as a system type was specified.

### 3. ADI APPLICATION COMMANDS

*Note 1: Commands described in this chapter perform an access to the tester processor through ADI interface.*

*Therefore, possible to be used only on ADVANsite test systems.*

*Note 2: Multiple commands cannot be executed at a time.*

#### 3.1 MTLD

(1) Function

Loads magnetic tape files recorded in the GDUMP format of MOST through the magnetic tape unit (MT0) in the tester processor side to a disk. Files are stored into a current working directory.

(2) Format

```
% mtld f/s? f_un?d
```

n: Block number of a magnetic tape. Specify by an integer of 0 to 99. If omitted, help information of MTLD command is displayed and loading is not executed.

/s: Command qualifiers. The following four switches can be used in any combinations as necessary.  
Omissible.

/c ..... Performs a confirming operation of loaded files. Responding to confirmation messages, press a carriage return to load or space bar not to load.

/e ..... Loads files in the all blocks from n to last.

/n ..... Does not perform an actual loading, but displays contents (file names) of a tape.

/p ..... Performs a confirming operation on a block basis.

(3) Operational Procedure

- (a) Mount a magnetic tape onto the tape unit (MT0).
- (b) Be sure that BOT, ONLINE and HIDDEN lamps in the tape unit are all illuminated.
- (c) Issue MTLD command on a terminal in the shell state, according to the command format shown in para. (2).
- (d) After confirming loaded files, change the tape unit to OFFLINE state. (Depress ONLINE lamp-switch.)
- (e) Depress REWIND switch on the tape unit to rewind-up the tape.

## (4) Command Line Examples

- % mtld ..... Help information of MTLD command is displayed when a block number is omitted.
- % mtld 0 ..... Loads files in the block 0.
- % mtld /n/e/p 2 ..... Displays names of files in the blocks from 2 to the last, accompanying confirming operation.

**CAUTION!**

*When a magnetic tape has been recorded in a format other than GDUMP of MOST, files cannot be loaded by using MTLD.*



## 3.2 FCPY

### (1) Function

Copies floppy disk files recorded in the MOST format (by MOVE command or XFER command) through the floppy disk drive (FP0) in the tester processor side to a disk. Files are stored into a current working directory.

### (2) Format

```
% fcpy f fname.ext
```

fname.ext: File name to be copied. Specify with a file extension (ext). If a file name is omitted, content (file names) in a floppy disk will be displayed. Wildcard (\*) can be used for fname and/or ext.

### (3) Operational Procedure

- (a) Insert a floppy disk into the floppy drive (FP0).
- (b) Issue FCPY command on a terminal in the shell state, according to the command format shown in para (2).
- (c) After confirming copied files, draw out a floppy disk from the drive.

### (4) Command Line Examples

```
% fcpy ..... Displays content of the floppy disk (file names, file size, file
attributes, start block no's) when a file name is not speci-
fied.

% fcpy abc.asc ..... Copies abc of ASC file.

% fcpy \*.asc ..... Copies all files with ASC file attribute.

% fcpy abc.\* ..... Copies all files having a name of abc irrespective to file at-
tributes.

% fcpy \*.\* ..... Copies all files in the disk.
```

### CAUTION!

*If a file of the same name has already exist, the existing file will be deleted.*

### 3.3 MTXFER

#### (1) Function

Reads out magnetic tape data (MTXFER format) written in an arbitrary record length and stores into a disk file using a magnetic tape unit on the tester processor side.

In addition, writes disk file data into a magnetic tape in an arbitrary record length.

#### (2) Format

```
% mtxfer [-s] [-source-file] [-dest-file] [-R rec-size]
```

**source-file:** Specifies input file name. Specifying a magnetic tape (MT0:n) results in a file transfer from the magnetic tape to disk.

**dest-file:** Specifies output file name. Specifying a magnetic tape (MT0:0) results in a file transfer from a disk to the magnetic tape.

**-R rec-size:** Specifies a record length of a file to be read out. 2 to 8192 bytes by 2-byte step.

If omitted, reading is made according to a written length. Usually not necessary when reading a magnetic tape file.

#### CAUTION!

***If disk file is specified as source-file name, rec-size/R cannot be omitted.***

**-s:** Command qualifiers. The following qualifiers can be used in any combinations as necessary.  
Omissible.

**-e .....** Displays record size and number of records of files from the specified block number to the last block of magnetic tape. Disk file is not created.

Example: mtxfer -e mt0:1

**-s .....** Sets or rewinds a magnetic tape.  
Operands are ignored even if specified.

Example: mtxfer -s

**-n .....** Displays record size and number of records of files in a specified block.

Example: mtxfer -n mt0:3

**-l .....** Use this switch together with -e or -n. Outputs information of -e or -n to a line printer.

Example: mtxfer -enl mt0:0

## (3) File Name Specification

Specify file names in a UNIX format.

filename.ext


The following 16 file extensions may be used as ext.

sys, pro, lpa, soc, sub, mpa, asc, dat, dpa, def, utl, lib, dir, cal, scr, gen

File name other than MT0:n (n=0 to 99) cannot be used as a magnetic tape file.

## (4) Description

- (a) It is possible to read/write magnetic tapes through MTXFER format of MOST system. In a similar manner to MTLT, using a magnetic tape drive unit connected to a tester processor and issuing MTXFER command under the shell state, reading/writing files may be performed between an environment processor disk and a magnetic tape drive unit.
- (b) Magnetic tapes written by this utility may be read out by MTXFER command on the conventional MOST systems. The following figure summarizes an operation.

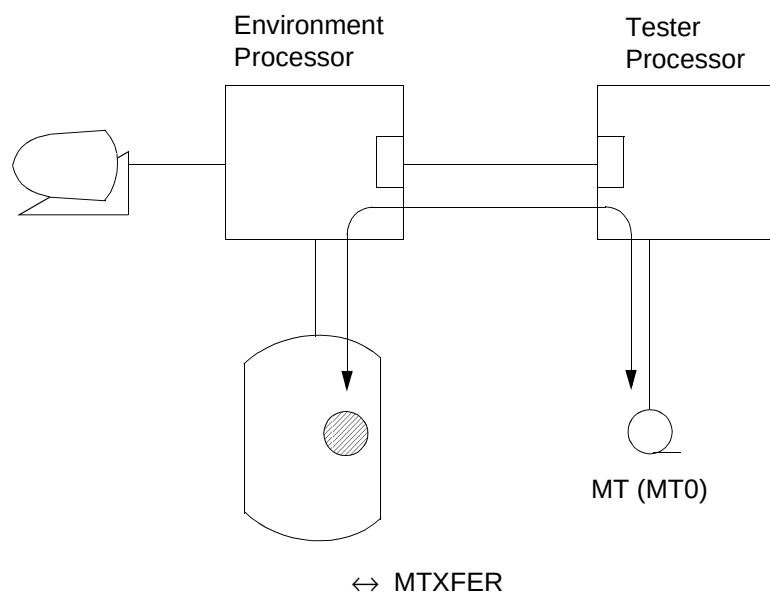

## (5) Command Line Examples

**Note:** *Perform setting and releasing a magnetic tape before and after file transfer by `mtxfer-s` command.*

- (a) To transfer a disk file to a magnetic tape in 8192-byte record length.

```
% mtxfer file.dat mt0:0 -R 8192
FILE.DAT
  BYTE/REC   RECORDS
    8192    =    00123
```

- (b) To read out magnetic tape files of 120-byte record length.

```
% mtxfer mt0:1 file2.asc -R 120
MT0:1
  BYTE/REC   RECOR
    120     =    00200
```

- (c) To check a magnetic tape for record length.

```
% mtxfer -e mt0:1
MT0:1
  BYTE/REC   RECORDS
    0112    =    00120
MT0:2
  BYTE/REC   RECORDS
    8192     =    01893
MT0:3
  BYTE/REC   RECORDS
    1600     =    11000
```

### 3.4 XTRANS

**Note:** *In the T5382/82A/65/65P/34/35/35P system of ASX/U-50 and the ASX/U-51 system, the compiler cannot be started by executing this XTRANS command.*

(1) Function

Compiles device programs on the tester processor.

(2) Format

```
% x trans [-s] source1 [-B object] [-E error] [-L list]
```

-s Following command qualifiers may be used.

- b ..... When the title statement is "PRO" and -B object is not specified, the output file (object file) of the compilation result is made "PRO BUFF".
- c ..... When the title statement is "LPAT" an VGC Store list is made.
- d ..... The information to be used for system maintenance is output each time a compilation error occurs.
- e ..... A compilation error message is output onto a printer. When there is -E error specification, this has no meaning.
- g ..... When a title statement is "LPAT" uses DBM patterns, #3FFFFFF is set to SPA as the maximum whether a SPA value is specified or not. A compilation error will occur when the last pattern sequence control statement is either JMP, RTN, RTNI or RSP and STPS is not specified.
- h ..... When a title statement is "LPAT" which does not use SPA statement, and the last statement before END or PART END is either JMP, RTN, RTNI or RSP, the translation error 4033 will occur. However this translation switch prevents error inserting either one of JMP, RTN, RTNI and RSP address to SPA.
- i ..... When the last one or two characters of a specified file (only the source file name is valid) is a digits, the name of a file to be compiled following the above is made the same as the above file, except that "1" is added to its numerical part. This operation is called "Auto Increment" and is continued until a file which corresponds to the file name thus obtained by adding "1" no longer exists.
- l ..... Compilation list etc. are output onto a printer. If -L list is specified, this has no meaning. Output is not made unless combined with -c (this is only valid when the title statement is LPAT,) -o, -u, or -x.
- o ..... The compilation list is output. (When the title statement is PRO, SUBR, or SOCKET output is made in octal notation.)
- s ..... When the title statement is PRO, SUBR or SOCKET, the source program is output to the list file.
- u ..... When the title statements are PRO, SUBR or SOCKET, the information concerning the labels and variables etc. is output to the list file.

-x ..... When the title statements are PRO, SUBR or SOCKET, the radix of the compilation list is made hexadecimal.

**Note:** *The compilation error occurs and the error message will be displayed as follows if -h and -g are specified at the same time.*

source1..... Source file names. Wildcards cannot be used.

-B object ..... Object file name. If omitted, the name of title statement of source file or PRO BUFF with qualifier -b becomes an object file name.

-E error ..... Output file name of an error list. .ASC is assumed if a file extension is omitted.  
When an error list file is not specified, an output is made to VKT or a printer (by a qualifier -e).

-L list..... Output file name of a compilation list. .ASC is assumed if a file extension is omitted.  
When a compilation list file is not specified, an output is made to VKT or a printer (by a qualifier -l).

**CAUTION!**

*When a line consisting of more than 132 characters is compiled, a compilation error occurs on a LPAT pattern program, displaying message "line too long."*

### 3.5 REV

Old or new type of MOST system software is provided depending on the system software name or its version. In the old type, the basic system software is classified into three types; release version, update version and supplement version. However, in the new type, it is classified into three types of SYSTESTxxSM, TESTUTLxxSM and DIAGxxxxSM. The new type has the same concept as that of the basic system software ASX of the ADVANsite system.

Corresponding to this new type, the REV command was newly added. Therefore, note that the old or new type of REV command is also provided depending on the system software name or its version.

Make a distinction between old and new of the REV command according as the OS has employed the new type or not.

The following table shows whether each OS employs the new type or not.

| OS name   | Revision                                             |
|-----------|------------------------------------------------------|
| MOST-XI/E | Old type                                             |
| MOST-XII  | New type is employed in the OS of REV 3.13 or later. |
| MOST-30   | New type is employed in the OS of REV 5.03 or later. |
| MOST-50   | New type is employed in the OS of REV 6.02 or later. |
| MOST-73   | New type is employed in the OS of REV 5.00 or later. |

#### 3.5.1 Old-type REV

(1) Function

Displays the corresponding revision number of the MOST system.

(This function is unavailable to ASX/U-51 which does not have the corresponding MOST.)

(2) Format

```
% rev f-s+-
```

-s ..... Following qualifier can be used.

-a ..... Displays the record of revisions.

(3) Description

Revision number of MOST applications corresponding to that of UNIX applications, such as tester utilities used in the tester simulator, SYSTEST file of the ADVANsite test system and so on, is displayed.

### 3.5.2 New-type REV

(1) Function

Displays the corresponding revision number of the MOST system.

(This function is unavailable to ASX/U-51 which does not have the corresponding MOST.)

(2) Format

```
% rev f-s␣
```

-s ..... The following qualifiers are available.

-a ..... Displays the record of revisions.

-c ..... Converts lower-case letters into upper-case letters and output them.

-l ..... Output to a printer. If -l is not specified, the data is output on the screen.

-p ..... Displays information on the system and the product.

**Note:** When -a and -p are specified together, only -p is effective.

(3) Description

Revision number of MOST applications corresponding to that of UNIX applications, such as tester utilities used in the tester simulator, SYSTEST file of the ADVANsite test system and so on, is displayed.

(4) Example

```
% rev␣
MOST-XII (T3340 SERIES) REV2.07
OR
MOST-XII (T3320 SERIES) REV2.07
```

```
% rev -a␣
MOST-XII (T3340 SERIES) REV3.08A
SYSTEST:
      REV3.08      1989/12/22
      {
      REV3.08-3    1990/04/02
SYS REV.NO ,SYS PRO.TR ,SYS TEST
      {
TESTUTL:
      REV3.08      1989/12/22
      {
DIAG:
      REV3.08      1989/12/22
```



```
% rev -p
ADVANTEST Software Product Information      03-MAR-1994   15:33:33
System Software: MOST-XII
Version      : 3.10C
CPUtype     : TP3

Product      P Number      Revision [Expected]   Date      Label
      Title
-----
DIAG3340SM   PMST12-40T***-3/3  3.10C   [    ]   22-FEB-1994  DG3340
              MOST-XII Tester Diagnosis
SYSTEST12SM  PMST12-40T***-1/3  3.10C   [    ]   21-FEB-1994  SYST12
              MOST-XII Operating System
TESTUTL12SM  PMST12-40T***-2/3  3.10C   [    ]   22-FEB-1994  TUTL12
              MOST-XII Tester Utilities
Total of 3 products.
```

**CAUTION!**

*When there is no applicable MOST system for the ASX/U installed, "\*\*\*" appears as the series-name in the P number.*

**Example:** *PMST50\_\*\*\*T\*\*\**



Shows there is no applicable MOST system.

## 3.6 MTINIT

(1) Function

Initializes a peripheral device connected to the tester processor.

(2) Format

```
% mtinit [-s] devicename
```

devicename: mt0 (magnetic tape unit) or fp0 (floppy disk drive).

-s: Following qualifier can be used.

-a .... Formats the device.

-d .... Formats the device in double density.

-f ..... Executes full initialization.

-s..... Formats the device in single density.

**Note:** *Full initialization, which deletes whole contents, cannot be done for a magnetic tape.*

### 3.7 MTREL

(1) Function

Terminates I/O access to a peripheral device connected to the tester processor. Execute this command before removing a magnetic tape or a floppy disk from a unit.

(2) Format

`% mtrel devicename␣`

devicename: mt0 (magnetic tape) or fp0 (floppy disk).  
If mt0 is specified, tape will be rewound.

### 3.8 MOVE

#### (1) Function

Transfers file(s) between a floppy disk drive (FP0) in the tester processor and a specified directory. Absolute pass names cannot be used as a directory. Use environment variable name.

#### (2) Format

```
% move f-s dest-file source-file:filename.ext
% move f-s dest-file filename1.ext -N filename2.ext
```

**dest-file:** Output file name. If FP0 is specified, file is transferred from a hard disk to a floppy disk.

**source-file:** Input file name. If FP0 is specified, file is transferred from a floppy disk to a hard disk.

**filename.ext:** Name of file to be transferred. When a file extension (ext) is omitted, all extensions are subject to processing.  
Template character "\*" may be used.  
When -N is specified, files having that name is not transferred.

**-s:** Command qualifiers. Use the following qualifiers in arbitrary combinations as required.  
Omissible.

**-a ....** Includes permanent files as the object to be moved.

**-c.....** Acknowledges the objects to be moved. Enter ↵ for yes, or other than ↵ for no.

**-d ....** Deletes the same files in the dest-file directory.

**-l.....** Outputs the file names and created dates to a line printer. Effective when used together with -v.

**-n ....** Does not perform collation check after file transfer. That is, if not specified, check is always made.

**-o ....** Moves files in alphabetical order.

**-q ....** Combined with -o, this switch outputs the files in the order of digit-count as well as in alphabetical order.

**-s.....** Includes SYS files as the objects to be moved.

**-v.....** Outputs the file names and dates to VKT.

**Note:** *Created date of an original file is not attached to a newly copied file.*

## (3) Example

- (a) To copy a file in a floppy disk to a directory named as temp by specifying a name of the file

```
% setenv TEMP /usr/temp ← Define a directory of /usr/temp
                             as environment variable name TEMP
% mtinit fp0
% move -v TEMP fp0:move.asc
ASC MOVE          1998/04/03
% mtrel fp0
```

- (b) To copy all ASC files in a floppy disk to a directory named as temp.

```
% mtinit fp0
% move -v TEMP fp0:\*.asc
ASC MOVE          1998/04/03
ASC MOVESUB       1998/04/03
% mtrel fp0
```

- (c) To copy a file in a current directory to a floppy disk by specifying a name of the file.

```
% mtinit fp0
% move -v fp0 move.asc
ASC MOVE          1998/04/03
% mtrel fp0
```

- (d) To copy all ASC files in a current directory to a floppy disk.

```
% mtinit fp0
% move -v fp0 \*.asc
ASC MOVE          1998/04/03
ASC MOVESUB       1998/04/03
% mtrel fp0
```

### 3.9 GDUMP

(1) Function

Dumps a file to magnetic tape on tester processor side.

(2) Format

```
% gdump [-s] [output_filename] [filename]
```

(3) Description

Files are output using a special format to the specified "output filename" for storage.

Only MT0 can be specified as Output filename.

The file name, byte length (file size), and file creation date are attached to the files created by GDUMP. If "filename" is not specified as an argument, all files in the current default directory are processed by GDUMP. To load the files created by GDUMP, use GLOAD.

(4) Switch (-s)

Global:

- b GDUMPed file names are output to VKT.
- c To confirm the file at GDUMP execution, its name is output to VKT. If this file is processed by GDUMP, enter the "CR" key. Otherwise, enter any other key.
- l If this switch is used with -v, the GDUMPed file name is output on a line printer together with the date this file is created.
- o GDUMPing sequence is file name alphabetical order.
- q GDUMPing sequence is determined by name length and alphabetical order of file names. This switch is valid only when used in combination with -o.
- s SYS file also becomes GDUMPing object.
- v GDUMPed file name is output to VKT together with file creation date.

Local:

- N All files with names agreeing with the specified file are exempt from GDUMPing.

(5) File Specifier

If the file specifier is omitted, all file specifiers are assumed.

(6) Template Character

Usable for "filename".

Example: % gdump mt0:0 \\*  
          % gdump mt0:0 \\*.asc

## (7) Example

```
% mtinit mt0␣  
  
% gdump -v mt0:0 aaa.asc␣  
ASC AAA      1998/06/01  
  
% mtrel mt0␣  
  
% mtinit mt0␣  
  
% gdump -v mt0:0 \*.asc␣  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
% mtrel mt0␣
```

### 3.10 GLOAD

(1) Function

Loads a file from magnetic tape on tester processor side.

(2) Format

```
% gload [-s] [input-filename] [filename]
```

(3) Description

The device file specified by input filename is regarded as the one created by GDUMP (or DUMP) and is loaded. If "filename" is not specified, all files in input filename are loaded by this command.

GLOAD automatically determines if GDUMP or DUMP will write the file GLOAD outputs the following messages in either case:

① When a file is written by GDUMP

MT0:0 IS "GDUMP" FORMAT. (MTBYTE = 8192)



The byte size is displayed.

② When a file is written by DUMP

MT0:0 IS "DUMP" FORMAT.

(4) Switch (-s)

Global:

- a Permanent files are also loaded.
- b Only loaded file names are output.
- e Blocks from the specified block to the last block become the GLOADing object.
- f Valid only when a global switch including -e -l -n or -e -l -v is specified. Page feed is conducted each time an MT block number to be output as a list is renewed.
- l When this switch is used with -v, the loaded file name is output on a printer. This switch is valid only when combined with -v, -n, or -b. If switch -l is missing, output goes to VKT.
- n Only file checking is made without actual file loading. If file checking ends normally, file creation dates are output together with file names.
- v Names of successfully loaded files and file creation dates are output.

(5) File specifier

If the file specifier of "filename" is omitted, all file specifiers are assumed to be specified.

(6) Template Character

Usable only for "filename".

Example: % gload mt0:0 \\*  
          % gload mt0:0 \\*.asc



## (7) Example

```
% mtinit mt0␣  
  
% gdump -v mt0:0␣  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
% gload -d-v mt0:0 aaa.asc␣  
MT0:0 IS "GDUMP" FORMAT. (MTBYTE = 8192)  
ASC AAA      1998/06/01  
% mtrel mt0␣
```

```
% mtinit mt0␣  
  
% gdump -v mt0:0␣  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
% gdump -v mt0:1␣  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
% gload -e-n mt0:0 aaa.asc␣  
  
MT0:0 IS "GDUMP" FORMAT. (MTBYTE = 8192)  
  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
MT0:1 IS "GDUMP" FORMAT. (MTBYTE = 8192)  
ASC AAA      1998/06/01  
ASC ABC      1998/06/01  
  
% mtrel mt0␣
```

### 3.11 XSKCONV

(1) Function

This command converts, in a tester processor, the socket of a pattern object file.

(2) Format

```
% xskconv [-s] input-file output-file [{socket}]
```

- |             |       |                                                                                                                                                     |
|-------------|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| qualifier   | ..... | Following qualifier can be used. When not using the qualifier, socket conversion is executed according to a conversion condition in a socket table. |
| -s          | ..... | Reversely converts pattern files on which socket conversion has been executed.<br>"socket" designation is ignored when -s is specified.             |
| input-file  | ..... | Original pattern file (object) name before socket conversion or reversed conversion.<br>File extension (.LPA) cannot be specified.                  |
| output-file | ..... | Pattern file (object) name after socket conversion or reversed conversion. File extension (.LPA) cannot be specified.                               |
| socket      | ..... | Socket table specification used for the socket conversion. File extension (.SOC) cannot be specified. Omissible only when specifying -s.            |

**Note 1:** *Wildcards cannot be used in file specification.*

**Note 2:** *When the pattern declaration of input-file is CF, an error occurs.*

**Note 3:** *This command can be used in ASX/U-12, ASX/U-30, ASX/U-31, and ASX/U-73.*

### 3.12 MTBYTE

(1) Function

This command specifies the byte size per one GDUMP record.

(2) Format

% mtbyte [byte length],

Byte length: Specified in decimal numeral. It must be 512 and its multiples of integer. The maximum length is 8192.

The initial value is 8192. (When “mtbyte” command is not set.) If the byte length is omitted, the current set value is displayed.

**Note:** *If one user sets the “mtbyte” some value, the value will be maintained for all users after that.*

*Also, if the system is reactivated, the specified value kept unchanged.*