

ADVANTEST®

ADVANTEST CORPORATION

*ADVANsite Test System
Software Installation/
System Start User's Manual
VOL1 Basic OS Installation*

MANUAL NUMBER 8227728-21

Applicable Software

Solaris 7 5/99

Solaris 8 1/01

Solaris 8 2/02

Trademarks and Registered Trademarks

- ADVANTEST and ADVANsite are trademarks of Advantest Corporation.
- Sun, Sun Microsystems, the Sun logo, SunOS, OpenWindows, Sun Blade and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- All SPARC trademarks are used under license of SPARC International, Inc. and are also trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- Products bearing SPARC trademarks are based on an architecture developed by Sun Microsystems, Inc.
- All other marks referenced herein are trademarks or registered trademarks of their respective owners.

Revision History

Rev.	Date	Notes
16	Apr 5/01	
17	Sep 5/01	
18	Jul 15/02	
19	Nov 12/02	
20	May 15/03	
21	Jul 25/03	

Table of Contents

Preface	Preface-1
Purpose of This Manual	Preface-1
Related Manuals	Preface-1
 1. Outline	 1-1
 2. Basic OS (Solaris) Installation	 2-1
2. 1 Attention and Preparation before Installation	2-1
2. 2 Installing Solaris 8	2-3
2. 3 Installing Solaris 7	2-8
 3. Setting Solaris (System)	 3-1
3. 1 Editing /etc/hosts	3-1
3. 2 Setting the 2nd Ethernet Host Name	3-2
3. 3 Creating /etc/notrouter	3-3
3. 4 Rebooting	3-4
 Appendix 1.How to Prevent the Log in Server from being Started	 A1-1
 List of Figures	 F-1
 List of Tables	 T-1

Preface

Purpose of This Manual

This manual explains the procedure from installation of the tester environment software to activation of the tester controller.

Related Manuals

ADVANsite Test System Software Installation/System Start User's Manual VOL2 Tester Environment Software Installation(No. : 8227729)

1. Outline

This manual explains the procedure from installation of the tester environment software to activation of the tester controller.

ASX/U system software consists of the basic software (Solaris) and tester environment programs. How to install the basic software (Solaris) is described in this manual, and how to install the tester environment programs is described in [ADVANsite Test System Software Installation/System Start User's Manual VOL2 Tester Environment Software Installation\(No. : 8227729\)](#). VOL2 also explains how to start the system.

When installing a complete set of the system software, install it in the order of VOL 1 and VOL 2 (or VOL 1, VOL 2 and unbundled products, if any).

In addition, if you upgrade any of the tester environment programs, you only need to install the tester environment software, as described in VOL 2.

2. Basic OS (Solaris) Installation

This chapter explains the procedure of installing Solaris 8 and Solaris 7.
It also describes the precautions, pre-installation work and post-installation work.

2. 1 Attention and Preparation before Installation

Check the following items before starting the installation.

1. Backup of disk contents

Note that any data stored on the hard disk will be lost if any of the installations described in this manual are carried out.



Tip

Make a backup file for the required file before installation.

2. Hardware requirements

Table 2-1 Hardware Requirements

Component	When installing Solaris 8 2/02	When installing Solaris 8 1/01	When installing Solaris 7
EWS	- H3-610020 (Sun Blade150) - H3-610019 (Sun Blade100) - V0713, V0714, H3-6853, or H3-6854 series (Sun Ultra 5)	V0713, V0714, H3-6853, or H3-6854 series (Sun Ultra 5)	- V0705 or V0706 series (SPARCstation 5) - V0713, V0714, H3-6853, or H3-6854 series (Sun Ultra 5)
EWS memory	Minimum EWS memory of 64 MB (128 MB or more recommended)	Minimum EWS memory of 64 MB (128 MB or more recommended)	64 MB or more
Disk	2 GB or more	2 GB or more	1 GB or more

3. Restrictions

The software (NeWSprint) used for the laser printers V0215 and V0215A is incompatible with Solaris 7 and later.

4. Collecting and confirming network information

Collect network information and confirm that it is appropriate.

Host name

A unique name to identify the system.

IP address

A unique network address required for connecting the system with a network.

Netmask

The mask data to divide the subnet numbers and the host numbers with the IP address.


Setup items to be verified for the T5593, T5592, T5586, T5585, T5377, T5376, T5375 and T5371 Systems:

The T5593, T5592, T5586, T5585, T5377, T5376, T5375 and T5371 test systems uses a 2nd Ethernet, and has the host name and IP address as listed in the table below assigned prior to shipment.

Table 2-2 Host Name and IP Address Used in a 2nd Ethernet

	Host name	IP address
EWS 2nd Ethernet	asxvxhost	172.16.1.10
Tester processor	asxvxtarget	172.16.1.1

Figure 2-1 2nd Ethernet Connection Diagram

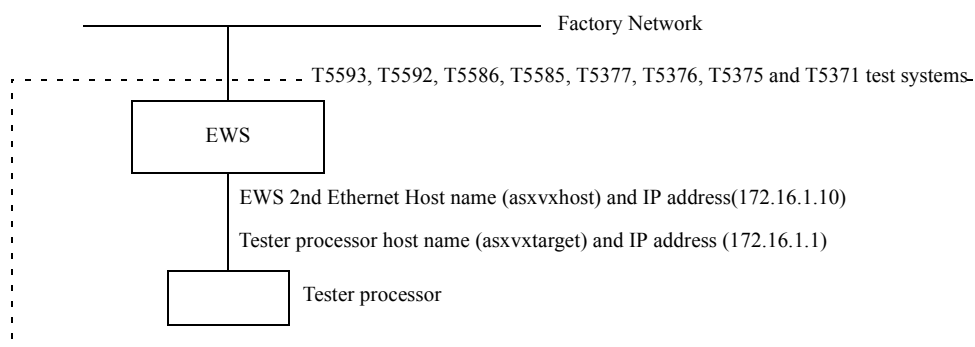

Since the address assignment on the 2nd Ethernet side is closed within a test system, the IP address that is the same as the IP address used on the 2nd Ethernet side of other system can be used. However, if there are two or more systems whose host names and IP addresses are the same within the factory Ethernet network when viewed from the EWS (under which the systems are controlled), distinct host names and IP addresses must be assigned.

Confirm these settings with the network administrator in advance.

2. 2 Installing Solaris 8

Installation procedure of Solaris as the ASX/U system OS is explained below.

Three CD-ROMs in one of the packages listed below are required for Solaris 8 installation.

- Solaris 8 1/01 media
 1. "Solaris 8 Software 1/01 1 of 2 (SPARC Platform Edition)"
 2. "Solaris 8 Software 1/01 2 of 2 (SPARC Platform Edition)"
 3. "Software Supplement For The Solaris 8 Operating Environment 1/01"
- Solaris 8 2/02 media
 1. "Solaris 8 Software 2/02 1 of 2 (SPARC Platform Edition)"
 2. "Solaris 8 Software 2/02 2 of 2 (SPARC Platform Edition)"
 3. "Software Supplement For The Solaris 8 Operating Environment 2/02"

1) Turning on the system

Turning on the test system starts an automatic boot. To stop the automatic boot, hold the [Stop] key down and press the [A] key. An ok prompt is then displayed.

2) Starting from CD-ROM


Insert the CD-ROM "Solaris 8 Software 1 of 2" in the CD-ROM drive. Enter the following command.

```
ok boot cdrom.↓
```

3) Settings according to installation program

Set each settings according to the installation program.

Follow the procedure in [Figure 2-2](#). [] indicates the selection to input as ASX system.

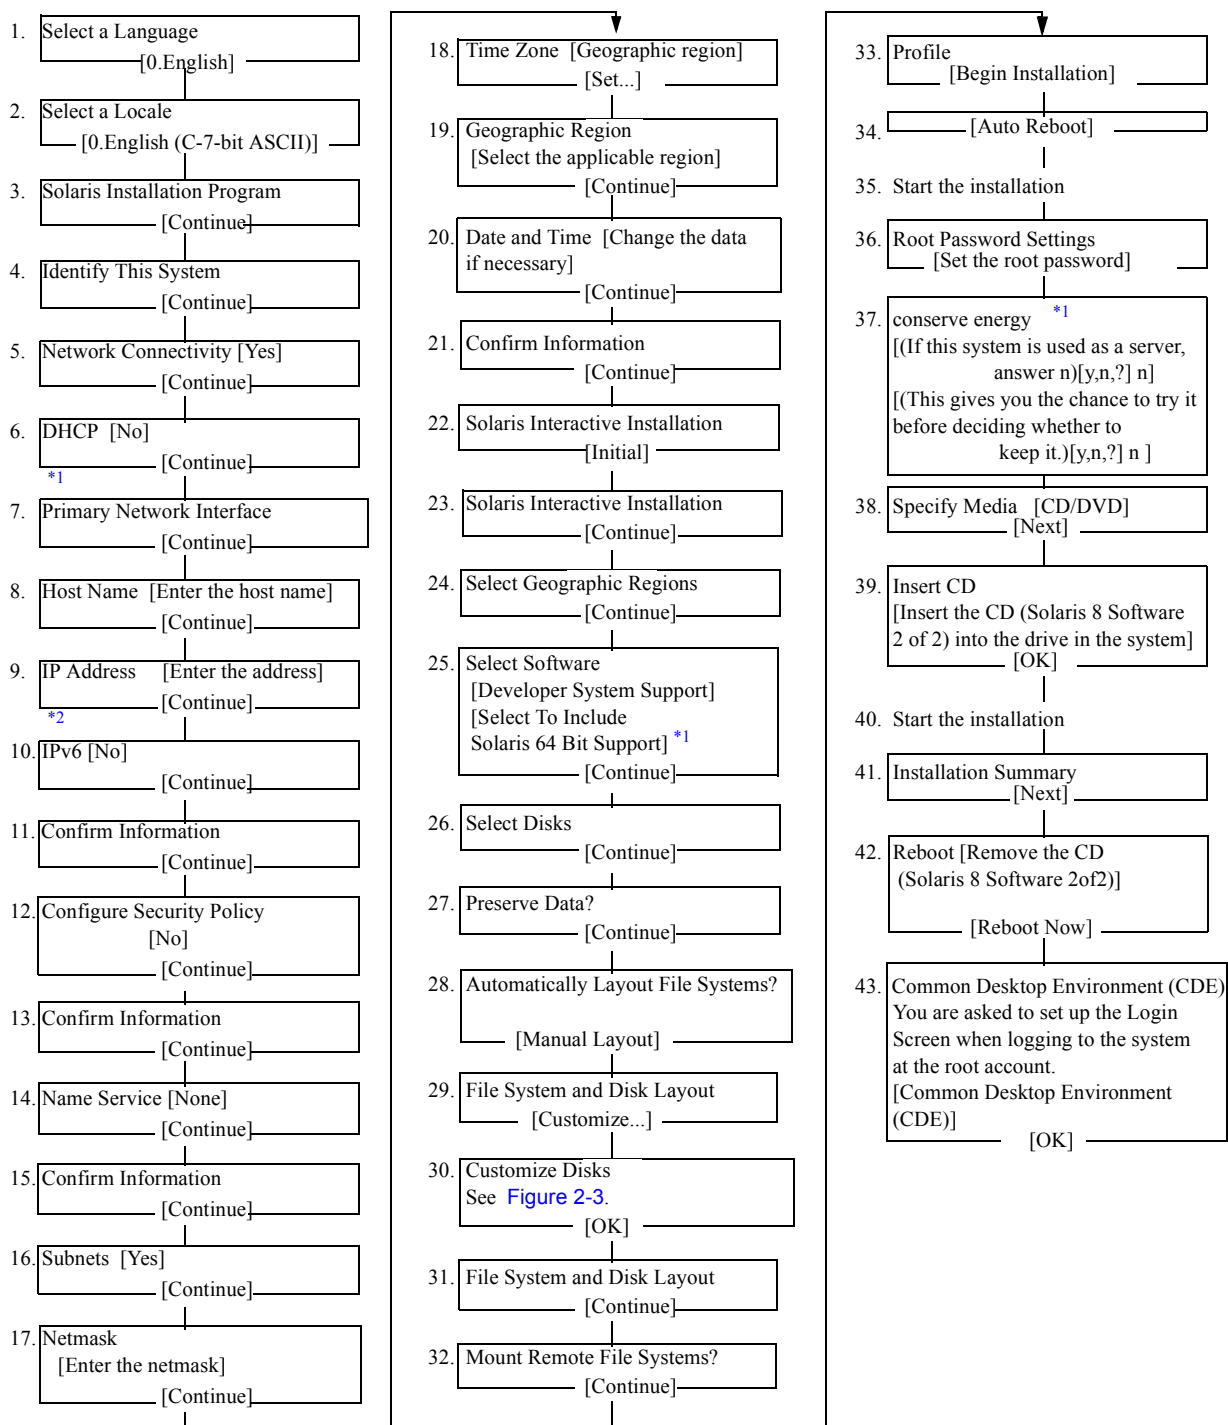Figure 2-2 Installation Flow (for Solaris 8)

*1 Whether or not these messages are displayed depends on the EWS configuration.

*2 The order of the questions varies depending on the operating system. (Questions for Subnets (No. 16) are sometimes asked first.)

Figure 2-3 Disk Customizing (for Solaris 8)

Internal disk disk (c0t0d0) (booting device)			Add-on disk (if installed) disk1 (c0t1d0)		
S	Mount Point	Size (MB)	S	Mount Point	Size (MB)
0	/	1700	0		
1	swap	512	1		
2	No change	No change	2	No change	No change
3			3		
4			4		
5			5		
6			6		
7	/export/home	All remaining disk space	7	/home2	All remaining disk space

 Tip

As shown in the above example, "Rounding Error: 1 MB" may be displayed, there is no problem to continue the installation. Or pop up window [Unused disk space] may be displayed, there is no problem for installation. Click [Continue].

4) Work 1 after the installation (Changing the power saving scheme setting)

Log into the root CDE environment and follow the steps listed below.

- 1) Right-click the mouse in the workspace. (Opens the Workspace Menu.)
- 2) Select **[Tools]**.
- 3) Select **[Power Manager]**.
- 4) Click **[Standard▽]**.
- 5) Select **[Minimal]** (Save power on displays only).
- 6) Click **[OK]**.

5) Work 2 after the installation (Installing the EWS diagnostic program)

Open the emulator window at the terminal, and install the diagnostic program using the procedure shown below.

[For Solaris 8 1/01]

Insert the CD-ROM named "Software Supplement For The Solaris 8 Operating Environment 1/01" into the CD-ROM drive.

```
# pkgadd -d /cdrom/cdrom0/SunVTS_4.2/Product SUNWvts.1
:
:
In order to use this feature, a SEAM-based Security enabled network must be present.

Do you want to enable the kerberos V5 based security?n.1
:
This package contains scripts which will be executed with super-user permission
during the process of installing this package.
:
Do you want to continue with the installation of <SUNWvts> [y,n,?] y.1
:
:
Installation of <SUNWvts> was successful.
# pkgadd -d /cdrom/cdrom0/SunVTS_4.2/Product SUNWeswsa.1
:
:
Installation of <SUNWeswsa> was successful.
# pkgadd -d /cdrom/cdrom0/SunVTS_4.2/Product SUNWvtsx.1
:
:
Installation of <SUNWvtsx> was successful.
```

[For Solaris 8 2/02]

Insert the CD-ROM named "Software Supplement For The Solaris 8 Operating Environment 2/02" into the CD-ROM drive.

```
# pkgadd -d /cdrom/cdrom0/SunVTS_4.6/Product SUNWvts.1
:
:
In order to use this feature, a SEAM-based Security enabled network must be present.

Do you want to enable the kerberos V5 based security?n.1
:
This package contains scripts which will be executed with super-user permission
during the process of installing this package.
:
Do you want to continue with the installation of <SUNWvts> [y,n,?] y.1
:
:
Installation of <SUNWvts> was successful.
# pkgadd -d /cdrom/cdrom0/SunVTS_4.6/Product SUNWvtsx.1
:
:
Installation of <SUNWvtsx> was successful.
```

Select **[Eject]** from the File menu of the CD-ROM file manager to eject the CD.

(Other precautions)

Restart the system using the command shown below after any peripheral devices (including the tester interface) have been added or removed.

```
ok boot -r.1
```

2. 3 Installing Solaris 7

Installation procedure of Solaris as the ASX/U system OS is explained below.

The following two CD-ROMs are used.

- Solaris 7 SPARC Platform Edition for Sun Computer Systems
 1. "Solaris 7 Software 5/99"
 2. "Software Supplement for the Solaris 7 Operating Environment 5/99"

1) Turning on the system

Turning on the test system starts an automatic boot. To stop the automatic boot, hold the [Stop] key down and press the [A] key. An ok prompt is then displayed.

2) Starting from CD-ROM

Insert the CD-ROM "Solaris 7 Software" in the CD-ROM drive. Enter the following command.

```
ok boot cdrom.↓
```

About 5 to 10 minutes later, the installation program screen is displayed.

3) Settings according to installation program


Set each settings according to the installation program.

Follow the procedure in [Figure 2-4](#). [] indicates the selection to input as ASX system.

Tip

The Solaris 64 Bit Support must be installed for ASX/U-51 with REV 5.04 and later installed.

Note that Step 21 (Select Software) in [Figure 2-4](#) has been changed.

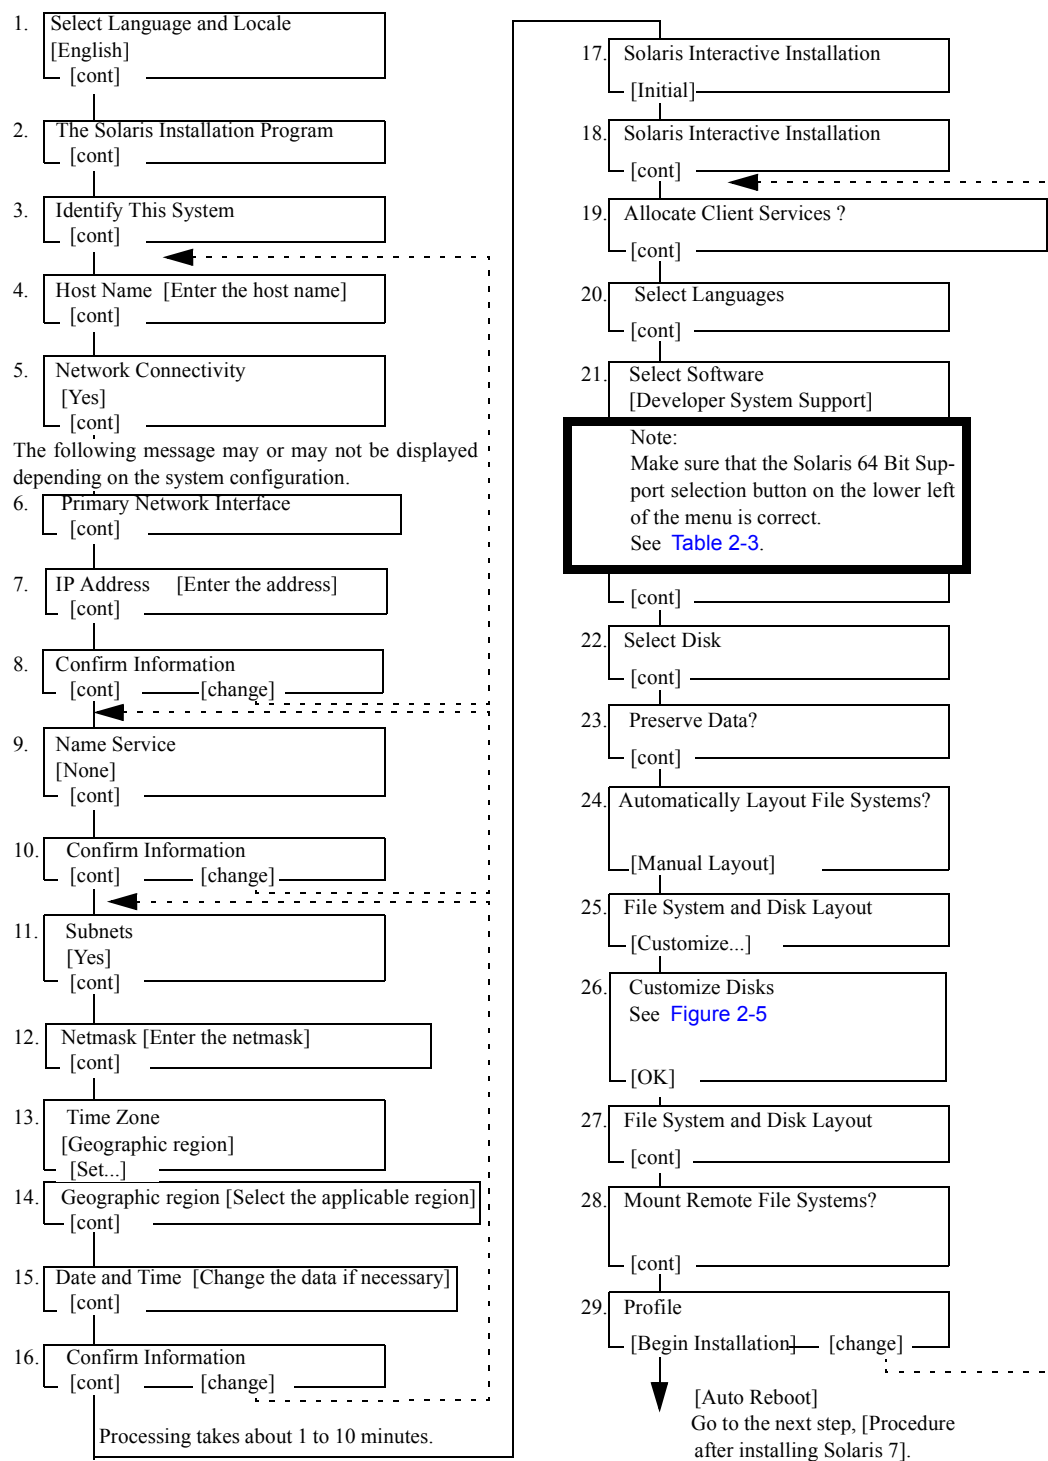Figure 2-4 Installation Flow (for Solaris 7)



Tip

WARNING: "Unused diskspace" may be displayed, there is no problem. Proceed to (4).

Table 2-3 Solaris 64 Bit Support Selection

EWS type	ASX/U type	REV	Select to Solaris 64 bit support
V0713, V0714, H3-6853, or H3-6854 series (Sun Ultra 5)	ASX/U-51	5.04 and later	Selected.
		Before 5.04	Not selected.
	Others	All REV	Not selected.
V0705 or V0706 series (SPARCstation 5)	--		Not selected.

The above table summarizes how to specify the parameters required to install the Solaris 64 bit support at Step 21 Select Software in [Figure 2-4](#).

Figure 2-5 Disk Customizing (for Solaris 7)

- When the EWS has the 2 GB or larger internal disk.

Internal disk V0713, V0714, H3-6853, H3-6854 series (Sun Ultra 5) disk (c0t0d0) (booting device) V0705, V0706 series (SPARCstation 5) disk (c0t3d0) (booting device)			Add-on disk (if installed) disk1 (c0t1d0)		
S	Mount Point	Size (MB)	S	Mount Point	Size (MB)
0	/	1000	0		
1	swap	128	1		
2	No change	No change	2	/home2	No change
3			3		
4			4		
5			5		
6			6		
7	/export/home	All remaining disk space	7		

- When the EWS has a capacity of less than 2 GB.

Internal disk disk (c0t3d0) (booting device)			Add-on disk (if installed) disk1 (c0t1d0)		
S	Mount Point	Size (MB)	S	Mount Point	Size (MB)
0	/	All remaining disk space	0		
1	swap	128	1		
2	No change	No change	2	/home2	No change
3			3		
4			4		
5			5		
6			6		
7			7		

 Tip

As shown in the above example, "Rounding Error: 1 MB" may be displayed, there is no problem to continue the installation. Or pop up window [Unused disk space] may be displayed, there is no problem for installation. Click [Continue].

4) Procedure 1 after installing Solaris 7 (input the root password)

It reboots automatically after completing the installation. The system comes up and it prompts to input the root password. So, input the password to set.

5) Procedure 2 after installing Solaris 7 (setting for the electric power management)


If your system has V0713, V0714, H3-6853 or H3-6854 series (Sun Ultra 5), the following message is displayed when the password of the root directory is entered. The message asks you whether to enable the automatic shutoff function. Enter **n** for both prompts because the ADVAN-site system does not use this function.

```
This system is configured to conserv energy.
....
....
Do you want this automatic power-saving shutdown?
(If this system is used as a server, answer n) [y,n,?] n
...
Do you want the system to ask about this again, when
you reboot ?
(This gives you the chance to try it before deciding whether
to keep it.) [y,n,?] n
```

Solaris 7 installation is now complete. A login dialog box is displayed.

6) Procedure 3 after installing Solaris 7 (select the default desktop)

The following dialog box is displayed, after the user name root and password have been entered.

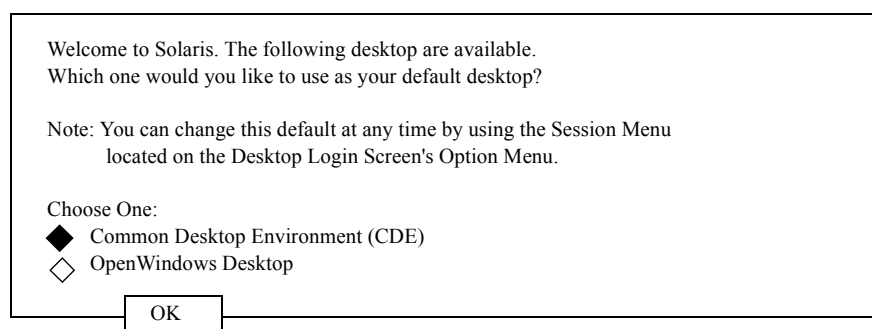


Common Desktop Environment (CDE) can be used as the window environment in addition to the conventional OpenWindows under Solaris 7. The dialog box is displayed at the first-time login to the user.

Click **[OK]** to log in under CDE.

Select **[Eject]** from the File menu of the File Manager sol_7_sparc_sun_dt window to eject the CD-ROM.

Figure 2-6 File Manager (Eject the CD-ROM)

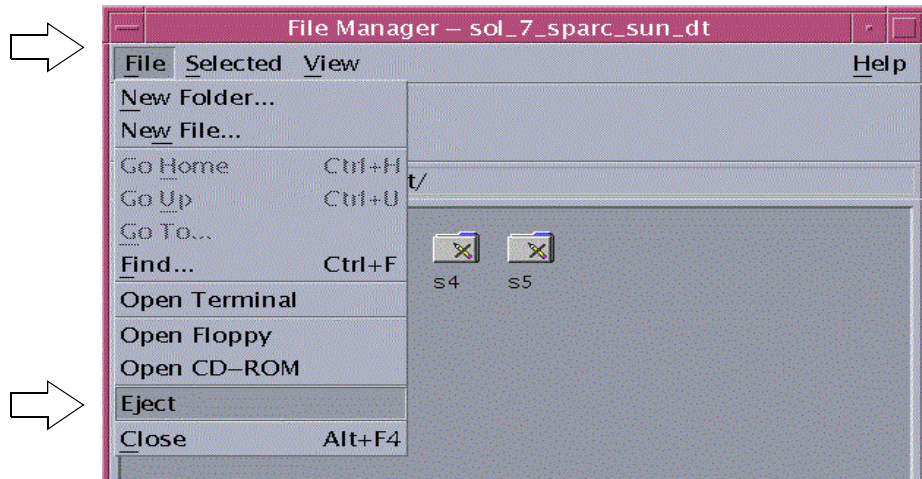


7) Procedure 4 after installing Solaris 7 (Installing the EWS diagnostic program)

Install the EWS diagnostic program using the following procedure.

Insert the CD-ROM "Software Supplement for the Solaris 7 Operating Environment" in the CD-ROM drive.

Click **[This Host]** in the [Host] subpanel to open the emulator window used in the terminal.

Figure 2-7 Start of Terminal Emulator

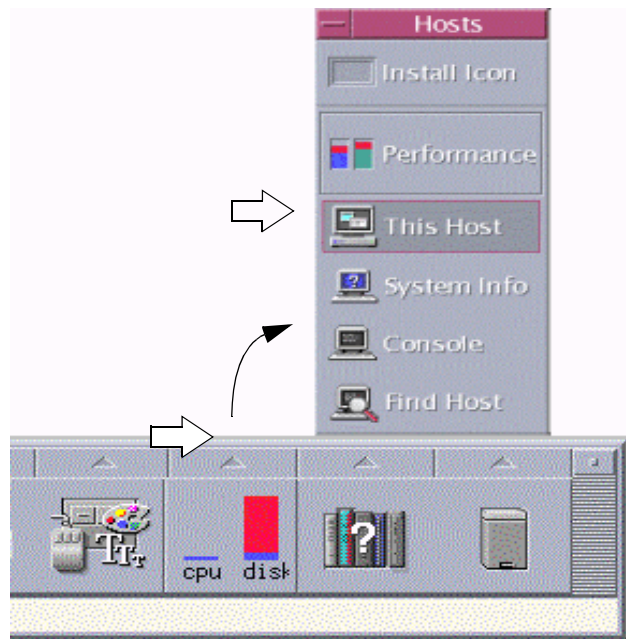

Install the diagnostic program using the following procedure.

```
# pkgadd -d /cdrom/cdrom0/Product SUNWvts.1
:
:
This package contains scripts which will be executed with super-user
permission during the process of installing this package.

Do you want to continue with the installation of <SUNWvts> [y,n,?] y
:
Note: If Solaris 64 Bit Support has been selected, the software shown below is also
installed.
# pkgadd -d /cdrom/cdrom0/Product SUNWvtsx.1
:
:
This package contains scripts which will be executed with super-user
permission during the process of installing this package.

Do you want to continue with the installation of <SUNWvtsx> [y,n,?] y
:
```

Select **[Eject]** from the File menu of the CD-ROM file manager to eject the CD.

8) Procedure 5 after installing Solaris 7 (create directory)

Enter the following command to create directory /export/home.

```
# mkdir -p /export/home
```

(Other precautions)

Restart the system using the command shown below after any peripheral devices (including the tester interface) have been added or removed.

```
ok boot -r
```

3. Setting Solaris (System)

Only the T5593, T5592, T5586, T5585, T5377, T5376, T5375 and T5371 test systems need the following settings because they use the 2nd ethernet.

Test systems other than T5593, T5592, T5586, T5585, T5377, T5376, T5375 and T5371 don't have to make the settings.

This section must be performed as superuser.

3. 1 Editing /etc/hosts

- 1) Open the /etc/hosts file for editing.

```
# vi /etc/hosts
```

- 2) Enter the 2nd Ethernet host name and IP address determined in ["Attention and Preparation before Installation" on page 2-1](#).
- 3) Enter the tester processor host names and IP addresses determined in [2. 1 "Attention and Preparation before Installation" on page 2-1](#).

To implement 2) and 3), refer to the example shown below.

(Example)

```
172.16.1.10  asxvxhost      # hostname for 2nd ethernet
172.16.1.1   asxvxtarget   # tester processor
```

- 4) After entering all, quit the editor.



Do not duplicate a host name and IP address.

3. 2 Setting the 2nd Ethernet Host Name

1) Open the `/etc/hostname.interface` file for editing. If the file does not exist, create one.

- For V0713, V0714, H3-6853 or H3-6854 series (Sun Ultra5)

```
# vi /etc/hostname.hme1
```

- For H3-610019 (Sun Blade 100) or H3-610020 (Sun Blade 150)

```
# vi /etc/hostname.hme0
```

Tip

The file name is `hostname.hme1`. Use `hostname` as it is. Don't replace it into any name of a host.

2) Enter the 2nd Ethernet host name determined in [2. 1 "Attention and Preparation before Installation" on page 2-1](#).

The following is an example.

(Example)

```
asxvxhost
```

3) Save the file and quit the editor.

Tip

The host name must match the 2nd Ethernet host name specified in `/etc/hosts`.

3. 3 Creating /etc/notrouter

1) Enter the following command to create /etc/notrouter.

```
# touch /etc/notrouter.
```


3. 4 Rebooting

When you complete the steps in [3. 3 "Creating /etc/notrouter" on page 3-3](#), reboot the system.

```
# reboot.
```

Appendix 1. How to Prevent the Log in Server from being Started

The Log In Screen is displayed when the system is started from Solaris 7. When you wish to log in without displaying the Log In Screen, you can do it conventionally.

- How not to display the Log In Screen

Enter the following command.

```
# /usr/dt/bin/dtconfig -d
```

- How to display the Log In Screen (How to start the log in server)

Enter the following command.

```
# /usr/dt/bin/dtconfig -e
```

List of Figures

Figure 2-1	2nd Ethernet Connection Diagram	2-2
Figure 2-2	Installation Flow (for Solaris 8)	2-4
Figure 2-3	Disk Customizing (for Solaris 8)	2-5
Figure 2-4	Installation Flow (for Solaris 7)	2-9
Figure 2-5	Disk Customizing (for Solaris 7)	2-11
Figure 2-6	File Manager (Eject the CD-ROM)	2-13
Figure 2-7	Start of Terminal Emulator	2-14

List of Tables

Table 2-1	Hardware Requirements	2-1
Table 2-2	Host Name and IP Address Used in a 2nd Ethernet	2-2
Table 2-3	Solaris 64 Bit Support Selection	2-10