

# **ADVANTEST®**

---

## **ADVANTEST CORPORATION**

---

### *ADVANsite* *System Introduction*

**MANUAL NUMBER 8227727-06**

---

*Applicable Software*  
*Solaris 2.x or later*

## Trademarks and Registered Trademarks

- ADVANTEST and ADVANsite are trademarks of Advantest Corporation.
- Sun, Sun Microsystems, the Sun logo, SunOS and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- UNIX is a registered trademark in the United States and other countries, licensed exclusively through The Open Group.
- All other marks referenced herein are trademarks or registered trademarks of their respective owners.

## ***Revision History***

| Rev. | Date      | Notes |
|------|-----------|-------|
| 01   | Jun 20/94 |       |
| 02   | Sep 22/95 |       |
| 03   | Dec 25/98 |       |
| 04   | Mar 31/99 |       |
| 05   | Sep 30/02 |       |
| 06   | May 15/03 |       |

# Table of Contents

|                                                                    |           |
|--------------------------------------------------------------------|-----------|
| <b>Preface</b> .....                                               | Preface-1 |
| Purpose of This Manual .....                                       | Preface-1 |
| Prerequisites and Target Readers .....                             | Preface-1 |
| Related Manuals .....                                              | Preface-1 |
| <br><b>1. Outline</b> .....                                        | <br>1-1   |
| 1. 1 ADVANsite CPU and ASX/U Operating System .....                | 1-1       |
| 1. 2 ADVANsite CPU Hardware Architecture .....                     | 1-2       |
| 1. 3 ASX/U Software Architecture .....                             | 1-3       |
| 1. 4 ASX/U Applications .....                                      | 1-4       |
| <br><b>2. Fundamentals on ASX/U Operating System</b> .....         | <br>2-1   |
| 2. 1 File System .....                                             | 2-1       |
| 2. 1. 1 Format of File Names (Directory Names) Specification ..... | 2-1       |
| 2. 1. 2 Relationship between UNIX and MOST Files .....             | 2-2       |
| 2. 1. 3 Using the Shell Wildcard .....                             | 2-2       |
| 2. 2 Directory .....                                               | 2-4       |
| 2. 2. 1 Structure of Directory .....                               | 2-4       |
| 2. 2. 2 Specifying Directories .....                               | 2-5       |
| 2. 2. 3 Definition for Directories Environment Variable .....      | 2-6       |
| 2. 3 Customer Name Handling .....                                  | 2-7       |
| 2. 3. 1 Customer Name Initial Value .....                          | 2-7       |
| 2. 3. 2 Definition of Customer Name .....                          | 2-7       |
| 2. 3. 3 Definition of Customer Using Shell Script .....            | 2-9       |
| 2. 4 Shell Script .....                                            | 2-10      |
| 2. 4. 1 Creation and Execution of Shell Script .....               | 2-10      |
| 2. 4. 2 ".login" and ".cshrc" Environment Files .....              | 2-10      |
| 2. 5 File Operation by ASX/U .....                                 | 2-11      |
| 2. 5. 1 Comparison between ASX/U and MOST Commands .....           | 2-11      |
| 2. 5. 2 Editing Test Programs .....                                | 2-12      |
| 2. 5. 3 Compiling Test Programs .....                              | 2-12      |

|                                                  |            |
|--------------------------------------------------|------------|
| <b>3. Differences from MOST Controller .....</b> | <b>3-1</b> |
| 3. 1 Restrictions Due to Directory File .....    | 3-1        |
| 3. 2 Restrictions on File Name SERV .....        | 3-2        |
| 3. 3 Other Restrictions .....                    | 3-3        |

|                                                                              |             |
|------------------------------------------------------------------------------|-------------|
| <b>Appendix 1.ADVANsite Upgrading Peripheral I/O<br/>Compatibility .....</b> | <b>A1-1</b> |
| A1. 1 ADVANsite Upgrading .....                                              | A1-1        |
| A1. 2 Peripheral Devices Configuration .....                                 | A1-1        |
| A1. 3 Peripheral I/O Compatibility .....                                     | A1-1        |

|                              |            |
|------------------------------|------------|
| <b>List of Figures .....</b> | <b>F-1</b> |
|------------------------------|------------|

|                             |            |
|-----------------------------|------------|
| <b>List of Tables .....</b> | <b>T-1</b> |
|-----------------------------|------------|

# ***Preface***

## **Purpose of This Manual**

This manual describes the fundamentals of an ADVANsite system.

## **Prerequisites and Target Readers**

This manual aims at users who have started to operate the ADVANsite system.

## **Related Manuals**

*ADVANsite Test System Software Installation/System Start User's Manual VOL1 Basic OS Installation*(No. : 8227728)

*ADVANsite Test System Software Installation/System Start User's Manual VOL2 Tester Environment Software Installation*(No. : 8227729)

*ADVANsite Test System [UNIX Version] MOST Series Users Program Resources Migration User's Guide*(No. : 8141099)

*ADVANsite Test System ADI Interface Board Standalone Diagnostics Reference Manual*(No. : 8116769)

*ACLI Commands Reference Manual [UNIX Version]*(No. : 8141097)

*W234X Series EWS Product Descriptions*

# 1. Outline

This manual explains ADVANsite basis intended aimed at users who have started to operate ADVANsite.

Especially, the form by which MOST environments are compared everywhere is explained to have the conventional single processor users (MOST environment users) introduce it easily.

It is desirable for users used to the UNIX environment to be able to read this manual that explains the directory structure and specific environmental variables of ADVANsite.

## 1. 1 ADVANsite CPU and ASX/U Operating System

### ADVANsite CPU


The ADVANsite is a dual-processor architecture which has ASX/U (ADVANsite System Executor/UNIX Version) as the fundamental operating system of the tester. An ADVANsite tester provides the user with the resources of an industry standard operating system.

### Features on ASX/U operating system

- Industry standard operating system  
ASX/U is a superset of UNIX
- Ethernet or TCP/IP networking  
Allows for distributed file structures and remote test system operation
- Electronic mail between users
- Hierarchical file system
- User security and file system protection

## 1. 2 ADVANsite CPU Hardware Architecture

Figure 1-1 ADVANsite CPU Architecture

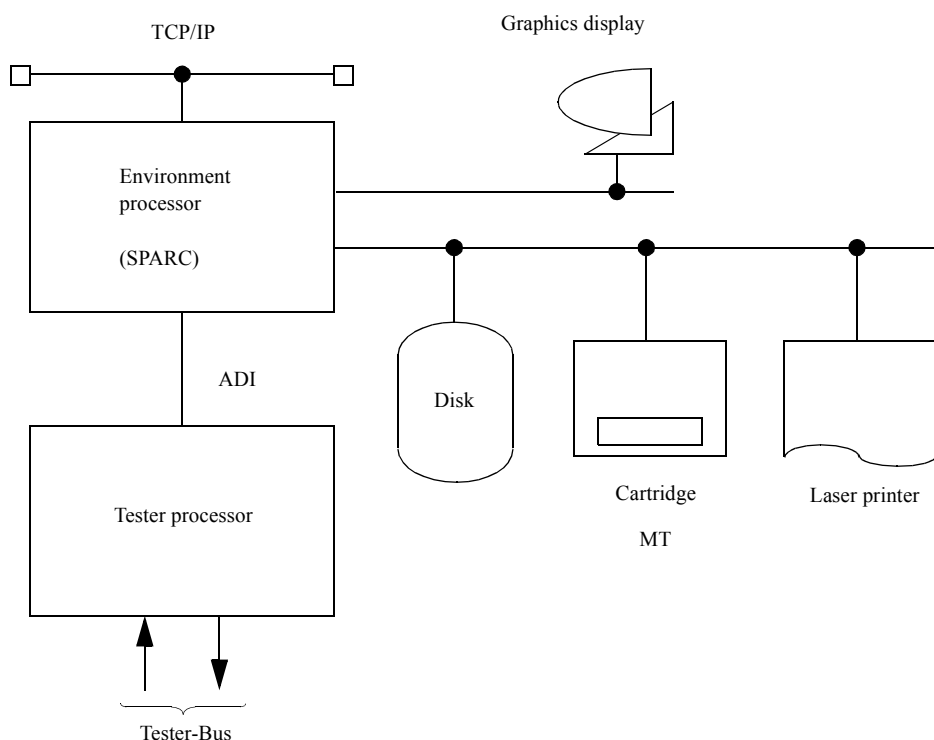

### Environment processor

SPARC series are employed as an environment processor.

The environment processor is responsible for process which are not related to tester hardware.

#### Example

Text editing, file management, file handling (copy, move, delete), networking, user interface, printer output, data backup, etc.

### ADI (ADVANsite Dedicated Interface)

A high speed DMA type interface that provides for the execution of device program and all kinds of application programs within the tester processor.

### Tester processor


The TP is dedicated to test system operation, namely execution of ATL generated code such as test programs, utilities and diagnostics.



## 1. 3 ASX/U Software Architecture

Figure 1-2 shows the execution environment of ASX/U.

**Figure 1-2 ASX/U Test Environment**

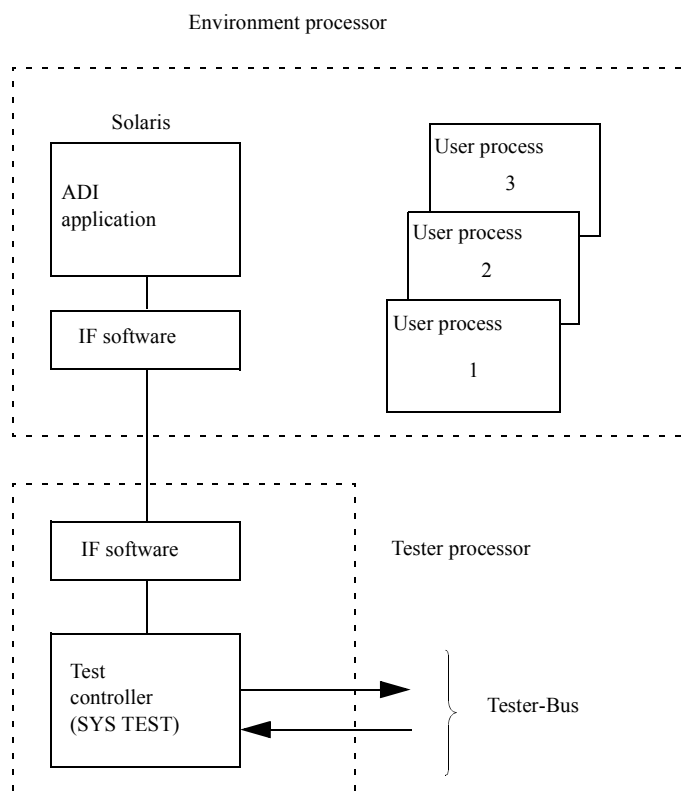

### User process

A user can treat a file such as edit its text and compile the file.

### IF software

The connection between environment processor and tester processor are controlled.

### Test controller

The application which executes when the user enters the C shell test command. (not a /bin/test)  
(This application is identical in operation to the SYS TEST that runs under and is a part of MOST.)

### Solaris

The Solaris environment which provides the command interpreter C shell, the hierarchical directory structure, networking, batch processing, etc.

## 1. 4 ASX/U Applications

Viewing from the execution environment, ASX/U application software may be classified into the following two major groups.

- Software that completes a process within the environment processor.  
(UNIX applications)
- Software that accesses to the tester processor through ADI interface and runs on the both processors (ADI application).

Only one process of ADI application can be executed at a time, while several processes of UNIX application can.

[Table 1-1](#) shows the main application software programs of ASX/U.

**Table 1-1 Major Application Software of ASX/U**

| Application names | Commands | Function                                                                                                    |
|-------------------|----------|-------------------------------------------------------------------------------------------------------------|
| Cross compiler    | trans    | Compile the device program on the environment processor.                                                    |
| Tester simulator  | tesim    | Simulate the environment of the test controller on the environment processor, and debug the device program. |
| Tester controller | test     | Execute the device program. The operation is the same as the conventional system (single processor.)        |
| Self compiler     | xtrans   | Compile the device program on the tester processor.                                                         |



Tip

*Some application software is not supported by the system.*

## 2. *Fundamentals on ASX/U Operating System*

This chapter explains the basic information about the ASX/U operating system for users who are familiar with the conventional MOST systems.

### 2. 1 File System

#### 2. 1. 1 Format of File Names (Directory Names) Specification

ASX/U uses the same format conventions of file names (or directory names) as for UNIX. The following shows the full path name of the file format.

- Absolute name  
Full path name from the root directory  
/directory/directory/.../filename
- Relative name  
Path name from the current directory  
directory/directory/.../filename

Up to 255 characters of directory and file names can be specified.

##### Notes on file names

A file name can be specified by using alphanumeric characters and special characters.

However, the following special characters have special meanings for the command interpreter "csh" (c shell) and they cannot be used for the file name:

; | > < & \* [ ] ? " ' /

Also, the following characters have special meanings for "csh":

\$ ( )

To use these characters, enter a backslash (\) to cancel the special meaning and enter the desired character.

A file name beginning with a period (.) represents the environment file (for initial setup). The ordinary file name should not begin with a dot.

##### Uppercase and lowercase letters

Uppercase and lowercase letters are distinguished in UNIX. Exercise caution when naming a file.

Example : pro100.asc and PRO100.ASC. are different files.

## 2. 1. 2 Relationship between UNIX and MOST Files

The following provides the relationship between the UNIX and MOST files.

| ASX/U   | MOST    |
|---------|---------|
| XXX.asc | ASC XXX |
| XXX.pro | PRO XXX |
| XXX.lpa | LPA XXX |
| XXX.mpa | MPA XXX |
| XXX.soc | SOC XXX |
| XXX.scr | SCR XXX |
| XXX.def | DEF XXX |
| XXX.dat | DAT XXX |
| XXX.sub | SUB XXX |
| XXX.lib | LIB XXX |
| XXX.utl | UTL XXX |
| XXX.sys | SYS XXX |
| XXX.gen | GEN XXX |



Tip

*No file specifier is used in UNIX. Any number of dots (.) can be used in a file name.  
Example : pro100.asc.old*

## 2. 1. 3 Using the Shell Wildcard

Table 2-1 shows in how to use the wildcard that simplifies file name specification.

**Table 2-1 Wildcard**

| Wildcard | Function                                                                                                                                                                                                                                       |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| *        | Represents any character string. (Example 1)<br>An single asterisk * represents any of files except the environment files (such as ".login"). (Example 2)<br>If a directory matches, the contents of that directory are displayed. (Example 3) |
| ?        | Represents any character. (Example 4)                                                                                                                                                                                                          |
| [xxx]    | The specified characters or the characters of the specified range are compared. (Example 5)                                                                                                                                                    |

### ◆ Example of Use

When the current directory has the following files:

("child" is the directory and it has files "ch1.pro" and "ch2.pro".)

".login", ".cshrc", "f1.asc", "f2.asc", "f3.asc", "f14.dat", "f15.dat", "f16.dat", "fa", "fb", "fc",  
"child"

## Example 1

```
% ls f1*  
f1.asc  f14.dat  f15.dat  f16.dat
```

## Example 2

```
% ls *  
child    f15.dat  f3.asc   fc  
f1.asc   f16.dat  fa  
f14.dat  f2.asc   fb
```

## Example 3

```
% ls ch*  
ch1.pro  ch2.pro
```

## Example 4

```
% ls f?.asc  
f1.asc  f2.asc  f3.asc
```

## Example 5


```
% ls f[a-c]  
fa      fb      fc
```

## 2. 2 Directory

### 2. 2. 1 Structure of Directory

ASX/U is formed according to the UNIX directory structure. As shown in [Figure 2-1](#), it can be layered where the root directory / is on the top.

**Figure 2-1 Structure of ASX/U Directory (Example of 3382)**

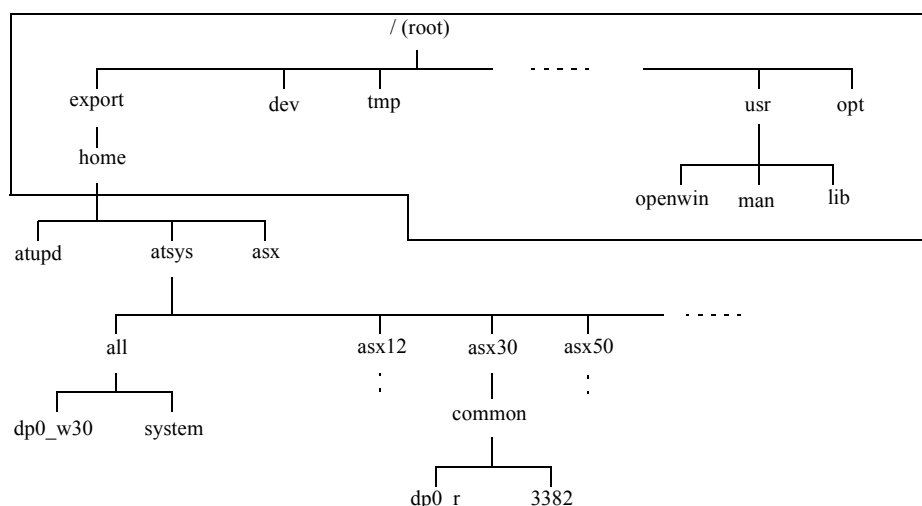

The directories within a framework shows the directories of UNIX.

As shown in [Figure 2-1](#), the file used in the ADVANsite is classified in the following group under the directory `"/export/home"`:

#### `/export/home/atupd`

A work directory for installation. When install action is completed, this will be automatically deleted.

#### `/export/home/atsys`

All ASX/U environments are created in this directory. The following directories are supplements of "atsys":

##### `all/dp0_w30`

A directory to read or write "dp0". This is used in the normal write operation.

##### `all/system`

Stores the ASX/U application program executed on the environment processor.

##### `asx30/common/dp0_r`

A directory where the system directory file is stored.

asx30/common/3382

A directory where the diagnosis program is stored. This is used only for reading the data.

/export/home/asx

A user account which activates the tester processor.

## 2. 2. 2 Specifying Directories

When specifying directory or file, the full path name to the desired directory can be specified (absolute specification). A slash (/) must be used as the delimiter of each hierarchy.

Example : Move to directory "/export/home/tomato/work".

```
% cd /export/home/tomato/work.↓
```

The path name from the current directory to the desired one can also be specified (relative specification).

Example : Move from the current directory to a subdirectory, text.

```
% cd text.↓
```

The special characters listed in [Table 2-2](#) can also be used for relative specification from the current directory.

**Table 2-2 Relative Directory Specification**

| Environment variable | Function                                                                                      |
|----------------------|-----------------------------------------------------------------------------------------------|
| .. (two dots)        | Represents the directory locating at the hierarchical level just above the current directory. |
| . (single dot)       | Represents the current directory.                                                             |
| ~ (tilde)            | Represents the home directory.                                                                |

The following gives an application example of special characters.

Example : Log in with account "team". The home directory will be "/export/home/world/team".

```
% cd ../↓ *1
% cp /export/home/tomato/a.c ../↓ *2
% cd ~↓ *3
```

\*1 Moves to directory "/export/home/world" whose hierarchical level is one level above the current "/export/home/world/team" directory.

\*2 Copies file "/export/home/tomato/a.c" in the current directory.

\*3 Moves to the home directory of "/export/home/world/team".

## 2. 2. 3 Definition for Directories Environment Variable

In ASX/U, various devices and directory paths are defined with environment variable.

Table 2-3 shows the execution environment of Figure 2-1. This example applies to ASX/U-30. For ASX/U-50, 50 replaces 30 in Figure 2-1 or Table 2-3. These environment variable are defined in certain command procedures when the user logs in.

**Table 2-3 Environment Variable of Main Directories**

| Environment variable | Function                                                                                                           |
|----------------------|--------------------------------------------------------------------------------------------------------------------|
| AT_ASPECIFIC         | /export/home/atsys *1                                                                                              |
| AT_ACOMMON           | /export/home/atsys                                                                                                 |
| AT_ASYSTEM           | /export/home/atsys/all/system                                                                                      |
| DP0                  | /export/home/atsys/all/dp0_w30<br>/export/home/atsys/asx30/common/dp0_r *2<br>/export/home/atsys/asx30/common/3382 |
| ADI_ADP1             | . *3                                                                                                               |

\*1 This directory path is default. If the user specifies a path, the system follows it. (It can be specified at installation.)

\*2 The environment variable is multiply defined.

\*3 . indicates the current directory. Two or more environmental variables can be defined.

➔ For the further details, refer to "Definition of customer name in multiple" on page 2-7.

Use the following command when referring to environment variable other than those shown in Table 2-3.

```
% env.
```



## 2. 3 Customer Name Handling

### 2. 3. 1 Customer Name Initial Value

The current customer name in the test controller is the same as the UNIX current working directory name. (When the current working directory "." is defined in the environment variable ADI\_ADP1.) "ADI\$DP1" is displayed as an initial customer name when the key commands "U" and "7" are used. These commands can change the current customer name to the arbitrary customer name.

### 2. 3. 2 Definition of Customer Name

The customer name can be defined as environment variable using the "setenv" command. Note that the symbols, "\$" or ".", which are used in the customer name, are not available in the UNIX environment variable. The following conversion should be necessary:

| Customer name | Environment variable |
|---------------|----------------------|
| \$            | _A <sup>*1</sup>     |
| .             | _B <sup>*1</sup>     |

<sup>\*1</sup> "\_A" is composed of underscore and A. "\_B" is composed of underscore and B.

Example : Set the customer name AT\$WORK

```
% setenv AT_AWORK /export/home/asxu/work
```

By this customer name designation, the program, which calls the customer name AT\$WORK used in the ATL program or test controller, will be used in the directory "/export/home/asxu/work".

#### Definition of customer name in multiple

The user can define the customer name in multiple in the following manner.

Format

```
% setenv customer name path_list1:path_list2:....:path_listN
```

The following parameters can be used in "path list":

- Absolute path name (path name from the root)
- Environment variable name  
The definition operation continues until the environment variable becomes the absolute variable.
- Current directory "."

In a file searching (OPEN!R etc.), file is searched inside the specified paths in the order.

In a file deletion (DELET!) or the file creation (OPEN!W), however, it is normally aimed at the first path.

Therefore, a file to be updated must be created in the first path.

When some members use the same data or program, it is useful that making common files into libraries by using this function.

In this case, the first path should be one mans own work path and the path after that should be common library file and data file for reading only.

If a program or socket program under debugging or data file to be written is in the second directory or later, it takes long time to search the failed file when an error occurs.

For example, if the person A and the person B program as follows, the system file (cont\_bf.sys etc.) is confused.

Bad example:

|          | Log in path | ADI_ADP1     |
|----------|-------------|--------------|
| Person A | /home/asx/a | .            |
| Person B | /home/asx/b | ./home/asx/a |

If the system is used under the setting as this example, a problem may be caused at the time B uses the work file created by A or the data file under debugging.

Do not specify the path specified in the first of the environmental variables for the second path or later of another person.

Make the path read-only library and use it as follows.

Good example:

|          | Log in path | ADI_ADP1                             |
|----------|-------------|--------------------------------------|
| Person A | /home/asx/a | ./home/asx/lib:/home/lib2            |
| Person B | /home/asx/b | ./home/asx/lib:/home/lib2:/home/lib3 |

This setting results that B cannot use the work file created by A.

The test controller creates the "cont\_bf.sys" file in the path that specified first of ADI\_ADP1.

If you activate the test controller in the common library carelessly, this file is created.

To prevent this mistake, take off "w" (write) permission from the second or after paths and files in those paths. It prevents that a work file and so on are mixed in the library path by mistake.

```
% chmod -R a-w /home/asx/lib
```

### Example of use

For example, the customer name "CUSTAB" can be defined and used as follows:

```
% setenv CUSTAB /export/home/asxu/a:/export/home/asxu/b
```

If the above customer name is used, the following commands search the directory "/export/home/asxu/b" to find the FILE1 if it is not found in "/export/home/asxu/a". When the FILE1 is found, the operation ends normally.

```
OPEN! CH R CUSTAB:FILE1  
SEARCH! CUSTAB:FILE1
```

Also, the next command processes the directly "/export/home/asxu/a" defined first. The file to be created (or deleted) is the FILE1 of "/export/home/asxu/a".

```
OPEN! CH W CUSTAB:FILE1
```

### 2. 3. 3 Definition of Customer Using Shell Script

When the definition statements shown in ["Example of use" on page 2-8](#) is included in the shell script, the customer name can be defined by executing the shell script with the "source" command.

Example : Execution of the shell script file setting with "source" command

```
% source setting
```

If this command is described in the UNIX environment file ".cshrc", the customer name will be automatically defined at the user login.

## 2. 4 Shell Script

### 2. 4. 1 Creation and Execution of Shell Script

A group of shell commands can be created as a file and they can be executed simultaneously. Such file is called the shell script. It is equivalent to the command file of the MOST system.

The following shell script creation rules apply.

- Specify the shell to be used on the first line. Usually use the C shell.

```
#!/bin/csh -f
```

- The line to be continued must end with a backslash (\).
- The comment must begin with the symbol "#".

When executing the shell script, the file execution authority must be assigned.

It is executed when the file name is entered as a command.

```
% chmod u+x file-name.
% file-name.
```



Tip

*To get the information about the shell script, use the "man csh" command.*

### 2. 4. 2 ".login" and ".cshrc" Environment Files

Many utilities usually read the environment files (dot files) during initialization. These files must be placed in the home directory.

#### .cshrc

Specifies the history of commands and environment variables used by each user, command search path, and command alias. These environment information is passes when the subprocess is started.

#### .login

A file to be executed only once at login. Specifies VKT and fonts.

## 2. 5 File Operation by ASX/U

### 2. 5. 1 Comparison between ASX/U and MOST Commands

Table 2-4 provides the comparison between the ASX/U and MOST commands.

**Table 2-4 ASX/U and MOST Commands**

| ASX/U                     | MOST                          |
|---------------------------|-------------------------------|
| chmod                     | CHATR                         |
| alias                     | COMMAND                       |
| rm                        | DELETE                        |
| diff                      | DIF                           |
| df                        | DISK                          |
| tar (from/to SUN MT)      | GLOAD,GDUMP (from/to TP-1 MT) |
| pwd                       | GDIR,GCUS                     |
| date                      | GDAY                          |
| ---                       | INIT                          |
| mt(to MT),newfs(to DISK)  | INIT/F                        |
| ps                        | JOBDISP                       |
| vi                        | KED                           |
| ln                        | LINK                          |
| ls                        | LIST                          |
| echo                      | MESSAGE                       |
| cp                        | MOVE,XFER                     |
| lp                        | PRINT                         |
| logout                    | RELEASE                       |
| mv                        | RENAME                        |
| ---                       | RUN                           |
| date                      | SDAY,STOD                     |
| Execution of shell script | SUBMIT                        |
| test                      | TEST                          |
| trans                     | TRANS                         |
| cat,more                  | TYPE                          |

### ! Important

The UNIX "newfs" command has the same function as the "INIT/F" command of MOST and erases all the contents of the disk.

For more information about the shell commands, refer to the "SunOS 5.x Reference Manual Section1".

## 2. 5. 2 Editing Test Programs

ASX/U provides the "vi" text editor. The "vi" editor is the extended "ex" line editor and it has the following features:

### Command mode

The cursor can be shifted. Any word can be deleted or moved. No character can be added to the existing text.

### Insertion mode

A character or characters can be inserted into the existing text. When the ESC key is pressed, the current insertion mode is switched to the command mode.

### "ex" mode

When a colon (:) key is typed, the "ex" mode is selected. A word can be searched, and a file can be written or read.

To start the "vi", enter the following command:

```
% vi filename.␣
```

When the "vi" starts, the command mode is selected.

## 2. 5. 3 Compiling Test Programs

Use the following command to compile test programs:

```
% trans filename.asc.␣
```

The "asc" file extension can be omitted. If the file extension is omitted, "asc" is assumed. After compiling, an object file is created in the current directory.

## 3. *Differences from MOST Controller*

Differences from MOST controller that conventional single processor are described in this chapter.

### 3. 1 Restrictions Due to Directory File

1. In the ASX/U environment, some MOST utilities need time for processing or do not function because of absence of MOST format directory file "DIR SYS.DR". When the utilities concerned are initiated in the MOST system, "DIR SYS.DR" including file information in a customer is opened and files are retrieved.
2. Utilities shown in [Table 3-1](#) need time for processing or do not function in the ASX/U system since these utilities refer to the directory file.

**Table 3-1 Restrictions Due to Directory File**

| Utilities                       | Operation                                                |                           |
|---------------------------------|----------------------------------------------------------|---------------------------|
|                                 | MOST                                                     | ASX/U                     |
| /VLIST                          | Displays variable information.                           | No operation              |
| /NLIST                          | Displays correspondence object, source and socket files. | Needs time for processing |
| /LIST                           | Displays disk information in a directory.                | Needs time for processing |
| /ADISK                          | Displays disk information in a directory.                | No operation              |
| /DELETE                         | Deletes files.                                           | Needs time for processing |
| /MOVE                           | Transfer files.                                          | No operation              |
| /MSG<br>/MSMP<br>/MPMS<br>/MGMS | Converts directory files between MOST and MOSPL.         | No operation              |

## 3. 2 Restrictions on File Name SERV

1. Tester driver in the ASX/U does not have a function of ADVANstar. Therefore, SERV (ADVANstar) cannot be specified by ATL statements or tester utilities which include device name (file name) specification.
2. [Table 3-2](#) and [Table 3-3](#) list ATL statements and tester utilities concerned.

**Table 3-2 Restrictions on ATL Statements in File Name Specification**

| ATL Statements | Operation                                                   |                |
|----------------|-------------------------------------------------------------|----------------|
|                | MOST                                                        | ASX/U          |
| OPEN!          | Opens channels to use files.                                | Run-time error |
| APPEND!        | Re-opens a file once closed as a WRITE file.                | Run-time error |
| INIT           | Initializes a device to enable I/O access.                  | Run-time error |
| RELEASE        | Releases a device from the system.                          | Run-time error |
| SEARCH         | Checks a file for existence on a device.                    | Run-time error |
| CALL           | Calls and external subroutine.                              | Run-time error |
| EXEC           | Executes UTL files.                                         | Run-time error |
| MEAS LPAT      | Transfers patterns and executes a functional test.          | Run-time error |
| SEND LPAT      | Transfers patterns to PG and/or SBM                         | Run-time error |
| SET LPAT       | Specifies a pattern program for the PG data to be read out. | Run-time error |
| FREAD          | Calls files from disk or floppy to memory.                  | Run-time error |

**Table 3-3 Restrictions on Utilities in File Name Specification**

| Utilities                       | Operation                                                        |                |
|---------------------------------|------------------------------------------------------------------|----------------|
|                                 | MOST                                                             | ASX/U          |
| .V                              | Initializes and releases a device.                               | Error          |
| S                               | Specifies a destination device of WRITE statement.               | Run-time error |
| I                               | Specifies an input device of INPUT statement.                    | Run-time error |
| /RELEASE                        | Releases a device from the system.                               | Error          |
| Data log                        | Outputs logged data according to the specification of S command. | Cannot output  |
| /MGMS<br>/MSG<br>/MPMS<br>/MSMP | Converts directory files between MOST and MOSPL.                 | Error          |



### 3. 3 Other Restrictions

- ATL statements and utilities shown in [Table 3-4](#) and [Table 3-5](#) cannot be used in the ASX/U system.

**Table 3-4 ATL Statements not to be Used**

| ATL statements | Operation                                     |                          |
|----------------|-----------------------------------------------|--------------------------|
|                | MOST                                          | ASX/U                    |
| ECLEAR!        | Resets a contents of a use counter.           | Ends with doing nothing. |
| READ SATN      | Reads a satellite number set in a ADVAN-star. | Always read 0.           |

**Table 3-5 Utilities not to be Used**

| Utilities | Operation                                         |       |
|-----------|---------------------------------------------------|-------|
|           | MOST                                              | ASX/U |
| .A        | Sends tester management information to TESTARIUM. | Error |

- Program execution after modifying/compiling source file  
If a program which is just previously run is executed after modifying/compiling its source file, use U command to clear object file in a tester processor memory.
- Printer  
In ASX system, multiple jobs own a printer jointly. The output from the printer is transferred to the disk once. (This is called spooling.)  
Therefore, the printer output is not made instantly.  
Data is output when the following condition is satisfied.
  - At the end of the TEST execution
  - Program end
  - When enter [Ctrl]+[C]
  - When selected other device than printer by S command

# Appendix 1. ADVANsite Upgrading Peripheral I/O Compatibility

This chapter summarizes a compatibility of peripheral I/Os for the upgraded systems.

## A1. 1 ADVANsite Upgrading

MOST series test system may be upgraded to the ADVANsite test system. (However, applicable systems are restricted.) Peripheral devices and communication interfaces are restricted upon usage (compatibility), which have been attached to the tester processor (TP1/TP3/TP4) in the old systems.

## A1. 2 Peripheral Devices Configuration

In the ADVANsite upgraded systems, the conventional tester processor (TP1/TP3/TP4) is exclusively used for device testing as a controller of tester section. Processes other than testing (file creation, edition, compilation and management), user interfacing, peripheral devices control, computer communications, etc. are all accomplished by the environment processor.

➔ For the configuration and specifications of the peripheral devices connected to the environment processor, refer to [W234X Series EWS Product Descriptions](#).

### Tip

*The configuration and specifications of the peripheral devices vary depending on the EWS family used in the system.*

## A1. 3 Peripheral I/O Compatibility

[Table A 1-1](#) summarizes TP1/TP3/TP4 peripheral devices and communication facilities in the conventional test system, and their compatibility. Function description will appear later.

In the ADVANsite upgraded system, as listed in [Table A 1-1](#), magnetic tape drive, floppy disk unit, and GPIB may be connected to the tester processor. Of these, magnetic tape drive and floppy disk unit are supported by utility programs operated under ASX/U operating system. On the other hand, GPIB is used in the tester driver environment in the same way as that of the old test system.

**Table A 1-1 Compatibility of TP1/TP3/TP4 Peripheral I/Os**

| Peripheral I/O | Compatibility                                                         |
|----------------|-----------------------------------------------------------------------|
| VKT            | Can be connected to environment processor by using a dedicated cable. |

| Peripheral I/O      | Compatibility                                                       |
|---------------------|---------------------------------------------------------------------|
| Hard disk           | Cannot be used.                                                     |
| Floppy disk         | Listing, reading and writing files is possible. (FCPY/MOVE command) |
| Line printer        | Cannot be used.                                                     |
| Magnetic tape drive | Possible to load and dump GDUMP format. (GLOAD/GDUMP command)       |
| GPIB                | Can be used. (in the controller)                                    |
| ADVANstar           | Cannot be used.                                                     |
| TESTARIUM           | Cannot be used.                                                     |
| HSSI                | Cannot be used.                                                     |

### VKT

VKT connected to TP1/TP3/TP4 may be connected to the environment processor by an exclusive use cable.

### Hard disk

- As the ADVANsite test system uses a hard disk belonging to the environment processor, hard disk unit cannot be connected to the tester processor. Note that the hard disk unit conventionally used in the tester processor cannot be used in the ADVANsite test system because of difference of specifications.
- Disk files in the TP1/TP3/TP4 are transferred to the hard disk in the environment processor by means of floppy disks or magnetic tapes. Files must have been dumped to magnetic tape in GDUMP format of MOST to transfer to the environment processor using the magnetic tape drive in the tester processor.

### Floppy disk

- FCPY command lists up file names and read the files in the floppy disk written in MOST format.
- MOVE command read the files in the floppy disk written in MOST format. Writing in MOST format can be done.
- It is not necessary to change connecting cables and I/O board relating to the floppy disk unit.

### Line printer

Line printer is not supported for ADVANsite test systems.

### Magnetic tape drive

- GLOAD command reads the files of magnetic tapes dumped in GDUMP format of MOST.
- The files can be dumped from the disk in the environment processor to the magnetic tape connected to TP1/3/4 by GDUMP format of MOST.
- It is not necessary to change connecting cables and I/O board relating to the magnetic tape drive.

### GPIB

- Can be used by statements of ATL programs in the tester driver mode in the same way as in the old system.
- It is not necessary to change connecting cables or I/O board.

### ADVANstar

ADVANstar is not supported for ADVANsite test systems.

### TESTARIUM

TESTARIUM is not supported for ADVANsite test systems.

### HSSI

HSSI is not supported for ADVANsite test systems.

# List of Figures

|            |                                                      |     |
|------------|------------------------------------------------------|-----|
| Figure 1-1 | ADVANsite CPU Architecture .....                     | 1-2 |
| Figure 1-2 | ASX/U Test Environment .....                         | 1-3 |
| Figure 2-1 | Structure of ASX/U Directory (Example of 3382) ..... | 2-4 |

## List of Tables

|             |                                                                 |      |
|-------------|-----------------------------------------------------------------|------|
| Table 1-1   | Major Application Software of ASX/U .....                       | 1-4  |
| Table 2-1   | Wildcard .....                                                  | 2-2  |
| Table 2-2   | Relative Directory Specification .....                          | 2-5  |
| Table 2-3   | Environment Variable of Main Directories .....                  | 2-6  |
| Table 2-4   | ASX/U and MOST Commands .....                                   | 2-11 |
| Table 3-1   | Restrictions Due to Directory File .....                        | 3-1  |
| Table 3-2   | Restrictions on ATL Statements in File Name Specification ..... | 3-2  |
| Table 3-3   | Restrictions on Utilities in File Name Specification .....      | 3-2  |
| Table 3-4   | ATL Statements not to be Used .....                             | 3-3  |
| Table 3-5   | Utilities not to be Used .....                                  | 3-3  |
| Table A 1-1 | Compatibility of TP1/TP3/TP4 Peripheral I/Os Peripheral .....   | A1-1 |