

ADVANTEST®

ADVANTEST CORPORATION

*Error Code Table
Reference Manual*

MANUAL NUMBER 8141091-74

Trademarks and Registered Trademarks

Trademarks and registered trademarks used in this manual are as follows:

Product names not listed here are generally trademarks or registered trademarks of their respective owners.

- ADVANsite and ATL are the trademarks of Advantest Corporation.

Revision History

Rev.	Date	Notes
69	Jun 25/02	
70	Jul 2/02	
71	Aug 9/02	
72	Oct 1/02	
73	May 15/03	
74	Jul 25/03	

Table of Contents

Preface	Preface-1
Applicable OS	Preface-1
Classified Table for Error Codes	Preface-2
Relevant Manuals	Preface-3
 1. General Description	 1-1
 2. Error Messages that Have Error Codes	 2-1
2. 1 Kinds of Errors	2-1
2. 2 Panic Errors	2-2
2. 3 System Errors during Compilation	2-4
2. 4 Syntax Errors during Compilation	2-6
2. 5 System Errors during Tests	2-8
2. 6 Run Time Errors during Tests	2-10
2. 7 Loading Errors during System Generation	2-12
 3. Monitor Error Code (0 to 77)	 3-1
3. 1 Error Message List	3-1
 4. System Error Codes (100 to 177)	 4-1
4. 1 Error Message List	4-1
 5. System Error Codes for Each Processor (200 to 377)	 5-1
5. 1 Error Message List	5-1

6. SCRAM Compilation Error Codes (1200 to 1277)	6-1
6. 1 Error Message List	6-1
7. MPAT Compilation Error Codes (1300 to 1577)	7-1
7. 1 Error Message List	7-1
8. SOCKET Compilation Error Codes (1600 to 1677)	8-1
8. 1 Error Message List	8-1
9. PRO (or SOCKET/MPAT) Compilation Error Codes (2000 to 2777)	9-1
9. 1 Error Message List	9-1
10. Runtime Error Codes (3000 to 3777)	10-1
10. 1 Error Message List	10-1
11. LPAT Compilation Error Codes (4000 to 4777)	11-1
11. 1 Error Message List	11-1
12. Logic Tester Compilation Error Codes (5000 to 5777)	12-1
12. 1 Error Message List	12-1
13. Analog Tester Compilation Error Codes (6000 to 6777)	13-1
13. 1 Error Message List	13-1

14. Memory Tester Compilation Error Codes (7000 to 7777)	14-1
14. 1 Error Message List	14-1
15. Analog Tester Runtime Error Codes (11000 to 11777)	15-1
15. 1 Error Message List	15-1
16. Memory Tester Runtime Error Codes (12000 to 12777)	16-1
16. 1 Error Message List	16-1
17. Image Sensor Tester Runtime Error Codes (22000 to 22777)	17-1
17. 1 Error Message List	17-1
18. MPAT Compilation Error Codes (23000 to 23777)	18-1
18. 1 Error Message List	18-1
19. SCRAM Compilation Error Codes (26000 to 26077)	19-1
19. 1 Error Message List	19-1
20. Error Message List	20-1
20. 1 Error Messages	20-1
21. Unidentifiable Errors	21-1

Preface

Applicable OS

This reference manual is applicable to the following MOST, ASX/V, and ASX/U series operating systems.

Logic tester

MOST-XII, ASX/V-12

ASX/V-30, ASX/U-31

Analog tester

MOST70, MOST71, MOST72

MOST-73, ASX/V-73

Memory tester

MOST-XI/E, ASX/V-11E, ASX/U-11E

MOST-50, ASX/V-50, ASX/U-50

ASX/U-51

Image sensor tester

MOST-80

Classified Table for Error Codes

Error codes are classified into the following groups according to the meaning.

Error code (octal)	Logic tester	Analog tester	Memory tester	Image sensor tester	Remarks
0 to 77	Monitor errors				This error does not occur on ASX/V and ASX/U series.
100 to 177	System errors (panic errors)				
200 to 277	System errors for each processor				
300 to 377					
400 to 1177	--	--	--	--	
1200 to 1277	SCRAM compilation error			--	
1300 to 1377	--	--	MPAT compilation error	--	
1400 to 1477	--	--			
1500 to 1577	--	--		--	
1600 to 1677	--	--	SOCKET compilation error	--	
1700 to 1777	--	--	--	--	
2000 to 2777	PRO (or SOCKET) compilation error				
3000 to 3777	Runtime errors				
4000 to 4777	LPAT compilation errors				
5000 to 5777	Logic tester compilation errors	--	--	--	
6000 to 6777	--	Analog tester compilation error	--	--	
7000 to 7777	--	--	Memory tester compilation error	--	
10000 to 10777	Logic tester runtime error	--	--	--	

Error code (octal)	Logic tester	Analog tester	Memory tester	Image sensor tester	Remarks
11000 to 11777	--	Analog tester runtime error	--	--	
12000 to 12777	--	--	Memory tester runtime error	--	
13000 to 13777	--	--	--	--	
14000 to 14777	--	--	--	--	
15000 to 15777	--	--	--	--	
16000 to 16777	--	--	--	--	
17000 to 17777	--	--	--	--	
20000 to 20777	--	--	--	--	
21000 to 21777	--	--	--	--	
22000 to 22777	--	--	--	Image sensor tester runtime error	
23000 to 23777	--	--	MPAT compilation error	--	
24000 to 24777	--	--	--	--	
25000 to 25777	--	--	--	--	
26000 to 26077	SCRAM compilation error			--	

Relevant Manuals

ATL-50 Test Plan Program Reference Manual VOL4 Clock Pulse Generation(No. : 8127133)

ATL-51 Test Plan Program Reference Manual(No. : 8431498)

ATL-50 Socket Program Reference Manual(No. : 8256293)

ASX/U-51 Hybrid Controller User's Manual(No. : 8409598)

ATL-51 Pattern Program Reference Manual(No. : 8256292)

1. General Description

There are two kinds of errors. One can be known by the error codes and the other by the error message.

The cause of the errors that can be known by the error code is allocated to the error code and the cause of such an error can be known by analyzing the error code.

The cause of the errors that can be known by the error message can be known by examining the message.

2. *Error Messages that Have Error Codes*

This chapter lists error codes and error messages.

2. 1 Kinds of Errors

When an error occurs, to find the error code it can be classified into one of the following. When the error code is known, the cause of the error can be known by referring to the error code table.

- Panic errors
- System errors during compilation
- Syntax errors during compilation
- System errors during tests
- Run time errors during tests
- Loading errors during system generation
- Errors during operation

2. 2 Panic Errors

This type of error occurs if there is a fatal error in file information, a TPU abnormality, peripheral device abnormality, or other fatal error such as an abnormal interrupt. If this type of error occurs execution cannot be continued.

	CODE	BSAD	CALA	PSW	
	000105	00005000	00001F30	0000EE01	
	(a)	(b)	(c)	(d)	
	AC0	AC1	AC2	AC3	*1
*1	00000123	00000000	EEE00FFF	00000000	-----
-----	(e)	(f)	(g)	(h)	-----
-----	AC4	AC5	AC6	AC7	
	00000000	001850FF	0A800530	00001F2E	
	(i)	(j)	(k)	(l)	
	STRIKE ANY KEY TO INITIALIZE THE SYSTEM				
	(m)				

*1 Displaying a continuing line.

- (a) Error code.
- (b) Contents of base address register
- (c) Address in a system program in which the error occurred.
- (d) PSW value when the error occurred.
- (e) AC0 value when the error occurred.
- (f) AC1 value when the error occurred.
- (g) AC2 value when the error occurred.
- (h) AC3 value when the error occurred.
- (i) AC4 value when the error occurred.
- (j) AC5 value when the error occurred.
- (k) AC6 value when the error occurred.

(l)

AC7 value when the error occurred.

(m)

The system is reactivated by typing any key after this message appears. However, since the previous status has been lost, check that no other V unit (in systems with more than one V) is being used. This message is not displayed in ASX/U test systems.

In ASX/U test system, when this error occurred while the test controller is activated, the same message is written in the console screen of the environment processor (EWS) and the file /var/adm/messages.

In the ASX/U test system using TP4A processor, when an abnormal condition is detected while the test controller is stopped, a message is output to the console screen of the environment processor (EWS) and the file /var/adm/messages as shown below.

```
WARNING: TP4A: CODE    000116 BSAD 00000000 CALA 00007FD2 PSW  00000801
WARNING: TP4A: AC0: 00000801 AC1: 00007FD2 AC2: 00000000 AC3: 00F9690D
WARNING: TP4A: AC4: 00000000 AC5: 00000000 AC6: 00000100 AC7: 00008043
```

The condition of the error is the same as that of the panic error mentioned above.

Before turning off the test system, press the stop key (red lamp) of the test processor.

When the test system is turned off before stopping the test processor, a power failure is detected.

Then, the above message is displayed.

2. 3 System Errors during Compilation

This type of error occurs during compilation, if there is a file abnormality, TPU and/or peripheral device abnormality.

```

*1
SYSTEM ERROR!  (ERROR FILE:DP1:PRO 015)
                (a)
CODE = 101 (000053F0) LINE = 104 [ABC05-2-73]
            (b)  (c)                (d)  (e) (f) (g)
MEAS DPAT XCHK1 XCHK2 (h)
----- ↑(i)
0000EE02 01850000 AB500100 00000101
      (j)      (k)      (l)      (m)
000053F0 10187030 00000000 00000010
      (n)      (o)      (p)      (q)
000053EE
      (r)

```

*1 When () of (a) is not output, the first and second lines are output on the same line.

(a)

Name of the file that caused the error. However, the customer name is not output if it is identical to the one being used. When the cause of the error does not involve the files, the (-----) part is not output.

(b)

Error code.

(c)

Address in a system program in which the error occurred.

(d)

Line number beginning with the top line of the statement where the error occurred.

(e)

Name of the source file being compiled when the error occurred.

(f)

Ordinal number of the record in source file (e) above in which the error occurred.

(g)

Ordinal number of the line in record (f) above in which the error occurred.

(h)

One line of the statement in which the error occurred.

(i)

Indicates that, in the statement shown in the upper line (h), the error occurred before the part indicated by ↑.

- (j)
The PSW value when the error occurred.
- (k)
The AC0 value when the error occurred.
- (l)
The AC1 value when the error occurred.
- (m)
The AC2 value when the error occurred.
- (n)
The AC3 value when the error occurred.
- (o)
The AC4 value when the error occurred.
- (p)
The AC5 value when the error occurred.
- (q)
The AC6 value when the error occurred.
- (r)
The AC7 value when the error occurred.

2. 4 Syntax Errors during Compilation

These are syntax errors, including context errors such as too many DO nests and multiply defined label names, which can occur during compilation.

```

ERROR!  (ERROR FILE:DP1:PRO 015)          *1
                                         (a)
CODE = 2011 (0000195C) LINE = 358 [ABC015-3-105]
      (b)   (c)   (d)   (e)   (f) (g)
MEAS DPAT XCHK1 XCHK2 (h)
----- ↑(i)
( 0000EE02 0A12BF00 00158091 00003000  ) *2
  (j)      (k)      (l)      (m)
  40000017 80001000 00000000 00000010
  (n)      (o)      (p)      (q)
  0000195A
  (r)

```

*1 When () of (a) is not output, the first and second lines are output on the same line.

*2 Usually, contents of (j) to (r) are not output. They are output only when the global switch/D is attached to a compilation command.

(a)

Name of the file that caused the error. However, the customer name is not output if it is identical to the one being used. When the cause of the error does not involve the files, the (-----) part is not output.

(b)

Error code.

(c)

Address in a system program in which the error occurred.

(d)

Line number beginning with the top line of the statement where the error occurred.

(e)

Name of the source file being compiled when the error occurred.

(f)

Ordinal number of the record in source file (e) above in which the error occurred.

(g)

Ordinal number of the line in record (f) above in which the error occurred.

(h)

One line of the statement in which the error occurred.

(i)

In statement (h), the error occurred before the part indicated by ↑.

- (j)
The PSW value when the error occurred.
- (k)
The AC0 value when the error occurred.
- (l)
The AC1 value when the error occurred.
- (m)
The AC2 value when the error occurred.
- (n)
The AC3 value when the error occurred.
- (o)
The AC4 value when the error occurred.
- (p)
The AC5 value when the error occurred.
- (q)
The AC6 value when the error occurred.
- (r)
The AC7 value when the error occurred.

2. 5 System Errors during Tests

This type of error can occur when the controller is activated (SYS TEST) and/or during testing, or when there is a file abnormality, TPU, and/or peripheral device and measurement system abnormalities.

```

SYSTEM ERROR! (ERROR FILE:DP1:PRO 1)          *1
              (a)
              CODE = 15 (00001550)
              (b) (c)
SUBR   -ABC05 (PR0 -10150) *2
      (d)      (e)
TEST   -305
      (f)
LINE1  -1360 [ABC05. 0-12-75]
      (g)      (h) (i) (j)
LINE2 (&) -0
      (k)
0000EE02 IM. CODE = 305
      (l)      (m)
00000000 18760000 00001101 00000000
      (n)      (o) (p) (q)
AB0F0000 0000EE01 00000000 0000154E
      (r)      (s) (t) (u)

```

*3

*1 Sometimes the parentheses part of (a) is not output.

*2 Sometimes the parentheses part of (e) is not output.

*3 Information from (d) to (k) is not output if not during measurement. These are output only during measurement.

- (a) Name of the file that caused the error. However, the customer name is not output when it is identical to the one being used. When the cause of the error does not involve the files, the (-----) part is not output.
- (b) Error code.
- (c) Address in a system program in which the error occurred.
- (d) Name of the program which was being executed when the error occurred.
- (e) Name of the program which called the program that was being executed when the error occurred. That is, the name of the program that had been executed before the program that was called. However, the (-----) part is not output when the program which was being executed is of the first level.

- (f)
Test number used when the error occurred.
- (g)
Line number beginning with the top line of the part where the error occurred.
- (h)
Name of the program source file in which the error occurred.
- (i)
Ordinal number of the record in source file (h) above in which the error occurred.
- (j)
Ordinal number of the line in record (i) above in which the error occurred.
- (k)
Statement number in the lateral direction that is connected to the & symbol when the error occurred. The statement number begins with 0.
- (l)
PSW value when the error occurred.
- (m)
Intermediate language code which was being executed when the error occurred.
- (n)
AC0 value when the error occurred.
- (o)
AC1 value when the error occurred.
- (p)
AC2 value when the error occurred.
- (q)
AC3 value when the error occurred.
- (r)
AC4 value when the error occurred.
- (s)
AC5 value when the error occurred.
- (t)
AC6 value when the error occurred.
- (u)
AC7 value when the error occurred.

2. 6 Run Time Errors during Tests

This type of error can occur if there is a programming error and/or a file abnormality during tests.

```

RUN-TIME ERROR! (ERROR FILE:DP1:PRO 1) *1
      (a)
      CODE = 3 (0000197F)
      (b) (c)
SUBR   -ABC05 (PR0 -10150) *2
      (d) (e)
TEST   -305
      (f)
LINE1  -1306 [ABC05. 0-12-101]
      (g) (h) (i) (j)
LINE2 (&) -0
      (k)
0000EE02 IM. CODE = 305
      (l) (m)
00000000 18760000 00001101 00000000
      (n) (o) (p) (q)
ABC00000 0000EE01 00000000 0000197D
      (r) (s) (t) (u)
(V) (THIS OBJECT FILE CAN'T BE EXECUTED ON SYSTEM.) *3

```

*1 Sometimes the parentheses part of (a) is not output.

*2 Sometimes the parentheses part of (e) is not output.

*3 Sometimes the parentheses part of (v) is not output.

(a)

Name of the file that caused the error. However, the customer name is not output if it is identical to the one being used. When the cause of the error does not involve the files, the (-----) part is not output.

If the error code is 3035, the customer name is not output.

(b)

Error code.

(c)

Address in a system program in which the error occurred.

(d)

Name of the program which was being executed when the error occurred.

(e)

Name of the program which called the program that was being executed when the error occurred. That is, the name of the program that had been executed before the program that was called. However, the (-----) part is not output when the program which was being executed is of the first level.

(f)

Test number used when the error occurred.

- (g)
Line number beginning with the top line of the part where the error occurred.
- (h)
Name of the program source file in which the error occurred.
- (i)
Ordinal number of the record in source file (h) above in which the error occurred.
- (j)
Ordinal number of the line in record (i) above in which the error occurred.
- (k)
Statement number in the lateral direction that is connected to the & symbol when the error occurred. The statement number begins with 0.
- (l)
PSW value when the error occurred.
- (m)
Intermediate language code which was being executed when the error occurred.
- (n)
AC0 value when the error occurred.
- (o)
AC1 value when the error occurred.
- (p)
AC2 value when the error occurred.
- (q)
AC3 value when the error occurred.
- (r)
AC4 value when the error occurred.
- (s)
AC5 value when the error occurred.
- (t)
AC6 value when the error occurred.
- (u)
AC7 value when the error occurred.
- (v)
When the error code is 3622, the (-----) part is printed in reverse video.

2. 7 Loading Errors during System Generation

This type of error can occur if there is a file abnormality, TPU, and/or peripheral device abnormality, and during system generation.

LOADING ERROR CODE = 000017 A 1F85 (a) (b)

(a)

Error code.

(b)

Address in a system program in which the error occurred.

3. *Monitor Error Code (0 to 77)*

Error codes are represented in octal in the table.

3. 1 Error Message List

0

ILLEGAL CHANNEL NUMBER

This error occurs if a non-existent channel number is designated for a system command which uses a channel number.

This does not normally occur.

1

ILLEGAL FILE NAME

This error occurs if illegal characters are used to specify the name of a file.

The characters which can be used for a file name are alphanumerics, \$ sign, and period.

2

ILLEGAL COMMAND FOR DEVICE

This occurs when block I/O is tried for a device for which block I/O of VKT, line printer, etc., is impossible. It also occurs when file extension is tried without writing data to MT.

3

END OF FILE

This error occurs if there is an attempt to read more data than the size of the file allows. It also occurs if there is an attempt to write more data than the size of the file (contiguous file) allows.

4

FILE READ PROTECTED

This error occurs if an attempt is made to read data from a file which has the file read protection attribute.

5

FILE WRITE PROTECTED

This error occurs if an attempt is made to write data to a file which has the file write protection attribute. This error also occurs if an attempt is made to write data to an already open file by reopening it, without closing it once.

6

FILE ALREADY EXIST

This error occurs if an attempt is made to create a file which already exists.

7

FILE DOES NOT EXIST

This error occurs if a file that does not exist is referred to.

10

PERMANENT FILE

This error occurs if an attempt is made to delete a permanent file or to change the name.

11

FILE ATTRIBUTE PROTECTED

This error occurs if an attempt is made to alter a file which is file attribute protected.

12

UNOPEN FILE

This error occurs if an attempt is made to read from or write to an unopened file.
This does not normally occur.

13

CHANNEL ALREADY IN USE

This error occurs if an attempt is made to open a channel that is already in use.
This does not normally occur.

14

LINE TOO LONG

It occurs when CR, NULL, FF or ESC cannot be detected by the 132nd character when reading or writing in line mode.
In other words, it occurs when a string is too long.

15

DEVICE SHARED

This error occurs if a device which was initialized from the # side and * side is released from only one side.

The command continues to be executed even if this message is issued.

16

PARITY ERROR

This error occurs if a parity error is detected while reading data from a file.

17

OUT OF DISK SPACE

This error occurs if there is no available space on a magnetic disk or a floppy disk.

20

FILE READ ERROR

This error occurs if reading cannot be continued because of a read error.

This error occurs only if there is an error which can be detected by hardware.

21

UNIT IMPROPERLY SELECTED

This error occurs if the power supply for the magnetic tape or floppy disk is off and/or those devices are not online.

22

END OF TAPE

This error occurs if the end mark of a magnetic tape is detected when performing read or write.

23

DEVICE NOT IN SYSTEM

This error occurs if an attempt is made to read/write without initializing the magnetic tape or floppy disk.

Initializing refers to the ** INIT file monitor commands.

24

FILE NOT ACCESIBLE BY DIRECT I/O

This error occurs when a file which cannot be accessed via direct I/O is attempted to be accessed.

25

INTERRUPT DEVICE CODE IN USE

This error occurs when a definition for the interrupt device code in the operating system is attempted to be overlapped.

26

FILE SPACE EXHAUSTED

This error occurs if there is not enough continuous area necessary for making a contiguous file on a magnetic disk or a floppy disk.

27

FILE IN USE

This error occurs if an attempt is made to delete or change the name of a file which is being used. This error also occurs when an attempt is made to repeatedly open files (magnetic tape, line printer, and so on) which cannot be repeatedly opened. Basically this shows that the file concerned is being used.

30

ILLEGAL FORMAT

This error occurs if a record does not match. This error also occurs if the ledger of a magnetic disk or floppy disk is abnormal.

31

FILE WRITE ERROR

This error occurs if a write cannot be performed because a write error occurred.
This error occurs only if there is an error which can be detected by hardware.

32

ATTEMPT TO ACCESS A NONEXISTENT AREA

This code is generated in cases where an attempt is made to access a nonexistent area.
That is, an attempt is made to use a floppy disk which has not been initialized.

33

USER INTERRUPT STACK IS EMPTY

This error occurs if an attempt is made to return to the system program from the interrupt processing routine entered when there was no actual interrupt request.
This does not normally occur.

34

ATTEMPT TO DEFINE AN INTERRUPT IN USE

This error occurs if a definition for the interrupt processing routine overlaps.

This does not normally occur.

35

ATTEMPT TO DEFINE A SYSTEM INTERRUPT

This error occurs if an interrupt processing routine which was already defined in the system is redefined.

This does not normally occur.

36

ILLEGAL ATTEMPT TO CHANGE FILE SPECIFIER

This error occurs when a file specifier which cannot be changed is attempted to be changed.

37

ATTEMPT TO SET ILLEGAL TIME OR DATE

This error occurs if an improper value is set for the time or date.

40

DEVICE ALREADY IN SYSTEM

This error occurs if an attempt is made to initialize a magnetic tape or floppy disk which has already been initialized.

Initializing refers to the ** INIT file monitor commands.

41

STACK OVER FLOW

This occurs if there are too many nested calls of the system program.

42

STACK UNDER FLOW

This error occurs if an attempt is made to return to the system program from a nested call although there was no real nested call of the system program.

43

DEVICE TIME OUT

This error occurs if an interrupt is not successful although the interrupt is conducted on each peripheral device for the specified time.

This occurs if there is no peripheral device specified, the power is off, the device is not online, and so on.

44

TEST SYSTEM IN USE

This error occurs if the ** RELEASE DP0 and/or ** BOOT file monitor commands cannot be executed because the device is being tested.

45

MEMORY SPACE EXHAUSTED

This error occurs if a system program cannot be executed because the memory space is exhausted.

46

MASTER DEVICE DOES NOT IN SYSTEM

This error occurs when a master device is not in the system.
This does not normally occur.

47

MASTER DEVICE IN USE

This does not normally occur.

50

FILE DOES NOT ENTER IN MASTER DEVICE

This does not normally occur.

51

UNDEFINED MEMORY PARTION

This does not normally occur.

52

MEDIA CHANGED

This error occurs if a floppy disk is taken out and another disk inserted while a file is in use on the floppy.

53

MAXIMUM OF 8 INITIALIZED LOGICAL NAMES

This error occurs when more than eight logical names are initialized.

54

ID. NUMBER MULTIPLY DEFINED

This error occurs when an ID number definition overlaps.

55

DIRECTORY TABLE RUN OVER

This error occurs when a number of the directory table exceeds the upper limit.

56

NO INPUT DATA

This error occurs when no input data is found.

57

FREE TASK CONTROL BLOCK NOT FOUND

This error occurs when a free task control block is not found.

60

DIRECTORY NOT FOUND ON REMOTE STATION

This error occurs when no directory for the remote station is found.

61

CRC ERROR

Indicates that CRC error is detected during reading of data from a file.

62

UNDEFINE COMMAND

Indicates that an undefined command is input.

63

PHASE ERROR

Synchronization became impossible in the communication line.

64

LCN OVERFLOW

Indicates that the logical communication path number is overflown.

65

LCN NOT LINK

It cannot be connected to the remote station through the logical communication path.

66

LCN ERROR

Indicates that an error occurs in the logical communication path number.

67

STATION BUSY

Indicates that the communicating station is busy.

70

CRC ERROR ON REMOTE STATION

Indicates that a CRC error is detected during reading of data from a file at a remote station.

71

SEQUENCE NUMBER ERROR

Indicates that an abnormality is resident in the sequence number during communication.

72

FILE NUMBER ERROR

Indicates that an abnormality is resident in the file number during communication.

73

FILE NUMBER IN USE

Indicates that the file number has been used for communication.

74

UNOPEN FILE NUMBER

Indicates that the file number cannot open enabling communication.

75

BURST SIZE ERROR

Indicates that an abnormality is resident in the burst size during communication.

76

HSSI NOT INSTALL

Indicates that the communication program (HSSI) is not installed.

77

Not used

4. *System Error Codes (100 to 177)*

Error codes are represented in octal in the table.

4. 1 Error Message List

100

TPU LOGIC ERROR

This error occurs if it is impossible to continue execution due to TP unit and/or peripheral device abnormalities.

101

MAP FILE ERROR

This error occurs if a MAP file, which controls the use of a magnetic disk or floppy disk, is malfunctioning. Sometimes the file on the magnetic disk or floppy disk becomes abnormal if this error occurs.

102

DIRECTORY FILE ERROR

This error occurs if a directory file, which controls the files in a magnetic disk or floppy disk, is malfunctioning. Sometimes the file on the magnetic disk or floppy disk becomes abnormal if this error occurs.

103

TESTER TIME OUT

This error occurs if the read and/or write of the tester data are abnormal.

104

UNDEFINED INTERRUPT OCCURRENCE

This error occurs if an interrupt occurs with an interrupt code which cannot be identified by this system.

105

TPU MEMORY PARITY ERROR

This error occurs if there is a parity error at the time the TP unit main memory is accessed.

106

UNDEFINED TRAP OCCURRENCE

This error occurs if there is an attempt to execute an instruction which the TP unit can not identify.

107

TPU MEMORY SHORTAGE

This error occurs if there is not enough memory space in the main memory unit for the system to function.

110

SYSTEM STACK OVER FLOW

This error occurs if the stack for the system commands overflows.
This does not normally occur.

111

SYSTEM STACK UNDER FLOW

This error occurs when the stack for the system command underflows.
This does not normally occur.

112

This error occurs if there is an attempt to execute an undefined system command.

113

This error occurs if an abnormal write of the random file index takes place.

114

This error occurs if an abnormal read of the random file index takes place.

115

TESTER POWER FAIL

This error occurs if there is a power failure in a tester mainframe.

116

TP UNIT POWER FAIL

This error occurs if there is a TP unit power failure.

117

SOFTWARE INTERRUPT

This does not normally occur.

120**DEFER ERROR**

This error occurs if the TP unit continues running regardless of a stop.

121

This error occurs if there is a magnetic tape error that can not be classified.

122

It is an error which occurs when the data is read from the job at the swap.

123

Access outside area of job.

This error occurs when the present active job accesses outside the area.

177

Not used

5. *System Error Codes for Each Processor (200 to 377)*

Error codes are represented in octal in the table.

5. 1 Error Message List

200

INTERRUPT DEFECTIVE

This error occurs if the unit code is abnormal when the TINT1 interrupt is generated from the tester bus. No pertinent unit is found.

The interrupt acknowledge data is stored in AC0.

201

TPU LOGIC ERROR

This error occurs if it is impossible to continue execution due to TP unit and/or peripheral device abnormalities.

202

This error occurs if DC measurement or the device power supply current measurement is outside the normal measurement range.

It is also possible that the DC unit and/or PPS unit is malfunctioning.

203

INTERRUPT DEFECTIVE

This error occurs if there is no cause for an interrupt at the unit corresponding to the unit code of a TINT1 interrupt generated from the tester bus.

The interrupt acknowledge data is stored in AC0.

204

INTERRUPT DEFECTIVE

This error occurs if the cause of a TINT0 interrupt gets mixed-up with the causes for a TINT1 interrupt from the tester bus.

This error can be detected only when the function data log or fail pin is being displayed.

205

TESTER BUS ABNORMALITY

Data is transferred to the tester bus at test start to check if data goes around the tester bus normally.

This error occurs when it does not go around normally.

206

This error occurs if the controller (SYS TEST) cannot be activated due to insufficient capacity of the TP unit main memory.

207

This error occurs if a code abnormality is detected in the intermediate language while a test is being executed.

210

This error occurs if the Timing Generator (TG) malfunctions.

This becomes an error when the TG function does not end although function testing has received a forced interrupt.

211

The content of a unit which belongs to the system is abnormal.

212

An interrupt from the control box was generated, but no data was entered.

213

Abnormal control box FIFO status.

214

The test vector generator CTB or TTB had a memory parity error.

215

SBM BUS OUT LOCK error.

216

SBM memory parity error.

217

SBM memory size sense abnormal.

220

The contents of the LPAT object file are abnormal.

221

The SBM master file has been destroyed.

222

An error occurred during SBM operation.

The pattern move operation from the SBM to the test vector generator or the intra-SBM MOVE operation was not completed within the predetermined time.

223

An error occurred during MOVE operation of the test vector generator.

The MOVE operation or the VGC store search operation was not completed within the predetermined time.

224

The test head status is abnormal.

Test station applicable to the read status does not exist.

225

Not used

226

The MDC TOTAL FAIL information is inconsistent with the H/L-FAIL information.

AC2=TOTAL FAIL, AC3=H-FAIL, AC4=LFAIL

227

Not used

232

The OUT operation of the SBM was not properly completed.

250

An abnormal interrupt from VSG was detected. VSG was not started, but a stop interrupt occurred.

251

The BFM file reset operation was not completed.

252

The VSG unit does not operate.
(MPU does not change to DONE.)

253

Settling of DGT unit was not completed.

254

The DPAT file contains an error. Recompile.

255

A parity error has generated at WSPG.

256

This statement has not yet been supported.

257

The SYS CODEC file contains an error.

260

PDGT contains an error.
(the CPU BUSY flag is not reset.)

261

The system synthesizer is abnormal.
(Setup cannot be completed due to certain reasons.)

262

DSU error.
CPU mode pattern generation is incomplete.

263

The flag to continue the operation of DSU command "JEC" is not reset.
(DSU error.)

264

An error occurred to the PHDC unit.

265

A SQDC which does not match the system revision is found.

266

An error occurred in a unit between PHDC1 to 64.

267

An error occurred in a unit between PHDC65 to 128.

270

An error occurred in a unit between PHDC129 to 192.

271

An error occurred in a unit between PHDC193 to 256.

272

The operation is not completed even after the set time during the SQDC internal table (PSB, PSM) access.

273

A parity error occurred to the SQDC mode.

274

An unknown SQDC error.

275

The operation of MTX CLR in the event master unit (EM) is not completed.

276

A memory access error occurred when the stestxxx function was executed.

277

The operating environment for the hybrid controller cannot be set up.

300

The object module cannot be executed.

301

The hybrid controller cannot be used with the tester processor.

302

The Ethernet link between the tester processor and the EWS has not been recognized successfully.

303

The expansion memory for the hybrid controller has not been installed.

304

During program execution, the system entered the wait state during which the system waited for the next command to be issued.

6. *SCRAM Compilation Error Codes (1200 to 1277)*

Error codes are represented in octal in the table.

6. 1 Error Message List

1200

File name has not been correctly described.

1201

An illegal character was used.

1202

A meaningless character string has been described.

1203

The INSERT statement file name contains an error.

1204

n has not been described in RDXn.

1205

n does lie in $2 \leq n \leq 16$ range in RDXn.

1206

AMAX statement has not been specified before describing the X, Y, and Z addresses.

1207

EXPRESSION statement has not been defined before the decoder topology.

1210

AMAX statement has already been defined.

1211

AMAX statement has been described in an illegal position.

1212

The characters following the AMAX statement contain an error.

1213

Maximum values for the X, Y, and Z addresses have not been described in the AMAX statement.

1214

In AMAX=x, y, z statement, x and y have been specified in excess of 4095 and z has been specified in excess of 255.

1215

Illegal character has been used in the AMAX statement.

1216

In AMAX=Xn₁, Yn₂, Zn₃, n₁ and n₂ has been described in excess of 11, and n₃ in excess of 7. Note that all the value in the program is compiled as hexadecimal number if the RDX statement has not been written.

1217

ARIRAM DEFINE has already been defined.

1220

X, Y, Z address data have already been specified.

1221

Address or data has not been described.

1222

Address or data value exceeds size specified in AMAX statement. Note that all the value in the program is compiled as hexadecimal number if the RDX statement has not been written.

1223

The number of address and data items do not agree.

1224

Multiple definition of address.

1225

ADDRESS statement was specified before EXPRESSION statement.

1226

When the left hand side of the decoder topology is $X(Y)$, $Y(X)$ and $X_{10}(Y_{10})$ cannot be described together on the right hand side. And when $Y(X)$ has been described twice on the right hand side, $X_{10}(Y_{10})$ and $X_{11}(Y_{11})$ cannot be described together.

1227

The $Y(X)$ subscript described on the right hand side is too large when the left hand side of the decoder topology is $X(Y)$.

1230

The constant description contains an error.

1231

Constant exceeds the radix specified in the RDX statement.

1232

EXPRESSION statement has already been defined.

1233

ADDRESS statement has already been defined.

1234

Operation expression contains an error.

1235

Operation expression contains an error.

1236

The maximum number of variables which can be described on the right hand side of the decoder topology is 10.

1237

The value of a subscript of X, Y or Z of the decoder topology exceed the value defined by the AMAX statement. Or, no AMAX statement is defined before an EXPRESSION statement.

Note that all the value in the program is compiled as hexadecimal number if the RDX statement has not been written.

1240

The number of X on the left hand side of the decoder topology must not exceed 2.

1241

Neither X nor Y can be described on the left hand side when Z is on the right hand side of the decoder topology.

1242

Multiple use of brackets is not permitted.

1243

The left and right hand sides of the decoder topology have not been coupled by an equal sign.

1244

The right hand side of the address topology has not been started with XA, YA, or ZA.

1245

When the left hand side of the decoder topology is X(Y), the Y(X) subscript described on the right hand side is not the same as the previously described Y(X) subscript.

1246

Z cannot be described on the right hand side when the left hand side of the decoder topology is X or Y.

1247

AMAX statement has not been specified before the ARIRAM data is described.

1250

Bit number is in excess of the maximum value

1251

The "=" is not described.

1252

Incorrect data has been described.

1253

The number of operators exceeds 10.

1254

ALINK statement has already been defined.

1255

ALINK statement cannot be specified together with EXPRESSION and/or ADDRESS statements in the same program.

1256

ALINK statement was not specified before address bit linkage statement.

1257

Multiple definition of decode topology statement is not permitted.

1260

Kind of variables specified in the right side of decode topology statement has exceeded the maximum number.

1261

The number of operators exceeds the maximum allowable.

1262

The number of brackets exceeds the maximum allowable.

1263

The brackets specification contains an error.

1264

Number of operational elements has exceeded the maximum number.

1266

ARIRAM statement cannot be described with this system in SCRAM program.

1267

In AMAX=x, y, z statement, x and y have been specified in excess of 65535 and z has been specified in excess of 255.

1270

In AMAX=Xn₁, Yn₂, Zn₃, n₁ and n₂ has been described in excess of 15, and n₃ in excess of 7. Note that all the value in the program is compiled as hexadecimal number if the RDX statement has not been written.

1271

The bits of X12-15 and Z6, 4, 2, 0 have been duplicated in the AMAX statement.

1272

The bits of Y12-15 and Z7, 5, 3, 1 have been duplicated in the AMAX statement.

1273

The bits of X12-15 and Z6, 4, 2, 0 have been duplicated in the decode compensation statement or the address bit connection statement.

1274

The bits of Y12-15 and Z7, 5, 3, 1 have been duplicated in the decode compensation statement or the address bit connection statement.

1275

Specification of X12-15 and Z6, 4, 2, 0 has been duplicated in the ARIRAM statement.

1276

Specification of Y12-15 and Z7, 5, 3, 1 has been duplicated in the ARIRAM statement.

1277

A CR (Carriage Return) is not placed at the last of the line.

7. *MPAT Compilation Error Codes (1300 to 1577)*

Error codes are represented in octal in the table.

7. 1 Error Message List

1300

The value represented by the bits must not be smaller than the minimum value.

1301

The value represented by the bits exceeds the maximum value.

1302

The start bits must not be greater than the stop bits.

1303

There is no "=" specification.

1304

The data specification is incorrect.

1305

The number of bits on the left side is not equal to the number of bits on the right side.

1306

The same registers are specified.

1307

The number of names used for SDEF exceeds the maximum number listed below.

The maximum value in the T5500 series: 500

The maximum value in the T5300 series: 50

1310

The specification of the ALPG address data generation instruction is incorrect.

The specification of the control bits is incorrect.

The specification of the operand in STPS or STFL is incorrect.

1311

Only one address data generation instruction can be specified on the same field in a line.

1312

The number of operators exceeds the maximum allowable.

1313

The same SDEF names are defined.

1314

The combination of the X, Y, L, and H fields is incorrect.

1315

An illegal character was used.

1316

The label must not be specified in front of the START statement.

1317

The same label must not be used in a common section and a module section.

The same label must not be used in a common section or in the same module.

1320

The control statement specification is incorrect.

1321

More than one title statement (MPAT) is specified.

1322

The control statement is specified in the wrong position.

1323

Only one control statement can be specified in one module.

1324

Not used

1325

It is not enclosed by BURST BLOCK BEGIN and BURST BLOCK END.

1326

The BURST name specification is incorrect.

1327

The same BURST names are specified in the program.

1330

The BURST name must be parenthesized.

1331

The value of n in RDXn must be in the following range: $2 \leq n \leq 16$.

1332

The value of n in STARTn is incorrect.

1333

An illegal character was in a SCRAM filename.

1334

The value of n in XYSELn must be in the following range: 0 to 1.

1335

The value of n in SIZE n must be in the following range: $0 \leq n \leq 7$.

1336

The value of n in PCCn must be in the following range: $0 \leq n \leq 4$.

MOST-50, ASX/V-50

The value of n in PCCn must be in the following range: $0 \leq n \leq 2$.

1337

It is not enclosed by MODULE BEGIN and MODULE END.

1340

The mnemonic specification in the MODE statement is incorrect.

1341

The combination of the mnemonics is incorrect.

1342

The register name specification in the register statement is incorrect.

1343

The value set in the register statement is incorrect.

1344

There is no label corresponding to the value set in the register statement.

1345

The object file name specification is incorrect.

1346

Not used

1347

Not used

1350

Not used

1351

When PCCn is specified, "%" must be prefixed to the ALPG address data generation instruction.

1352

More than one mnemonic must not be specified in the same field of the address generation instruction with option 45.

1353

When OPSL or PCCn is not specified in a MODE statement, "%" must not be prefixed to an ALPG address data generation instruction.

1354

A mnemonic other than CR is specified.

1355

The specified mnemonic does not exist in the conditional jump instruction or option 45.

1356

When PCCn is specified, neither FLGLIn, FLGSn, FLGLn, FLGJn, nor FLGWn can be specified.

1357

When NIBBLE is specified in the MODE statement, neither FLGLIn, FLGSn, FLGLn, FLGJn, nor FLGWn can be specified.

1360

The OUT instruction operand (BURST name) specification is incorrect.

1361

There is no OUT instruction operand (BURST name).

1362

The subscript must not be greater than 8.

1363

The subscript must not be smaller than 1.

1364

The subscript must not be greater than 4.

1365

The subscript must not be smaller than 1.

1366

An illegal character was used in the operand.

1367

The length of the operand (number of bits) exceeds the maximum value.

1370

An illegal character was used in the register name of the SET instruction.

1371

Not used

1372

The length of the SET instruction operand (number of bits) exceeds the maximum allowable.

1373

When NIBBLE or RCM is specified in the MODE statement, N must not be combined with FLGLI1, FLGS1, FLGJ1, FLGL1, or FLGW1.

1374

An illegal character was used in the DST field of option 45.

1375

You must specify range (R(vr)) in the VSn (n: 1 or 2) test condition statement of burst block when the vs ($8V < vs \leq 10V$) is specified in this statement.

1376

An illegal character was used in the JMP field of option 45.

1377

The label is not defined.

1400

An illegal test condition statement was specified in the burst block.

Only the following test condition statements can be specified in the burst block.

VS, VT, START DC, IN, OUT, SEND EXT

MOST-50, ASX/V-50

An illegal test condition statement was specified in the burst block.

Only the following test condition statements can be specified in the burst block.

VS, VT, IL, WAIT TIME, IN, OUT, SEND EXT

ASX/U-51

An illegal test condition statement was specified in the burst block.

Only the following test condition statements can be specified in the burst block.

VS, WAIT TIME, SEND EXT

1401

The equal sign (=) is not specified in the test condition statement in the burst block.

1402

A VS channel number must be from 1 to 16.

MOST-50, ASX/V-50

A VS channel number must be from 1 to 14.

1403

Data of VS1 to VS12 must be -35 V to +35 V. Data of VS13 to VS16 must be -20.48 V to +20.48 V.

MOST-50, ASX/V-50

Data of VS1 to VS12 must be -35 V to +35 V. Data of VS13 and VS14 must be -20.48 V to +20.48 V.

1404

IN channel number must be 1 to 4.

MOST-50, ASX/V-50

IN channel number must be 1 to 8.

1405

IN V_{IH} must be -16.380 V to +16.380 V.

1406

IN V_{IL} must be -8.190 V to +8.190 V.

1407

V_{IH} is not equal to or greater than V_{IL} in the IN statement.

1410

OUT channel number must be 1 to 2.

MOST-50, ASX/V-50

OUT channel number must be 1 to 8.

1411

OUT V_{OH} must be from -16.380 V to +16.380 V.

1412

OUT V_{OL} must be from -16.380 V to +16.380 V.

1413

VT channel number must be 0 to 1.

MOST-50, ASX/V-50

VT channel number must be 1 to 8.

1414

VT data must be from -8.190 V to +8.190 V.

1415

Not used

1416

Not used

1417

Not used

1420

DC is not specified in the START DC statement or it is incorrect.

Example:

```
START UCD
START┘
```

1421

EXT specification is missing in SEND EXT statement or is incorrect.

Example:

```
SEND EXT  
SEND↵
```

1422

A parenthesis is missing from the address specification of the SEND EXT statement.

Example:

```
SEND EXT #123456) #100  
SEND EXT (#123456#100
```

1423

The address is not specified correctly in the SEND EXT statement.

Example:

```
SEND EXT (X Y Z) #100  
SEND EXT (↵
```

1424

The address is not specified correctly in the SEND EXT statement.

The range of an address is from #100000 to #FFFFFF.

1425

The data is not correctly specified in the SEND EXT statement.

Example:

```
SEND EXT (#100000) XYZ  
SEND EXT (#100000)↵
```

1426

The data is not correctly specified in the test condition statement.

Example:

```
VS1=ABC  
IN2=XYZ
```

1427

The units of the data are not specified in the test condition statement.

Example:

```
OUT1=3, 4V  
OUT1=3V, 4
```

1430

An illegal unit was used in the test condition statement.

Example:

```
VT1=2.0KV  
VT2=3.5R
```

1431

Overflow occurred at the test condition statement data internal operation.

Set a higher unit value.

Example:

```
VT3=9999999V
```

1432

There is no character string specified following WAIT in the WAIT statement or it is incorrect.

1433

The source range is not correctly specified in the VS statement.

1434

There is no time data specified.

1435

The decimal point is not correctly specified in the time data.

A decimal is specified in the data without units or more than one point is specified.

Example:

```
TIMER=123.4  
TIMER=12.3.4MS
```


1436

Time unit does not correspond to any prescribed unit. Or else # or alphabetic character has been used in data with unit.

Example:

```
TIMER=123.4PS  
TIMER=ABOMS
```

1437

Time data is not in the allowable range.

Example:

```
TIMER=99.9NS  
TIMER=409.6S  
TIMER=8000
```

1440

The time data must be specified in not more than 10 characters, excluding # and the units.

1441

The source range is not correctly specified in the VS statement.

1442

The units of the source range in the VS statement are incorrect.

Example:

```
VS1=5.0V, R8A
```

1443

Up to 14 test condition statements can be specified in a burst block.

1444

An invalid control statement other than FMA was described after the AFM PATTERN statement several times.

1445

An invalid control statement was described after the AFM PATTERN statement.

1446

No PATTERN was described after AFM.

1447

The line was not ended with CR.

1450

More than 500 FMA statements were described.

1451

There is no "=" specification.

1452

Data is larger than the value specified in RDX.

1453

Data is larger than the maximum value.

1454

Data is less than the minimum value.

1455

An invalid data was described in the NBIT statement.

Example:

x5-4

1456

AMIN data is larger than AMAX data.

1457

AMIX data exceeded AMAX.

1460

Parameters other than HS, LS, MS were described in the RATE statement.

1461

Invalid data was described in FMA.
(The same patterns are used.)

1462

The number of the patterns exceeded AMAX.

1463

Patterns in one data exceeded the number of patterns specified with the BITSIZE statement.

1464

The number of parentheses has exceeded the maximum value.
Only 127 parentheses can be used.

1465

An error occurred in the description included in the parentheses.
Example:

```
X=X0 .AND. (X1 .OR. X2)
```

1466

The number of operational elements has exceeded the maximum value.
Only 50 operational elements can be used.

1467

Wrong specification in SUB ADDRESS statement.

1470

Current clock cannot be designated for TPAUSE of REGISTER statement.

1471

Wrong specification in SUB MODE statement.

1472

MAIN START nor SUB START statement cannot be written in MODE SYNC.

1473

START statement cannot be written in MODE ASYNC or MODE ALOCK.

1474

The sequential control instruction which cannot be executed with SUB ALPG is specified.

1475

The register which does not exist in SUB REGISTER is specified.

1476

When an INC instruction is specified during consecutive steps

```

      :
      INCn
      INCm
      :

```

At the time, if $n = m$, the latter INC does not operate correctly.

1477

When JNI instructions with the same index register continue, they do not operate correctly.

Example:

```

      :
      JNI1 ST0
      NOP
      :
ST0:  JNI1 ST1
      :

```

In the above example, however, if branching destination is specified to the same address as that instruction, this problem does not occur.

1500

If JNIm instruction follows JNInI (or JNInD) instruction and both use the same index register, JNIn instruction refers to the content of the index register which is not incremented (or decremented) by JNInI (or JNInD) instruction.

Example:

```

      :
      JN11I ST0
      NOP
      :
ST0:  JN11 ST1
      :

```

1501

If STIm instruction follows JNInI (or JNInD) instruction and both use the same index register, STIn instruction does not operate.

Example 1:

```

      :
      JN11I ST0
      ST11
      :

```

Example 2:

```

      :
      JN11I ST0
      NOP
      :
ST0:  ST11
      :

```

1502

Not used

1503

If INCm instruction is specified on the next step of JNInI (or JNInD) instruction and both use the same index register, INCm instruction does not operate.

Example 1:

```

      :
      JN11I ST0
      INC1
      :

```

However, the above problem does not occur in the sequence as shown below.

Example 2:

```

      :
      JNII ST0
      :
ST0:  INC1
      :
```

1504

Two or more types of control bits N, T and O cannot be described in the same step.

Example:

```

      :
      NOP N T
      :
```

1505

In PAUSE mode, control bit T cannot be specified on the step of OUT instruction.

1506

If the repeat counter (RC) is set by STRC instruction, the set data becomes valid on the second step beneath the step of STRC.

```

STRCm
NOP   : Provide a space for one step or more.
NOP N: m becomes valid on this cycle.
```

1507

MMA nor MMB cannot be specified on the cycle of SET instruction.

1510

When an instruction using the index register 8 follow FLGLI1 instruction, that instruction does not operate correctly.

Example 1:

```

FLGLI1 ST0
JNI8    ST1
      :
```

Example 2:

```

      :
      FLGLI1 ST0
      :
ST0: JN18   ST1

```

1511

The register operation command cannot be placed in the WAIT command cycle.

Only the following commands can be written in a cycle where the WAIT command is written:

W, R, M1, M2, C0-7, X<XB, Y<YB, TP<TP, D3<D3, D4<D4, N<N, Z<Z, RF<RF

1512

Control bits of T and O cannot be specified on the cycle of WAIT instruction.

1513

The STPS or STEL command must be written for each module.

The module must end with one of the following commands, so as not to let ALPG precede the next module command: STPS, STFL, JMP, RTN, and FLGJ1.

1514

The TS_n, the control bit, cannot be written in the auto nibbling mode or the auto paging mode. Note that "TS1" is not checked.

1515

If multiple START statements are written in a single module, the module is divided into multiple blocks. When this occurs, one of the next two conditions must be satisfied: a. The lead address of a block follows the last address of the previous block. b. A block ends with one of the following commands: STPS, STFL, JMP, RTN or FLGLI1.

1522

Data in DATA DEFINE statement is incorrect. Or, combination is incorrect.

1523

STPS, STFL and STOP instructions cannot be specified together with the following on the same step: ALPG instructions Control bits of N, I, T, O, TM1 and TM2.

1524

Label specification has an error.

Example:

```
LBL:
    ↑
    No specification on the line where a label is written.
```

1525

When OUTM is set in MODE statement, OUT instruction nor control bit O cannot be used.

1526

Control bits of O, TM2 and T (T is only for PAUSE) cannot be specified on the line of index instructions, JSR instruction or RTN instruction.

1527

The PDS1 DATA and PDS2 DATA statements in DATA DEFINE must specify the same data: EOR or EORINH data.

Example:

```
PDS1 DATA = D/FDA ; EORINH
PDS2 DATA = SD. XOR. FDB/SD. XOR. FDB ; EOR
```

The above specification is inhibited.

1530

Mnemonic for VRAM OPTION cannot be entered in SUB ALPG INSTRUCTION.

1531

The statement for level driver cannot be entered in the SUB side.

1532

The set values of XMAX or YMAX have exceeded the allowable range when LSBOUT or MSBOUT is specified by the MODE statement.

1533

An error occurs in address Z to be allocated to X or Y in ADDRESS DEFINE.

1534

An error occurs in address N to be allocated to X or Y in ADDRESS DEFINE.

1535

In ARIRAM DEFINE, different ARIRAM conditional expressions cannot be written to in the same module and to the same ALPG.

1536

If the mode is in the TPDIV mode, TPH2 or TP2 can be written.

1537

The number of address bits X, Y, Z which can be written to the right side of the Dn statement setting the ARIRAM condition is 12 in all Dn statements which are written after the ARIRAM DEFINE statement.

1540

The wrong bit is specified in address Z in the ARIRAM DEFINE statement.

1541

When INV ARIRAM is executed, address maximum value (XMAX, YMAX, ZMAX) of X, Y, and Z is as follows.

Example:

X=#FFF

Y=#FFF

Z=#FF

1542

ARIn specified by the data link statement is not defined by the ARI statement.

1543

A mnemonic name for VRAM OPTION MAIN cannot be described as a MAIN ALPG INSTRUCTION.

1544

A mnemonic name for VRAM OPTION SUB cannot be described as a SUB ALPG INSTRUCTION.

1545

More than one mnemonic name for VRAM asynchronous transfer must not be specified on a single line.

1546

A single module must not have both a mnemonic name for synchronous RAM-SAM transfer and a mnemonic name for asynchronous RAM-SAM transfer at a time.

1547

A single module must not have both a mnemonic name for VRAM OPTION II and earlier and a mnemonic name for VRAM OPTION III and later at a time.

1550

If the XYSWAP mode is used, PDS2=SUB should be specified by DATA DEFINE.

1551

The channel number is specified out of bounds in the DBM CHANNEL statement or CBM CHANNEL statement.

1552

Specification of the channel number is incorrect in the DBM CHANNEL statement or CBM CHANNEL statement.

1553

The DBM CHANNEL statement should be written before the DBMAP statement (DBMA statement for T5500). The CBM CHANNEL statement should be written before the CBMA statement.

1554

The start address of the DBM is specified out of bounds in the DBMAP statement (DBMA statement for T5500). The start address of the CBM is specified out of bounds in the CBMA statement.

1555

Specification of the start address of the DBM is incorrect in the DBMAP statement (DBMA statement for T5500). Or, specification of the start address of the CBM is incorrect in the CBMA statement. The start address number is smaller than the former one or is duplicated.

1556

DBMAP statement (DBMA statement for T5500) should be specified before the DBM data field. Or, CBMA statement should be specified before the CBM data field.

1557

The data specified in the DBM or CBM data field is incorrect. It does not suit the regulated pattern.

1560

The number of the DBM data exceeds the number of bits specified by DBM CHANNEL statement. Or, the number of the CBM data exceeds the number of bits specified by CBM CHANNEL statement.

1561

For DBM pattern, DBMAP statement (DBMA statement for T5500) should be written before REPEAT statement. For CBM pattern, CBMA statement should be written before REPEAT statement.

1562

The number of repetition times or the number of data to be repeated is out of bounds.

1563

The number of data to be repeated in the REPEAT statement does not match that of the data in the DBM or CBM.

1564

The field division of the DBM data field or CBM data field is incorrect.

1565

The "-" cannot be specified in the first line of the DBM data field or CBM data field.

1566

The number of repetition times or the number of data to be repeated is incorrect.

1567

The FJN18 command cannot be described in the mode except HSMATCH mode.

1570

The DLOAD or DSL command cannot be specified if SRDOUT or SDTOUT is not specified in the MODE statement. In addition, the D<TP1 or D<TP2 command cannot be specified if TPM36 is not specified in the MODE statement.

1571

The XYSL command cannot be described when LSBOUT is described in the MODE statement.

The XYSR command cannot be described when MSBOUT is described in the MODE statement.

1572

Commands that cannot be described after SUB START or ! exist.

1573

MAIN PCC and SUB PCC statements cannot be written.

1574

MAIN START and SUB START statements cannot be written.

1575

The PCC statement cannot be specified in the 2WAY or the 4WAY mode.

1576

MAIN and SUB cannot be specified in the 4WAY mode.

1577

The register name DBMA, DBMLPB or DBMLPE should be a multiple of 2 in the 2WAY mode, or be a multiple of 4 in the 4WAY mode.

8. *SOCKET* Compilation Error Codes (1600 to 1677)

Error codes are represented in octal in the table.

8. 1 Error Message List

1600

The program does not begin with `SOCKET`.

1601

A meaningless character was specified.

Example:

```
A0-3=PD5, _ PD6, PD7
```

1602

The numeric section in the program exceeds the limit.

1603

A reserved word was used for registering the pin name.

Example:

```
BIT=PD2
```

1604

A numeric character is inserted between alphabetic characters in the pin name.

Example:

```
A3×B120
```

1605

The item was already specified.

1606

A different format was used for the item specified in the line.

1607

The start value and the end value in the continuous specification (XX-XX) are the same.

Example:

```
MA10-10= .....
```

1610

A required item is not specified in the line.

Example:

```
WE=PD3 ____  
The tester pin number is not specified.
```

1611

A reserved word required for the line is missing.

Example:

```
DEFINE _____
```

1612

Up to 96 user symbols can be specified.

1613

The numbers of the devices and the stations are not specified.

1614

The number of bits of the device is not specified.

1615

The number of bits specified is not within the allowable range.

Example:

```
BIT=3
```

1616

The number of PPSs or VSs is not specified.

1617

The number of IOPINs or DRPINs is not specified.

1620

The asterisk (*) is missing in the IOPIN or DRPIN specification.

Example:

DRPIN =_4DR

1621

There is no BIT specification.

1622

There is no PPS or VS specification.

1623

There is no DRPIN specification.

1624

There is no IOPIN specification.

1625

There is no DUT# specification.

1626

The number of pins in the DUT# description is not equal to that in the DUTn specification.

Example:

DUT#=VS1, PD1-3
DUT1=PPS3, PD1-4C1

1627

The DUT number on the tester side is not determined.

1630

More than four PIN numbers are specified for the same pin number (comparator pin). This applies to driver pins.

Example:

```
DUT#=VS1, PD1
DUT1=PPS3, PD1C1
DUT2=PPS4, PD2D1
DUT3=PPS5, PD3A1
DUT4=PPS6, PD4B1
DUT5=PPS7, PD5C2
```

1631

The maximum number of pin numbers for which more than one PIN number is specified is 44.

1632

All pins specified as the same DUT must be able to be connected to the same DC measuring unit.

1633

The DUT number on the tester side exceeds the total number of devices.

1634

The number of bits is not equal to the number of comparator pins.

1635

An unusable pin number was used.

1636

The same character (A, B, C, or D) must be suffixed for pins 1 to 32 or 33 to 50 in the same DUT.

Example:

```
DUT1=PC33A, PC34B
```

1637

More than four PIN numbers are specified for the same pin number (comparator pin). This applies to comparator pins.

1640

VSn must be specified in the range of 1 to 4 and in ascending order.

MOST-50, ASX/V-50

In the simultaneous measurement definition, PPSn and PPSn+16 do not belong to the same PPS group of DUT# specification. (n=1 to 12)

Example:

```
DUT#=PPS1, PPS2
DUT1=PPS1, PPS5
DUT2=PPS2, PPS17 ←Error
```

1641

In the simultaneous measurement definition, different kind of pins are specified for a DUT.

Example:

```
DUT#=PPS1=PD1, P33
DUT1=PPS1=PD1A1, P33B ←Error
```

1642

In the simultaneous measurement definition, PPS statement value does not coincide with PPS number practically defined.

Example:

```
PPS=3
DUT#=PPS1, PD1, P33
DUT1=PPS2, PD1A1, P33A ←Error
```

1643

In DUT# statement, numbers of PPS are not in ascending order.

Example:

```
DUT#=PPS1, PPS3, PPS2 ←Error
DUT1=PPS1, PPS4, PPS17
```

1644

DR side pin number and/or I/O pin number of DUTn does not correspond to those of DUT#.

Example:

```
DUT#=VS1, PD1, P33  
DUT1=VS2, PD1A1, P2A ←Error
```

1645

PPS, PD, P and/or PC specification of DUTn does not correspond to those of DUT#.

Example:

```
DUT#=VS1, PD1, P33  
DUT1=VS2, P33A, PD1A1 ←Error
```

1646

In the simultaneous measurement definition, DUT value does not coincide with the maximum number of actual DUT number.

1647

DUT number cannot be used for the PIN MODE currently set.

1650

Pin numbers of DUT# and DUTn are not coincident.

Example:

```
DUT#=PPS1, PD1, P33, PD34  
DUT1=PPS1, PD1A1, P33A, PD34A  
DUT2=PPS2, PD1B1, P33B, PD35B ←Error
```

1651

Pin number designation of DR side is incorrect.

1652

In the simultaneous measurement definition, pin 1 or pin 13 is missing in 1DUT.

1653

Pin number specification in I/O side is incorrect.

1654

No pin number specification is made suitable to BIT configuration declaration.

1655

Pins in DR side do not exist in the pins defined by DUT#.

1656

In the simultaneous measurement definition, when two of DUTn have the same kind of pin, both pin 1 and pin 13 are designated for 1DUT.

Example:

```
DUT#=VS1, PD1, PD2, P33
DUT1=VS1, PD1A1, PD13A1, P33A ←Error
DUT2=VS2, PD14A1, PD15A1, P41A
```

1657

In the simultaneous measurement definition, total count of pins or VSs has exceeded the maximum value.

1660

Number of pin synonymous table has exceeded 64.

1661

There is no socket file name.
Or, there is an error.

1662

No file name in HANDLER or PROBER designation.

1663

No PIN MODE.

1664

Number of user-defined symbols has exceeded the maximum number.

1665

Simultaneous measurement definition is not correct for the current PIN MODE.

1666

More than 201 (or less than 94) pins have been defined in the DR pin, with DUT# having a range of less than 94 pins (or more than 201 pins).

```
DUT#=VS1 PD1 P33
DUT1=VS1 PD201A P33A1
           ↑
        Error
```

1667

FMALL (FMALL1) cannot be specified.

1670

PIN MODE = E cannot be used with CHTYPE2.

1671

L8 and FMALL1 cannot be used in CHTYPE2.

1672

In the HVPPS specification, the channel No. in the left part should be equal to the minimum value of that in the right part.

1673

In the simultaneous measurement definition, the number of PPSs specified by DUT# is not equal to that specified by DUT.

1674

In the simultaneous measurement definition, the pin No. specified in the DUT has already been specified.

1675

The pin number specified by the DUT# is not equal to the minimum value specified by the DUTn.

1676

The pin number specified by the DUT# has been not specified by the DUTn.

1677

The VS channel combinations listed below cannot be used together.

VS5 and VS9, VS6 and VS10, VS7 and VS11, VS8 and VS12

9. *PRO (or SOCKET/MPAT) Compilation Error Codes (2000 to 2777)*

Error codes are represented in octal in the table.

9. 1 Error Message List

2000

In a name specification that combines alphabetic and numeric notation, more than 65535 cannot be specified for the numeric part.

Example:

```
ABC123456
    ↑
An error occurs.
```

2001

Specification of "TO" is missing.

Example:

```
GO _____ LABEL
    ↑
Specification of "TO" is necessary.
```

2002

There are too many decimal points (.) specified in a value specification (real number).

Example:

```
10..53      10.5.3
```

2003

The specified order of the reserved words is not correct.

Example:

Error: GO TO PRO 100 OF TEST 1

Correct: GO TO TEST 1 OF PRO 100

2004

A numerical value greater than eight digits cannot be specified.

Example:

123456789, 012345678,
1234. 56789

2005

Illegal characters were used.

2006

The (or < is not closed. That is,) or > must be specified.

2007

A variable and an expression cannot be specified.

2010

The specified numerical value data is not in the allowable range.

2011

The label name or variable name must be a character string (alphanumeric) which begins with an alphabetic letter.

2012

A constant, variable, or label name is specified too many or too few times.

2013

The constant must be integer or logical type data without the D specification.

The variable must have the INTEGER, LOGICAL, or nonspecified attribute and must be no DIM, DIM, or an expression.

2014

The constant must be either an integer or logical type constant which has no D specification.

2015

A character type variable, non-subscripted DIM variable, table variable, string variable, character type constant data, or a pin list variable must not be specified.

2016

The constant must be a real number which has units of time.

The variable must have either the REAL or nonspecified attribute and must be no DIM, DIM, or an expression.

2017

The constant must be integer or logical type data without the D specification.

The variable must have an INTEGER, LOGICAL, or nonspecified attribute and must be no DIM, DIM, an expression, or pin list variable.

2020

The constant must be a real number with units of either electric current or voltage.

The variable must have either the REAL or nonspecified attribute and must be no DIM, DIM, or an expression.

2021

The constant must be a real number with units of time or integer or logical type data without the D specification.

The variable must have an INTEGER, LOGICAL, REAL, or nonspecified attribute and must be either no DIM, DIM, or an expression.

2022

The constant must be character data.

The variable must have the CHARACTER or nonspecified attribute and must be no DIM, DIM, an expression, or a string variable.

2023

The constant must be real number data with units of voltage.

The variable must have either the REAL or nonspecified attribute and must be no DIM, DIM, or an expression.

2024

Character data, and integer or logical data with the D specification cannot be specified for a constant.

Variables which have the CHARACTER attribute, non-subscripted DIM variables, table variables, and string variables cannot be specified as variables.

2025

A constant cannot be specified.

The variable must have the CHARACTER or nonspecified attribute and must be DIM, no DIM, an expression, table variable, string variable, or non-subscripted DIM variable (of the CHARACTER attribute).

2026

A constant cannot be specified.

The variable must have the INTEGER, LOGICAL, REAL, or nonspecified attribute and must be either no DIM or DIM.

2027

A constant cannot be specified.

The variable must have the INTEGER, LOGICAL, REAL, or nonspecified attribute and must be no DIM, DIM, non-subscripted DIM variable, or a table variable.

2030

The constant must be integer or logical type data without the D specification.

String variables and pin list variables cannot be specified for a variable.

2031

The constant must be a real number which has units of time.

The variable must have either the REAL or nonspecified attribute and must be no DIM, DIM, an expression, or a pin list variable.

2032

A string variable must be used.

2033

The constant must be integer or logical type data without the D specification.

The variable must have the INTEGER, LOGICAL, or nonspecified attribute and must be no DIM, DIM, an expression, or a pin list variable.

2034

The constant must be integer or logical type data without the D specification.

The variable must have the INTEGER, LOGICAL, or nonspecified attribute and must be no DIM, DIM, an expression, table variable, or a non-subscripted DIM variable.

2035

The constant must be an integer or logical type data, or character data.

The variable must have the INTEGER, LOGICAL, CHARACTER, or nonspecified attribute and must be no DIM, DIM, an expression, or a string variable.

2036

The constant must be an integer or logical type data, or character data.

The variable must have the INTEGER, LOGICAL, CHARACTER, or nonspecified attribute and must be no DIM, DIM, an expression, string variable, table variable, or a non-subscripted DIM variable.

2037

A constant cannot be specified.

The variables must have the INTEGER, LOGICAL, CHARACTER, or nonspecified attribute and must be no DIM, DIM, or a string variable.

2040

The constant must be a real number without units.

The variable must have the REAL or nonspecified attribute and must be no DIM, DIM, or an expression.

2041

The arithmetic expression is too long. (It must fit within one line.)

2042

A reserved word was used in an expression.

2043

The built-in functions, constants, and variables cannot be specified after a constant, variable and/or a right parenthesis.

2044

A reserved word is missing.

Example:

ON _____ : LABEL



Here, a reserved word must be specified.

2045

The specified value is too big.

2046

The variable name is already defined.

2047

There can only be three-dimensional array elements.

2050

There is an error in the specified numeric data.

2051

The name of the unit attached to the data is incorrect.

2052

Numerals cannot be added to this statement.

Example:

WRITEE1 MEASI0

2053

The decimal point "." was used incorrectly.

2054

The position of an operator is incorrect.

2055

The variable specification for a storage destination is for a working area (an expression).

Example:

INPUT X+1

2056

In character data specification, " " ", "?" or "<" is not closed.

2057

The number of "," is inadequate. Or, there is an error in the "," specification.

2060

The number of "(" and the number of ")" do not coincide. Or, it must be closed with ")".

2061

An arithmetic expression is not complete.

2062

There are more than nine nestings inside parentheses ().

2063

A reserved word, label name, or an inadequate character is specified where a constant, variable, or an arithmetic expression must be specified.

2064

Characters other than "0" to "9" and "." appear where numerical data beginning with "0" to "9" or "." must be specified.

2065

A constant, which is not an integer constant, is specified in a place where only an integer type constant can be specified.

2066

"[" or "(" must be specified.

2067

"(" or "[" is not closed. That is, ")" or "]" must be specified.

2070

":" must be specified.

2071

A character string is missing.

Example:

```
WRITE<:10>  
  ↑
```

Here, a character string must be specified.

2072

":LABEL", which is a specification for a branch destination, cannot be specified with this statement.

2073

":LABEL", which is a specification for a branch destination, is specified too many times.

2074

A non-subscripted DIM variable or a table variable cannot be specified in this position.

2075

The specified value for a subscript of an array variable (array element) is either negative, zero, or too large.

2076

The alteration specification for a pointer which assigns variables in a variable area cannot be made in a STRING declaration statement.

2077

The alteration specification value of a pointer which assigns variables in a variable area is too large.

2100

Reserved words cannot be used for a variable name.

2101

Only a one-dimensional array is allowed in a STRING variable declaration.

2102

Specification must be made by using an all DIM type variable.

Example:

```
DIM A (3, 3, 3)
DIM A (3, 3, 3)=1 : 2 : 3
      ↑
```

If the array variable has been defined, specification of array elements is not necessary.

2103

The result of the compilation for this statement is too large. The statement must be divided into two or more parts.

(One block of intermediate language can contain up to 420 words)

2104

After ".NOT.", it must be integer type or logical type.

2105

An overflow of a variable area occurred.

(The maximum capacity of a variable area is 256K words.)

2106

When an array variable which is already defined is to be specified again using a DIM declaration statement, there must be data set on the right side.

Example:

```
DIM A(3, 3)
DIM A=1:3
      ↑
```

Without this data, the result will be an error.

2107

A table variable cannot be assigned to an array variable.

2110

Only character data can be assigned to a variable with the CHARACTER attribute or a string variable. Character data cannot be assigned to variables that do not have the CHARACTER attribute.

2111

Data which exceeds the number of array variables cannot be set.

Example:

```
DIM A (3)=1, 2, 3, 4
                  ↑
          An error occurs.
```

2112

An overflow of a variable area occurred. (The number of words exceeded 256 K words.)

Or there are too many variables and/or label names used.

2113

A working area which is necessary for processing an arithmetic expression overflowed.

2114

There is an error in the label specification of a DO statement. For example, the specification does not begin with a letter or it has no previous reference label.

2115

There is an error in the control variable specification of a DO statement. In this case, a constant, arithmetic expression, non-subscripted DIM variable, table variable, pin list variable, string variable, and variables with a CHARACTER attribute cannot be specified.

2116

There are too many DO nestings. Only fifteen DO statement nestings are allowed.

2117

There are more than six table variable nestings. Or, there are more than nine table variables in a variable table.

2120

Calculations are conducted between one unit and another which are mutually incompatible.

2121

Real number data cannot be specified in a logical arithmetic expression.

2122

Calculations cannot be performed with character data.

2123

There is no equal sign (=) specification.

2124

The number of nesting of the IF statement exceeds forty.

2125

There is no specification for the conditional phrase or execution phrase of an IF statement.

2126

There is no specification for EXIT with respect to THEN ENTRY before ELSE ENTRY.

2127

There is no previous specification of THEN ENTRY, or ELSE ENTRY corresponding to an EXIT statement.

2130

The buffer has overflowed because too many IF statement were specified.
Up to 5000 IF statements can be specified.

2131

The wrong relational operator is specified for an IF statement.
Or, a character that is not permitted is specified.

2132

For a data file, a file name is specified which is not compatible with R or W.

2133

There is an error in the customer name or file name specification.

2134

Only variables can be specified.

2135

The name for a program must be PRO, SUBR, LIB, or SOCKET. Or, there is all illegal character in the specified program name.

2136

There is an error in the PRO program number specification. For example, a character other than an alphanumeric and \$ is specified, more than eight characters are specified, or there is no specification at all.

2137

There is no SOCKET file specified.

2140

The specified SOCKET file is too big.

2141

There is an error in the specified SUBR file name. For example, a character other than an alphanumeric and \$ is specified, more than eight characters are specified, or there is no specification at all.

2142

Either "&" or "CR" (carriage return) must separate the statements.

2143

A statement beginning with "%" must be a compiler pseudo instruction. That is, an unidentifiable compiler pseudo instruction was specified.

2144

There are more than ten nestings between "%IFE" or "%IFN", which is a conditional compilation pseudo instruction, and "%ENDC".

2145

The switch given to "%IFE" or "%IFN", which is a conditional compilation pseudo instruction, must be a letter.

2146

The number of "%ENDC" specifications is greater than for "%IFE" and "%IFN", which are conditional compilation pseudo instructions.

2147

There is no specification on the left side of a statement. Or a constant is specified on the left side.

Example:

1.0V=A+B, A+1.0V

2150

An arithmetic expression cannot be specified on the left side of a statement.

Example:

A+B=1.0V+A

2151

Table variables cannot be specified on the left side of a statement.

Example:

```
TABLE A
:
TEND
A=1.0V
```

2152

In an arithmetic expression statement, a reserved word other than a label name or a built-in function is specified on the right side.

2153

"." is specified for a label name or a reserved word.

2154

A reserved word is specified which cannot be used for a label name or a variable name. Or, the specification begins with a reserved word which must not come at the beginning.

2155

The label name is multiply defined.


2156

DO ranges cross each other where there are two or more DO statements specified.

Example:

```
DO AA I=1, 2
DO BB J=1, 2

AA :
BB :
```

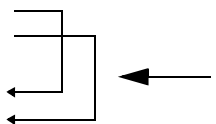

Crossed.

2157

"@" cannot be specified in one data unit, one name, and/or one reserved word. "@" must always be specified at a separating position.

Example:

```
VSIM1=5V, R(8V), M(10@.J
OMA)
      ↑
      This is an error.
```

2160

An IF statement is specified before the EQUATE statement.

2161

Data other than an alphanumeric character string which begins with a letter appears in a place where a letter should be specified.

2162

There are too many arguments in an EQUATE statement. Up to 16 arguments are allowed. Or, there is no argument although "()" is specified.

2163

An undefined argument is specified in an EQUATE statement.

Example:

```
EQUATE ABC (X, Y)="EFGHI"Z"OPQRST" ...
              ↑
              Z is not defined.
```

2164

There is no specification on the right side of an equal sign "=".

2165

A pin name and pin list variable must be specified on the right side of a PINLIST declaration statement. Only a pin name and/or a pin list variable can be specified.

2166

An incorrect pin name is specified.

Example:

```
P1.0    PD0.1
```

2167

In each ACLK, BCLK, CCLK, STRB, DREL, DRET, and TGCLK statement, the phase number is 0, negative, or too large. Or, there is no specification.

2170

When a channel number or phase number is specified using "()", a channel or phase number must not be specified before the "()".

Example:

```
ACLK3(X)=..., ...PD5(X)=..., ..., ...
```

2171

When specifying a comparator side pin (when "PCn = "), driver information (reserved words) cannot be specified.

Example:

```
PC3=OUT1, IN3, STRB1
           ↑
       This is driver information.
```

2172

When specifying a driver side pin (when "PCn = "), comparator information (reserved words) cannot be specified.

Example:

```
PD10=IN1, ACLK6, OUT1
                  ↑
            This is comparator information.
```

2173

A numeral is incorrectly added to a reserved word.

Example:

```
ATT2  LOAD15
```

2174

A table variable or pin list variable cannot be used in an assignment statement.

2175

The specification of a table variable, pin list variable or string variable is too long.
Or, the data terminator is wrong.

2176

Here, integer data or logical data must be specified.

2177

The specified data value is 0, negative, or too large.

2200

The sum of the specified pin numbers exceeds 256.

Example:

```
P1 - 192, 2 - 191=
```

↑

The sum of these two pin numbers is 382.

2201

A reserved word is specified in the wrong place.

2202

In pin information setting, a mixed specification for a constant and variable and for mnemonics (reserved words) is not allowed.

2203

There are too few or too many specifications of constants, variables, and/or reserved words.

2204

The value of the numerical part of a reserved word to which a numeral can be added is too small or too big.

2205

A pin list variable cannot be used here.

2206

In pin information setting, "STRBn" is specified two or more times.
Example:

```
PC5=STRB1, STRB3
```

2207

In pin information setting, no other pin information can be specified when "OPEN" is specified. However, PDS can be freely specified by using "<>".

2210

In the pin specification, the number of pins and consecutive specifications in <> do not agree.
Example:

```
PD1 - 5=IN1, ACLK1, <X0-3>
```

↑
There are five
pin numbers.

↑
There are four PDS's.

2211

A consecutive specification cannot be made.

2212

Specification of "TO" is missing.

2213

The without DIM or with DIM variable must be specified here.

2214

There is an error in a label name specification.

2215

There is an error in a file name specification.

2216

The without DIM, with DIM, or string variable must be specified here.

2217

">" is not specified.

2220

There is an error in a table name specification.

2221

"(" is not specified.

2222

An operation cannot be performed on a table variable, pin list variable, or a string variable.

2223

The specification for the VS unit number must be between one and four.

2224

The data specification necessary for this statement is made twice.

Example:

VS1=2.0V, R8V, 5.0V

2225

Specified value of the range is not in the allowable range.

Example:

VS1=2V, R33V

2226

The minimum necessary data for this statement is not specified.

That is, there is not enough data.

Example:

```
VS1 = R32V (The voltage to be applied is not specified.)
```

2227

A constant, variables, or an arithmetic expression is specified in a place where a reserved word or label name must be specified.

2230

The specification for the VS unit number must be between one and four.

2231

The specification for the sequence number of a TIME statement must be between 0 and 11.

2232

When a testing range or a source range is specified, the specified unit does not match the testing mode.

Example:

```
ISVM1=10MA, M300UA
```

↑
The measurement range must be with unit of voltage.

2233

Only a source range cannot be specified without an impressed electric current or voltage value specification.

Example:

```
ISVM1 = R10MV (Impressed electric current must be specified.)
```

2234

There are too many or too few reserved words specified.

2235

The variables for storing the results of a measurement from a MEAS statement must have the REAL or nonspecified attribute and must be either a no DIM or DIM variable.

Or, there are too many or too few variables specified for storing the results.

2236

Variables or an arithmetic expression must be specified here.

2237

Reserved words are specified which cannot be used in combination.
Or, a reserved word is specified twice.

2240

There are too many or too few file names specified.

2241

The setting value for the IN statement must satisfy the following condition:

$$V_{IH} \geq V_{IL}$$

2242

A type declaration name is not specified in an EXTERNAL statement.

2243

This is an undefined variable name.

2244

This is not an argument name.

2245

No character is specified for a character constant.

Example:

A=" "
 ↑

There is no character data.

2246

An operation is performed between unallowable data.

For example, character data is used, a real number is used in a logical operation, or the data types do not agree.

2247

An item (reserved word) which cannot be included in the READ statement is specified.

Example:

```
READ AB TO X
```

2250

An item (reserved word) which cannot be included in the SEND statement is specified.

Example:

```
SEND AB TO X
```

2251

CREAD! n POINT TO XX is not allowed.

2252

A constant specification and a variable specification cannot be mixed. Specify only with one of them.

2253

Driver side pin specification is not allowed.

Specify the pin by using PCn, PC(X), Pn, P(X).

2254

A feature that is already defined is redefined in this statement.

2255

There is an error in the file specifier.

2256

The reserved word must not be specified here. It must be specified after another reserved word.

2257

Either V_{OH} or V_{OL} must be specified. Or, either V_{IH} or V_{IL} must be specified.

Example:

```
IN1=*, * (This results in an error.)
```

2260

This is not a condition name. Or the subroutine name must be specified after ":".

2261

":" cannot be specified immediately after character data in a CHARACTER or a DIM declaration statement.

Example:

```
DIM A(3, 3) = "ABC" : "FEG"
                    ↑
```

2262

!" (repeat number) cannot be specified immediately after character data in a CHARACTER or a DIM declaration statement.

Example:

```
DIM A(10) = "ABC" !3
                  ↑
```

2263

When a relative line number is specified, the PRO number cannot be specified.

Example:

```
GO TO LINE . +3 OF PRO 100101
```

2264

The specifications for the DUT pin name, user pin name, and tester pin number are mixed.

Example:

```
PC1, MA1, PC2, MA2=1, 2
```

2265

One line can contain up to twenty pin names when specifying DUT pin names.

2266

The pin names in one line must be the same when specifying DUT pin names.

Example:

```
PC1 and PD2 are errors.
```

2267

The same subscript values in a specification using "-" (hyphen) have no meaning.

Example:

```
PC1-1
```

2270

An appropriate numeral string is required at the end of a mnemonic in a specification using "-".

Example:

```
MAX  -10  
  ↑
```

An appropriate numeral string is required.

2271

The mnemonic, DUT pin name, and the tester pin are already specified.

2272

The DUT pin number exceeds CPMAX or DRMAX.

2273

The tester side pin number, DUT pin number, or DUT pin name must be specified in the pin correspondence definition of a socket.

2274

The DEFINE SYMBOL statement must be specified at the beginning of a user symbol definition of a socket.

2275

Up to 96 user symbol definitions of a socket can be used.

2276

The numbers of mnemonics, DUT pin names, and tester pins that can be specified in a line must be the same.

2277

When a character string is replaced according to the setting of the EQUATE statement or the DMACRO to DEND statements, the number of characters in the line that contains the replaced string exceeds the maximum value.

2300

The number of specified arguments for a character string which is replaced by an EQUATE statement exceeds 16. Make the number 16 or less.

2301

A file name variable cannot be specified in the %INSERT or INSERT statement.

2302

A magnetic tape cannot be specified in a %INSERT or INSERT statement.

2303

In the %INSERT or INSERT statement, the terminator must be "CR".
Or, the specifier "ASC" is attached to a file name.

2304

No digit is specified after "-" or "," in a consecutive specification using a hyphen "-" or a comma ",".

2305

The number of alphanumeric characters exceeded 8 after a character string was substituted in the consecutive specification with a hyphen "-" and a comma ",".

2306

The converted character string is not defined in a socket table when a character string was substituted in the consecutive specification with a hyphen "-" and/or a comma ",".

2307

The dummy argument must be defined as a variable with DIM before a dummy argument of a subroutine is used as an array variable (variable with DIM).

2310

A customer name is multiply defined.

Example:

```
ABC:ABC:XYZ
```

2311

The customer name cannot be specified here.

2312

The character string "~" in an EQUATE statement is too long. Make it 800 characters or less.

2313

The /R global switch cannot be attached to the translator (SYS PRO.TR) for the T3331.

 Tip

The /R is used for carrying out T3300 compilation.

2314

"DECLARE T3300" cannot be specified in the translator (SYS PRO.TR) for T3331.

 Tip

"DECLARE T3300" carries out T3300 compilation.

2315

A T3331 statement was specified when carrying out T3300 compilation.

2316

A T3300 statement was specified when carrying out T3331 compilation.

2317

The file label (individual file id. name) in this field of the command line must be specified in 8 characters or less.

2320

A variable other than the non-subscripted DIM is specified. In this field, no variable other than the non-subscripted DIM variable can be specified.

2321

Only BEGIN and END can be used in the BURST REPEAT statement block. INSERT and DELETE cannot be specified.

2322

"*" specification cannot be made in the following cases.

```
START MPAT (4, v)
START DPAT (4, v)
START LPAT (4, v)
```

2323

WRITE mode and a random file are not specified in "APPEND!n W file name".

2324

The specified constant data type is not proper.

Example:

```
VSIM UDC=5V, M(8MA), 1V
```

2325

It is not a reserved word that can be specified after "/".

Furthermore, no constant or variable can be specified after "/" specification.

2326

M(AUTO) designation cannot be used for MDC.

2327

M range cannot be specified for ISVM MDC.

It is set in 8V.

2330

Repeated designation is not used in this section.

2331

Timing set cannot be specified in this section.

2332

Branch destination designation ":label-name" cannot be specified in this statement.

2333

Constant and variable designations and reserved character designations cannot be combined.

2334

Only a pin list is permitted.

2335

Only a pin list, pin constant, or pin variable can be specified.

Example:

P1-10P (X)

2336

Up to 60 ASM object program insertions are permitted in a single program.

2337

EQUATE statement and DMACRO statement definition names are specified by up to 16 characters including alphanumeric characters and hyphens ("-") beginning with an alphabetic character.

2340

The maximum DMARCO statement argument number is 16.

2341

PAT CREATE and PAT CHANGE statements can be specified up to ten times within a single program.

2342

An illegal simultaneous designation combination has been specified in the "MODE m₁, m₂ ..." designation section.

2343

The DUT pin number specified in PAT statement "CHANNEL" and "%CHANNEL" is greater than the MAX DUT pin number of the SOCKET FILE. Or, a pin number which cannot be specified below 0 is specified.

2344

The DUT pin number specified by PAT statement "CHANNEL" and "%CHANNEL" is multiply specified.

2345

The total number of DUT pin numbers specified by PAT statement "CHANNEL" and "%CHANNEL" is greater than 256.

2346

Error in condition statement designation.

2347

Too deep WHILE to DO nesting.

2350

DO is not specified in WHILE to DO.

2351

Too deep REPEAT to UNTIL nesting.

2352

No REPEAT designation corresponding to UNTIL.

2353

Too deep CASE to OF to END nesting.

2354

CASE to OF to END is not in the correct format.

2355

The number of nesting of the IF statement exceeds forty.

2356

The specified MACRO name is not defined.

2357

The total number of channel numbers in a PAT CHANGE statement, PAT CREATE statement, or %CHANNEL statement does not match with the total number of TTB patterns.

2360

A normal mode, realtime waveform control mode, or a realtime sense control mode designation is not correctly specified in the pattern data specification. Patterns are determined in channel units. Thereafter that channel cannot be changed to another mode.

2361

"%CHANNEL" is not specified.

2362

No M range designation. When there is no "*" designation for VSIM/ISVM, that is, for full designation, the M range must always be specified.

2363

Only the constant can be specified. Integers, logical numbers, and characters are permitted.

2364

"/H" and "/M" cannot be specified in a PAT CREATE statement or SEND SPAT statement.

2365

An array was defined in the argument list. The array definition is not required for the argument name to be declared externally.

2366

Nesting of FUNCTION statements is not permitted.

```

FUNC      A ( . . . . . )
. . . . .
FUNC      B ( . . . . . ) -X
END
END

```

2367

The same user-defined function name already exists.

2370

The number of cells, and the [class name] must be specified in HIDAR.

2371

The ACLKn specification for the specified waveform mode is invalid in the PIN statement. That is, there is no ACLKn specification, or it is duplicated.

2372

The BCLKn (CCLKn) specification for the specified waveform mode is invalid in the PIN statement.

That is, there is no BCLKn (CCLKn) specification, or it is duplicated.

2373

Constants must be an integer or a logical number (three or fewer words). Variables must be of integer or logical type, or no type, and must be either with DIM, without DIM specified, an operational expression, or with the all DIM specification.

2374

MEAS or MMEAS statements with "/C" specified (GO/NG) cannot include the [class name] specification.

2375

An invalid combination of pattern file names is specified. That is, the combination does not match with the pattern transfer mode or test mode.

2376

No "*" can be specified here.

2377

A pin specification is missing.

2400

The pin number does not match the PDS. That is, an illegal PDS was specified for that pin.

2401

The driver pin and comparator pin having the different numbers were specified in the socket program.

2402

Certain items cannot be specified in a COUNTER statement, depending on the first described function (FREQA, FREQC, PERIODB, TIATOB, or TIBTOA).

2403

An invalid mnemonic is specified in the statement.

2404

The specified reserved character combination is functionally invalid.

2405

When %EXT is specified, file name/M must be specified in the compilation command.
Or, when %EXT is not specified, file name/M must not be specified in the compilation command.

2406

The version of SYS PRO.TR is different from that of the simultaneous measuring table SYS FCTABLE.

2407

A hyphen ("-") is missing.

2410

This must be a real or integer number with D (double-precision).
(only for the constant).

2411

This must be a character string.

2412

This must be an integer or real number with units of time.

2413

The specification item must be constant data with resistance unit (R), a variable with or without DIM and of real or unspecified type, or an expression.

2414

Constant data with a frequency (Hz) unit, a variable with or without DIM and of real or unspecified type or an expression must be specified.

2415

"UP" and "IN" must be specified as a pair in the PIN statement.

2416

Real constant data without D (double-precision) specification must be used.

2417

The variable must be either without DIM, non-subscripted DIM, with DIM, no specification, INTEGER, or LOGICAL.

2420

This must be a variable other than a TABLE or PINLIST variable.

2421

This must be a variable other than a TABLE or PINLIST variable, or a constant other than a real number with units.

2422

A maximum of five characters are allowed to define the macro name. The error occurs when six or more characters are used.

2423

The MACRO and MEND must always be specified as a pair. Also, the nesting of MACRO or MEND is not allowed.

2424

Not used

2425

Not used

2426

Not used

2427

Not used

2430

Not used

2431

Only a constant with units of time, a real number variable without specification, or a character type variable is allowed.

2432

A pin which cannot be used for multiple-device simultaneous measurement is specified in the SOCKET program.

2433

The failure storage cannot be connected in the connection state of the pins specified in the SOCKET program.

2434

An invalid terminator was used.

2435

Nothing other than PIN, VS, or PPS is allowed.

2436

The PIN definition of a single DUT exceeded two or more blocks.

2437

Excessive PIN or PPS number

2440

The HANDLER or PROBER was duplicated.

2441

Too many or few number of DUTs were defined.

2442

The pin connection was specified in the incorrect position on the socket table.

2443

The different number of PINs and PPSs were defined for simultaneous measurement.

2444

The program is not in the format of "MULTIPLE DUT SINGLE" or "MULTIPLE DUT END".

2445

Character string is not described correctly after CATEGORY or SORT.

2446

CATEGORY TABLE and START TABLE are not proper.

2447

CATEGORY TABLE is not described, though CATEGORY END is described. Also, SORT TABLE is not described, though SORT END is described.

2450

The conditions described in CATEGORY TABLE and SORT TABLE are not proper.

2451

CATEGORY number specified in CATEGORY TABLE or SORT number specified in SORT TABLE is incorrect.

2452

Characters which are not permitted are described.

2453

Too many ("AND", "OR") operators.

2454

The number of "(" and the number of ")" do not agree in the operational expression.

2455

The operational expression is not described.

2456

Mnemonic which is not permitted is described.

2457

Description in operational expressions is incorrect.

2460

CATEGORY number or TEST number is incorrect in operational expressions.

2461

There are two CATEGORY numbers or TEST numbers.

2462

Non-operator which is not performed is described.

2463

CATEGORY number or TEST number is incorrect in operational expressions.

2464

"OTHERS" and other operands ("FT", "PT", "NC", "ZC") have been specified in a statement.

2465

"OTHERS" has been specified in the conditional expression of CATEGORY TABLE.

2466

There is incorrect specification in the described data.

2467

The function name of SET DECISION statement is incorrect.

2470

Too large subscript was specified in the SET ERMODE statement.

2471

In pin information setting, no other pin information can be specified when "OPEN" is specified.

2472

The DEFINE SYMBOL was duplicated.

2473

The DEFINE MULTIPLE was duplicated.

2474

This is an nDUT or mSTN format error.

2475

An invalid subscripts was specified.

2476

An invalid DUT number was specified.

2477

An invalid PIN, US, or MDC number was specified.

2500

Spaces or commas must be used for delimiters between words.

2501

MCLK and FCLK cannot be specified on the same pin.

2502

MCLK1 or MCLK2 cannot be specified with BCLK and CCLK on the same pin.

2503

When TRNRZ waveform mode and ACLK are specified on a pin, that pin cannot be used in I/O mode.

2504

This waveform mode cannot use FCLK or MCLK.

2505

NPHOLD cannot be combined with FCR waveform.

2506

Capacitance C has been multiple specified in HVS statement.

2507

Capacitance C has not been specified in HVS statement.

2510

Capacitance C specification is incorrect in HVS statement.

2511

Numerals other than 0 to 6 have been specified for capacitance C in HVS statement.

2512

Capacitance C specification in HVS statement needs a measurement range or clamp current data.

2513

Cannot be specified by variable in the condition table.

2514

(N:N1) can not be specified as pin list in condition table.

2515

The statement is specified which is not admitted in condition table.

2516

Too many (or few) output files are specified in the condition table.

2517

The nesting of pin list exceeded five levels in condition table.

2520

The specification of clock exceeded the allowable limits in condition table.

2521

TEST DEFINE TABLE is not declared.

2522

TEST DEFINE END does not exist.

2523

Variable table for condition table was destroyed.

2524

This statement is valid only within condition table.

2525

There is no REDUCTION BLOCK BEGIN in condition table.

2526

There is no REDUCTION BLOCK END in condition table.

2527

The specification of TGTS is allowed only once for each block in condition table.

2530

This statement is not admitted in condition table.

2531

TGTS must be specified at the beginning of the block.

2532

TS (timing set) which is specified currently runs against another TS in condition table.

2533

Number of specifying of condition table exceeded the limits.

2534

In AFM ACTION statement, specification of signal (AF, AFSB1, AFSB2 or BF, BFSB1, BFSB2) is incorrect. They must be the same.

2535

For the data selector specification in a pin statement, data combination is incorrect.

2536

No pin data within "<>" in a pin statement. Omit "<>" as well as pin data.

2537

Constant must have a unit of "Hz". Or, variable must be non-specification or REAL type of DIM, no-DIM or expression.

2540

The simultaneous specification with ALL and FILE NAME is not admitted in RESET TGDATA statement.

2541

Too many filenames are specified in RESET TGDATA statement.

2542

Slew rate specification is incorrect in HVS statement.

2543

The block number under definition, has been defined already.

2544

The simultaneous specification with MCLK and FCLK is not admitted in the same block.

2545

In AFM ACTION statement, mode specification (combination) of EXP or DBM is incorrect.

2546

Current clock specification is incorrect in REG MPAT statement.

2547

TEST DATA BLOCKn is not specified.

2550

The part to be specified condition is incorrect in condition table.

2551

The different number of BCLKs and CCLKs were specified in the PIN statement during clock setup.

2552

TS (timing set) which was used in condition table exceeded 1024.

2553

Mode specification is incorrect in SELECT DROFFTIME statement.

2554

Improper combination of operation modes in the AFM ACTION statement.

2555

Maximum and/or minimum value has not been specified for HIDAR when a fix-resolution was used.

2556

Only the constant can be specified. It must be an integer or logic type.

2557

A constant cannot be specified. If a variable is used, it must be the no specification, integer, or logical type with or without DIM.

2560

The three-valued driver alone cannot be specified.

2561

Measurement range or source range is not applicable to the specification of STANDBY.

2562

Both /T and /I cannot be specified in the MEAS and MMEAS statements.

2563

No MODE TS_n is specified.

2564

The PRIMARY statement cannot be specified by test plan program (PRO).

2565

Specified file names are too many.

2566

The constant must be real number data having frequency (Hz) or unit in time (s). The variable must have the attribute of non-specified or real, and must be the variable with DIM or without DIM or an operational expression.

2567

A constant cannot be specified. The variable must be non-subscripted array variable having the attribute of non-specified, INTEGER or LOGICAL.

2570

A constant cannot be specified. The variable must be non-subscripted array variable having the attribute of INTEGER or LOGICAL

2571

The pulse number specified in UCLK does not correspond to timing data number.

2572

The shared statement cannot be mixed with the per pin statement.

2573

PIN cannot be specified with the reserved word.

2574

Not used

2575

Not used

2576

Pin or Pin [VIVO] must be specified in the SET REG statement.

2577

The wrong pin is specified in the LEVEL statement.

2600

The wrong unit is specified in the LEVEL statement.

2601

The level set number is short in the LEVEL statement.

2602

The table variable name specified in the TMEAS TABLE BEGIN(v) statement or the VMEAS TABLE BEGIN(v) statement has already been defined.

2603

This statement should be written between TMEAS TABLE BEGIN and TMEAS TABLE END.

2604

TMEAS TABLE BEGIN(v) is not written.

2605

TMEAS TABLE END is not written.

2606

The TMEAS table is not written completely.

2607

The set value of the VMEAS VPASS or VMEAS VFAIL exceeds the range, or the set value unit is different.

2610

When VS1 to VS16 are assigned to DUT1 in the parallel test definition section of the socket program, VS1 to VS16 must be assigned to other DUTs as well.

2616

This statement should be written between VMEAS TABLE BEGIN (v) and VMEAS TABLE END.

2617

The VMEAS TABLE BEGIN(v) statement is not described.

2620

The VMEAS TABLE END statement is not described.

2621

Some statement is missing for specification in the VMEAS TABLE.

2622

The unit name with a different unit cannot be specified with the VMEAS UNIT statement and the VMEAS TRACn statement.

2623

The same unit name cannot be specified with the VMEAS UNIT statement and the VMEAS TRACn statement.

2624

The compilation result for the PAT CREATE statement or the PAT CHANGE statement is too large. Decrease patterns.

2630

In the part of the assignment of the PIN statement, if the DCLK is assigned then with the exception of the waveform mode of RZX, /RZX, RZO, /RZO, RZZ, /RZZ, they cannot be assigned.

2631

In the part of the assignment of the PIN statement, if the DCLK and the waveform mode of RZO, /RZO, RZZ, /RZZ, are assigned then the multi selection of the clock cannot be done.

2632

Not used

2633

The specified socket program cannot be used on this system.

2634

The size of the specified file in 0 byte.

2635

Up to 500 SKIP instructions can be set in the MULTIPLE statement.

2636

The number of characters contained in this operation exceeded the limit.

2637

The constant must be a real number with units of time.

The variable must be either a REAL or nonspecified attribute and must be no DIM, DIM, non-subscripted DIM, or an expression.

2640

SEPARATE PPS is duplicated.

2641

SEPARATE DR is duplicated.

2642

The current CHTYPE cannot be used to specify SEPARATE DR.

2643

The number of driver channel branches does not match the number of driver channel branches specified by the SEPARATE DR n statement.

2644

Driver channel branches can be specified only for driver channels which are included in a SEPARATE DR n statement.

2645

The number of PPS branches exceeds the number of branches specified by the SEPARATE PPS n statement. Or the number of branches for a PPS does not match the number of branches for another PPS in the same VS specified by DUT#.

(Example) This error occurs because the number of driver channel branches for PPS1 is 2, and PPS2 and PPS3 have no driver channel branches.

```
SEPARATE PPS 2
DUT#=VS1, ...
DUT1=PPS1, ...
DUT2=PPS1, ...
DUT3=PPS2, ...
DUT4=PPS3, ...
```

2646

For a LOGICAL attribute, no specification can be made other than DIM variable or non-DIM variable.

2647

The constant must be integer, logical, or character type data. The variable must have the INTEGER, LOGICAL CHARACTER or nonspecified attribute and must be DIM, no DIM, an expression, table variable, string variable, or non-subscripted DIM variable (of the CHARACTER attribute).

2650

Only a non-subscripted DIM variable that has the CHARACTER attribute can be specified.

10. Runtime Error Codes (3000 to 3777)

Error codes are represented in octal in the table.

10. 1 Error Message List

3000

This must be either integer type data or logical type data. This is also a limit on how much data is allowed.

3001

This must be either character type data or a string variable.

3002

Character type data, non-subscripted DIM variables, string variables, table variables, and pin list variables are not allowed.

3003

This must be either real number type data or real number type data with units.

3004

This must be character type data, a string variable, or a non-subscripted DIM variable.

3005

This must be real number type data with units of time. This is also a limit on how much data is allowed.

3006

This must be integer type or logical type data, or a pin list variable. This is also a limit on how much data is allowed.

3007

This must be real number type data with units of time, integer type data with units of time, or logical type data with units of time.

3010

This must be real number type data with either voltage or amperage units. This is also a limit on how much data is allowed.

3011

This must be real number type data with units of voltage. This is also a limit on how much data is allowed.

3012

Character type data, non-subscripted DIM variables, table variables, pin list variables, and string variables are not allowed. This is also a limit on how much data is allowed.

3013

This must be integer type data, logical type data, a non-subscripted DIM variable, or a table variable.

This is also a limit on how much data is allowed.

3014

This must be integer type data, real number type data, or real number type data with units.

3015

This must be integer type data, real number type data, or real number type data with units. This is also a limit on how much data is allowed.

3016

This must be character type data, integer type data, logical type data, or a string variable. This is also a limit on how much data is allowed.

3017

This must be real number type data without units.

3020

Only real number data with amperage units can be specified.

3021

Only pin list variables can be specified.

3022

Integers, logical numbers, pin list and DIM specified variables are permitted. Or, the specified value is OVER.

3023

The file size of the specified program is 0 Byte.

3024

A constant cannot be specified.

3025

The READ/WRITE counter value of a data file (wa, wc, or ws) exceeds that of the variable. Or the wa, wc, or ws value is not positive.

3026

The file pointer became negative during the "MOVE!" of a data file.

3027

"WRITE!" is specified for a data file which is "OPEN!" in the "R" mode. Or, "READ!" is specified for a data file which is "OPEN!" in the "W" mode.

3030

A constant is specified in a place where a variable must be specified.

3031

The channel number or block number specification is outside the allowable range.

3032

There are too few output digits in a WRITE statement. Or, too many.

3033

The constant code of a variable is invalid.

3034

Constants, table variables, non-subscripted DIM variables, and pin list variables cannot be specified for storing data.

3035

The specified file does not exist.

3036

Data other than characters cannot be used in a character type variable.

3037

Character data cannot be used in a real number type variable.

3040

The subscript must be integer type or logical type data.

3041

The subscript value is 0, negative, or exceeds the defined value.

3042

The specified value for the output device in the WRITE statement is not within the range from 0 to 5.

3043

The value of n is too small in <ABC...:n> specification of the WRITE statement. Or, too many.

3044

When a subroutine argument is a table variable, the dummy argument must be either a table variable or a variable without DIM. Further, when an argument is a pin list variable, the dummy argument must be a pin list variable or a variable without DIM.

3045

When a subroutine argument is a string variable, an array variable cannot be specified as a dummy argument.

3046

A non-subscripted DIM variable, table variable, string variable, and a pin list variable cannot be specified as a subscript for a string variable.

3047

The specification for a subscript of a string variable must be integer type data or logical type data. This is also a limit on how much data is allowed.

3050

The specified value for the subscript of a string variable is negative or exceeds the defined value.

3051

There are too many subroutine nestings by CALL statements.

3052

The status name specified by the ONRTN statement is not defined.

This error occurs when other than a status name specified in an ON statement is specified.

3053

Multiple entry of ONRTN statements.

Only one area is used to store the address where an ON branch occurs. Therefore, if another ON branch occurs after an ON branch, the contents of the area which stores the address where the first ON branch occurs is rewritten resulting in this error at the ONRTN statement for the first ON branch.

3054

The size of a library file which can be executed by the EXECUTE statement must be 131070 bytes or less.

3055

The number of arguments do not match.

This error can occur when a GOSUB, CALL, or EXECUTE statement is executed.

3056

The specified value for n of a RETURNn statement is invalid.

3057

More than 10 nestings of subroutines are used for GOSUB statements.

3060

The value of a variable defined by a subroutine exceeds that of the variable in the main program.

3061

When a subroutine argument is a constant other than a character, an array variable (DIM variable), a string variable, table variable, or a pin list variable cannot be used as its dummy argument.

3062

An overflow of a variable area occurred.

3063

A branch destination corresponding to the specified value is not specified in a computed GO TO statement.

3064

The test number must be a positive decimal number up to four digits.

3065

The line number specified in a GO TO statement must be between 1 and 16382.

3066

An ARGUMENT statement was used incorrectly.

3067

The PRO name specified must be between 1 and 99999999 for integer type data, and 8 characters or less for character type data.

3070

The file name and magnetic tape file name of an I/O device cannot be specified in a SEARCH statement.

3071

When a subroutine argument is a variable without DIM or a non-subscripted DIM variable, a table variable and a pin list variable cannot be specified as a dummy argument.

3072

The specified value for a subscript of a pin list variable or table variable is negative or exceeds the defined value.

3073

A non-subscripted DIM variable, table variable, pin list variable, or string variable cannot be used as a subscript for a variable.

3074

The specification for a subscript of a pin list variable must be integer type data or logical type data.

3075

A non-subscripted DIM variable, table variable, pin list variable, string variable, or character data cannot be used for a DO statement parameter.

3076

There are too many parameters in a DO statement.

3077

There is no read file or there is an error in a file location.

3100

The specified size of a variable area is too large.

3101

There are more than 5 nestings of pin list variables and table variables.

3102

No data can be assigned to a pin list variable.

3103

Table variables, non-subscripted DIM variables, and pin list variables cannot be specified in this statement.

3104

The data assigned to a string variable must be character type data.
Furthermore, table variables and pin list variables cannot be used in this statement.

3105

The storage destination for the data is a constant.

3106

When data specified by a non-subscripted DIM variable, is stored in a string variable, the non-subscripted DIM variable must be declared in CHARACTER.

3107

Character data, table variables, pin list variables, string variables, or non-subscripted DIM variables cannot be used in TRUNK, CEIL, FLOOR, and COVER statements.

3110

This must be either integer type data or logical type data. This is also a limit on how much data is allowed.

3111

Specified data is not in the allowable range.

3112

Character data, table variables, pin list variables, non-subscripted DIM variables, or string variables cannot be used in an arithmetic expression.

3113

The number of specified data items for the built-in function SRCH or ASCII must be either 2 or 3.

3114

This must be character type data, a string variable, or a non-subscripted DIM variable.

3115

The data units in the built-in function RANK differ.

Furthermore, character type data, table variables, pin list variables, string variables, or non-subscripted DIM variables cannot be used here.

3116

The specified data in the built-in functions SL and SR must be either integer type or logical type.

3117

The specified data in the built-in functions NMAX and NMIN must be a non-subscripted DIM variable.

3120

The data units do not coincide. Also, character type data, table variables, pin list variables, or string variables cannot be used here.

3121

Table variables or pin list variables cannot be used here.

3122

Character type data, table variables, pin list variables, string variables, or non-subscripted DIM variables cannot be used here.

3123

The units specified for the data are incorrect.

3124

The built-in function SQRT can only handle positive data.

3125

The data specified for the built-in function MOD must be a division expression of integer type data.

3126

The data specified for the built-in function LENG must be a string variable.

3127

The customer name, file attribute, or file name is not correct.

3130

Only a customer name or a file attribute is specified. Specify the file name also.

3131

The radix must be 2, 8, 10, or 16.

3132

The number of designated data items for the built-in function NUMERIC must be either 1 or 2.

3133

There is an error in the polarity specification.

3134

There is an error in the data specification.

Or, there is a character which cannot be converted using the built-in function NUMERIC VALUE.

3135

The specified integer type data or logical type data is not within the allowable range.

3136

The specified real number type data or real number type data with units is not within the allowable range.

3137

In the pin specification, the number specified for consecutive pin numbers and that of PDS (programmable data selector) do not agree.

3140

The pin number specified must be between 1 and 192.

3141

A pin list variable cannot be specified here.

3142

There is inadequate data in the pin list variables.

3143

In the channel specification, the specified value is not within the allowable range.

3144

Data setting overlaps.

3145

When only a measurement range is altered in the VSIM or ISVM statement and VS statement, the newly specified measurement mode must be the same as the previous one.

3146

In simultaneous measurements of the DC and the device power supply electric current, one of the device power supply units and DC 1 to 16 (total 17) can be measured simultaneously.

3147

A DC test unit is about to be activated while the DC test unit is still operating.

3150

An attempt was made to start the device power supply electric current measurement unit while the measurement unit was still operating.

3151

PDn cannot be specified on the comparator side. Furthermore, PCn cannot be specified on the driver side.

3152

An attempt was made to start or continue the LPAT although it was already running.

3153

An attempt was made to start or continue the DPAT although it was already running.

3154

When a file name is specified using a character variable or a string variable, it can be up to 8 characters.

3155

There is no PRO file name specified.

3156

An illegal operation was performed between two sets of data.

Example:

Character data is used, a real number is used in a logical operation, or the data types do not agree with each other.

3157

DC power is not connected to the specified pin. When a DC test unit is specified by using a pin number, the DC must be connected beforehand using a pin statement.

3160

The DC measurement range or range for the device power supply electric current measurement is not specified.

3161

The specified value for a timing set of a TG (timing generator) is not within the allowable range.

3162

The specified value for a measurement range or a source range is abnormal.

Example:

Data overflow.

3163

The units for the range data are inadequate.

Example:

For example, when $X = 1 \text{ mA}$ with $VSIM=1V$, $R(X)$.

3164

The number of digits specified for the built-in function ASCII is 0 or too large.

3165

The specified value for an input device of an INPUT statement is not between 0 and 4.

3166

A constant, string variable, pin list variable, or character variable cannot be specified here.

3167

There is no variable storage in the variable table. That is, there are only control data and constants in the variable table.

3170

The amount of data to be input by an INPUT statement is too small.

This error occurs when there is an end of file and the input device specification is only "\$PTR (paper tape reader)."

3171

The specified value for the test number is not between 0 and 9999.

3172

A user program area as large as one unit of intermediate language cannot be reserved. The possible causes are as follows: There are too many programs stored in the user program area, or the variable area is too big.

**Tip**

Key command "U" for the controller must be performed.

3173

There is an error in a system table name which is used in an SREAD or SWRITE statement. Or, the specified system table name does not exist.

3174

The specified values for expression 1 and expression 2 of the SREAD or the SWRITE statement are so big that they overflow the system table range.

3175

A string variable must be specified beforehand.

3176

Character type data or a string variable is not specified in a CREAD NAME statement. Or, either character type data or a string variable is not specified or their contents are not A to Z in a CREAD ALPHABET statement.

3177

The unit concerned is not included in this system.

3200

There are some errors in a string variable specification in the CPSET statement or in a data file. There is no character.

3201

The failure analysis memory unit is in operation.

3202

The strobe set value is inside a dead band.
The dead band of the strobe pulse is:

In the case of T3300

Two times of RATE - 10 ns or more

In the case of T3331

Two times of RATE - 25 ns or more

3203

For the pin specification, the IOC of the driver pin can be specified with 1 to 128 pins. More than 128 pins cannot be specified.

3204

This error indicates that an error occurs when sending data to DPAT/MPAT or the internal oscillation circuit of MPAT is functioning. This error occurs when data to be transferred is too big or when there is a hardware malfunction. AC0, 1, and 2 of an error message have the following meanings:

Interrupting element for AC0=TINT1

AC1=DPAT/MPAT internal address (address data of the lower 8 bits)

AC2 = transferred data.

3205

A file attribute is wrong.

3206

Start or continue is sent to MPAT (ALPG) while the MPAT is still operating.

3207

The file in the user program area of a controller cannot be deleted because the file is protected.

3210

The program being executed cannot be deleted from the user program area of the controller.

3211

The failure analysis memory address must be between A5 and A17 in the assignment specification of a failure analysis memory address and that from the pattern generator.

3212

The pattern generator address must be within the range shown below in the assignment specification of a failure analysis memory address and that from the pattern generator.

$X5 \leq Xn \leq X8$, $Y0 \leq Yn \leq Y8$, $Z0 \leq Zn \leq Z8$

3213

An inadequate assignment is performed in the assignment specification of a failure analysis memory address and that from the pattern generator.

3214

The specified value of the AFM BITSIZE statement must be either 1, 4, 9, or 18.

3215

In a SELECT PFAIL statement, the value n of NBIT n is not in the range of $0 \leq n \leq 7$ or the value n of MULT n is not in the range of $1 \leq n \leq 48$.

3216

An inadequate clock is specified in the following cases:

```
SELECT DCLK
SELECT TCLK
SELECT QCLK
```

3217

The phase number of a specified clock is inadequate. Specify in the following ranges respectively:

In the case of T3300

ACLK1 to 6, BCLK1 to 8, CCLK1 to 8, STRB1 to 4, DREL1 to 2, DRET1 to 2, TGCLK1 to 64

In the case of T3331

ACLK1 to 4, BCLK1 to 10, CCLK1 to 10, STRB1 to 2, DREL1, DRET1, TGCLK1 to 64

➔ For a specifiable phase number of T5500 or T5300, refer to [ATL-50 Test Plan Program Reference Manual VOL4 Clock Pulse Generation\(No. : 8127133\)](#) or [ATL-51 Test Plan Program Reference Manual\(No. : 8431498\)](#).

3220

The unit number in a SELECT PSHIFT statement must be between 1 and 6.

3221

Comparison was not correctly performed in the functional test executed by the MEAS statement.

When the function test has been completed, a check is made to see if the comparisons were correctly made for the pins connected to STRB (however, the pins attached to FLAG are excluded). An error occurred in this check.

Furthermore, the pin number (hexadecimal) which caused the error in the above check is stored in AC0.

The error may have been caused by the following: The STRB setting falls inside the dead band, the comparator is not connected, or the comparator enable was not issued from the PG.

3222

The set value of the driver is illegal. This setting must be $V_{IH} \geq V_{IL}$.

3223

A constant cannot be used in the built-in function VARG.

3224

The left side of the built-in function VARP must be an argument variable.

3225

The MSB of the first specified data word of the built-in function VARP must be "1".

3226

The left side of the built-in function VARG and parameter "X" of VARP must be declared by LOGICAL[1]X (6) beforehand.

3227

When carrying out a high speed format read/write of a failure analysis memory, the "AFM BITSIZE" must be either 1 or 4.

3230

All channels for data files are being used.
There are a maximum of 32 channels.

3231

The relationship between the file attribute and the specification of either "R" or "W" is inadequate in the data file "OPEN!".

3232

The channel specified for a data file was not opened beforehand.

3233

The channel specified for a data file is already opened.

3234

The number of transferred bytes exceeds the specified variable or constant data.

3235

The specified DC test unit does not exist.

Or, the DC test unit is not connected to the specified pin.

3236

When using a socket table, the driver pin number differs from the comparator pin number after carrying out a socket conversion of a pin specification (Pn type specification) which is common to I/O. That is, the driver pin number must be the same as the comparator pin number after carrying out a socket conversion of a pin specification (Pn type specification) which is common to I/O.

3237

Different DC test units cannot be connected to the driver and comparator pins with the same pin number.

3240

There is a short circuit between a guard line and a board in a DC test unit. As a result, DC measurement cannot be carried out.

(The wiring inside the DCT & device power supply unit must be checked.)

3241

The temperature of the radiator inside the DCT & device power supply unit is abnormally high. The wiring of a performance board may be wrong, and cause a short circuit between the DC test unit and the program power supply, or a malfunctioning DCT & device power supply unit may be the problem.

3242

A "RETURN" statement cannot be executed in a "PRO" program.

3243

There are some errors in either the data specification format or the use of an operator.

3244

Data overflows when a character string is converted to a numerical value.

3245

When reading a character string, the character string is found to be too long.

3246

"LOG ON" has already been carried out.

3247

A "LOG ON" statement with a file name specification has not yet been executed. As a result, "LOG ON" statement without a file name cannot be carried out.

3250

"LOG OFF" statement is about to be performed although a "LOG ON" statement has not yet been executed.

3251

When specifying a string variable, a location for a string variable must not be specified.

3252

Protection is not available for an area which extends beyond the DEFINE variable area.

3253

T3300 statements cannot be executed with this OS.

3254

T3331 statements cannot be executed with this OS.

3255

The compiled format of a program which is about to be executed is not compatible with this system.

For example, a T3300 program is going to be operated with T3331. Or a T3331 program is going to be operated with T3300.

3256

The called file does not exist. When this error occurs, the TEST number, LINE number, and file name in the error message are invalid.

For example, this error occurs when an ON CALL condition is satisfied, during a debugger command, or in "/" mode call.

3257

User program area overflow.

3260

The specified file is not in main memory.

3261

The GPIB interface transmission termination (READ/WRITE) flag is not set within the prescribed period of one second.

3262

No nesting can be specified in the BURST statement. That is, BURST BLOCK BEGIN has already been specified. Or, BURST BLOCK END is specified, although BURST BLOCK BEGIN was not specified.

3263

The variable size used in BURST mode is too small.

3264

A BURST BLOCK BEGIN or BURST BLOCK INSERT specification is required.

3265

No data set exists in the variable used in BURST mode. Or, the data is incorrect.

3266

Repeat blocks cannot be inserted in a repeat block using the BURST BLOCK INSERT statement.

3267

BURST WAIT TIME, BURST RON, or BURST ROF is specified although BURST BLOCK BEGIN or BURST BLOCK INSERT is not specified.

3270

Because BURST NOP is a data block, it cannot be specified between BURST SET and BURST RESET.

3271

When a test is being performed in the BURST mode, PG run time must be 15 μ s or more.

3272

A customer name different from the current customer name is specified in the DELETE!, RENAME!, or ECLEAR! statement.

Only the files having the current customer name can be handled by these statements.

3273

An error occurred in the test fail counter area. Use key command ".T" to reset the test fail counter mode.

3274

When the mode about to be set differs from the previous mode, "*" cannot be specified by VSIM/ISVM.

```
VSIM UDC=5V, *
```

3275

The test vector generator (LPAT program) OUT or OUTB instruction is executed in a system where an SBM unit does not exist.

The OUT and OUTB instructions cannot be used without the SBM unit.

3276

Subroutine stack or index stack overflow occurs in the test vector generator (LPAT program).

3277

VGC STORE Cache memory write was too late.

3300

Pin numbers must be within the following ranges respectively.

In the case of the T3340, T3320 and T3324

1 to 256

In the case of the T3381, T3382 and T3344

1 to 512

Do not specify a pin number that is more than the number of pins assigned to DUT1 in the socket program.

When the pin number is set to OPEN or CHANGE mode in the pin statement, you can specify a pin number larger than the number of pins defined in the socket program.



Tip

A runtime error may occur if the pin list variable is not correctly used in program execution.

3301

MACRO to MEND for MMEAS can be specified only in the main program.

3302

MACRO specified by MMEAS has not been executed.

3303

Parallel measurements by UDC are not possible during MMEAS execution.

3304

T3340 statements cannot be executed.

3305

T3320 statements cannot be executed.

3306

DC parametric test still has not yet been executed.

3307

No measurement data exists for the specified unit after execution of a GO/NOGO test.

3310

The setting value of RATE is not in the allowable range.

3311

The reading timing of MCLK is not in the allowable range.

3312

The MCLK trailing timing is not in the allowable range.

3313

MCLK generation clock count is not within the permitted range.

3314

There is no S or M range designation in the DC condition settings specified in the MACRO statement. (Or "*" specification)

3315

The measuring mode determined by the DC conditions specified in the MACRO statement does not coincide with the units in the LIMIT statement.

3316

The LPAT file has still not been transferred to the test vector generator.

3317

LIMIT is not specified for DC measurement or the device power supply current measurement.

3320

The electrical units of the LIMIT for DC measurement or device power supply current measurement do not coincide with the electrical units of the measured result.

3321

MDC measurement has not been completed.

3322

UDC measurement has not been completed.

3323

DVM measurement has not been completed.

3324

The device power supply current measurement has not been completed.

3325

Too many pattern file-name designations.

3326

The number of pins specified in the MEAS MDC statement exceeds 16.

3327

More than one pin has been specified for the same MDC in the MEAS MDC statement.

3330

The file-name designation is not permitted in MEAS LPAT(1).

3331

The object file is abnormal. Try recompilation. Or, the file specifier is illegal.

3332

The pattern file cannot be stored in SBM.
Delete the permanent file in SBM.

3333

The SBM pattern file contents are abnormal.
Try to clear all the files in SBM.

3334

A VGC Store rewrite mode is specified in the REWRITE designation pattern file.
VGC Store rewrite is not permitted in REWRITE designations.

```
MEAS LPAT A(B,C)
               ↑
          REWRITE specification
```

3335

The size of the STEV buffer or VGC store of the REWRITE designation pattern file is greater than the pattern file used as the base.

3336

Pattern program is too large to store in PG.

3337

Absence of data which must be present in the pattern file.
Or, there is too little or too much data.

3340

In the REWRITE specification, the size of STEV buffers are different. That is, the size of the STEV to be rewritten is too large.

3341

In the REWRITE specification, the pattern mode for the channel to be rewritten differs from the previous pattern mode. 01PNLHZX pattern representation and RSTUABCD pattern representation cannot be mixed for the same channel.

3342

No pattern program start/stop or no MATCH BRANCH ADDRESS designation.

3343

In the MEAS MDC, the number of variables specified for storing the measurement results exceeds the number of measured pins.

3344

Comparison was not correctly performed in the functional test executed by the MEAS statement. This is probably caused by one of the following:

- Comparison pattern (LHZXRSTUABCD) is not specified for a pin to which STRB is connected.
- STRB is not connected to the pin for which the comparison pattern is output.

3345

A pattern program accompanying VGC store rewrite in START LPAT* cannot be executed. Furthermore, multiple pattern programs cannot be used.

3346

Specified file does not exist in PG.

3347

SET LPAT ALL cannot be executed.

3350

Abbreviated forms cannot be accepted for statements (VSIM, ISVM, LIMIT etc.) specified in MACRO.

3351

Pattern transfer or PG start is attempted although PG is running.

3352

Pattern generation by SEND SPAT does not stop.
This error occurs if the test vector generator malfunctions.

3353

Function LN (X) accepts only positive data.

3354

The data for function LN (X), EXP (X), SIN (X), COS (X), or TAN (X) must not include units.

3355

The specified pattern files are not in SBM.

3356

SBM does not exist. With the SBM disconnected, a write to the SBM or a read from the SBM was attempted.

3357

After branch by using the ON HOLD or ON CALL HOLD statement, the ON RTN statement cannot be executed because the statement changing the PG status is executed. The statement is any of the following:

MEAS LPAT, START LPAT, RESET LPAT, SET LPAT, SEND LPAT, SEND SPAT, PAT CHANGE, PAT CREATE, etc.

3360

PG stopped while it was still required.

3361

When an SBM parity error is generated, the pattern program is searched for on the disk in order to recover automatically but the pattern is not found on the disk. Or, the customer in which the pattern existed cannot be accessed.

3362

In a DC parametric test, the LIMIT values are out of range.

3363

In the JUDGE statement, only data within 32 bits can be used.

3364

The class name is missing although a specification to obtain a histogram is provided.

Example:

```
MEAS UDC(m) "class name" → not designated.  
MMEAS XXX(m) "class name"
```

3365

The NO.OF CELLS values are out of range (5 to 200).

3366

The program name specified by the ".J" command does not match the name of the program being executed.

3367

The name of the program being executed does not match the program name in the HIDAR directory.

3370

When collecting the distribution information in the HIDAR statement, the units of the first measured data do not coincide with the units of the nth measured data.

3371

The units of the upper and lower limits in the pass area do not coincide with the units of measured data.

3372

Since the UDC measuring system is in the state to detect OVER data, the power supply current cannot be measured by the "MEAS VS" statement.

Disconnect the UDC from the pins.

3373

"*" cannot be entered in a data specification for transfer in burst mode.
(IN statement)

3374

The units of the data collected for HIDAR processing differ from units of the specified MAX or MIN data.

3375

A pin already specified is specified again.

3376

V_{CC} or V_{EE} on a performance board is faulty. Check for faulty wiring.

3377

"LOCn" is missing in the SCAN pattern specification for the LSSD test. Without it, PRIMARY and SCAN patterns cannot be linked.

3400

For the LSSD test, the (6) for the MEAS LPAT(6) or START LPAT(6) statement is missing. Or, the pattern file specification format for LSSD test is incorrect.

3401

The "OUT" command cannot be used in a system without the SBM option.

3402

When "INCREASE/2/3" has been specified to append a number automatically to the file name, the appended number exceeds the maximum.

3403

A MT FREE FORMAT I/O specification concerning a data file is incorrect.

3404

An illegal PDS was specified.

3405

The specification for the T3331A/B was made.

3406

Both the power current measurement and DC measurement for several pins cannot be performed in one MEAS or START.

Simultaneous measurements of currents of multiple power sources cannot be performed.

3407

The DC number specification and the specification of the pin number for which the pin DC relay is automatically opened or closed cannot be mixed in one MEAS or START.

3410

Since the DC set conditions are not the same, the measurement cannot be performed using several DC units.

Modify the VSIM, ISVM, and LIMIT statement.

3411

Only one pin can be specified in the MEAS statement in which arithmetic operation is used for the measurement result storage.

3412

To use the PINLIST or TABLE variables as arguments, all specification is enabled.

3413

The types of stations which are declared are not the same as those of the operating stations.

3414

More than 400 macro tables for macro MEAS cannot be specified.

3415

The measurement end signal was not returned from the HDC, PVM, or COUNTER measuring unit.

3416

A time-out error occurred in the transfer of commands or data to the SGP or PDVM (calibrator).

3417

The specified pin is not defined as pin for simultaneous measurement.

3420

The specified VS is not defined as VS for simultaneous measurement.

3421

The SGP analysis mode, measured data, and I/O channel (A/B, BFM) specifications are inconsistent.

Example:

In power spectrum analysis, REAL data is specified by READ.

3422

An OVER LOAD (excessive input load) error occurred during SGP measurement.

3423

In START BFM, data input to the buffer memory failed to end.

3424

The PVM has not been calibrated.

3425

Data from the SGP is incorrect.

3426

The HDC is oscillating.

The number of the oscillating unit is set in hexadecimal code in AC7 in the error message.

3427

The 1, 0 failure or HZ failure data cannot be read in this system.

3430

The HDC is issuing a guard alarm.

The number of the unit issuing the alarm is set in hexadecimal code in AC7 in the error message.

3431

The HDC is issuing a thermal alarm.

The unit number is set in AC7 as in 3430.

3432

When simultaneous measurement is performed at two stations, both stations must be initialized. For example, each counter area must be initialized using the C key command, and the test failure counter and HIDAR must be set using the .T key command and the .J key command.

3433

The OUT command in the pattern program does not terminate.

3434

A timer error occurred.

This error occurs when the timer is in the pause mode.

3435

A pattern generator stack error occurred.

3436

Data must be real data with a resistance unit (R).

3437

Data must be real data with a frequency unit (Hz).

3440

Not used

3441

Data must be characters, integers, logical numbers, or real numbers without unit.

3442

The KCALL statement can not be used when using the auto-command buffer (/ACOM, CTRL/W or CTRL/V).

3443

A pin number was specified outside the admissible range.

3444

The required MCON was omitted.

3445

"VSIM UDC=....STANDBY" cannot be specified for MMEAS.

3451

Value for $V_{IH} - V_{IL}$ is too small or too large.

$+0.0 \leq V_{IH} - V_{IL} \leq +3.0$ (HS station)

3453

The system configuration specified by SOCKET is different from that to be tested.

3454

The file name is not specified.

3455

The bit configuration which has already been set does not correspond to high-speed read out or writing. Corresponding bits are 1, 2, 4, 18, and 16.

3456

The nesting level for PASS/FAIL of the IF statement is 20 or greater.

This error occurs only when simultaneous measurement is specified.

3457

The specified pin No. exceeds the maximum value specified by the socket.

3460

It is impossible to branch from within the syntax of IF PASS/FAIL for simultaneous measurement. After a branching operation with ON DCTF/FCTF, return must be performed with ONRTN DCTF/FCTF.

3461

VP message is specified by a system having no three-level driver.

3462

VP message is not specified by a system having the three-level driver pin, but I/O (IN and OUT) is specified.

3463

IN8 is specified by a system having the three-level driver.

3464

"VP" is specified for other than the three-valued driver pin by a system that has the three-level driver.

3465

The number of the multiple selection of a clock exceeds the specified value.

3466

In the SET type operation, such variable types as ARRAY, RECORD, and REAL, which are not permitted, are used.

Or, the data is not in the allowable range.

3467

In the CASE message, such case selector types as ARRAY, RECORD, and REAL are used.

3470

Function NEW cannot be used in the BURST BLOCK.

3471

Overflow in the region for variables was caused by the use of the function NEW.

3472

In the EOF and EOLN functions, the variables that return the result are not of the BOOLEAN type.

3473

The file specified by the EOF or EOLN function is not open.

3474

In the WRITE message, variables such as ARRAY, SET, and RECORD cannot be output.

3475

Combination for the multiple selection of a clock is wrong.

Example:

Combination for 40-phase TG is possible with 1ch and 9ch or with 4ch and 10ch between (1-8) or (9-12). No combination is feasible among those in parenthesis.

3476

Too many nestings of MULTIPLE DUT statement.

3477

The number of MULTIPLE DUT statement and MULTIPLE DUT END statement not agree.

3500

A syntax error has occurred in the IF PASS/FAIL statement.

3501

The number of DUTs did not match during CALL.

3502

Start request number from handler is over the DUT number specified in SOCKET program.

3503

The DUT number specified in SOCKET program is over the maximum measurement number of handler.

3504

Contact selection of handler is incorrect.

3505

Time out occurred on handler during sorting.

3506

Time out occurred on XY coordinator.

3507

LIMITER FAIL occurred under ENABLE condition of that.

3510

Stack overflow.

3511

In SEND BURST or MEAS LPAT (4, x), BURST DATA is abnormal.

3512

The nesting level has exceeded the limit in the IF PASS/FAIL statement.

3513

An error occurred when the spike check function (specified by the SET ERMODEn statement or the /ERMODE command) was used to check a DC unit according to the VSIM, ISVM or HVSIM statement.

This happened because the measurement range was changed while the DC unit (UDC, MDC, UHDC, or HDC) was in the RON state.

3514

An error occurred when the spike check function (specified by the SET ERMODEn statement or the /ERMODE command) was used to check a VS unit according to the VS statement.

This happened because the measurement range was changed while the PPS was in the RON state.

3515

The program attempted to write the data although the PG or TG was in the operating state.

3516

The program attempted to set data although the DUTSYNC DELAY board is not provided.

3517

This statement cannot be executed on this system.

3520

PPS parallel drive mode has been set.

When VS_n is operated in parallel, MEAS VS_{n+4} cannot be executed.
(n=1 to 4)

3521

Kelvin alarm of DPU has been generated.

3522

Guard alarm of DPU has been generated.

3523

This statement or program cannot be executed on this system.

3524

TS value is too large.

3525

Re-start has been issued during TG operation.

3526

Value of EXT-SYNC DELAY is too large.

3527

Time out has occurred for EXT-SYNC.

3530

TS value is too large.

MOST-50, ASX/V-50

Value of TS+TSBASE has exceeded 1024. (when setting)

3531

Clock number is too large.

MOST-50, ASX/V-50

TGCLK number is too large.

3532

Setting data is too large.

MOST-50, ASX/V-50

OFFSET data is too large.

3533

Read/write operation on TG has been attempted when TG is running.

3534

Capacitance specification is incorrect in HVS statement.

3535

PPS parallel drive mode has been set.

When VS_n is operated in parallel, data setting of VS_{n+4} cannot be made.
($n=1$ to 4)

3536

This statement cannot be executed on this system.

3537

The load capacity value in the HVS statement is not in the range of 0 to 6.
Or, it is in the range of 0 to 3 for measurement range of 80mA or less.

3540

The pattern transfer mode to the Initialize or Calibration area is not allowed in this system.

3541

"*" cannot be specified in VS/HVS statement when a mode is changed.

3542

FCLK start has been issued without FCLK setting.

3543

The destination SBM unit did not exist although it was attempted to transfer the LPAT object to the SBM.

3544

OPEN/CHANGE modes of PIN condition modification cannot be specified in burst block data.

3545

This pattern program cannot be used on this system. (CFPF)

3546

This waveform mode cannot be used on this system.

3547

The VP and IN are always required when specifying the PIN conditions in the CHANGE mode.

3550

This pattern program cannot be used on this system. (DBM)

3551

Numbers of start and stop addresses are not coincident in WINDOW CTB statement.

3552

Number of address pairs in WINDOW CTB statement is 32 maximum.

3553

No ENABLE has been set in CTB WINDOW MODE.

3554

Continue start (*) cannot be issued in the present status of PG.

3555

RATE is too small for FIXED DELAY MATCH.

3556

Timer value is too small for PAUSE instruction of PG.

3557

This must be real number type data with units of frequency.

3560

Slew rate specification is incorrect in HVS statement.

3561

An invalid file name was specified.

3562

Re-start has been issued during PPS operation.

3563

DPU time out.

3564

DPU time out.

3565

Data setting has been made during DPU operation.

3566

VS statement has been executed in SET HVSMODE or HVS statement in RESET HVSMODE.

3567

Settings of VSn and VSn+4 must be same for parallel operation of PPS.

3570

The block number specified is not in the current test condition table.

3571

The transfer method of the test condition table is not correct.

3572

The object size is too large for the system to be executed.

3573

This statement cannot be used for the simultaneous measurement.

3574

This statement must be preceded by MULTIPLE DUT SINGLE and ended by MULTIPLE DUT END.

3575

Time setting is incorrect in SET DROFF TIME statement.

3576

MCLK=EXT, MCLK1, MCLK2 or FCLK1, FCLK2 is not available in this system.

3577

The handler or prober was duplicated.

3600

An asterisk "*" is not allowed in the START LPAT statement.

3601

In the pattern program, there is a module which does not include START statement of MAIN side or both MAIN/SUB sides.

3602

No SCRAM file specified.

3603

The data format of PDS1 and PDS2 are not matched in SELECT PDS1/PDS2 DATA statements of a test plan program and PDS1/PDS2 DATA statements of the DATA DEFINE statement of a pattern program. (Both data must be the XOR format data or the XORINH format data.)

3604

A timeout has occurred in the handler.
(The timeout status is set in AC4.)

3605

This SCRAM program cannot be compiled in this system.
Re-compile.

3606

Error stop statement (STOP2, STOP3) has been executed.

3607

Abnormality exists in the contents of SCRAM object file.
Re-compile.

3610

User area has been overwritten during user-program execution.
(Only for function-key mode of 29.)

3611

Prohibited combination specified in the AFM ACTION statement.

3612

The CATEGORY TABLE or SORT TABLE can not be used in an external subroutine.

3613

Cannot exceed 18 bits while AFM is in MASK operation.

3614

Cannot specify more than two AFM operation modes while in 32-bit mode.

3615

RLMAX data set in REG MPAT/REG MPAT MAIN/REG MPAT SUB statements is not correct.

3616

3 pin MUX can not be specified in this station.

3617

In ASYNC or ALOCK mode, STOP statement has not been carried out in SUB pattern.

3620

Size of CAL FILE transferred by the initial calibration is not correct. (Should be 1944 bytes.)
The CAL FILE size read to AC1 goes in.

3621

In the system without optional ALPG, the ALPG pattern program and scramble program are not transferred. Also, in the system without optional ALPG, the dual ALPG pattern program is not transferred.

3622

Program to be intended to execute cannot run in this OS (SYS TEST).

3623

"VP" is not allowed in CHANGE mode of the PIN CHANGE/OPEN statement.

3624

The SUBR program for the test condition table cannot be executed.

3625

You try to execute the debug objects in the test condition table. However, either object is not for debugging.

3626

Normal SUBR object is transferred while the test condition table transfer is set.

3627

If the station is divided for TS, it is impossible to use any station except TS already assigned.

3630

A start request was issued by the contactor to which the DUT was not set.

3631

Wrong data has been set in SET DECISION statement.

3632

Measurement range or source range is not applicable to the specification of STANDBY.

3633

A unit that is not mounted on the current test station was specified.

3634

The specified option clock was not mounted yet.

3635

Disabled PDS is specified in this system.

3636

The delayed number of MCLKn must be set to 0 ns in this system.

3637

The pattern file is so large that it cannot be input in the SCPG.

3640

Pattern data in the SBM and SQPG does not correspond to that in the SCPG.

3641

This object is not available in this system.
Re-translate it.

3642

A heat sink alarm occurs in the DPU.

3643

An oscillation alarm occurs in the DPU.

3644

The PERFORM statement cannot be executed during TESTING.

3645

The test condition table has not been registered yet.

3646

Even if you try to create a register file for the test condition table, the memory is too small to create it.

3647

This statement is not executed in the system without optional dual ALPG.

3650

There is no ATOM (ADC TEST OPTION MODULE) in executing station.
The current option data exists in AC4.
Upper 16 bits → ST1, Lower 16 bits → ST2

3651

Specified file is not transferred to the ATOM.

3652

The size of file to be transferred exceeds 32 KW.
It is divided into parts less than 32 KW.

3653

The error code must be real number data having frequency (Hz) or time (s).

3654

The SET DCAP statement is specified before the SET RDAC APAT statement is specified.
Specify SET RDAC APAT or SEND APAT statement before SET DCAP statement is specified.

3655

A combination of the set value of SET RDAC AIN statement and the SELECT RDAC MULTIPLYING/SEPARATE statement is wrong.

3656

The header or revision number of the APAT FILE is incorrect.
The header of the APAT FILE must be "ATOM".

3657

Specified VS No. is not defined in the DUT1.

3660

Specified PIN No. is not defined in the DUT1.

3661

The same station must be used to test stations simultaneously.

3662

MCLK and DCLK cannot be specified simultaneously.

3663

The DUT No. to be set exceeds the number for measurement.

3664

DRE and DCLK cannot be specified simultaneously.

3665

The same language should be used to write the main program and external subroutines.

3666

Too many pin lists are declared.

3667

Simultaneous measurement of devices on two or more stations must not be specified in this statement. (Parallel test)

3670

This statement cannot execute measurement of a single device.

3671

In SELECT RDAC DUAL mode, VRL cannot be specified in the SET RDAC CONNECT statement.

3672

In SELECT RDAC DUAL mode for simultaneous measurement of two or more devices, #2 instead of #4 must be described in the SET RDAC CONNECT statement.

3673

Combinations of source range 20V (40V, or 60V) and major range 8A must not be specified in the VS statement for the system having one of the following DPUs.

1. DPU II op for the T3340 and T3320
2. DPU of the T3381, T3382, T3344 and T3681
3. T3324 60V DPU

3674

VSIM/ISVM HMDC statement cannot be described in this system.

3675

This statement cannot be described in this system (test head type).

3676

An error occurred in the spike check function (specified by the /ROFCHK command) when the MCON statement was executed. This happened because the measurement range was changed while UDC was in the RON state when the UDC unit was connected by executing the MCON statement.

3677

An error occurred in the spike check function (specified by the /ROFCHK command) when the MCON statement was executed. This happened because the measurement range was changed while PPS was in the RON state when the VS unit was connected by executing the MCON statement.

3703

An A/D start signal from the PG is not input during average current measurement.

3704

The A/D time is too long during average current measurement. (53 seconds at maximum)

3705

The CATEGORY BUSY FLAG is not reset.

3707

DCLK cannot be specified in this system. Wrong method of specification

3710

In the waveform mode or the combination of the clock is made an error in the part of the multi selection for the clock.

3712

The pattern program including with the /H, STH instructions is executed. (These instructions cannot be used in this system.)

3714

Double Clock Mode of MCLK cannot be used in this system.

3715

The number of the permanent file which are reached to the SBM maximum control number is already transmitted.

Delete the permanent file in the SBM.

3716

The number of UDCs is not enough.

The number of UDCs must be the same as the number of DUTs to be tested individually or in parallel.

3717

No proper specification in the SOCKET program.

3720

This utility cannot be executed on this system.

This utility does not suit the operating environment (OS or the revision of OS).

(This error occurs at the execution of COPEN/CPCLOSE.)

3721

The argument of SUB or LIB called by the CALL statement or "/" is wrong.

3722

VCON has been specified for the object VS channel of the MEAS UDC (MCON) measurement. (Identical channels cannot be selected between MCON and VCON.)

3723

DUT's data output bit width specified in APAT file exceeds the number of DCAP specified with the pin statement.

3724

DCAP's bit width × number of DUT exceeds 32 bits.

3725

Something is wrong with the APAT object file. Recreate the APAT file.

3726

Value of EXT-SYNC rate is too small.

3727

This statement cannot be specified during operation of PG.

3730

This statement cannot be used in MACRO to MEND.

3732

Number of pins defined for 1DUT × number of DUT exceeds the number of pins installed in the test system.

Because there is a shortage of pins installed in the test system, the device program cannot be executed.

Change the device program or test system.

3733

When "OPEN" is set to pin numbers in the pin statement in the BURST BLOCK routine and the pin numbers are larger than the number of pins assigned to the DUT, pin data cannot be assigned to variables. When this error occurs, specify a correct pin number or delete the wrong statement.

(Example) Program for 64 pin division

```
PRO SAMPLE SCSAMPLE
LOGI[2] BTSAMPLE(3000)
BURST BLOCK BEGIN (BTSAMPLE)
    P65-128=OPEN ← 65 to 128 pin is set to "OPEN" and exceeds the
                  number of pin divisions.
    P1=INI
BURST BLOCK END
```

3734

PINLIST variable has not been executed. It must be executed at least once.

Example:

```
IF INIT THEN ENTRY
    PINLIST DATA=P1-10
EXIT
DATA=IN1, ACLK, NRZA
```

□ If the INIT key has not been pressed, the PINLIST statement is not executed.

← A runtime error (3734) occurs.



Tip

There is a possibility of generating the Error code 3300 instead of Error code 3734.

3735

For simultaneous measurement using two test stations, use the same program name between the two stations.

3736

The number of measured data items is not sufficient for the number of measured DUTs in the JUDGE or JUDGE2 statement variable.

When parallel testing, you must specify a non-subscripted array variable for the JUDGE or JUDGE2 statement that has enough array elements for the number of DUTs being tested.

This error can be detected only when the function which is used to check for errors in the JUDGE/JUDGE2 statement is enabled. The function can be set or reset using the methods shown below.

Interactive data entry method

```

/SELERR
SELECT ERROR MODE 1:JUDGE COUNT CHECK 1
                                     ↑
                                     Selected error mode
JUDGE COUNT CHECK, ENABLE(E) or DISABLE(D) ? [DISABLE]  E
                                     ↑           ↑
                                     Current setting New setting
If you specify "E", the error check function is enabled.
If you specify "D", the error check function is disabled.

```

Programming method

```

PRO SAMPLE

CALL LIB SELERR("1,E")
    ↑
END           Specifying "E" enables the error check function.
              Specifying "D" disables the error check function.

```

3737

A reference-off was executed to protect the relay from a spike even when Wet mode was specified.

This error occurs in the VS, HVS, VSIM, HVSIM, ISVM, VCON or MMEAS statement while the /ROFCHK command is being set to ENABLE.

Solutions

1. Change the condition used to execute a reference-off, even when Wet mode is specified.
2. Set DISABLE for the ROFCHK command.

3740

Abnormal voltage output from DPS (PPS) has been detected.
Execute DIAG.

11. LPAT Compilation Error Codes (4000 to 4777)

Error codes are represented in octal in the table.

11. 1 Error Message List

4000

Character string described at the beginning of the line includes unreserved characters.

4001

An illegal character was used.

4002

Label cannot be written in from of pattern declaration statement.

4003

The same label name cannot be defined more than once.

4004

There are more than 16 REPEAT statements.

4005

Label cannot be used in an operand.

4006

When VGC Store is split by PART statement, branching to another block is not possible.

4007

A character apart from M, H, or T has been written after "/", indicating start of control data.

4010

The data for the timing set number selected by on-the-fly cannot be described more than once.

4011

Timing set number specification is incorrect for on-the-fly timing selection.

4012

The data for the timing set number selected by on-the-fly has not been written.

4013

Control data M has been described more than once.

4014

Control data H has been described more than once.

4015

The subscript n in IDXn and LDIn must be from 1 to 16.

4016

The pattern specified by REPEAT statement is too deep.

4017

The REPEAT statement cannot be described within the depth of the pattern specified by "l" of REPEAT l, m.

4020

REPEAT statement cannot be described before pattern declaration statement PF.

4021

The "l" of REPEAT l, m is incorrect.

4022

The "m" of REPEAT l, m is incorrect.

4023

The "l" and "m" of REPEAT, l and m exceeds the maximum value of the STEV Buffer.

4024

"l" and "m" of REPEAT l, m do not exist.

4025

Operand cannot be described.

4026

PART statement cannot be described after the pattern declaration statement CFPF or CF.

4027

Character strings following PART are limited to BEGIN and END.

4030

END is described within the interval of REPEAT l, m.

4031

The PART statement must begin with PART BEGIN and end with PART END.
There is no PART BEGIN.

4032

The PART statement must begin with PART BEGIN and end with PART END.
There is no PART END.

4033

When any of the following instructions is placed just before the PART END or END statement, the instruction is not executed unless the SPA register has been set.
RTN, RTNI, RSP, and JMP

4034

RESIDENT statement cannot be described before the pattern declaration statement CFPF or CF.

4035

PART statement cannot be described before RESIDENT statement.

4036

Character strings following RESIDENT are limited to BEGIN and END.

4037

When a branch instruction is in the RESIDENT part, VGC instruction (RTN etc.) except NOP is required between the place of branch and RESIDENT END.

Example:

```

RESIDENT BEGIN
JMP AA  !1H
NOP      !1H
AA: NOP   !1H
RESIDENT END

```

← RTN is required in this area.

4040

The RESIDENT statement must begin with RESIDENT BEGIN and end with RESIDENT END.

There is no RESIDENT BEGIN.

4041

Instructions cannot be described before the RESIDENT statement.

4042

RESIDENT statement cannot be described more than once.

4043

0 cannot be described in the operand of the IDXI and STFI instructions.

4044

Operand of OUT or OUTB is incorrect.

Example:

```

OUT 123
OUTB #ABC

```

The operand must be BURST block name.

4045

Operand value exceeds the allowable range.

4046

Operand (BURST block name) of OUT or OUTB has been omitted.

4047

When switch /G is specified during compilation, STPS must be written if the program ends by any one of the sequence control instructions below.

RTN, RTNI, RSP, and JMP

4050

When VGC store is in partition mode, a pattern is not declared in the RESIDENT statement or PART statement.

4051

The STORAGE statement should be written before the pattern declaration statement.

4052

The area defined in the STORAGE statement exceeds the maximum value of the STEV buffer.

4053

The second CHANNEL statement is not preceded by a pattern description.
It must be preceded by at least one pattern description.

4054

Specified channel number is not among those specified by first CHANNEL statement.

4055

Specified channel numbers do not correspond to any pattern field partition.
The channel numbers specified by second or subsequent CHANNEL statement must specify pattern fields.

4056

The channel number sequence differs from that in first CHANNEL statement.
Example:

```
CHANNEL1-8
PF
01NPLHZX
CHANNEL1, 2, 3, 4, 6, 5, 7, 8
```

4057

BURST BLOCK BEGIN/END statement is incorrect.

Example:

```
BURST BLK BEGIN (ABC)
```

4060

BURST BLOCK BEGIN statement is included in BURST BLOCK.
But BURST BLOCK END statement is not.

4061

Burst block name is missing in BURST BLOCK BEGIN statement.
Or, "(" or ")" is missing.

Example:

```
BURST BLOCK BEGIN (BST00
```

4062

Burst block name specified in BURST BLOCK BEGIN statement was previously specified.

4063

BURST BLOCK BEGIN statement is missing.

Example:

```
LPAT  
MODE FULL  
BURST BLOCK END
```

4064

An illegal test condition statement was specified in the burst block.
Only the following test condition statements can be specified in the burst block.
VS, VT, START MDC, IN, IL, SEND EXT, OUT, START UDC

4065

The equal sign (=) is not specified in the test condition statement in the burst block.

4066

The channel number specified in VS statement is not 1 to 4.

ASX/V-30

The channel number specified in the VS statement is not 1 to 8.

4067

Data value specified in VS statement is incorrect.

4070

The channel number specified in the IN statement is not 1 to 8.

4071

V_{IH} specified in the IN statement is incorrect.

4072

V_{IL} specified in the IN statement is incorrect.

4073

V_{IH} is not equal to or greater than V_{IL} in the IN statement.

4074

The channel number specified in the OUT statement is not 1 to 8.

4075

V_{OH} specified in the OUT statement is incorrect.

4076

V_{OL} specified in the OUT statement is incorrect.

4077

The channel number specified in the VT statement is not 1 to 8.

4100

Multiple definition of title statement LPAT. LPAT cannot be described more than once in the same program.

4101

No file-name in title statement LPAT.

Example:

```
LPAT.↓
```

4102

File-name, socket-name, or define-name has been described more than once in title statement LPAT.

Example:

```
LPAT PAT00, PAT01, PAT02.↓
```

4103

Error in file-name description in title statement LPAT.

4104

Pattern generator function mode declaration statement MODE is located after the pattern declaration statement.

4105

No operation mode description in the pattern generator function mode declaration statement MODE.

Example:

```
MODE.↓
```

4106

Pattern generator function mode declaration statement MODE does not include operation mode stipulation.

Example:

```
MODE ABC.↓
```

4107

Simultaneous setting of FULL, HALF, or QUARTER in pattern generator function mode declaration statement MODE.

Or else, PAUSE and REFRESH have been set simultaneously.

4110

Register declaration statement REGISTER located after the pattern declaration statement.

4111

Multiple definition of register declaration statement REGISTER. REGISTER cannot be described more than once in the same program.

4112

No radix description in the radix declaration statement RDX.

Example:

```
RDX.␣
```

4113

Radix declaration statement RDX radix does not lie within permitted range (2 to 16).

4114

Address declaration statement LOC is located before the pattern declaration statement.

4115

Address declaration statement LOC lies within the repeat range.

4116

Error in the STEV Buffer description in the address declaration statement LOC.

4117

STEV Buffer SIZ in address declaration statement LOC exceeds maximum address. Or else, a value smaller than the current address has been specified.

4120

Error in file-name description in INSERT statement.

4121

Multiple definition of pattern declaration statement. The pattern declaration statement can only be described once within the same program.

4122

No channel definition statement before pattern declaration statement CFPF or PF.

4123

Not used

4124

Not used

4125

Error in channel number.

Example:

```
CHANNEL1, 2, 3, A, 4
```

4126

The channel number is greater than that defined by socket file.

4127

The channel number has been defined in multiplicate.

Example:

```
CHANNEL 1, 2, 3, 2
```

4130

The channel numbers before and after a hyphen (-) are coincident.

Example:

```
CHANNEL 1, 2, 3, 8-8
```

4131

No channel number description.

Example:

```
CHANNEL┐
```

4132

Data value specified in VT statement is incorrect.

4133

The channel number specified in IL statement is not 1 to 8.

4134

I_H specified in the IL statement is incorrect.

4135

I_L specified in the IL statement is incorrect.

4136

UDC or MDC specification is missing in the START UDC or MDC statement. Or there is an error.

Example:

```
START UCD
START.J
```

4137

Destination address specified by JUMP instruction is outside STEV buffer memory size specified by program.

4140

No register declaration statement.

4141

No corresponding register.

Example:

```
ABC=# 100
```

4142

No equal sign (=) in register definition statement.

Example:

```
SPA # 100
```

4143

Right hand side data exceeds maximum value of left hand side register.

4144

Each line must be terminated by carriage return (↵).

4145

Multiple definition of B,H, or I in SPA register setting, or else, B and H have been described simultaneously.

4146

Improper B,H,I separator in SPA register settings.

4147

"0" cannot be set in the FIDX register.

4150

Not used

4151

Does not correspond to prescribed pattern.

4152

The number of pattern descriptions exceeds the number specified by channel definition statement CHANNEL.

Example:

```
CHANNEL 1-4  
PF  
01NPL
```

4153

The channel number corresponding to this pattern exceeds that defined by socket file.

The pattern channel arrangement is specified by the channel definition statement CHANNEL.

4154

The channel mode of this pattern is not correct.

The pattern channel mode is determined by the first pattern, and no further switching is possible within the same program.

4155

Since the field splitting differs from the previous pattern, a hyphen (-) cannot be used.

4156

Hyphens (-) cannot be used in the first pattern.

4157

The number of pattern descriptions is less than the number specified by the channel definition statement CHANNEL.

Example:

```
CHANNEL 1-4
PF
01N.J
```

4160

BURST BLOCK BEGIN statement is preceded by pattern declaration statement.

Example:

```
CF
NOP
BURST BLOCK BEGIN (BST00)
```

4161

BURST BLOCK END statement is preceded by pattern declaration statement.

Example:

```
CF
NOP
BURST BLOCK END
```

4162

Burst block contains pattern declaration statement.

Example:

```
BURST BLOCK BEGIN (BST00)
CFPF
BURST BLOCK END
```

4163

No data description.

4164

Multiple definition symbol has been used.

4165

Error in address data description.

Address data must be described with a ".".

Example:

```
JMP . * ↓
```

4166

Data is negative, or exceeds 32 bits. Or else, there is an error in the data description.

4167

No time data description.

4170

Error in the use of the time data point ".".

Point described in data without unit, or more than one point has been described.

Example:

```
TIMER=123.4
TIMER=12.3.4MS
```

4171

Time unit does not correspond to any prescribed unit. Or else # or alphabetic character has been used in data with unit.

Example:

```
TIMER=123.4PS  
TIMER=AB0MS
```

4172

Time data is not in the allowable range.

Example:

```
TIMER=99.9NS  
TIMER=409.6S  
TIMER=8000
```

4173

Time data must be described within 10 characters apart from the # and unit.

4174

EXT specification is missing in SEND EXT statement or is incorrect. Or there is an error.

Example:

```
SEND EXT  
SEND.↓
```

4175

"(" or ")" is missing in the address specification in the SEND EXT statement.

Example:

```
SEND EXT #123456) #100  
SEND EXT (#123456#100
```

4176

The address is not specified correctly in the SEND EXT statement.

Example:

```
SEND EXT (XYZ) #100  
SEND EXT ( ↓
```

4177

The address is not specified correctly in the SEND EXT statement.

The range of an address is from #100000 to #FFFFFF.

4200

The data is not correctly specified in the SEND EXT statement.

Example:

```
SEND EXT (#100000) XYZ
SEND EXT (#100000)↵
```

4201

Data specification in test condition statement is incorrect.

Example:

```
VS1=ABC
IN2=XYZ
```

4202

Data unit is not specified in test condition statement.

Example:

```
OUT=3, 4V
OUT1=3V, 4
```

4203

An illegal unit was used in the test condition statement.

Example:

```
VT1=2.0KV
VT2=3.5R
```

4204

Overflow occurred at the test condition statement data internal operation. Set a higher unit value.

Example:

```
VT3=9999999V
```

4205

Range specification in VS statement is incorrect.

Example:

```
VS1=1V, ABC
VS1=1V, R( ↵
```

4206

Range unit specified in VS statement is not V.

Example:

```
VS1=1V, R(8X)
VS1=1V, R(8)
```

4207

"(" or ")" is missing in the range specification in the VS statement.

Example:

```
VS1=1V, R8)
VS1=1V, R(8V
```

4210

Not used

4211

Not used

4220

This label name has been declared common in the DEFINE program.

4221

The channel number in the CHANNEL definition statement described in the DEFINE program is greater than the corresponding number defined in the socket file.

4222

Too many prescribed patterns.

4223

Although normal mode has been defined in the real-time sense control mode definition statement CHANNEL<...> in the DEFINE program, a real-time sense control mode prescribed pattern (RSTUABCD) exists.

4224

Although real-time sense control mode has been defined in the real-time sense control mode definition statement CHANNEL<...> in the DEFINE program, a normal mode prescribed pattern (10NPLHZX) exists.

4225

It does not suit the regulated pattern.

4226

PF variable description contains an error.

Example:

```
! '±PF00'FP01
```

4227

This PF variable has not been defined.

Check whether the symbol has been defined in the DEFINE program or not, and whether it has been declared common.

4230

The channel number of this PF variable is greater than the number defined in the socket file.

4231

The channel list of this PF variable differs from the field variable.

Example:

```
!FLO<' PF00>
  ↑      ↑
```

Different channel lists

4232

Left and right hand brackets differ in a field variable description.

Example:

```
!FLO<' PF00>
```

4233

Prescribed brackets have not been used in the field variable description. The brackets which may be used are listed below.

1. < >
2. []
3. ()
4. ? ?
5. / /

4234

The channel number of this field variable is greater than the number defined in the socket file.

4235

Hexadecimal data in excess of 32 bits. Or else no data exists.

Example:

```
!FLO<#>
```

4236

Multiple definition of this label.

Example:

```
LB0 :  
LB0 :  
:  
!FLO<LB0>
```

4237

In field variables where the field width is greater than 32 channels, hexadecimal data, synonymous symbols and label cannot be used inside the brackets.

4240

Channel patterns defined in the real-time sense control mode in the real-time sense control mode definition statement CHANNEL<...> within the DEFINE program cannot be described by a field variable enclosed by "/" /."

4241

This macro call has exceeded the variable area during execution.

4242

During execution of this macro call, the subscript in the array variable described by a general variable is either 0, or exceeds the number DIMENSIONS.

Example:

<u>DM0</u>	<u>(VAR)=10</u>	;; In the data shown at the left, the value of VAR is
↑	↑	;; either 0 or exceeds the number of DM0s.
Array	General	
variable	variable	

4243

This synonymous symbol has not been defined.

Check whether the symbol has been defined in the DEFINE program or not, and whether it has been declared common.

Or else "#" has not been appended to the hexadecimal number beginning with an alphabetic character.

4244

The DEFINE statement must be described before the pattern declaration statement.

4245

Multiple number of DEFINE statements.

4246

Define file description in the DEFINE statement contains an error.

4247

DEFINE statement has been preceded by the channel definition statement CHANNEL.

4250

The pattern declaration statement has been preceded by MSET statement.

4251

MSET statement without DEFINE designation.

4252

MSET statement has already been defined earlier.

4253

MRESET statement is not preceded by an MSET statement.
MSET and MRESET statements must always be used in pairs.

4254

The CHANNEL definition statement has already been specified in the DEFINE program.

4255

This BURST block name has been declared common in the DEFINE program.

4256

Pattern declaration statement has been preceded by macro call statement.

4257

Macro call statement is located within pattern repetition statement REPEAT interval.

4260

Macro name in the macro call statement contains an error.

4261

This macro name on the macro call statement has not been defined in the DEFINE program.

4262

The macro call statement actual argument contains an error.

4263

The number of actual arguments in the macro call statement is greater than the number of dummy arguments in the macro definition statement.

4264

Although no exception jump destination has been specified in the arithmetic GOTO statement during execution of this macro call statement, the control variable indicates an exception value.
Example:

```
VAR=4  
GOTO (VAR) LB1, LB2, LB3
```

4265

Macro call nesting level in excess of 10 during execution of this macro call statement.

4266

The number of actual arguments in macro call nesting exceeds the number of macro definition dummy arguments during execution of this macro call statement.

4267

The value in the timing set number variable designation is incorrect during execution of this macro call statement.

4270

The STT or PAUSE operand is incorrect in the operand variable designation during execution of this macro call statement.

4271

The IDXI or STFI operand is incorrect in the operand variable designation during execution of this macro call statement.

4272

The STC or STAPH operand is incorrect in the operand variable designation during execution of this macro call statement.

4273

This label name has been used as a BURST block name.

4274

The n in the address direction pattern generation statement CHANNELn is greater than that defined in the socket program.

4275

An illegal combination was used in the same channel pattern in the pattern multiple designation. Only the following combinations are permitted in multiple pattern designations.

1. Same pattern
2. 0 and 1
3. L and H
4. N and P
5. X and 0, 1, N, P, L, H
6. Z and L, H, X

4276

Specify "STAPL" or "STAPH."

4277

Control data E cannot be described more than once.

4300

Each register bit number in the ADDRESS statement is less than the minimum value.

4301

Each register bit number in the ADDRESS or ARIRAM statement is greater than the maximum value.

4302

Each register start bit number in the ADDRESS statement is greater than the stop bit number.

4303

No "=" in the ADDRESS or ARIRAM statement.

4304

Error in the data description sequence. Or else an illegal character has been used.

4305

The number of bits is not the same on the left and right hand sides in the ADDRESS statement.

4306

Duplicate designation of register name in the ADDRESS statement.

Example:

X4-6=N0-0, N0-1

4307

The number of ALPG mnemonics which can be defined by SDEF is 50.

4310

Error in the ALPG address data generator command.

4311

ALPG address data generator commands in the same field cannot be described in combinations.

4312

The number of operators in each register must not exceed 10.

4313

SDEF definition name has been duplicated.

4314

The following combinations are not permitted in X, Y, L and H fields.

1. XC>X, XB>Y
2. XC>X, XB'Z>Y
3. XB>X, XC>Y
4. XB>X, XC'Z>Y
5. YC>X, YB>Y
6. XC'Z>X, XB>Y
7. XC'Z>X, XB'Z>Y
8. XB'Z>X, XC>Y
9. XB'Z>X, XC'Z>Y

4315

ALPG instruction has been described without the ALPG declaration in the MODE statement.

4316

Control data A cannot be described more than once.

4317

The number of scan patterns is not an integer multiple of the number of channels in "DBM CHANNEL".

4320

Scan pattern exists without a description of the channel definition statement DBM CHANNEL.

4321

The number of scan patterns does not meet the following conditions.

Number of scan patterns = (IDX1 operand)*(Number of channels in "DBM CHANNEL")

4322

It does not suit the regulated pattern.

Or μ PU mode patterns cannot be described as scan patterns.

4323

A value smaller than the current DBM address has been set by the previously described STAPL or STAPH instruction.

4324

DBM patterns cannot be described before the pattern generation statement.

Or the pattern generation statement cannot describe DBM patterns in "CF".

4325

DBM patterns cannot be described if there is no preceding VGC instruction apart from NOP.

4326

The DBM PF variable does not match the channel position of the DBM field variable.

4327

The left and right brackets of the DBM field variable are not in agreement with each other.

4330

This kind of bracket cannot be used with DBM field variables.

4331

The hexadecimal data enclosed by the DBM field variable brackets contains an error.

4332

The number of channels in the DBM CHANNEL statement exceeds 32.

4333

Refresh count is incorrect.

4334

The CHANNEL or CHSEL statement has already been described.

4335

The CHSEL statement has been described before the pattern declaration statement.
Or the CHANNEL or CHSEL statement has already been described in the DEFINE program.

4336

CHSEL statement channel number does not lie in the correct range. Or, it is greater than the maximum number of channels in the socket program.

4337

DBM CHANNEL statement has not been preceded by a CHANNEL statement.

4340

Channel list and CHANNEL statement contents do not agree. Specify the DBM CHANNEL statement channel list from left to right of the channel list in the CHANNEL statement.

4341

Multiple definition of the DBM CHANNEL statement.
Or, there is multiple definition of the channel number.

4342

This channel number has not been defined in the CHANNEL statement.
Or the channel number contains an error.

4343

SCRAM statement related error which occurs in the following cases.

1. SCRAM statement preceded by pattern declaration statement.
2. Multiple definition of the SCRAM statement.
3. Error in the scramble file name.

4344

Multiple definition of the ARIRAM DEFINE or ADDRESS DEFINE statement.

4345

Error in the position of the ARIRAM DEFINE or ADDRESS DEFINE statement.

This error may be due to the description being positioned after the pattern declaration statement or within the burst block.

4346

When ALPG is used, patterns cannot be generated by macro call within the STE address 0 to 3FF range.

4347

The "=" is missing from the ALPG register statement.

4350

The right-hand side data in the ALPG register statement contains an error. Or it exceeds the maximum value.

4351

The ALPG register statement register name contains an error.

4352

The right hand side data in the DBM register statement contains an error.

4353

The n of JNCn must be 1 to 4.

4354

Undefined pin exists in DBM CHANNEL statement.

4355

DBM CHANNEL statement cannot be written before DBM PATTERN statement.

4356

DBM PATTERN statement cannot be written after a pattern declaration statement.

4357

In the DBM PATTERN statement, specify A, AB, and ABC.

4360

DBM PATTERN ABC cannot be specified when 32 channels are used in DBM CHANNEL statement.

4361

DBM PATTERN statements have been multiple defined.

4362

Variable specification of operand is incorrect for this macro-call.

4363

In terms of variable specification of this macro-call, operand of STAPL, STME or STMC is incorrect.

4364

VS data is incorrect in range omission.

4404

The specified socket program cannot be used on this system.

4405

The specified define program cannot be used on this system.

4406

A CR (Carriage Return) is not placed at the last of the line.

4500

Multiple description of title statement DEFINE.

4501

The define file name description in the title statement DEFINE contains an error.

Example:

```
DEFINE*ABC
```

4502

No radix description in the radix declaration statement RDX. Or, not in the range of 2 to 6.

4503

The variable name description has been omitted from the common declaration statement COMMON. Or the variable name contains an error.

Example:

```
COMMON*ABC
```

4504

The variable name described in the common declaration statement COMMON does not exist in the same program.

The COMMON statement can contain a description of a synonymous symbol, a CF variable, a field variable, or a PF variable.

4505

Error in the position of the channel definition statement CHANNEL.

Describe CHANNEL before the CF definition declaration statement CFDEF and the PF definition declaration statement PFDEF.

4506

Multiple description of the channel definition statement CHANNEL.

4507

The same channel number has been found in the channel definition statement CHANNEL.

4510

The real-time sense control mode definition statement CHANNEL has not been described in the correct position.

Describe CHANNEL before the CF definition declaration statement CFDEF and the PF definition declaration statement PFDEF.

4511

Multiple description of the real-time sense control mode definition statement CHANNEL.

4512

The real-time sense control mode definition statement CHANNEL contains no channel number description.

4513

No file name description in the INSERT statement. Or the file name contains an error.

4514

Error in the position of the CF definition declaration statement CFDEF.

It is possible that more than one CFDEF statement has been described, or that it has preceded the PFDEF statement.

4515

Error in the position of the PF definition declaration statement PFDEF.

Check that no more than one PFDEF statement has been described.

4516

Error in the position of the array variable definition statement DIM or DIMENSION.

Describe DIM and DIMENSION before CFDEF and PFDEF.

4517

The array variable definition statement DIM or DIMENSION contains no DIM name. Or there is an error.

Example:

```
DIM*ABC (10)
```

4520

The number of DIMs in the array variable definition statement DIM or DIMENSION exceeds the permitted limit. Specify the number of DIMs within the range of 1 to 65535.

Example:

```
DIM DDX0 (0)  
DIM DDX1 (65536)
```


4521

The ")" is missing from the description of the number of DIMs in the array variable definition statement DIM or DIMENSION.

Example:

```
DIM DDX0 (10
```

4522

This DIM name has already been defined in the array variable definition statement DIM or DIMENSION.

4523

When data initialization is designated in the array variable definition statement DIM or DIMENSION, the number of DIMs must be described in advance.

Example:

```
DIM ABC=0!5  
    ↑
```

Error because number of DIMs has not been specified.

4524

The "=" (equal) sign in the array variable definition statement DIM or DIMENSION data initialization designation has not been followed by a character string.

Example:

```
DIM ABC (10) =
```

4525

The array variable definition statement DIM or DIMENSION data initialization designation contains an error in the initialization data. The data possibly exceeds 32 bits, or is an undefined synonymous symbol.

Example:

```
DIM ABC (10) =123456789!5
```

4526

The "!" separator between the repetition count and the initialization data in the array variable definition statement DIM or DIMENSION is missing.

Example:

```
DIM ABC(10)=1234Δ5
```

4527

Error in the repetition count in the array variable definition statement DIM or DIMENSION. The repetition count possibly exceeds 32 bits, or is an undefined synonymous symbol.

Example:

```
DIM ABC(10)=1234!EOA
                ↑
            Undefined
```

4530

The repetition count has exceeded the number of DIMs in the array variable definition statement DIM or DIMENSION.

Example:

```
DIM ABC(10)=1234!11
                ↑   ↑
            Repetition count exceeds number of DIMs
```

4531

The repetition count is 0 in the array variable definition statement DIM or DIMENSION.

Example:

```
DIM ABC(10)=1234!0
```

4532

Error in the position of the address direction pattern generation statement CHANNELn description.

Describe CHANNELn before CFDEF and PFDEF.

4533

The "[" part indicating the address is missing in the address direction pattern generation statement CHANNELn description. In CHANNELn, the pattern generation start address must always be enclosed by "[]".

4534

Error in the pattern generation start and/or end address in the address direction pattern generation statement CHANNELn description. The data possibly exceeds 32 bits, or is an undefined synonymous symbol.

4535

The "]" part of the address is missing in the address direction pattern generation statement CHANNELn description.

4536

No "=" (equal) sign in the address direction pattern generation statement CHANNELn description.

4537

No character string following the "=" (equal) sign in the address direction pattern generation statement CHANNELn description.

4540

No ! separator between the data and repetition count in the address direction pattern generation statement CHANNELn description.

Example:

```
CHANNEL1[10, 20]=01NPLHZX1
```

4541

Error in the repetition count in the address direction pattern generation statement CHANNELn description. Either the repetition count is incorrect range, or an undefined synonymous symbol has been used.

Example:

```
CHANNEL256[100, 200]=RSTUABCD!EOA
                        ↑
                    Undefined
```

4542

The pattern generation start address is greater than the end address in the address direction pattern generation statement CHANNELn description.

Example:

```
CHANNEL128[300, 50]=01NP!100
```

4543

The pattern in the address direction pattern generation statement CHANNELn description is a non-prescribed pattern.

Example:

```
CHANNEL96[10, 20]=01WP
```

4544

The pattern mode of the pattern in the address direction pattern generation statement CHANNELn description has been changed at an intermediate position.

Example:

```
CHANNEL10[10, 20]=0000R00!1
```

4545

The n in the address direction pattern generation statement CHANNELn description lies outside the range.

Example:

```
CHANNEL0[10, 20]=LLH!3  
CHANNEL256[10, 20]=HHL!3
```

4546

The number of patterns in the address direction pattern generation statement CHANNELn description is in excess of 256.

Example:

```
CHANNEL15[0, 1000]=00001111 ...ZZZZXXXX!10
```

↑

This pattern must not exceed 256.

4547

The pattern described in the address direction pattern generation statement CHANNELn description differs from the pattern mode of the real-time sense control mode definition statement CHANNEL< >.

Example:

```
CHANNEL<2, 4, 6, 8> CHANNEL2[10, 20]=00000!2
CHANNEL3[10, 20]=R0000!2
```

4550

The address direction pattern generation statement CHANNELn has already been defined earlier for the same channel, and the address is overlapping.

Example:

```
CHANNEL10, [10, 20]=01NP!3
CHANNEL10, [30, 40]=LHZX!3
CHANNEL10, [15, 25]=01NP!3    ;; error
```

4551

Error in the position of the field definition statement FIELD. Describe the FIELD statement after the PF definition declaration statement PFDEF and before the first MACRO statement after that.

4552

The field definition statement FIELD has no initial channel definition statement CHANNEL.

4553

Error in the field definition statement FIELD field name.

Example:

```
FIELD*ABC<1-8>
```

4554

A "<" is missing from the field definition statement FIELD.

Example:

```
FIELD ABC1-8>
```

4555

The field definition statement FIELD contains no channel number description.

Example:

```
FIELD ABC< >
```

4556

This channel number in the field definition statement FIELD has not been specified in the channel definition statement CHANNEL.

Example:

```
CHANNEL 1, 3, 5, 7
PFDEF
FIELD ABC<2, 3, 5, 7>
```

4557

The channel list in the field definition statement FIELD differs from the channel definition statement CHANNEL.

Example:

```
CHANNEL 1-8
PFDEF
FIELD ABC<3, 4, 5, 2>
```

4560

A ">" is missing from the field definition statement FIELD.

Example:

```
FIELD ABC<1-8
```

4561

Multiple definition of field name in the field definition statement FIELD. A synonymous symbol of the same name, a CF variable, a field variable, a PF variable, or an array variable has been described in advance.

4562

The field definition statement FIELD is positioned after the macro block. Describe the FIELD statement before the first MACRO statement.

4563

Not used

4564

The multiple field designation in the field definition statement FIELD includes intersecting with a previously defined field.

Example:

```
FIELD FL0<1-8>
FIELD FL1<5-8>
FIELD FL2<5-9>    ;; error
```

4565

Error in the position of synonymous statement.

4566

Definition by left hand symbol in the synonymous statement is not possible. That is, a synonymous symbol or an array variable of the same name as that on the left has already been defined.

Example:

```
DIM EQA(10)
EQA=0
```

4567

Multiple definition of the left hand synonymous symbol in the synonymous statement.

Example:

```
EQA=0
EQB=10
EQA=100    ;; Error
```

4570

"=" is missing in the synonymous statement.

4571

The left hand side of the synonymous statement contains an error. This error is generated if "@" is used in the left hand character string.

4572

Error in the position of CF definition statement.

4573

Multiple definition of the left hand CF variable in the CF definition statement. That is, a synonymous symbol of the same name, an array variable, or a CF variable has already been defined.

4574

The "=" sign is missing from the CF definition statement.

4575

Error in the right hand side symbol in the CF definition statement.

Example:

```
CFDEF  
XNOP=*NOP /M
```

4576

In the CF definition statement, the right-hand side symbol is not a prescribed instruction. Or it is an undefined CF variable.

4577

The left hand side of the CF definition statement contains an error. This error is generated if "@" is used in the left hand character string.

4600

Error in the right hand side instruction operand in the CF definition statement. The operand is either in excess of 32 bits, or is an undefined synonymous symbol.

4601

The right hand side instruction operand in the CF definition statement is incorrect.

4602

The right hand side instruction operand in the CF definition statement is incorrect. Or else the pattern is undefined.

4603

The control data on the right hand side of the CF definition statement is not /M, /H, or /T.

4604

Multiple definition of control data /M on the right hand side of the CF definition statement.

4605

The data enclosed by the "< >" in the control data /M on the right-hand side of the CF definition statement is in excess of 32 bits. Or else the pattern is undefined.

4606

The ">" is missing from the controlled data /M on the right-hand side of the CF definition statement.

4607

Multiple definition of control data /H on the right hand side of the CF definition statement.

4610

The data enclosed within the "< >" in the control data /H on the right-hand side of the CF definition statement is in excess of 32 bits. Or else the pattern is undefined.

4611

The ">" is missing from the controlled data /H on the right-hand side of the CF definition statement.

4612

Multiple definition of control data /T on the right hand side of the CF definition statement.

4613

The data enclosed within the "< >" in the control data /T< > on the right-hand side of the CF definition statement is incorrect. Or else the pattern is undefined.

4614

The ">" is missing from the controlled data /T on the right-hand side of the CF definition statement.

4615

The value of n in control data /Tn on the right-hand side of the CF definition statement is incorrect. Or else no n exists.

4616

Error in the operand time data on the right-hand side of the CF definition statement. Or, this synonymous symbol has not been defined.

4617

Not used

4620

Error in the position of PF definition statement.

4621

Multiple definition of the left hand PF variable in the PF definition statement. That is, a synonymous symbol of the same name, a CF variable, a field variable, or an array variable has already been defined.

4622

Multiple definition of the left hand PF variable in the PF definition statement. That is, a PF variable of the same name has already been defined.

4623

The "=" sign is missing from the PF definition statement.

4624

Not used

4625

Not used

4626

Not used

4627

Not used

4630

The left hand side of the PF definition statement contains an error. This error is generated if "@" is included in the left-hand side character string.

4631

Not used

4632

Error in the position of the program end declaration statement END or DEFINE END description. Since this error is generated if the statement is described in the macro block, insert the macro block end declaration statement MEND.

4633

Error in the END description of the program end declaration statement DEFINE END.

Example:

```
DEFINE ABC
:
DEFINE EXD  ;; Error
```

4634

Not used

4635

This kind of control statement does not exist.

4636

Error in the position of the synonymous statement, or the CF or PF definition statement description. Describe the PF definition statement after the field has been specified in the field definition statement.

4637

An illegal character has been detected.

4640

Error in the label description position. Labels can only be described within a macro block.

4641

Multiple definition of this label. That is, a synonymous label, a synonymous symbol, a CF variable, a field variable, a PF variable, an array variable, or a general variable has already been defined.

4642

Not used

4643

Error in the label name of a DO or GOTO statement. Describe labels as alphanumeric character strings with up to six characters and beginning with an alphabetic character.

4644

This label (located in a DO or GOTO statement) exists in another macro block.

4645

This label is undefined in the DO or GOTO statement.

4646

Not used

4647

MACRO statements cannot be described within macro blocks.

Example:

```
MACRO M0
:
MACRO M1
:
MEND      ;; Error
```

4650

Error in the position of the MACRO statement description. Describe MACRO statements after the PF definition declaration statement PFDEF.

4651

Error in the macro name within the MACRO statement. Describe macro names as alphanumeric character strings with up to six characters and beginning with an alphabetic character.

4652

Multiple definition of this macro name within the MACRO statement. That is, the same macro name has already been defined.

4653

Constants and synonymous symbols cannot be described in MACRO statement dummy arguments.

Example:

```
MACRO M0<PAR0, PAR1, 100, PAR2>
```

4654

Error in the position of the MEND statement description. MEND statements must be described in pairs with MACRO statements.

4655

Error in the position of an assignment statement.

4656

The left hand side of an assignment statement is a constant or a synonymous symbol. This error is generated if "@" is included in the left-hand side character string.

4657

The "=" (equal) sign is missing from the assignment statement.

4660

Error in the position of the WRITE statement. WRITE statements can only be described within a macro block.

4661

The "]" bracket is missing from the WRITE statement.

Example:

```
WRITE[0, #10 "CHECK", /
```

4662

Constants and synonymous symbols cannot be output by WRITE statement. WRITE statements are capable of output of general variables, array variables, CR (carriage return), and character strings.

4663

Error in the position of the GOTO statement. GOTO statements can only be described within a macro block.

4664

Constants and synonymous symbols cannot be used as control variables in arithmetic GOTO statements.

Example:

```
GOTO (10) LB1, LB2, LB3...
```

4665

The ")" bracket is missing from the arithmetic GOTO statement control variable.

Example:

```
GOTO (VAR LB1, LB2, LB3...
```

4666

No label included in the arithmetic GOTO statement.

Example:

```
GOTO (VAR)
```

4667

The maximum number of branching labels in arithmetic GOTO statements is 36 except when exception branching labels are used.

4670

Error in the TO of the GO TO statement.

Example:

```
GO TT LB0
```

4671

Error in the position of the macro call statement description.

Macro call statements can only be described within a macro block.

4672

Error in a macro call statement macro name. Describe macro names as alphanumeric character strings with up to six characters and beginning with an alphabetic character.

Example:

```
↑*ABC
```

4673

The current macro block is being called.

Example:

```
MACRO M0
  ↑M0      ;; Error
MEND
```

4674

A macro block of this name does not exist in the same program.

4675

Error in the position of the RNSET statement description. RNSET statements can only be described within a macro block.

4676

Error in the position of the MSET statement description.

4677

MRESET statement is not preceded by an MSET statement.

4700

Error in the position of a DO statement. DO statements can only be described within a macro block.

4701

DO statement nesting exceeds 5 levels.

4702

Constants and synonymous symbols cannot be used as control variables in DO statements.

Example:

```
DO LOOP 100=1, 10, 1
```

4703

The "=" (equal) sign is missing from the DO statement.

Example:

```
DO LOOP I 1, 10, 1
```

4704

The DO statement terminal label is located in front.

Example:

```
LOOP:
      :
DO LOOP I=1, 10, 1
```

4705

Error in the DO statement terminal label. Describe labels as alphanumeric character strings with up to six characters and beginning with an alphabetic character.

Example:


```
DO *LOOP I=1, 10, 1
```

4706

A DO loop in DO statement nesting is intersecting with another DO loop.

Example:

```
DO LOOP0 I=1, 10, 1
DO LOOP1 J=1, 20, 1
LOOP0:
LOOP1:
```



4707

Error in the position of an IF statement. If statements can only be described within a macro block.

4710

Not used

4711

A maximum of an addition 32 IF statements can be described within the interval from THEN ENTRY or ELSE ENTRY up to EXIT in an IF statement.

4712

This EXIT has not been preceded by a corresponding THEN ENTRY or ELSE ENTRY.

Example:

```
IF A=0 THEN ENTRY
B=0
EXIT
EXIT;; Error
```

4713

This THEN has no corresponding IF statement.

4714

THEN has already been specified in this IF statement. Or there is no EXIT for the immediate preceding ELSE.

Example:

```
IF A=0 THEN ENTRY
B=0
EXIT
THEN ENTRY ;; Error
```

or

```
IF A=0 ELSE ENTRY
B=0
THEN ENTRY ;; Error
```

4715

This ELSE has no corresponding IF statement.

4716

ELSE has already been specified in this IF statement. Or there is no EXIT for the immediate preceding THEN.

Example:

```
IF A=0 THEN
ELSE B=0
ELSE ENTRY
      ;; Error
```

or

```
IF A=0 THEN
      ENTRY
B=0
THEN ENTRY  ;; Error
```

4717

All three "=", "<", and ">" have been detected in a conditional IF statement. Or else, any two have been detected.

Example:

```
IF A<=>0  ;; Error
:
IF A<< 0  ;; Error
```

4720

No CR at end of one line.

4721

Not used

4722

Not used

4723

Error in the position of the pattern generation statement description. Pattern generation statements can only be described within macro blocks.

4724

The pattern generation statement operand is not within the correct range.

4725

The pattern generation statement does not include the channel definition statement CHANNEL at the beginning.

4726

The n in the $\pm n$ of the operand address description has not been defined.
.When expressed as $\pm n$, n is limited to a constant or a synonymous symbol.

4727

The n in the $\pm n$ of the operand address description is incorrect.

4730

The CF portion of the pattern generation statement is not a prescribed instruction.
Or, it is an undefined CF variable.

4731

The '/' in the pattern generation statement control data is not followed by an M, H, or T character.

4732

Duplication of M, H, or T in the pattern generation statement control data.

4733

The ">" has not been described in the pattern generation statement control data.
Example:

```
NOP /M<PAR
```

4734

The timing set number in the pattern generation statement control data is incorrect.

4735

The CF and PF portions of the pattern generation statement are not partitioned by a "!".

4736

Too many prescribed patterns in the pattern generation statement.

4737

The pattern mode of the prescribed patterns in the pattern generation statement differs from the real-time sense control mode definition statement CHANNEL<....>.

4740

The pattern is not a prescribed pattern (01NPLHZX RSTUABCD).

4741

Error in a pattern generation statement PF variable. Or else the pattern is undefined.

Example:

```
NOP !' PF00 ' *PF01 ;; Error
      !' PF02      ;; Error
```

Undefined

4742

The field variable and PF variable channel positions are not the same.

Example:

```
NOP !FLO<' PF00>
      ↑      ↑
```

Channel positions differ

4743

The left and right hand side brackets differ in the field variable.

Example:

```
NOP !FLO<' PF00]
```

4744

A bracket used in the field variable is not a prescribed bracket. Only the following brackets can be used in field variables.

1. < >
2. []
3. ()

4. ? ?

5. / /

4745

The pattern mode of the prescribed pattern differs from the real-time sense control mode definition statement CHANNEL<...>.

4746

No additional patterns of the following format can be described in one line of pattern generation statement. That is because this would result in overflow of the DEFINE compiler buffer.

Field variable <General or array variable>

4747

Hexadecimal data and synonymous symbols cannot be described within the brackets in a field variable where the field width exceeds 32 channels.

Example:

```
FL00 <#100> ;; Error
  ↑
```

Field variable in excess of 32 channels

4750

Channel patterns defined in real-time sense control mode by a real-time sense control mode definition statement CHANNEL<...> cannot be expressed as a field variable enclosed by "/" /" brackets.

4751

Not used

4752

Not used

4753

Arithmetic expression does not exist.

Example:

```
EQA=
```

4754

In this case, only the following operators can be used.

`+, -, *, /, &, **, "`

4755

The "(" or ")" bracket has not been described in the arithmetic expression data shift.

Example:

```
A=SR 10, 2)
```

4756

The arithmetic expression operand on the right hand side of the synonymous statement is in excess of 32 bits.

Or an undefined synonymous symbol has been detected.

4757

The number of "(" and the number of ")" do not agree in the operational expression.

Example:

```
A=(10+10)*20_
```

4760

Arithmetic expression has been terminated by an operator.

Example:

```
A=10+20-
```

4761

The number of operators in an arithmetic expression is greater than the permitted number. The permitted number of operators plus the number of "(" brackets is 20.

4762

Symbol name error. Symbol names are alphanumeric character strings of up to six characters and beginning with an alphabetic character.

4763

Use with this variable name is not permitted. That is, a label of the same name, a CF variable, a field variable, a PF variable, or an array variable has already been defined.

4764

This array variable is undefined. The number of array variables must be declared at the beginning of DIM or DIMENSION.

4765

The array variable subscript is not a suitable value. That is, the value is 0, or greater than the permitted number.

Example:

```
DIM DM0 (10)
:
DM0 (0)=0      ;; Error
DM0 (11)=0     ;; Error
```

4766

The array variable subscript is not a suitable value. That is, a label of the same name, a CF variable, a field variable, a PF variable, or an array variable has already been defined.

4767

The array variable subscript does not exist. Or it exceeds 32 bits.

Example:

```
DIM DM0 (10)
:
DM0 (#100000000)=0    ;; Error
```

4770

The ")" bracket is missing from the array variable subscript.

Example:

```
DM0 (10=0
```

4771

The constant description contains an error. Either the data does not exist, or is in excess of 32 bits.

4772

The channel number lies outside the correct range.

4773

The channel numbers before and after the "-" are in agreement.

Example:

```
CHANNEL 1, 10, 20-20
```

4774

No time data description.

Example:

```
STT      !0000  
PAUSE    !1111
```

4775

Error in the use of the time data (.) point. Either more than one point has been used, or the point has been used in data without a unit.

Example:

```
STT  10. 0. S  
STT  123. 0
```

4776

Invalid data unit is specified in time data. Or else # or alphabetic character has been used in data with unit.

Example:

```
STT  123. 4PS  
STT  AB0MS
```

4777

Time data is not in the allowable range.

12. Logic Tester Compilation Error Codes (5000 to 5777)

Error codes are represented in octal in the table.

12. 1 Error Message List

5000

The time data must be specified in not more than 10 characters, excluding # and the units.

5001

OUT and OUTB cannot be defined in the CF definition statement.

5002

The n in the CF definition statement IDXn or LDIn is not within the 1 to 16 range.

5003

The IDXI or STFI operand in the CF definition statement is incorrect.

5004

The STC operand in the CF definition statement is incorrect.

5005

The n in the pattern generation statement IDXn or LDIn is not within the 1 to 16 range.

5006

The pattern generation statement OUT and OUTB operands cannot be constants. That can only be general or array variables.

5007

The IDXI or STFI operand in the pattern generation statement is incorrect.

5010

The STAPH or STC operand in the pattern generation statement is incorrect.

5011

Error in the combination with a previously described pattern in a multiple pattern designation. Only the following combinations are permitted in multiple pattern designations.

1. Same pattern
2. 0 and 1
3. L and H
4. N and P
5. X and 0, 1, N, P, L, H
6. Z and L, H, X

5012

A macro block has been positioned before the common declaration statement "COMMON." Describe "COMMON" before the first macro block.

5013

The same identifier has been described more than once.

Example:

```
COMMON A, B, C, D
COMMON A
```

5014

The channel numbers defined by DBM CHANNEL cannot be defined in real-time sense control mode.

5015

The CHSEL statement has been positioned in front of the pattern declaration statement. Or else a CHSEL or CHANNEL statement has already been described.

5016

Error in the CHSEL channel number. Or the number lies outside the correct range.

5017

A character apart from CHANNEL and FIELD has followed DBM in the control statement.

Example:

```
DBM XFIELD
```

5020

The DBM CHANNEL statement has been described in an unsuitable position. Check the following three possibilities:

1. DBM CHANNEL statement preceded by pattern declaration statement.
2. No preceding CHANNEL statement
3. Multiple definition of the DBM CHANNEL statement.

5021

The number of channel numbers in DBM CHANNEL is in excess of 32.

5022

This channel number has not been defined in the CHANNEL statement.

5023

Multiple definition of the channel number in the DBM CHANNEL statement.

5024

This channel number has been defined previously in real-time sense control mode.

5025

The channel list in DBM CHANNEL differs from the channel list in CHANNEL. Although these channel lists need not be the same, specify that the CHANNEL list be selected from left to right.

5026

The DBM FIELD statement has not been described in a suitable position.

5027

DBM FIELD has been described without a DBM CHANNEL statement description.

5030

Error in the DBM FIELD statement field name.

5031

The "<" is missing in the DBM FIELD statement. Or the channel number is missing.

5032

A channel number not defined in the DBM CHANNEL statement has been found.

5033

Not the same as the channel list in the DBM CHANNEL statement. Specify that the DBM CHANNEL list be partitioned in the DBM FIELD statement.

5034

Multiple definition of the DBM field name.

5035

Multiple definitions of "/A" in the CF definition statement.

5036

Data error in "/A<data>" in the CF definition statement.

5037

The ">" is missing from the "/A" in the CF definition statement.

5040

Multiple definitions of "/E" in the CF definition statement.

5041

Data error in "/E<data>" in the CF definition statement.

5042

The ">" is missing from the "/E" in the CF definition statement.

5043

The DBM PF definition statement has not been described in a suitable position.

5044

Error in the DBM PF variable name in the DBM PF definition statement.

5045

Multiple definition of the DBM PF variable in the DBM PF definition statement. Or else this name has already been defined as another identifier.

5046

No "=" sign in the PF or DBM PF definition statement.

5047

It does not suit the regulated pattern. Apart from 01NPLHZX RSTUABCD.

5050

The prescribed pattern on the right hand side of the PF or DBM PF definition statement does not agree with the real-time sense control mode definition statement CHANNEL<....> pattern mode.

5051

Error in the PF or DBM PF definition statement PF variable.

Example:

```
PF00=' +PF01
```

5052

The field position of the PF or DBM PF variable in the PF or DBM PF definition statement differs from the current position.

Example:

```
FIELD FL0<1-8>
PF 0=01010101      ;; An error occurs because the PF0 field is 1 to 8,
                    ;; while the current field is 9 to 16.
FIELD FL 1<9-16>
PF1='PF0
```

5053

The DBM pattern generation statement is described in the macro block.

5054

It does not suit the regulated pattern.

5055

The number of prescribed patterns which can be described in succession in the DBM pattern generation statement is 256.

5056

This kind of DBM PF variable name has not been defined.

5057

The channel positions of the DBM field variable and the DBM PF variable do not agree.

5060

The right hand bracket of the DBM field variable is unsuitable.

5061

The left hand bracket of the DBM field variable is unsuitable.

5062

The pattern enclosed within the DBM field variable brackets is not a prescribed pattern.

5063

The number of prescribed patterns does not agree with the DBM field variable channel width.

5064

The DBM field variable left and right brackets are not the same as each other.

5065

The "/.../" cannot be used in BM field variables.

5066

The n of JNCn must be 1 to 4 in CF definition statement.

5067

The operand of STAPL, STME and STMC must be within 1 to FFFF (16) in CF definition statement.

5070

The n of JNCn must be 1 to 4 in pattern generation statement.

5071

The operand of STAPL, STME and STMC must be within 1 to FFFF (16) in pattern generation statement.

13. Analog Tester Compilation Error Codes (6000 to 6777)

Error codes are represented in octal in the table.

13. 1 Error Message List

6000

A constant must be a real-type value with a voltage, current, or time unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6001

A constant must be a character string or a real-type value with a time unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6002

A constant must be an integer-type value.

A variable must be of INTEGER or unspecified type with or without DIM, or must be an arithmetic expression.

6003

A constant must be a real-type value with a decibel (DB) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6004

A constant must be a real-type value with a DBM (dBm: decibels above 1 mW) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6005

A constant must be of integer or real-type with a frequency (Hz) unit.

A variable must be of REAL or unspecified type, with or without DIM or with dimensions specified in DIM, or must be an arithmetic expression.

6006

A constant must be a real-type value with a frequency (Hz), decibel (DB), or resistance (R) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6007

An undefined mnemonic was specified.

6010

A constant must be a real-type value with a frequency (Hz) unit or no unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6011

A constant must be a real-type value with a DBM (dBm: decibels above 1 mW) unit or root-mean-square voltage (VRMS) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6012

A constant must be a real-type value with a decibel (DB), phase (DEG), or time (S) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6013

The value must be a real-type value with a decibel (DB) unit.

6014

A constant must be a real-type value with a phase (DEG) unit.

A variable must be of REAL or unspecified type, with or without DIM, or must be an arithmetic expression.

6015

A constant must be non-string data.

A variable must be other than a pin list variable, string variable, or CHARACTER variable.

6016

No constants can be specified.

A variable must be other than a pin list variable, string variable, or CHARACTER variable.

6017

A constant must be a real number without a unit, integer, or logical constant.

A variable must be of REAL, INTEGER, LOGICAL, or unspecified type, with or without DIM, or must be an arithmetic expression.

6020

No constants can be specified.

A variable must be of REAL or unspecified type, with or without DIM or with dimensions specified in DIM.

6021

A constant must be of real type with a frequency (Hz) unit.

A variable must be of REAL or unspecified type, with or without DIM or with dimensions specified in DIM.

6022

A constant must have an "S" unit. A variable must be of unspecified, REAL, or character type with or without DIM or with an arithmetic expression.

6023

Not used

6024

Not used

6025

Not used

6026

An undefined mnemonic was specified.

6027

An undefined mnemonic was specified in the SPA statement.

6030

In the FAG statement, the modulated source signal frequency must be 400 Hz or 1 kHz. The output impedance must be 75R (75 Ω) or 50 R (50 Ω).

6031

The number of mnemonics is more or less than the specified number.

6032

"[" must be specified.

6033

Only JUDGE can be specified for a two-dimensional limit value.

Example:

```
LIMIT JUDGE= [Y1:Y2] [X1:X2]
```

6034

A parenthesis is used incorrectly.

6035

When "LSB" is specified for the shifting direction in the BFM INPUT statement, the bit length must be 8, 12, 16 or 20.

6036

In the STG statement, when the FUNC mode is "LR", "ON" cannot be specified for the PREAF switch.

6037

When the FUNC mode is "MONO" in the STG statement, the PILOT level must be "OFF".

6040

When two-dimensional data comparison judgment is specified in the JUDGE statement, items related to HIDAR cannot be specified.

6041

To specify two-dimensional data comparison judgment in the JUDGE statement, both comparison (Y axis) data and test point (X axis) data are required.

6042

The value indicating the unit name is incorrect.

6043

An undefined mnemonic was specified in the FNG or DGT statement.

6044

A variable was specified for a parameter that must be a constant.

6045

Variables other than variables with and without DIM cannot be specified.

6046

An unpermitted combination of parameters was specified.

Example:

```
FNG WAVE1=1V, PRAMP (1KHZ), FLT (1KHZ)
```

Only the PSK filter can be specified for the PRAMP waveform.

6047

The voltage, frequency, phase, level, and loop are specified incorrectly in the FNG WAVE statement.

6050

A pin condition cannot be specified for the USER pin.

6051

Only a character-type argument is allowed.

6054

When specifying a constant, it must be a real numeric value with a unit of either frequency (Hz) or time (s) following.

A variable must be of real or unspecified type, with or without DIM, or must be an arithmetic expression.

6055

When specifying a constant, it must be a real numeric value with a unit of frequency (Hz), or have character strings following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, an operational formula, or a string and have a non-specified, REAL, or CHARACTER attribute.

6056

When specifying a constant, it must be a real numeric value with no unit following.

A variable must be of real or unspecified type, with or without DIM, or must be an arithmetic expression.

6057

When specifying a constant, it must be a real numeric value with a unit of voltage (V, VRMS), or dBV (DBV) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6060

When specifying a constant, it must be a real numeric value with a unit of voltage (V, VRMS), dBm (DBM), dBV (DBV), or following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6061

No constant entries are allowed.

Only DIM whole specified array variable entries are allowed.

6062

When specifying a constant, it must be a real numeric value with a unit of dB (DB) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6063

No constant entries are allowed.

Only the entries of the DIM whole specified array variable having a non-specified, REAL, INTEGER or LOGICAL attribute are allowed.

6064

When specifying a constant, it must be a real numeric value with a unit of voltage (V, VRMS) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6065

When specifying a constant, it must be a integer or logical numeric value.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have a non-specified, INTEGER or LOGICAL attribute.

6066

When specifying a constant, it must be a real numeric value with a unit of frequency (Hz) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6067

When specifying a constant, it must be a real or logical numeric value with no unit following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have a non-specified, REAL, INTEGER or LOGICAL attribute.

6070

When specifying a constant, it must be a real numerical value with a unit of voltage (V, VRMS), dBm (DBM), dBμ (DBM), or dBV (DBV) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6071

A constant must be of real type with a frequency (Hz) unit.

When specifying a variable, it must be DIM-specified, DIM-unspecified or be a DIM-whole-specified-array and have a REAL, INTEGER or LOGICAL attribute.

6072

Not used

6073

When specifying a constant, it must be a real numeric value with a unit of phase (DEG, and RAD) following.

When specifying a variable, it must be DIM-specified, DIM-unspecified, or an operational formula and have either a non-specified or REAL attribute.

6102

The specified data combination is functionally invalid. Or, the combined data is beyond tolerable limits.

6103

The VSG EVENT statement setting value of either VOH or VOL is beyond tolerable limits.

Or the expression $VOH \leq VOL$ has been established.

Note that $VOH > VOL$ must be satisfied.

6104

The ARRAY statement function parameter has not been specified in (...). Neither a space nor a comma can be described.

6105

Constants, variables, or an unallowable function name has been described in the field where the ARRAY statement function name should have been written.

Or, the operation formula description is incomplete.

6106

Function argument of ARRAY statement is incorrect.

6107

When specifying a scalar variable, it must have a non-specified, REAL, INTEGER or LOGICAL attribute. When specifying an array variable, it must have a REAL (two or four words), INTEGER (two words), or LOGICAL (two words) attribute.

6110

Only array variables are allowed for specification.

6111

An unallowable format for the ARRAY statement.

6112

The ARRAY statement format contains an error.

6113

A library name, label name, or improper characters are specified in the data field where constant, variable (including operation formula), or the ARRAY statement functions must have been specified.

6114

Not used

6115

If a constant is specified, it must be the integer or logical type.

If a variable is specified, it must be the integer, logical, or no specification type without DIM, with DIM or with all DIMs. Or it must be DEFINE ARRAY variable.

(The arithmetic expression is only allowed for scalar.)

6177

Not used

6200

Definition name of AMEAS and AMACRO statements must be a GENERAL 5-word type variable.

6201

Definition name of AMACRO statement is already defined by another AMACRO statement.

6202

Argument number of AMACRO statement is from 1 to 16.

6203

Argument number of AMEAS statement is 16 max.

6204

Number of arguments of AMACRO statement and AMEAS statement is not coincident.

6205

Not used

6206

The buffer to which macro definition of AMACRO statement is stored is overflowed.

6207

There is no AMACRO statement corresponding to the definition name of AMEAS statement.

6210

Too many characters for AMEAS statement's argument.

6211

Both JUDGE statements in the MACRO definition of AMEAS statement and AMACRO statement have HIDAR specification. HIDAR cannot be specified in both statements.

6212

The buffer which expands AMEAS statement is overflowed.

6213

There is AEND statement even though there is no AMACRO statement.
Or, AMACRO statement is nested. AMACRO statement cannot be nested.

6214

There is AMEAS statement in the macro definition of AMACRO statement corresponding to the AMEAS statement.
AMEAS statement cannot be described in the macro definition of AMACRO statement.

6215

The variable name in macro definition of AMACRO statement corresponding to the AMEAS statement is already defined.

6216

No statement is described after the AMEAS statement and the AMACRO statement by combining them with "&" (Ampersand Mark).

6217

There is AMEAS statement in macro definition of DMACRO statement. AMEAS statement cannot be described in macro definition of DMACRO statement.

6220

There is DMACRO statement in macro definition of AMACRO statement. DMACRO statement cannot be described in macro definition of AMACRO statement.

6221

There is invalid statement in macro definition of AMACRO statement.

6222

Macro definition of AMACRO statement is not closed with AEND statement.

6223

Though a variable without DIM is defined in AMEAS statement, the variable of operand in JUDGE statement is non-subscripted DIM type.

These two types of variable cannot be used in the combination.

6300

When the MCLK statement is executed, the compile buffer overflows.
Specify HR, JR, and FC in the MCLK statement as follows:

MCLK=a b c $\overbrace{n_1 \ n_2 \ \dots \ HR \ JR \ FC1}^{\text{To be removed}}$

6301

AP cannot be specified in MEAS UDC2 and START UDC2.

6302

The channel numbers should be specified in an ascending order.

6303

If DP is specified in a socket program, 1024 should be written in the program as a pin max.

6304

The tester pin No. specified in the socket program is too large.

6305

When the 20V source range is specified in the SET RVS statement, the current measurement mode cannot be specified.

6306

The number of specified VDR channels does not match with the corresponding pins.

6307

When FIX is specified in the OVS mode, the voltage values you can set are only 10 V and 20 V.

6400

"{" cannot be written here.

6401

DSPFUNC statements must begin with "{".

6402

The numbers of "{" and "}" do not match.

6403

Variable specification of DSPFUNC must be written before the first "{".

6404

The head character of the DSPFUNC statement is invalid.

6405

Variable name is not defined.

6406

After unit name, "{" must be written.

6407

Invalid operator is used.

6410

Label names cannot be specified here.

6411

Operational expression is incorrect.

6412

Something is wrong with argument of DSPFUNC function.

6413

Array variable cannot be specified.

6414

The size of array variable is incorrect.

6415

This is specified by integer.

6416

Invalid function mane is used for DSPFUNC statement.

6417

The variable should be an integer or logical variable without DIM.

6420

Operational expressions (Work area) cannot be used.

6421

Invalid unit name is written.

Or something is wrong with unit name.

6422

The format of READ statement is incorrect.

6423

DSPFUNC statement cannot be written here.

6424

The constant should be of 2W type. If it is of real type, the constant with unit is not permitted.

6425

Plural READ statements cannot be described in the group of statements defined by "{" and "}" in DSPFUNC.

6426

The format of the SEND statement is incorrect.

6427

Invalid operator is used for ACALC.

6430

ACALC format is incorrect.

6431

DSP DATA MEMORY overflowed.

6432

PART statement cannot be used here.

6433

Variable with DIM cannot be used.

6434

There is no READ statement in the DSPFUNC statement group.

6435

Although the READ statement is described, there is no %UNIT in the argument of the DSPFUNC statement.

6436

The variable specified for saving data cannot be used for indexing in the ACALC statement.

6437

Where the variables or the constants should be placed is not specified.
Or words already specified or impermissible characters are used.

6440

The ARRAY statement and the DSPCAL statement cannot be used in the same program.

6441

Specified comparator of function COMP is incorrect.

6442

The format of the IF statement is incorrect.

6443

Attributes of INTEGER, LOGICAL, and REAL must be specified by variable with DIM, or without DIM, non-subscripted DIM variable, or character string.

6444

DSPFUNC name is not specified.

6445

Too many specifications for DSPFUNC or DSPCAL statements.

6446

DSPFUNC name must be defined by 5-word of GENERAL.

6447

The DSPFUNC name is already defined.

6450

Argument of DSPFUNC (DSPCAL) statement is incorrect.

6451

Too many arguments for DSPFUNC or DSPCAL.

6452

There is no DSPFUNC.

6453

Specification of label name for COMMON variable is incorrect.

6454

The size of COMMON variable is incorrect.

6455

Only one-dimensional array is permitted for array variable in DSPFUNC.

6456

A space is necessary between the argument and () for the AMACRO definition name and DSPFUNC name.

```
AMEAS AAA ( )  
          ↑  
        Space
```

6457

COMMON variable and argument cannot be initialized.

6460

System variable and global variable cannot be used in DSPFUNC.

6461

Variable and argument in DSPFUNC must be specified by 2-word type logical integer or 2-word, 4-word real type.

6462

Too many variable names or label names for DSPFUNC.

6463

Too many numbers of constant specification for initialization of DSP variable.

6464

Too many numbers of file-name specification for initialization of DSP variable.

6465

Too many COMMON variables.

6466

Not used

6467

DATA2 cannot be described in DAW or DCAP, which are PDS data of the PIN statement.
Or DAW or DCAP data cannot be described.

6470

The size of the variable V is too small to create the SIN/COS table of the LFFT function in the DSPFUNC.

The variable V should be set to INTE[2] v(32768).

6471

The object file of the DSPFUNC is too large.

6472

Only the constant with unit of R is allowed.

6473

An indexed array variable cannot be specified for the DSPFUNC name of the DSPFUNC statement.

Example:

```
DSPFUNC SNR(1) (arg1, arg2, ...)
```

6474

Use the real type.

6475

The LOAD statement syntax error.

6476

The DMCMP and XMCMP function written in this format cannot be used without the LOAD statement.

6477

The DMCMP and XMCMP function written in this format cannot be used without the READ statement.

6500

The PINLIST variable area overflowed.

6501

An error occurred with the PINLIST variable specification on the right of the PINLIST variable.

6502

HVSIM/HISVM could not be found in the PHDC unit.

6503

An error occurred when a variable was specified as the PINLIST variable element.

6504

Too large a number was specified as the PHDC unit number.

6505

An error occurred with the handler/prober name specification.

6506

Although a simultaneous measurement definition was specified in the simultaneous measurement definition statement, a tester channel was specified instead.

6507

The DUT number of the DEFINE MULTIPLE statement was specified incorrectly.

6510

The maximum pin number specified in the simultaneous measurement definition exceeds the specification.

2 devices : 128 pin

4 devices : 64 pin

6511

An inappropriate simultaneous measurement definition was specified.

6512

An inappropriate character was specified.

6513

An error occurred in the DEFINE MULTIPLE specification.

6514

A statement is duplicated.

6515

An error occurred in a PHDC or DFVM specification.

6516

There is an error in the "(", ")", or "=" specification.

6517

The maximum PIN number of a simultaneous measurement definition specified exceeded the specification.

6520

There are insufficient PIN numbers per DUT.

6521

An error occurred in HDC or CW numbers.

6522

An error occurred in the unit number or the combination.

6523

An error occurred in the unit number corresponding to the DUT1 of the HDC statement.

6524

"P" is not specified.

6525

An error occurred in the tester channel specification of the DUT statement.

6526

The tester channel number in the DUT statement and the logical pin number are not consistent.

6527

A numeric or character value other than 1 or 2 was used in a DUT statement in the dual mode.

6530

Values from 1 to 4 should be used to specify the PHYSICAL PIN when specifying L of the Z converter in an ISVM, VSIM, or IS statement.

6531

The PHDC unit No. or pin No. is not defined in the DUT# of the simultaneous measurement definition for SOCKET.

6532

The HDC unit No. is not defined in the SOCKET DUT 1 of the simultaneous definition.

6533

Not used

6534

The specified unit No. and channel No. are inconsistent with the value defined in the socket program.

6535

The channel No. for both IN and OUT channels should be identical in the P statement.
Also, specification of OUT is required when MATCH is specified.

6536

CHARACTER variable cannot be specified.

6537

There is no unit channel number.

6540

Not used

6541

A constant must be an integer or a logical number (up to three words). A variable must be an undefined type, integer type, logical type attribute with DIM undefined, defined, or whole specified array variable, or an arithmetic expression.

6542

Constants should be of integer or logical type. For variables, there should be no specifications of their attributes and they should be either INTEGER or LOGICAL. Also, the format of the variable should be subscripted array variable, no subscripted array variable or operational expression.

6543

If a constant is used, it must have the VRMS unit. If a variable is used, it must have the no specification or REAL attribute with or without DIM, or it must be an arithmetic expression.

6544

If a constant is used, only a real number without unit is allowed.
No variables are allowed.

6660

The LIMIT value data was specified in the setup statement, or it exceeded the limit of M-RNG.

6661

The sequence object size exceeded the SQDC sequence area size.

6662

The vector object size exceeded the SQDC vector area size.

6663

The SQDC start pointer exceeded the valid area.

6664

The upper or lower limit value of the LIMIT was incorrect.

6665

"AUTO" was specified in the HDC setting statement.

6666

The LIMIT value has the expansion unit.

6667

HDC unit number is not defined in the simultaneous measurement table of the socket program.

6670

Pin number or PHDC unit number is not defined in the simultaneous measurement table of the socket program.

6673

The two-dimensional judgment is not allowed during simultaneous measurement.

14. Memory Tester Compilation Error Codes (7000 to 7777)

Error codes are represented in octal in the table.

14. 1 Error Message List

7000

The VRAM MODE statement to determine the operation mode of VRAM option is incorrectly specified.

(Example) No specification other than BIT4*4, BIT8*4, and BIT8*8 is allowed in BITn*m. BIT4*8 cannot be specified.

7001

Only one SOCKET parameter can be specified for the TEST PLAN program.

7002

<P256> must be specified after the SOCKET parameter in the test plan program.

7003

It is necessary to describe <P256> in both the test plan program and the socket program.

7004

There is an error in the address specification.

Identical addresses cannot be specified.

7005

X, Y addresses can be specified at the AFM EXP ADDRESS specification. Other specification is impossible.

7006

A constant value must be with "V" unit. A variable must be a non-specified type and further, either a DIM variable, a non-subscripted array variable or an operational expression.

7007

The 1HW-type or 2HW-type logical variable only is allowable.
Non-subscripted array variable is also allowable.

7010

The data must be any one of an integer constant, a logical constant, a subscripted variable, an INTEGER or a LOGICAL attribute of DIM variable, non-DIM variable, non-subscripted variable and an operational expression.

7011

This statement is not supported by ATL-51.

7012

"/" must be specified.

7013

The label name or variable name must be a character string (alphanumeric and underscore (_)) which begins with an alphabetic character.

7014

There is an error in the PRO program number specification.
For example; if a non-alphanumeric character, which is not a dollar sign (\$) or a period (.), is specified; if more than 32 characters are specified; or if there is no specification at all.

7015

The EQUATE statement and DMACRO statement definition names are specified by a character string with up to 32 characters. The character string includes alphanumeric characters, hyphens (-), and underscores (_) and begins with an alphabetic character.

7016

The maximum DMACRO statement argument number is 64.

15. Analog Tester Runtime Error Codes (11000 to 11777)

Error codes are represented in octal in the table.

15. 1 Error Message List

11000

The value must be a real-type value with a time, voltage, or current unit.
This is also a limit on how much data is allowed.

11001

Must be an integer-type value.

11002

The value must be a real-type value with a frequency or dB (DB) unit.
This is also a limit on how much data is allowed.

11003

The value must be a real-type value with a dBm (DBM) or voltage (V, VRMS) unit.
This is also a limit on how much data is allowed.

11004

The value must be a real-type value with phase (DEG) unit.
This is also a limit on how much data is allowed.

11005

The value must be a real-type value with a dBm (DBM) unit.
This is also a limit on how much data is allowed.

11006

The value must be a real-type value with a decibel (DB) unit.
This is also a limit on how much data is allowed.

11007

The value must be real-type value with a dB (DB), phase (DEG), or time (S) unit.
This is also a limit on how much data is allowed.

11010

The value must be an integer-type or real-type value with a frequency unit.
This is also a limit on how much data is allowed.

11011

The value must be an integer-type, logical-type, or rea-type value without a unit.
This is also a limit on how much data is allowed.

11012

The variable type specified in the built-in function was incorrect.

11013

Data must be character-type or a real-type data with a time unit.
This is also a limit on how much data is allowed.

11026

Data measured by the spectrum analyzer can be read after the START SPA statement.

11027

The measurement mode specified for the spectrum analyzer was functionally inconsistent.

11030

An abnormal state was detected during measurement by the HPDC.

The status at the time of the error is set to AC7.

From the LSB:Bit 0 = 1 Abnormal temperature

Bit 1 = 1 Unregulate

Bit 5 = 1 Invalid request

11031

A syntax error occurred during measurement by PDVM2.

11032

The function generator is still in operation.

11033

Pattern data is not yet transferred to the video signal generator.

11034

The operation modes set to the video signal generator were inconsistent. The VSG "MODE" or "WAVE" mode was not set, or the two modes disagree.

11035

The video signal generator is still in operation. In RESTART mode, the video signal generator cannot be Started until it stops.

11036

To execute this statement, the INIT statement must be executed in advance.

11037

Spectrum analyzer measurement did not end within the time specified by the TIME OUT statement.

11040

The specified DIM variable must be a two-dimensional square matrix.

$\text{DIM} \times (n_1, n_2), n_1 = n_2$

For the built-in function MTXI, $2 \leq n_1 \leq 32$,

for the built-in function MDET, $2 \leq n_1 \leq 64$.

11041

If "*" is specified for a parameter, it must have been set previously in the statement.

11042

A matrix could not be inverted because its determinate was 0.

11043

Not used

11044

An error occurred while the digitizer was digitizing. The status at the time of the error is set to AC1.

11045

To start two digitizer channels simultaneously, they must be set to the same conditions.
(Examples of conditions: trigger mode, number of data items, number of average values)

11046

Digitizer measurement did not end within the time specified by the TIME OUT statement. No trigger was detected, or the specified time was too short.

11047

The analog pin corresponding to the specified AP number is not present in this system.

11050

A specified built-in function parameter that must be a DIM specified variable was set to another type of variable.

11051

The SPA measurement error exceeds 0.5 dB. This is caused by an inappropriate combination of SPA sweep time, Resolution Band Width (RBW), and Video Band Width (VBW) setting values.

11052

Not used

11053

To obtain the product of matrices A and B, their dimensions must be A(m, n) and B(n, l).
The size of the array that received the result must be C(m, l).

11054

Not used

11055

The matrix variable type and number of words on the right and left sides of the built-in function "MTXM" must agree.

11056

The number of numeric data items specified is too large or too small.

11057

The specified file is not in the video pattern object format.

11060

When input/output signal coupling between the DUT and unit is "DC", charge-up cannot be performed by the CHRG statement.

11061

There is no data file for adjusting SPA.

This file is created by executing "/SPACAL┘".

11062

When an asterisk "*" is specified in the STG statement, "FUNC" and "MODE" different from the previously-set "FUNC" and "MODE" cannot be specified.

11063

If "FUNC" is "LR" in the STG statement, "ON" in "PREAF" mode cannot be specified.

11064

In the serial shift mode from the LSB in the BFM INPUT statement, the bit length must be 8, 12, 16 or 20.

11065

When "FUNC" mode is "MONO" in the STG statement, the "PILOT" level must be "OFF".

11066

In the two-dimensional LIMIT JUDGE statement, the upper and lower values must have the same unit and must be of the same numeric type (integer or real number).

11067

Character-type data cannot be specified.

11070

In two-dimensional LIMIT JUDGE data, the X axis values (specifying the comparison points) must be in ascending order.

11071

When an asterisk "*" is specified in the LIMIT JUDGE statement, the corresponding parameter must have been specified previously.

11072

In the two-dimensional LIMIT JUDGE statement, the number of X axis values must match the number of Y axis values.

11073

No variables of TABLE, PIN-LIST, STRING, CHARACTER are allowed.

11074

In the two-dimensional JUDGE statement, the number of Y values must match the number of X axis values.

11075

The unit or type of data specified by the JUDGE statement is different from that specified by the LIMIT JUDGE statement.

11076

The specified DC unit (UDC or UHDC) cannot cause an interrupt on the digital I/O pins.

11077

No digitizer measurement has been made yet so data cannot be read using the READ statement.

11100

Data cannot be read unless the digitizer measurement mode is "TIME".

11101

Not used

11102

The value of an argument of a built-in function is incorrect.

For example, when a DIM all-specification variable is given by one argument, and its size is given by another argument, the given size is greater than the size of the DIM specified variable.

11103

The built-in function parameters whose values must have been integral or logical values of 0 or greater become less than 0.

11104

The array elements must be integer or logical type.

11105

Not used

11106

The variable must be a DIM specified variable.

11107

In the SPA statement, the specified frequency is not within the frequency range.

11110

There is a built-in function parameter whose array variable size is too small (or large).

11111

No work area can be used.

11112

Not used

11113

The data type or array size of the argument of a built-in function is incorrect.

11114

Character-type data was specified incorrectly for the argument of a built-in function.

11115

The variable type or data type of the argument of a built-in function is incorrect.

11116

Data specified by the FNG or DGT statement is incorrect.

11117

Phase must be specified by a real-number value with "DEG" unit.

11120

The array data type specified by a DIM specified variable is incorrect.

11121

The unit number specified by the FNG or DGT statement is incorrect.

11122

"*" was used in the function mode in the COUNTER statement, but it is not allowed.

11123

When an asterisk "*" is used in the COUNTER statement, the function mode must be the same as the previously coded function mode.

11124

The number of MTXs must match the number of lines (UHDCs) when using this statement.

11125

This statement cannot be executed in this system.

11126

A pin number which cannot be specified in this system has been set.

11127

No PART statement can be used.

11130

Must be a real numeric value with a unit of time (s) or frequency (Hz) following.

11131

Must be a real numeric value with a unit of voltage (V, VRMS) or dBV (DBC) following.

11132

Must be a real numeric value with a unit of voltage (V, VRMS), dBm (DBM), or dBV (DBV) following.

11133

There must be a real numeric value with a unit of voltage (V, VRMS), dBm (DBM), dBV (DBV) or dB μ (DBU) following.

11134

The value must be a real-type value with phase (DEG, RAD) unit.

11135

Must be a real numeric value or Hollerith type data with a unit of frequency (Hz) following.

11136

There must be a real numeric value or Hollerith type data with a unit of dB (DB) following.

11137

Must be a real numeric value with a unit of voltage (V, VRMS) following.

11156

This statement cannot be executed without DRATE clock setting.

11157

When setting to this statement, initialization must be made beforehand.

11160

The store destination variable must be a non-specified INTEGER, LOGICAL, or REAL attribute. This variable must be less than three characters.

11161

There is a discrepancy between this statement and others.

11162

No setting is performed by the PDGT INPUT statement.

The setting by PDGT INPUT is required before executing the START PDGT statement.

11163

There is no burst data. When performing burst transfer, the burst data must be stored to the corresponding variable data field in advance.

11164

The START DGT channel does not match the WAIT DGT channel.

11165

The character string specification contains an error.

11166

The DPAT file contains an error. Re-compile.

11167

The VSG EVENT statement setting value of either VOH or VOL is beyond tolerable limits.
Or the expression $VOH \leq VOL$ has been established. Note that $VOH > VOL$ must be satisfied.

11170

The DPAT file has not yet been transferred to WSPG.

11171

No file name specification is made with MEAS DPAT (1).

11172

Because a command changing the PG state has been executed at the branch destination branched by using ON HOLD, or ONCALL HOLD, no correct ON RTN cannot be executed.
The command which changes the PG state is: MEAS DPAT, START DPAT, RESET DPAT, or SEND DPAT.

11173

No SET DPAT ALL cannot be specified.

11174

DSP unit is not operating normally.
Accordingly, no ARRAY statement can be executed.

11175

Function argument of ARRAY statement is incorrect.

11176

Invalid type for array variable is used in ARRAY statement.

11177

Array variable in ARRAY statement is incorrect.

11200

Specified waveform file or waveform name cannot be found in the OSs directory. Transfer the waveform file by SEND statement.

11201

Specified label name cannot be found in the pattern file.

11202

Unit that is nonexistent in the system is specified.

11203

There is no conditional setting in unit.

11204

Time out error of unit.

It is generated when the measurement is not ended though the time specified by TIME OUT statement is passed.

11205

Specified analog pin cannot be connected to DC unit.

11206

WDL file specified by SEND HAW, or SEND PAW statement cannot be transferred to STM. This error occur when one of the file directory, waveform name directory, and STM is full.

11207

Setting value of sampling clock is not in the allowable range.

Set the value, that is specified by RATE, MCLK, DEC, BIN, SSG1, or SSG2, divided by sampling clock is within 1 to 131071.

11210

Any condition setting statement is required before setting this statement.

11211

Clock specification and/or data specification is not in allowable range when sampler mode is used.

11212

One of the unit numbers 1 and 2 can be specified in SYNC mode specification.

11213

This statement cannot be executed without the specification of start statement. Start the unit in advance.

11214

Unit has been activating.

11215

Address of specified label exceeds the pattern address.

11216

DSP unit is not operating normally.

11217

Designation of AUTO cannot be done by the SET HAW, PAW statement when AUTO is specified by the WDL on the level designation of the above statement.
Also, designation of manual operation cannot be carried out.

11220

The waveform file cannot be transferred to the STM while the AWG unit is in operation.
Transfer the waveform after stopping output once.

11221

Memory parity error occurred in the STM of the AWG unit.

11222

Types of argument for ASM and RDUNIT are different. The arguments should be of nondesignation type, integer type or logical 3W type.

11223

The designation change of the RATE should not be permitted while the SSG is started up.

11224

When the system is operated by synchronizing the TG unit and SSG, each set frequency (cycle) should be as follows:

TG unit:

1 MHz to 40 MHz

SSG:

1 MHz to 100 MHz

11225

The numbers of data of channel 1 and channel 2 should be equal each other if the SYNC mode is used.

11226

In the PINLIST statement, the condition for coexisting the digital pin and analog pin is wrong.

11227

A high-resolution mode or the JR is used in the RATE statement or the MCLK statement, the BURST mode cannot be used.

11230

When the pre-scaler is used in the TMU statement, TMUA or TMUB can be specified.

11231

If the frequency of the sampling clock exceeds 20.48 MHz, the length of waveform data must be a multiple of eight.

11300

UDC2 cannot be specified in AP.

11301

Two or more comparison variables cannot be specified in a two-dimensional JUDGE statement.

11302

This two-dimensional JUDGE statement cannot be executed. Operate as follows:

For JUDGE x:

Change as JUDGE x :(1, 1) and translate.

For JUDGE x : (1, 1):

Re-compile.

11303

In analog parallel test, 2 DUTs at the maximum can be measured.

11304

For DIM specification, channel numbers should be specified in ascending order.

11305

Some error exists in the specification of the pin connection.

11306

The sum of pin number specifications is too large.

11307

The same IDX number cannot be specified in the number of the scan pattern and the number of the averaging times.

11310

The product of the number of the measurement steps and the number of the averaging times should be 131072 or less.

11311

No calibration of RVS unit is executed.
/INIT should be executed.

11312

No calibration file of MDGT exists. /INIT should be executed.

11313

DP statement or SET MUX statement is not specified.

11314

The specified pin number is out of range or the value of (number of steps × number of pins × number of AVR)/digitizer exceeds 128K.

11315

Unit relay is not connected.
Specify with a combination with "UNIT".

11316

When the 20V range is specified, the current measurement mode cannot be specified.

11317

In the current measurement mode for RVS, pin of the desired RVS is not connected.

11320

A calibration file for the RVS current measurement is not found.
/INIT should be executed.

11321

In the DP specification, the tester pin No. after socket conversion exceeds 320 or the tester pin No. for the HIDP mode is not within the range from 257 to 512.

11322

To execute this statement, a definition in the socket program is required.

11323

To measure RVP1-16 in a DC test, a DC unit should be connected with a pin or the source range of RVS should be set as 20V.

11324

The current measurement mode of RVS cannot be used in this system.

11325

When LPAT/LPATn has been specified as a mode of the SET DPSEL statement, the setting of MDGT cannot be changed.

11326

In the T7312 system, M(10MA) cannot be specified as the current measurement mode.

11327

In the T7311 and T7312 system, 80V cannot be specified as the input range of MDGT.

11330

In the T7311/T7312 system, DPVT2 cannot be specified in the pin connection condition.

11331

The other pin number has already been specified to the specified VDR.

11332

The specified pin number has already been used to the other channel.

11333

The tester pin number to be specified is not in the range of P1 to P64 or P129 to P160.

11334

The number of specified VDR channels does not match with the corresponding pins.

11335

When FIX is specified in the OVS mode, the voltage values you can set are only 10 V and 20 V.

11336

The OVS unit has been calibrated yet.
/INIT should be executed.

11337

Digital pin numbers (Pn) should be between 1 and 256 of tester pin numbers that were converted according to the socket program.

11340

When this statement is used, the maximum pin number specified in the socket program should be 512 (or 1024, if the DP pin socket is used).

11341

The DPPINCHK utility detected the following condition.
The DP statement was used to connect or disconnect the UNIT relay or the IL relay when the unit related to power source, DPU, DPIL, RVS, or OVS, stayed in the RON state due to the SET WET setting and so on.

11342

The MOUT unit is not calibrated yet.
/INIT should be executed.

11343

ATT cannot be specified as the comparator input range of SET DPSEL for this test system.

11344

SET DPSEL DLPAT cannot be specified for this test system.

11345

SET DPSEL DLPAT and SELECT HIDP cannot be specified together in a program.

11346

A measurement range must be set using the SET MDGT statement before execution of the statement.

11347

Reserved

11350

When you execute tests using single device testing mode (see below) while in 2-DUT parallel testing mode, the numbers of the tested DUTs must be specified using the ASM FSETDUT(n) statement.

- DC parametric tests for RVP pins using the MEAS UDC or MEAS MDC statement
- MDGT tests using the DP or WAIT DSP[JUDGE] statement.

11351

When two DUTs are tested in parallel, Pn, DPn, and RVPn cannot both be included in the pin number setting of the following statements:

Execute separately for each pin type.

- START UDC or START MDC statement
- MEAS UDC or MEAS MDC statement
- READ DCT PDATA statement

11352

An illegal parallel testing condition is specified in the socket program.

This test system can test up to two DUTs in parallel.

You can specify only DUT1=P1-128 and DUT2=P129-256 for pin assignments when testing two DUTs in parallel.

11353

An illegal channel number is specified for the test system under 2-DUT parallel testing.

11354

This statement cannot be used for the test system under 2-DUT parallel testing.

11355

DP tester pin number exceeding DP256 cannot be specified for the test system under 2-DUT parallel testing.

11356

This statement cannot be executed when the ASM SIMLOFF statement is effective under 2-DUT parallel testing.

Execute the statement prior to the ASM SIMLOFF, or after the parallel testing mode is set using the ASM SIMLON statement.

11357

The definition on 2-DUT parallel testing cannot be specified in the socket program for the current test system.

Specify single device testing mode.

11360

This statement is used only for 2-DUT parallel testing.

The statement cannot be specified unless the following condition is specified in the socket program.

```
DEFINE MULTIPLE 2DUT, 1STN
DUT1=VSm, P1-128
DUT2=VSn, P129-256
```

11401

DSP data memory was overflow.

11402

Though CALL STDBM has not been set to the DBM, data is read out from DBM.

11403

The data input to the DSP function is not correct in the DSPCAL statement.

When an error occurs, the line number (decimal numeral) where the error occurs in the DSP-FUNC will be displayed in the AC7.

11404

The data file specified in the DSPFUNC does not exist.

11405

The waveform of the waveform file to be transferred by SEND DAW statement is not the waveform for DAW.

11406

Frequency and bit number of the waveform for the waveform file transferred by SEND DAW statement are different in the file. They must be the same in the file.

11407

The WDL file to be transferred by SEND DAW statement exceeds the capacity of DAW. If there are several waveforms in the file, divide the file to reduce the capacity.

11410

The operation formula in the DSPFUNC is incorrect. This error occurs when the variables compared with the IF statement are different.

When an error occurs, the line number (decimal numeral) where the error occurs in the DSP-FUNC will be displayed in the AC7.

11411

Although the INPUT specification in the SET DCAP statement is not executed or the DSPCAP is disabled, the INPUT specification in the SET DCAP statement is executed.

11412

Although the INPUT specification in the SET DCAP statement is not executed, data from the DCAP is to be read. Execute the INPUT specification in the SET DCAP statement.

11413

The number of channels connected to the DAW is not coincident with the number of bits in the waveform file. The number of channels connected to the DCAP is not coincident with the form of the signal output (serial output, parallel output, or bit length/word) in the SET DCAP statement. Make them coincide.

11414

INPUT of the SET DAW statement and SET DCAP statement is not specified. Even if the SELECT DAW DISABLE and SELECT DCAP DISABLE statements are executed, DAW and DCAP are started. Execute the SET DAW and SET DCAP statements.

11415

Data type (serial or parallel bit number) in the waveform file does not correspond the signal output type (serial or parallel, bit number per word) in the SET DCAP statement. Make them coincide. The size of the argument area used by the DSPCAL statement exceeds the limit.

11416

Before using SEQ mode, complete all the processing in PARALLEL mode.

11417

Some of the processing in PARALLEL mode have not completed.
Terminate all the processing by the WAIT DSPCAL statement.

11421

The work area enough to execute DSPFUNC cannot be ensured due to lack of remaining DSP data memory.

11422

A wrong value is set in DSPFUNC.

11423

The number of FFT input data is too large. The upper limit is 4096 for DSP2.

11424

ARRAY statement cannot be used in DSP3.

11425

The memory that does not exist in the system is selected.

11426

Memory is overflow.

The measurable maximum memory length is 131072 words (128K words).

11427

The statement being used cannot be used in the DSP parallel operation.

11500

A statement or unit which cannot be used with the T3311 is specified.

11501

The physical pin No. must be from 1 to 4 when specifying L of the Z converter in an ISVM, VSIM, or IS statement.

11502

The specified PIN NO exceeds the maximum value of the PIN defined in SOCKET. Or it is not defined in SOCKET.

11503

The specified HDC unit No. is not defined in the DUT1 of the SOCKET simultaneous measurement.

11504

A bit error occurred in the PHDC unit.

11505

The Z converter is not specified in an ISVM, VSIM, or IS statement in the current system.

11506

LOW CURRENT Z convert cannot be specified in an ISVM, VSIM, or IS statement in the current system.

11507

DHDC unit time-out error.

11510

Patterns not to be specified in the SEND SPAT statement are specified.

11511

Pattern numbers and the channel numbers in the CHANNEL definition are not consistent.

11512

The socket program is not used for simultaneous test.

11513

No specification other than an integer, logical number, or DIM as a complete defined array variable is allowed.

11514

This must be real number type data with units of "Vrms".

11516

Integer, logical and character strings must be specified.

11542

The specified HPDC unit is not defined in the socket file.

11543

The MATCH mode test is disabled during simultaneous test for more than one device.

11544

Measurement is disabled when condition setting statement or pin setting is not completed.

11545

Measuring more than one pin at simultaneous test for more than one device is impossible.

11546

The specified unit No. and channel No. are inconsistent with the value defined in the socket program.

11547

Statement used is not applicable to the stations 3 and 4.

11550

When measuring a differential voltage or differential current data by MEAS/D statement, unit of data is inconsistent.

11551

If the LDC is used, the measurement in the VM mode is not allowed.

11552

When LDC was used, the current range of the HDC or PHDC unit was not set by 800UA. Or the voltage range was not set to 8V or less.

11553

The SEND SPAT statement is not allowed if RATE=EXT is specified.

11554

This function cannot be used in simultaneous measurement.

11555

The controller of this revision has the old SYS DSPWCS and if cannot execute the ARRAY statement. Reload SYS DSPWCS.

11560

When AVS is operating, arbitrary function can not be specified for AVS WAVE statements.

11561

When RATE statement is specified in pattern program, time specification is not available in main program.

11562

Time specification is not available as test period for DSU.

11563

In the specified pattern program, there is an instruction which cannot be executed with this tester.

11564

Specify this statement before the RATE statement.

11700

An error occurred to the SQDC object file. Compile the corresponding PRO file on the SDTR command again.

11701

The mode change (VSIM $\longleftrightarrow$ ISVM) is specified even if the range is omitted in the HDC setting statement.

11705

If the HDC mode is changed, the source range and measure range cannot be omitted.

16. Memory Tester Runtime Error Codes (12000 to 12777)

Error codes are represented in octal in the table.

16. 1 Error Message List

12000

Not used

12001

Too many PINs are specified.

12002

The specified PIN number is not in the allowable range.

12003

The all DIM specification or the PINLIST usage is incorrect for the pin specification in the READ statement.

12004

This statement can be used only for AFM MULTIMODE=SINGLE.

12005

The number of failure storage boards is insufficient.

12006

The bit size cannot be changed.

12007

When MULTIMODE is "ODD", "EVEN", or "ALL", EXP mode can be specified only at the beginning.

MOST-50, ASX/V-50

When MULTIMODE is "FORMER", "LATTER", or "ALL", EXP mode can be specified only at the beginning.

12010

Measurement cannot be performed when "AFM MULTIMODE=ALL" is specified. Measurement must be performed for "ODD" and "EVEN" separately.

MOST-50, ASX/V-50

Measurement cannot be performed when "AFM MULTIMODE=ALL" is specified.
Measurement must be performed for "FORMER" and "LATTER" separately.

12011

The expected value generation (EXP) mode can be specified only in the first mode.

12012

The specified DUT number does not exist.

12013

The specified bit does not exist.

12014

The mode specified by "AFM ACTION" is different from the mode in which read/write operations are performed.

12015

Since AFM ACTION is defined in another system, the T3331 statement cannot be used.

12016

The end address is smaller than the start address.

12017

Control branches to another program by GOTO PRO, but the simultaneous measurement conditions of PRO before branch differ from those after branch.

12020

"ALL" cannot be specified in the "AFM MULTIMODE=SINGLE" state.

12021

The bit size cannot be changed.

12022

When the failure address was searched, the relevant mode was not in AFM.

12023

The T3331 statement cannot be used under the current measurement conditions.

12024

The mode specified by "AFM MULTIMODE" cannot be processed under the current measurement conditions.

12025

When "AFM REMOVE" is specified, only "AFM MULTIMODE=SINGLE" can be used.

12026

The failure storage is not mounted for FM1.

12027

The MULTIPLE DUT stack overflowed.

12030

The MULTIPLE DUT stack underflowed.

12031

The number of simultaneous measurement DUTs specified by the handler exceeds the number of DUTs specified in the socket program.

12032

All DUTs specified in the socket program cannot be tested with the handler connected.

12033

Since the contactor selector specification of the handler is incorrect, there is no contactor to be tested.

12034

SORT data is sent to the handler, but no response is returned.

12035

In the SET BURST statement, the unit address set in the burst block does not match that in OUT BUFFER MEMORY (OBM) in ALPG.

12036

In the SET BURST statement, WAIT TIME data set in the BURST BLOCK is too long to fit in OUT BUFFER MEMORY (OBM) in ALPG.

10μsec range 32bit (BURST MAX)



100msec range 12bit data (OBM MAX)

12037

In the SET BURST statement, a stop code is not set in OUT BUFFER MEMORY (OBM).

12040

In the SET BURST (A, n) statement, the number of BURST BLOCKs to be transferred must not exceed (16 - n).

12041

An attempt to read address data from the XY coordinator, failed. This error occurs when the BUSY FLAG of the XY coordinator is on.

12042

The file name specified in the SEND FM statement is not found.

12043

For executing the SEND FM statement, Z address can not specified in the AFM ADDRESS statement.

12044

The RATE set in the file specified in the SEND FM statement must match the AFM RATE set in the main program.

12045

The NBIT set in the file specified in the SEND FM statement exceeds the specified range of the AFM ADDRESS statement set in the main program.

12046

The AMAX set in the file specified in the SEND FM fine name statement exceeds the specified range of the AFM ADDRESS statement set in the test plan program.

12047

The AMAX set in the file specified in the SEND FM file name statement exceeds the address area of the expected value pattern occurrence memory (set with the AFM ACTION=FMX>EXP or PM>EXP statement) which is set in the test plan program.

12050

ASX/V-11E, MOST-XI/E

The BITSIZE set in the file specified in the SEND FM statement must not exceed 18 bits.

MOST-50, ASX/V-50

In the socket program, execution with D or E specification for "PIN MODE" is not possible.

12051

Sufficient memory of expected value pattern occurrence is not available for the JOINT set in the file specified in the SEND FM statement. Increase the number of memory units by using the AFM ACTION=FMX>EXP statement.

12052

The number of data sets in the file specified in the SEND FM statement exceeds the maximum address of the expected value pattern occurrence memory.

12053

This error occurred in the VS statement checked by the spike check function (SET ERMODE statement). The error occurs when a measurement range is changed at the RON state, or C1 (capacity load) is connected/released.

12054

This error occurred in the VSIM, the ISVM or the HVSIM statement checked by the spike check function (SET ERMODE). This error occurs when a measurement range is changed in the RON state.

12055

Inhibited combination is specified for source range and measurement range.

12056

In the EXEC DCRELAY program, no simultaneous measurement data is defined in the socket table, no socket table is defined, or one or more argument settings are incorrect.

12057

I/O control 2 (DRE2) can not be used in the system.

12060

FMALL2 mode in a socket program cannot be used because of no DC MPXER C board in the system.

12061

Not used

12062

This statement cannot be executed on the system equipped with no VRAM option.

12063

Abnormal board sense line in failure memory board. For example, an illegal fail board is mounted.

12064

MUXSUB cannot specified for that pin.

12065

Some pins cannot be specified in the current CHILD MODE.

12066

AFM ACTION specification is not matched to the installed memory board.

12067

Combination of AFM ACTION mode is incorrect.

12070

MASK is not specified in AFM ACTION statement.
So, AFM REMOVE cannot be executed.

12071

MASK specification must be one at a time for the statement currently executed.

Prior to this statement, it is needed to make un-necessary MASKs be DISABLE state using AFM ACTION statement.

12072

High-side cannot be specified.

12073

In MASK mode, DUT specification cannot be made during WRITE operation. Make DUT specification be ALL, or change the mode of AFM ACTION.

12074

X, Y and Z axes which are not specified in AFM/DFM ADDRESS statement are specified here.

12075

The PPS parallel drive is not allowed if the system has the 320CH TEST HEAD 2ND DPU.

12076

Specification of RDUT is incorrect.

12077

This statement cannot be executed in a system not provided with VRAM option II.

12100

The VRAM MODE statement to determine the operation mode of VRAM option is incorrectly specified.

Example: No specification other than BIT4*4, BIT8*4, and BIT8*8 is allowed in BITn*m.

12101

For MASK, EXP and DBM modes, BIT specification cannot be made by RESET/PRESET statement.

12102

In SET BURST statement, source range of VS does not coincide with that of DBM.

12103

The measurement cannot be executed with the connection between different DC units and multiple pins of the same DUT.

➔ For the DC unit No. to be connected to the pin, refer to [ATL-50 Socket Program Reference Manual\(No. : 8256293\)](#).

12104

In simultaneous measurement, PIN DEFINE TABLE hardware function is used when specified pins are different in each DUT. (That is, DUT1 uses P33 to 36, and DUT2 uses P41 to 44) In this case, BURST BLOCK specification cannot be made for the pin statement.

12105

There is an abnormality in the MPA file created by FMXFER utility.
(e.g. there remains the file forcibly interrupted by break key entry, etc.)

12106

VRAM PGSEL=SUB cannot be specified for the test plan program during execution of the asynchronous test (MODE ASYNC and MODE ALOCK are specified in the MPAT program).

12107

AFM (DFM) PINSEL=PDS1,PDS2 cannot be specified under the current test condition.

12110

VRAM PGSEL statement cannot be executed by this tester.

12111

In the mode setting of the specified pattern program, there is a setting that cannot be executed by this tester.

12112

In the register setting of the specified pattern program, there is a setting that cannot be executed by this tester.

12113

In the ADDRESS DEFINE setting of the specified pattern program, there is a setting that cannot be executed by this tester.

12114

In the test pattern written in the specified pattern program, there is a mode setting that cannot be executed by this tester.

12115

The scrambler specified in the pattern program cannot be executed by this tester.

12116

ARIRAM setting written in the specified pattern program cannot be executed by this tester.

12117

Specified descramble program cannot be executed by this tester.

12120

When AFM BITSIZE is 19 bits or more, EXP mode cannot be specified in AFM ACTION statement.

12121

PIN MODE=D or PIN MODE=E cannot be specified in the simultaneous measurement instruction of the socket program.

12122

Simultaneous measurement of more than 2 stations is not available if the stations are different (AG, AE station).

12123

AFM DBMSIZE statement cannot be specified.

12124

DBM mode cannot be specified in AFM ACTION statement.

12125

C8 to C11 signals of AF(SB1/SB2) or BF(SB1/SB2) mode in the AFM ACTION statement cannot be specified for this tester.

12126

AFM/DFM PGSEL statement cannot be specified.

12127

AFM/DMF PINSEL statement cannot be specified.

12130

READ DFM FD2/TPD2 statement cannot be specified.

12131

DELAY cannot be specified in AFM ADDRESS statement. Therefore, specify DELAY0 or omit.

12133

ADDRESS SHIFT MODE, (MODE LSBOUT/MSBOUT), has been used in the specified pattern program, and the values of XMAX or YMAX have exceeded the allowable range.

12134

The system cannot connect DC to the level driver pin (201 to 216 pin) and normal pin (1 to 116 pin) simultaneously, or perform DC measurement.

12135

The setting of the argument is not correct in the RMCW or WMCW utility.

12136

The connection between the DC relay of the level driver pin (201 to 216 pin) and normal pin (1 to 116 pin) on the pin card and DC selector of the normal pin is wrong.
For example, the DC selector is on the normal pin side, although the DC relay is on the level driver pin side.

12137

No handler designation in the socket program.

12140

FMALL3 mode specified in the socket program cannot be used for this system.

12141

The TPDIV mode and TPH2 register cannot be used in this system.

12142

The set value of TPH (TPH1) is wrong.

When the TPDIV mode is used, $\#0 \leq \text{TPH} < \text{TPH1} \leq \#\text{FF}$.

12143

The TPH2 register can be used only in the TPDIV mode.

(No TPDIV is specified in the pattern program.)

12144

Specification of measurement count n is outside the range.

- DC

$$1 \leq n \leq 254$$

- VS1, 2

$$1 \leq n \leq 1023$$

- VS9-12

$$1 \leq n \leq 254$$

12145

This statement cannot be executed in the system that has no NDPUII.

12146

VS13 and 14 cannot be specified in the system that has NDPUII.

12147

The AFM MULTIMODE statement must specify SINGLE mode in the current socket program.

(Only SINGLE mode can be specified.)

12150

The test stations must be 1 and 2 or 3 and 4 because the current socket program contains "FMALL1".

(Stations 1 and 3 or 2 and 4 cannot be tested.)

12151

FMALL1 cannot be specified in the socket program in this system.

12152

Data setting has been made during DPU operation. (DC)

12153

Data setting has been made during DPU operation. (10V PPS)

12154

Data setting has been made during DPU operation. (HV PPS)

12155

PPS SPRIT cannot be specified in this system.

12156

This socket program is for simultaneous measurement and cannot be executed in this system.

12157

When the previous mode is VSVM in the VS statement, "*" cannot be specified.

12160

DEM (PC) mode cannot be specified in this system.

12161

This object program cannot be executed in this system.
It must be recompiled in this system.

12162

VSVM mode cannot be specified in the VS statement in this system.
VSVM mode cannot be specified in other than VS1 and VS2, either.

12163

Through rate cannot be specified in the VS/VSIM statement in this system.

12164

In VS1 to VS2, STANDBY mode cannot be specified.

12165

The difference in amplitude between high and low voltages on the dynamic clamp level is under the tolerance.
(Example) AG : $V_{CH} > V_{CL} + 1.2V$

12166

This statement cannot be executed in this system (test head type).

12167

If the probe is controlled through the probe interface, simultaneous measurement in four stations cannot be specified in the socket program.

12170

Only AFM MULTIMODE = SINGLE can be specified as MASK mode on the current FM simultaneous measurement conditions.

12171

This statement cannot be executed during MULTIPLE DUT PARALLEL loop.

12172

No prober specification in the socket program.

12173

This statement is not available to current hardware.

12174

The system cannot execute the object of this revision. The object must be re-compiled.

12175

The AFM ACTION statement has an illegal combination of parameters.

12176

In this system, both EXP and DBM modes must not be specified at a time in the AFM ACTION statement.

12177

Neither PM>EXP nor PM>DBM can be specified in this system.

12200

Neither FMX>EXP nor FMX>DBM can be specified in this system.

12201

In this system, neither MAIN nor SUB can be specified in the AFM(DFM) and PGSEL statements.

12202

The READ AFM Advanced search statement is required when the AFM ADDRESS statement specifies an X or Y address which is longer than 12 bits.

12203

Illegal X- (or Y-) and Z-axis addresses specified in the AFM/DFM ADDRESS statement.

12204

Neither DFM MAIN MODE or DFM SUB MODE specification is available to this system. (Only DFM MODE specification is available to this system.)

12205

The READ DFM MA statement is not available to this system. Use the READ DFM XAD, YAD, or ZAD statement.

12206

The EXP mode must not be specified in the AFM ACTION statement under conditions of AFM BIT SIZE = 1, 4, or 37 to 72 (and 8 when PIN MODE = D or E)

12207

The EXP mode must not be specified in the AFM ACTION statement under conditions of AFM BITSIZE = 19 to 36 and AFM (DFM) PGSEL = MAIN or SUB.

12210

This system cannot execute the AFM MOVE statement.

12211

This statement is not available to VRAM OPTION II and earlier.

12212

This statement is not available to VRAM OPTION III and later.

12213

The VRAM MODE or VRAM MODES3 statement is already specified.

12214

The VRAM ADDRESS statement is already specified.

12215

Data transfer between RAM and SAM in the VRAM option failed because of illegal timing limit.

12216

Error in the SUB AFM address generating circuit in the VRAM option.

12217

This system cannot execute ARIRAM in the SCRAM program. Delete ARIRAM and recompile.

12220

No Z address must be specified in this statement.

12221

The specified address has not been defined by the AFM ADDRESS statement.

12222

The VS1 value must be equal to the VS2 value. VS9 to VS12 values must be identical.

12223

Data greater than #FF cannot be set for VFGCR, VBGCR, and VRMR in the system having VRAM OPTION II.

12224

The specified register is not available to this system.

12225

This statement cannot be executed if VRAM is specified in the AFM SUB ADDRESS statement. Therefore, release the VRAM specification of the AFM SUB ADDRESS statement.

12226

Illegal X- (or Y-) and Z-axis address specification in the VRAM ADDRESS statement.

12227

The description enclosed in brackets ([and]) in the clock setting (MULTITS setting) cannot be executed by this system.

12230

The unexecutable WCS instruction or mnemonic is described in the pattern program in this system.

12231

The unexecutable ARIRAM condition is described in the pattern or scramble program in this system.

12232

The object file of the pattern program is too old for this system to execute. Recompile.

12233

The PDS data specified in the SELECT PDSn DATA statement is not available to this system.

12234

The object file of the scramble program is too old for this system to execute. Recompile.

12235

The scramble of Z address cannot be executed with this system. Therefore, the scramble program where the decode complement statement, the address complement statement, the ALINK statement, and the address set statement concerning Z address are described cannot be executed.

12236

When PIN MODE of the socket program is a simultaneous measurement condition of A, B, and C, "AFM PGSEL=MAIN, SUB" can be specified only when AFM MULTIMODE is SINGLE.

12237

When AFM BITSIZE is 19bits or more in this system, ORDATA of the READ AFM MEMORY/SEARCH/COUNT statement (OR of the bit) can not be specified.

12240

When the XYSWAP mode is used, specify "SELECT PDS2 SUB".

12241

The specification referring to the pre-scramble cannot be executed if the pre-scramble program is not installed in the system.

12242

In the pre-scramble program, the maximum value of the address specified in the AMAX exceeds that of the system.

12243

The statement cannot be executed if PM>DBM is not specified in the AFM ACTION statement.

12244

This statement cannot be executed when AFM DBMSIZE=72.
Use a DBM memory statement or a READ DBM memory statement.

12245

DBM pattern data does not exist in the file specified by the SEND DBM file name statement.

12246

This statement cannot be executed when AFM DBMSIZE is 18 or 36.
Specify as AFM DBMSIZE=72.

12247

The number of the DBM pattern data exceeds the maximum number of the settable addresses.

12251

MAIN or SUB cannot be specified in this system.

12252

The PPS channel which cannot be connected to 16 V PPS is specified.

12253

The current clamp value, C(K), FLT and slew rate cannot be specified for 16 V PPS.

12254

The register not existing in this system is specified.

12255

The specified VS channel is not changed to 16 V PPS.

12256

The specified PPS channel is not supported.

12257

In this system, X12-15/Y12-15 cannot be specified in the SCRAM.
(In T5362/, T5363, or T5381A, X14-15 or Y14-15 cannot be specified.)

12260

The number of elements specified in the right part of the decode complement statement is out of bounds.

12261

X12-15/Y12-15 cannot be specified in the PRESCRAM.

12262

This statement cannot be executed because there is no device to be tested.

12263

This statement cannot be executed when the address of EXP mode is assigned with the AFM EXP ADDRESS statement.

12264

Data of this DBM pattern file cannot be transferred in this system. For example, specification of DBM CHANNEL exceeds the limitation of the system side.

12265

MAIN ADDRESS or SUB ADDRESS cannot be specified in this system.

12266

BITn-m of the READ AFM fail count statement cannot be specified in this system.

12267

In READ AFM fail count statement, n value should be equal to or less than m value when BITn-m is specified.

12270

ORDATA(n1, n2, n3,...) of the READ AFM statement cannot be specified in this system.

12271

To execute MEAS MPAT(5) and START MPAT(5) requires setting SELECT FLASH MODE2 or SELECT FLASH MODE4.

12272

This statement cannot be executed in the system without FLASH option.

12273

The specification of the SELECT FLASH MODE statement is incorrect.

12274

FLASH DATA specification which cannot be executed in this system exists in the SELECT FLASH MODE statement.

12275

The socket program which is not allowed is specified in the SELECT FLASH MODE statement.

12276

READ DFM ARIRAM/DATA statement cannot be specified in this system.

12277

READ DFM TPD/ZAD statement cannot be specified in this system.

12300

Multiple channels of PPS cannot be specified.

12301

PATB/CPEA/CPEB of the DBM memory statement and the READ DBM memory statement cannot be specified.

12302

READ DFM FD/FD2 statement cannot be executed in current FM status.

The fail store mode or the DISABLE mode must be specified with the AFM ACTION statement.

12303

The argument of the WCS instruction command exceeds the setting range.

12304

IDXIn command cannot be executed correctly when the specification of the number of loops matches with PC value (a program counter value) described in IDXIn.

12305

The PPS channel is not specified to VS of the measurement object.

12306

The address (PC) of the pattern program exceeds the maximum value.

12307

When the VS to which the 10V PPS parallel drive has been specified in the socket program is tested, /C cannot be specified.

12310

For the VS to which multiple number of PPS had been assigned with the SELECT VS statement, other than NEGLECT was specified in the LIMIT statement.

12311

When the 10V PPS parallel drive has been specified, current clamp value, C(k) and FLT cannot be specified.

12312

In the current socket program, the MASK mode can be specified only under the condition of AFM MULTIMODE=SINGLE.

12313

No DC unit is connected with a pin by MEAS DC.

12314

The current object cannot be executed in this system.

Recompile.

12315

AFM MULTIMODE=ALL cannot be specified.

Specify it with SINGLE or CONFIG(N).

12316

In the current setting condition of AFM, AFM MULTIMODE=SINGLE should be set.

12317

AFM PGSEL=MAIN,SUB cannot be specified.

Only MAIN can be specified.

12320

In AFM BITSIZE=N1,N2, the number of bits specified to N1 cannot be changed if the socket program was specified.

12321

In AFM BITSIZE=N1,N2, an illegal value was set to the bit specification of N1 or N2.

12322

In this system, N2 in "AFM BITSIZE=N1,N2" cannot be specified. Omit N2 specification.

12323

In the current simultaneous measurement condition, N2 in "AFM BITSIZE=N1, N2" cannot be specified. It can be specified in the single device measurement or in PIN MODE=A of the socket program.

12324

Strobes cannot be specified in the AFM ACTION statement. For example, specify FT>FMX instead of FTSB1>FMX or FTSB2>FMX.

12325

In AFM MULTIMODE=CONFIG(N), the value of N is out of range.

12326

This statement cannot be written in BURST BLOCK.

12327

In the AFM ACTION statement, the EXP mode can be specified only in the condition of AFM PGSEL=MAIN.

12330

The EXP mode in the AFM ACTION statement should be specified with 28 bits or less by the AFM (EXP) ADDRESS statement.

12331

AFM MULTIMODE=ALL cannot be specified in the current AFM condition.

12332

This statement cannot be used in this Interleave mode.

12333

BIT specification cannot be made to RESET AFM MEMORY in the condition where the EXP mode was specified in the RESET/PRESET AFM statement or in the AFM ACTION statement.

12334

This statement cannot be specified to the current AFM BITSIZE because it is over the range.

12335

This statement can be specified only in the condition of AFM MULTIMODE=SINGLE.

12336

This statement requires a mode other than PM>EXP in the AFM ACTION statement. For example, specification of FT>FMX or FMX>MASK or DISABLE is necessary.

12337

In the current system configuration, the failure information of DFM cannot be read out. An add-in AFM board is required.

12340

The data specified in the AFM BITSEL statement is out of the allowable range.

12341

The Interleave mode of the test plan program does not match with that of the pattern program.

12342

SUB PG cannot be used in the specified Interleave mode. Or, the specified Interleave mode cannot be executed in this system.

12343

In the pin statement, an illegal specification was made to this system or to the specified Interleave mode.

12344

Pin data B, C, D and E cannot be specified in the condition where PC was specified.

12345

The DBM (Data Buffer Memory) option is not installed.

12346

The PCLK option is not installed.

12347

PCLK cannot be specified to the pin.

12350

Only DC, GND and OPEN can be specified to the DC pin.

12351

In the pin statement, an illegal specification was made to a pin.

12352

The specified Interleave mode cannot be executed in this system.

12353

In the current test condition, n in FAIL UP TO PCNTn must be a multiple of 2. (n=2, 4, 6, 8, ...)

12354

In the current test condition, n in FAIL UP TO PCNTn must be a multiple of 4. (n=4, 8, 12, 16, ...)

12355

In the current test condition, this statement cannot be executed.

12356

Specification to SUB cannot be made in this system.

12357

In the SEND SRDATA statement, the process class or the unit for transmission is specified improperly.

12360

When readout of the OR data of any bits is specified in the READ AFM statement, all specified bits must be in the same bit block.

12361

This statement cannot be executed if the specified values are $N1 \diamond N2$ in AFM BIT-SIZE=N1,N2.

12362

The address conversion of the Z address cannot be executed in this system. Delete the maximum value of the Z address from the scramble program.

12363

The specified pin number exceeds the maximum of the DR pin or the CP pin.

12364

Data cannot be generated from the PM in this system or in the current interleave mode.
Change the settings of the SELECT PDS DATA statement or the DATA DEFINE statement in the MPAT program.

12365

This statement cannot be used in the condition of SELECT VSm SINGLE.

12366

Specified CHTYPE cannot be executed in this system. Or, the specification of CHTYPE of MAIN side differs from that of SUB side.

12367

Calibration fail occurred.

12370

The VS number specified can not used.

12371

When specifying separately the source voltage by using the SET DUT VS statement or the SET PPS statement, set within the range of the source data of the VS statement and the clamp value. Or set the clamp value of the VS statement smaller.

12372

Abnormal voltage was detected in the VS.

12373

When program is executing, specifying C command to the station that SDUT is existing can not do.

12374

Specifying n of measurement count number in MEAS/START DC statement or MEAS/START VS statement is out of range.

12375

This system can not transfer the burst test conditions VS of pattern program. Specify the correct DPUTYPE statement to pattern program.

12376

The VS specified as a parallel drive in the socket program can not be used.

12377

SELECT FLASH MODE3 or SELECT FLASH MODE4 cannot be specified in this system.

12400

The MODE8 DUT number specified by the M command(/DTLOG) does not exist.

12401

The specified pin condition cannot be used in this system.

12402

AFM MAIN ADDRESS and AFM SUB ADDRESS cannot be specified in the AFM ADDRESS statement of this system.

12403

CPE/DRE cannot be specified in the DBM Memory/READ DBM Memory statements of this system.

12404

The oscillating PCLK cannot be stopped.

12405

The MAIN and SUB settings differ for BITMODE.

12406

STRB129 or 130 cannot be used with this system.

12407

STRB2 or 130 cannot be specified under the current test state.

12410

The START PCLK NRZ statement cannot be specified under the current test state.

12411

The scramble program transfer mode is not the same as a mode set by the SELECT SCRAM MODE statement.

12412

ACLK cannot be used with STRB129 through 256 or WSTRB65 through 128.

12413

STRB129 through 256 and WSTRB65 through 128 cannot be used with this system.

12414

Double-speed mode cannot be specified in the AFM ADDRESS statement under the current test state.

12415

AFM EXP ADDRESS cannot be specified in the AFM ADDRESS statement of this system.

12416

The specified address cannot be assigned.

12417

The current combination of modes used with the READ AFM statement is incorrect.

12420

This statement cannot be executed in SELECT RATE HIGHRESOLUTION mode.

12421

When assigning the double-speed mode address in the AFM ADDRESS statement, two bit addresses should be enclosed in angle brackets of the AFM ADDRESS statement.

12422

The mode specified by the READ DFM is not compatible with this test system.

12423

According to the AFM ADDRESS statement, STRB1 or STRB129 is required in the AFM ACTION statement. Use SB1 or SB129 to specify FT, FZ, FO, AF, BF or MASK.

12424

According to the AFM ADDRESS statement, STRB1 or STRB2 is required in the AFM ACTION statement. Use SB1 or SB2 to specify FT, FZ, FO, AF, BF or MASK.

12425

STRB129 cannot be specified under the current test condition.

12426

When the AFM double-speed mode is specified, the mode currently specified in the AFM ACTION statement cannot be specified.

12427

According to the AFM ADDRESS statement specification, STRB cannot be specified in the AFM ACTION statement.

12431

SELECT COMPRESS CFM cannot be specified under the current test condition.

12432

The combined use of STRB 1 through 128 on even number strobe and STRB 129 through 256 on odd number strobe cannot be used on this test system.

12433

Not used

12434

The mode specified by SELECT PRESCRAM MODE cannot be used with this test system.

12435

The mode specified by SELECT PRESCRAM ADDRESS cannot be used with this test system.

12436

SELECT FLASH MODE and SELECT APPLICATION MODE BBM cannot be specified at the same time.

12437

The BBM>MASK cannot be specified in the AFM ACTION statement for the PIN MODE which is specified in the socket program.

12440

When BBM>MASK is specified in the AFM ACTION statement, N2 must be 1 in the AFM BITSIZE=N1,N2 statement.

12441

When the BBM>MASK is specified in the AFM ACTION statement and a value other than 1 is specified for the N1 in the AFM BITSIZE=N1, N2 setting, the SELECT COMPRESS AFM statement cannot be specified.

12442

The BBM>MASK is not specified in the AFM ACTION statement.

12443

The pattern program contains the HFLGLI command, which cannot be used with this test system.

12444

The pattern program contains the FJNI8 command, which cannot be used with this test system.

12445

The pattern program contains the STRC command, which cannot be used with this test system.

12446

The AFM ADDRESS statement cannot be set to double-speed mode with this test system.

12447

When "*" was specified in the VSIM or ISVM statements, the source data exceeds the limit of the clamp value for this test system.

12450

The number of bits specified for either the X or the Y address exceeds the limit in the Double-Speed mode for the AFM ADDRESS statements.

12451

The total number of DUTs set for the SELECT APPLICATION MODE HSP statement was smaller than the number of devices being tested in parallel.

12452

Only one pin name can be used for the SELECT APPLICATION MODE HSP statement.

12453

A pin number that cannot be used in SELECT APPLICATION MODE HSP statement is specified.

12454

When MAIN,SUB are specified for AFM PGSEL, double-speed mode cannot be used for the AFM ADDRESS statement.

12455

You cannot specify both STRB and WSTRB in the same pin statement.

12457

When $BBM > MASK$ is not specified for the AFM ACTION statement, addresses used for the CFM ADDRESS statement exceed the limit.

12460

HANDLER is not specified in the socket program.

12461

The data file registered using "/PBNAM" does not exist.

The rotary switch number on the PERFORMANCE BOARD does not match the code in the data file.

12462

The address range, which is specified in the AFM ADDRESS or AFM EXP ADDRESS statement, exceeds the capacity of memory used when expected value patterns are generated from ALPG.

12463

This program cannot be executed because of PLL clock restrictions.

12464

The address range specified in the AFM ADDRESS statement exceeds the AFM memory capacity range.

12465

The DBMLPB and DBMLPE register setting is illegal. This setting must be $DBMLPB \leq DBMLPE$.

12466

An error occurred when the C program was executed.

When this error occurs, the displayed file name, TEST number, LINE number, PSW data, intermediate language codes, and accumulator data in the runtime error message are invalid.

For detailed information on this error, see the error message that is displayed before the runtime error message.

➔ For more information on the error, refer to [ASX/U-51 Hybrid Controller User's Manual\(No. : 8409598\)](#).

12470

DRECLK129 through DRECLK256 cannot be used with this test system.

12471

Cycle Palette specification is out of range.

12472

Only DC, IN_n, FIXL, FIXH, RZX, /RZX, FRUN, /FRUN, BCLK_n, CCLK_n or OPEN can be used for a clock pin.

12473

SCRAM has been specified for the AFM ADDRESS statement, however, the scramble program is not transferred.

12474

The DATA DEFINE setting (which cannot be executed with the test system) is specified in the DATA DEFINE statement of the pattern program.

12475

For parallel test, the number of array elements used for this statement should be 2 or more.

Example:

```
REAL[3]  A(1)
```

↑

The number of array elements is 1.

12476

The object module cannot be unloaded.

12477

There is no hybrid controller license.

12500

The GOTO PRO statement cannot be executed when an ATL program is run using the ATL_exec () function.

12501

The working directory for Vxworks is not specified correctly.

12502

CYPC15 Mode is set for the written pattern program. CYPC15 Mode is available only for systems with the Cycle Palette 16 Extended option.

12503

The SELECT APPLICATION MODE BBM5 or SELECT APPLICATION MODE BBM6 statement cannot be specified for the test system.

12504

The SELECT APPLICATION MODE BBM statement cannot be specified for the PIN MODE which is specified in the socket program.

12505

SELECT AFM CONFIG DOUBLE cannot be specified for the test system or under the current test conditions.

12506

The currently used tester driver controller is not compatible with the current object file. Recompile the program.

12507

The address specified in the left part of the decoder topology statement or the address specified in the left part of the ALINK statement exceeds the value which can be specified for the test system.

12510

The address specified in the right part of the decoder topology statement or the address specified in the right part of the ALINK statement exceeds the value which can be specified for the test system.

12511

The operating period of the cycle where the match flag sense instruction is written does not satisfy the requirement.

12512

"OFF" cannot be written on the right side of a decoder topology statement.

12515

The object module cannot be loaded.

12516

A description on the test_main () function is not found in the object module.

12517

When the AFM MULTIMODE=SINGLE is set, the BBM>MASK cannot be specified in the AFM ACTION statement for the PIN MODE which is specified in the socket program.

12520

For the test system or the current PPS assignment, the applied voltage value cannot be specified in the VS statement which is used as a burst test condition in the pattern program.

12521

For the test system, the PPS (a system standard voltage) and 20 V PPS cannot be specified for the VS at the same time in a program.

12522

When WET is specified for the system, the polarity of the applied voltage value set in the VS or VSIM statement cannot be changed while in the reference-on status.

12523

For the test system, ALL cannot be specified for the readout target DUT.

12524

The 20 V PPS cannot be specified as a parallel drive.

12525

The socket program cannot be executed with the DC configuration of the test system.

12526

When PIN MODE=B is specified in the socket program, DUTm cannot be specified for the data transfer target DUT.

12527

The DC unit cannot be connected to the specified pin.

12530

INH cannot be written for an HV level driver pin used in this system if the applied voltage is less than -5 V for VSIM.

12531

A limiter failure occurred.

12532

The mother board in the test head is not locked.

12533

The VS measurement mode, the source range or the polarity of the source data cannot be switched.

12534

The program cannot be executed when Parallel DFM is specified.

12535

A DBM pattern in which RDBMA is specified and a DBM pattern in which RDBMA is not specified cannot be used together. Execute the RESET DBM statement and then transfer data again.

12536

The MAIN and SUB settings differ for RDBMA.

12537

The file has not been transferred using the SEND DBM or SEND DBMR statement.

12540

The number of files that are registered by the SEND DBMR statement exceeds the limit.

12541

The MODE RDBMA statement cannot be specified in this system.

12542

A file name cannot be specified for this statement in this system.

12543

The specified dynamic link library cannot be loaded.

12544

In this system, the measurement mode cannot be altered to an ISVM mode other than MVM in the BURST BLOCK under a state in which DC is connected to the pin. Or the source range of the ISVM statement cannot be altered in the BURST BLOCK under a state in which DC is connected to the pin.

12545

The mode specified by the SELECT SCRAM MODE statement cannot be used in this system.

12546

When the DIVIDE2 or YDIVIDE2 mode is specified using the SELECT SCRAM MODE statement and then a scramble program is transferred to the address descrambler, the prescrambler cannot be used.

12547

When the MSM mode is not specified using the MODE statement of a pattern program, the SUB PG cannot be used.

12550

The PCC1 and PCC2 modes of a pattern program cannot be specified in this system.

12551

The BANK SAVE ADDRESS and BANK LOAD ADDRESS statements of a pattern program cannot be specified in this system.

12552

The BYTEMASK DEFINE statement of a pattern program cannot be specified in this system.

12553

The RDBMA mode is not specified for both the ALPG and DBM pattern data.

12554

Another interruption has occurred while a refresh routine was being executed due to an interruption of the internal timer in the REFRESHA mode.

12555

The double-speed mode setting specified in the AFM ADDRESS statement cannot be used under the current test conditions.

12556

In this system, 257 and higher cannot be specified as a PPS number of a socket program.

12557

An area used to control VS could not be assigned.

12560

The DBM pattern from the MAIN PG has not been transferred.

12561

The DBM pattern from the SUB PG has not been transferred.

12562

The total current clamp value specified by the VS statement exceeds the limit.

12563

The specified ranges of the DBMA, DBMLPB, and DBMLPE registers exceed the range of the transferred DBM pattern address.

12564

The pattern program cannot be transferred due to insufficient memory.

12565

The address bit specification exceeds the range.

12566

The AFM double-speed mode and addresses are incorrectly specified in the AFM ADDRESS statement.

12567

The FM does not operate correctly with the data specified in the AFM RATE statement.

12571

The PRO name specification exceeds the following range.

For integer type data : 1 to 99999999

For character type data : Within 32 characters

12572

The file has not been transferred using the SEND DBMR statement.

12573

When transferring scramble programs, in which OFF is specified on the right side of the decode correction statement, the scramble programs, in which the following settings are specified differently for DUTs and the FM, cannot be transferred in the SEPARATE mode:

- Address bits for which OFF is specified.
- AMAX statement

17. *Image Sensor Tester Runtime Error Codes (22000 to 22777)*

Error codes are represented in octal in the table.

17. 1 Error Message List

22000

The IPU memory is accessed while the IPU program is being executed.

22001

An abnormal flag was set during parallel measurement.

22002

The IPU program has not stopped when 10 seconds has elapsed since it was started by the MEAS IPU or START IPU statement.

22003

An abnormal flag was set during parallel measurement.

22004

The mode specified with the MEAS IPU statement does not exist. (Other than 0, 1, 100)

22005

Data acquisition has not been completed within 4 seconds. (During parallel measurement)

22006

A status that does not exist is read. This does not occur normally.

22007

The specified symbol (label, EQU) does not exist. Or the SEND IPU FILE statement (LIB IPSEND) has not been executed. If a symbol that does not exist is specified with the REG IPU PC statement, an error occurs when the MEAS IPU or START IPU statement is executed.

22010

The MEAS IPU statement or START IPU statement is called up without executing the REG IPU PC statement.

22011

The size specified with the READ/SEND IPU TM or READ/SEND IPU DM statement is "0".
Example:

```
READ IPU TM (a, n) TO v  
READ IPU DM (m, x, y, n) TO v ... The underlined value.
```

22012

The length of the read data storage variable or write data storage variable is not 2 words.
Example:

```
READ IPU TM (a, n) TO v  
SEND IPU TM (a, n) v ... The variable underlined.
```

22013

The test number specified with the READ IPU DATA statement does not exist.

22014

The number of test conditions exceeds the maximum number of the test conditions that can be transmitted with the SEND IPU LIMIT statement.
The maximum number of test conditions is 300.

22015

The category value specified with the SEND IPU LIMIT statement is not between 0 and 64.

22016

The size of the IPU program specified with the SEND IPU LIMIT statement is too large to secure the area where the test conditions are written.

22017

The IPU memory cannot be read or write normally.
This does not occur normally.

22020

The frame page number specified with the READ/SEND IPU DM statement does not exist.
(Other than 0 to 20)

22021

The frame page specified with the READ/SEND IPU DM statement is not defined.

22022

The file specified with the SEND IPU FILE statement is not for the IPU program.

22023

An abnormal flag was set while writing IPU.
This does not occur normally.

22024

The maximum size that can be specified with the READ/SEND IPU DM statement is 1024 bytes.

22025

Execute WSTRBm=t₁, t₂ before CONNECT SHn=WSTRBm is executed.

22026

An invalid file name is specified in the START TVPAT VLINE, FRAME statement. The specified file is invalid for FRAME and VLINE.

22027

The VLINE number of the START TVPAT statement is outside the allowable VLINE size range defined in the pattern file.

22030

The FRAME number of the START TVPAT statement is outside the allowable range of the FRAME size defined in the pattern file.

22031

An incorrect FRAME number or VLINE number is specified in the START TVPAT statement.

22032

A variable for storing data is defined as a variable with unit.

No variable with unit is allowed as IPU data.

22033

The IPU user program size is too large for a calibration data area to be reserved.

18. *MPAT Compilation Error Codes* (23000 to 23777)

Error codes are represented in octal in the table.

18. 1 Error Message List

23000

MODE ECBM cannot be specified in the 1WAY mode.

23001

The data of the VS statement is out of allowable range.

23002

An illegal test condition statement was specified in the burst block. The following five test condition statements can be written in the burst block.

- VS
- WAIT TIME
- SEND EXT
- STIn (n=1 to 8)
- STISP

23003

In the same module, BITSIZE, AMAX and AMIN statements cannot be written after the ROM pattern data.

23004

Plural ILMODE statements cannot be specified in one module.

23005

The interleave mode should be enclosed by <> in the specification.

23006

MAIN AFM PATTERN and SUB AFM PATTERN statements or MAIN ROMPAT and SUB ROMPAT statements cannot be written.

23007

The MAIN BURST BLOCK BEGIN statement or the SUB BURST BLOCK BEGIN statement cannot be written.

23010

The specified VS channel number is out of allowable range.

23011

The bit size is out of allowable range.

23012

When the label is specified by STISP statement in the common section burst block, the label used in multiple modules cannot be specified.

23013

When specifying DPUTYPE2 within pattern program, the simultaneous specifying of the following VS channel combinations is unable to do.

VS5 and VS9, VS6 and VS10, VS7 and VS11, VS8 and VS12

23014

Within pattern program, DPUTYPE1 and DPUTYPE2 can not be mix in the specifying.

23015

With in BURST BLOCK, DPUTYPE1 and DPUTYPE2 can not be described.

23016

In interleave mode, the next address of JSR command can not be specified to the branch address of JSR command.

23020

DBM PATTERN statement and MAIN/SUB DBM PATTERN statement cannot be written in the same module simultaneously. (Ditto for CBM PATTERN.)

23021

Multiple (MAIN/SUB) DBM PATTERN statement cannot be written in the same module.
(Ditto for CBM PATTERN.)

23022

DBM PATTERN statement should be written before DBM CHANNEL statement. (Only for T5500 series.) (Ditto for CBM PATTERN.)

23023

DBM PINSEL statement should be written after DBM CHANNEL statement and before DBMA statement.

23024

DBM bit specified with the PINSEL statement is not specified or has already been specified with the DBM CHANNEL statement.

23025

BIT specified in DBM CHANNEL statement is not specified in DBM PINSEL.

23026

In DBM PINSEL statement, except driver pin or I/O pin cannot be specified.

23027

In DBM PINSEL statement, the same DBM bit as the specified pins DBM bit is already used.

23030

The number of DBMA or CBMA description exceeds the limit value.

23031

When the interleave mode is 2WAY in DBM PATTERN, the address value specified by DBMA should be a multiple of 2.

When the interleave mode is 2WAY and ECBM mode in CBM PATTERN, the address value specified by CBMA should be a multiple of 2.

23032

DBM CHANNEL statement specification is duplicated. (One DBM CHANNEL statement can be specified for one PATTERN statement.) (Ditto for CBM PATTERN.)

23033

Pattern data of DBM or CBM does not exist.

23040

BWPE ADDRESS statement and MAIN/SUB BWPE ADDRESS statement cannot be written in the same module simultaneously.

23041

Address specification in BWPE ADDRESS statement is incorrect.

23060

When area inversion is executed using the ARIRAM DEFINE and INV statements, the address (X or Y) that is not specified as an object of the area inversion cannot be set in the INV statement.

Alternatively, more than 12 address elements have been specified for the area inversion.

23300

The number of SDEF statements is over allowable range.

23301

In the PCC statement, the specified value is out of allowable range.

23302

No branch address is specified. Or, an improper branch address is specified.

23303

The interleave mode of the branch address is not suitable.

23304

The SET instruction or FLGLI1 instruction cannot be specified in other mode than the 1WAY mode.

23306

Any one of the following instructions only can be written at the end of the pattern after the START statement.

T5500 series

1WAY mode: STPS, STFL, RTN, JMP

2WAY/4WAY mode: STPS, STFL, RTN

T5300 series

STPS, STFL, RTN, JMP, FLGJ1

23307

Control bit "T", "TM1", or "TM2" can be set in the cycle only of the NOP instruction or the SET instruction.

23310

The control bit should be described before "%" or ":".

23311

In the cycle described WAIT, control bit and address/data operation command cannot be described.

23312

If PCCn is not specified, "%" cannot be specified before the ALPG address data generating instruction.

23313

In the 1WAY mode, ":" cannot be specified before the ALPG address data generating instruction.

23314

In the 4WAY mode, SUB ALPG address data generating instruction cannot be specified.

23315

Plural "%" or ":" are described in one line.

23316

The specified branch address exceeds the maximum value or the minimum value.

23317

Registered words cannot be used as the label name.

23320

In the cycle described STPS and STFL, control bit, address/data operation command and MUT signal can not be described.

23321

Registered words cannot be used as the SDEF name.

23322

The PD (Data Hold) instruction can be specified only in the 1WAY mode.

23323

The main ALPG field and the sub ALPG field TS (Timing Set) cannot be set to different values.

23324

The TS (Timing Set) cannot be set from the sub ALPG field alone.

23500

If the BX-Carry-attached operating instruction is used, it must be written in a pair with the operating instruction to generate BX-Carry. However, the BX-Carry-attached operating instruction can be specified if the operating instruction to generate BX-Carry is written in the immediately before step of continuous two steps (four steps in the 4WAY mode).

23501

If the CY-Carry-attached operating instruction is used, it must be written in a pair with the operating instruction to generate CY-Carry. However, the CY-Carry-attached operating instruction can be specified if the operating instruction to generate CY-Carry is written in the immediately before step of continuous two steps (four steps in the 4WAY mode).

23502

If the BX-Carry-attached operating instruction is used in continuous two steps (four steps in the 4WAY mode), the operating instruction to generate BX-Carry cannot be written alone.
(XB<XB+xx instruction with Carry already exists.)

23503

If the BX-Carry-attached operating instruction is used in continuous two steps (four steps in the 4WAY mode), the operating instruction to generate BX-Carry cannot be written alone.
(XB<XB+xx instruction without Carry already exists.)

23504

If the CY-Carry-attached operating instruction is used in continuous two steps (four steps in the 4WAY mode), the operating instruction to generate CY-Carry cannot be written alone.

(XC<XC+xx instruction with Carry already exists.)

23505

If the CY-Carry-attached operating instruction is used in continuous two steps (four steps in the 4WAY mode), the operating instruction to generate CY-Carry cannot be written alone.
(XC<XC+xx instruction without Carry already exists.)

23506

In continuous two steps (four steps in the 4WAY mode), Carry does not exist but the XB<XB+xx instruction with Carry already exists in Z.

23507

In continuous two steps (four steps in the 4WAY mode), Carry exists but the XB<XB+xx instruction without Carry already exists in Z.

23510

In continuous two steps (four steps in the 4WAY mode), Carry does not exist but the XC(SK)<XC(SK)+instruction with Carry already exists in Z.

23511

In continuous two steps (four steps in the 4WAY mode), Carry exists but the XC(SK)<XC(SK)+instruction without Carry already exists in Z.

23512

In continuous two steps (four steps in the 4WAY mode), the Z register does not exist but the Z register with Carry already exists.

23513

In continuous two steps (four steps in the 4WAY mode), the operating instruction using the TPS register (TP<>TPS, TP<TPS, TPS<TP) can be specified only once.

23514

In continuous two steps (four steps in the 4WAY mode), others than the HOLD instruction (TP<TP) cannot be specified as the operating instruction of the TP register before the step in which the TPS<TP operating instruction is written.

23515

In successive two steps (four steps in the 4WAY mode), the number of registers that data can be updated is only one from the three registers of XC, XS, and XK except the following data load instructions between two registers:

XC<XC, XC<XS, XC<XK

XS<XS, XS<XC

XK<XK, XK<XC

However, when the register data is updated to the same operation result using parallel register description type (XCS, XCK, XSK, XCSK, YCS, YCK, YSK, and YCSK), this is counted as one register. This can be applied to YC, YS and YK registers.

23516

If the operating instruction including F=A was specified in continuous two steps (four steps in the 4WAY mode), addition/subtraction operating instruction, shift operating instruction and reverse operating instruction cannot be specified together.

➔ Refer to [ATL-51 Pattern Program Reference Manual\(No. : 8256292\)](#).

23517

The SETD register is duplicated in a group between continuous two steps (four steps in the 4WAY mode).

23520

In continuous two steps (four steps in the 4WAY mode), the operating instruction (including the LOAD instruction) of the D5 and TP(D6 and TP2) register cannot be specified in the same step of the DSET instruction set to the D5 (D6) register.

23521

In continuous two steps (four steps in the 4WAY mode), the reversed operating instruction can be specified only once.

23522

In two continuous steps (four steps in the 4WAY mode), the $F < A \pm 1^{\wedge}C$ instruction and the $F < A \pm B^{\wedge}C$ instruction cannot be specified together.

➔ Refer to [ATL-51 Pattern Program Reference Manual\(No. : 8256292\)](#).

23523

In continuous two steps (four steps in the 4WAY mode), the operating instruction that generates the Carry cannot be specified at and after the step that receives the value of the register F storing the result of the Carry-attached operating instruction.

Example:

$XC < XC \quad YC < YC + 1$

$XC < XC + 1 \quad YC < YC + D3 \wedge CY$

23524

In continuous two steps (four steps in the 4WAY mode), the operating instruction that generates the Carry cannot be specified at and after the step that receives the value of the register F storing the result of the Carry-attached operating instruction.

Example:

$XC < XC \quad YC < YC + D3$

$XC < XC + 1 \quad YC < YC + D3 \wedge CY$

23525

If the Carry-attached operating instruction is used in continuous two steps (four steps in the 4WAY mode), the operator code must be unified.

23526

If F equals A in the logical operating instruction ($F < A \& B$, $F < A \text{ " } B$, $F < A \text{ ' } B$), the synthesizing operation to the register can be specified only once between synthesized steps. It cannot be synthesized with the other operating instruction.

➔ Refer to [ATL-51 Pattern Program Reference Manual\(No. : 8256292\)](#).

23527

The specification of registers other than the object of the synthesis is duplicated.

23530

Registers for synchronized operation cannot be assigned more than once.

Or, the DSD, RCD or CCD register operating instructions or CLEAR instruction cannot be set in address or data generation instructions (field B and field C) for the next sequence control instruction (field A) when the DSET instruction is set for the DSD, RCD or CCD register. (When a program is branched with an instruction (such as JN1), these instructions cannot be set in a branch destination and the next line.)

The DSD, RCD or CCD instructions can only be assigned once to a step in normal format.

23531

Though the register can be specified only once in the synthesized step, it is specified in plural lines.

23532

Plural SWAP instructions (HMAX<>LMAX) or plural RF<RF+1 instructions are specified in the synthesized step.

23533

D3<D3*2L instruction and D4<D4*2L instruction are not used together.

23534

In two continuous steps, D3<D3*2L, D4<D4*2L and D3<D3*2, D4<D4*2 cannot be specified together.

23535

In the register-to-register operation, operation can be executed only between the same kinds of registers.

23536

In D1 to D6, ND1 to ND7, and BD1 to BD7 registers, operations can only be executed between the same D, ND, or BD registers respectively.

23537

The value exceeds the maximum available value of the register kind in one line.

23540

When the RF<RF+1 instruction is specified separately, it can be specified in the first step only. Describe the RF<RF+1 instruction together with the X<RF instruction.

When the X<RF instruction is specified separately, it can be specified in the first step only.

23541

When the value of the YB or D1-4 register is changed and the old and the new values of the YB or D1-4 register are used in the two continuous steps of the Carry-attached operating instruction (other than $F<A \pm 1 \pm C$) of the YC[S][K] register, the instruction used to change the YB or D1-4 register value cannot be specified.

23542

In the continuous two steps, the addition/subtraction operation instruction and logical operation instruction of D5 and TP (D6 and TP2) register cannot be specified after the operation instruction of D5 and TP (D6 and TP2) register (include LOAD instruction).

23543

In two continuous steps, TP<TP*2 (TP2<TP2*2) instruction cannot be specified after TP<D5(TP2<D6) and TP</D5(TP2</D6) instructions.

23544

In successive 2 steps, CBMA register operating instruction (CBMA<CBMA+1) cannot be specified after DSET instruction to CBMA register.

23545

When specifying BDW, BCW or BMW in 2 WAY MODE, the following restrictions apply.

- Do not specify them separately.
- Do not pair the data generation instruction with the address generation instruction in the same step.

23546

In two or four successive steps, XC[S][K] and YC[S][K] register operation instructions using D4 or the SWAP instruction cannot be specified after the D3<D3*2L D4<D4*2L instruction.

23547

The CBMA register operating instruction can be only specified at the last step in MODE ECBM and separate specifications.

23550

When transferring the Carry-attached operating result to the next identical operating instruction, you should transfer both the Carry generating register and the Carry save register.

23551

When using the Carry-attached operating instruction in a two or four step operation, the operators should be unified.

23552

The current and previous values for the D1 to D4 register values cannot be used together in a two or four step XC or YC register operation.

In addition, in a two or four step operation, the D4 register right shift instruction (D4<D4/2) result cannot be used for XC or YC register operations.

23553

When a Carry-attached operating instruction using the YB register is specified in a two or four step operation and then, in the next step, an operating instruction with the YB register is specified, the same operators must be used.

23554

When using the separate format, the DSD, RCD, or CCD (DSD<DSD+1, RCD<RCD+1, or CCD<CCD+1) instruction or the CLEAR (DSD<0, RCD<0, or CCD<0) instruction can be written only in the second step while in the 2 WAY interleave mode, or in the fourth step while in the 4 WAY interleave mode.

23555

The DSD, RCD or CCD register operating instructions or CLEAR instruction cannot be set in address or data generation instructions (field B and field C) for the next sequence control instruction (field A) when the DSET instruction is set for the DSD, RCD or CCD register. (When a program is branched with an instruction (such as JN1), these instructions cannot be set in a branch destination and the next line.)

The DSD, RCD, or CCD instruction can be set only once in the normal format.

23556

In two or four successive steps, the SWAP instruction cannot be specified after the BX-Carry-attached or CY-Carry-attached operating instruction.

23557

You cannot specify MODE DFCA_n or DFCA_n together with CYP_n, or DSC together with CYP_n, in one module.

23560

MODE CYPC15 is not written in the common section or in the same module. If CYP9 to CYP16 are written, MODE CYPC15 must be written in the common section or in the same module.

23561

MODE CYPC15 and C15 of MUT signal cannot be written in the same module. If MODE CYPC15 is written in the common section, C15 of MUT signal cannot be written in the pattern program.

23562

The IDX18 #0 instruction is not written after the FLGLI1 instruction.

Only the NOP instruction can be written as the sequence instruction between the FLGLI1 instruction and the IDXI8 #0 instruction.

23563

The DBMSET instruction cannot be specified when MODE RDBMA is not specified.

23564

The DBMINC and DBMSET instructions cannot be specified in the same step.

23565

The MAIN and SUB BYTEMASK DEFINE statements cannot be specified.

23566

The BYTEMASK DEFINE statement can be specified only once in a module.

23567

The BYTEMASK DEFINE statement is not specified before the BYTEMASK DATA statement.

23570

The BYTEMASK DEFINE statement is not specified before the BYTEMASK MD ADDRESS statement.

23571

The BYTEMASK DEFINE statement is not specified before the BYTEMASK ADDRESS statement.

23572

The BYTEMASK DEFINE statement is not specified before the BYTEMASK BITSEL statement.

23573

Only one BYTEMASK DATA statement can be specified for the BYTEMASK DEFINE statement.

23574

When the MODE BWPEM or BWPE ADDRESS statement is specified in one module, BYTE-MASK DATA = MD cannot be specified.

23575

An address specified by the BYTEMASK MD ADDRESS statement is incorrect.

23576

An address specified by the BYTEMASK ADDRESS statement is incorrect.

23577

When the BYTEMASK DEFINE statement is specified, the BYTEMASK BITSEL statement must be written.

23600

The composition result is abnormal. No applicable instruction exists.

23601

Mask data specified by the BYTEMASK BITSEL statement is incorrect.

23602

The same block number is specified more than once by the BYTEMASK BITSEL statement.

23603

MODE MSM cannot be specified when a 72-bit data mode (MODE DFCA, DFCB, or DSC instruction) or 32-bit data mode (MODE TPM36) setting is specified.

23604

When DBM is used, MODE MSM cannot be specified.

23605

MODE MSM can only be specified in the 2WAY interleave mode.

23606

A module using the MSM mode setting and a module using SUB in the 1WAY normal mode setting cannot be used together in the same pattern program.

23607

A maximum of four BYTEMASK BITSEL statements can be written for one BYTEMASK DEFINE statement.

23610

No instruction that updates the X address can be specified during two consecutive steps (2WAY) or four consecutive steps (4WAY) after the step in which the XASV instruction is specified.

23611

The BANK SAVE/LOAD ADDRESS and MAIN/SUB BANK SAVE/LOAD ADDRESS statements cannot be specified in the same module at the same time.

23612

An incorrect address is specified in the BANK SAVE/LOAD ADDRESS statement.

23613

The BYTEMASK DATA = MD statement is not specified before the BYTEMASK MD ADDRESS statement.

23614

If REFRESHA or REFRESHB is specified in the MODE statement, the following combination of instructions cannot be described.

- When the JNIn, JNInI, or JNInD instruction either specifies the same address as the branch destination or includes the IDXIn instruction, the step does not describe "I", which is the control bit used to disable interruptions.
- An index loop instruction (IDXIn, JNIn, JNInI, JNInD, or JSIn) is specified immediately after the above instruction.

23615

The values for the D1 and D2 registers cannot be altered when the current and previous values for the D1 and D2 registers are used together in a two or four consecutive step XB or YB register operation by changing the values for the D1 and D2 registers.

23616

The value for the ZD register cannot be altered when the current and previous values for the ZD register are used in a two or four consecutive step Z register operation by changing the value for the ZD register.

23617

The value for the ND1 register cannot be altered when the current and previous values for the ND1 register are used in a two or four consecutive step N register operation by changing the value for the ND1 register.

23620

The value for the BD1 register cannot be altered when the current and previous values for the BD1 register are used in a two or four consecutive step B register operation by changing the value for the BD1 register.

23621

The values for the D1 to D4 registers cannot be altered when the current and previous values for the D1 to D4 registers are used in a two or four consecutive step XC or YC register operation by changing the values for the D1 to D4 registers.

23622

When specifying the D1 and D2 registers for the operation instruction with Carry for the YB register, if the current and previous values for the D1 and D2 registers are used in consecutive 2-step/4-step, the instruction to alter the value of the D1 or D2 register cannot be specified.

23623

When specifying the ZD register for the operation instruction with Carry for the Z register, if the current and previous values for the ZD register are used in consecutive 2-step/4-step, the instruction to alter the value of the ZD register cannot be specified.

23624

The DINV instruction cannot be specified when MODE DINVn is not specified.

19. *SCRAM* Compilation Error Codes (26000 to 26077)

Error codes are represented in octal in the table.

19. 1 Error Message List

26000

The REPLACE statement is already defined.

26001

EXPRESSION statement or ADDRESS statement was specified before REPLACE statement.

26002

The REPLACE and ALINK statements cannot be used together in a program.

26003

When the REPLACE statement is defined, the interruption setting cannot be set for the decode topology statement.

26004

"OFF" cannot be written on the right side of a decoder topology statement if the REPLACE statement is written.

26005

The value of the address bits represented as "OFF" on the right side of a decoder topology statement must always be used for both sides of the related address topology statement.

26006

If "OFF" is written on the right side of a decoder topology statement, the address bits for the related address topology statement must always be written.

26007

When the number of elements on the right side of a decoder topology statement exceeds 15, XAT15 (YAT15) cannot be specified.

20. *Error Message List*

Error messages are listed in alphabetical order below.

20. 1 Error Messages

ASSIGN DEVICE CHANNEL ERROR - TEST SYSTEM CURRENTLY IN USE

This error occurs when another user already activated the test controller of ADVANsite system.

ASX BOOT DEVICE NOT SELECTED - MOST RUNNING ?

There is a possibility of hardware failure. This does not occur normally.

BAD BLOCK

A block which cannot be read/written was detected while executing an ABREAD/ABWRITE command.

BURST SIZE ERROR

This error occurs when there is an abnormality in the burst size during communication.

CHANNEL ALREADY IN USE (Error code: \$13)

A channel which is already opened was tried to be opened again.

This does not normally occur.

CHECKSUM ERROR

A check sum error is detected when executing a DUMP/MOVE command. It is necessary to clean the HEAD portion of that unit.

COMMAND EVOLUTE BUFFER OVER

The command character string of one line evolved by "<>" exceeds the prescribed value (512 characters).

COMMAND LINE TOO LONG

The command character string input exceeds the prescribed value for one line (512 characters).

COMMUNICATIONS FAILURE - TP1 POWER ON ?**COMMUNICATIONS FAILURE - TP4A POWER ON ?**

In ADVANsite system, this error occurs when the power supply of the tester processor does not power on.

Or, it occurs when the cable which connects the tester processor and the environment processor is disconnected.

COMPARE BAD BLOCK

There is a different block as a result of comparison after copying with the FCOPY command.

CRC ERROR

This error occurs when the CRC error is detected during read-out of data from the file.

CRC ERROR ON REMOTE STATION

This error occurs when the CRC error is detected when data from the file is being read out in the remote office.

CUSTOMER IN USE

When deleting a DIR file with the DELETE command, the file in use exists on the customer side (customer proper storage area).

DEBUGGER IS BUSY, THEREFORE THE CUSTOMER CANNOT CHANGE

Customer change is attempted at the 7th U command when the break point or call point of the debugger is set in the current customer.

DEVICE ALREADY IN SYSTEM (Error code: \$40)

Reinitialization is conducted for a customer device already initialized.

DEVICE NOT IN SYSTEM (Error code: \$23)

Access is carried out on a customer device which is not initialized.

DEVICE SHARED (Error code: \$15)

The released customer device is being used by another party (* side or # side). (This is only a warning.)

DEVICE TIME OUT (Error code: \$43)

There was no response from a specified device (peripheral unit) within a prescribed period of time. (This error occurs as follows: When the device concerned does not exist, when there is no power supply, when the device is not online, etc.)

DIRECTORY TABLE RUN OVER

This error occurs when a number of the directory table exceeds the upper limit.

DIRECTORY NOT FOUND ON REMOTE STATION

This error occurs when no directory for the remote station is found.

DSPFUNC UNDEFINE line number DSPFUNC name

There is no DSPFUNC corresponding to the DSPCAL statement.

END OF FILE (Error code: \$3)

Access is made beyond the size of the file.

END OF TAPE (Error code: \$22)

This occurs only when accessing a magnetic tape unit. Access is made beyond the end of a magnetic tape (EOT mark).

FILE ALREADY EXIST (Error code: \$6)

File creation is carried out using a file name that already exists.

FILE ATTRIBUTE PROTECTED (Error code: \$11)

An alteration of a file attribute is carried out with an attribute alteration inhibit attribute (symbol A). The alteration of a file attribute with the above attribute is impossible.

FILE DOES NOT EXIST (Error code: \$7)

A file which does not exist is tried to be referenced.

FILE IN USE (Error code: \$27)

Access is carried out for a file in use.

FILE NOT ACCESIBLE BY DIRECT I/O

This error occurs when a file which cannot be accessed via direct I/O is attempted to be accessed.

FILE NUMBER ERROR

This error occurs when the file number turns to abnormal during communication.

FILE NUMBER IN USE

This error occurs if the file number is in use during communication.

FILE READ ERROR (Error code: \$20)

An error occurred when reading a file. A hardware malfunction may be the main cause of the above. Therefore, clean the HEAD portion if this occurs frequently.

FILE READ PROTECTED (Error code: \$4)

A read is conducted for a file with a read inhibit attribute (attribute symbol R).

FILE SIZE OVER

The size of the object file for the test plan program has exceeded #FFFFFF(HW).

FILE SPACE EXHAUSTED (Error code: \$26)

A necessary disk block cannot be secured when making a continuous file.

FILE SPECIFIER NON SPECIFIED

A file specifier of a file name which becomes a master file in a RENAME command is not specified.

FILE WRITE ERROR (Error code: \$31)

There was an error when writing a file. A hardware malfunction may be the main cause of the above. Therefore, clean the HEAD portion if this occurs frequently.

FILE WRITE PROTECTED (Error code: \$5)

Write is carried out for a file with a write inhibit attribute (attribute symbol W). This error also occurs if an attempt is made to write data to an already open file by reopening it, without closing it once.

FREE TASK CONTROL BLOCK NOT FOUND

This error occurs when a free task control block is not found.

HSSI NOT INSTALL

This error occurs when the communication program (HSSI) is not installed.

ID. NUMBER MULTIPLY DEFINE

This error occurs when an ID number definition overlaps.

ILLEGAL ARGUMENT

There is an error in the method of specifying an argument.

ILLEGAL ASCII STRING

There is an error in the method of specifying an ASCII character string in INPUT, LET and IF commands.

ILLEGAL ATTEMPT TO CHANGE FILE SPECIFIER

This error occurs when a file specifier which cannot be changed is attempted to be changed.

ILLEGAL ATTRIBUTE (Error code: \$0)

There is an error in the method of specifying an attribute symbol in a CHATR command.

ILLEGAL CHANNEL NUMBER (Error code: \$2)

There is an error in the method of specifying a channel number in GCHS command.

ILLEGAL CONDITIONAL OPERATOR

The conditioner of an IF command is not correct.

ILLEGAL COMMAND FOR DEVICE

A wrong access is carried out on a specified device. (For example, an OEDIT for MT)

ILLEGAL CUSTOMER NAME

When using a template character, two or more files on the customer side (customer proper storage area) are specified.

ILLEGAL CUSTOMER SPECIFIED

Another file name than a current default customer is specified in an RENAME command.

ILLEGAL DUMP FORMAT

Data other than of the format for a DUMP command is loaded by a LOAD command.

ILLEGAL FILENAME (Error code: \$1)

There is an error in the file name. The characters allowed for a file name are 0 to 9, A to Z, /, and \$.

ILLEGAL FORMAT (Error code: \$30)

Access is made in a magnetic disk and/or diskette where a ledger is not correctly written.

ILLEGAL INDIRECT FILE

There is an error in the indirect file specification method in "@".

It occurs when the number of "@" is odd, for example.

ILLEGAL LOG SPECIFIER

A log specifier other than ON/OFF is specified by a LOG command.

ILLEGAL NUMERIC ARGUMENT

There is an error in the numerical argument specification.

ILLEGAL OPERATOR

Operator symbols other than +, -, *, and / are used by a LET command.

ILLEGAL RELATIONAL OPERATOR

There is an error in the relational operator specified by an IF command.

ILLEGAL REPORT SPECIFIER

Other than an ENABLE/DISABLE report specifier is specified in a STATUS command.

ILLEGAL SHIFT VALUE

A shift value other than a numeral is specified in a shift operation by the LET command.

ILLEGAL SYSTEM VARIABLE

There is an error in the system variable name specified by "%".

INDIRECT DEPTH EXCEEDED

The depth of an indirect file which is specified by "@" is more than level 5.

INTERRUPT DEVICE CODE IN USE

This error occurs when a definition for the interrupt device code in the operating system is attempted to be overlapped.

INVALID DATE

There is an error in the date.

INVALID TIME

There is an error in the time.

JET ERROR IN ...

In ADVANsite system, this error occurs when the environment processor detects an error while it accesses the tester processor. It is the failure of hardware normally.

LCN ERROR

This error occurs when some mistake exists in the logical channel numbers.

LCN NOT LINK

This error occurs when connection with the remote office is impossible on the logical channel.

LCN OVER FLOW

This error occurs when the logical channel numbers overflow.

LINE TOO LONG (Error code: \$14)

The number of characters of a character string of one line in a specified file exceeds 132.

LOG FILE NOT OPENED


LOG OFF is carried out without executing LOG ON.

LOG FILE PREVIOUS OPENED

LOG ON is carried out although logging is being processed.

LOGICAL ERROR

This error occurs when there is a system abnormality.

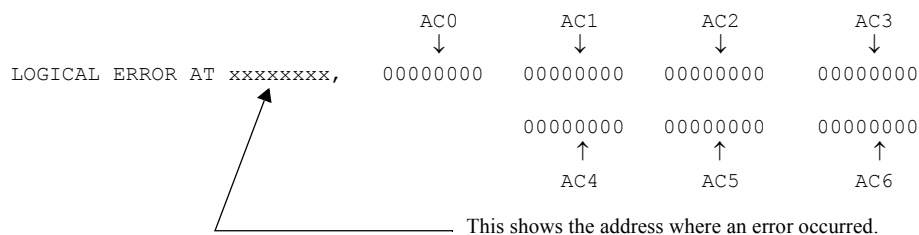

If errors occur too often, carry out system generation.

MASTER DEVICE DOES NOT IN SYSTEM

This error occurs when a master device is not in the system. This does not normally occur.

MASTER DEVICE IN USE

This does not normally occur.

MAXIMUM OF 8 INITIALIZED LOGICAL NAMES

This error occurs when more than eight logical names are initialized.

MEDIA CHANGED

This error occurs when the floppy media taken out and another media inserted although there was a file in use in the floppy media.

MEMORY SPACE EXHAUSTED

This error occurs when a system program cannot be executed because the memory space is exhausted.

NO INPUT DATA

This error occurs when no input data is found.

NO SOURCE FILE SPECIFIED

There is no source file specified by a COMPILE command.

NO TITLE SPECIFIED

There is no title statement in the first source file specified by a COMPILE command.

NON EXECUTABLE FILE

A file that cannot be executed is executed by a command.

NOT ENOUGH ARGUMENT

There are not enough arguments.

NUMBER OF MODULE EXCEEDED 30.

Up to 29 modules can be described.

OTHER SIDE JOB IS ALREADY RUNNING

A run TEST is made even though TEST is being processed on the other side (* side or #side).

OUT OF DISK SPACE (Error code: \$17)

There is no available area in a magnetic disk or disket. In this case, delete unnecessary files.

PARITY ERROR (Error code: \$16)

A parity error is detected when reading a file (in most cases, a magnetic tape and/or a paper tape files etc.)

PERMANENT CUSTOMER

Deletion of a DIR file which has a permanent attribute is carried out.

PERMANENT FILE (Error code: \$10)

A file which has a permanent attribute cannot be DELETED and/or RENAMED.

PHASE ERROR

This error occurs when synchronization can not be taken in the communication line.

POINTER TABLE TOO BIG TO LOAD

SQDC data could not be loaded because the pointer table in the SQDC object file was too large.

READ BLOCK SIZE UNMATCHED

The number of blocks of both files (original and copy) differ when compared by an FCOPY command.

SEQUENCE DATA TOO BIG TO LOAD

The amount of sequence data in the SQDC object file is too large to be loaded.

SEQUENCE NUMBER ERROR

This error occurs when the sequence number becomes abnormal during communication.

SQDC DATA LOAD FAIL

The SQDC data could not be loaded.

SQDC FILE NOT SUITABLE

The GEN file attempting to be read is not the GEN file of SQDC.

SQDC OBJECT FILE CLOSE ERROR

Error occurred during the SQDC object file closing.

SQDC OBJECT FILE OPEN ERROR

The SQDC object file could not be opened.

SQDC OBJECT FILE POINTER HANDLE ERROR

Error occurred during readout of the SQDC object file.

SQDC OBJECT FILE READ ERROR

Error occurred during readout of the SQDC object file.

SQDC OBJECT FILE REGISTER GET ERROR

The SQDC object file ledger was not found.

STACK OVER FLOW (Error code: \$41)

The nestings of the system program exceeds the prescribed value.

STACK UNDER FLOW (Error code: \$42)

A return from a nest is conducted when there is no nesting call in a system program.

STATION BUSY

This error occurs when the station is busy during communication.

SYNTAX ERROR : <WITHOUT>OR>WITHOUT<

One of "<, >" is missing in a command line.

SYNTAX ERROR : UNMATCHED OR NESTED ()

Either "(,)" is multiply defined, or one of "(,)" is missing in a command line.

TEST SYSTEM IN USE (Error code: \$44)

RELEASE DP0 is about to be done although a test is being processed.

VARIABLE AREA AND DATA FILE CONNOT RECOVERY

Because the structure or size of the variable area of the controller has been changed, previous information cannot be used.

VARIABLE AREA AND DATA FILE CANNOT SAVE TO DISK

The controller variable area cannot be saved because there is no empty area on the disk.

VECTOR DATA TOO BIG TO LOAD

SQDC data could not be loaded because the vector data in the SQDC object file was too large.

TOO MANY ARGUMENTS

There are too many arguments.

UNDEFINE COMMAND

Indicates that an undefined command is input.

UNDEFINED LABEL

There is no label for a branch address which is specified by a GOTO command.

UNIT IMPROPERLY SELECTED (Error code: \$21)

This error occurs when the power supply for the specified unit (magnetic tape unit, disk unit etc.) is off, or when the device is not online.

UNMATCHED UNIT line number DSPFUNC name [DSPCAL]

The unit name is not specified in the argument of the above DSPCAL statement, which links to the DSPFUNC including control statement for measurement (READ statement). The unit name is specified in the DSPFUNC statement against DSPFUNC for processing only.

UNOPEN FILE (Error code: \$12)

Access is made through a channel which is not yet opened. The above does not normally occur.

UNOPEN FILE NUMBER

This error occurs if the file number can not be opened during communication.

21. Unidentifiable Errors

This error occurs when there is an error that cannot be identified by the system, but normally this does not occur.

This error occurs when there is no "SYS CLI. ER" file which controls the error code, or when an error occurs which the "SYS CLI. ER" has no jurisdiction over.

The numerical part output when this error occurs is the status, which shows error state, and is output in a hexadecimal.

```
UNKNOWN  ERROR  STATUS  #00000018
                                     *1
```

**1 The hexadecimal value which shows the state when this error occurred.*

Important

When this error occurs, system program loading must be carried out again because the contents of the master device may be destroyed.
