
ADVANTEST[®]**ADVANTEST CORPORATION**

ASX/U-51

SYSTEST TESTUTL ATLworks

UPDATE NOTICE

REV 6.00B

MANUAL NUMBER 8262527-54

Applicable Products

PASX51-92****
PASX51-91****
PASX51-85****
PASX51-81****
PASX51-75****
PASX51-71****
PASX51-70****
PASX51-36****

PREFACE

ADVANTEST, ADVANsite, ATLworks and ATL are trademarks of ADVANTEST Corporation.

Sun, Sun Microsystems, the Sun Logo, SunOS and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

All other marks referenced herein are trademarks or registered trademarks of their respective owners.

RECORD OF REVISIONS

Manual Rev	Date	Remarks	Manual Rev	Date	Remarks
43a	Jan 10/01	(REV 5.04)	51	Dec 26/01	(REV 6.00-2)
44	Feb 20/01	(REV 5.04A)	52	Jan 9/02	(REV 6.00A)
45	Apr 3/01	Obsolete	53	Feb 25/02	(REV 6.00A1)
45a	Apr 5/01	Obsolete	54	Jul 15/02	(REV 6.00B)
45b	Apr 6/01	(REV 5.04A1)			
46	Apr 7/01	(REV 5.04A2)			
47	Apr 9/01	Obsolete			
47a	Sep 25/01	(REV 5.04A3)			
48	Apr 10/01	(REV 5.05)			
49	Aug 20/01	Obsolete			
49a	Sep 25/01	(REV 6.00)			
50	Oct 18/01	(REV 6.00-1)			

TABLE OF CONTENTS

1. SUMMARY OF REVISION	1-1
2. ENHANCED FUNCTIONS	2-1
2.1 Online Manual	2-1
2.2 Hybrid Controller	2-2
2.2.1 Mutual Conversion Function Between the DUT Pin Number and the Tester Channel Number	2-2
2.2.2 Dynamic Link to the Library Modules	2-2
2.2.3 Executing Commands on the Host System	2-2
2.2.4 Acquiring ATL Program Error Information	2-3
2.3 Error Code Utility (/ERR)	2-3
2.4 Basic OS	2-3
2.4.1 Solaris 8 2/02 Compatible	2-3
2.4.2 Converting Entered Lowercase Letters to or from Uppercase Letters	2-4
3. IMPROVED ITEMS	3-1
3.1 Tester Driver Controller (stest.sys)	3-1
3.1.1 VS Applied Voltage Setting Range	3-1
3.1.2 VS Voltage Measurement Range	3-1
3.1.3 AFM ACTION Statement	3-2
3.1.4 RETURN Statement	3-2
3.1.5 GOTO LINE Statement	3-3
3.1.6 Test Conditions Setting Statements	3-3
3.1.7 Test Conditions Reading Statements	3-5
3.2 Tester Utility Program	3-6
3.2.1 Universal Buffer Memory Utility	3-6
3.2.2 Pin Monitor (/PM)	3-6
3.2.3 Expansion Pin Monitor (/EPM)	3-6
3.2.4 Debugger (/DEBUG)	3-7
3.2.5 Soft Operation Panel (opanel)	3-7
3.2.6 2-Dimensional (SHM2) Shmoo Plot	3-7
3.3 Hybrid Controller	3-8
3.3.1 /HYBRID Utility Program	3-8
3.3.2 tpreset	3-8
3.4 ATLworks	3-8
3.4.1 Control Panel	3-8
3.4.2 ASXDebugger	3-9
3.4.3 Test Condition Monitor	3-10
3.5 Basic OS	3-11

1. SUMMARY OF REVISION

- (1) Revision number
 - ASX/U-51 REV 6.00B
- (2) Applicable Systems
 - T5592
 - T5591/T5591R
 - T5586/T5585
 - T5581/T5581H
 - T5581P/T5571P
 - T5376/T5375
 - T5371
 - T5336/T5311
- (3) Related manual revised

• ATL-51 TEST PLAN PROGRAM REFERENCE MANUAL	8431498-01
• ATL-51 PATTERN PROGRAM REFERENCE MANUAL (T5500)	8256292-24
• ATL-51 PATTERN PROGRAM REFERENCE MANUAL (T5376, T5375, T5371, T5336, T5311)	8289058-13
• ATL-51 SOCKET PROGRAM REFERENCE MANUAL	8256293-16
• ATL-51 SCRAMBLE PROGRAM REFERENCE MANUAL	8256294-14
• T5500 SERIES TESTER UTILITY PROGRAM REFERENCE MANUAL	8256295-32
• T5500 SERIES CONTROLLER COMMANDS REFERENCE MANUAL	8256297-20
• T5300 FLASH MEMORY PARALLEL MEASUREMENT FUNCTION DESCRIPTION	8239605-14
• ERROR CODE TABLE REFERENCE MANUAL	8141091-71
• ATLworks TOOL USER'S MANUAL	8311174-10
• ASX/U-51 HYBRID CONTROLLER USER'S MANUAL	8409598-04
• ASX/U-51 HYBRID CONTROLLER REFERENCE MANUAL	8409600-03
• ADVANsite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER'S MANUAL VOL1 BASIC OS INSTALLATION	8227728-18
• ADVANsite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER'S MANUAL VOL2 TESTER ENVIRONMENT SOFTWARE INSTALLATION	8227729-18
• ASX/U-51 BASIC SYSTEM SOFTWARE SOFTWARE SPECIFICATIONS	8256273-11
• ONLINE MANUAL REFERENCE MANUAL	8431523-01

ASX/U-51 SYSTEST TESTUTL ATLworks UPDATE NOTICE REV 6.00B

1. SUMMARY OF REVISION

- (4) Reason of revision
- Addition of function
 - Improvement of existing functions

- (5) Products revised

Products revised in this revision are shown below:

Product code	Product name		
PASX51-92****	SYSTEST51SU	TESTUTL51SU	ATW51SU
PASX51-91****			
PASX51-85****			
PASX51-81****			
PASX51-75****			
PASX51-71****			
PASX51-70****			
PASX51-36****			

- (6) List of revisions

The revision list shows the revision correspondence of the basic software the SYSTEST51SU, TESTUTL51SU and ATW51SU of ASX/U-51.

<Explanation of the revisions' list>

- (a) "*" shows the product revised in the revision.
- (b) "-" shows the product that does not exist to the whole revision.

ASX/U-51				
ASX/U-51 Overall Revision	Revision for each product			SunOS Revision
	SYSTEST51SU	TESTUTL51SU	ATW51SU	
5.04A	5.04A *	5.04A *	–	Solaris 2.5.1 Solaris 7
5.04A1	5.04A1 *	5.04A1 *	–	Solaris 2.5.1 Solaris 7
5.04A2	5.04A2 *	5.04A1	–	Solaris 2.5.1 Solaris 7

ASX/U-51 SYSTEST TESTUTL ATLworks UPDATE NOTICE REV 6.00B

1. SUMMARY OF REVISION

ASX/U-51				
ASX/U-51 Overall Revision	Revision for each product			SunOS Revision
	SYSTEST51SU	TESTUTL51SU	ATW51SU	
5.04A3	5.04A3 *	5.04A1	–	Solaris 2.5.1 Solaris 7
5.04A4	5.04A4 *	5.04A2 *	–	Solaris 2.5.1 Solaris 7
5.05 (Note1)	5.05 *	5.05 *	5.05 *	Solaris 8
6.00	6.00 *	6.00 *	6.00 *	Solaris 2.5.1 Solaris 7 Solaris 8
6.00-1	6.00-1 *	6.00-1 *	6.00-1 *	Solaris 2.5.1 Solaris 7 Solaris 8
6.00-2	6.00-2 *	6.00-1	6.00-1	Solaris 2.5.1 Solaris 7 Solaris 8
6.00A	6.00A *	6.00A *	6.00A *	Solaris 2.5.1 Solaris 7 Solaris 8
6.00A1	6.00A1 *	6.00A1 *	6.00A	Solaris 2.5.1 Solaris 7 Solaris 8
6.00B	6.00B *	6.00B *	6.00B *	Solaris 2.5.1 Solaris 7 Solaris 8

Note1: REV 5.05 is used for the T5375.

2. ENHANCED FUNCTIONS

2.1 Online Manual

The online manual has been bundled.

The contents in the bundled manuals are as follows:

- ATL-51 TEST PLAN PROGRAM REFERENCE MANUAL
 - CHAPTER 1 PIN SPECIFICATIONS
 - CHAPTER 2 MEASUREMENT RESULTS PROCESSING
 - CHAPTER 3 POWER SUPPLIES, INPUT/OUTPUT LEVELS AND TERMINATOR LEVELS
 - CHAPTER 4 CLOCK PULSE GENERATIONS
 - CHAPTER 5 DC PARAMETRIC TESTS
 - CHAPTER 6 POWER-ON SEQUENCE, TIMER CONTROL
 - CHAPTER 7 SYSTEM INTERFACE CONTROL
 - CHAPTER 8 SETTING FOR ALPG OPERATIONS, FUNCTIONAL TEST
 - CHAPTER 9 NONTESTER STATEMENTS
 - CHAPTER 10 FAILURE ANALYSIS MEMORY
 - CHAPTER 11 DBM/CBM
- ATL-51 SOCKET PROGRAM REFERENCE MANUAL
- ATL-51 SCRAMBLE PROGRAM REFERENCE MANUAL
- ATL-51 PATTERN PROGRAM REFERENCE MANUAL(T5500)
- ATL-51 PATTERN PROGRAM REFERENCE MANUAL(T5376, T5375, T5371, T5336, T5311)
- ASX/U-51 HYBRID CONTROLLER USER'S MANUAL
- ASX/U-51 HYBRID CONTROLLER REFERENCE MANUAL
- T5500 SERIES TESTER UTILITY PROGRAM REFERENCE MANUAL
- T5500 SERIES CONTROLLER COMMAND REFERENCE MANUAL
- ERROR CODE TABLE REFERENCE MANUAL
- ONLINE MANUAL REFERENCE MANUAL
- ACLI COMMANDS REFERENCE MANUAL (UNIX VERSION)
- ATLworks TOOL USER'S MANUAL
- T5300 FLASH MEMORY PARALLEL MEASUREMENT FUNCTION DESCRIPTION
- ADVANsite SYSTEM INTRODUCTION
- ADVANsite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER'S MANUAL VOL1 BASIC OS INSTALLATION
- ADVANsite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER'S MANUAL VOL2 TESTER ENVIRONMENT SOFTWARE INSTALLATION
- ASX/U-51 BASIC SYSTEM SOFTWARE SPECIFICATIONS
- ASX/U-51 SYSTEM TESTUTL ATLworks UPDATE NOTICE

For more information, refer to "ONLINE MANUAL REFERENCE MANUAL".

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

2.2 Hybrid Controller

2.2.1 Mutual Conversion Function Between the DUT Pin Number and the Tester Channel Number

A function has been added to convert the DUT pin number to or from the tester channel number mutually according to the pin connecting conditions defined in the socket program. This function allows the test results reading function to accept the tester channel number specification. Previously, the function only accepted the DUT pin number specification.

For more information, refer to `AT_get_pin()` and `AT_get_channel()` in “ASX/U-51 HYBRID CONTROLLER REFERENCE MANUAL.”

The following program has been changed because of this additional function.

- Tester driver controller (stest.sys)

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

2.2.2 Dynamic Link to the Library Modules

A function has been added to dynamically load the library modules specified in the main module to the tester processor and dynamically link them to the main module. The library module can be specified in the source program using the new `atcc #pragma` command. Linking the modules (which can be shared between the multiple programs) to each program statically is no longer necessary and program maintainability is improved by using this function.

For more information, refer to “ASX/U-51 HYBRID CONTROLLER USER'S MANUAL.”

The following programs have been changed because of this additional function.

- Tester driver controller (stest.sys)
- C compiler (atcc)

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

2.2.3 Executing Commands on the Host System

The library function `AT_fork()` has been added to execute the commands on the host system. Also, the library functions `AT_forkwait()` and `AT_forkkill()` have been added to wait for command completion and to forcibly terminate the command, respectively. These library functions can be called after an ATL program error occurs. When an error occurs in the ATL program, the FORK utility program cannot be called using `ATL_exec()`. However, commands can be executed on the host system after an error occurrence using the `AT_fork()`, `AT_forkwait()`, and `AT_forkkill()` library functions.

For more information on the `AT_fork()`, `AT_forkwait()`, and `AT_forkkill()` library functions, refer to “ASX/U-51 HYBRID CONTROLLER REFERENCE MANUAL.”

The following program has been changed because of these additional functions.

- Tester driver controller (stest.sys)

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

2.2.4 Acquiring ATL Program Error Information

The library function `AT_get_errinfo()` has been added to acquire error information from the ATL program. Error codes, program names, line numbers, and other information can be acquired in the C program by using this function.

For more information on `AT_get_errinfo()`, refer to “ASX/U-51 HYBRID CONTROLLER REFERENCE MANUAL.”

The following program has been changed because of this additional function.

- Tester driver controller (stest.sys)

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

2.3 Error Code Utility (/ERR)

- (1) The following new error codes have been added:

1677, 3023, 12543, and 23562.

For more information, refer to “ERROR CODE TABLE REFERENCE MANUAL.”

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

- (2) The descriptions have been changed for the following error codes:

1307, 12437, 12441, 12442, 12517, 12533, 23304, and 23306.

For more information, refer to “ERROR CODE TABLE REFERENCE MANUAL.”

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

2.4 Basic OS

2.4.1 Solaris 8 2/02 Compatible

The basic OS is now compatible with Solaris 8 2/02.

The following OSs can be used:

Solaris 2.5.1 11/97

Solaris 7 5/99

Solaris 8 1/01, 2/02

For more information, refer to “ADVANSite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER’S MANUAL VOL1 BASIC OS INSTALLATION.”

Relevant systems: T5592, T5586, T5585, T5371, T5376, and T5375, or, T5591, T5591R, T5581, T5581H, T5581P, T5571P, and T5336 equipped with V0713, V0713A, or V0714 (Sun Ultra 5)

2.4.2 Converting Entered Lowercase Letters to or from Uppercase Letters

When the AT_ACAPSLOCK is specified with the 'reverse' setting, the entered lowercase letters can be converted to the uppercase letters, or vice versa, and then transferred to the tester controller.

For more information, refer to "ADVANSite TEST SYSTEM SOFTWARE INSTALLATION/SYSTEM START USER'S MANUAL VOL2 TESTER ENVIRONMENT SOFTWARE INSTALLATION."

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3. IMPROVED ITEMS

3.1 Tester Driver Controller (stest.sys)

3.1.1 VS Applied Voltage Setting Range

- (1) VS, SET DUT VS, and SET PPS Statements and Transferring Burst Conditions Written in the SEND MPAT Statement

Even when a voltage less than -3 V was specified for the 16 V VS setting range, a runtime error did not occur.

Improved ➡ A runtime error now occurs. Error codes for the statements are as follows:
For the VS statement: 3111
For the SET DUT VS and SET PPS statements: 12371
When transferring the burst conditions in the SEND MPAT statement: 12520

Relevant Revisions: REV 5.05 through REV 6.00A1

Relevant Systems: T5376 and T5375

- (2) 2-Dimensional (SHM2) and 3-Dimensional (SHM3) Shmoo Plots

When a voltage less than -3 V was set for VS, BVS, or OVS, “?” was not displayed in the plot.

Improved ➡ This problem has been fixed.

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5376 and T5375

3.1.2 VS Voltage Measurement Range

When the measurement range was -6 V, over-data was not generated for measured values less than -2.996 V.

Improved ➡ This problem has been fixed.

The following program contents have been changed because of this improvement.

- LIMIT statement
- MEAS/START VS statement
- GETVSADC utility controlling VS for the PPS parallel drive

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5376 and T5375

3.1.3 AFM ACTION Statement

When BBM>/MASK was specified in the AFM ACTION statement, a runtime error did not occur.

Improved ➡ A runtime error (Code=12173) now occurs.

Relevant revisions: REV 5.05 through REV 6.00A1


Relevant systems: T5376 and T5375

3.1.4 RETURN Statement

When ASM TMEAS or ASM VMEAS was specified in a program which called the external sub-routine and the offset value was specified using RETURN v, the END statement was executed after the RETURN statement execution in the following two cases:


Case 1: The offset value for RETURN v was positive and the ASM TMEAS or ASM VMEAS was written between the CALL statement and the returned line.

(Example)

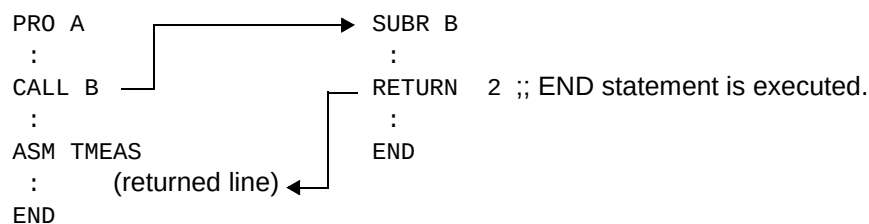

Case 2: The offset value for the RETURN v was negative and the ASM TMEAS or ASM VMEAS was written between the beginning of the program that called the external program and the returned line.

(Example)

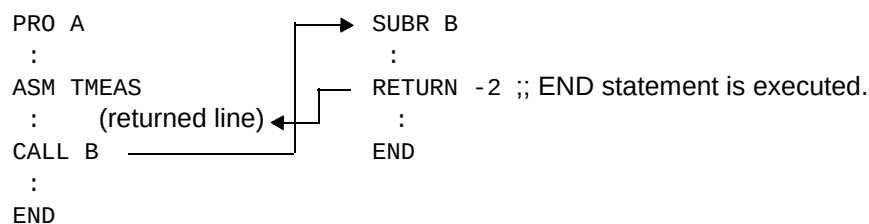

Improved ➡ This problem has been fixed. The program execution is now returned to the line specified in the RETURN statement.

Relevant revisions: REV 5.03 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3.1.5 GOTO LINE Statement

When ASM TMEAS or ASM VMEAS was written in the program and a branch line was specified using the GOTO LINE n statement, the END statement was executed after the GOTO LINE n statement execution in the following two cases:

Case 1: The branch line was specified for the line after the GOTO LINE n line using the GOTO LINE n statement itself and the ASM TMEAS or ASM VMEAS statement was written between the GOTO LINE n statement and the line to be branched off.

(Example)

```

PRO A
:
GOTO LINE .+2      ;; END statement is executed.
ASM TMEAS
: (branch line) ←
END

```

Case 2: The branch line was specified for the line before the GOTO LINE n line using the GOTO LINE n statement itself and the ASM TMEAS or ASM VMEAS statement was written between the beginning of the program and the line to be branched off.

(Example)

```

PRO A
:
ASM TMEAS
: (branch line) ←
GOTO LINE .-3      ;; END statement is executed.
:
END

```

Improved ➡ This problem has been fixed. The program execution is now branched off into the line specified in the GOTO LINE statement.

Relevant revisions: REV 5.03 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3.1.6 Test Conditions Setting Statements

When the actual argument (which was written in the external subroutine, internal subroutine, external FUNCTION program, or internal FUNCTION program) was specified by the variable (which was defined by the DEFINE statement) or the system variable, and the dummy variable was written in the subroutine or the function sub program using the following target statements, incorrect test conditions were set and they caused problem (a) or (b) to occur.

- (a) A runtime error (code = 3000 or 3010) occurred in the following target statements:
- (b) Incorrect test conditions were set in the following target statements:

ASX/U-51 SYSTEST TESTUTL ATLworks UPDATE NOTICE REV 6.00B

3.1 Tester Driver Controller (stest.sys)

(Example) When attempting to set fail for test number 1 in the SET FAIL statement

```

PRO PR01
  DEFINE INTEGER TNO = 1
  INTE[1] FDT=0

  FUNCTION XFUNC1(ATNO)
    SET FAIL ATNO    ;; one of the above problems occurred
    XFUNC1 = 0
  END

  FDT=XFUNC1(TNO)
END

```

Improved ➡ This problem has been fixed. The correct test conditions are set.

Target statements: IN, INH, OUT, VT, VTT, and IL statements

Relevant systems and revisions:

- T5592 REV 5.02 through REV 6.00A1
- T5586, T5585, T5376, and T5371 REV 6.00 through REV 6.00A1
- T5375 REV 5.05 through REV 6.00A1

Target statements: RATE, ACLK, BCLK, CCLK, STRB, WSTRB, DREL, DRET, TGCLK, SELECT OFFSET, SELECT NOFFSET, SET OFFSET, and RESET OFFSET statements

Relevant revisions: REV 5.02 through REV 6.00A1

Relevant systems: T5592, T5376, and T5375

Target statements: SET RESULT, RESET RESULT, SET FAIL, RESET FAIL, SET CNT, RESET CNT, SET WFCNT, RESET WFCNT, SET SORT, SET SAMPLE, SET JDUT, SET SDUT, AFM memory, SET CATEGORY, and RESET CATEGORY statements

Relevant revisions: REV 5.03 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

Target statements: SET REJECTION, SET EXCLUSION, RESET EXCLUSION, SET EXCLUSION2, and RESET EXCLUSION2 statements

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5376 and T5375

Target statements: SRON, SROF, RON, ROF, AFM MOVE, RESET AFM, PRESET AFM, CFM REMOVE, CFM MOVE, CFM memory, BBM memory, DBM memory, CBM memory, SET STN, SET FKMODE, and RESET FKMODE statements

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

3.1.7 Test Conditions Reading Statements

When the actual argument (which was written in the external subroutine, internal subroutine, external FUNCTION program, or internal FUNCTION program) was specified by the variable (which was defined by the DEFINE statement) or the system variable, and the dummy variable was written in the subroutine or the function sub program using the following target statements, test conditions were set to an incorrect variable and they caused problem (a) or (b) to occur.

(a) A runtime error (code = 3034 or 3135) occurred in the following target statements:

(b) Incorrect test conditions were read in the following target statements:

(Example) When attempting to read the test result from test number 1 using the READ FAIL statement

```
PRO PR02
  DEFINE INTEGER TDT = 0
  INTE[1] FDT=0

  FUNCTION XFUNC2(ATDT)
    READ FAIL(1) TO ATDT    ;; one of the above problems occurred
    XFUNC2 = 0
  END

  FDT=XFUNC2(TDT)
END
```

Improved ➡

This problem has been fixed. The correct test conditions are read.

Target statements:

READ RESULT, READ FAIL, READ CNT, READ CTCNT, READ SORT,
READ SAMPLE, READ WFCNT, READ WFCTCNT, READ DCT,
READ TPIN, READ FPIN, READ FK, READ mDUT, READ FUNC,
READ CUMFUNC, READ AFM CONFIG count,
READ AFM CONFIG data, READ AFM DUT SELECT,
READ AFM memory, READ AFM memory between modes, and
READ CATEGORY statements

Relevant revisions: REV 5.03 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

Target statement: READ PASS DETECT statement

Relevant revisions: REV 5.04A through REV 6.00A1

Relevant systems: T5586

Target statement: READ REGISTER statement

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5376 and T5375

Target statements: READ STN, READ AFM search, READ AFM count, READ AFM search between modes, READ AFM count between modes, READ CFM memory, READ CFM count, READ BBM memory, READ BBM count, READ DBM memory, READ CBM memory, READ FLASH HOLD, READ FLASH COUNTER, READ FK, READ TEST, READ STNCNT, READ DUTCNT, and READ ERCODE statements

Relevant revisions: REV 5.05 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

3.2 Tester Utility Program

3.2.1 Universal Buffer Memory Utility

The execution time for reading and writing data to or from the universal buffer memory (UBM), and also clearing the memory, has been reduced.

Improved ➡ The execution time has been reduced by approximately 1/6.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5376 and T5375

3.2.2 Pin Monitor (/IPM)

When the following socket program for multiple DUTs as a simultaneous measurement and global switch /A were used to display all cycle palette data, incorrect data in cycle palettes 2 through 16 was displayed.

(Example) A socket program where multiple pins, such as P33 and P97, are assigned in a column.

```
DUT#   = VS1,   PD1-30,   P33-40
DUT1   = PPS1,  PD1-30A1, P33-40A1
DUT2   = PPS2,  PD1-30A2, P97-104A1
DUT3   = PPS3,  PD1-30A3, P33-40A3
DUT4   = PPS4,  PD1-30A4, P97-104A3
```

Improved ➡ This problem has been fixed. Data in the cycle palettes is displayed correctly.

Relevant revisions: REV 5.00 through REV 6.00A1

Relevant systems: T5376, T5375, and T5371

3.2.3 Expansion Pin Monitor (/EPM)

When the following socket program was used for multiple DUTs as a simultaneous measurement and global switch /A were used to display all cycle palette data in the PIN page, incorrect data in cycle palettes 2 through 16 was displayed.

(Example) A socket program where multiple pins, such as P33 and P97, are assigned in a column.

```
DUT#   = VS1,   PD1-30,   P33-40
DUT1   = PPS1,  PD1-30A1, P33-40A1
DUT2   = PPS2,  PD1-30A2, P97-104A1
DUT3   = PPS3,  PD1-30A3, P33-40A3
DUT4   = PPS4,  PD1-30A4, P97-104A3
```

Improved ➡ This problem has been fixed. Data in the cycle palettes is displayed correctly.

Relevant revisions: REV 5.00 through REV 6.00A1

Relevant systems: T5376, T5375, and T5371

3.2.4 Debugger (/DEBUG)

When a program which included the ARGUMENT statement with the break point setting was executed, it sometimes caused a runtime error (Code=3055 or 3066) to occur.

Improved ➡ This problem has been fixed.

Relevant revisions: REV 1.00 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3.2.5 Soft Operation Panel (opanel)

When the L command or N command was selected in the soft operation panel Utility menu, an incorrect system variable value was displayed.

Improved ➡ This problem has been fixed.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3.2.6 2-Dimensional (SHM2) Shmoo Plot

When copying a parallel file or a composite file which included more than 5000 PASS/FAIL data items, sometimes incorrect PASS/FAIL data items were displayed under the following conditions.

(Conditions)

```
Number of PASS/FAIL data items: n
Function to find a remainder produced in a division: MOD
n > 5000 and MOD(5000 ÷ number of X-axis STEPs) ≠ 0
```

Improved ➡ This problem has been fixed.

Relevant revisions: REV 1.00 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

3.3 Hybrid Controller

3.3.1 /HYBRID Utility Program

When the ASX file device was specified for the module name in the /HYBRID utility program, loading sometimes took much longer than it should have because of the contents or the size of the modules.

Improved ➡ The loading time has been reduced to a few seconds.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375 and T5371

3.3.2 tpreset

When the tpreset command was terminated forcibly using an interruption function, such as the pressing the CTRL key followed by the C key, sometimes the tester controller could not be started.

Improved ➡ While the tpreset command is being executed, the interruption function cannot be performed.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

3.4 ATLworks

3.4.1 Control Panel

- (1) If the directory file where NFS was mounted could not be loaded on the hybrid mode. (File names with the asxFile: prefix could not be loaded.)

Improved ➡ This problem has been fixed.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

- (2) If only files including the “.o” attribution could be loaded on the hybrid mode.

Improved ➡ Files can now be loaded regardless of the attribution.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

- (3) Usually pressing the ReTest button reexecutes the last executed test. However, the program sometimes ended without reexecuting the last executed test after ASM TMEAS or ASM VMEAS had been executed.

Improved ➡ This problem has been fixed.

Relevant revisions: ATLworks REV 2.01
REV 5.05 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, and T5371

- (4) When ATLworks was started with Workbench-M2 (REV5.00) installed, the Tool (CPANEL) Communication error! message was sometimes displayed.
(CPANEL is an abbreviation of Control Panel)

Improved ➡ This problem has been fixed.

Relevant revisions: REV 5.05 through REV 6.00A

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, and T5371

3.4.2 ASXDebugger

- (1) If the directory file where NFS was mounted could not be loaded on the hybrid debug mode.
(File names with the asxFile: prefix could not be loaded.)

Improved ➡ This problem has been fixed.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

- (2) If only files including the “.o” attribution could be loaded on the hybrid debug mode.

Improved ➡ Files can now be loaded regardless of the attribution.

Relevant revisions: REV 6.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

- (3) If the hybrid debug mode and a C structured variable including more than 64 characters was referred to, the debugger sometimes became inoperative.

Improved ➡ This problem has been fixed.

Relevant revisions: REV 6.00A through REV 6.00A1

Relevant systems: T5592, T5586, T5585, T5376, T5375, and T5371

- (4) When using program which included the FUNCTION statement, the variables defined after the FUNCTION statement could not be referred to.

Improved ➡ This problem has been fixed.

Relevant revisions: ATLworks REV 1.00 through REV 2.01
REV 5.05 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, and T5371

3.4.3 Test Condition Monitor

(1) Pin Clock and Pin Level Monitors

If the PD pins were assigned in several columns and the number of pin number types did not match in each column in a socket program, and it was used for multiple DUTs in a simultaneous measurement, incorrect clock phase numbers and incorrect channel numbers were sometimes displayed for IN, OUT, IL, and VT specified by the PIN statement.

(Example) A socket program where the PD pins are assigned in several columns and the number of pin number types does not match in each column

	(a)	(b)
DUT#=VS1	PD1-12	PD26 P33-40
DUT1=PPS1	PD1-12A1	PD26A1 P33-40A1
DUT2=PPS2	PD13-24A1	PD29A1 P41-48A1
DUT3=PPS3	PD1-12A2	PD27A2 P97-104A1
DUT4=PPS4	PD13-24A2	PD30A2 P105-112A1
DUT5=PPS5	PD1-12A3	PD26A3 P33-40A3
DUT6=PPS6	PD13-24A3	PD29A3 P41-48A3
DUT7=PPS7	PD1-12A4	PD27A4 P97-104A3
DUT8=PPS8	PD13-24A4	PD30A4 P105-112A3

The PD pins were assigned in column (a) including PD1 through PD12 and column (b) including PD26.

Two types of pin numbers in column (a) were referred to as PD1 and PD13.

Four types of pin numbers in column (b) were referred to as PD26, PD29, PD27, and PD30.

In this socket program, the number of pin number types in column (a) and column (b) does not match.

If the number of the pin number types matches between two columns, an error does not occur.

Improved ➡ This problem has been fixed. The clock phase numbers and the channel numbers for IN, OUT, IL, and VT are displayed correctly even if the number of pin number types in two columns does not match.

Relevant revisions: ATLworks REV 1.00 through REV 2.01
REV 5.05 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, and T5371

(2) Pin Clock Monitor

When a socket program in which multiple pin numbers were assigned in a column was used for multiple DUTs in a simultaneous measurement, incorrect data was sometimes displayed for cycle palettes 2 through 16 in the Cycle Palette Data Window.

(Example) A socket program where multiple pin numbers, such as P33 and P97, are assigned in a column.

DUT#	= VS1,	PD1-30,	P33-40
DUT1	= PPS1,	PD1-30A1,	P33-40A1
DUT2	= PPS2,	PD1-30A2,	P97-104A1

DUT3 = PPS3, PD1-30A3, P33-40A3
DUT4 = PPS4, PD1-30A4, P97-104A3

Improved ➡ This problem has been fixed.

Relevant revision: ATLworks REV 2.01
REV 5.05 through REV 6.00A1

Relevant systems: T5376, T5375, and T5371

3.5 Basic OS

- (1) Because the shared memory permission created when using the test cell controller (TCC) was "0600", if the shared memory created by another user remained, the TCC could not be started.

Improved ➡ The shared memory permission has been changed. Regardless of the owner of the previous shared memory, the TCC can be started.

Relevant revisions: REV 1.00 through REV 6.00A1

Relevant systems: T5592, T5591, T5591R, T5586, T5585, T5581, T5581H, T5581P, T5571P, T5376, T5375, T5371, T5336, and T5311

- (2) Sometimes the following message was intermittently displayed on the screen.

Interrupt level 1 not serviced

Improved ➡ This problem has been fixed.

Relevant revisions: Rev 5.00 through REV 6.00A1

Relevant systems: T5592, T5586, T5585, and T5371