

# **TSDuck**

# MPEG Transport Stream Toolkit User's Guide

Version 3.22-1926 August 2020



# License

TSDuck is released under the terms of the license which is commonly referred to as "BSD 2-Clause License" or "Simplified BSD License" or "FreeBSD License". See http://opensource.org/licenses/BSD-2-Clause.

Copyright (c) 2005-2020, Thierry Lelégard

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# Third-party libraries

TSDuck includes a few third-party libraries, either in source form, binary form or both. For more details about the licenses of these third-party libraries, see the file named LICENSE.txt in the source code repository or in the installed files.

DTAPI: On Linux and Windows, the TSDuck binary distributions contain the DTAPI library. This software is available in binary form only (see [32]). *Copyright* © *2017 by Dektec Digital Video B.V.* 

LibTomCrypt: Some source code was directly copied and adapted from LibTomCrypt into TSDuck (see [39]). LibTomCrypt is public domain. As should all quality software be. Tom St Denis.



# **Contents**

1 T	TRANSPORT STREAM TOOLKIT OVERVIEW	18
1.1	1 Purpose	18
	2 OPERATING SYSTEM SELECTION GUIDELINES	
	3 Installing TSDuck	
2 D	DATA FORMATS	20
2.1	1 Transport Stream Format	20
	2.1.1 Live transport streams	20
	2.1.2 Stored transport streams	
2.2	2 PSI/SI SIGNALIZATION STORAGE FORMAT	
	2.2.1 PSI/SI binary format	
	2.2.1.1 Creating PSI/SI binary files	
	2.2.1.2 Using PSI/SI binary files	
	2.2.2 PSI/SI XML format	
2.3	3 CHARACTER SETS	
	2.3.1 Standards and character sets	
	2.3.2 TSDuck options for character sets	
	2.3.3 Character set names	
	TRANSPORT STREAM UTILITIES	
3.1	1 COMMAND LINE SYNTAX	
	3.1.1 Command line options	
	3.1.2 Integer values in command line options	
	3.1.3 Predefined common options	
	3.1.4 Using a pager command	
	3.1.5 Partial command line redirection from a file	
	3.1.6 Default options from the TSDuck configuration file	
•	TSBITRATE	
•	TSCHARSET	
•	TSCMP	
•	TSDATE	
•	TSDEKTEC	
•	TSDUMP	
•	TSECMG	
•	TSEMMG	
•	TSFIXCC	
•	TSFTRUNC	
•	TSGENECM	
•	TSHIDES	
	TSLSDVB	
•	TSP	
•	TSPACKETIZE	
•	TSPCONTROL	
•	TSPSI	
•	TSRESYNC	
•	TSSCAN	
•	TSSMARTCARD	
•	TSSTUFF	
_	TSSVITCH	
•	TSTABCOMP	
•	TSTABDUMP	
•	TSTABLES	
-		



TSTERINFO	
TSVERSION	105
P PLUGINS	107
AES	110
ANALYZE	112
BAT	113
BITRATE_MONITOR	115
BOOSTPID	117
CAT	118
CLEAR	120
CONTINUITY	122
COUNT	123
CRAFT (INPUT)	125
CRAFT (PACKET PROCESSING)	127
CUTOFF	130
DATAINJECT	133
DECAP	135
DEKTEC (INPUT)	
DEKTEC (OUTPUT)	
DESCRAMBLER	147
DROP (OUTPUT)	
DUPLICATE	
DVB (INPUT)	
EIT	
ENCAP	
FILE (INPUT)	
FILE (OUTPUT)	
FILE (PACKET PROCESSING)	
FILTER	
FORK (INPUT)	
FORK (OUTPUT)	
FORK (PACKET PROCESSING)	
HIDES (OUTPUT)	
HISTORY	
HLS (INPUT)	
HLS (OUTPUT)	
HTTP (INPUT)	
INJECT	
•	
IP (INPUT)	
IP (OUTPUT)	
LIMIT	
MERGE	
MPE	
MPEINJECT	
MUX	
NIT	
NITSCAN	
NULL (INPUT)	
PAT	
PATTERN	_
PCRADJUST	
PCRBITRATE	
PCREXTRACT	
PCRVERIFY	
PES	222



•	PLAY (OU	TPUT)	224
•	PMT		225
•	PSI		228
•	PSIMERGE	3	229
•	REDUCE		230
•	REGULATI	E	231
•	REMAP		233
•		\N	
•			
•		ER	
•			
•			
•			
•			
•			
•		ECT	
•		JT)	
•	•	PUT)	
•	•	ALYZE	
•		E	
•		E	
•		<u> </u>	
•			
•			
•			
•			
•			
•		Т	
•		E	
•			
•	ZAP		281
5 U	SAGE EXA	MPLES	283
<b>-</b> 1	TICD	Harry mana	202
5.1		UTILITIES	
		tsdektec examples	
		tslsdvb examples	
		tsscan examplestssmartcard examples	
		tsterinfo examplestshides examples	
		tsswitch examples	
5.2		MPLES	
5.2		Capturing a TS from an external source	
		Routing a TS between several physical transports	
		Using IP multicast	
		Regulating the output speed	
		Scheduling the recording of a program	
		Extracting selected packets	
		Monitoring selected MPEG tables (here, EMM's)	
		Scanning all services by CAS operator	
		On-the-fly replacement of an SI table	
		Performing the global analysis of a transponder	
		Performing the global analysis of a network	
		Monitoring the stuffing rate of all transponders in a network	
		Analyzing the bitrate of all services in a network	
		Analyzing the number of PCR per second	
		Injecting a System Software Update (SSU) service into a transport stream	



		Analyzing EPG data	
	5.2.17		
	5.2.18	Conditional Access System scrambling and ECM functional tests	
	5.2.19	Complete Conditional Access System test bed	303
	5.2.20	Emulation of a Conditional Access head-end	305
	5.2.21	Multi-Protocol Encapsulation (MPE)	308
		5.2.21.1 MPE insertion in an existing transport stream	308
		5.2.21.2 Creating a transport stream from scratch	
		5.2.21.3 Creating a transport stream from scratch with PCR	312
	5.2.22	DVB-T2 Modulator Interface (T2-MI)	314
	5.2.23	Merging transport streams	315
	5.2.24	Injecting SCTE 35 cue information	317
		5.2.24.1 Real-time live stream	317
		5.2.24.2 Cue insertion in offline files	318
	5.2.25	Encapsulating PID's into a private tunnel	319
	5.2.26	Interleaving input files and merging their PSI	320
	5.2.27	Using Secure Reliable Transport (SRT) transmission	320
6 H	A D D IA/ A I	RE DEVICE SUPPORT	222
6.1		Receiver Devices (DVB, ATSC, ISDB)	
	6.1.1	Overview	
	6.1.2	Operating System Integration	
		6.1.2.1 Linux Platforms	
		6.1.2.2 Microsoft Windows Platforms	
		6.1.2.3 MacOS Platforms	
	6.1.3	Device Naming	
		6.1.3.1 Linux Platforms	
		6.1.3.2 Microsoft Windows Platforms	
	6.1.4	Tested Devices	
6.2	DEKTEC	DEVICES	328
	6.2.1	Overview	328
	6.2.2	Linux Platforms	
	6.2.3	Microsoft Windows Platforms	
	6.2.4	MacOS Platforms	
	6.2.5	Tested Devices	
6.3	HIDES I	Devices	
	6.3.1	Overview	
	6.3.2	Linux Platforms	
	6.3.3	Microsoft Windows Platforms	329
	6.3.4	MacOS Platforms	330
	6.3.5	Tested Devices	330
	6.3.6	Power Constraints	330
Appr	NDIX A	TSDUCK CONFIGURATION FILE	331
		URATION FILE LOCATION	
		URATION FILE FORMAT	
A.3		CONFIGURATION FILES	
	A.3.1	Using TSDuck on Japanese ISDB transport streams	332
АРРЕ	NDIX B	CHANNEL CONFIGURATION XML REFERENCE MODEL	334
R 1	FILE HS	AGE	334
		EL CONFIGURATION FILE FORMAT	
۵.2	B.2.1	Conventions	
	B.2.2	XML file structure	
B.3		PARAMETERS	
2.0	B.3.1	ATSC	
	B.3.2	DVB-C	
	B.3.3	DVB-S.	
		DVR-T	335



	B.3.5	ISDB-T	336
	B.3.6	ISDB-S	336
APPE	NDIX C	PSI/SI XML REFERENCE MODEL	337
C 1	DCI /CI r	FILE FORMAT	
C.1	C.1.1	Conventions	
	C.1.1 C.1.2	XML file structure	
$C^{2}$		DEFINED TABLES	
U.Z			
	C.2.1	Conditional Access Table (CAT)	
	C.2.2	DSM-CC Stream Descriptors Table (DAT)	
	C.2.3	Program Association Table (PAT)	
	C.2.4	Program Map Table (PMT)	
C 2	C.2.5	Transport Stream Description Table (TSDT)	
L.3		FINED TABLES	
	C.3.1	Application Information Table (AIT)	
	C.3.2	Bouquet Association Table (BAT)	
	C.3.3	Discontinuity Information Table	
	C.3.4	Event Information Table (EIT)	
	C.3.5	IP/MAC Notification Table (INT)	
	C.3.6	Network Information Table (NIT)	
	C.3.7	Running Status Table (RST)	
	C.3.8	Selection Information Table (SIT)	
	C.3.9	Service Description Table (SDT)	
	C.3.10	Time and Date Table (TDT)	
	C.3.11	Time Offset Table (TOT)	
	C.3.12	Update Notification Table (UNT)	341
C.4	SCTE-D	EFINED TABLES	
	C.4.1	Cable Emergency Alert Table (SCTE 18)	342
	C.4.2	Splice Information Table (SCTE 35)	343
C.5	ATSC-D	EFINED TABLES	344
	C.5.1	Cable Virtual Channel Table (CVCT)	344
	C.5.2	Directed Channel Change Table (DCCT)	
	C.5.3	Directed Channel Change Selection Code Table (DCCSCT)	
	C.5.4	Event Information Table (EIT)	
	C.5.5	Extended Text Table (ETT)	
	C.5.6	Master Guide Table (MGT)	
	C.5.7	Rating Region Table (RRT)	
	C.5.8	System Time Table (STT)	
	C.5.9	Terrestrial Virtual Channel Table (TVCT)	
C 6		EFINED TABLES	
<b>G.</b> 0	C.6.1	Broadcaster Information Table (BIT)	
	C.6.2	Event Relation Table (ERT)	
	C.6.3	Index Transmission information Table (ITT)	
	C.6.4	Linked Description Table (LDT)	
	C.6.5	Local event Information Table (LIT)	
		· ·	
	C.6.6	Network Board Information Table (NBIT)Partial Content Announcement Table (PCAT)	
C 7	C.6.7		
L./		DEFINED DESCRIPTORS	
	C.7.1	af_extensions_descriptor	
	C.7.2	association_tag_descriptor	
	C.7.3	audio_stream_descriptor	
	C.7.4	AVC_timing_and_HRD_descriptor	
	C.7.5	AVC_video_descriptor	
	C.7.6	CA_descriptor	
	C.7.7	carousel_identifier_descriptor	
	C.7.8	copyright_descriptor	
	C.7.9	data_stream_alignment_descriptor	
	C.7.10	deferred_association_tags_descriptor	
	C.7.11	external_ES_ID_descriptor	352



		flexmux_timing_descriptor	
		FMC_descriptor	
	C.7.14	HEVC_timing_and_HRD_descriptor	352
	C.7.15	HEVC_video_descriptor	352
	C.7.16	hierarchy_descriptor	353
	C.7.17	IBP_descriptor	353
	C.7.18	ISO_639_language_descriptor	353
	C.7.19	J2K_video_descriptor	353
	C.7.20	maximum_bitrate_descriptor	
	C.7.21	metadata_STD_descriptor	353
	C.7.22	MPEG2_AAC_audio_descriptor	
	C.7.23	MPEG2_stereoscopic_video_format_descriptor	
	C.7.24	MPEG4_audio_descriptor	
	C.7.25	MPEG4_video_descriptor	
	C.7.26	multiplex_buffer_descriptor	
	C.7.27	multiplex_buffer_utilization_descriptor	
	C.7.28	MVC_extension_descriptor	
	C.7.29	NPT_endpoint_descriptor	
	C.7.30	NPT_reference_descriptor	
	C.7.31	private_data_indicator_descriptor	
	C.7.32	registration_descriptor	
	C.7.33	SL_descriptor	
	C.7.34	smoothing_buffer_descriptor	355
	C.7.35	STD_descriptor	
	C.7.36	stereoscopic_program_info_descriptor	
	C.7.37	stereoscopic_video_info_descriptor	
	C.7.38	stream_event_descriptor	
	C.7.39	stream_mode_descriptor	356
	C.7.40	SVC_extension_descriptor	356
	C.7.41	system_clock_descriptor	
	C.7.42	target_background_grid_descriptor	
	C.7.43	transport_profile_descriptor	356
	C.7.44	video_stream_descriptor	357
	C.7.45	video_window_descriptor	357
C.8	DVB-DE	FINED DESCRIPTORS	357
	C.8.1	AAC_descriptor	357
	C.8.2	AC3_descriptor	357
	C.8.3	AC4_descriptor	357
	C.8.4	adaptation_field_data_descriptor	358
	C.8.5	ancillary_data_descriptor	358
	C.8.6	announcement_support_descriptor	358
	C.8.7	application_descriptor	358
	C.8.8	application_icons_descriptor	358
	C.8.9	application_name_descriptor	359
	C.8.10	application_recording_descriptor	359
	C.8.11	application_signalling_descriptor	359
	C.8.12	application_storage_descriptor	359
	C.8.13	application_usage_descriptor	359
	C.8.14	audio_preselection_descriptor	359
	C.8.15	bouquet_name_descriptor	360
	C.8.16	C2_bundle_delivery_system_descriptor	360
	C.8.17	C2_delivery_system_descriptor	360
	C.8.18	CA_identifier_descriptor	360
	C.8.19	cable_delivery_system_descriptor	360
	C.8.20	cell_frequency_link_descriptor	361
	C.8.21	cell_list_descriptor	
	C.8.22	CI_ancillary_data_descriptor	361
	C.8.23	component_descriptor	
	C.8.24	content_descriptor	361



C.8.25	country_availability_descriptor	362
C.8.26	CP_descriptor	362
C.8.27	CP_identifier_descriptor	362
C.8.28	data_broadcast_descriptor	362
C.8.29	data_broadcast_id_descriptor	362
C.8.30	DII_location_descriptor	362
C.8.31	DSNG_descriptor	362
C.8.32	DTS_descriptor	362
C.8.33	DTS_HD_descriptor	363
C.8.34	DTS_neural_descriptor	364
C.8.35	dvb_html_application_boundary_descriptor	364
C.8.36	dvb_html_application_descriptor	364
C.8.37	dvb_html_application_location_descriptor	364
C.8.38	dvb_j_application_descriptor	365
C.8.39	dvb_j_application_location_descriptor	365
C.8.40	ECM_repetition_rate_descriptor	365
C.8.41	enhanced_AC3_descriptor	365
C.8.42	extended_event_descriptor	
C.8.43	external_application_authorization_descriptor	366
C.8.44	frequency_list_descriptor	366
C.8.45	FTA_content_management_descriptor	
C.8.46	graphics_constraints_descriptor	
C.8.47	image_icon_descriptor	
C.8.48	IPMAC_generic_stream_location_descriptor	
C.8.49	IPMAC_platform_name_descriptor	
C.8.50	IPMAC_platform_provider_name_descriptor	
C.8.51	IPMAC_stream_location_descriptor	
C.8.52	ip_signalling_descriptor	
C.8.53	ISP_access_mode_descriptor	
C.8.54	linkage_descriptor	
C.8.55	local_time_offset_descriptor	
C.8.56	message_descriptor	
C.8.57	mosaic_descriptor	
C.8.58	multilingual_bouquet_name_descriptor	
C.8.59	multilingual_component_descriptor	
C.8.60	multilingual_network_name_descriptor	
C.8.61	multilingual_service_name_descriptor	
C.8.62	network_change_notify_descriptor	
C.8.63	network_name_descriptor	
C.8.64	NVOD_reference_descriptor	
C.8.65	parental_rating_descriptor	
C.8.66 C.8.67	partial_transport_stream_descriptor PDC_descriptor	
C.8.68	prefetch_descriptor	
C.8.69	private_data_specifier_descriptor	
C.8.70	protection_message_descriptor	
C.8.71	S2_satellite_delivery_system_descriptor	
C.8.72	S2X_satellite_delivery_system_descriptor	
C.8.73	satellite_delivery_system_descriptorsatellite_delivery_system_descriptor	
C.8.74	scheduling_descriptorscheduling_descriptor	
C.8.75	scrambling_descriptor	
C.8.76	service_descriptor	
C.8.77	service_availability_descriptor	
C.8.78	service_avariability_descriptorservice_identifier_descriptor	
C.8.79	service_list_descriptor	
C.8.80	service_move_descriptor	
C.8.81	service_relocated_descriptor	
C.8.82	SH_delivery_system_descriptor	
C.8.83	short_event_descriptorshort_event_descriptor	



	C.8.84	short_smoothing_buffer_descriptor	373
	C.8.85	simple_application_boundary_descriptor	374
	C.8.86	simple_application_location_descriptor	374
	C.8.87	SSU_enhanced_message_descriptor	374
	C.8.88	SSU_event_name_descriptor	374
	C.8.89	SSU_location_descriptor	374
	C.8.90	SSU_message_descriptor	374
	C.8.91	SSU_subgroup_association_descriptor	375
	C.8.92	SSU_uri_descriptor	375
	C.8.93	stream_identifier_descriptor	375
	C.8.94	stuffing_descriptor	375
	C.8.95	subtitling_descriptor	375
	C.8.96	supplementary_audio_descriptor	375
	C.8.97	T2_delivery_system_descriptor	375
	C.8.98	T2MI_descriptor	376
	C.8.99	target_IP_address_descriptor	376
		target_IP_slash_descriptor	
	C.8.101	target_IP_source_slash_descriptor	376
	C.8.102	target_IPv6_address_descriptor	377
		target_IPv6_slash_descriptor	
	C.8.104	target_IPv6_source_slash_descriptor	377
		target_MAC_address_descriptor	
	C.8.106	target_MAC_address_range_descriptor	377
	C.8.107	target_region_descriptor	377
	C.8.108	target_region_name_descriptor	377
	C.8.109	target_serial_number_descriptor	378
	C.8.110	target_smartcard_descriptor	378
	C.8.111	telephone_descriptor	378
	C.8.112	teletext_descriptor	378
	C.8.113	terrestrial_delivery_system_descriptor	378
		time_shifted_event_descriptor	
	C.8.115	time_shifted_service_descriptor	379
	C.8.116	time_slice_fec_identifier_descriptor	379
	C.8.117	transport_protocol_descriptor	379
	C.8.118	transport_stream_descriptor	380
	C.8.119	update_descriptor	380
	C.8.120	URI_linkage_descriptor	380
	C.8.121	VBI_data_descriptor	380
	C.8.122	VBI_teletext_descriptor	380
	C.8.123	video_depth_range_descriptor	380
C.9	DTG/OF	FCOM-DEFINED DESCRIPTORS (DVB PRIVATE DESCRIPTORS)	381
	C.9.1	dtg_guidance_descriptor	381
	C.9.2	dtg_HD_simulcast_logical_channel_descriptor	381
	C.9.3	dtg_logical_channel_descriptor	
	C.9.4	dtg_preferred_name_identifier_descriptor	381
	C.9.5	dtg_preferred_name_list_descriptor	381
	C.9.6	dtg_service_attribute_descriptor	382
	C.9.7	dtg_short_service_name_descriptor	382
C.10	EACEM-	-DEFINED DESCRIPTORS (DVB PRIVATE DESCRIPTORS)	382
	C.10.1	eacem_HD_simulcast_logical_channel_descriptor	382
	C.10.2	eacem_logical_channel_number_descriptor	382
	C.10.3	eacem_preferred_name_identifier_descriptor	
	C.10.4	eacem_preferred_name_list_descriptor	
	C.10.5	eacem_stream_identifier_descriptor	
C.11	l Eutelsa	T-DEFINED DESCRIPTORS (DVB PRIVATE DESCRIPTORS)	
	C.11.1	eutelsat_channel_number_descriptor	383
C.12	2 NorDig-	DEFINED DESCRIPTORS (DVB PRIVATE DESCRIPTORS)	
	C.12.1	nordig_logical_channel_descriptor_v1	383
	C.12.2		



		EFINED DESCRIPTORS (DVB PRIVATE DESCRIPTORS)	
	C.13.1	sky_logical_channel_number_descriptor	
C.14		FINED DESCRIPTORS	
		cue_identifier_descriptor	
		EAS_audio_file_descriptor	
		EAS_inband_details_channel_descriptor	
	C.14.4	EAS_inband_exception_channels_descriptor	384
	C.14.5	EAS_metadata_descriptor	384
	C.14.6	splice_avail_descriptor	384
	C.14.7	splice_DTMF_descriptor	384
	C.14.8	splice_segmentation_descriptor	385
	C.14.9	splice_time_descriptor	385
C.15	ATSC-DI	EFINED DESCRIPTORS	385
	C.15.1	AC3_audio_stream_descriptor	385
	C.15.2	caption_service_descriptor	385
		component_name_descriptor	
		content_advisory_descriptor	
		dcc_arriving_request_descriptor	
		dcc_departing_request_descriptor	
		EAC3_audio_descriptor	
		extended_channel_name_descriptor	
		genre_descriptor	
		redistribution_control_descriptor	
		service_location_descriptor	
		stuffing_descriptor	
		time_shifted_service_descriptor	
		FINED DESCRIPTORS	
	C.16.1	area_broadcasting_information_descriptor	
		audio_component_descriptor	
		board_information_descriptor	
		broadcaster_name_descriptor	
		CA_contract_info_descriptor	
		CA_EMM_TS_descriptor	
		CA_service_descriptor	
		conditional_playback_descriptor	
		content_availability_descriptor	
		data_component_descriptor	
		data_content_descriptor	
		digital_copy_control_descriptor	
		emergency_information_descriptor	
	C.16.14	event_group_descriptor	391
	C.16.15	extended_broadcaster_descriptor	391
	C.16.16	hierarchical_transmission_descriptor	391
	C.16.17	ISDB_access_control_descriptor	391
	C.16.18	ISDB_terrestrial_delivery_system_descriptor	392
		logo_transmission_descriptor	
		node_relation_descriptor	
		partial_reception_descriptor	
		reference_descriptor	
		satellite_delivery_system_descriptor	
		series_descriptor	
		service_group_descriptor	
		short_node_information_descriptor	
		SI_parameter_descriptor	
		SI_prime_TS_descriptor	
		system_management_descriptor	
		TS_information_descriptor	
		video_decode_control_descriptor	
C.17	GENERIC	FORMAT FOR UNSUPPORTED TABLES AND DESCRIPTORS	394



C.17.1 Generic short table	394
C.17.2 Generic long table	395
C.17.3 Generic descriptor	
List of Figures	
Figure 1: Transport stream processor diagram	61
Figure 2: Merging and forking transport streams	
Figure 3: Sample input switching configuration	289
Figure 4: Stuffing bitrate sample diagram	298
Figure 5: Conditional Access System sample test bed	
gure 6: Multi-Protocol Encapsulation (MPE) sample test bed3	
List of Tables	
Table 1: Transport stream file formats	20
Table 2: TSDuck utilities	25
Table 3: tsp plugins	
Table 4: Dektec modulators default modulation types	
Table 5: Command line options for Dektec modulators	
Table 6: Preconfigured LNB names and aliases	
Table 7: Values for optiondelivery-system	
Table 8: Tested DVB receiver devices	
Table 9: Configuration file entries	331



# **Acronyms and Abbreviations**

AC-3 Audio Compression Standard 3 (Dolby)

AES Advanced Encryption Standard AIT Application Information Table

ANSI American National Standards Institute

ARIB Association of Radio Industries and Businesses

ASI Asynchronous Serial Interface

ATIS Alliance for Telecommunications Industry Solutions

ATSC Advanced Television Systems Committee

ATR Answer To Reset (smartcard)
AVC Advanced Video Coding

BDA Broadcast Device Architecture (Microsoft Windows)

BDT Binary Data Table
BER Bit Error Ratio

BPSK Binary Phase Shift Keying

CA Conditional Access

CAM Conditional Access Module
CAS Conditional Access System
CAT Conditional Access Table
CMT CA Message Table

COFDM Coded Orthogonal Frequency Division Multiplexing

CP Crypto-Period

CRC Cyclic Redundancy Check

CSA Conseil Supérieur de l'Audiovisuel (French national regulator for TV)

CW Control Word

DKMS Dynamic Kernel Module Support (Linux)
DOCSIS Data Over Cable Service Interface Specification

DRM Digital Rights Management

DSM-CC Digital Storage Media Command and Control

DTH Direct To Home
DTS Decoding Time Stamp
DTTV Digital Terrestrial Television

DTV Digital Television

DVB Digital Video Broadcasting DVB-C DVB Cable modulation

DVB-C2 DVB Cable modulation, 2<sup>nd</sup> generation

DVB-CISSA DVB Common IPTV Software-oriented Scrambling Algorithm

DVB-CSA DVB Common Scrambling Algorithm

DVB-S DVB Satellite modulation

DVB-S2 DVB Satellite modulation, 2<sup>nd</sup> generation

DVB-T DVB Terrestrial modulation

DVB-T2 DVB Terrestrial modulation, 2<sup>nd</sup> generation

ECM Entitlement Control Message

ECMG ECM Generator

EIS Event Information Scheduler EIT Event Information Table

EMM Entitlement Management Message

EMMG EMM Generator
ES Elementary Stream

ETSI European Telecommunications Standards Institute

FEC Forward Error Correction

FIPS Federal Information Processing Standard

FLUTE File Delivery over Unidirectional Transport (RFC 3926)

FTA Free To Air GOP Group Of Pictures

HbbTV Hybrid broadcast/broadband Television HE-AAC High Efficiency Advanced Audio Coding

Version 3.22-1926 13 / 395



HLS HTTP Live Streaming

HTTP Hyper-Text Transfer Protocol

HTTPS Hyper-Text Transfer Protocol – Secure IDSA IIF Default Scrambling Algorithm

IEC International Electrotechnical Commission
IEEE Institute of Electrical and Electronics Engineers

IETF Internet Engineering Task Force
IIF IP-TV Interoperability Forum
INT IP/MAC Notification Table

IP Internet Protocol

IPTV Internet Protocol Television

ISDB Integrated Services Digital Broadcasting
ISO International Standardization Organization
ITU International Telecommunication Union

IV Initialization Vector

LNB Low-Noise Block down-converter MAC Media Access Control (networking)

MAC Message Authentication Code (cryptography)

MGT Master Guide Table (ATSC)
MPE Multi-Protocol Encapsulation
MPEG Moving Picture Experts Group

MUX Multiplexer

NIST National Institute of Standards and Technology

NIT Network Information Table

NTSC National Television Systems Committee OQPSK Offset Quadrature Phase Shift Keying

OUI Organizationally Unique Identifier (IEEE assigned)

PAT Program Association Table
PCR Program Clock Reference
PES Packetized Elementary Stream

PID Packet Identifier
PLP Physical Layer Pipe
PMT Program Map Table

PSI Program Specific Information

PSK Phase Shift Keying
PTS Presentation Time Stamp
QPSK Quadrature Phase Shift Keying
QAM Quadrature Amplitude Modulation
RRT Rating Region Table (ATSC)

RTP Real-Time Protocol
RTT Rating Text Tavle (ATSC)
SCS SimulCrypt Synchronizer

SCTE Society of Cable Telecommunications Engineers

SDT Service Description Table
SFN Single Frequency Network
SI Service Information

SMPTE Society of Motion Picture and Television Engineers

STB Set-Top Box

STD System Target Decoder
T2-MI DVB-T2 Modulator Interface
TDT Time and Date Table

TID Table Identifier

TNT Télévision Numérique Terrestre (French DTTV network)

TOT Time Offset Table

TPS Transmission Parameter Signalling

TS Transport Stream

TSDT Transport Stream Description Table

UDP User Datagram Protocol
UNT Update Notification Table

# TSDuck User's Guide



URI	Uniform Resource Identifier
URL	Uniform Resource Locator
UTC	Coordinated Universal Time
UUID	Universal Unique Identifier
VBI	Vertical Blanking Interval
VCT	Virtual Channel Table (ATSC)

Version 3.22-1926 15 / 395



# References

- [1] ISO/IEC 13818-1:2018 | ITU-T Recommendation H.262 (2017): "Generic coding of moving pictures and associated audio information: Systems" (also known as "MPEG-2 System Layer")
- [2] ISO/IEC 13818-6, July 1998: "Digital Storage Media Command & Control" (DSM-CC)
- [3] ETSI, ETR 289, October 1996: "Digital Video Broadcasting (DVB); Support for use of scrambling and Conditional Access (CA) within digital broadcasting systems".
- [4] ETSI TS 103 197, V1.4.1, September 2004: "Digital Video Broadcasting (DVB); Head-end implementation of DVB SimulCrypt".
- [5] ETSI EN 300 468, V1.16.1, August 2019: "Digital Video Broadcasting (DVB); Specification for Service Information (SI) in DVB systems".
- [6] ETSI TS 101 211 V1.12.1, December 2013: "Digital Video Broadcasting (DVB); Guidelines on implementation and usage of Service Information (SI)".
- [7] ETSI TR 101 162, V1.2.2, May 2003: "Digital Video Broadcasting (DVB); Allocation of Service Information (SI) and data broadcasting codes for DVB systems".
- [8] ETSI TS 102 006, V1.4.1, June 2015: "Digital Video Broadcasting (DVB); Specification for System Software Update in DVB Systems".
- [9] ETSI TS 102 773, V1.2.1, December 2010, "Modulator Interface (T2-MI) for a second generation digital terrestrial television broadcasting system (DVB-T2)".
- [10] ETSI EN 302 755, V1.4.1, July 2015, "Frame structure channel coding and modulation for a second generation digital terrestrial television broadcasting system (DVB-T2)".
- [11] ETSI TS 102 809, V1.3.1, June 2017: "Digital Video Broadcasting (DVB); Signalling and carriage of interactive applications and services in Hybrid broadcast/broadband environments" (HbbTV).
- [12] ETSI TS 102 006, V1.4.1, June 2015: "Digital Video Broadcasting (DVB); Specification for System Software Update in DVB Systems".
- [13] ETSI EN 301 192, V1.6.1, August 2015: "Digital Video Broadcasting (DVB); DVB specification for data broadcasting".
- [14] ETSI TS 101 812, V1.3.2, August 2006: "Digital Video Broadcasting (DVB); Multimedia Home Platform (MHP) Specification 1.0.3".
- [15] ETSI TS 103 127, V1.1.1, May 2013: "Digital Video Broadcasting (DVB); Content Scrambling Algorithms for DVB-IPTV Services using MPEG2 Transport Streams".
- [16] ETSI EN 301 210, V1.1.1, March 1999; "Digital Video Broadcasting (DVB); Framing structure, channel coding and modulation for Digital Satellite News Gathering (DSNG) and other contribution applications by satellite".
- [17] ANSI/SCTE 18 2007, "Emergency Alert Messaging for Cable".
- [18] ANSI/SCTE 35 2017, "Digital Program Insertion Cueing Message for Cable".
- [19] ANSI/SCTE 164 2019, "Emergency Alert Metadata Descriptor".
- [20] ATSC A52, January 2018, "Digital Audio Compression (AC-3, E-AC-3)".
- [21] ATSC A65/2013, August 2013: "ATSC Standard: Program and System Information Protocol for Terrestrial Broadcast and Cable".
- [22] ATSC A69/2009, December 2009: "ATSC Recommended Practice: Program and System Information Protocol Implementation Guidelines for Broadcasters".
- [23] ARIB STD-B10, V4.6, June 2008: "Service Information for digital broadcasting system" (English version).
- [24] ARIB STD-B10, V5.7, December 2015: "Service Information for digital broadcasting system" (Japanese version).



- [25] ARIB STD-B24, V6.4, July 2017: "Data Coding and Transmission Specification for Digital Broadcasting".
- [26] ARIB STD-B25, V5.0, March 2007: "Conditional Access System Specifications for Digital Broadcasting".
- [27] EACEM TR 030, V1.0, February 2000: "Baseline Digital Terrestrial TV Receiver Specification".
- [28] Via Eutelsat Fransat: "Set-Top-Box Specification DVB MPEG-4 HD", V0.0.7, October 2009.
- [29] NorDig: "Unified Requirements for Integrated Receiver Decoders for use in cable, satellite, terrestrial and managed IPTV based networks", V3.1.1, September 2019.
- [30] DTG: "Digital Terrestrial Television; Requirements for Interoperability; The D-Book 7 Part A", V1, March 2011.
- [31] Dektec Digital Video B.V. corporate home page, http://www.dektec.com/
- [32] Dektec drivers and SDK's downloads, http://www.dektec.com/downloads/SDK/
- [33] Linux DKMS for Dektec device drivers, https://github.com/tsduck/dektec-dkms
- [34] HiDes USB DVB-T modulator adaptors, http://www.hides.com.tw/product\_cg74469\_eng.html
- [35] Device drivers for HiDes modulators, https://github.com/tsduck/hides-drivers/
- [36] Linux TV Wiki: "How to install DVB device drivers", http://linuxtv.org/wiki/index.php/How\_to\_install\_DVB\_device\_drivers
- [37] VideoLAN VLC Media Player home page, http://www.videolan.org/vlc/
- [38] Telxcc project page, https://github.com/petrkutalek/telxcc
- [39] LibTomCrypt site, http://www.libtom.net/LibTomCrypt/
- [40] Libsrt site, https://github.com/Haivision/srt/
- [41] TSDuck Web site, https://tsduck.io/
- [42] Homebrew tap for TSDuck on macOS, https://github.com/tsduck/homebrew-tsduck
- [43] TSDuck issues tracker, https://github.com/tsduck/tsduck/issues

Version 3.22-1926 17 / 395



# 1 Transport Stream Toolkit Overview

# 1.1 Purpose

The transport stream toolkit contains a set of simple but flexible command-line utilities that run on Linux, Windows and macOS. These commands are described in this document.

Through *tsp*, the *transport stream processor*, many types of analysis and transformation can be applied on live or recorded transport streams. This utility can be extended through *plugins*. Existing plugins can be enhanced and new plugins can be developed using a library of C++ classes.

#### Structure of this guide:

- The chapter 2 describes the data formats (transport stream, binary sections files, XML files).
- The chapter 3 describes all TSDuck utilities.
- The chapter 4 describes all *tsp* plugins.
- The chapter 5 provides some concrete examples of TSDuck usage.
- The chapter 6 describes the level of test and support for some hardware devices, mainly DVB receivers and Dektec devices.

# 1.2 Operating System Selection Guidelines

Here is a brief summary of pros and cons of using TSDuck on the various operating systems.

- Linux pros:
  - ⇒ Availability of a powerful shell environment. TSDuck is a light-weight *toolkit* with elementary tools and plugins which can be combined in an infinite number of ways. The user can obtain even more flexibility when combining them with the *bash* shell and all standard UNIX utilities (*grep*, *sed*, *awk*, etc.) See some complex examples in section 5.2.
- Linux cons:
  - $\Rightarrow$  When used in a mobile environment, a laptop PC with Linux (or Linux/Windows dual boot) is required.
  - ⇒ Some DVB tuners are not supported on Linux. Some supported tuners do not work well on Linux. Make sure to get fully supported DVB hardware.
- Windows pros:
  - ⇒ Available on all "average user" laptop PC. Useful for transport stream capture and analysis in the field.
- Windows cons:
  - ⇒ No or limited shell environment.
  - ⇒ Some limitations in the support of DVB receiver devices (see 6.1.2.2, page 323, for more details). For instance, it is impossible to retrieve the actual tuning parameters of a transport stream as detected by the tuner device.
- macOS pros:
  - ⇒ Availability of a powerful shell environment, just another UNIX system, just like Linux. Powerful user-friendly system.
- macOS cons:
  - ⇒ Currently no support for hardware DVB tuners and Dektec devices. So, macOS is recommended only when dealing with transport stream files and IP networking, not for any hardware support.

**Summary:** Use Linux if you can. Use Windows when you do not have Linux (typically a Windows laptop in the field). Use macOS if you have a Mac and do not need DVB or Dektec hardware.

# 1.3 Installing TSDuck

The TSDuck installers are available from the "Download" section of the TSDuck Web site (see [41]).



The basic installation provides all TSDuck tools and plugins. The command-line tools are directly accessible from the command prompt.

TSDuck can also be used as a large C++ library for third-party applications, outside the TSDuck tools and plugins. To do that, you must install the "TSDuck development environment". See more details on the TSDuck Web site: select "Source code", then "Doxygen documentation" and finally "Using the TSDuck library".

#### Windows

Binary executable installers are provided for Windows platforms, 32-bit and 64-bit versions.

The directory containing the command-line tools is automatically added to the Path. The TSDuck development environment is included in the installer but it is not installed by default. You must select it explicitly.

Note that TSDuck is supported for Windows 7 and higher only. TSDuck may work on Windows XP or Vista but without guarantee or support.

For users without privilege, *portable packages* are provided for 32 and 64 bits platforms. A portable package is simply a zip archive file which can be expanded anywhere. The TSDuck commands are located in the bin subdirectory and can be executed from here without any additional setup. It is probably a good idea to add this bin directory in the Path environment variable of the user.

#### Linux

Two flavors of packages are available: .rpm for Fedora systems and .deb for Ubuntu systems. Currently, only 64-bit packages are available.

All tools are in /usr/bin. There is a separate package for the TSDuck development environment.

#### **MacOS**

On macOS, TSDuck is installed using the Homebrew packaging and delivery system (see [42]).

All tools are accessible from /usr/local/bin (standard installation structure for Homebrew).

The development environment is always installed with TSDuck using Homebrew.

Version 3.22-1926 19 / 395



# 2 Data Formats

# 2.1 Transport Stream Format

Transport streams shall conform to the MPEG-2 system layer format as defined in ISO 13818-1 [1].

### 2.1.1 Live transport streams

Live transport streams can be read by TSDuck from:

- Live sources using specialized hardware, cheap DVB tuners or Dektec ASI devices.
- UDP/IP using various encapsulations (the encapsulation of TS packets in UDP packets does not matter since TSDuck automatically retrieves the TS packets inside UDP packets and simply ignores everything in between).
- HTTP or HTTPS streams without encapsulation (ie. raw TS streams, but not manifest-based formats such as DASH or HLS).
- HLS (HTTP Live Streaming) with transport stream segments (not fMP4).

See the documentation of the plugins *dvb*, *dektec*, *ip*, *http*, *hls* for more details on the reception of live transport streams.

The same plugins can also transmit live streams on Dektec ASI and modulator devices and on UDP/IP streams (multicast or unicast).

### 2.1.2 Stored transport streams

Transport streams can be read from and written to binary files, called TS files.

A standard TS file must contain contiguous 188-byte TS packets without any encapsulation. All TS packets shall start with the MPEG-defined synchronization byte 0x47. Any packet not starting with this synchronization byte is considered invalid and rejected.

Unless specified otherwise, most TSDuck utilities and plugins can read or write several non-standard TS formats. The supported formats are listed in the table below.

The command line option "--format name" can be be used to specify a precise file format.

On input, the file format is automatically detected for each file. But the auto-detection may fail in some cases (for instance when the first time-stamp of an M2TS file starts with 0x47 in which case the file would be incorrectly identified as TS). Using the option --format forces a specific format to avoid ambiguities.

On output, the default format is a standard TS file.

The table below lists all possible format names as used with the option  $\operatorname{\mathtt{--format}}$ .

Table 1: Transport stream file formats

Name	Description
autodetect	Auto-detection of the file format. This is the default for input files and is usually appropriate. This will always work with TS files but may fail in rare cases with M2TS files.
TS	Standard transport stream file containaining contiguous 188-byte TS packets without any encapsulation. This is the default for output files.
M2TS	Blu-ray compatible format. Also found in recording files from some DVR devices.  This is the same as TS format, except that each 188-byte TS packet is preceded by a 4-byte time stamp. The 2 most significant bits are copy control indicators and are ignored. The 30 least significant bits represent a time stamp in 27 MHz unit (same unit as PCR values). Note that those time stamps wrap up every 39 seconds approximately since they use only 30 bits while full PCR values use 42 bits.



Name	Description
duck	This is a TSDuck proprietary format. It is similar to M2TS except that the header before each TS packet uses 14 bytes and contains all packet metada. Since this is a TSDuck proprietary format, it can be used only in pipes between instances of <i>tsp</i> . The only advantage of this format is to transport complete original time stamps, packet labels and other metadata between instances of <i>tsp</i> .

When dealing with non-conformant TS files coming from outside, the utility *tsresync* can be used to extract the TS packets and recreate a pure 188-byte TS file. Here is a sample list of common non-conformant TS files which can be processed by *tsresync*:

- Raw capture of TS packets with the 16-byte trailing Reed-Solomon correction code.
- Network capture files as produced by tools like Wireshark. Such files contain network packets, containing IP packets, containing UDP packets, containing TS packets.

In all these cases, *tsresync* can extract all TS packets and recreate a "pure" TS file which can be manipulated by the various utilities and plugins from the TSDuck suite.

# 2.2 PSI/SI Signalization Storage Format

TSDuck can manipulate PSI/SI sections and tables outside of transport streams. Sections and tables can be extracted from a transport stream, saved and manipulated in various file formats and injected in other transport streams.

There are two main file formats for PSI/SI: binary section files and XML text files.

These two formats are documented in the next sections. In the general case, tools which extract PSI/SI sections and tables can save in any format and tools which use PSI/SI can read them from any format as well. The utility *tstabcomp*, the table compiler, can translate between the two formats.

Some key differences between the two formats are:

- Binary section files contain collections of individual sections in any order, not necessarily complete tables. XML files contain complete tables only.
- Binary section files contain the exact representation, byte by byte, of sections which were extracted from a transport stream. XML files contain a higher-level representation.
- Binary section files are not easily modifiable. XML files contain text which can be manually edited using any text editor or XML tool.

# 2.2.1 PSI/SI binary format

A PSI/SI binary file contains one or more sections in a simple binary format. Each section is directly written in the file without any encapsulation or synchronization information. All sections are contiguous in the file.

A binary file must be read from the beginning. The header of each section contains the section length. Using this length information, it is possible to locate the next section, starting right after the current section, and so on down to the end of the file.

#### 2.2.1.1 Creating PSI/SI binary files

PSI/SI binary files can be extracted from live streams or TS files using *tstables* or the plugin *tables*. The extracted sections are identical, byte by byte, to the transported sections. By default, all sections of a given table are contiguously saved in the binary file, in increasing order of section number. Thus, a complete table can be easily rebuilt by reading sections one by one.

With the option --all-sections, *tstables* and the plugin *tables* save all individual sections in their order of reception. In that case, the order and repetition of sections in the binary files are not defined.

PSI/SI binary files can also be created by *tstabcomp*, the table compiler. Tables are described in XML format (see 2.2.2) and compiled into a binary file. Since *tstabcomp* processes complete tables, all sections

Version 3.22-1926 21 / 395



of a table are also contiguously saved in the binary file, in increasing order of section number, just like *tstables* by default.

#### 2.2.1.2 Using PSI/SI binary files

The content of binary section files can be viewed using *tstabdump*. This utility displays the content of each individual section in a human-readable format, regardless of the order of sections in the file.

Binary section files can be used to packetize or inject sections in a stream (command *tspacketize* and plugin *inject*). The sections are packetized or injected in their order of appearance in the file.

Finally, binary section files can also be decompiled by *tstabcomp* to recreate the corresponding XML files from the binary tables. But note that XML files contain complete tables only. This means that tables can be recreated only when their sections are contiguous and in increasing order of section number in the binary file.

#### 2.2.2 PSI/SI XML format

An XML file containing PSI/SI tables for TSDuck uses <tsduck> as root node. The root node contains any number of tables.

Unlike binary files which may contain individual sections, XML files can only contain complete tables. The XML format represents a higher level view of a table, regardless of the binary implementation in one or more sections.

The following sample XML file contains the definition for simple (and incomplete) PAT and PMT.

All XML files shall be encoded in UTF-8 format to allow international character sets in service names or event descriptions for instance. The initial declaration line "<?xml version="1.0" encoding="UTF-8"?>" is optional but recommended.

The complete definition of the XML model can be found in Appendix C, page 337.

#### 2.3 Character sets

#### 2.3.1 Standards and character sets

Each standard defines its own way of representing characters in tables and descriptors.

DVB:

Each string is encoded using one single character set. The default character set is a modified version of ISO-6937. For strings which cannot be encoded using ISO-6937, another character set can be selected using a specific leading binary sequence. Since DVB character sets include UTF-8 and UTF-16, all Unicode characters can be eventually represented. See [5], ETSI EN 300 468, annex A.



ISDB (ARIB): Each string is encoded using ARIB STD-B24 (see [25] part 2, chapter 7). A string may

alternate between several character sets, typically Kanji, Hiragana, Katakana and alphanumerical characters. The switching between character sets is performed using control binary sequences. While all Japanese characters can be encoded, many European accented character cannot be represented. There is no way to encode arbitrary Unicode

character in ARIB STD-B24.

ATSC: Simple strings are encoded in 7-bit ASCII. But most strings are encoded using "multiple

string structures" where all Unicode characters can be represented.

XML: TSDuck-defined XML files use some predefined non-ambiguous character set as

indicated in the first directive. This is usually UTF-8. All XML strings are encoded in the same character set. It is the responsibility of TSDuck to convert them in the appropriate

character set when serializing tables and descriptors.

With ATSC "multiple string structures", there is no ambiguity. They are part of the ATCS tables and descriptors definition and are always encoded using the same standard.

With DVB and ISDB, there are several types of ambiguities:

- The ISDB signalization reuses some DVB-defined tables and descriptors but texts are represented with a non-DVB character encoding. When analyzing or creating such structures, the context (DVB vs. ISDB) must be known in order to select the appropriate encoding method.
- Invalid DVB encoding: According to [5], the default DVB character set (without explicit character table code) is ISO-6937. However, some bogus signalization may assume that the default character set is different, typically the usual local character table for the region of the operator. The non-standard default character table must be specified using an option.

#### 2.3.2 TSDuck options for character sets

TSDuck commands and plugins which manipulate tables and descriptors have specialized options to indicate the character set to use.

By default, the standard DVB text encoding is used in DVB and ISDB structures.

The following options can be used to alter the behavior of TSDuck. They are briefly repeated in the documentation of all commands to which they apply.

#### --default-charset name

Specifiy the default character set to use when interpreting strings from tables and descriptors. By default, standard DVB encoding is used. See section 2.3.3 below for a list of available names.

#### --europe

A synonym for '--default-charset ISO-8859-15'.

Using this option, all DVB strings without explicit leading table code are assumed to use ISO-8859-15 instead of the standard ISO-6937 encoding.

This is a handy shortcut for commonly incorrect DVB signalization on some European satellites. In that signalization, the default character encoding (without leading table code) is ISO-8859-15, the most common encoding for Latin & Western Europe languages. When an explicit leading table code is present, then the corresponding character set is used.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'.

This is a handy shortcut when working on Japanese transport streams.

Beyond character sets, in most applications, this option also declares ISDB as default standard, use Japan as default region name for UHF/VHF bands and activates some specificities for Japan such as the use of JST time instead of UTC.

#### 2.3.3 Character set names

The available table names for option --default-charset are:

Version 3.22-1926 23 / 395



• DVB character sets. The name specifies a standard DVB encoding with a different default character set. Without leading table code, the specified character set is used. But if a leading table code is present, the appropriate character set for that table code is used.

```
ISO-6937
DVB (synonym for ISO-6937)
ISO-8859-1
ISO-8859-2
ISO-8859-3
ISO-8859-4
ISO-8859-5
ISO-8859-6
ISO-8859-7
ISO-8859-8
ISO-8859-9
ISO-8859-10
ISO-8859-11
ISO-8859-13
ISO-8859-14
ISO-8859-15
UTF-8
UNICODE (in fact UTF-16)
```

ARIB character sets (Japan):

```
ARIB-STD-B24
ARIB (synonym for ARIB-STD-B24)
```

• Raw DVB character sets. They use the same encoding as their non-raw counterpart but without any leading table code. No leading code is interpreted, the specified case is unconditionally used. Using these character sets is not recommended for general usage.

```
RAW-ISO-6937
RAW-ISO-8859-1
RAW-ISO-8859-2
RAW-ISO-8859-3
RAW-ISO-8859-4
RAW-ISO-8859-5
RAW-ISO-8859-6
RAW-ISO-8859-7
RAW-ISO-8859-8
RAW-ISO-8859-9
RAW-ISO-8859-10
RAW-ISO-8859-11
RAW-ISO-8859-13
RAW-ISO-8859-14
RAW-ISO-8859-15
RAW-UTF-8
RAW-UNICODE (in fact UTF-16)
```

• Debug character set.

DUMP

The "DUMP" character set can be used for debugging. This is not a real character set in the sense that it does not return a Unicode string from a binary representation.

With this character set, *decoding* binary data returns a string containing an hexadecimal dump of the binary data. It is typically used with *tstables* or *tstabdump* to display the exact binary content of strings in tables and descriptors.

Similarly, *encoding* a string means translating the hexadecimal character of that string into binary data. The input string shall contain only hexadecimal digits and spaces. This character set is typically used in XML files to force specific binary contents in text areas of tables and descriptors.



# 3 Transport Stream Utilities

The transport stream toolkit provides a number of command-line utilities. The main one is *tsp*, the transport stream processor. The other utilities are small tools which work on transport stream files.

With a few exceptions, the transport stream files are continuous streams of 188-byte TS packets. These files can also be pipes. With the help of the *tsp* and its input and output plugins, the TS packets can be piped from and to various devices and protocols (files, DVB-ASI, DVB-S, DVB-C, DVB-T, multicast IP, etc.)

The Table 2 lists all transport stream utilities:

**Table 2: TSDuck utilities** 

Utility	Description
tsanalyze	Analyze a TS file and display various information about the transport stream and each individual service and PID.
tsbitrate	Evaluate the original bitrate of a TS based on the analysis of the PCR's and the number of packets between them.
tscmp	Compare the binary content of two TS files.
tsdate	Display the date & time information (TDT & TOT) from a TS file.
tsdektec	Control a Dektec device.
tsdump	Dump the content of a TS file.
tsecmg	DVB SimulCrypt-compliant ECMG stub for system integration and debug.
tsemmg	DVB SimulCrypt-compliant EMMG stub for system integration and debug.
tsfixcc	Fix continuity counters in a TS file.
tsftrunc	Truncate a TS file, removing extraneous bytes (last incomplete TS packet) or truncating after a specified TS packet.
tsgenecm	Generate one ECM using any DVB SimulCrypt compliant ECMG.
tshides	List HiDes modulator devices.
tslsdvb	List DVB receiver devices.
tsp	General-purpose TS processor: receive a TS from a user-specified input plugin, apply MPEG packet processing through several user-specified packet processor plugins and send the processed stream to a user-specified output plugin.
tspacketize	Packetize PSI/SI tables in a transport stream PID.
tspcontrol	Send control commands to a running tsp.
tspsi	Display the PSI (PAT, CAT, NIT, PMT, SDT) from a TS file.
tsresync	Resynchronize a captured TS file: locate start of first packet, resynchronize to next packet after holes, convert to 188-byte packets (if captured with 204-byte packets).
tsscan	Scan frequencies in a DVB network.
tssmartcard	List or reset smart-card reader devices.
tsstuff	Add stuffing to a TS file to reach a target bitrate.
tsswitch	Transport stream input source switch using remote control.
tstabcomp	PSI / SI table compiler from / to XML files.
tstabdump	Dump binary tables files, as previously saved by tstables.
tstables	Collect specified PSI/SI tables from a TS file. Either display them or save them in binary files.
tsterinfo	Compute or retrieve various DVB-T (terrestrial) information.
tsversion	Check version, download and upgrade TSDuck.

Version 3.22-1926 25 / 395



# 3.1 Command line syntax

# 3.1.1 Command line options

All utilities are simple command-line tools. They accept *options* and *parameters*. The syntax of options follows the GNU getopt\_long(3) conventions. See the corresponding Linux manual page for details.

In short, this means that all options have a "long name" preceded by a double dash and optionally a short name (one dash, one letter). Long options can be abbreviated if there is no ambiguity.

Although this syntax is inspired by Linux and the GNU utilities, the same syntax is used on Windows.

As an example, consider a utility which accepts the two options --verbose (short name -v) and --version (no short name). Then, the verbose mode can be equally triggered by -v, --verbose, --verb but not --ver since there is an ambiguity with --version.

### 3.1.2 Integer values in command line options

When an option or parameter is documented to require an integer value (PID, identifier, etc.), this value can be uniformly specified in decimal or hexadecimal format (with the 0x prefix).

In decimal values, the commas which are used as separators for groups of thousands are ignored. Since most commands display large values with separators in order to improve the readability, these values can be simply copied / pasted in subsequent command lines.

Example: The following options are equivalent:

```
--count 3,100,456
--count 3100456
```

When the same option is allowed to be specified several times in one command, it is possible to use ranges of integer values (two values, separated with a dash) instead of specifying all values individually.

Example: The following sets of options are equivalent:

```
--pid 0 --pid 0x20 --pid 0x21 --pid 0x22 --pid 0x23 --pid 0x24 --pid 0x25 --pid 0x40 --pid 0 --pid 0x20-0x25 --pid 0x40
```

#### 3.1.3 Predefined common options

All commands accept the following common options:

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level N. Do not use this option in normal operation.

Without this option, no debug output is produced. When the option is specified but not the level *N*, the default debug level is 1, that is to say a reasonable amount of information. The higher the debug level is, the more output is produced.

The amount of debug information depends on the command. Some commands do not generate any debug information.

#### --help

The utility displays its syntax and exits.

If either the standard output or the standard error is a terminal, the help text is "paged" through a system utility such as less or more, whichever is available. The environment variable PAGER can be used to specify an alternate pager command with its parameters.

To redirect the help text to a file, you must redirect both the standard output and standard error. Otherwise, since at least one of the two is a terminal, the pager will be used. Example:

```
tsp --help &>help.txt
```

#### --verbose

Display verbose information.



#### --version

The utility displays the TSDuck version and exits.

All *tsp* plugins accept the option--help which provides help on this specific plugin.

#### 3.1.4 Using a pager command

Some commands which produce a very verbose output are automatically redirected to a "pager" command such as less or more, whichever is available. The redirection is performed only when the standard output is a terminal.

The environment variable PAGER can be used to specify an alternate pager command with its parameters.

These commands always define a --no-pager option to disable the redirection even when the standard output is a terminal.

#### 3.1.5 Partial command line redirection from a file

In any command, it is possible to read some or all options and parameter from a file. The syntax is "@filename" where *filename* is a text file containing options and parameters.

In the text file, each line must contain exactly one item (option name, option value or parameter).

Sample command:

```
tsp -v @dvb.txt -P until --seconds 20 -P analyze -o out.txt -O drop
```

The file *dvb.txt* contains a list of command line items, one per line. The content of the file *dvb.txt* exactly replaces the expression "@dvb.txt".

Sample content of this file:

```
-I
dvb
--frequency
12,169,000,000
--symbol-rate
27,500,000
--fec-inner
3/4
--polarity
horizontal
--delivery-system
DVB-S2
--modulation
8-PSK
```

Note that each line contains exactly one command line item. Spaces or special characters are not filtered or interpreted. Using that kind of command can be useful in several situations:

- When a custom application generates long and complicated TSDuck commands.
- When the options or parameters contain special characters, spaces or any other sequence which
  must be properly escaped with some shells, possibly differently between shells or operating
  systems.

Command line parameter redirections can be nested. When one line of such a text file contains a pattern "@filename", the second file is inserted here.

Finally, if a parameter really starts with a @ character (which can be possible in a service name for instance), use a double @ to indicate that this is a literal @ character and not a redirection.

Consider the following command:

```
tsp -v @dvb.txt -P zap @@home -O drop
```

This command reads parameters from the file *dvb.txt* to find the tuning options and extracts the service named "@home" (with one @). The double @ has been used to indicate that this is a literal @.

Version 3.22-1926 27 / 395



And since redirections can be nested, the initial @@ escape sequence can also be used inside text files containing parameters.

# 3.1.6 Default options from the TSDuck configuration file

It is possible to specify default command line options or alternate options in a global configuration file. This configuration file is specific per user. See Appendix A, page 331, for a complete reference of the TSDuck configuration file.

The rest of this chapter documents all TSDuck utilities, in alphabetical order.



# **tsanalyze**

#### **Transport Stream Analysis**

This utility analyzes a transport stream. It reports either a full analysis of the transport stream, services and PID's (either in human readable format or normalized format for automatic analysis) or selected individual information.

The output can include full synthetic analysis (options --\*-analysis), full normalized output (option -- normalized) or a simple list of values on one line (options --\*-list). The second and third type of options are useful to write automated scripts.

If output control options are specified, only the selected outputs are produced. If no such option is given, the default is:

```
--ts-analysis --service-analysis --pid-analysis --table-analysis
```

See also the *analyze* plugin for tsp for the equivalent tool in the context of tsp.

#### **Usage**

```
tsanalyze [options] [input-file]
```

#### Input file

MPEG transport stream, either a capture file or a pipe from a live stream. Must be a binary stream of 188-byte packets. If omitted, standard input is used.

#### **General purpose options**

#### -b value

#### --bitrate value

Specifies the bitrate of the transport stream in bits/second (based on 188-byte packets). By default, the bitrate is evaluated using the PCR in the transport stream. If no bitrate can be determined (no user-specified value, no PCR), the analysis will not report the bitrates of the individual services and PID's.

#### --format name

Specify the format of the input file. See section 2.1.2 for more details.

#### --no-pager

Do not send output through a pager process. By default, if the output device is a terminal, the output is paged. See 3.1.4 for more details.

#### **Analysis control options**

#### --atsc

Assume that the transport stream is an ATSC one.

ATSC streams are normally automatically detected from their signalization. This option is only useful when ATSC-related stuff are found in the TS before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --isdb

Assume that the transport stream is an ISDB one.

ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.

Version 3.22-1926 29 / 395



#### --japan

A synonym for --isdb --default-charset ARIB-STD-B24. See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

#### --suspect-max-consecutive value

Specifies the maximum number of consecutive *suspect* packets. The default value is 1. If set to zero, the suspect packet detection is disabled.

Suspect packets are TS packets which are technically correct but which may be suspected of being incorrect, resulting in analysis errors. Typically, in the middle of a suite of packets with uncorrectable binary errors, one packet may appear to have no such error while it has some errors in fact. To avoid adding this type of packets in the analysis, a packet is declared as *suspect* (and consequently ignored in the analysis) when:

- its PID is unknown (no other packet was found in this PID)
- it immediately follows a certain amount of packet containing errors (see option -- suspect-min-error-count)
- it immediately follows no more than the specified number consecutive suspect packets.

#### --suspect-min-error-count value

Specifies the minimum number of consecutive packets with errors before starting "suspect" packet detection. See also option --suspect-max-consecutive. The default value is 1. If set to zero, the suspect packet detection is disabled.

#### **Output control options**

#### --ts-analysis

Report global transport stream analysis.

#### --service-analysis

Report analysis for each service.

#### --pid-analysis

Report analysis for each PID.

#### --table-analysis

Report analysis for each table.

#### --error-analysis

Report analysis about detected errors.

#### --normalized

Complete report about the transport stream, services, PID's and tables in a normalized output format (see details below). This type of output is useful for automatic analysis in scripts.

#### --service-list

Report the list of all service ids.

### --pid-list

Report the list of all PID's.

#### --global-pid-list

Report the list of all global PID's, that is to say PID's which are not referenced by a specific service but are standard DVB PSI/SI PID's or are referenced by them. This include, for instance, PID's of the PAT, EMM's, EIT's, stuffing, etc.

#### --unreferenced-pid-list

Report the list of all unreferenced PID's, that is to say PID's which are neither referenced by a service nor known as or referenced by the standard DVB PSI/SI.

#### --service-pid-list value

Report the list of all PID's which are referenced by the specified service id.



#### --pes-pid-list

Report the list of all PID's which are declared as carrying PES packets (audio, video, subtitles, etc).

#### --title string

Display the specified string as title header.

#### --prefix string

For one-line displays (options --\*-list), prepend the specified string to all values. For instance, options --global --prefix -p outputs something like '-p 0 -p 1 -p 16', which is an acceptable option list for the tsp filter plugin.

#### -w --wide-display

Use a wider grid display with more information on each line.

### **Generic common command options**

The following options are implicitly defined in all commands.

```
--debug[=N]
```

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

#### --help

Display command help text.

#### --verbose

Produce verbose messages.

#### --version

Display the version number.

### Normalized output format

In normalized output, each line describes one object (service, PID, table, etc). The format of each line is:

```
type:name[=value]:...
```

The *type* identifies the kind of object which is described by the line. The *name* identifies a characteristics for the object with an optional *value*. There is no space characters. All integer values are in decimal format.

The normalized syntax can be used to search for specific objects with specific characteristics.

**Example:** The following sample command extracts the list of EMM PID's for the SafeAccess CAS. The object *type* is pid (at beginning of line) and the two selected characteristics are emm (no value) and cas with SafeAccess DVB-assigned CA\_system\_id value (0x4ADC, which is 19164 in decimal).

```
tsanalyze --normalize ... | \
grep '^pid:' | grep ':emm:' | grep ':cas=19164:' | \
sed -e 's/.*:pid=//' -e 's/:.*//'
```

Other more complex examples of automated scripts are available in chapter 5.

# Normalized object types

The list of *type*, at beginning of lines, is the following:

ts: Global transport stream description. There is always one single ts line.

global: Summary of global PID's, ie. not attached to a specific service. There is always one

single global line.

unreferenced: Summary of unreferenced PID's, ie. neither global nor attached to a specific service.

There is always one single unreferenced line.

service: Description of one service. There is one service line per service.

pid: Description of one PID. There is one pid line per PID.

Version 3.22-1926 31 / 395



table: Description of one table on one PID. There is one table line per unique table per

PID.

time: Time description, either from the TDT/TOT tables or from the running system.

### Normalized transport stream characteristics

The characteristics in ts: lines are:

:id=int: Optional. Transport stream id, when found.

:clearservices=int: Number of clear (not scrambled) services.

:scrambledservices=int: Number of scrambled services.

:pids=int: Number of PID's.

:clearpids=int: Number of clear (not scrambled) PID's.

:scrambledpids=int: Number of scrambled PID's.
:pcrpids=int: Number of PID's with PCR's.
:unreferencedpids=int: Number of unreferenced PID's.

:invalidsyncs=int: Number of TS packets with invalid synchronization byte. :transporterrors=int Number of TS packets with transport error indicator.

:suspectignored=int Number of suspect TS packets which were ignored in the analysis.

:bitrate=int:

Best value for transport stream bitrate in b/s.
:bitrate204=int:

Same as previous, based on 204-byte packets.

:userbitrate=int: User-specified value for transport stream bitrate in b/s. Zero if none.

When used within *tsp* plugin, the user-specified bitrate comes from

previous plugins in the chain.

:userbitrate204=int: Same as previous, based on 204-byte packets.

:pcrbitrate=int: Estimated transport stream bitrate in b/s, based on PCR analysis. Zero if

unable to analyze PCR (no or not enough PCR, too many

discountinuities, etc.)

:pcrbitrate204=int: Same as previous, based on 204-byte packets.

:duration=int: Duration of transmission in seconds, based on TS bitrate.

:country=name: Optional. First region name in TOT.

### Normalized global and unreferenced PID's summary characteristics

The characteristics in global: and unreferenced: lines are:

:pids=int: Total number of global or unreferenced PID's.

:clearpids=int: Number of clear (not scrambled) global or unreferenced PID's.

:scrambledpids=int: Number of scrambled global or unreferenced PID's.

:packets=int: Total number of TS packets in global or unreferenced PID's.

:bitrate=int: Total bitrate of global or unreferenced PID's. :bitrate204=int: Same as previous, based on 204-byte packets.

:access=type: Value is scrambled if there is at least one scrambled PID in the category

and clear otherwise.

:pidlist=int,int,...: List of global or unreferenced PID's.

#### Normalized service characteristics

The characteristics in service: lines are:



:id=int: Service id.

:tsid=int: Transport stream id.
:orignetwid=int: Original network id.

:servtype=int: Service type.

:access=type: Value is scrambled if there is at least one scrambled PID in the service

and clear otherwise.

:pids=int: Number of PID's in the service. Note that ECM PID's are also included.

:clearpids=int: Number of clear (not scrambled) PID's in the service.

:scrambledpids=int: Number of scrambled PID's in the service.
:packets=int: Total number of TS packets in the service.

:bitrate=int: Total bitrate of the service in b/s.

:bitrate204=int: Same as previous, based on 204-byte packets.

:ssu: Optional. Indicate that the service carries a System Software Update PID.
:t2mi: Optional. Indicate that the service carries a T2-MI (DVB-T2 Modulator

Interface) PID.

:pmtpid=int: Optional. PID of the service's PMT.

:pcrpid=int: Optional. PCR PID of the service, as declared in the PMT.

:pidlist=int,int,...: List of PID's in the service.
:provider=name: Service provider name.

:name=name Service name. Note that this is always the last item in the line. The value is

not terminated by a colon (':'). So, if a colon is present, it is part of the

service name

#### Normalized PID characteristics

The characteristics in pid: lines are:

:pid=int: PID number.

:pmt: Optional. Indicate that this is a PMT PID.:ecm: Optional. Indicate that this is an ECM PID.:emm: Optional. Indicate that this is an EMM PID.

:cas=int: Optional. Related *CA system id* for ECM or EMM PID's.

:operator=int: Optional. Related CA system operator id, when applicable, for ECM or

EMM PID's.

:access=type: Value is scrambled if there is at least one scrambled packet in the PID

and clear otherwise.

:cryptoperiod=int: Optional. Average crypto-period duration in seconds for scrambled

PID's, when it can be evaluated.

:streamid=int: Optional. PES stream id in PES packet headers when the PID carries PES

packets and all PES packets have the same *stream\_id*.

:audio: Optional. Indicate that this is an audio PID.:video: Optional. Indicate that this is a video PID.

:language=name: Optional. Indicate the language for the PID. Can be found on audio or

subtitles PID's.

:servcount=int: Number of services which reference this PID.:unreferenced: Optional. Indicate that this is an unreferenced PID.

:global: Optional. Indicate that this is a global PID.

:servlist=int,int,...: Optional. List of service\_id which reference this PID.

:ssuoui=int,int,...: Optional. List of manufacturers OUI for System Software Update data

Version 3.22-1926 33 / 395



PID's.

:t2mi: Optional. Indicate that the PID carries a T2-MI stream. :plp=int,int,...: Optional. List of T2-MI PLP (Physical Layer Pipe) id.

:bitrate=int: Bitrate for this PID in b/s.

:bitrate204=int: Same as previous, based on 204-byte packets.

:packets=int: Total number of TS packets in this PID.

:clear=int: Number of clear (not scrambled) TS packets in this PID.

:scrambled=int: Number of scrambled TS packets in this PID.

:af=int: Number of TS packets with adaptation field in this PID.

:pcr=int: Number of TS packets with PCR in this PID.
:discontinuities=int: Number of discontinuities in this PID.

:duplicated=int: Number of duplicated TS packets in this PID.

:invalidscrambling=int: Number of TS packets in this PID with invalid scrambling control value.

:pes=int: Optional. Number of PES packets, for PID's carrying PES.

:invalidpesprefix=int: Optional. Number of invalid PES prefix, for PID's carrying PES.

:unitstart=int: Optional. Number of PUSI (payload unit start indicator), for PID's not

carrying PES.

:description=string Human-readable description of this PID. Note that this is always the last

item in the line. The value is not terminated by a colon (':'). So, if a colon

is present, it is part of the description.

#### Normalized table and sections characteristics

The characteristics in table: lines are:

:pid=int: PID number on which the table is found.

:tid=int: Table id.

:tidext=int: Optional. Table id extension, for long sections only.

:tables=int: Total number of occurences of the table. :sections=int: Total number of sections for this table.

:repetitionms=int: Optional. Average repetition rate in milliseconds (can be computed only

if the transport stream bitrate is known).

:minrepetitionms=int: Optional. Minimum repetition rate in milliseconds (can be computed only

if the transport stream bitrate is known).

:maxrepetitionms=int: Optional. Maximum repetition rate in milliseconds (can be computed only

if the transport stream bitrate is known).

:repetitionpkt=int: Average repetition rate in TS packets interval.
:minrepetitionpkt=int: Minimum repetition rate in TS packets interval.
:maxrepetitionpkt=int: Maximum repetition rate in TS packets interval.

:firstversion=int: Optional. Version number of first occurrence of the table. For long

sections only.

:lastversion=int: Optional. Version number of last occurrence of the table. For long

sections only.

:versions=int, int,...: Optional. List of all version numbers of the table. For long sections only.

#### Normalized time characteristics

The characteristics in time: lines are:

:utc: Optional. The specified time is UTC.:local: Optional. The specified time is local time.



:tdt: Optional. The specified time is extracted from a TDT.:tot: Optional. The specified time is extracted from a TOT.

:system: Optional. The specified time is an operating system time, not extracted

from the transport stream.

:first: Optional. The specified time is the first one in its category (first TDT or

TOT, system time of first packet).

:last: Optional. The specified time is the last one in its category (last TDT or TOT,

system time of last packet).

:date=<u>dd/mm/yyyy</u>: Date part of the time, example: "24/11/2008".

:time= $\underline{hh}$ h $\underline{mm}$ m $\underline{ss}$ s: Hour, minute and second part of time, example: "14h12m45s".

:secondsince2000=int: Number of seconds since 1st January 2000. Can be used to compute

duration, to compare time values, etc.

:country=name: Optional. First region name in TOT, if the time comes from a TOT.

Version 3.22-1926 35 / 395



# **#**tsbitrate

#### **Bitrate evaluation from PCR**

This utility evaluates the original bitrate of a transport stream based on an analysis of the PCR's (Program Clock Reference timestamps) and the interval between them. This is especially useful for captured files where the transmission bitrate information is lost.

#### **Usage**

```
tsbitrate [options] [input-file]
```

#### Input file

MPEG transport stream, either a capture file or a pipe from a live stream. Must be a binary stream of 188-byte packets. If omitted, standard input is used.

#### **Options**

-a

#### --all

Analyze all packets in the input file. By default, stop analysis when enough PCR information has been collected.

-d

#### --dts

Use DTS (Decoding Time Stamps) from video PID's instead of PCR (Program Clock Reference) from the transport layer.

#### --format name

Specify the format of the input file. See section 2.1.2 for more details.

-f

#### --full

Full analysis. The file is entirely analyzed (as with --all) and the final report includes a complete per PID bitrate analysis.

-i

#### --ignore-errors

Ignore transport stream errors such as discontinuities.

When errors are not ignored (the default), the bitrate of the original stream (before corruptions) is evaluated. When errors are ignored, the bitrate of the received stream is evaluated, missing packets being considered as non-existent.

#### --min-pcr value

Stop analysis when that number of PCR's are read from the required minimum number of PID's (default: stop after 64 PCR's on 1 PID).

#### --min-pid value

Minimum number of PID to get PCR's from (default: stop after 64 PCR's on 1 PID).

·v

#### --value-only

Display only the bitrate value, in bits/seconds, based on 188-byte packets. Useful to reuse the value in command lines.

#### **Generic common command options**

The following options are implicitly defined in all commands.

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).



# --help

Display command help text.

# --verbose

Produce verbose messages.

# --version

Display the version number.

Version 3.22-1926 37 / 395



# **tscharset**

# Test tool for DVB and ARIB character sets

This utility performs manual string encoding and decoding using various DVB and ARIB character sets. It can be used to evaluate the validity of conversions.

By default, the converted data is displayed on one line. With the --verbose option, more details are displayed such as the string in UTF-8 or UTF-16 format.

## Usage

tscharset [options]

## **Options**

- c

### --c-style

Output binary data in C/C++ syntax, using 0x prefix.

The result can be easily copied into C/C++ source code.

-d hexa-digits

## --decode hexa-digits

Decode the specified binary data according to the default character set.

The encoded data shall be represented as binary digits. Spaces are ignored.

#### --default-charset name

Specify the character set to use when encoding or decoding strings.

By default, standard DVB encoding is used. See section 2.3 for more details.

-e "string"

### --encode "string"

Encode the specified string according to the default character set.

See also options --from-utf-8 and --from-utf-16.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

-6

#### --from-utf-16

With --encode, specify that the parameter value is a suite of binary digits representing the string in UTF-16 format. There must be an even number of bytes.

-8

#### --from-utf-8

With --encode, specify that the parameter value is a suite of binary digits representing the string in UTF-8 format.

# --japan

A synonym for --default-charset ARIB-STD-B24. See section 2.3 for more details.

-1

## --list-charsets

List all known character set names

-o file-name

# --output file-name

Output file name. By default, use standard output.

#### --to-utf-16

With --decode, display an hexadecimal representation of the decoded string in UTF-16 format.



With --verbose, this option is redundant because the string is already displayed in plain form and in UTF-16 representation.

# --to-utf-8

With --decode, display an hexadecimal representation of the decoded string in UTF-8 format.

With --verbose, use UTF-8 instead of UTF-16 for the alternate representation of the string.

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

# --help

Display command help text.

# --verbose

Produce verbose messages.

### --version

Display the version number.

Version 3.22-1926 39 / 395



# **tscmp**

# Transport stream files comparison

This utility compares the binary content of two transport stream files. Selected fields may be omitted in the comparison to allow comparing files which went through different PID remapping or resynchronization process.

# **Usage**

```
tscmp [options] filename-1 filename-2
```

## **Input files**

MPEG transport stream files to be compared.

# **Options**

# --buffered-packets value

Specifies the files input buffer size in TS packets. The default is 10,000 TS packets.

# -b value

## --byte-offset value

Start reading the files at the specified byte offset (default: zero).

# --cc-ignore

Ignore continuity counters when comparing packets. Useful if one file has been resynchronized.

- 0

#### --continue

Continue the comparison up to the end of files. By default, stop after the first differing packet.

-d

## --dump

Dump the content of all differing packets. Also separately dump the differing area within the packets.

#### -f name

# --format name

Specify the format of the input files. See section 2.1.2 for more details.

By default, the format of each input file is automatically detected and can be different from one file to another. When the option --format is specified, the two input files must have the same format.

-n

#### --normalized

Report in a normalized output format (useful for automatic analysis).

# -p value

# --packet-offset value

Start reading the files at the specified TS packet (default: zero).

## --payload-only

Compare only the payload of the packets, ignore header and adaptation field.

# --pcr-ignore

Ignore PCR and OPCR when comparing packets. Useful if one file has been resynchronized.

#### --pid-ignore

Ignore PID value when comparing packets. Useful if one file has gone through a remapping process.



-q

### --quiet

Do not output any message. The process simply terminates with a success status if the files are identical and a failure status if they differ.

\_ c

#### --subset

Specifies that the second file is a subset of the first one. This means that the second file is expected to be identical to the first one, except that some packets may be missing. When a difference is found, the first file is read ahead until a matching packet is found. Without this option, missing packets in the second file cause all the rest of the file to be considered as different.

See also --threshold-diff.

#### -t value

# --threshold-diff value

When used with --subset, this value specifies the maximum number of differing bytes in packets to declare them equal. When two packets have more differing bytes than this threshold, the packets are reported as different and the first file is read ahead. The default is zero, which means that two packets must be strictly identical to declare them equal.

If you find this explanation unclear, try it with a second file which contains both missing and corrupted packets...

# **Generic common command options**

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

# --help

Display command help text.

## --verbose

Produce verbose messages.

## --version

Display the version number.

Version 3.22-1926 41 / 395



# **tsdate**

# **Date and Time Extraction**

This utility extracts date and time information from s transport stream, namely the TDT (Time and Data Table) and the TOT (Time Offset Utility).

# **Usage**

```
tsdate [options] [input-file]
```

# Input file

MPEG transport stream, either a capture file or a pipe from a live stream. Must be a binary stream of 188-byte packets. If omited, standard input is used.

# **Options**

-a

### --all

Report all TDT/TOT tables (default: report only the first table of each type).

#### -f name

### --format name

Specify the format of the input file. See section 2.1.2 for more details.

### --notdt

Ignore Time & Date Table (TDT).

#### --notot

Ignore Time Offset Table (TOT).

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

#### --help

Display command help text.

### --verbose

Produce verbose messages.

#### --version

Display the version number.



# **tsdektec**

#### **Dektec Device Control**

This utility controls Dektec devices, which include input and / or output DVB-ASI devices, QPSK or QAM modulators (see [31]).

## **Usage**

```
tsdektec [options] [device]
```

#### **Device**

Device index, from 0 to N-1 (with N being the number of Dektec devices in the system). The default is 0. Use option --list-all (or -a) to have a complete list of devices in the system.

# **Options**

-a --list-all

List all Dektec devices available on the system.

- -i port-number
- --input port-number

Set the specified port in input mode. This applies to bidirectional ports which can be either set in input or output mode. The port number of each channel can be seen using the command "tsdektec -av".

- -1 state
- --led state

Set the state of the LED on the rear panel. Useful to identify a Dektec device when more than one is present. The state is one of "off", "green", "red", "yellow", "blue", "hardware". See also option --wait (the led state is automatically returned to "hardware" after exit).

-n

#### --normalized

With --all, list the Dektec devices in a normalized output format (useful for automatic analysis).

- -o port-number
- --output port-number

Set the specified port in output mode. This applies to bidirectional ports which can be either set in input or output mode. The port number of each channel can be seen using the command "tsdektec -av".

- -p value
- --power-mode value

On DTU-315 USB modulators, set the power mode to the specified value.

Must be one of "high-quality", "low-power".

-r

#### --reset

Reset the device.

- -w seconds
- --wait seconds

Wait the specified number of seconds before exiting. The default if 5 seconds if option --led is specified and 0 otherwise.

# **Generic common command options**

The following options are implicitly defined in all commands.

Version 3.22-1926 43 / 395



## --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

#### --help

Display command help text.

-v

#### --verbose

Produce verbose messages.

#### --version

Display the version number.

# Normalized output format

In normalized output, each line describes one *object* (driver, device, channel, etc). The format of each line is:

```
type:name[=value]:...
```

The *type* identifies the kind of object which is described by the line. The *name* identifies a characteristics for the object with an optional *value*. There is no space characters. All integer values are in decimal format.

The normalized syntax can be used to search for specific objects with specific characteristics. See also the description of the command *tsanalyze* for another example of normalized output.

# Normalized object types

The list of *type*, at beginning of lines, is the following:

dtapi: Description of the Dektec runtime library ("DTAPI"). There is always one single dtapi line.

driver: Description of one type of Dektec device driver.

device: Description of one Dektec device.

channel: Description of one channel inside a Dektec device.

# **Normalized DTAPI characteristics**

The characteristics in dtapi: lines are:

:version=string: Version of the DTAPI.

## Normalized driver characteristics

The characteristics in driver: lines are:

:pci: This is a PCI driver (Dta1xx)
:usb: This is a USB driver (Dtu2xx)

:version=string: Version of the driver.

#### Normalized device characteristics

The characteristics in device: lines are:

:address=int: USB address.
:bus=int: PCI bus number.
:device=int: Device index.
:device-id=int: Device id

:fw-variant=int: Firmware variant.
:fw-version=int: Firmware version.
:model=string: Device model name.
:nb-input=int: Count of input ports.
:nb-output=int: Count of output ports.



:serial=int: Serial number.

:slot=int: PCI slot number in the PCI bus.

:subsys-id=int: Subsystem id

:subsys-vendor- Subsystem vendor id

id=int:

:usb: This is a USB device.

:vendor-id=int: Vendorid

:vpd-bo=string: Bitrate offset (from Vital Product Data area):vpd-cl=string: Customer id (from Vital Product Data area)

:vpd-ec=string: Engineering change level (from Vital Product Data area)

:vpd-id=string: Device description (from Vital Product Data area)
 :vpd-mn=string: Manufacture id (from Vital Product Data area)
 :vpd-pd=string: Production date (from Vital Product Data area)
 :vpd-pn=string: Part number (from Vital Product Data area)
 :vpd-sn=string: Serial number (from Vital Product Data area)
 :vpd-xt=string: Crystal stability (from Vital Product Data area)

### Normalized channel characteristics

The characteristics in channel: lines are:

:access-downconverted: Access to downconverted signal.

:adjust-level: Adjustable level

:asi: This is a DVB/ASI port.

:asi-raw-10bit: Raw 10-bit ASI mode available.

:atsc: ATSC modulator.

:cmmb: CMMB modulator.

:dedicated-clock-input: Dedicated clock input available.

:dedicated-clock-input- Dedicated clock input available, can be divided by providing a

ratio: ratio.

:device=int: Device index of the device containing the channel.

:diversity: Diversity mode available.

:double-buffer: This is a double-buffered device.

:dtmb: DTMB modulator.:dvb-c: DVB-C modulator.:dvb-c2: DVB-C2 modulator.

:dvb-raw-10bit: DVB 10-bit raw mode available.

:dvb-s: DVB-S modulator.
:dvb-s2: DVB-S2 modulator.
:dvb-t: DVB-T modulator.
:dvb-t2: DVB-T2 modulator.
:dvb-t2-mi: DVB-T2-MI modulator.

Version 3.22-1926 45 / 395



:failsafe: Failsafe
:if-output: IF output
:ip=string: IP address

:io-clock-select: I/O clock selection available.

:io-config: I/O standard and mode configuration available.

:io-rate-select: TS rate clock selection available.

:iq-output: Digital IQ output.

:iq-samples: Direct I/Q samples available.

:isdb-s: ISDB-S modulator. :isdb-t: ISDB-T modulator.

:lband: L-Band

:lock-io-rate: Lock output to input TS rate available.

:loop-through: Loop-through available.
:lvds1: SPI LVDS1 available.
:lvds2: SPI LVDS2 available.
:lvtt1: SPI LVTTL available.

:mac=string: MAC address

:modulator: This is a modulator port.

:port=int: Port number.
:qam: QAM modulator.

: qam-a:QAM-A (DVB-C) modulator.: qam-b:QAM-B (USA) modulator.: qam-c:QAM-C (Japan) modulator.

:shared-input: Shared antenna input available.

:sdi: This is an SDI port.

:sdi-time-stamp: SDI frames time-stamping available.

:sdi-time-stamp-64: SDI frames 64-bit time-stamping available.

:snr-setting: SNR setting available.:spi: This is an SPI port.

:transmit-on-time-stamp: Transmission on time-stamp available.

:transparent: Transparent mode available.:ts-over-ip: This an IP port, for TS over IP.

:uhf: UHF modulator.
:vhf: VHF modulator.

:virtual-stream: Virtual stream channel.



# **tsdump**

# **Dump TS packets**

This utility dumps the contents of MPEG transport stream packets.

## Usage

```
tsdump [options] [input-file ...]
```

## **Input files**

Any number of MPEG transport stream files. If omitted, the standard input is used (can be a pipe from a live stream).

Note that if the option --raw is used, the input files can be any type of file, not necessarily TS files.

# **Options**

-a

## --ascii

Include ASCII dump in addition to hexadecimal.

-b

# --binary

Include binary dump in addition to hexadecimal.

- c

# --c-style

Same as --raw-dump (no interpretation of packets) but dump the bytes in C-language style, eg. "0x01, 0x02, "instead of "01 02". Useful to include *tsdump* output as data in a C source file.

-f name

#### --format name

Specify the format of the input files. See section 2.1.2 for more details.

By default, the format of each input file is automatically detected and can be different from one file to another. When the option --format is specified, all input files must have the same format.

This option is ignored with --raw-file: the complete raw structure of the file is dumped.

-h

# --headers-only

Dump packet headers only, not payload.

-1

# --log

Display a short one-line log of each packet instead of full dump.

## --log-size value

With option --log, specify how many bytes are displayed in each packet.

The default is 188 bytes (complete packet).

-m value

## --max-packets value

Maximum number of packets to dump per file.

-n

#### --nibble

Same as --binary but add separator between 4-bit nibbles.

## --no-headers

Do not display header information.

Version 3.22-1926 47 / 395



#### --no-pager

Do not send output through a pager process. By default, if the output device is a terminal, the output is paged. See 3.1.4 for more details.

#### -0

### --offset

Display offset from start of packet with hexadecimal dump.

# --payload

Hexadecimal dump of TS payload only, skip TS header.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Dump only packets with these PID values. Several --pid options may be specified.

By default, all packets are displayed.

#### -r

#### --raw-file

Raw dump of file, do not interpret as TS packets. With this option, tsdump simply acts as an hexa / ASCII file dumper.

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

## --help

Display command help text.

#### -١

# --verbose

Produce verbose messages.

# --version

Display the version number.



# **tsecmg**

# Minimal generic DVB SimulCrypt-compliant ECMG

This utility behaves as a DVB SimulCrypt compliant ECMG. It can be used to debug system integration, replacing any standard ECM Generator. Most DVB SimulCrypt parameters can be adjusted from the command line to test the behaviour of an SCS.

This fake ECMG can be used with the *tsp* plugin named *scrambler* to build an end-to-end demo of a DVB SimulCrypt system.

This fake ECMG accepts all <code>Super\_CAS\_Id</code> values. All ECM requests are instantaneously responded. The returned ECM is a fake one. The fake ECM's are TLV messages containing the access criteria and the control words as sent by the SCS in clear format.

**Warning:** It is obvious that this ECMG shall never be used on a production system since it returns ECM's with clear control words.

#### **Usage**

tsecmg [options]

### **Options**

#### --ac-delay-start value

This option sets the DVB SimulCrypt option *AC\_delay\_start*, in milliseconds. By default, use the same value as --delay-start.

#### --ac-delay-stop value

This option sets the DVB SimulCrypt option *AC\_delay\_stop*, in milliseconds. By default, use the same value as --delay-stop.

#### --comp-time value

This option specifies the computation time of an ECM. The clear ECM's which are generated by this ECMG take no time to generate. But, in order to emulate the behaviour of a real ECMG, this parameter forces a delay of the specified duration before returning an ECM.

#### -c value

# --cw-per-ecm value

Specify the required number of control words per ECM. This option sets the DVB SimulCrypt option  $CW\_per\_msg$ . It also set  $lead\_CW$  to  $CW\_per\_msg$  - 1. By default, use 2 control words per ECM, the current one and next one.

# --delay-start value

This option sets the DVB SimulCrypt option *delay\_start*, in milliseconds. Default: 200 ms.

## --delay-stop value

This option sets the DVB SimulCrypt option *delay\_stop*, in milliseconds. Default: 200 ms.

# --ecmg-scs-version value

Specifies the version of the ECMG  $\Leftrightarrow$  SCS DVB SimulCrypt protocol. Valid values are 2 and 3. The default is 2.

## --log-data[=level]

Same as --log-protocol but applies to *CW\_provision* and *ECM\_response* messages only.

To debug the session management without being flooded by data messages, use --log-protocol=info --log-data=debug.

# --log-protocol[=level]

Log all ECMG  $\Leftrightarrow$  SCS protocol messages using the specified level. If the option is not present, the messages are logged at debug level only. If the option is present without value, the messages are logged at info level. A level can be a numerical debug level or any of the following: fatal, severe, error, warning, info, verbose, debug.

Version 3.22-1926 49 / 395



#### --max-comp-time value

Specify the maximum ECM computation time in milliseconds. This option sets the DVB SimulCrypt option *max\_comp\_time*. By default, use the value of --comp-time (which is itself zero by default) plus 100 ms.

#### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

-0

#### --once

Accept only one client and exit at the end of the session.

-p value

### --port value

TCP port number of the ECMG server. Default: 2222.

-r value

#### --repetition value

This option sets the DVB SimulCrypt option *ECM\_rep\_period*, the requested repetition period of ECM's, in milliseconds. Default: 100 ms.

-s

## --section-mode

Return ECM's in section format. This option sets the DVB SimulCrypt parameter <code>section\_TSpkt\_flag</code> to zero. By default, ECM's are returned in TS packet format.

## --transition-delay-start value

This option sets the DVB SimulCrypt option *transition\_delay\_start*, in milliseconds. Default: -500 ms.

# --transition-delay-stop value

This option sets the DVB SimulCrypt option *transition\_delay\_stop*, in milliseconds. Default: 0 ms.

## **Generic common command options**

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

# --help

Display command help text.

- v

#### --verbose

Produce verbose messages.

#### --version

Display the version number.



# **tsemmg**

# Minimal generic DVB SimulCrypt-compliant EMMG

This utility behaves as a DVB SimulCrypt compliant EMMG. It can be used to debug system integration, replacing any standard EMM Generator. Most DVB SimulCrypt parameters can be adjusted from the command line to test the behaviour of a MUX.

This fake EMMG can be used with the *tsp* plugin named *datainject* to build an end-to-end demo of a DVB SimulCrypt system.

# **Usage**

```
tsemmg [options] [section-file ...]
```

#### **Parameters**

The parameters are files containing sections in binary or XML format. Several files can be specified. All sections are loaded and injected in the MUX using the EMMG/PDG  $\Leftrightarrow$  MUX protocol. The list of all sections from all files is cycled as long as *tsemmg* is running. The sections can be of any type, not only EMM's.

By default, when no input file is specified, this EMMG generates fake EMM sections of a fixed size and all payload bytes contain the same value. The value of the fake EMM  $table\_id$  and the value of the payload bytes are incremented in each new section. See options --emm-size, --emm-min-table-id and --emm-max-table-id.

# **Options**

- -b value
- --bandwidth value

Specify the bandwidth of the data which are sent to the MUX in kilobits per second.

Default: 100 kb/s.

# --bytes-per-send value

Specify the average size in bytes of each data provision. The exact value depends on sections and packets sizes. Default: 500 bytes.

#### --channel-id value

This option sets the DVB SimulCrypt parameter *data\_channel\_id*. Default: 1.

- -c value
- --client-id value

This option sets the DVB SimulCrypt parameter *client\_id*. Default: 0.

For EMM injection, the most signification 16 bits shall be the *CA\_system\_id* of the corresponding CAS.

#### --cycles value

Inject the sections from the input files the specified number of times. By default, inject sections indefinitely.

- -d value
- --data-id value

This option sets the DVB SimulCrypt parameter data\_id. Default: 0.

#### --emm-max-table-id value

Specify the maximum *table\_id* of the automatically generated fake EMM's. The default is 0x8F.

When generating fake EMM's, the table ids are cycled from the minimum to the maximum value.

# --emm-min-table-id value

Specify the minimum table id of the automatically generated fake EMM's. The default is 0x82.

Version 3.22-1926 51 / 395



#### --emm-size value

Specify the size in bytes of the automatically generated fake EMM's. The default is 100 bytes.

### --emmg-mux-version value

Specify the version of the EMMG/PDG ⇔ MUX DVB SimulCrypt protocol.

Valid values are 1 to 5. The default is 2.

-i

# --ignore-allocated

Ignore the allocated bandwidth as returned by the MUX. Continue to send data at the planned bandwidth, even if it is higher than the allocated bandwidth.

# --log-data[=level]

Same as --log-protocol but applies to *data\_provision* messages only.

To debug the session management without being flooded by data messages, use --log-protocol=info --log-data=debug.

## --log-protocol[=level]

Log all EMMG/PDG  $\Leftrightarrow$  MUX protocol messages using the specified level. If the option is not present, the messages are logged at debug level only. If the option is present without value, the messages are logged at info level. A level can be a numerical debug level or any of the following: fatal, severe, error, warning, info, verbose, debug.

### --max-bytes value

Stop after sending the specified number of bytes. By default, send data indefinitely.

#### -m address:port

#### --mux address:port

Specify the IP address (or host name) and TCP port of the MUX.

This is a required parameter, there is no default.

## --requested-bandwidth value

This option sets the DVB SimulCrypt parameter *bandwidth* in the *stream\_BW\_request* message. The value is in kilobits per second. The default is the value of the --bandwidth option.

Specifying distinct values for --bandwidth and --requested-bandwidth can be used for testing the behaviour of a MUX.

-s

## --section-mode

Send EMM's or data in section format. This option sets the DVB SimulCrypt parameter *section\_TSpkt\_flag* to zero. By default, EMM's and data are sent in TS packet format.

#### --stream-id value

This option sets the DVB SimulCrypt parameter *data\_stream\_id*. Default: 1.

#### -t value

# --type value

This option sets the DVB SimulCrypt parameter *data\_type*. Default: 0 (EMM). In addition to integer values, the following names can be used: emm (0), private-data (1) and ecm (2).

#### -u [address:]port

# --udp [address:]port

Specify that the *data\_provision* messages shall be sent using UDP.

By default, the *data\_provision* messages are sent over TCP using the same TCP connection as the management commands.

If the IP address (or host name) is not specified, use the same IP address as the --mux option. The port number is required, even if it is the same as the TCP port.

#### **Generic common command options**

The following options are implicitly defined in all commands.



# --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

# --help

Display command help text.

- v

# --verbose

Produce verbose messages.

# --version

Display the version number.

Version 3.22-1926 53 / 395



# **tsfixcc**

# **Fix Continuity Counters**

This utility fixes errors in the continuity counters (CC) in a transport stream file. If packets are missing (non continuous CC), the CC in all subsequent packets in the affected PID's are modified to remove the discontinuity.

If the file needs to be repeatedly played, tsfixcc can also add empty packets at the end of the file to fill the discontinuities between the end and the beginning of the file when the playback wraps to the beginning.

## **Usage**

```
tsfixcc [options] file
```

#### File

MPEG transport stream. Must be a binary stream of 188-byte packets. This file must be a regular file (cannot be a pipe). It is open in read/write mode and is directly updated.

# **Options**

- C

#### --circular

Enforce continuity when the file is played repeatedly. Add empty packets, if necessary, on each PID so that the continuity is preserved between end and beginning of file.

Note, however, that this method is not compliant with the MPEG-2 Transport Stream standard as defined in [1]. The standard specifies that the continuity counter shall not be incremented on packets without payload.

-n

#### --noaction

Display what should be performed but do not modify the file.

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

## --help

Display command help text.

-v

# --verbose

Produce verbose messages.

## --version

Display the version number.



# **tsftrunc**

# **Transport Stream File Truncation**

This utility truncates a captured transport stream file to remove trailing incomplete packets.

See also the utility tsresync for a more powerful way to recover corrupted transport stream files.

# **Usage**

```
tsftrunc [options] file ...
```

#### **Files**

MPEG transport stream files. They must be binary streams of 188-byte packets. The files must be regular files (cannot be pipes). They are open in read/write mode and are directly updated.

# **Options**

- -b value
- --byte value

Truncate the file at the next packet boundary after the specified size in bytes. Mutually exclusive with --packet.

\_ n

#### --noaction

Do not perform truncation, check mode only.

-p value

### --packet value

Index of first packet to truncate. If unspecified, all complete packets are kept in the file. Extraneous bytes at end of file (after last multiple of 188 bytes) are truncated.

-s value

## --size-of-packet value

Specify the TS packet size in bytes.

The default is 188 bytes. Alternate packet sizes are useful for M2TS or other TS file formats.

#### **Generic common command options**

The following options are implicitly defined in all commands.

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

#### --help

Display command help text.

-v

## --verbose

Produce verbose messages.

#### --version

Display the version number.

Version 3.22-1926 55 / 395



# **tsgenecm**

# Generate one ECM using any DVB SimulCrypt compliant ECMG

This command connects to a DVB SimulCrypt compliant ECMG and requests the generation of one ECM.

Restriction: The target ECMG shall support current or current/next control words in ECM, meaning CW per msg = 1 or 2 and lead CW = 0 or 1.

## **Usage**

```
tsgenecm [options] output-file
```

# **Output file**

Name of the binary output section file which receives the generated ECM.

# **Options**

- -a value
- --access-criteria value

Specifies the access criteria for the service as sent to the ECMG. The value must be a suite of hexadecimal digits.

--channel-id value

Specifies the DVB SimulCrypt *ECM\_channel\_id* for the ECMG (default: 1).

- -d seconds
- --cp-duration seconds

Specifies the crypto-period duration in seconds (default: 10 seconds).

--cp-number value

Crypto-period number (default: 0).

- -c value
- --cw-current value

Current control word (required). The value must be a suite of hexadecimal digits.

- -n value
- --cw-next value

Next control word (optional). The value must be a suite of hexadecimal digits.

- -i value
- --ecm-id value

Specifies the DVB SimulCrypt *ECM\_id* for the ECMG (default: 1).

- -e host:port
- --ecmg host:port

Specify an ECM Generator host name (or IP address) and TCP port.

-**v** value

#### --ecmg-scs-version value

Specifies the version of the ECMG <=> SCS DVB SimulCrypt protocol. Valid values are 2 and 3. The default is 2.

--log-data[=level]

Same as --log-protocol but applies to CW\_provision and ECM\_response messages only.

To debug the session management without being flooded by data messages, use --log-protocol=info --log-data=debug.

--log-protocol[=level]

Log all ECMG  $\Leftrightarrow$  SCS protocol messages using the specified level. If the option is not present, the messages are logged at debug level only. If the option is present without value, the messages are



logged at info level. A level can be a numerical debug level or any of the following: fatal, severe, error, warning, info, verbose, debug.

# --stream-id value

Specifies the DVB SimulCrypt ECM\_stream\_id for the ECMG (default: 1).

- -s value
- --super-cas-id value

Specify the DVB SimulCrypt Super\_CAS\_Id. This is required when --ecmg is specified.

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

# --help

Display command help text.

- V

# --verbose

Produce verbose messages.

# --version

Display the version number.

Version 3.22-1926 57 / 395



# **tshides**

# List HiDes modulator devices

This utility lists HiDes modulator devices and their characteristics.

## Usage

```
tshides [options]
```

# **Options**

- -a value
- --adapter value

Specify the HiDes adapter number to list. By default, list all HiDes devices.

Use --adapter or --device but not both.

- -b value
- --bandwidth value

Bandwidth in MHz with --gain-range.

The value must be one of 5, 6, 7, 8 (MHz). The default is 8 MHz.

- c

#### --count

Only display the number of devices, not their names or characteristics.

- -d "name"
- --device "name"

Specify the HiDes device name to list. By default, list all HiDes devices.

Use --adapter or --device but not both.

- -f value
- --frequency value

Frequency, in Hz, of the output carrier with --gain-range.

The default is the first UHF channel.

-g

# --gain-range

Display the allowed range of output gain for the specified device.

Usually, the allowed range of gain depends on the frequency and the bandwidth. This is why the gain range is not displayed with the other characteristics. Use the options --frequency and --bandwidth to display the corresponding gain range.

# **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

## --help

Display command help text.

- \/

# --verbose

Produce verbose messages.

## --version

Display the version number.



# **tslsdvb**

## List DVB receiver devices

This utility lists the DVB receiver devices in the system with their characteristics.

Despite the legacy "dvb" name, all tuner devices are listed, DVB, ISDB or ATSC, terrestrial, satellite or cable.

#### Usage

tslsdvb [options]

# **Options**

-a №

## --adapter N

Specify the  $N^{th}$  tuner device in the system, the first index being zero. This option can be used instead of device name.

On Linux systems, this means /dev/dvb/adapterN.

-d "name"

#### --device-name "name"

Specify the name of the DVB receiver device to use. The syntax of the device name depends on the operating system. See section 6.1.3, page 323, for more details on DVB receiver devices naming. By default, when no device name or adapter is specified, list all available receiver devices.

# Windows-specific options:

-1

#### --list-devices

Get a list of all tuner and receiver DirectShow filters, equivalent to --test list-devices.

## --receiver-name "name"

Specify the name of the DirectShow receiver filter to use.

By default, first try a direct connection from the tuner filter to the rest of the graph. Then, try all receiver filters and concatenate them all.

This option is used only when a specific device name or adapter number is specified. It is ignored when all devices are listed since distinct tuner filters may need distinct receiver filters.

# -t name

### --test name

Run a specific DirectShow test. Produce a very verbose output, for debug only. The names of the available tests are listed below.

none Do not run any test. This is the default.

list-devices Get a short list of all tuner and receiver DirectShow filters.

enumerate-devices Enumerate all DirectShow devices which are used with DVB tuners.

This test is useful to detect all devices which may not be recognized as

valid tuners by TSDuck.

tuning-spaces List all DirectShow tuning spaces which are installed in the system and

their compatibility with the various network providers.

bda-tuners List all BDA tuners and their compatibility with the various predefined

"network provider" filters.

### **Generic common command options**

The following options are implicitly defined in all commands.

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

Version 3.22-1926 59 / 395



# --help

Display command help text.

-v

# --verbose

Produce verbose messages.

# --version

Display the version number.





# **Transport Stream Processor**

The transport stream processor is a general-purpose packet processing framework.

It receives an MPEG Transport Stream from a user-specified input plugin, applies MPEG packet processing through several user-specified packet processor plugins and sends the processed stream to a user-specified output plugin.

All input, processors and output plugins are shared libraries (.so files on Linux, .dll files on Windows).

The following figure illustrates the structure of a tsp process using three packet processing plugins.

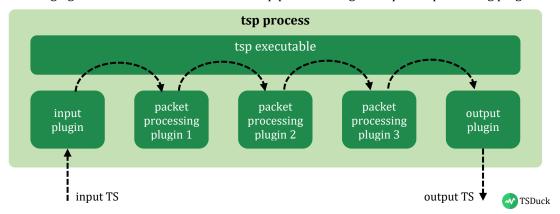


Figure 1: Transport stream processor diagram

This section describes the general syntax and usage of the tsp command. All plugins are documented in details, in alphabetical order, in chapter 4, page 107. The section 5.2 gives a few examples of tsp commands, both simple and complex examples.

## **Usage**

The general syntax of the *tsp* command is the following:

```
tsp [tsp-options] \
    [-I input-name [input-options]] \
    [-P processor-name [processor-options]] ... \
    [-0 output-name [output-options]]
```

All *tsp-options* must be placed on the command line before the input, packet processing and output plugin specifications. There must be at most one input and one output plugin. There may be any number of packet processing plugins. On the command line, the order of the packet processing plugins is significant: the TS packets are passed from one processor to the other in this order.

# Offline and real-time defaults

There are two main classes of usage for *tsp*, offline and real-time processing. Offline processing works on static data such as transport stream files without specific timing constraints. Real-time processing applies to streaming devices such as tuners, Dektec devices or IP streams.

In the *tsp* command and in many plugins, some command line options affect tuning and performances. Roughly, we have to find a balance between throughput and latency.

- To get a higher throughput, we must minimize the data copy and thread context switching operations. This is achieved using larger buffer sizes and letting plugins work on larger amounts of TS packets. This requires less CPU and provides better overall performances. But this also has the side effect of increasing the latency.
- To get a lower latency, we must basically do the opposite: work on smaller data chunks, pass data faster (more frequently) from plugin to plugin. The drawback is an increase of CPU requirement.

Version 3.22-1926 61 / 395



There is no unique choice. When working on offline files, increasing the throughput and reducing the CPU load is the right choice. But for streaming and real-time processing, reducing the latency is the priority.

To optimize the offline or real-time processing, many tuning options can be adjusted. While fine tuning is sometimes useful, the user mainly needs two sets of default options: offline or real-time.

By default, *tsp* and all plugins use the offline defaults, the tuning options which give good performances at the expense of a higher latency.

The real-time defaults are used without having to specify all individual options in two cases:

- The option --realtime is specified in the *tsp* command line.
- At least one plugin in the chain is designed to work in real-time.

In these two cases, *tsp* and all plugins use their real-time defaults (unless, of course, options are individually set).

The second condition is an intrinsic property of a plugin. Examples of "real-time" plugins include *dvb*, *dektec*, *ip*, *play* or *regulate*. These plugins are somehow designed to work on real-time streams. Their simple presence in the *tsp* command is sufficient to trigger the use of real-time defaults for all plugins. It is still possible to force the use of offline defaults using the *tsp* option --realtime=off, even if a real-time plugin is present.

# Rendering speed and transmission speed

With *tsp*, a stream has a *rendering* speed (the speed of the audio / video) and a *transmission* speed (the speed at which packets go through *tsp*).

As a general rule, the work *bitrate* refers to the rendering speed. So, when a plugin inserts data with a *bitrate of 100 kb/s* for instance, this means that the data will be received at this bitrate when the transport stream is played in real time (independently of the file processing speed, if the data insertion was previously performed on an offline file).

It is important to understand the differences between the two. Real-time streams, from broadcast or multicast, have identical transmission and rendering speeds because they are transmitted to watch TV. Files, on the other hand, have a very high transmission speed, typically the I/O speed of the disk, maybe 1 Gb/s or more on SSD.

Some plugins explicitly manipulate the rendering or transmission speed. The plugin *pcrbitrate*, for instance, is designed to evaluate the rendering speed based on embedded time stamps in the stream. The plugin *regulate*, on the other hand, is designed to alter the transmission speed.

Let's review some examples where these plugins should be used.

Consider that you have recorded a 6 Mb/s single program transport stream and you want to send it through UDP/IP to a remote media player. Using "tsp-I file", you read it and send it to "-0 ip". The effective reading speed of the file will be 500 M/b for instance. So, on a gigabit network, you send a 6 Mb/s video stream at 1 Gb/s, 166 times faster as it should be. Thus, a 15 minutes video is received in 5 seconds and the player displays almost nothing. In this case, you must use the plugin *regulate* between "-1 file" and "-0 ip". The plugin acts as a bottleneck and lets packets flow out at 6 Mb/s only.

But, when the source has the same transmission and rendering speeds (DVB tuner, IP source), the plugin *regulate* is useless. At best, it does nothing. At worst, it introduces undesirable artifacts.

There are also cases where the transmission speed regulation is done automatically. If the media player is a local application and is started using "-O play", tsp communicates with the player through a pipe. A pipe is a self-regulated communication mechanism. So, even if the input is a disk file with a high reading speed, using regulate is not necessary because the same role is played here by the pipe. The difference with the previous example is that UDP/IP is not a regulated communication channel, unlike pipes and TCP/IP.

# Bitrate propagation

At any point in the chain, all plugin have some knowledge of the transport stream bitrate, or *rendering* speed. Some plugins use that bitrate information, some others don't. The plugin *regulate* is a typical example. It uses the *rendering* speed as an information to lower the *transmission* speed.



As a general rule, *tsp* collects the input bitrate, either from the input plugin itself which extracts the bitrate from a hardware input device (this is the case for ASI cards for instance) or, if the input plugin is not able to report a bitrate, *tsp* automatically analyzes PCR's at the output of the input plugin and computes the corresponding bitrate.

Then, the bitrate is transmitted from plugin to plugin.

Some plugins may inadvertently propagate incorrect bitrates while some plugins may force a (correct) recomputation of the bitrate. To illustrate the first case, consider "-*I file ... -P zap ...*" using sample bitrate values. You read a complete 36 Mb/s input and *tsp* evaluates this bitrate. Then, "-*P zap*" extracts a 4 Mb/s service and removes everything else. But it does not recompute the transport stream bitrate. So, the propagated bitrate information is still 36 Mb/s. If this information is not used downstream in other plugins, we don't care. But if we use the bitrate information in "-*P regulate -O ip ...*", we will regulate at 36 Mb/s a stream which should be played at 4 Mb/s. This is why, in specific situations like this, we need to recompute the bitrate using "-*P pcrbitrate*" before "-*P regulate*".

# **Input time-stamps**

For each input packet, an *input time-stamp* is collected. When the source can provide its own time-stamps (RTP, SRT, M2TS file), this value is used. Otherwise, *tsp* uses the system time after the input plugin returns a bulk of packets. When an input plugin is able to generate its own input time-stamps, its documentation describes how this is accomplished.

The input time-stamps are propagated all along the chain of plugins. Some plugins may use them. For instance:

- The *pcrverify* plugin can use them as time reference.
- The *file* output plugin uses them to create files in M2TS format.

# Modifying, inserting and deleting packets

In the complete chain of processing, between the input and the output plugin, each TS packet goes through<sup>1</sup> all packet processing plugins, one after the other, in the order of the command line.

A packet processing plugin may read, modify or delete existing packets. **But it cannot add new packets**.

Roughly, each packet processing plugin has one of the following functions (or sometimes a combination of them):

- Analysis (read packets).
- Modification (modify existing packets).
- Removal (delete packets from the stream).
- Data injection (add new packets).

The last case cannot be directly implemented. To achieve data injection, a plugin usually "steals stuffing". Each time a new TS packet needs to be injected, a plugin waits for the next *null packet* (i.e. a packet in PID 0x1FFF) and replaces this null packet with the new packet to insert.

Consequently, the original amount of stuffing and its distribution in a stream directly influences the insertion profile of new packets. Specifically, it is not possible to add more data than the stuffing bitrate. Moreover, precise timing cannot be always achieved. When data need to be inserted at a given bitrate, the plugin tries to reach this average bitrate (provided that there is enough stuffing) but cannot guarantee a precise constant inter-packet distance.

In broadcast streams, where the modulation parameters impose a fixed bitrate, there is always some stuffing. With variable bitrate, simple-program transport streams for IP, there can be no stuffing at all.

What are the options when the original amount of stuffing is not sufficient to insert the required data? It depends on the requirements on the stream.

If the stream is targeted for broadcast, with a given target bitrate which cannot be changed, there is no other solution than removing existing data to make room for the new data. Some plugins such as *filter* or

Version 3.22-1926 63 / 395

-

 $<sup>^{1}</sup>$  In fact, a TS packet never moves. It is loaded in a large circular buffer and stays there. Each plugin uses a sliding window over the circular buffer and inspects or modifies packets without moving them.



svremove delete individual PID's or complete services. By default, the deleted packets are simply removed from the stream. But these plugins also have a --stuffing option which replaces deleted packets by stuffing instead of removing them. Thus, you can increase the stuffing bitrate without altering the global transport stream bitrate.

If there is no requirement on the global bitrate, it is possible to insert artificial stuffing at input level using the global *tsp* option --add-input-stuffing. The option adds a given number of null packets after a given number of input packets (for instance, add 1 null packet every 15 input packets). The parameters influence the amount and distribution of the artificial stuffing. Do not be afraid of inserting too much stuffing. It is always possible to remove the stuffing in excess using "-*P filter -n -p 0x1FFF*" at the end of the chain, after all injection plugins.

# Merging and forking

As indicated above, *tsp* processes one single transport stream. However, specific plugins such as *merge* and *fork* respectively combine and duplicate transport streams. They are designed to route transport streams from and to other applications. When the "other" application is another instance of *tsp*, we can create complex processing graphs.

This is illustrated in the diagram below.

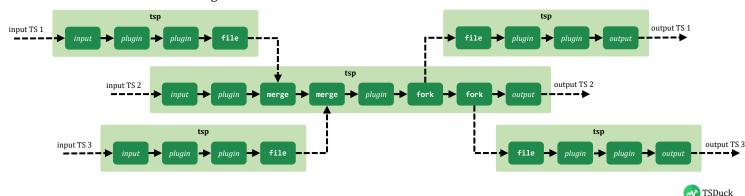


Figure 2: Merging and forking transport streams

# **Packet labelling**

Transport streams packets may receive one or more *label* from any packet processing plugin. A label is an integer value from 0 to 31, inclusive. A label remains attached to the packet all along the chain, from plugin to plugin. Later, it is possible to select packets with a label value or invoke a specific plugin only on packets having a given label.

The plugin *filter* has an option named --set-label to assign a label to the selected packets. Note that, with this option, the plugin *filter* does not drop unselected packets; it keeps all packets but assigns the specified label to the seleted packets.

All packet processing plugins accept the option --only-label which selects only the packets with a given label. Thus, only the packets with that label pass through the plugin. All other packets, without that label, are directly passed to the next plugin in the chain.

The following example illustrates the usage of labels. The first three plugins select different kinds of packets and assign a label value depending on the kind of packet. These *filter* plugins do not drop any packet, they just assign labels to some of them. Later, three other plugins are applied only to one of these labels. In this example, we consequently count packets with unit start indicator and scrambling control value 2 and 3, respectively.

```
tsp -I ... \
   -P filter --unit-start --set-label 2 \
   -P filter --scrambling 2 --set-label 10 \
   -P filter --scrambling 3 --set-label 11 \
   -P count --only-label 2 --total --tag unit \
   -P count --only-label 10 --total --tag scr2 \
   -P count --only-label 11 --total --tag scr3 \
   -0 ...
```



```
* count: unit: total: counted 5,311 packets out of 5,311
* count: scr2: total: counted 8,378 packets out of 8,378
* count: scr3: total: counted 7,439 packets out of 7,439
```

# **Global tsp options**

#### -a nullpkt/inpkt

## --add-input-stuffing nullpkt/inpkt

Specify that *nullpkt* null TS packets must be automatically inserted after every *inpkt* input TS packets. Both *nullpkt* and *inpkt* must be non-zero integer values. This option is useful to artificially increase the input bitrate by adding stuffing.

Example: the option "-a 14/24" adds 14 null packets every 24 input packets, effectively turning a 24 Mb/s input stream (terrestrial) into a 38 Mb/s stream (satellite).

# --add-start-stuffing count

Specify that *count* null TS packets must be automatically inserted at the start of the processing, before the first packet coming from the input plugin.

## --add-stop-stuffing count

Specify that *count* null TS packets must be automatically inserted at the end of the processing, after the last packet coming from the input plugin.

#### -b value

#### --bitrate value

Specify the input bitrate, in bits/seconds. By default, the input bitrate is provided by the input plugin or by analysis of the PCR's at the beginning of the input stream. If no or not enough PCR are found, the DTS from video PID's are used.

Use option --bitrate when you know precisely the input bitrate and you do not trust the input device, the PCR's or the DTS.

See also the plugin *pcrbitrate* for permanent recomputation of the bitrate based on PCR's or DTS.

## --bitrate-adjust-interval value

Specify the interval in seconds between bitrate adjustments, ie. when the output bitrate is adjusted to the input one. The default is 5 seconds. Some output processors ignore this setting. Typically, ASI or modulator devices use it, while file devices ignore it. This option is ignored if --bitrate is specified.

# --buffer-size-mb value

Specify the global buffer size in mega-bytes. This is the size of the buffer between the input and output devices. The default is 16 MB. Increasing the buffer size may improve the performance at the expense of increasing the overall latency (implicit time-shifting).

The value (in mega-bytes) can be decimal, for instance "--buffer-size-mb 0.5" but note that there is no good reason to decrease the buffer size below 1 MB.

See also the options --max-input-packets and --max-flushed-packets to adjust the latency without modifying the global buffer size.

## --control-local address

With --control-port, specify the IP address of the local interface on which to listen for control commands. It can be also a host name that translates to a local address.

By default, listen on all local interfaces.

# --control-port value

Specify the TCP port on which *tsp* listens for control commands.

If unspecified, no control commands are expected.

The control commands are sent using the command *tspcontrol*. See the documentation of this command for more details on control commands.

#### --control-reuse-port

With --control-port, set the reuse port socket option on the control TCP server port.

Version 3.22-1926 65 / 395



This option is not enabled by default to avoid accidentally running two identical *tsp* commands with the same control port.

## --control-source address

With --control-port, specify a remote IP address which is allowed to send control commands.

By default, as a security precaution, only the local host is allowed to connect.

Several --control-source options are allowed.

### --control-timeout milliseconds

With --control-port, specify the reception timeout in milliseconds for control commands. The default timeout is 5000 ms.

-i

## --ignore-joint-termination

Ignore all --joint-termination options in plugins.

Some plugins have termination conditions. For instance, the plugin until passes packets until some specified condition, the plugins mux and inject may terminate tsp after completing the data insertion, etc.

A plugin can decide to terminate tsp on its own. The termination is unconditional, regardless of the state of the other plugins. Thus, if several plugins have termination conditions, tsp stops when the first plugin decides to terminate. In other words, there is an "or" operator between the various termination conditions.

The idea behind *joint termination* is to terminate tsp when several plugins have jointly terminated their processing. If several plugins have a "joint termination" condition (usually using the option --joint-termination), tsp stops when the last plugin triggers the joint termination condition. In other words, there is an "and" operator between the various joint termination conditions.

The tsp-option --ignore-joint-termination disables the termination of tsp when all plugins have reached their joint termination condition. The plugins continue to pass packets as if some additional joint termination condition was still pending.

## --initial-input-packets value

Specify the number of packets to initially read in the buffer before starting the processing.

The initial load is used to evaluate the bitrate so that all subsequent plugins can have a valid global bitrate value from the beginning. It is also used to make sure that the global buffer is optimally used.

The default initial load is half the size of the global buffer. For offline files and real-time devices with a sustained bitrate, it is a good idea to keep the default value.

The side effect of waiting for a significant amount of initial packets before starting the processing is that, with very low bitrates, *tsp* seems to do nothing until the global buffer is half full. The option --initial-input-packets is used to adjust this effect when necessary.

The downside of using a lower initial buffer load is that some plugins may not be able to use a valid bitrate for the initial part of the stream. Another downside is that the usage of the global buffer will probably be suboptimal and may even starve, creating output glitches, depending on the processing time of the intermediate plugins.

-1

#### --list-processors

List all available processors.

### --log-message-count value

Specify the maximum number of buffered log messages. Log messages are displayed asynchronously in a low priority thread. This value specifies the maximum number of buffered log messages in memory, before being displayed. When too many messages are logged in a short period of time, while plugins use all CPU power, the low-priority log thread has no resource. It cannot display yet the buffered messages and extra messages are dropped. Increase this value if you think that too many messages are dropped. The default is 512 messages.



See also the option --synchronous-log.

## --max-flushed-packets value

Specify the maximum number of packets to be processed before flushing them to the next processor or the output. When the processing time is high and some packets are lost, try decreasing this value.

The offline default is 10 000 packets. The real-time default is 1000 packets.

## --max-input-packets value

Specify the maximum number of packets to be received at a time from the input plugin.

By default, in offline mode, tsp reads as many packets as it can, depending on the free space in the buffer. The real-time default is 1000 packets.

-m

#### --monitor

Continuously monitor the system resources which are used by tsp. This includes CPU load, virtual memory usage. Useful to verify the stability of the application or benchmarking the packet processing performance.

# -r[keyword]

## --realtime[keyword]

Specifies if tsp and all plugins should use default values for real-time or offline processing.

By default, if any plugin prefers real-time, the real-time defaults are used. If no plugin prefers real-time, the offline default are used.

If -r or --realtime is used alone, the real-time defaults are enforced. The explicit values 'no', 'false', 'off' are used to enforce the offline defaults and the explicit values 'yes', 'true', 'on' are used to enforce the real-time defaults.

#### --receive-timeout milliseconds

Specify a timeout in milliseconds for all input operations.

Equivalent to the same --receive-timeout option in some input plugins. In practice, when an input plugin natively supports a receive timeout, this global parameter is passed to the plugin. Otherwise, *tsp* handles the receive timeout and tries to abort the stalled input operation in case of timeout.

By default, there is no input timeout.

-s

# --synchronous-log

With this option, each logged message is guaranteed to be displayed, synchronously, without any loss of message. The downside is that a plugin thread may be blocked for a short while when too many messages are logged. This option shall be used when all log messages are needed and the source and destination are not live streams (files for instance). This option is not recommended for live streams, when the responsiveness of the application is more important than the logged messages.

-t

## --timed-log

Each logged message contains a time stamp.

## **Generic common command options**

The following options are implicitly defined in all commands.

-d[N]

## --debug[=N]

Produce debug output. Specify an optional debug level N. Do not use in normal operation.

Without this option, no debug output is produced. When the option is specified but not the level *N*, the default debug level is 1, that is to say a reasonable amount of information. The higher the debug level is, the more output is produced.

The debug setting is automatically transmitted to all plugins.

Version 3.22-1926 67 / 395



#### --help

Display command help text.

-v

#### --verbose

Produce verbose messages.

#### --version

Display the version number.

## **Default options for plugin**

The following options are commonly found in many different plugins. They typically influence the way the signalization is interpreted or generated.

These options, when specified at *tsp* level, before specifying any plugin, have no effect on the *tsp* framework. They are only passed as initial default values for all plugins which accept the equivalent options. Explicit options at plugin level take precedence over these global defaults.

#### --atsc

Assume that the transport stream is an ATSC one.

ATSC streams are normally automatically detected from their signalization. This option is only useful when ATSC-related stuff are found in the TS before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT.

# --conax

Interpret all EMM and ECM from unknown CAS as coming from Conax.

Equivalent to --default-cas-id 0x0B00.

### --default-cas-id value

Interpret all EMM's and ECM's from unknown CAS as coming from the specified CA\_System\_Id.

## --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --default-pds value

Default private data specifier (PDS). This option is meaningful only when the signalization is incorrect, when private descriptors appear in tables without a preceding <code>private\_data\_specifier\_descriptor</code>. The specified value is used as private data specifier to interpret private descriptors.

The PDS value can be an integer or one of (not case-sensitive): "BskyB", "CanalPlus", "EACEM", "EICTA" (same as EACEM), "Eutelsat", "Logiways", "Nagra", "NorDig", "OFCOM", "TPS".

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

## --hf-band-region name

Specify the region for UHF/VHF band frequency layout.

The available regions are "americas", "europe", "france", "japan", "korea", "philippines", "taiwan", "uk", "us", "usa". For any update, see the file named *tsduck.hfbands.xml* in the same directory as the TSDuck executables.

The default region is "europe". Another default region may be specified per user in the TSDuck configuration file (see Appendix A).

## --irdeto

Interpret all EMM and ECM from unknown CAS as coming from Irdeto.

Equivalent to --default-cas-id 0x0600.

#### --isdb

Assume that the transport stream is an ISDB one.



ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.

## --japan

A synonym for --isdb --default-charset ARIB-STD-B24 --hf-band-region japan.

See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

## --mediaguard

Interpret all EMM and ECM from unknown CAS as coming from MediaGuard.

Equivalent to --default-cas-id 0x0100.

# --nagravision

Interpret all EMM and ECM from unknown CAS as coming from NagraVision.

Equivalent to --default-cas-id 0x1800.

#### --nds

Interpret all EMM and ECM from unknown CAS as coming from Synamedia (formerly known as NDS).

Equivalent to --default-cas-id 0x0900.

#### --safeaccess

Interpret all EMM and ECM from unknown CAS as coming from SafeAccess.

Equivalent to --default-cas-id 0x4ADC.

#### --viaccess

Interpret all EMM and ECM from unknown CAS as coming from Viaccess.

Equivalent to --default-cas-id 0x0500.

#### --widevine

Interpret all EMM and ECM from unknown CAS as coming from Widevine CAS.

Equivalent to --default-cas-id 0x4AD4.

# Plugin activation options

- -I name
- --input name

Designate the shared library plugin for packet input. By default, read packets from standard input.

### **-0** name

#### --output name

Designate the shared library plugin for packet output. By default, write packets to standard output.

#### -P name

#### --processor name

Designate a shared library plugin for packet processing. Several packet processors are allowed. Each packet is successively processed by each processor, in the order of the command line. By default, there is no processor and the packets are directly passed from the input to the output.

The specified plugin *name* is used to locate a shared library for the plugin (.so file on Linux, .dl1 file on Windows). Usually, all plugins files are in the same directory as the tsp executable. But, more generally, a plugin can be designated in a number of ways, in the following order. When a method fails, the next one is attempted.

- If the plugin name is a complete path name, with a directory, this path name is used.
- Without directory in the plugin name, a list of directories is searched:
  - If the environment TSPLUGINS\_PATH is defined, a list of directories is parsed. Directories are separated by a semicolon ';' on Windows and a colon ':' on UNIX systems.

Version 3.22-1926 69 / 395



- The same directory as the tsp executable file is used as last choice.
- In each of these directories, the file named tsplugin name.so or .dll is searched.
- If not found, the file *name* and then *name*.so or .dll is searched.
- If still not found, the standard algorithm of the operating system is applied to locate the shared library file, using the specified name (on Linux, see the man page of dlopen(3) for more details).

The *input-options, processor-options* and *output-options*, as specified in the general syntax of the tsp command, are specific to their corresponding plugin. All available plugins are documented in chapter 4, page 107.

All plugins accept the following common options:

## --help

The plugin displays its syntax and exits.

This means that the following type of command can be used to display the help text for a specific plugin:

$$tsp {-I|-O|-P} name --help$$



# **tspacketize**

# Packetize PSI/SI tables in a transport stream PID

This utility packetizes PSI/SI tables in a transport stream PID.

## Usage

```
tspacketize [options] [input-file[=rate] ...]
```

#### **Parameters**

# input-file[=rate]

Binary or XML files containing one or more sections or tables. By default, files with a name ending in .xml are XML and files with a name ending in .bin are binary. For other file names, explicitly specify --binary or --xml.

If the file name is omitted, the standard input is used (binary by default, specify --xml otherwise).

If different repetition rates are required for different files, a parameter can be "filename=value" where value is the repetition rate in milliseconds for all sections in that file. For repetition rates to be effective, the bitrate of the target PID must be specified, see option -b or --bitrate.

# **Options**

#### --binary

Specify that all input files are binary, regardless of their file name.

#### -b value

#### --bitrate value

Specifies the bitrate (in bits/second) of the target PID. This information is used to schedule sections in the output list of packets when specific bitrates are specified for sections. When no specific bitrate is specified for any input file, this option is ignored.

# -с

#### --continuous

Continuous packetization. By default, generate one cycle of sections.

## --default-charset name

Default character set to use when encoding strings from XML files.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --eit-base-date date

With --eit-normalization, use the specified date as "last midnight" reference for the allocation of the various EIT events in sections and segments.

The date must be in the format "year/month/day".

By default, use the oldest date in all EIT sections as base date.

# --eit-normalization

Reorganize all EIT sections according to ETSI TS 101 211 rules (see [6]).

- EIT present/following: One single EIT p/f subtable is built per service. It is split in two sections, one for present and one for following events.
- EIT schedule: All EIT schedule are kept but they are completely reorganized. All events are extracted and spread over new EIT sections according to ETSI TS 101 211 rules.

If several files are specified, the reorganization of EIT's is performed inside each file independently. This is fine as long as all EIT's for a given service are in the same input file.

See also option --eit-base-date.

Version 3.22-1926 71 / 395



#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

-f

### --force-crc

Force recomputation of CRC32 in long sections. Ignore the CRC32 values in the input files. By default, the CRC32 of every section is verified and sections with wrong CRC32 are rejected.

# --japan

A synonym for --default-charset ARIB-STD-B24. See section 2.3 for more details.

-o file-name

# --output file-name

Output file name for TS packets. By default, use standard output.

# --pack-and-flush

When loading a binary section file, pack incomplete tables, ignoring missing sections, and flush them. Sections are renumbered to remove any hole between sections.

Use with care because this may create inconsistent tables.

-p value

#### --pid value

PID of the output TS packets. This is a required parameter, there is no default value.

-s

## --stuffing

Insert stuffing at end of each section, up to the next TS packet boundary. By default, sections are packed and start in the middle of a TS packet, after the previous section. Note, however, that section headers are never scattered over a packet boundary.

#### --xml

Specify that all input files are XML, regardless of their file name.

### **Generic common command options**

The following options are implicitly defined in all commands.

# --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

# --help

Display command help text.

-v

## --verbose

Produce verbose messages.

# --version

Display the version number.



# **tspcontrol**

## Send control commands to a running tsp process

This utility controls the execution of a running *tsp* process. The target *tsp* command shall listen to control commands using the option --control-port (see the documentation of *tsp*).

### **Usage**

```
tspcontrol [options] command ...
```

#### **Parameters**

```
command ...
```

The control command to send to the target *tsp* process. See the list of control commands below.

Note that everything after the control command name is considered as options and parameters of this control command. The options of *tspcontrol* must be placed before the control command name.

## **Options**

```
-t [address:]port
--tsp [address:]port
```

Specify the IP address (or host name) and port where the target *tsp* process expects control commands (*tsp* option --control-port). If the IP address is omitted, the local host is used.

This is a required parameter, there is no default.

## **Generic common command options**

The following options are implicitly defined in all commands.

```
-d[N]
```

--debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

-v

### --verbose

Produce verbose messages.

### --version

Display the version number.

## List of control commands

**exit** Terminate the *tsp* process.

Usage: tspcontrol exit [options]

**--abort** Specify to immediately abort the *tsp* process.

By default, this command notifies each plugin to terminate and let the

processing continue until the process naturally exits.

**list** List all running plugins.

The listed plugin indexes can be used with other control commands such as *suspend*, *resume* or *restart*.

Usage: tspcontrol list [options]

-v Produce verbose output.

--verbose

**restart** Restart a plugin with different parameters.

Version 3.22-1926 73 / 395



Usage: tspcontrol restart [options] index [plugin-options ...]

Parameters: Index of the plugin to restart, followed by the new plugin parameters to

use.

**-s** Restart the plugin with the same options and parameters as the current

**--same** ones. By default, when no plugin options are specified, restart with no

option at all.

**-v** Produce verbose output.

--verbose

**resume** Resume a suspended plugin.

Usage: tspcontrol resume [options] index

Parameter: Index of the plugin to resume.

**-v** Produce verbose output.

--verbose

**set-log** Change the log level in the *tsp* process

Usage: tspcontrol set-log level

Parameter: Specify a new logging level for the *tsp* process. It can be one of "fatal",

"severe", "error", "warning", "info", "verbose", "debug" or a positive

value for higher debug levels.

**suspend** Suspend a plugin.

When a packet processing plugin is suspended, the TS packets are directly passed from the previous to the next plugin, without going through the suspended one.

When the output plugin is suspended, the output packets are dropped.

The input plugin cannot be suspended.

Usage: tspcontrol suspend [options] index

Parameters: Index of the plugin to suspend.

**-v** Produce verbose output.

--verbose



# **tspsi**

## **Dump All PSI Tables**

This utility extracts all PSI tables (PAT, CAT, PMT, NIT, BAT, SDT<sup>2</sup>) from a transport stream. The output is rather primitive but it exactly exhibits the structure of tables, sections and descriptors.

### **Usage**

```
tspsi [options] [input-file]
```

### Input file

MPEG transport stream, either a capture file or a pipe from a live stream. Must be a binary stream of 188-byte packets. If omited, standard input is used.

## **Options**

-a

### --all-versions

Display all versions of PSI tables (need to read the complete transport stream). By default, display only the first version of each PSI table and stop when all expected PSI are extracted.

### --cat-only

Display only the CAT, ignore other PSI tables.

- C

### --clear

Indicate that this is a clear transport stream, without conditional access information. Useful to avoid further reading the transport stream, waiting for a non-existent CAT.

#### -d

### --dump

Dump all PSI sections.

### --exclude-current

Exclude PSI tables with "current" indicator. This is rarely necessary.

See also --include-next.

### --format name

Specify the format of the input file. See section 2.1.2 for more details.

#### --include-next

Include PSI tables with "next" indicator. By default, they are excluded.

## --no-pager

Do not send output through a pager process. By default, if the output device is a terminal, the output is paged. See 3.1.4 for more details.

## -o file-name

### --output-file file-name

File name for text output.

### Tables and sections formatting options

### --atsc

Assume that the transport stream is an ATSC one.

ATSC streams are normally automatically detected from their signalization. This option is only useful when ATSC-related stuff are found in the TS before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT.

Version 3.22-1926 75 / 395

<sup>&</sup>lt;sup>2</sup> I know, BAT and SDT are SI, not PSI ☺



- C

#### --c-style

Same as --raw-dump (no interpretation of section) but dump the bytes in C-language style, e.g. "0x01, 0x02," instead of "01 02". Useful to include this output as data in a C source file.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --default-pds value

Default private data specifier (PDS). This option is meaningful only when the signalization is incorrect, when private descriptors appear in tables without a preceding <code>private\_data\_specifier\_descriptor</code>. The specified value is used as private data specifier to interpret private descriptors.

The PDS value can be an integer or one of (not case-sensitive): "BskyB", "CanalPlus", "EACEM", "EICTA" (same as EACEM), "Eutelsat", "Logiways", "Nagra", "NorDig", "OFCOM", "TPS".

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --isdb

Assume that the transport stream is an ISDB one.

ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.

### --japan

A synonym for '--isdb --default-charset ARIB-STD-B24'. See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

#### --nested-tlv[=min-size]

With option --tlv, try to interpret the value field of each TLV record as another TLV area. If the *min-size* value is specified, the nested TLV interpretation is performed only on value fields larger than this size. The syntax of the nested TLV is the same as the enclosing TLV.

#### -r

### --raw-dump

Raw dump of section, no interpretation.

### --tlv syntax

For sections of unknown types, this option specifies how to interpret some parts of the section payload as TLV records. Several --tlv options are allowed, each one describes a part of the section payload.

Each syntax string has the form "start,size,tagSize,lengthSize,order". The start and size fields define the offset and size of the TLV area in the section payload. If the size field is "auto", the TLV extends up to the end of the section. If the start field is "auto", the longest TLV area in the section payload will be used. The fields tagSize and lengthSize indicate the size in bytes of the Tag and Length fields in the TLV structure. The field order must be either "msb" or "lsb" and indicates the byte order of the Tag and Length fields.

All fields are optional. The default values are "auto, auto, 1, 1, msb".

### **CAS** identification options

By default, EMM's and ECM's are interpreted according to the *CA\_descriptor* which references their PID. The following options are useful when analyzing partial transport streams without CAT or PMT to correctly identify the CA PID's.

#### --conax

Interpret all EMM and ECM from unknown CAS as coming from Conax.

Equivalent to --default-cas-id 0x0B00.



### --default-cas-id value

Interpret all EMM's and ECM's from unknown CAS as coming from the specified CA\_System\_Id.

#### --irdeto

Interpret all EMM and ECM from unknown CAS as coming from Irdeto.

Equivalent to --default-cas-id 0x0600.

### --mediaguard

Interpret all EMM and ECM from unknown CAS as coming from MediaGuard.

Equivalent to --default-cas-id 0x0100.

### --nagravision

Interpret all EMM and ECM from unknown CAS as coming from NagraVision.

Equivalent to --default-cas-id 0x1800.

#### --nds

Interpret all EMM and ECM from unknown CAS as coming from Synamedia (formerly known as NDS).

Equivalent to --default-cas-id 0x0900.

### --safeaccess

Interpret all EMM and ECM from unknown CAS as coming from SafeAccess.

Equivalent to --default-cas-id 0x4ADC.

#### --viaccess

Interpret all EMM and ECM from unknown CAS as coming from Viaccess.

Equivalent to --default-cas-id 0x0500.

### --widevine

Interpret all EMM and ECM from unknown CAS as coming from Widevine CAS.

Equivalent to --default-cas-id 0x4AD4.

### **Generic common command options**

The following options are implicitly defined in all commands.

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

-۷

#### --verbose

Produce verbose messages.

#### --version

Display the version number.

Version 3.22-1926 77 / 395



# **tsresync**

### **Resynchronize Corrupted Transport Stream Files**

This utility resynchronizes a corrupted transport stream file.

### Usage

```
tsresync [options] [input-file]
```

### Input file

MPEG transport stream, either a capture file or a pipe from a live stream. Must be a binary stream of transport stream packets, with various encapsulation or possible corruptions.

If omited, the standard input is used.

## **Options**

- c

#### --continue

Continue re-resynchronizing after loss of synchronization. By default, stop after first packet not starting with 0x47.

-h value

#### --header-size value

When used with --packet-size, specifies the size of extra data preceeding each packet in the input file. The default is zero.

-k

## --keep

Keep TS packet size from input to output file. By default, strip extra data and reduce packets to 188 bytes. See option --packet-size for a description of supported input packet sizes.

-m value

### --min-contiguous value

Minimum size containing contiguous valid packets to consider a slice of input file as containing actual packets (default: 512 kB).

-o file-name

## --output file-name

Output file name (standard output by default).

-p value

### --packet-size value

Expected TS packet size in bytes. By default, try:

- 188-byte (standard)
- 204-byte (trailing 16-byte Reed-Solomon outer FEC)
- 192-byte (leading 4-byte timestamp in M2TS/Blu-ray disc files).

If the input file contains any other type of packet encapsulation, use options --packet-size and --header-size.

-s value

### --sync-size value

Number of initial bytes to analyze to find start of packet synchronization (default: 1 MB).

## **Generic common command options**

The following options are implicitly defined in all commands.

### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).



## --help

Display command help text.

-v

## --verbose

Produce verbose messages.

## --version

Display the version number.

Version 3.22-1926 79 / 395





## Digital TV network scanning of frequencies and services

This utility scans frequencies, transport streams and services in a DTV network.

There are two types of scanning:

- NIT-based scanning: Modulation parameters must be given. In a first phase, the specified "reference" transport stream is acquired, its NIT is read and all transport stream descriptions (with their *delivery system descriptors*) are interpreted. In a second phase, all these transport streams are acquired to check their content.
- Blind band scanning: This method applies to UHF and VHF bands only, for terrestrial DTV networks. All predefined channels in the selected band in the selected region or country are scanned one by one.

### **Usage**

tsscan [options]

## **Scanning method selection**

-n

#### --nit-scan

Perform a NIT-based scanning.

Tuning parameters for a reference transport stream must be present (frequency or channel reference). The NIT is read on the specified frequency and a full scan of the corresponding network is performed.

-u

### --uhf-band

Perform a complete UHF-band scanning (DVB-T, ISDB-T or ATSC).

Use the predefined UHF frequency layout of the specified region (see option --hf-band-region).

By default, scan the center frequency of each channel only. Use option --use-offsets to scan all predefined offsets in each channel.

-v

#### --vhf-band

Perform a complete VHF-band scanning.

See also option --uhf-band.

### Tuner device options and tuning parameters

Tuning parameters are used with --nit-scan only. They are used to receive the initial reference transport stream from which the NIT is analyzed.

All options from the *dvb* input plugin are also available to *tsscan*. See page 153 for the list of options.

#### **Scanning options**

### --best-quality

With UHF/VHF-band scanning, for each channel, use the offset with the best signal quality. By default, use the average of lowest and highest offsets with required minimum quality and strength.

## --best-strength

With UHF/VHF -band scanning, for each channel, use the offset with the best signal strength. By default, use the average of lowest and highest offsets with required minimum quality and strength.



#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

### --first-channel value

For UHF/VHF-band scanning, specify the first channel to scan (default: lowest channel in band).

### --first-offset value

For UHF/VHF-band scanning, specify the first offset to scan on each channel. Note that tsscan may scan lower offsets. As long as some signal is found at a specified offset, tsscan continues to check up to 3 lower offsets below the "first" one. This means that if a signal is found at offset -2, offset -3 will be checked anyway, etc. up to offset -5.

#### -g

### --global-service-list

Same as --service-list but display a global list of services at the end of scanning instead of per transport stream.

### --japan

A synonym for '--default-charset ARIB-STD-B24 --hf-band-region japan'. See section 2.3 for more details.

This is a handy shortcut when working on Japanese transport streams.

### --last-channel value

For UHF/VHF -band scanning, specify the last channel to scan (default: highest channel in band).

### --last-offset value

For UHF/VHF-band scanning, specify the last offset to scan on each channel. Note that tsscan may scan higher offsets. As long as some signal is found at a specified offset, tsscan continues to check up to 3 higher offsets above the "last" one. This means that if a signal is found at offset +2, offset +3 will be checked anyway, etc. up to offset +5.

#### --min-quality value

Minimum signal quality percentage. Frequencies with lower signal quality are ignored (default: 10%).

### --min-strength value

Minimum signal strength percentage. Frequencies with lower signal strength are ignored (default: 10%).

### --no-offset

For UHF/VHF-band scanning, scan only the central frequency of each channel. This is now the default. Specify option --use-offsets to scan all offsets.

## --psi-timeout milliseconds

Specifies the timeout, in milli-seconds, for PSI/SI table collection. Useful with --service-list or NIT-based scan. The default is 10 000 milli-seconds.

### --save-channels filename

Save the description of all channels in the specified XML file. See Appendix B, page 334, for more details on channels configuration files.

If the file name is "-", use the default tuning configuration file.

See also option --update-channels.

### -1

### --service-list

Read SDT of each channel and display the list of services.

Version 3.22-1926 81 / 395



#### --show-modulation

Display modulation parameters.

Windows-specific note: With UHF band scanning, the actual modulation parameters of a transponder may not be available. This depends on the driver of the tuner. Most drivers do not report the correct values.

### --update-channels filename

Update the description of all channels in the specified XML file. The content of each scanned transport stream is replaced in the file. If the file does not exist, it is created. See Appendix B, page 334, for more details on channels configuration files.

If the file name is "-", use the default tuning configuration file.

See also option --save-channels.

### --use-offsets

For UHF/VHF-band scanning, do not scan only the central frequency of each channel. Also scan frequencies with offsets.

As an example, if a signal is transmitted at offset +1, the reception may be successful at offsets -1 to +3 (but not -2 and +4). With this option, tsscan checks all offsets and reports that the signal is at offset +1 (central point between offsets -1 and +3).

By default, tsscan reports that the signal is found at the central frequency of the channel (offset zero). This significantly speeds up the scanning process but does not provide any offset information.

## **Generic common command options**

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

### --verbose

Produce verbose messages.

### --version

Display the version number.



## **tssmartcard**

## **Smart-Card Utility**

This utility lists or resets the smart-card readers in the system.

### Usage

```
tssmartcard [options] [reader-name]
```

#### Reader name

The optional reader-name parameter indicates the smart-card reader device name to list or reset.

By default, without any option or parameter, the command lists all smart-card reader devices in the system.

## **Options**

- c

### --cold-reset

Perform a cold reset on the smart-card.

-e

### --eject

Eject the smart-card (if supported by the reader device).

- -t value
- --timeout value

Timeout in milliseconds. The default is 1000 ms (1 second).

-W

### --warm-reset

Perform a warm reset on the smart-card.

## **Generic common command options**

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

-v

## --verbose

Produce verbose messages.

## --version

Display the version number.

Version 3.22-1926 83 / 395



# **tsstuff**

## Add stuffing to a TS file to reach a target bitrate

This utility adds stuffing packets to a TS file to reach a target bitrate. Time stamps (PCR or DTS) are extracted from one *reference PID* in the input file and stuffing packets are added so that the time stamps are approximately synchronized with the TS target bitrate.

### Usage

tsstuff [options] [input-file]

### Input file

The input file is a TS file, typically with variable bitrate content. By default, the standard input is used.

## **Options**

- -b value
- --bitrate value

Target constant bitrate of the output file. This is mandatory parameter, there is no default.

#### --buffer-size value

Input buffer size, in bytes. Must be large enough to always contain two time stamps in the reference PID. Default: 4,194,304 bytes (4 MB).

-d

### --dts-based

Use Decoding Time Stamps (DTS) in the reference PID to evaluate the amount of stuffing to insert. The default is to use Program Clock References (PCR) instead of DTS.

### -f value

### --final-inter-packet value

Number of stuffing packets to add between input packets after the last time stamp (PCR or DTS). By default, use the same number as in the previous segment, between the last two time stamps.

#### -i value

#### --initial-inter-packet value

Number of stuffing packets to add between input packets before the first time stamp (PCR or DTS). By default, use the same number as in the first segment, between the first two time stamps.

## --input-format name

Specify the format of the input file. See section 2.1.2 for more details.

### -1 value

#### --leading-packets value

Number of consecutive stuffing packets to add at the beginning of the output file, before the first input packet. The default is zero.

## -m value

#### --min-interval value

Minimum interval, in milli-seconds, between two recomputations of the amount of stuffing to insert. This duration is based on time-stamps, not real time. The default is 100 ms.

### -o filename

### --output-file filename

Output file name (standard output by default). The output file is a TS file with the same packets as the input file with interspersed stuffing packets and a constant bitrate.

## --output-format name

Specify the format of the output file. See section 2.1.2 for more details. By default, the format is a standard TS file.



### -r value

### --reference-pid value

PID in which to collect time stamps (PCR or DTS) to use as reference for the insertion of stuffing packets. By default, use the first PID containing the specified type of time stamps (PCR or DTS).

#### -t value

### --trailing-packets value

Number of consecutive stuffing packets to add at the end of the output file, after the last input packet. The default is zero.

## **Generic common command options**

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

#### -v

#### --verbose

Produce verbose messages.

### --version

Display the version number.

Version 3.22-1926 85 / 395





### Transport stream input source switch using remote control

This utility uses several transport stream inputs and one single output. One input is selected and passed to the output. Using either predefined policies or remote control, it is possible to switch back and forth between inputs.

All inputs and output are performed using external plugins. These plugins are the same as the plugins which are used by *tsp*.

Using the input plugins *file* or *fork*, it is possible to connect applications to some *tsswitch* input. One of these applications can be *tsp*, in which case it is possible to insert specific processing between the input plugin and the switch.

See a sample usage with a system diagram in section 5.1.7.

### Cycling through input plugins

The list of input plugins is ordered by index on the command line, from 0 to n-1. By default, the input plugin 0 is started when the command starts. When a plugin terminates (end of input or error), the next one is started. When the last plugin terminates, the *tsswitch* command terminates.

Running all input plugins in sequence, from 0 to n-1, is called a *cycle*. By default, only one cycle is executed before *tsswitch* terminates. Using the option --cycle, it is possible to execute a given number of cycles. With the option --infinite, *tsswitch* runs endlessly.

With the option --terminate, *tsswitch* terminates when the current plugin terminates. In this case, without remote control, *tsswitch* only executes the first plugin. If the remote control was used to switch to another input, *tsswitch* terminates when the current plugin terminates, whichever it is.

### **Input switching modes**

There are three different modes when switching from an input plugin to another one.

By default, only one input plugin is active at a time. When *tsswitch* starts, the first plugin is started. When an input switch is requested, the current plugin is first stopped. When the stop operation is complete, the next plugin is started. This mode is required when two plugins use the same input device such as a tuner. Since the device cannot be shared, it must be completely stopped and closed before being reused by the next plugin. This is the safest mode. The downside is that there could be a transmission hole in the output during the switch.

With option --delayed-switch, the switching operation is slightly different. The next plugin is started first. In the meantime, output packets continue to be fetched from the previous input plugin. When the next plugin starts to receive packets, the switch is performed: output packets are now read from the next plugin. Finally, the previous input plugin is stopped. This mode guarantees a smooth transition. However, the actual output switch is delayed until the next plugin is fully operational.

With option --fast-switch, all input plugins are started in parallel from the beginning and are never stopped. All input plugins continuously read packets and fill their buffer. The current plugin performs normal flow control with the output plugin, without packet loss. All other input plugins continuously overwrite their circular input buffer. When an input switch is requested, the output plugin immediately jumps into the next plugin buffer where the latest packets are already available. This mode guarantees a smooth and immediate switch. It is appropriate for live streams only.

### Remote control

Using the option --remote, *tsswitch* listens to UDP datagrams on a given port. Each datagram contains one switch command. A command is an ASCII string. Any trailing control characters such as CR or LF is ignored.

The command string can be one of:

- An input index (e.g. "0", "1", "2", etc.) Upon reception, *tsswitch* immediately switches to the selected input plugin.
- Strings "next" and "previous" (or "prev") to switch to the next and previous input, respectively.



- Strings "exit" or "quit" to properly terminate *tsswitch*.
- Strings "halt" or "abort" to immediately abort the tsswitch process.

Note that the *bash*<sup>3</sup> shell provides an easy way to redirect output to an UDP message. The following sample commands send UDP messages on port 4444 to system 127.0.0.1 (the local host). This is the easiest way to use the *tsswitch* remote control.

```
echo >/dev/udp/127.0.0.1/4444 2
echo >/dev/udp/127.0.0.1/4444 next
echo >/dev/udp/127.0.0.1/4444 prev
echo >/dev/udp/127.0.0.1/4444 exit
```

#### **Usage**

The general syntax of the *tsswitch* command is the following:

```
tsswitch [tsswitch-options] \
    -I input-name [input-options] ... \
    [-0 output-name [output-options]]
```

All *tsswitch-options* must be placed on the command line before the input and output plugin specifications. There must be at least one input plugin and at most one output plugin. The default output plugin is file, sending all packets to the standard output.

On the command line, the order of the input plugins is significant. They are indexed from 0 to n-1. This index value is used in the remote control protocol to select an input stream.

## Plugin activation options

- -I name
- --input name

Designate the shared library plugin for packet input. There is no default. At least one input plugin shall be specified.

- -**0** name
- --output name

Designate the shared library plugin for packet output. By default, write packets to standard output.

All input and output plugins which are available for *tsp* can be used by *tsswitch*. See the description of the command *tsp* for the method to locate the plugin files.

### **General options**

- -b value
- --buffer-packets value

Specify the size in TS packets of each input plugin buffer. The default is 512 packets.

--max-input-packets value

Specify the maximum number of TS packets to read at a time. This value may impact the switch response time. The default is 128 packets. The actual value is never more than half the --buffer-packets value.

--max-output-packets value

Specify the maximum number of TS packets to write at a time. The default is 128 packets.

### Input cycles options

- -c value
- --cycle value

Specify how many times to repeat the cycle through all input plugins in sequence. By default, all input plugins are executed in sequence only once (--cycle 1). The options --cycle, --infinite and --terminate are mutually exclusive.

Version 3.22-1926 87 / 395

<sup>&</sup>lt;sup>3</sup> This is a feature of *bash*, not a Linux feature. It is available on all platforms, including macOS or Cygwin.



### --first-input value

Specify the index of the first input plugin to start. By default, the first plugin (index 0) is used.

-i

### --infinite

Infinitely repeat the cycle through all input plugins in sequence.

-t

#### --terminate

Terminate execution when the current input plugin terminates.

### Input modes options

- d

#### --delayed-switch

Perform delayed input switching. When switching from one input plugin to another one, the second plugin is started first. Packets from the first plugin continue to be output while the second plugin is starting. Then, after the second plugin starts to receive packets, the switch occurs: packets are now fetched from the second plugin. Finally, after the switch, the first plugin is stopped.

By default, the current input is first stopped and then the next one is started. Options --delayed-switch and --fast-switch are mutually exclusive.

-f

#### --fast-switch

Perform fast input switching. All input plugins are started at once and they continuously receive packets in parallel. Packets are dropped, except for the current input plugin. This option is typically used when all inputs are live streams on distinct devices (not the same DVB tuner for instance).

By default, only one input plugin is started at a time. When switching, the current input is first stopped and then the next one is started. Options --delayed-switch and --fast-switch are mutually exclusive.

-p value

### --primary-input value

Specify the index of the input plugin which is considered as primary or preferred.

This input plugin is always started, never stopped, even without --fast-switch. When no packet is received on this plugin, the normal switching rules apply. However, as soon as packets are back on the primary input, the reception is immediately switched back to it.

By default, there is no primary input, all input plugins are equal.

### --receive-timeout value

Specify a receive timeout in milliseconds (independently of any equivalent feature the input plugins).

When the current input plugin has received no packet within this timeout, automatically switch to the next plugin.

By default, without --primary-input, there is no automatic switch when the current input plugin is waiting for packets. With --primary-input, the default is 2,000 ms.

## **Remote control options**

-a address

### --allow address

Specify an IP address or host name which is allowed to send remote commands. Several --allow options can be used to specify several allowed remote control systems.

By default, all received commands are accepted. If at least one --allow option is specified, any remote command which is not sent by an allowed host is rejected.

This is a security feature, but not a perfect one since IP address spoofing is trivial with UDP.



#### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

#### -r [address:]port

## --remote [address:]port

Specify the local UDP port which is used to receive remote commands. If an optional address is specified, it must be a local IP address of the system. By default, there is no remote control.

#### --udp-buffer-size value

Specifies the UDP socket receive buffer size (socket option).

## **Logging options**

### --log-message-count value

Specify the maximum number of buffered log messages. Log messages are displayed asynchronously in a low priority thread. This value specifies the maximum number of buffered log messages in memory, before being displayed. When too many messages are logged in a short period of time, while plugins use all CPU power, extra messages are dropped. Increase this value if you think that too many messages are dropped. The default is 512 messages.

#### -m

#### --monitor

Continuously monitor the system resources which are used by *tsswitch*. This includes CPU load, virtual memory usage. Useful to verify the stability of the application.

#### - 9

### --synchronous-log

Each logged message is guaranteed to be displayed, synchronously, without any loss of message. The downside is that a plugin thread may be blocked for a short while when too many messages are logged. This option shall be used when all log messages are needed and the source and destination are not live streams (files for instance). This option is not recommended for live streams, when the responsiveness of the application is more important than the logged messages.

### --timed-log

Each logged message contains a time stamp.

### **Generic common command options**

The following options are implicitly defined in all commands.

#### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

#### - v

## --verbose

Produce verbose messages.

## --version

Display the version number.

Version 3.22-1926 89 / 395



# **#**tstabcomp

## Compile or decompile MPEG tables from XML files

This utility is an MPEG table compiler which takes MPEG tables in *source form* as XML files and produces binary section files.

The *tstabcomp* utility is also an MPEG table decompiler. From a binary file containing sections, it recreates an XML file. This XML file can be edited by hand and recompiled for instance.

See section 2.2 for a description of the format of PSI/SI files which can be manipulated by TSDuck and more specifically section 2.2.2 for a complete description of XML files.

### Usage

tstabcomp [options] input-file ...

### **Input files**

XML source files to compile or binary table files to decompile. By default, files ending in *.xml* are compiled and files ending in *.bin* are decompiled. For other files, explicitly specify --compile or --decompile.

### **Options**

#### --atsc

Assume that the tables are used in an ATSC context.

This option is only useful when decompiling ATSC-related stuff which are found in the binary section file before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT. This is how *tstabcomp* can interpret these descriptors as ATSC descriptors and not as private DVB descriptors.

#### - C

### --compile

Compile all files as XML source files into binary files. This is the default for .xml files.

#### -d

## --decompile

Decompile all files as binary files into XML files. This is the default for .bin files.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

### --eit-base-date date

With --eit-normalization, use the specified date as "last midnight" reference for the allocation of the various EIT events in sections and segments.

The date must be in the format "year/month/day".

By default, use the oldest date in all EIT sections as base date.

### --eit-normalization

Reorganize all EIT sections according to ETSI TS 101 211 rules (see [6]).

- EIT present/following: One single EIT p/f subtable is built per service. It is split in two sections, one for present and one for following events.
- EIT schedule: All EIT schedule are kept but they are completely reorganized. All events are extracted and spread over new EIT sections according to ETSI TS 101 211 rules.

If several files are specified, the reorganization of EIT's is performed inside each file independently. This is fine as long as all EIT's for a given service are in the same input file.

See also option --eit-base-date.



#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

-e

#### --extensions

With --xml-model, include the content of the available extensions.

#### --isdb

Assume that the transport stream is an ISDB one.

ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.

## --japan

A synonym for --isdb --default-charset ARIB-STD-B24. See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

-o file-name

### --output file-name

Specify the output file name. By default, the output file has the same name as the input and extension .bin (compile) or .xml (decompile).

If the specified path is a directory, the output file is built from this directory and default file name. If more than one input file is specified, the output path, if present, must be a directory name.

## --pack-and-flush

When loading a binary section file, pack incomplete tables, ignoring missing sections, and flush them. Sections are renumbered to remove any hole between sections.

Use with care because this may create inconsistent tables.

### --strict-xml

Save XML documents in strictly conformant XML format. By default, do not escape characters when this is not syntactically necessary to make the XML text more human-readable.

-x

#### --xml-model

Display the XML model of the table files. This model is not a full XML-Schema, this is an informal template file which describes the expected syntax of TSDuck XML files. If --output is specified, the model is saved here. Do not specify input files.

### Generic common command options

The following options are implicitly defined in all commands.

## --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

-v

### --verbose

Produce verbose messages.

### --version

Display the version number.

Version 3.22-1926 91 / 395



# **■ tstabdump**

### **Dump MPEG Tables**

This utility dumps in human readable format MPEG tables, as saved in binary files by the tstables utility.

### Usage

```
tstabdump [options] [input-file ...]
```

### Input files

Binary section file. Several files can be specified. By default, without file and without --ip-udp, the binary tables are read from the standard input.

With --ip-udp, no file shall be specified. Binary sections and tables are received over UDP/IP as sent by the utility *tstables* or the plugin *tables*.

### **Options**

-x value

#### --max-tables value

Maximum number of tables or sections to dump. Stop logging tables when this limit is reached. This option is useful with --ip-udp which never ends otherwise.

### --no-pager

Do not send output through a pager process. By default, if the output device is a terminal, the output is paged. See 3.1.4 for more details.

## Tables and sections formatting options

#### --atsc

Assume that the transport stream is an ATSC one.

ATSC streams are normally automatically detected from their signalization. This option is only useful when ATSC-related stuff are found in the TS before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT.

#### - C

### --c-style

Same as --raw-dump (no interpretation of section) but dump the bytes in C-language style, eg. "0x01, 0x02," instead of "01 02". Useful to include this output as data in a C source file.

### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

### --default-pds value

Default private data specifier (PDS). This option is meaningful only when the signalization is incorrect, when private descriptors appear in tables without a preceding <code>private\_data\_specifier\_descriptor</code>. The specified value is used as private data specifier to interpret private descriptors.

The PDS value can be an integer or one of (not case-sensitive): "BskyB", "CanalPlus", "EACEM", "EICTA" (same as EACEM), "Eutelsat", "Logiways", "Nagra", "NorDig", "OFCOM", "TPS".

### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --isdb

Assume that the transport stream is an ISDB one.

ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.



#### --japan

A synonym for --isdb --default-charset ARIB-STD-B24. See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

### --nested-tlv[=min-size]

With option --tlv, try to interpret the value field of each TLV record as another TLV area. If the *min-size* value is specified, the nested TLV interpretation is performed only on value fields larger than this size. The syntax of the nested TLV is the same as the enclosing TLV.

# --raw-dump

Raw dump of section, no interpretation.

### --tlv syntax

For sections of unknown types, this option specifies how to interpret some parts of the section payload as TLV records. Several --tlv options are allowed, each one describes a part of the section payload.

Each syntax string has the form "start,size,tagSize,lengthSize,order". The start and size fields define the offset and size of the TLV area in the section payload. If the size field is "auto", the TLV extends up to the end of the section. If the start field is "auto", the longest TLV area in the section payload will be used. The fields tagSize and lengthSize indicate the size in bytes of the Tag and Length fields in the TLV structure. The field order must be either "msb" or "1sb" and indicates the byte order of the Tag and Length fields.

All fields are optional. The default values are "auto, auto, 1,1, msb".

### **UDP** reception options

These options apply only when --ip-udp is used. In this case, the binary sections are received using UDP/IP. No input file is used.

#### --buffer-size value

Specify the UDP socket receive buffer size (socket option).

### --default-interface

Let the system find the appropriate local interface on which to listen. By default, listen on all local interfaces.

### --first-source

Filter UDP packets based on the source address. Use the sender address of the first received packet as only allowed source.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

To allow a more precise selection of the sender, use option --source. Options --first-source and --source are mutually exclusive.

### -ip-udp [[source@]address:]port

Specify that the sections and tables are received from UDP/IP, as sent by *tstables* or the plugin *tables*.

The *port* part is mandatory and specifies the UDP port to listen on. The *address* part is optional. It specifies an IP multicast address to listen on. It can be also a host name that translates to a multicast address. If the address is not specified, the plugin simply listens on the specified local port and receives the packets which are sent to one of the local (unicast) IP addresses of the system.

An optional source address can be specified as *source@address:port* in the case of source-specific multicast (SSM).

Version 3.22-1926 93 / 395



#### --local-address address

Specify the IP address of the local interface on which to listen. It can be also a host name that translates to a local address. By default, listen on all local interfaces.

#### --no-encapsulation

With --ip-udp, receive the tables as raw binary messages in UDP packets. By default, the tables are formatted into TLV messages.

## --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

#### --receive-timeout value

Specify the UDP reception timeout in milliseconds. This timeout applies to each receive operation, individually. By default, receive operations wait for data, possibly forever.

#### --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

## --source address[:port]

Filter UDP packets based on the specified source address.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

Options --first-source and --source are mutually exclusive.

#### --ssm

This option forces the usage of source-specific multicast (SSM) using the source address which is specified by the option --source. Without --ssm, standard ("any-source') multicast is used and the option --source is used to filter incoming packets.

The --ssm option is implicit when the classical SSM syntax *source@address:port* is used.

### **CAS** identification options

By default, EMM's and ECM's are interpreted according to the *CA\_descriptor* which references their PID. The following options are useful when analyzing partial transport streams without CAT or PMT to correctly identify the CA PID's.

### --conax

Interpret all EMM and ECM from unknown CAS as coming from Conax.

Equivalent to --default-cas-id 0x0B00.

### --default-cas-id value

Interpret all EMM's and ECM's from unknown CAS as coming from the specified CA System Id.

### --irdeto

Interpret all EMM and ECM from unknown CAS as coming from Irdeto.

Equivalent to --default-cas-id 0x0600.

### --mediaguard

Interpret all EMM and ECM from unknown CAS as coming from MediaGuard.

Equivalent to --default-cas-id 0x0100.

## --nagravision

Interpret all EMM and ECM from unknown CAS as coming from NagraVision.

Equivalent to --default-cas-id 0x1800.

### --nds

Interpret all EMM and ECM from unknown CAS as coming from Synamedia (formerly known as NDS).



Equivalent to --default-cas-id 0x0900.

### --safeaccess

Interpret all EMM and ECM from unknown CAS as coming from SafeAccess. Equivalent to --default-cas-id 0x4ADC.

#### --viaccess

Interpret all EMM and ECM from unknown CAS as coming from Viaccess. Equivalent to --default-cas-id 0x0500.

### --widevine

Interpret all EMM and ECM from unknown CAS as coming from Widevine CAS. Equivalent to --default-cas-id 0x4AD4.

## **Generic common command options**

The following options are implicitly defined in all commands.

### --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

### --help

Display command help text.

#### - v

### --verbose

Produce verbose messages.

### --version

Display the version number.

Version 3.22-1926 95 / 395



## **tstables**

### **Collect MPEG Tables**

This utility collects MPEG tables from a transport stream. The tables can be saved in a human readable format, in binary or XML files or sent over UDP/IP to some collecting server. It is possible to save the tables in several formats at the same time. By default, the tables are displayed in human-readable format on the standard output.

### **Usage**

```
tstables [options] [input-file]
```

## Input file

MPEG transport stream, either a capture file or a pipe from a live stream. The input must be a binary stream of 188-byte packets. If the input file is omitted, the standard input is used.

### Tables and sections selection options

### --all-once

Same as --all-sections but collect each section only once per combination of PID, table id, table id extension, section number and version.

-a

### --all-sections

Display/save all sections, as they appear in the stream. By default, collect complete tables, with all sections of the tables grouped and ordered and collect each version of a table only once.

Note that this mode is incompatible with --xml-output since valid XML structures may contain complete tables only.

-d

### --diversified-payload

Select only sections with *diversified* payload. This means that section payloads containing the same byte value (all 0x00 or all 0xFF for instance) are ignored. Typically, such sections are stuffing and can be ignored that way.

## --exclude-current

Exclude short sections and long sections with "current" indicator. This is rarely necessary.

See also --include-next.

### --format name

Specify the format of the input file. See section 2.1.2 for more details.

### --include-next

Include long sections with "next" indicator. By default, they are excluded.

### -x value

#### --max-tables value

Maximum number of tables to dump. Stop execution when this limit is reached.

## --negate-pid

Negate the PID filter: specified PID's are excluded.

**Warning:** this can be a dangerous option on complete transport streams since PID's not containing sections can be accidentally selected.

-n

## --negate-tid

Negate the TID filter: specified TID's are excluded.

#### --negate-tid-ext

Negate the TID extension filter: specified TID extensions are excluded.



### --no-duplicate

Do not report consecutive identical tables with a short section in the same PID. This can be useful for ECM's. This is the way to display new ECM's only. By default, tables with long sections are reported only when a new version is detected but tables with a short section are all reported.

### --no-pager

Do not send output through a pager process. By default, if the output device is a terminal, the output is paged. See 3.1.4 for more details.

### **-p** pid1[-pid2]

### **--pid** *pid1*[-*pid2*]

PID filter: select packets with these PID values. Several -p or --pid options may be specified.

By default, without -p or --pid option, all PID's are used.

PID's containing PES data are automatically ignored.

### --psi-si

Add all PID's containing PSI/SI tables, ie. PAT, CAT, PMT, NIT, SDT and BAT. The PMT PID's are dynamically collected each time a new PAT is encountered.

Note that EIT, TDT and TOT are not included. Use --pid 18 to get EIT and --pid 20 to get TDT and TOT.

### **-t** id1[-id2]

### **--tid** id1[-id2]

TID filter: select sections with these TID (table id) values. Several -t or --tid options may be specified. Without -t or --tid option, all tables are saved.

#### -e id1[-id2]

### **--tid-ext** *id1*[*-id2*]

TID extension filter: select sections with these table id extension values (apply to long sections only). Several -e or --tid-ext options may be specified. Without -e or --tid-ext option, all tables are saved.

### **Output options**

## -b filename

#### --binary-output filename

Save the sections in raw binary format in the specified output file name. See also option -m, --multiple-files.

## -f

#### --flush

Flush standard output after each display. Useful to monitor the content if the output has been redirected to a disk file.

### -i address:port

### --ip-udp address:port

Send binary tables over UDP/IP to the specified destination. The *address* specifies an IP address which can be either unicast or multicast. It can be also a host name that translates to an IP address. The *port* specifies the destination UDP port.

### --local-udp address

With --ip-udp, when the destination is a multicast address, specify the IP address of the outgoing local interface. It can be also a host name that translates to a local address.

#### --log

Display a short one-line log of each table instead of full table display.

### --log-size value

With option --log, specify how many bytes are displayed at the beginning of the table payload (the header is not displayed). The default is 8 bytes.

Version 3.22-1926 97 / 395



-m

### --multiple-files

Create multiple binary output files, one per section. A binary output file name must be specified (option -b or --binary-output). Assuming that the specified file name has the form 'base\_ext', each file is created with the name 'base\_pXXXX\_tXX.ext' for short sections and 'base\_pXXXX\_tXX\_exXX\_vXX\_sXX.ext' for long sections, where the XX respectively specify the hexadecimal values of the PID, TID (table id), TIDext (table id extension), version and section index.

## --no-encapsulation

With --ip-udp, send the tables as raw binary messages in UDP packets. By default, the tables are formatted into TLV messages.

### -o filename

## --output-file filename

## --text-output filename

Save the tables or sections in human-readable text format in the specified file name. By default, when no output option is specified, text is produced on the standard output.

If you need text formatting on the standard output in addition to other output like binary files (--binary-output) or UPD/IP (--ip-udp), explicitly specify this option with "-" as output file name.

### --packet-index

Display the index of the first and last TS packet of each displayed section or table.

### --rewrite-binary

With --binary-output, rewrite the same file with each table. The specified file always contains one single table, the latest one.

#### --rewrite-xml

With --xml-output, rewrite the same file with each table. The specified file always contains one single table, the latest one.

### --strict-xml

Save XML documents in strictly conformant XML format. By default, do not escape characters when this is not syntactically necessary to make the XML text more human-readable.

### --time-stamp

Display a time stamp (current local time) with each table.

#### --ttl value

With --ip-udp, specifies the TTL (Time-To-Live) socket option. The actual option is either "Unicast TTL" or "Multicast TTL", depending on the destination address. Remember that the default Multicast TTL is 1 on most systems.

#### --xml-output filename

Save the tables in XML format in the specified file. To output the XML text on the standard output, explicitly specify this option with "-" as output file name.

## Tables and sections manipulation options

### --fill-eit

Before exiting, add missing empty sections in EIT's and flush them. This can be useful with segmented EIT schedule where empty sections at end of segments are usually not transmitted.

### --pack-all-sections

Same as --all-sections but also modify each long section so that it becomes a valid complete table. Its <code>section\_number</code> and <code>last\_section\_number</code> are forced to zero. Use with care because this may create inconsistent tables. This option can be useful with tables with sparse sections such as EIT's to save them in XML format (as an alternative, see also --fill-eit).



#### --pack-and-flush

Before exiting, pack incomplete tables, ignoring missing sections, and flush them. Use with care because this may create inconsistent tables. Unlike option --pack-all-sections, --pack-and-flush does not force --all-sections because it only applies to the last incomplete tables before exiting.

## Tables and sections formatting options

#### --atsc

Assume that the transport stream is an ATSC one.

ATSC streams are normally automatically detected from their signalization. This option is only useful when ATSC-related stuff are found in the TS before the first ATSC-specific table. For instance, when a PMT with ATSC-specific descriptors is found before the first ATSC MGT or VCT.

#### - c

## --c-style

Same as --raw-dump (no interpretation of section) but dump the bytes in C-language style, eg. "0x01, 0x02," instead of "01 02". Useful to include this output as data in a C source file.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --default-pds value

Default private data specifier (PDS). This option is meaningful only when the signalization is incorrect, when private descriptors appear in tables without a preceding <code>private\_data\_specifier\_descriptor</code>. The specified value is used as private data specifier to interpret private descriptors.

The PDS value can be an integer or one of (not case-sensitive): "BskyB", "CanalPlus", "EACEM", "EICTA" (same as EACEM), "Eutelsat", "Logiways", "Nagra", "NorDig", "OFCOM", "TPS".

### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

## --isdb

Assume that the transport stream is an ISDB one.

ISDB streams are normally automatically detected from their signalization. This option is only useful when ISDB-related stuff are found in the TS before the first ISDB-specific table.

### --japan

A synonym for --isdb --default-charset ARIB-STD-B24. See section 2.3 for more details. This option also activates some specificities for Japan such as the use of JST time instead of UTC.

### --nested-tlv[=min-size]

With option --tlv, try to interpret the value field of each TLV record as another TLV area. If the *min-size* value is specified, the nested TLV interpretation is performed only on value fields larger than this size. The syntax of the nested TLV is the same as the enclosing TLV.

#### ٠..

## --raw-dump

Raw dump of section, no interpretation.

### --tlv syntax

For sections of unknown types, this option specifies how to interpret some parts of the section payload as TLV records. Several --tlv options are allowed, each one describes a part of the section payload.

Each syntax string has the form "start,size,tagSize,lengthSize,order". The start and size fields define the offset and size of the TLV area in the section payload. If the size field is "auto", the TLV extends up to the end of the section. If the start field is "auto", the longest TLV area in the section payload will be used. The fields tagSize and lengthSize indicate the size in bytes of the Tag and

Version 3.22-1926 99 / 395



Length fields in the TLV structure. The field *order* must be either "msb" or "1sb" and indicates the byte order of the Tag and Length fields.

All fields are optional. The default values are "auto, auto, 1, 1, msb".

## CAS identification options

By default, EMM's and ECM's are interpreted according to the *CA\_descriptor* which references their PID. The following options are useful when analyzing partial transport streams without CAT or PMT to correctly identify the CA PID's.

#### --conax

Interpret all EMM and ECM from unknown CAS as coming from Conax.

Equivalent to --default-cas-id 0x0B00.

#### --default-cas-id value

Interpret all EMM's and ECM's from unknown CAS as coming from the specified CA\_System\_Id.

#### --irdeto

Interpret all EMM and ECM from unknown CAS as coming from Irdeto.

Equivalent to --default-cas-id 0x0600.

### --mediaguard

Interpret all EMM and ECM from unknown CAS as coming from MediaGuard.

Equivalent to --default-cas-id 0x0100.

#### --nagravision

Interpret all EMM and ECM from unknown CAS as coming from NagraVision.

Equivalent to --default-cas-id 0x1800.

#### --nds

Interpret all EMM and ECM from unknown CAS as coming from Synamedia (formerly known as NDS).

Equivalent to --default-cas-id 0x0900.

#### --safeaccess

Interpret all EMM and ECM from unknown CAS as coming from SafeAccess.

Equivalent to --default-cas-id 0x4ADC.

#### --viaccess

Interpret all EMM and ECM from unknown CAS as coming from Viaccess.

Equivalent to --default-cas-id 0x0500.

### --widevine

Interpret all EMM and ECM from unknown CAS as coming from Widevine CAS.

Equivalent to --default-cas-id 0x4AD4.

## **Generic common command options**

The following options are implicitly defined in all commands.

### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

### --help

Display command help text.

-v

### --verbose

Produce verbose messages.



## --version

Display the version number.

Version 3.22-1926 101 / 395



## **tsterinfo**

#### **DVB-Terrestrial Information**

This utility performs various operations and conversions on DVB-T transmission and modulation parameters:

- Compute the carrier frequency from a UHF or VHF channel number and optional offset count.
   Triggered when option --uhf-channel, --vhf-channel and optionally --offset-count, are specified.
- Retrieve the UHF or VHF channel number and offset count from a carrier frequency. Triggered when option --frequency is specified.
- Compute the nominal transport stream bitrate from OFDM modulation parameters (bandwidth, high-priority stream error correction rate, constellation and guard interval). Supported for non-hierarchical transmission only.
  - Triggered when options --guard-interval and --high-priority-fec, and optionally --bandwidth and --constellation, are specified.
- Given a transport stream bitrate, retrieve the OFDM modulation parameters (bandwidth, high-priority stream error correction rate, constellation and guard interval). Sometimes, several combinations of parameters are possible; they are all reported (see also option --max-guess). This could be useful on Windows systems where the tuners are not able to report their current parameters. In that case, you can use tsanalyze, tsbitrate or tsp -v to evaluate the transport stream bitrate based on PCR analysis. Then, tsterinfo will retrieve the most probable modulation parameters. Note that only the four mentioned parameters can be retrieved. All other DVB-T transmission parameters are independent from the transport stream bitrate.

Triggered when option --bitrate is specified.

See some examples in section 5.1.5.

### **Usage**

tsterinfo [options]

### **Options**

- -w value
- --bandwidth value

Specify the OFMD bandwith, used to compute the resulting bitrate. Must be one of "8-MHz", "7-MHz", "6-MHz", "5-MHz" (default: "8-MHz").

- -b value
- --bitrate value

Transport stream bitrate in bits/second, based on 188-byte packets. Given this bitrate, tsterinfo will try to guess the OFDM modulation parameters: bandwidth, high-priority stream error correction rate, constellation and guard interval.

- -c value
- --constellation value

Specify the OFMD constellation, used to compute the resulting bitrate. Must be one of "QPSK", "16-QAM", "64-QAM" (default: "64-QAM").

-d

## --default-region

Display the default region for UHF/VHF band frequency layout. See also option --hf-band-region.

-f value

## --frequency value

Carrier frequency in Hz. UHF or VHF channel and offset will be displayed.



#### -g value

#### --guard-interval value

Specify the OFMD guard interval, used to compute the resulting bitrate. Must be one of "1/32", "1/16", "1/8", "1/4" (no default).

#### -r name

#### --hf-band-region name

Specify the region for UHF/VHF band frequency layout.

The available regions are "americas", "europe", "france", "japan", "korea", "philippines", "taiwan", "uk", "us", "usa". For any update, see the file named *tsduck.hfbands.xml* in the same directory as the TSDuck executables.

The default region is "europe". Another default region may be specified per user in the TSDuck configuration file (see Appendix A).

#### -h value

### --high-priority-fec value

Specify the OFMD error correction for high priority streams, used to compute the resulting bitrate. Must be one of "1/2", "2/3", "3/4", "5/6", "7/8" (no default).

### --japan

A synonym for '--hf-band-region japan'.

This is a handy shortcut when working on Japanese transport streams.

#### -m value

#### --max-guess value

When used with --bitrate, specify the maximum number of sets of modulation parameters to display. By default, display only one set of parameters, the one giving the closest bitrate. When the given bitrate is not exact and the transmission parameters are uncertain, it may be useful to display more than one possible set of values. The difference between the specified bitrate and nominal bitrate is displayed for each set of parameters. The various sets of parameters are displayed in increasing order of bitrate difference (ie. most probable parameters first).

When more than one set of parameters give the same bitrate, they are all displayed, regardless of --max-guess.

### -o value

### --offset-count value

Specify the number of offsets from the UHF or VHF channel. The default is zero. See options --uhf-channel and --vhf-channel.

#### -s

### --simple

Produce simple output: only numbers, no comment, no formatting. Typically useful to write scripts and reuse tsterinfo output.

#### -u value

### --uhf-channel value

Specify the UHF channel number of the carrier. Can be combined with an --offset-count option. The resulting frequency will be displayed.

#### -v value

### --vhf-channel value

Specify the VHF channel number of the carrier. Can be combined with an --offset-count option. The resulting frequency will be displayed.

### Generic common command options

The following options are implicitly defined in all commands.

### --debug[=N]

Produce verbose debug output. Specify an optional debug level *N* (1 by default).

Version 3.22-1926 103 / 395



## --help

Display command help text.

## --verbose

Produce verbose messages.

## --version

Display the version number.



## **tsversion**

## Check version, download and upgrade TSDuck

By default, this utility simply displays the TSDuck version. It can also connect to GitHub to list all available releases of TSDuck, check for a new version, download it or upgrade TSDuck to the latest version.

The following command checks for a new version online and, if one is available, downloads it and upgrades TSDuck:

```
tsversion --upgrade
```

Detecting the availability of a new release always works. However, to perform an upgrade, the binary packages for the current operating system and architecture must be available online. Not all combinations of binary packages are available. It is only guaranteed that TSDuck can be upgraded by tsversion for Windows 32 and 64 bits, Fedora 64 bits, Ubuntu 64 bits and MacOS (through Homebrew). For other platforms, you have to recompile TSDuck from sources.

Listing versions and information about versions access the GitHub site. This is the only TSDuck command which performs Internet access.

Remote information is requested from the GitHub API. GitHub limits the anonymous access to its API to a certain number of requests per hour per source IP address. If you get an error such as "API rate limit exceeded", you may have to wait for the next hour and retry. Alternatively, if you are a registered GitHub user and you have a registered authentication token, this rate limit is removed. Set the value of your authentication token into the environment variable TSDUCK\_GITHUB\_API\_TOKEN before using tsversion. For macOS users, if the environment variable HOMEBREW\_GITHUB\_API\_TOKEN is already defined, it will be used.

### **Usage**

tsversion [options]

### **Options**

-a

--all

List all available versions of TSDuck from GitHub.

-b

### --binary

With --download, fetch the binary installers of the latest version. This is the default. When --source is specified, you have to explicitly specify --binary if you also need the binary installers.

- **c** 

### --check

Check if a new version of TSDuck is available from GitHub.

-d

#### --download

Download the latest version (or the version specified by --name) from GitHub. By default, download the binary installers for the current operating system and architecture. Specify --source to download the source code.

If a local file with the same name and size already exists, the local file is reused and the download operation is skipped.

\_ e

#### --extensions

List all available TSDuck extensions.

-f

### --force

Force downloads even if a file with same name and size already exists.

Version 3.22-1926 105 / 395



-i

### --integer

Display the current version of TSDuck in integer format, suitable for comparison in a script. Example: 31000669 for 3.10-669 (5 digits are used for the last commit number).

-1

### --latest

Display the latest version of TSDuck from GitHub.

-n version-name

#### --name version-name

Get information for or download from GitHub the specified version, not the latest one.

-o dir-name

### --output-directory dir-name

Specify the output directory for downloaded files (current directory by default).

### --proxy-host name

Optional proxy host name for Internet access.

## --proxy-password string

Optional proxy password for Internet access (for use with --proxy-user).

## --proxy-port value

Optional proxy port for Internet access (for use with --proxy-host).

### --proxy-user name

Optional proxy user name for Internet access.

-s

### --source

With --download, download the source code archive instead of the binary installers.

-t

### --this

Display the current version of TSDuck (this executable).

-u

### --upgrade

Upgrade TSDuck to the latest version.

### **Generic common command options**

The following options are implicitly defined in all commands.

### --debug[=N]

Produce verbose debug output. Specify an optional debug level N (1 by default).

### --help

Display command help text.

- v

#### --verbose

Produce verbose messages.

### --version

Display the version number.



# 4 TSP Plugins

This chapter contains the reference documentation of all plugins for *tsp*, the *transport stream processor*. The input and output plugins can also be used by the command *tsswitch*.

The Table 3 lists all available plugins.

Table 3: tsp plugins

Plugin	Туре	Description
aes	packet	Experimental AES Scrambling
analyze	packet	Analyze the structure of the transport stream
bat	packet	Perform various transformations on the BAT
bitrate_monitor	packet	Monitor the bitrate of the TS or a given PID
boostpid	packet	Boost the bitrate of a PID, stealing stuffing packets
cat	packet	Perform various transformations on the CAT
clear	packet	Extract clear (non scrambled) sequences
continuity	packet	Check TS continuity counters
count	packet	Count TS packets per PID
craft	input, packet	Build or modify specifically crafted packets
cutoff	packet	Set labels on TS packets upon reception of UDP messages
datainject	packet	DVB SimulCrypt-compliant EMM and private data injector
decap	packet	Decapsulate TS packets from a PID produced by <i>encap</i> plugin
dektec	input, output	Dektec DTA-1xx DVB-ASI and modulator devices I/O
descrambler	packet	Generic DVB descrambler
drop	output	Drop output packets
duplicate	packet	Duplicate PID's, reusing null packets
dvb	input	DVB receiver devices (DVB-S, DVB-C, DVB-T) input
eit	packet	Analyze EIT sections
encap	packet	Encapsulate packets from several PID's into one single PID
file	input, output, packet	Transport stream files input / output. As packet processor plugin, save packets to a file and pass to next plugin
filter	packet	Filter TS packets according to various criteria
fork	input, output, packet	Exchange packets with a created process, either input or output
hides	output	Send the transport stream to a HiDes modulator device
history	packet	Report a history of major events on the transport stream
hls	input, output	Receive or generate HTTP Live Streaming (HLS) media
http	input	Read a transport stream from an HTTP server
inject	packet	Inject a table into a transport stream
ip	input, output	UDP/IP sockets I/O, including multicast IP
limit	packet	Limit the global bitrate by dropping packets
merge	packet	Merge TS packets coming from the output of a created process
mpe	packet	Extract MPE (Multi-Protocol Encapsulation) datagrams
mpeinject	packet	Encapsulate and inject an incoming UDP stream into MPE

Version 3.22-1926 107 / 395



Plugin	Туре	Description
mux	packet	Inject TS packets from a file into the transport
nit	packet	Perform various transformations on the NIT
nitscan	packet	Scan the NIT for tuning information
null	input	Null packets generator
pat	packet	Perform various transformations on the PAT
pattern	packet	Replace packet payload with a binary pattern
pcradjust	packet	Adjust PCR's according to a constant bitrate
pcrbitrate	packet	Permanently recompute bitrate based on PCR's
pcrextract	packet	Extract PCR's from TS packets
pcrverify	packet	Verify PCR values
pes	packet	Analyze PES packets
play	output	Play output TS on a media player
pmt	packet	Perform various transformations on the PMT
psi	packet	Extract all PSI tables (PAT, CAT, PMT, NIT, BAT, SDT)
psimerge	packet	Merge PSI/SI from mixed streams
reduce	packet	Reduce the bitrate by removing stuffing packets
regulate	packet	Regulate TS packets flow according to a bitrate or PCR
remap	packet	Generic PID remapper
rmorphan	packet	Remove unreferenced ("orphan") PID's
rmsplice	packet	Remove ads insertions using SCTE 35 splicing information
scrambler	packet	DVB scrambler
sdt	packet	Perform various transformations on the SDT
sections	packet	Remove or merge sections from various PID's
sifilter	packet	Extract PSI/SI PID's
skip	packet	Skip leading packets in a TS
slice	packet	Pass or drop packets based on packet numbers or relative TS time
spliceinject	packet	Inject SCTE 35 splice commands in a transport stream
srt	input, output	Send / receive packets using Secure Reliable Transport (SRT)
stuffanalyze	packet	Analyze the level of stuffing in sections
svremove	packet	Remove a service
svrename	packet	Rename a service (modify service id, name, type, etc.)
t2mi	packet	Extract T2-MI (DVB-T2 Modulator Interface) packets
tables	packet	Collect MPEG tables
teletext	packet	Extract Teletext subtitles in SRT format
time	packet	Schedule packets pass or drop
timeref	packet	Update TDT and TOT with a new time reference
trigger	packet	Trigger actions on selected labeled TS packets
tsrename	packet	Rename a transport stream (modify ts id, etc.)
until	packet	Pass TS packets until specified conditions
zap	packet	Zap on one service, create an SPTS

Some plugins are related to the scrambling of TS packets and Conditional Access Systems. Please note the following:



- The DVB-CSA scrambling algorithm is inherently and purposely very slow with a software implementation. A 3.4 MHz Pentium 4 CPU, for instance, cannot (de)scramble more than 20 Mb/s. Be cautious not to ask for impossible tasks, like real time (de)scrambling of a complete TS on a regular PC.
- These tsp plugins are implemented for testing Conditional Access Systems, either on the head-end or set-top box side. TSDuck does not provide any support to hack or circumvent Conditional Access Systems and will never do so. The CAS-related plugins require and use external CAS-provided systems (ECMG, EMMG and smartcards). All secrecy and proprietary CAS information remain isolated inside these external systems and TSDuck does not attempt to access this type of secret and private information. TSDuck only interacts with these systems using their external communication protocols.

Version 3.22-1926 109 / 395





# **Experimental AES Scrambling**

This plugin scrambles or descrambles the payload of packets from a specified service using AES and a fixed key. Various chaining modes are allowed. All video, audio and subtitles components of the service are scrambled.

By default, the plugin scrambles the packets. Use option --descramble to descramble the packets.

# Usage

tsp -P aes [options] [service]

#### **Parameter**

Specifies the service to scramble or descramble. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored.

If the service is unspecified, individual PID's are scrambled (see option --pid).

# **Options**

### --cbc

Use Cipher Block Chaining (CBC) mode without padding. The residue (last part of the packet payload, shorter than 16 bytes) is left clear.

#### --cts1

Use Cipher Text Stealing (CTS) mode. TS packets with a payload shorter than 17 bytes are left clear.

Several incompatible designs of CTS exist. This one implements the description in:

- 1) Bruce Schneier, Applied Cryptography (2nd, Ed.), pp 191, 195
- 2) RFC 2040, The RC5, RC5-CBC, RC5-CBC-Pad, and RC5-CTS Algorithms
- 3) "CBC ciphertext stealing" in http://en.wikipedia.org/wiki/Ciphertext\_stealing

### --cts2

Use Cipher Text Stealing (CTS) mode. TS packets with a payload shorter than 16 bytes are left clear.

Several incompatible designs of CTS exist. This one implements the description in http://csrc.nist.gov/groups/ST/

toolkit/BCM/documents/ciphertext%20 stealing%20 proposal.pdf

#### --cts3

Use ECB Cipher Text Stealing (CTS) mode. TS packets with a payload shorter than 17 bytes are left clear.

Several incompatible designs of CTS exist. This one implements the description of "ECB ciphertext stealing" in http://en.wikipedia.org/wiki/Ciphertext\_stealing

#### --cts4

Use ECB Cipher Text Stealing (CTS) mode. TS packets with a payload shorter than 17 bytes are left clear.

Several incompatible designs of CTS exist. This one implements the ECB ciphertext stealing which is used in ST 71xx chips.

# --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.



#### -d

### --descramble

Descramble instead of scramble.

# --dvs042

Use DVS 042 (now ANSI/SCTE 52 2003) cipher block chaining mode.

TS packets with a payload shorter than 16 bytes are left clear. Note that the DVS 042 standard allows the scrambling of short messages (shorter than the cipher block size, ie. 16 bytes with AES) but the two versions of the standard (ANSI/SCTE 52 2003 and ANSI/SCTE 52 2008) have incompatible descriptions of the processing of short messages. To avoid conflicts, this plugin does not scramble these short messages.

#### --ecb

Use Electronic Code Book (ECB) mode without padding. The residue (last part of the packet payload, shorter than 16 bytes) is left clear. This is the default mode.

# --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

- -i value
- --iv value

Specifies the initialization vector. Must be a string of 32 hexadecimal digits. Must not be used in ECB mode and the various ECB-CTS modes. The default IV is all zeroes.

### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

- -k value
- --key value

Specifies a fixed and constant AES key for all TS packets. The value must be a string of 32 or 64 hexadecimal digits. This is a mandatory parameter.

- **-p** pid1[-pid2]
- **--pid** *pid1*[-*pid2*]

Specifies PID's to scramble. Can be used instead of specifying a service.

Several -p or --pid options may be specified.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 111 / 395



# **analyze**

# **Global Transport Stream Analysis**

This plugin performs various types of global analysis on the transport stream. It is equivalent to the *tsanalyze* utility. Actually, the following two commands produce the same result:

```
tsanalyze options filename
tsp -I file filename -P analyze options -O drop
```

## **Usage**

tsp -P analyze [options]

# **General purpose options**

- -i seconds
- --interval seconds

Produce a new output file at regular intervals. After outputing a file, the analysis context is reset, ie. each output file contains a fully independent analysis.

-m

# --multiple-files

When used with --interval and --output-file, create a new file for each analysis instead of rewriting the previous file. Assuming that the specified output file name has the form base.ext, each file is created with a time stamp in its name as base\_YYYYMMDD\_hhmmss.ext.

-o filename

# --output-file filename

Specify the output text file for the analysis result. By default, use the standard output.

Warning: if you do not specify this option, be sure to redirect the output plugin to something different from the default. Otherwise, the text output of the analysis will be mixed with the binary output of the TS packets!

# Analysis and output control options

The options for controlling the analysis and the output are the same as for the tsanalyze utility.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.





### Perform Various Transformations on a BAT

This plugin performs various transformations on the BAT, either all BAT's of the transport stream or one specific BAT for one specific bouquet.

# **Usage**

tsp -P bat [options]

## **Options**

### --bitrate value

Specifies the bitrate in bits / second of the PID containing the BAT if a new one is created. The default is 3,000 b/s.

#### -b value

#### --bouquet-id value

Specify the bouquet id of the BAT to modify and leave other BAT's unmodified. By default, all BAT's are modified.

# --cleanup-private-descriptors

Remove all private descriptors without preceding *private\_data\_specifier\_descriptor*.

#### - (

#### --create

Create a new empty BAT if none was received after one second.

This is equivalent to --create-after 1000.

### --create-after milliseconds

Create a new empty BAT if none was received after the specified number of milliseconds. If an actual BAT is received later, it will be used as the base for transformations instead of the empty one.

#### -i

# --increment-version

Increment the version number of the BAT.

# --inter-packet value

When a new BAT is created and --bitrate is not present, this option specifies the packet interval for the BAT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.

### -v value

# --new-version value

Specify a new value for the version of the BAT.

# --pds value

With option --remove-descriptor, specify the private data specifier which applies to the descriptor tag values above 0x80.

# --remove-descriptor value

Remove from the BAT all descriptors with the specified tag. Several --remove-descriptor options may be specified to remove several types of descriptors. See also option --pds.

Version 3.22-1926 113 / 395



### -r value

### --remove-service value

Remove the specified service\_id from the following descriptors: <code>service\_list\_descriptor</code>, <code>logical\_channel\_number\_ descriptor</code>. Several <code>--remove-service</code> options may be specified to remove several services.

#### --remove-ts value

Remove from the BAT all references to the transport stream with the specified *ts\_id* value. Several --remove-ts options may be specified to remove several TS.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **bitrate\_monitor**

# Monitor the bitrate of the TS or a given PID

This plugin is used to monitor the bitrate of the complete transport stream or a given PID. Note that the bitrate is the instantaneous bitrate, meaning that it is computed from the packets received during the last n seconds (n is a plugin parameter, default value = 5).

If the bitrate value is outside of the specified range, an alarm is reported.

An alarm command can be specified to report anomalies in a custom way. If such a command is present, it will be called with the problem description as parameter.

## Usage

```
tsp -P bitrate_monitor [options]
```

# **Options**

- -a "command"
- --alarm-command "command"

Command to run when the bitrate goes either out of range or back to normal.

The command receives an additional string parameter containing an informational message.

--min value

Set minimum allowed value for bitrate in bits/s. Default value = 10 bits/s.

--max value

Set maximum allowed value for bitrate bits/s. Default value =  $2^{32}$  bits/s.

Note that default values for min and max bitrate are only useful to detect if packets for the given PID are broadcast or not.

- -p value
- --periodic-bitrate value

Always report bitrate at the specific interval in seconds, even if the bitrate is in range.

### --pid value

Specifies the PID to monitor.

By default, when no --pid is specified, monitor the bitrate of the full TS.

Compatibility: Previously, the PID to monitor could be specified as a command line parameter, without explicit --pid option. This is still accepted for compatibility for old scripts.

# --set-label-above label1[-label2]

Set the specified labels on all packets while the bitrate is above normal.

Several --set-label-above options may be specified.

### --set-label-below label1[-label2]

Set the specified labels on all packets while the bitrate is below normal.

Several --set-label-below options may be specified.

# --set-label-go-above label1[-label2]

Set the specified labels on one packet when the bitrate goes above normal.

Several --set-label-go-above options may be specified.

### --set-label-go-below label1[-label2]

Set the specified labels on one packet when the bitrate goes below normal.

Several --set-label-go-below options may be specified.

# --set-label-go-normal Label1[-Label2]

Set the specified labels on one packet when the bitrate goes back to normal (within range).

Version 3.22-1926 115 / 395



Several --set-label-go-normal options may be specified.

# --set-label-normal label1[-label2]

Set the specified labels on all packets while the bitrate is normal (within range).

Several --set-label-normal options may be specified.

# --tag 'string'

Message tag to be displayed in alarms. Useful when the plugin is used several times in the same process.

### -t value

#### --time-interval value

Time interval in seconds used to compute the bitrate. The default is 5 seconds.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **boostpid**

# Boost the Bitrate of a PID

This plugin artificially increases the bitrate of a selected PID by adding empty packets (ie. without payload). The plugin does not really insert new packets in the TS, it "steals" stuffing packets.

# **Usage**

tsp -P boostpid [options] pid addpkt inpkt

#### **Parameters**

## pid

The first parameter specifies the PID to boost.

### addpkt inpkt

The second and third parameters specify that *addpkt* TS packets must be automatically added after every *inpkt* input TS packets in the PID. Both *addpkt* and *inpkt* must be non-zero integer values.

As an example, the parameters 3 1 indicate to add 3 new empty packets in the PID for every existing packet. The resulting bitrate of the PID is multiplied by 4.

Take care to limit the added packet ratio to something realistic. The value 1000/1, for instance, is unrealistic since it is impossible in most cases to find 1000 stuffing packets to replace between all existing packets of the PID.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 117 / 395



# cat

### Perform Various Transformations on the CAT

This plugin performs various transformations on the CAT.

## Usage

```
tsp -P cat [options]
```

# **Options**

- -a casid/pid[/private-data]
- --add-ca-descriptor casid/pid[/private-data]

Add a *CA\_descriptor* in the CAT with the specified CA System Id and EMM PID. The optional private data must be a suite of hexadecimal digits. Several <code>-add-ca-descriptor</code> options may be specified to add several descriptors.

#### -b value

### --bitrate value

Specifies the bitrate in bits / second of the PID containing the CAT if a new one is created. The default is 3,000 b/s.

# --cleanup-private-descriptors

Remove all private descriptors without preceding *private\_data\_specifier\_descriptor*.

#### - C

#### --create

Create a new empty CAT if none was received after one second.

This is equivalent to --create-after 1000.

### --create-after milliseconds

Create a new empty CAT if none was received after the specified number of milliseconds. If an actual CAT is received later, it will be used as the base for transformations instead of the empty one.

This can be useful to force the creation of a CAT in a TS which has none (the CAT is an optional table).

### -i

# --increment-version

Increment the version number of the CAT.

# --inter-packet value

When a new CAT is created and --bitrate is not present, this option specifies the packet interval for the CAT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.

### -v value

# --new-version value

Specify a new value for the version of the CAT.

# **-r** id1[-id2]

### --remove-casid id1[-id2]

Remove all *CA\_descriptors* with any of the specified CA System Ids.

Several --remove-casid options may be specified.

# --remove-pid pid1[-pid2]

Remove all *CA\_descriptors* with the specified EMM PID values.

Several --remove-pid options may be specified.



# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 119 / 395



# **Eclear**

# **Extract Clear (Non Scrambled) Sequences**

This plugin extracts clear (non scrambled) sequences of a transport stream.

The extraction is based on one "reference" service (see option -s). When a clear packet is found on any audio or video stream of the reference service, all subsequent packets in the TS are transmitted. When no clear packet has been found in the last second, all subsequent packets in the TS are dropped.

This plugin is typically used after the plugin zap. It let the service pass when it is clear and drops it when it is scrambled.

## **Usage**

```
tsp -P clear [options]
```

# **Options**

-a

#### --audio

Check only audio PIDs for clear packets. By default, audio and video PIDs are checked.

# --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

-d value

### --drop-after-packets value

Specifies the number of packets after the last clear packet to wait before stopping the packet transmission. By default, stop 1 second after the last clear packet (based on current bitrate).

# --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --ianan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

-s name-or-id

### --service name-or-id

Specify the reference service. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If this option is not specified, the first service in the PAT is used.

# --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

-v

# --video

Check only video PIDs for clear packets. By default, audio and video PIDs are checked.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 121 / 395



# **=**continuity

# **Check Continuity Counters**

This plugin checks the continuity counters on TS packets, PID per PID.

## Usage

```
tsp -P continuity [options]
```

# **Options**

- -f
- --fix

Fix incorrect continuity counters. By default, only display discontinuities.

```
-p pid1[-pid2]
```

**--pid** *pid1*[-*pid2*]

Check or fix continuity counters only in packets with these PID values. Several -p or --pid options may be specified. By default, all PID's are checked or fixed.

```
-t "string"
--tag "string"
```

Message tag to be displayed when packets are missing. Useful when the plugin is used several times in the same command line.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

```
--only-label label1[-label2]
```

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# count

# Count TS packets per PID

This plugin counts packets per PID and provides either a summary of packet counts or a detailed list of packet per PID.

# **Usage**

```
tsp -P count [options]
```

# **Options**

-a

# --all

Report packet index and PID for all packets from the selected PID's. By default, only a final summary is reported.

-b

#### --brief

Brief display. Report only the numerical values, not comment on their usage. This option is useful for automatic processing of the resulting output.

-i value

### --interval value

Report a time-stamp and global packet counts at regular intervals. The specified value is a number of packets.

-n

# --negate

Negate the filter: specified PID's are excluded.

-o filename

### --output-file filename

Specify the output file for reporting packet counters. By default, report on standard error using the tsp logging mechanism.

**-p** pid1[-pid2]

# --pid pid1[-pid2]

PID filter: select packets with these PID values. Several -p or --pid options may be specified. By default, if --pid is not specified, all PID's are selected.

-s

#### --summary

Display a final summary of packet counts per PID. This is the default, unless --all or --total is specified, in which case the final summary is reported only if --summary is specified.

--tag "string"

Message tag to be displayed with count report lines. Useful when the plugin is used several times in the same command line.

-t

# --total

Display the total packet counts in all PID's.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

Version 3.22-1926 123 / 395



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **=**craft (input)

# **Build specifically crafted input packets**

This plugin generates fake transport stream packets from scratch. The various fields in the packets are specified using command line options.

# **Usage**

```
tsp -I craft [options]
```

## **Options**

### --cc value

Specify the initial value of the continuity\_counter field (0 by default).

#### --constant-cc

Do not increment the continuity counter.

By default, the continuity counter in incremented when the packet has a payload.

#### -c value

#### --count value

Specify the number of crafted packets to generate. After the last packet, an end-of-file condition is generated.

By default, if --count is not specified, crafted packets are generated endlessly.

# --discontinuity

Set the *discontinuity\_indicator* in the packets.

An adaptation field is created.

#### --error

Set the transport\_error\_indicator in the packets.

### --es-priority

Set the *elementary\_stream\_priority\_indicator* in the packets.

An adaptation field is created.

# -j

### --joint-termination

When --count is specified, perform a *joint termination* when completed instead of unconditional termination. See the description of the tsp command for more details on *joint termination*.

# --no-payload

Do not use a payload.

# --opcr value

Set this OPCR value in the packets.

An adaptation field is created.

# --payload-pattern value

Specify the binary pattern to apply on packets payload.

The value must be a string of hexadecimal digits specifying any number of bytes. The pattern is repeated to fill the payload. The last repetition of the pattern is truncated if necessary.

The default is FF.

# --payload-size value

Specify the size of the packet payload in bytes. When necessary, an adaptation field is created.

Note that --payload-size 0 specifies that a payload exists with a zero size. This is different from --no-payload which also specifies that the payload does not exist.

By default, the payload uses all free space in the packet.

Version 3.22-1926 125 / 395



#### --pcr value

Set this PCR value in the packets. An adaptation field is created.

### -p value

# --pid value

Specify the PID for the packets (0 by default).

# --priority

Set the transport\_priority flag in the packets.

### --private-data value

Specify the complete binary content of the *transport\_private\_data* in the adaptation field. The value must be a string of hexadecimal digits specifying any number of bytes.

# --pusi

Set the *payload\_unit\_start\_indicator* in the packets.

# --random-access

Set the *random\_access\_indicator* in the packets.

An adaptation field is created.

# --scrambling value

Specify the value of the *transport\_scrambling\_control* field (0 by default).

# --splice-countdown value

Create a splicing point and set this splice countdown value in the packets.


An adaptation field is created.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

## --help

Display plugin help text.



# **craft** (packet processing)

# Craft specific low-level transformations on packets

This plugin modifies precise fields in all TS packets.

Some operations may need space in the adaptation field. By default, the payload is left unmodified and a transformation is rejected if it needs to enlarge the adaptation field since this would destroy part of the existing payload. Enlarging the adaptation field is possible only when --payload-pattern is specified, in which case the payload is overwritten anyway.

# **Usage**

```
tsp -P craft [options]
```

# **Options**

## --clear-discontinuity

Clear the discontinuity\_indicator in the packets.

#### --clear-error

Clear the *transport\_error\_indicator* in the packets.

### --clear-es-priority

Clear the *elementary\_stream\_priority\_indicator* in the packets.

# --clear-priority

Clear the *transport\_priority* flag in the packets.

# --clear-pusi

Clear the *payload\_unit\_start\_indicator* in the packets.

# --clear-random-access

Clear the random\_access\_indicator in the packets.

# --continuity-counter value

Specify the value of the *continuity\_counter* field.

# --discontinuity

Set the *discontinuity\_indicator* in the packets.

Space is required in the adaptation field.

#### --error

Set the *transport\_error\_indicator* in the packets.

### --es-priority

Set the *elementary\_stream\_priority\_indicator* in the packets.

Space is required in the adaptation field.

# --no-opcr

Remove the OPCR from the packets.

#### --no-payload

Remove the payload.

### --no-pcr

Remove the PCR from the packets.

### --no-private-data

Remove the private data from adaptation field.

# --no-splice-countdown

Remove the splicing point from the packets.

Version 3.22-1926 127 / 395

Version 3.22-1926



#### --offset-pattern value

Specify starting offset in payload when using --payload-pattern. By default, the pattern replacement starts at the beginning of the packet payload.

### --opcr value

Set this OPCR value in the packets.

Space is required in the adaptation field.

# --pack-pes-header

When a TS packet contains the start of a PES packet and the header of this PES packet contains stuffing, shift the TS payload to remove all possible stuffing from the PES header. Create TS stuffing in the adaptation field to compensate.

With PES data streams such as subtitles, the PES header sometimes contains stuffing to make sure that the PES packet uses an integral number of full TS packets. This option is a way to create space in the adaptation field of TS packets without destroying data. Then, PCR or other data can be added in the adaptation fields.

# --payload-pattern value

Overwrite the payload and specify the binary pattern to apply. The value must be a string of hexadecimal digits specifying any number of bytes. The pattern is repeated to fill the payload.

### --payload-size size

Resize the packet payload to the specified value in bytes.

When necessary, an adaptation field is created or enlarged. Without --payload-pattern, the existing payload is either shrunk or enlarged.

When an existing payload is shrunk, the end of the payload is truncated.

When an existing payload is enlarged, its end is padded with 0xFF bytes.

Note that --payload-size 0 specifies that a payload exists with a zero size. This is different from --no-payload which also specifies that the payload does not exist.

#### --pcr value

Set this PCR value in the packets.

Space is required in the adaptation field.

# --pes-payload

With this option, the modified payload is the PES payload, not the TS payload. When the TS packet does not contain the start of a PES packet, the TS payload is not modified.

With --payload-size, the TS payload is resized so that the part of the PES payload which is in the TS packet gets the specified size.

With --payload-pattern and --offset-pattern, the pattern is applied inside the PES payload at the specified offset.

### -p value

### --pid value

Modify the PID to the specified value.

# --priority

Set the transport\_priority flag in the packets.

# --private-data value

Specify the binary content of the *transport\_private\_data* in the adaptation field. The value must be a string of hexadecimal digits specifying any number of bytes.

Space is required in the adaptation field.

#### --pusi

Set the *payload\_unit\_start\_indicator* in the packets.

## --random-access

Set the random\_access\_indicator in the packets.

128 / 395



Space is required in the adaptation field.

# --scrambling value

Specify the value of the *transport\_scrambling\_control* field.

# --splice-countdown value

Create a splicing point and set this splice count down value in the packets.  $\label{eq:countdown}$ 

Space is required in the adaptation field.

# **Generic packet processing plugin options**

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label Label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 129 / 395



# **cutoff**

# Set labels on TS packets upon reception of UDP messages

This plugin set or clear labels on the TS packets upon reception of text commands from UDP.

This plugin is typically used as a remote command reception. Depending on the remote commands, packets are marked and can be processed differently in subsequent plugins in the chain.

# **Remote commands**

The plugin *cutoff* listens to UDP datagrams on a given port. Each datagram contains exactly one command. A command is an ASCII string. Any trailing control characters such as CR or LF is ignored.

The command string can be one of:

```
pulse-label n Set the label n on the next TS packet (only once).

start-label n Set the label n on all TS packets (until the next stop-label command).

stop-label n Stop setting the label n on all TS packets.

exit Exit the tsp execution, simulate an end of stream at the next TS packet.
```

Note that the *bash*<sup>4</sup> shell provides an easy way to redirect output to an UDP message. The following sample commands send UDP messages on port 4444 to system 127.0.0.1 (the local host). This is the easiest way to control the plugin *cutoff*.

```
echo >/dev/udp/127.0.0.1/4444 pulse-label 1
echo >/dev/udp/127.0.0.1/4444 start-label 2
echo >/dev/udp/127.0.0.1/4444 stop-label 2
echo >/dev/udp/127.0.0.1/4444 exit
```

#### **Usage**

```
tsp -P cutoff [options] [[source@]address:]port
```

# **Parameter**

The parameter [address:]port describes the destination of incoming UDP datagrams. All datagrams which are received on this stream are text commands.

The *port* part is mandatory and specifies the UDP port to listen on. The *address* part is optional. It specifies an IP multicast address to listen on. It can be also a host name that translates to a multicast address.

An optional source address can be specified as <code>source@address:port</code> in the case of source-specific multicast (SSM).

If the address is not specified, the plugin simply listens on the specified local port and receives the packets which are sent to one of the local (unicast) IP addresses of the system.

# **Options**

-a address

--allow address

Specify an IP address or host name which is allowed to send remote commands. Several --allow options can be used to specify several allowed remote control systems.

By default, all received commands are accepted. If at least one --allow option is specified, any remote command which is not sent by an allowed host is rejected.

This is a security feature, but not a perfect one since IP address spoofing is trivial with UDP.

130 / 395 Version 3.22-1926

\_

<sup>&</sup>lt;sup>4</sup> This is a feature of *bash*, not a Linux feature. It is available on all platforms, including macOS or Cygwin.



#### -b value

### --buffer-size value

Specify the UDP socket receive buffer size (socket option).

#### --default-interface

Let the system find the appropriate local interface on which to listen. By default, listen on all local interfaces.

#### -f

#### --first-source

Filter UDP packets based on the source address. Use the sender address of the first received packet as only allowed source.

This option is useful when several sources send packets to the same destination address and port. Accepting all commands could result in inconsistent processing and only one sender shall be accepted.

To allow a more precise selection of the sender, use option --source. Options --first-source and --source are mutually exclusive.

#### -l address

#### --local-address address

Specify the IP address of the local interface on which to listen. It can be also a host name that translates to a local address.

By default, listen on all local interfaces.

### --max-queue value

Specify the maximum number of queued UDP commands before their execution into the stream. The default is 128.

### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

### --receive-timeout value

Specify the UDP reception timeout in milliseconds. This timeout applies to each receive operation, individually.

By default, receive operations wait for commands, possibly forever.

#### -r

# --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

# -s address[:port]

# --source address[:port]

Filter UDP packets based on the specified source address.

This option is useful when several sources send packets to the same destination address and port. Accepting all commands could result in inconsistent processing and only one sender shall be accepted.

Options --first-source and --source are mutually exclusive.

# --ssm

This option forces the usage of source-specific multicast (SSM) using the source address which is specified by the option --source. Without --ssm, standard ("any-source') multicast is used and the option --source is used to filter incoming packets.

The --ssm option is implicit when the classical SSM syntax source@address:port is used.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

Version 3.22-1926 131 / 395



# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **datainject**

# **DVB SimulCrypt EMM and Private Data Injector**

This plugin receives EMM's and/or private data using the DVB SimulCrypt EMMG/PDG  $\Leftrightarrow$  MUX protocol and injects them into the transport stream in a specific PID.

This plugin is a TCP server (MUX side of the protocol). It accepts only one EMMG/PDG connection at a time

If the injected data are EMM's, make sure to update the CAT accordingly (see the plugin *cat*).

### **Usage**

tsp -P datainject [options]

# **Options**

- -b value
- --bitrate-max value

Specifies the maximum bitrate for the data PID in bits / second. By default, the data PID bitrate is limited by the stuffing bitrate (data insertion is performed by replacing stuffing packets).

### --buffer-size value

Specify the TCP and UDP socket receive buffer size in bytes (socket option).

- -v value
- --emmg-mux-version value

Specifies the version of the EMMG/PDG <=> MUX DVB SimulCrypt protocol.

Valid values are 1 to 5. The default is 2.

### --log-data[=level]

Same as --log-protocol but applies to *data\_provision* messages only.

To debug the session management without being flooded by data messages, use --log-protocol=info --log-data=debug.

# --log-protocol[=level]

Log all EMMG/PDG  $\Leftrightarrow$  MUX protocol messages using the specified level. If the option is not present, the messages are logged at debug level only. If the option is present without value, the messages are logged at info level. A level can be a numerical debug level or any of the following: fatal, severe, error, warning, info, verbose, debug.

### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

- -p value
- --pid value

Specifies the PID for the data insertion. This option is mandatory.

- -q value
- --queue-size value

Specifies the maximum number of data sections or TS packets in the internal queue, i.e. messages which are received from the EMMG/PDG client but not yet inserted into the transport stream.

The default is 1000.

#### - r

### --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

Version 3.22-1926 133 / 395



## -s [address:]port

## --server [address:]port

Specifies the local TCP port on which the plugin listens for an incoming EMMG/PDG connection. This option is mandatory.

When present, the optional address shall specify a local IP address or host name (by default, the plugin accepts connections on any local IP interface). This plugin behaves as a MUX, ie. a TCP server, and accepts only one EMMG/PDG connection at a time.

# -u [address:]port

# --udp [address:]port

Specifies the local UDP port on which the plugin listens for data provision messages (these messages can be sent using TCP or UDP).

By default, the UDP reception uses the same port and optional local address as specified for TCP using option --server.

# --unregulated

Insert data packets immediately. Do not regulate the insertion of data packets, do not limit the data bitrate.

This is useful to test invalid EMMG's which do not comply with the allocated bitrate policy.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **#**decap

# Decapsulate TS packets from a PID produced by the encap plugin

This plugin is the counterpart of the *encap* plugin. It decapsulates the original TS packets from a "tunnel" PID which was created by *encap*. See the documentation of the *encap* plugin for more details.

The decapsulated packets replace the tunnel PID. Because of the encapsulation overhead, the total volume of decapsulated packets is slightly smaller (approximately 2%) than the encapsulation PID. The packets in excess are replaced by null packets after decapsulation.

# **Usage**

```
tsp -P decap [options]
```

## **Options**

- -i
- --ignore-errors

Ignore errors such malformed encapsulated stream.

- -p value
- --pid value

Specify the input PID containing all encapsulated PID's. This is a mandatory parameter, there is no default.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 135 / 395



# dektec (input)

### Dektec DTA-1xx and DTU-2xx ASI and demodulator devices

This input plugin receives packets from a Dektec DTA-1xx or DTU-2xx DVB-ASI or demodulator device.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

## Usage

```
tsp -I dektec [options]
```

# **Options**

# --atsc3-bandwidth value

ATSC demodulators: indicate the ATSC 3.0 bandwidth.

Must be one of "6-MHz", "7-MHz", "8-MHz". The default is 8-MHz.

### --c2-bandwidth value

DVB-C2 demodulators: indicate the DVB-C2 bandwidth.

Must be one of "6-MHz", "8-MHz". The default is 8-MHz.

#### -c value

#### --channel value

Channel index on the input Dektec device. By default, use the first input channel on the device.

#### --code-rate value

For demodulators devices only: specify the code rate. The specified value depends on the modulation type.

DVB-S: "1/2", "2/3", "3/4", "4/5", "5/6", "6/7", "7/8".

DVB-S2: "1/2", "1/3", "1/4", "2/3", "2/5", "3/4", "3/5", "4/5", "5/6", "6/7", "7/8", "8/9", "9/10".

DVB-T: "1/2", "2/3", "3/4", "5/6", "7/8".

The value "auto" can be used to automatically detect the code rate. This is the default.

### --constellation value

DVB-T demodulators: indicate the constellation type.

Must be one of "16-QAM", "64-QAM", "QPSK", "auto".

The value "auto" can be used to automatically detect the constellation. This is the default.

# -d value

### --device value

Device index, from 0 to N-1 (with N being the number of Dektec devices in the system). Use the command "tsdektec -a [-v]" to have a complete list of devices in the system. By default, use the first input Dektec device.

### --dvbt-bandwidth value

DVB-T/T2 demodulators: indicate the bandwidth in MHz. The default is 8 MHz.


Must be one of "1.7", "10", "5", "6", "7", "8". The bandwidth values 1.7, 5 and 10 MHz are valid for DVB-T2 only.

#### -f value

# --frequency value

For demodulator devices only: specify the frequency, in Hz, of the input carrier. There is no default.

For DVB-S/S2 receivers, the specified frequency is the *intermediate* frequency. For convenience, the option --satellite-frequency can be used instead of --frequency when the intermediate frequency is unknown. When --frequency is used with DVB-S/S2, the original



satellite frequency is unknown, it is impossible to determine if a high band is used and no "high band 22 kHz tone" is send to the LNB.

For DTA-2137 receivers, the valid range is 950 MHz to 2150 MHz (L Band).

### --guard-interval value

DVB-T demodulators: indicate the guard interval.

Must be one of "1/16", "1/32", "1/4", "1/8", "auto". The default is "auto".

### --isdbt-bandwidth value

ISDB-T demodulators: indicate the bandwidth in MHz.

Must be one of "5", "6", "7", "8". The default is 8 MHz.

### --isdbt-segments value

ISDB-T demodulators: indicate the number of segments.

Must be one of "1", "3" or "13". The default is 1.

#### --isdbt-subchannel value

ISDB-T demodulators: indicate the sub-channel number (0..41) of the centre segment of the spectrum. The default is 22.

# --**j83** value

QAM demodulators: indicate the ITU-T J.83 annex to use. Must be one of "A", "B", "C".

A is DVB-C, B is "American QAM", C is "Japanese QAM". The default is A.

# -- lnb string

DVB-S/S2 receivers: description of the LNB which is used to convert the --satellite-frequency into an *intermediate* frequency. This option is useless when --satellite-frequency is not specified.

See the description of the same parameter in plugin *dvb* for the syntax of the LNB string.

# -m value

# --modulation value

For demodulators, indicate the modulation type. The supported modulation types depend on the device model. The default modulation type is DVB-S.

Must be one of "ATSC-VSB", "ATSC-3.0", "DAB", "DVB-C2", "DVB-S", "DVB-S-QPSK" (same as "DVB-S"), "DVB-S2", "DVB-S2-QPSK" (same as "DVB-S2"), "DVB-S2-8PSK", "DVB-S2-16APSK", "DVB-S2-32APSK", "DVB-T", "DVB-T2", "ISDB-T", "QAM" (auto-detection of QAM type), "128-QAM", "16-QAM", "256-QAM", "32-QAM", "64-QAM".

# --polarity value

DVB-S/S2 receivers: indicate the polarity.

Must be one of "horizontal", "vertical". The default is "vertical".

# --qam-b value

QAM demodulators: with -- j83 B, indicate the QAM-B interleaver mode.

Must be one of "I8-J16", "I16-J8", "I32-J4", "I64-J2", "I128-J1", "I128-J1D", "I128-J2", "I128-J3", "I128-J4", "I128-J5", "I128-J6", "I128-J7", "I128-J8", "auto". The default is "auto".

# -t value

#### --receive-timeout value

Specify the data reception timeout in milliseconds. This timeout applies to each receive operation, individually. By default, receive operations wait for data, possibly forever.

# --satellite-frequency value

DVB-S/S2 receivers: indicate the target satellite frequency, in Hz, of the input carrier. The actual frequency at the input of the receiver is the *intermediate* frequency which is computed based on the characteristics of the LNB (see option --lnb). This option is useful when the satellite frequency is better known than the intermediate frequency.

Version 3.22-1926 137 / 395



The options -- frequency and -- satellite-frequency are mutually exclusive.

### --satellite-number value

DVB-S/S2 receivers: indicate the satellite/dish number.

Must be 0 to 3 with DiSEqC switches and 0 to 1 for non-DiSEqC switches. The default is 0.

### --symbol-rate value

DVB-C/S/S2 demodulators: Specify the symbol rate in symbols/second. By default, automatically detect the symbol rate.

# --t2-profile value

DVB-T2 demodulators: indicate the DVB-T2 profile.

Must be one of "base", "lite". The default is "base".

# --transmission-mode value

DVB-T demodulators: indicate the transmission mode.

Must be one of "2K", "8K", "auto". The default is "auto".

### --vsb value

ATSC demodulators: indicate the VSB constellation.

Must be one of "8", "16". The default is 8.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

# --help

Display plugin help text.



# **#**dektec (output)

# Dektec DTA-1xx and DTU-2xx ASI and modulator devices

This output plugin sends packets to a DVB-ASI Dektec DTA-1xx or DTU-2xx device or a Dektec DTA-1xx modulator.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

### **Usage**

tsp -0 dektec [options]

# Overview of options

For multi-standard modulators such as the DTA-115, the type of required modulation must be specified if it is different from the default modulation. See Table 4 for the default modulation type by device model.

Table 4: Dektec modulators default modulation types

Device model	Default modulation
DTA-107	DVB-S (QPSK)
DTA-107.S2	DVB-S2 (QPSK)
DTA-110	DVB-C (64-QAM)
DTA-110T	DVB-T
DTA-115	DVB-T

Depending on the type of output, the combination of required and optional options is different. See Table 5 for the applicability of options by modulation type. The modulation type is specified using option --modulation. Mandatory options are marked using (\*).

Table 5: Command line options for Dektec modulators

Modulation	Applicable options
All (common options)	bitratechanneldevicestuffingfifo-size
DVB-ASI	204
All except DVB-ASI	frequencyinstant-detachinversionlevel modulationoffset-countuhf-channelvhf-channel
x-QAM	j83qam-b
ADBT-T, DMB-T/H	bandwidthdmb-constellationdmb-fec dmb-frame-numberingdmb-headerdmb-interleaver pilots
ATSC	vsbvsb-taps
СММВ	cmmb-area-idcmmb-bandwidthcmmb-pid(*) cmmb-transmitter-id
DVB-S	convolutional-ratelnbsatellite-frequencysymbol-rate
DVB-S2	convolutional-ratelnbpilotss2-gold-code s2-short-fec-framesatellite-frequencysymbol-rate
DVB-T	bandwidthcell-idconstellationconvolutional-rateguard-intervalindepth-interleavempe-fectime-slicetransmission-mode

Version 3.22-1926 139 / 395



Modulation	Applicable options
DVB-T2	bandwidthbandwidth-extensioncell-id -feffef-intervalfef-lengthfef-s1fef-s2fef-signalfef-typefft-modemiso -paprpilot-patternplp0-code-rateplp0-fec-typeplp0-group-idplp0-high-efficiencyplp0-idplp0-il-lengthplp0-il-typeplp0-in-bandplp0-issyplp0-modulationplp0-null-packet-deletionplp0-rotationplp0-typet2-fpsft2-guard-intervalt2-l1-modulationt2-network-idt2-system-id
ISDB-T	not supported yet

# **Detailed options**

### --204

For DVB-ASI devices only: Send 204-byte packets (188 meaningful bytes plus 16 stuffing bytes for Reed-Solomon coding). By default, send 188-byte packets.

#### --bandwidth value

DVB-T/H, DVB-T2, ADTB-T and DMB-T/H modulators: indicate bandwidth in MHz. Must be one of "1.7", "5", "6", "7", "8" or "10". The default is 8 MHz. The bandwidth values 1.7 and 10 MHz are valid for DVB-T2 only.

# --bandwidth-extension

DVB-T2 modulators: indicate that the extended carrier mode is used. By default, use normal carrier mode.

### -b value

# --bitrate value

Specify output bitrate in bits/second. By default, use the input device bitrate or, if the input device cannot report bitrate, analyze some PCR's at the beginning of the input stream to evaluate the original bitrate of the transport stream.

### --cell-id value

DVB-T and DVB-T2 modulators: indicate the cell identifier to set in the transmission parameters signaling (TPS). Disabled by default with DVB-T. Default value is 0 with DVB-T2.

#### -c value

## --channel value

Channel index on the output Dektec device. By default, use the first output channel on the device.

# --cmmb-area-id value

CMMB modulators: indicate the area id. The valid range is 0 to 127. The default is zero.

### --cmmb-bandwidth value

CMMB modulators: indicate bandwidth in MHz. Must be one of "2" or "8". The default is 8 MHz.

### --cmmb-pid value


CMMB modulators: indicate the PID of the CMMB stream in the transport stream. This is a required parameter for CMMB modulation.

# --cmmb-transmitter-id value

CMMB modulators: indicate the transmitter id. The valid range is 0 to 127. The default is zero.

### --constellation value

DVB-T modulators: indicate the constellation type. Must be one of "QPSK", "16-QAM", "64-QAM". The default is 64-QAM.



#### -r rate

### --convolutional-rate rate

For modulators devices only: specify the convolutional rate. The specified value depends on the modulation type. The default is "3/4".

DVB-S: "1/2", "2/3", "3/4", "4/5", "5/6", "6/7", "7/8".

DVB-S2: "1/2", "1/3", "1/4", "2/3", "2/5", "3/4", "3/5", "4/5", "5/6", "6/7", "7/8", "8/9", "9/10".

DVB-T: "1/2", "2/3", "3/4", "5/6", "7/8".

#### -d value

### --device value

Device index, from 0 to N-1 (with N being the number of Dektec devices in the system). Use the command "tsdektec -a [-v]" to have a complete list of devices in the system. By default, use the first output Dektec device.

### --dmb-constellation value

DMB-T/H, ADTB-T modulators: indicate the constellation type. Must be one of: "4-QAM-NR", "4-QAM", "16-QAM", "32-QAM", "64-QAM". The default is 64-QAM. 4-QAM-NR and 32-QAM can be used only with --dmb-fec 0.8.

### --dmb-fec value

DMB-T/H, ADTB-T modulators: indicate the FEC code rate. Must be one of "0.4", "0.6", "0.8". The default is 0.8.

# --dmb-frame-numbering

DMB-T/H, ADTB-T modulators: indicate to use frame numbering. The default is to use no frame numbering.

#### --dmb-header value

DMB-T/H, ADTB-T modulators: indicate the FEC frame header mode. Must be one of "PN420", "PN595" (ADTB-T only) or "PN945". The default is PN945.

### --dmb-interleaver value

DMB-T/H, ADTB-T modulators: indicate the interleaver mode. Must be one "1" (B=54, M=240) or "2" (B=54, M=720). The default is 1.

# --drop-to-maintain-preload

If the FIFO were preloaded, and maintaining the preload via option --maintain-preload, drop any packets that would exceed the preload FIFO size plus a small threshold.

### --fef

DVB-T2 modulators: enable insertion of FEF's (Future Extension Frames). Not enabled by default.

# --fef-interval value

DVB-T2 modulators: indicate the number of T2 frames between two FEF parts. The valid range is 1 to 255 and --t2-fpsf shall be divisible by --fef-interval. The default is 1.

# --fef-length value

DVB-T2 modulators: indicate the length of a FEF-part in number of T-units (= samples). The valid range is 0 to 0x3FFFFF. The default is 1.

#### --fef-s1 value

DVB-T2 modulators: indicate the S1-field value in the P1 signalling data. Valid values: 2, 3, 4, 5, 6 and 7. The default is 2.

### --fef-s2 value

DVB-T2 modulators: indicate the S2-field value in the P1 signalling data. Valid values: 1, 3, 5, 7, 9, 11, 13 and 15. The default is 1.

# --fef-signal value

DVB-T2 modulators: indicate the type of signal generated during the FEF period. Must be one of "0" (zero I/Q samples during FEF), "1K" (1K OFDM symbols with 852 active carriers containing

Version 3.22-1926 141 / 395



BPSK symbols, same PRBS as the T2 dummy cells, not reset between symbols) or "1K-384" (1K OFDM symbols with 384 active carriers containing BPSK symbols). The default is 0.

## --fef-type value

DVB-T2 modulators: indicate the FEF type. The valid range is 0 ... 15. The default is 0.

#### --fft-mode value

DVB-T2 modulators: indicate the FFT mode. Must be one of "1K", "2K", "4K", "8K", "16K" or "32K". The default is 32K.

#### --fifo-size value

Set the FIFO size in bytes of the output channel in the Dektec device. The default value depends on the device type.

#### -f value

# --frequency value

For modulator devices only: specify the frequency, in Hz, of the output carrier. There is no default.

For OFDM modulators, the options --uhf-channel or --vhf-channel and --offset-count (optional) may be used instead.

For DVB-S/S2 modulators, the specified frequency is the *intermediate* frequency. For convenience, the option --satellite-frequency can be used instead of --frequency when the intermediate frequency is unknown.

For DTA-107 (DVB-S) modulators, the valid range is 950 MHz to 2150 MHz.

For DTA-110 (DVB-C) and 110T (DVB-T/H) modulators, the valid range is 400 MHz to 862 MHz.

For DTA-115 (DVB-C/T/H) modulators, the valid range is 47 MHz to 862 MHz.

#### -g value

### --guard-interval value

DVB-T modulators: indicate the guard interval. Must be one of: "1/32", "1/16", "1/8", "1/4". The default is 1/32.

### --hf-band-region name

Specify the region for UHF/VHF band frequency layout.

The default region is "europe". Another default region may be specified per user in the TSDuck configuration file (see Appendix A).

### --indepth-interleave

DVB-T modulators: use in-depth interleave. The default is native interleave.

# -i

# --input-modulation

All modulators devices: try to guess default modulation parameters from input stream. All explicitely specified parameters override these defaults.

If the input plugin is dvb, use the modulation parameters of the input signal as default values for their counterparts in the Dektec modulator. On Linux systems, the actual modulation parameters of the input signal are used. On Windows systems, the DirectShow/BDA drivers cannot return the actual modulation parameters and only the user-specified parameters in the input plugin are used (they can be different from the actual parameters of the input signal).

With other input plugins, if the specified output modulation is DVB-T, try to guess the following modulation parameters from the input bitrate: --bandwidth --constellation --convolutional-rate --guard-interval. When a specific bitrate can be produced by distinct combinations of modulation parameters, a deterministic order is applied to select the prefered combination.

# --instant-detach

At end of stream, perform an "instant detach" of the output channel. The default is to wait until all bytes are sent. The default is fine for ASI devices. With modulators, the "wait until sent" mode may hang at end of stream and --instant-detach avoids this.



#### --inversion

For modulators devices only: enable spectral inversion.

### -- **j83** value

QAM modulators: indicate the ITU-T J.83 annex to use. Must be one of "A" (DVB-C), "B" (American QAM) or "C" (Japanese QAM). The default is A.

#### -1 value

# --level value

Modulators: indicate the output level in units of 0.1 dBm (e.g. --level -30 means -3 dBm). Not supported by all devices.

For DTA-107 modulators, the valid range is -47.0 to -27.0 dBm.

For DTA-115, QAM, the valid range is -35.0 to 0.0 dBm.

For DTA-115, OFDM, ISDB-T, the valid range is -38.0 to -3.0 dBm.

#### -- lnb string

DVB-S/S2 modulators: description of the LNB which is used to convert the --satellite-frequency into an *intermediate* frequency. This option is useless when --satellite-frequency is not specified.

See the description of the same parameter in plugin *dvb* for the syntax of the LNB string.

# --maintain-preload

If the FIFO were preloaded (see options --preload-fifo and --drop-to-maintain-preload), roughly maintain the FIFO buffer size in order to maintain the delay from real-time. If the FIFO size drops to zero bytes, pause transmission till it gets back to the preload FIFO size.

### --miso value

DVB-T2 modulators: indicate the MISO mode. Must be one of "OFF", "1", "2" or "BOTH". The default si OFF. This mode can be used to simulate antenna 1, antenna 2 or the average of antenna 1 and antenna 2 to simulate reception halfway between the antennas.

# -m value

#### --modulation value

For modulators, indicate the modulation type. Must be one of: "4-QAM", "16-QAM", "32-QAM", "64-QAM", "128-QAM", "256-QAM", "ADTB-T", "ATSC-VSB", "CMMB", "DMB-T", "DVB-S", "DVB-S-QPSK" (same as DVB-S), "DVB-S-BPSK", "DVB-S2", "DVB-S2-QPSK" (same as DVB-S2), "DVB-S2-8PSK", "DVB-S2-16APSK", "DVB-S2-32APSK", "DVB-T", "DVB-T2", "ISDB-T". For DVB-H, specify DVB-T. For DMB-H, specify DMB-T.

The supported modulation types depend on the device model. See Table 4 above for the default modulation type by device model.

#### --mpe-fed

DVB-T/H modulators: indicate that at least one elementary stream uses MPE-FEC (DVB-H signalling).

### -o value

# --offset-count value

UHF and VHF modulators: specify the number of offsets from the UHF or VHF channel. Can be positive or negative. The default is zero. See options --uhf-channel and --vhf-channel.

### --papr value

DVB-T2 modulators: indicate the Peak to Average Power Reduction method. Must be one of "NONE", "ACE" (Active Constellation Extension), "TR" (power reduction with reserved carriers) or "BOTH" (both ACE and TS). The default is NONE.

### --pilots

DVB-S2 and ADTB-T modulators: enable pilots (default: no pilot).

Version 3.22-1926 143 / 395



### -p value

### --pilot-pattern value

DVB-T2 modulators: indicate the pilot pattern to use, a value in the range 1 to 8. The default is 7.

### --plp0-code-rate value

DVB-T2 modulators: indicate the convolutional coding rate used by the PLP #0. Must be one of "1/2", "3/5", "2/3", "3/4", "4/5", "5/6". The default is 2/3.

### --plp0-fec-type value

DVB-T2 modulators: indicate the FEC type used by the PLP #0. Must be one of "16K", "64K". The default is 64K LPDC.

### --plp0-group-id value

DVB-T2 modulators: indicate the PLP group with which the PLP #0 is associated. The valid range is 0 to 255. The default is 0.

## --plp0-high-efficiency

DVB-T2 modulators: indicate that the PLP #0 uses High Efficiency Mode (HEM). Otherwise Normal Mode (NM) is used.

## --plp0-id value

DVB-T2 modulators: indicate the unique identification of the PLP #0 within the T2 system. The valid range is 0 to 255. The default is 0.

# --plp0-il-length value

DVB-T2 modulators: indicate the time interleaving length for PLP #0. The valid range is 0 to 255. The default is 3.

If --plp0-il-type is set to "ONE-TO-ONE" (the default), this parameter specifies the number of TI-blocks per interleaving frame.

If --plp0-il-type is set to "MULTI", this parameter specifies the number of T2 frames to which each interleaving frame is mapped.

### --plp0-il-type value

DVB-T2 modulators: indicate the type of interleaving used by the PLP #0. Must be one of "ONE-TO-ONE" (one interleaving frame corresponds to one T2 frame) or "MULTI" (one interleaving frame is carried in multiple T2 frames). The default is ONE-TO-ONE.

# --plp0-in-band

DVB-T2 modulators: indicate that the in-band flag is set and in-band signalling information is inserted in PLP #0.

# --plp0-issy value

DVB-T2 modulators: type of ISSY field to compute and insert in PLP #0. Must be one of "NONE", "SHORT", "LONG". The default is NONE.

# --plp0-modulation value

DVB-T2 modulators: indicate the modulation used by PLP #0. Must be one of "BPSK", "QPSK", "16-QAM", "64-QAM", "256-QAM". The default is 256-QAM.

# --plp0-null-packet-deletion

DVB-T2 modulators: indicate that null-packet deletion is active in PLP #0. Otherwise it is not active.

# --plp0-rotation

DVB-T2 modulators: indicate that constellation rotation is used for PLP #0. Otherwise not.

# --plp0-type value

DVB-T2 modulators: indicate the PLP type for PLP #0. Must be one of "COMMON", "1", "2". The default is COMMON.



## --power-mode value

DTU-315 modulators: set the power mode to the specified value.

Must be one of "high-quality", "low-power".

## --preload-fifo

Preload FIFO (hardware buffer) before starting transmission.

Preloading the FIFO will introduce a variable delay to the start of transmission, *if* the delivery of packets to the plug-in is pre-regulated, based on the size of the FIFO, the TS bit rate, and the size of the FIFO to preload, as controlled by the --preload-fifo-percentage or --preload-fifo-delay options.

If the delivery of packets to the plug-in isn't self-regulated (i.e. they are delivered faster than real-time, as might occur when loading from file), there is no benefit to preloading the FIFO, because in that case, the FIFO will fill up quickly anyway.

This option is implicitly set when using a modulator for output.

## --preload-fifo-delay value

The use of this option indicates that the size of the FIFO to preload prior to starting transmission should be calculated based on the specified delay, in milliseconds, and the configured bit rate. That is, transmission will start after the specified delay worth of media has been preloaded.

This option takes precedence over the --preload-fifo-percentage option.

There is no default value, and the valid range is 100-100000.

## --preload-fifo-percentage value

Percentage of size of FIFO to preload prior to starting transmission (default: 80%).

#### -a value

## --qam-b value

QAM modulators: with --j83 B, indicate the QAM-B interleaver mode. Must be one of: "I128-J1D", "I64-J2", "I32-J4", "I16-J8", "I8-J16", "I128-J1", "I128-J2", "I128-J3", "I128-J4", "I128-J5", "I128-J6", "I128-J8". The default is I128-J1D.

### --s2-gold-code value

DVB-S2 modulators: indicate the physical layer scrambling initialization sequence, aka "gold code".

### --s2-short-fec-frame

DVB-S2 modulators: use short FEC frames, 12 000 bits (default: long FEC frames, 64 800 bits).

### --satellite-frequency value

DVB-S/S2 modulators: indicate the target satellite frequency, in Hz, of the output carrier. The actual frequency at the output of the modulator is the *intermediate* frequency which is computed based on the characteristics of the LNB (see option --lnb). This option is useful when the satellite frequency is better known than the intermediate frequency.

The options --frequency and --satellite-frequency are mutually exclusive.

### -s

### --stuffing

Automatically generate stuffing packets if tsp fails to provide packets fast enough.

This option applies only to ASI, SDI and hardware-based modulators (DVB-C, DVB-S). This option is ineffective on modulators which are partially software-based (DVB-T on DTA-110T or DTA-115).

## --symbol-rate value

DVB-C/S/S2 modulators: Specify the symbol rate in symbols/second.

By default, the symbol rate is implicitly computed from the convolutional rate, the modulation type and the bitrate. But when --symbol-rate is specified, the input bitrate is ignored and the output bitrate is forced to the value resulting from the combination of the specified symbol rate, convolutional rate and modulation type.

Version 3.22-1926 145 / 395



The options --symbol-rate and --bitrate are mutually exclusive.

### --t2-fpsf value

DVB-T2 modulators: indicate the number of T2 frames per super-frame. Must be in the range 1 to 255. The default is 2.

## --t2-guard-interval value

DVB-T2 modulators: indicates the guard interval. Must be one of: "1/128", "1/32", "1/16", "19/256", "1/8", "19/128", "1/4". The default is 1/128.

#### --t2-l1-modulation value

DVB-T2 modulators: indicate the modulation type used for the L1-post signalling block. Must be one of "BPSK", "QPSK", "16-QAM", "64-QAM". The default is 16-QAM.

## --t2-network-id value

DVB-T2 modulators: indicate the DVB-T2 network identification. The default is 0.

### --t2-system-id value

DVB-T2 modulators: indicate the DVB-T2 system identification. The default is 0.

#### --time-slice

DVB-T/H modulators: indicate that at least one elementary stream uses time slicing (DVB-H signalling).

#### -t value

### --transmission-mode value

DVB-T modulators: indicates the transmission mode. Must be one of "2K", "4K" or "8K". The default is 8K.

#### -u value

### --uhf-channel value

UHF modulators: specify the UHF channel number of the output carrier. Can be used in replacement to --frequency. Can be combined with an --offset-count option. The UHF frequency layout depends on the region, see --hf-band-region option.

## -**v** value

### --vhf-channel value

VHF modulators: specify the VHF channel number of the output carrier. Can be used in replacement to --frequency. Can be combined with an --offset-count option. The VHF frequency layout depends on the region, see --hf-band-region option.

### --vsb value

ATSC modulators: indicate the VSB constellation. Must be one of "8" (19,392,658 Mb/s) or "16" (38,785,317 Mb/s). The default is 8.

## --vsb-taps value

ATSC modulators: indicate the number of taps of each phase of the root-raised cosine filter that is used to shape the spectrum of the output signal. The number of taps can have any value between 2 and 256 (the implementation is optimized for powers of 2). Specifying more taps improves the spectrum, but increases processor overhead. The recommend (and default) number of taps is 64 taps. If insufficient CPU power is available, 32 taps produces acceptable results, too.

## Generic common output plugin options

The following options are implicitly defined in all output plugins.

### --help

Display plugin help text.



# **descrambler**

### Generic DVB Descrambler

This plugin descrambles fixed PID's with fixed control words.

As a demo, it can also descramble services for which clear ECM's were generated using the utility named *tsecmg*, a DVB SimulCrypt-compliant ECMG for test and demo.

### **Usage**

```
tsp -P descrambler [options] [service]
```

### **Parameter**

The optional parameter specifies the service to descramble. If no fixed control word is specified, ECM's from the service are used to extract control words.

In the absence of explicit option such as --atis-idsa, --dvb-cissa, --aes-cbc or --dvb-csa2, the descrambling type is based on the *scrambling\_descriptor* in the PMT of the service (if there is one).

If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If the input TS does not contain an SDT, use service ids only.

## **Options**

### --cas-id value

Specify the *CA\_system\_id* to filter when searching for ECM streams. Since this descrambler is a demo tool using clear ECM's, it is unlikely that other real ECM streams exist. So, by default, any ECM stream is used to get the clear ECM's.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Descramble packets with these PID values. Several -p or --pid options may be specified.

By default, descramble the specified service.

### --swap-cw

Swap even and odd control words from the ECM. Useful when a crazy ECMG inadvertently swapped the CW before generating the ECM.

### --synchronous

Specify to synchronously decipher the ECM's.

In real-time mode, the processing of packets continues in parallel while ECM's are deciphered. Use this option to force the stream processing to wait for ECM's at the point where the each ECM is received.

In offline mode, this option is always on. This is usually the right thing to do. Otherwise, if an ECM takes too long to be deciphered, the stream processing may reach the next crypto-period before the control word is available.

Note: this plugin only processes clear ECM's as generated by *tsecmg*. These ECM's are not ciphered and their processing is immediate. So, this option is useless in practice. However, this plugin is based on a generic descrambler implementation. For other conditional access systems, processing an ECM may be delegated to a smartcard and take a relatively long time. So, this option can be useful in that case.

## **Transport stream scrambling options**

## --aes-cbc

Use AES-CBC scrambling instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte. The residue is left clear. Specify a fixed initialization vector using the --iv option.

Version 3.22-1926 147 / 395



Note that this is a non-standard TS scrambling mode. The only standard AES-based scrambling modes are ATIS-IDSA and DVB-CISSA (DVB-CISSA is the same as AES-CBC with a DVB-defined IV).

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of AES-CBC scrambling. Since there is no standard value for AES-CBC, the user-defined *scrambling\_mode* value 0xF0 is used.

### --aes-ctr

Use AES-CTR scrambling instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte. The residue is included in the scrambling. Specify a fixed initialization vector using the --iv option. See the option --ctr-counter-bits for the size of the counter part in the IV.

Note that this is a non-standard TS scrambling mode. The only standard AES-based scrambling modes are ATIS-IDSA and DVB-CISSA.

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of AES-CTR scrambling. Since there is no standard value for AES-CTR, the user-defined *scrambling\_mode* value 0xF1 is used.

### --atis-idsa

Use ATIS-IDSA descrambling (ATIS-0800006) instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte.

### --ctr-counter-bits value

With --aes-ctr, specifies the size in bits of the counter part.

In the initialization vector, the fixed nounce part uses the first 128 - N bits and the counter part uses the last N bits.

By default, the counter part uses the second half of the IV (64 bits).

#### -c value

### --cw value

Specifies a fixed and constant control word (no crypto-period scheduling, no ECM insertion). The value must be a string of 16 hexadecimal digits (32 digits with --atis-idsa or --dvb-cissa).

### --dvb-cissa

Use DVB-CISSA descrambling (see [15]) instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte.

# --dvb-csa2

Use DVB-CSA2 descrambling. This is the default.

## -f name

### --cw-file name

Specifies a text file containing the list of control words to apply. Each line of the file must contain exactly 16 hexadecimal digits (32 digits with --atis-idsa or --dvb-cissa).

The next control word is used each time a new *transport\_scrambling\_control* value is found in the header of a TS packet. At the end of the list of control words, restart with the first one.

### --iv value

With --aes-cbc or --aes-ctr, specifies a fixed initialization vector for all TS packets.

The value must be a string of 32 hexadecimal digits. The default IV is all zeroes.

### -n

## --no-entropy-reduction

Do not perform DVB-CSA2 control word entropy reduction to 48 bits, keep full 64-bit control words. This option is ignored with --atis-idsa or --dvb-cissa.

### --output-cw-file name

Specifies a text file to create with all control words. Each line of the file will contain a control word with 16 or 32 hexadecimal digits, depending on the scrambling algorithm. Each time a new control word is used to descramble packets, it is logged in the file.



This option is specifically useful when the control words are dynamically extracted from ECM's. The created file can be used later using --cw-file to perform a direct descrambling test.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help


Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 149 / 395



# **■**drop (output)

# **Drop Output Packets**

This output plugin simply drops all packets. This plugin is useful when the interesting work is done by the various packet processing plugins and the actual output packets are useless.

# **Usage**

tsp -0 drop [options]

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

--help

Display plugin help text.



# **duplicate**

# **Duplicate PID's, reusing null packets**

This plugin duplicates the content of several PID's into new PID's. The duplicated packets are created by replacing existing null packets. The input stream shall consequently contain at least as many null packets as packets to duplicate.

### **Usage**

```
tsp -P duplicate [options] [pid[-pid]=newpid ...]
```

## **Specifying PID duplication**

Each duplication is specified as "pid=newpid" or "pid1-pid2=newpid". All PID's can be specified as decimal or hexadecimal values. More than one PID duplication can be specified.

In the first form, the PID *pid* is duplicated as *newpid*.

In the latter form, all PID's within the range *pid1* to *pid2* (inclusive) are respectively duplicated as *newpid*, *newpid*+1, etc. (this behaviour is changed using option --single).

The null PID 0x1FFF cannot be duplicated.

## **Options**

-d

### --drop-overflow

Silently drop overflow packets. By default, overflow packets trigger warnings.

See also option --max-buffered-packets.

#### -m value

## --max-buffered-packets value

Specify the maximum number of buffered packets. The input packets to duplicate are internally buffered until a null packet is found and replaced by the buffered packet. An overflow is usually caused by insufficient null packets in the input stream.

The default is 1,024 packets.

## --reset-label label1[-label2]

Clear the specified labels on the duplicated packets.

Several --reset-label options may be specified.

## --set-label label1[-label2]

Set the specified labels on the duplicated packets.

Several --set-label options may be specified.

### -s

## --single

When a duplication is in the form "pid1-pid2=newpid", duplicate all input PID's within the range pid1 to pid2 to the same newpid value, not newpid, newpid+1, etc.

This option forces --unchecked since distinct PID's are duplicated to the same one.

## -u

### --unchecked

Do not perform any consistency checking while duplicating PID's. Duplicating two PID's to the same PID or to a PID which is already present in the input is accepted.

Note that this option should be used with care since the resulting stream can be illegal or inconsistent.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

Version 3.22-1926 151 / 395



# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

# **u**dvb (input)

# DVB, ATSC, ISDB tuner receivers input

This input plugin receives TS packets from a tuner receiver device. These devices include a wide range of satellite, cable and terrestrial adapters. Most of them are simple tuners. See section 6.1 for more details on tuner receiver devices.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

Note: This plugin originally supported DVB receivers only. Later, support was added for ATSC and ISDB receivers but the plugin retained its original name *dvb*.

### **Usage**

tsp -I dvb [options]

## **General options**

- -a N
- --adapter N

Specify the  $N^{th}$  tuner device in the system, the first index being zero. This option can be used instead of device name.

On Linux systems, this means /dev/dvb/adapterN.

- -d "name"
- --device-name "name"

Specify the name of the receiver device to use. Use the tslsdvb utility to list all available devices. By default, the first receiver device is used. The syntax of the device name depends on the operating system. See section 6.1.3, page 323, for more details on receiver devices naming.

## -- lnb string

For satellite reception, specifies the description of the LNB ("low-noise block" in the dish).

The specified string is the name (or an alias for that name) of a preconfigured LNB in the configuration file named *tsduck.lnbs.xml*. This configuration file is located in the same directory as the TSDuck executables. See the table below for a complete list.

The default value describes a dual-band so-called "European Universal Ku (extended) LNB".

For compatibility, the legacy format "low\_freq[,high\_freq,switch\_freq]" is also accepted as LNB name. The three frequencies are the low-band oscillator, the high-band oscillator and the switch frequency. All frequencies are in MHz. The last two values are used only with a dual-band LNB.

Table 6: Preconfigured LNB names and aliases

Name	Aliases	
European Universal Ku (extended)	Astra 19.2E	Extended
European Universal (old)	Universal	
Astra	Enhanced	
Expressvu	DBS	
Standard		
L10700		
L10750		
L11300		
Invacom QPH-031	QPH031	
Big Dish Monopoint	C-Band	

Version 3.22-1926 153 / 395



Name	Aliases		
Big Dish Multipoint	C-Multi		
DishPro			
Japan 110BS/CS	Japan	110BS	110CS
BrasilSat Stacked	Stacked-Brasilsat		
BrasilSat Oi	Oi-BrasilSat		
BrasilSat Amazonas 1/2, 3 Oscillators	Amazonas3		
BrasilSat Amazonas 1/2, 2 Oscillators	Amazonas2		
BrasilSat custom GVT	GVT-BrasilSat		
None	Null		

### --receive-timeout milliseconds

Specify the timeout, <u>in milliseconds</u>, for each receive operation. To disable the timeout and wait indefinitely for packets, specify zero. This is the default.

## --signal-timeout seconds

Specify the timeout, <u>in seconds</u>, for the DVB frontend signal locking. If no signal is detected within this timeout, the command aborts. To disable the timeout and wait indefinitely for the signal, specify zero. The default is 5 seconds.

# **Linux-specific options**

## --demux-buffer-size value

Default buffer size, in bytes, of the demux device. The default is 1 MB.

## Windows-specific options

### --demux-queue-size value

Specify the maximum number of media samples in the queue between the DirectShow capture thread and the input plugin thread. The default is 1000 media samples.

# --receiver-name "name"

Specify the name of the DirectShow receiver filter to use.

By default, first try a direct connection from the tuner filter to the rest of the graph. Then, try all receiver filters and concatenate them all.

## **Tuning**

By default, no tuning is performed on the DVB frontend. The transponder on which the frontend is currently tuned is used.

There are two ways to specify a new transponder:

- Specifying individual tuning options, one for each tuning parameters. Common values are provided as default
- The name of a channel contained in the transponder, using a channels configuration file. See Appendix B, page 334, for more details on channels configuration files.

### **Tuning method 1: Individual tuning options**

## --bandwidth value

Used for terrestrial tuners only.

Must be one of "auto", "8-MHz", "7-MHz" or "6-MHz".

For DVB-T2, also accept "5-MHz", "10-MHz" or "1.712-MHz".

The default is "8-MHz" for DVB-T/T2 and "6-MHz" for ISDB-T..

## --delivery-system value

Specify which delivery system to use. Must be one of the following values:




Table 7: Values for option --delivery-system

Value	Description	Supported options
ATSC	ATSC	frequencymodulationspectral-inversion
ATSC-MH	ATSC -M/H (handheld)	Unsupported
СММВ	CMMB Terrestrial	Unsupported
DAB	DAB (digital audio)	Unsupported
DSS	DSS Satellite	Unsupported
DTMB	DTMB Terrestrial	Unsupported
DVB-C	DVB-C (same as DVB-C/A)	Same as DVB-C/A
DVB-C/A	DVB-C ITU-T J.83 Annex A	fec-innerfrequencymodulation spectral-inversionsymbol-rate
DVB-C/B	DVB-C ITU-T J.83 Annex B	Unsupported
DVB-C/C	DVB-C ITU-T J.83 Annex C	Same as DVB-C/A
DVB-C2	DVB-C2	Unsupported
DVB-H	DVB-H (deprecated)	Unsupported
DVB-S	DVB-S	fec-innerfrequencypolarity satellite-numberspectral-inversion symbol-rate
DVB-S-Turbo	DVB-S Turbo	Unsupported
DVB-S2	DVB-S2	fec-innerfrequencyisi modulationpilotspls-codepls- modepolarityroll-offsatellite- numberspectral-inversionsymbol- rate
DVB-T	DVB-T	bandwidthfrequencyguard-interval hierarchyhigh-priority-feclow- priority-fecmodulationspectral- inversiontransmission-mode
DVB-T2	DVB-T2	bandwidthfrequencyguard-interval hierarchyhigh-priority-feclow- priority-fecmodulationplp spectral-inversiontransmission-mode
ISDB-C	ISDB-C	Unsupported
ISDB-S	ISDB-S	fec-innerfrequencypolarity satellite-numberspectral-inversion stream-idsymbol-rate
ISDB-T	ISDB-T	bandwidthfrequencyguard-intervalisdbt-layer-a-fecisdbt-layer-a- modulationisdbt-layer-a-segment-countisdbt-layer-a-time-interleaving isdbt-layer-b-fecisdbt-layer-b- modulationisdbt-layer-b-segment-countisdbt-layer-b-time-interleaving isdbt-layer-c-fecisdbt-layer-c- modulationisdbt-layer-c-segment-countisdbt-layer-c-time-interleavingsb- segment-countsb-segment-indexsb- subchannel-idsound-broadcasting spectral-inversiontransmission-mode

Version 3.22-1926 155 / 395



Value	Description	Supported options
undefined	Undefined	Unsupported

Note that some delivery systems are not available on some operating systems.

By default, use the default system for the tuner.

### --fec-inner value

Used for satellite and cable tuners only.

Specify the Inner Forward Error Correction. Must be one of "none", "auto", "1/2", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3", "1/4", "1/3",

### -f value

### --frequency value

Specify the carrier frequency in Hz (all tuners).

For DVB-T tuners, the options --uhf-channel or --vhf-channel (and associated optional --offset-count) can be used instead of --frequency.

## --guard-interval value

Used for terrestrial tuners only.

Must be one of "auto", "1/32", "1/16", "1/8", "1/4".

For DVB-T2, also accept "1/128", "19/128", "19/256".

The default is "1/32".

### --hf-band-region name

Specify the region for UHF/VHF band frequency layout.

The available regions are "americas", "europe", "france", "japan", "korea", "philippines", "taiwan", "uk", "us", "usa". For any update, see the file named *tsduck.hfbands.xml* in the same directory as the TSDuck executables.

The default region is "europe". Another default region may be specified per user in the TSDuck configuration file (see Appendix A).

## --hierarchy value

Used for DVB-T tuners only.

Must be one of "auto", "none", "1", "2", "4". The default is "none".

### --high-priority-fec value

Used for DVB-T tuners only.

Error correction for high priority streams. See option --fec-inner for the list of possible values. The default is "auto".

### --isdbt-layer-a-fec value

Used for ISDB-T tuners only.

Error correction for layer A. The default is automatically detected.

Must be one of "1/2", "2/3", "3/4", "5/6", "7/8", "auto".

## --isdbt-layer-a-modulation value

Used for ISDB-T tuners only.

Modulation for layer A. The default is automatically detected.

Must be one of "QPSK", "DQPSK", "16-QAM", "64-QAM", "QAM" (auto).


## --isdbt-layer-a-segment-count value

Used for ISDB-T tuners only.

Number of segments for layer A. Possible values: 0 to 13. The default is automatically detected.

### --isdbt-layer-a-time-interleaving value

Used for ISDB-T tuners only.



Time interleaving for layer A. Possible values: 0 to 3. The default is automatically detected.

# --isdbt-layer-b-fec value

Used for ISDB-T tuners only.

Error correction for layer B. The default is automatically detected.

Must be one of "1/2", "2/3", "3/4", "5/6", "7/8", "auto".

## --isdbt-layer-b-modulation value

Used for ISDB-T tuners only.

Modulation for layer B. The default is automatically detected.

Must be one of "QPSK", "DQPSK", "16-QAM", "64-QAM", "QAM" (auto).

## --isdbt-layer-b-segment-count value

Used for ISDB-T tuners only.

Number of segments for layer B. Possible values: 0 to 13. The default is automatically detected.

### --isdbt-layer-b-time-interleaving value

Used for ISDB-T tuners only.

Time interleaving for layer B. Possible values: 0 to 3. The default is automatically detected.

### --isdbt-layer-c-fec value

Used for ISDB-T tuners only.

Error correction for layer C. The default is automatically detected.

Must be one of "1/2", "2/3", "3/4", "5/6", "7/8", "auto".

## --isdbt-layer-c-modulation value

Used for ISDB-T tuners only.

Modulation for layer C. The default is automatically detected.

Must be one of "QPSK", "DQPSK", "16-QAM", "64-QAM", "QAM" (auto).

## --isdbt-layer-c-segment-count value

Used for ISDB-T tuners only.

Number of segments for layer C. Possible values: 0 to 13. The default is automatically detected.

# --isdbt-layer-c-time-interleaving value

Used for ISDB-T tuners only.

Time interleaving for layer C. Possible values: 0 to 3. The default is automatically detected.

## --isdbt-layers 'string'

Used for ISDB-T tuners only.

Hierarchical reception in ISDB-T is achieved by enabling or disabling layers in the decoding process. The specified string contains a combination of characters 'A', 'B', 'C', indicating which layers shall be used.

The default is "ABC" (all layers).

## --isdbt-partial-reception

Used for ISDB-T tuners only.

Specify that the reception of the ISDB-T channel is in partial reception mode. The default is automatically detected.

## --isi value

Used for DVB-S2 tuners only.

Specify the Input Stream Id (ISI) number to select, from 0 to 255. Used with multi-stream, see also options --pls-code and --pls-mode.

The default is to keep the entire stream, without multi-stream selection.

Warning: this option is supported on Linux only. Currently, Windows provides no support for multi-stream.

Version 3.22-1926 157 / 395



### --japan

A synonym for '--hf-band-region japan'.

This is a handy shortcut when working on Japanese transport streams.

### --low-priority-fec value

Used for DVB-T tuners only.

Error correction for low priority streams. See option --fec-inner for the list of possible values. The default is "auto".

#### -m value

### --modulation value

Used for DVB-C, DVB-T, DVB-S2 and ATSC tuners.

Modulation type (aka *constellation* for DVB-T). Must be one of "QPSK", "8-PSK", "16-APSK", "32-APSK", "QAM" (auto-detected QAM), "16-QAM", "32-QAM", "64-QAM", "128-QAM", "256-QAM", "8-VSB". "16-VSB".

The default is "64-QAM" for DVB-T and DVB-C, "QPSK" for DVB-S2, "8-VSB" for ATSC.

### --offset-count value

Used for terrestrial tuners only.

Specify the number of offsets from the UHF or VHF channel. The default is zero.

See options --uhf-channel and --vhf-channel.

## --pilots value

Used for DVB-S2 tuners only.

Presence of pilots frames. Must be one of "auto", "on" or "off". The default is "off".

### --plp value

Used for DVB-T2 tuners only.

Specify the Physical Layer Pipe (PLP) number to select, from 0 to 255. The default is to keep the entire stream, without PLP selection.

### --pls-code value

Used for DVB-S2 tuners only.

Specifiy the Physical Layer Scrambling (PLS) code value, from 0 to 262143 (0x3FFFF). Used with multi-stream, see also option --isi.

Warning: this option is supported on Linux only. Currently, Windows provides no support for multi-stream.

## --pls-mode mode

Used for DVB-S2 tuners only.

Specify the Physical Layer Scrambling (PLS) mode. Used with multi-stream, see also option -- isi. Must be one of "COMBO", "GOLD", "ROOT". The default is ROOT.

Warning: this option is supported on Linux only. Currently, Windows provides no support for multi-stream.

## --polarity value

Used for satellite tuners only.

Must be one of "horizontal" or "vertical" for linear polarization, "left" or "right" for circular polarization. The default is "vertical".

## --roll-off value

Used for DVB-S2 tuners only.

Roll-off factor. Must be one of "auto", "0.35", "0.25", "0.20". The default is "0.35" (implied for DVB-S, default for DVB-S2).

### --satellite-number value

Used for satellite tuners only.



Satellite/dish number. Must be 0 to 3 with DiSEqC switches and 0 to 1 for non-DiSEqC switches. The default is zero.

# --sb-segment-count value

Used for ISDB-T tuners only.

With --sound-broadcasting, specify the total count of connected ISDB-Tsb channels.

Possible values: 1 to 13. The default is 13.

# --sb-segment-index value

Used for ISDB-T tuners only.

With --sound-broadcasting, specify the index of the segment to be demodulated for an ISDB-Tsb channel where several of them are transmitted in the connected manner.

Possible values: 0 to value of --sb-segment-count minus 1. The default is 0.

### --sb-subchannel-id value

Used for ISDB-T tuners only.

With --sound-broadcasting, specify the sub-channel id of the segment to be demodulated in the ISDB-Tsb channel.

Possible values: 0 to 41. The default is 0.

### --sound-broadcasting

Used for ISDB-T tuners only.

Specify that the reception is an ISDB-Tsb (sound broadcasting) channel instead of an ISDB-T one.

### --spectral-inversion value

Spectral inversion. Must be one of "on", "off" or "auto". The default is "auto".

### --stream-id value

Used for ISDB-S tuners only.

In the case of multi-stream broadcasting, specify the inner transport stream id. By default, use the first inner transport stream, if any is found.

Warning: this option is supported on Linux only. Currently, Windows provides no support for multi-stream.

## -s value

## --symbol-rate value

Used for satellite and cable tuners only.

Symbol rate in symbols/second. The default is 27.5 mega-sym/s for DVB-S, 6.9 mega-sym/s for DVB-C, 28.86 mega-sym/s for ISDB-S.

### --transmission-mode value

Used for terrestrial tuners only.

Must be one of "auto", "2K", "4K", "8K".

For DVB-T2, also accept "1K", "2K-interleaved", "4K-interleaved", "16K", "32K".

The default is "8K".

## --uhf-channel value

Used for terrestrial tuners only.

Specify the UHF channel number of the carrier. Can be used in replacement to --frequency. Can be combined with an --offset-count option.

The UHF frequency layout depends on the region, see --hf-band-region option.

## --vhf-channel value

Used for terrestrial tuners only.

Specify the VHF channel number of the carrier. Can be used in replacement to --frequency. Can be combined with an --offset-count option.

The VHF frequency layout depends on the region, see --hf-band-region option.

Version 3.22-1926 159 / 395



## Tuning method 2: Locating the transponder by channel name

### **-c** name

# --channel-transponder name

Tune to the transponder containing the specified channel. The channel name is not case-sensitive and blanks are ignored. It is either an "HF band channel" or a "TV channel".

An "HF band channel" has the format "band-number" such as "UHF-22" (terrestrial) or "BS-12" (Japanese satellite). See also option --offset-count.

A "TV channel" name is searched in a *channels configuration file* and the corresponding tuning information in this file is used. See also option --tuning-file.

For ATSC networks, the channel name can be replaced by the channel id using the format "majorid.minor-id" (e.g. "1.2" or "12.8").

# --tuning-file path

Specify the channels configuration file to use for option --channel-transponder.

Channel configuration files can be created manually or using the utility *tsscan* or the plugin *nitscan*. The location of the default configuration file depends on the system.

See Appendix B, page 334, for more details on channels configuration files.

## Generic common input plugin options

The following options are implicitly defined in all input plugins.

### --help

Display plugin help text.





# **Analyze EIT Sections**

This plugin analyzes EIT sections and produces a report of *EIT present/following* and *EIT schedule* by transport stream and by service. The EPG depth in days is also reported by service (number of days in advance an event is signaled by an EIT schedule). See 5.2.16 for an example of report.

## Usage

```
tsp -P eit [options]
```

# **Options**

- -o filename
- --output-file filename

Specify the output file for the report (default: standard output).

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 161 / 395



# **H**encap

# **Encapsulate packets from several PID's into one single PID**

This plugin encapsulates all packets from several PID's into one single PID. This unique output PID replaces all input PID's in the transport stream. The output PID is called the "tunnel" or "outer" PID through which all original or "inner" PID's are conveyed.

The reverse operation, the decapsulation, is performed by the *decap* plugin. It replaces the tunnel PID by all original PID's.

The encapsulation format is proprietary and defined below. Since this is not a standard format, it is not interoperable with external systems. The *encap* and *decap* plugins are typically used to hide the structure of some part of the transport stream into a private PID to cross some equipment which does not support the structure of the original stream or could damage its original structure.

Because of the encapsulation overhead, the total volume of encapsulated packets is slightly greater (by approximately 2%) than the original PID's. The encapsulation operation consequently needs some null packets in the original transport stream in addition to the original packets. The output tunnel PID replaces all original packets from the encapsulated PID's plus some null packets. It the original input stream has no stuffing at all, then the *tsp* option "--add-input-stuffing 1/50" is sufficient to reserve the additional overhead.

### **Usage**

tsp -P encap [options]

## **Options**

-i

## --ignore-errors

Ignore errors such as PID conflict or packet overflow.

By default, a PID conflict is reported when the output PID is already present on input but not encapsulated. A packet overflow is reported when the input stream does not contain enough null packets to absorb the encapsulation overhead.

### -m value

## --max-buffered-packets value

Specify the maximum number of buffered packets. The buffered packets are produced by the encapsulation overhead. An overflow is usually caused by insufficient null packets in the input stream. The default is 1,024 packets.

## -o value

### --output-pid value

Specify the output PID containing all encapsulated PID's. This is a mandatory parameter, there is no default. The null PID <code>0x1FFF</code> cannot be the output PID.

## --pack[=value]

Emit outer packets when they are full only.

By default, emit outer packets as soon as possible, when null packets are available on input. With the default behavior, inner packets are decapsulated with a better time accuracy, at the expense of a higher bitrate of the outer PID when there are many null packets in input.

With the option --pack, the emission of an outer packet is delayed until it is full. The bitrate of the outer PID is usually smaller but inner packets may be decapsulated later.

When packing is on, it is possible to limit the distance between packed packets by specifying a positive value. When an outer packet is not yet full but no other input packet is found after the specified number of packets in the TS, then the outer packet is forced to be emitted. With a zero value the distance is disabled (ie. the distance between input packets is unlimited). The value 1 is equivalent to not using the pack mode since outer packets are emitted after one TS packet.



### --pcr-pid value

Specify a reference PID containing PCR's. The output PID will contain PCR's, based on the same clock. By default, the output PID does not contain any PCR.

## --pes-mode mode

Enable PES mode encapsulation.

Must be one of "disabled", "fixed", "variable".

### --pes-offset value

Offset used in Synchronous PES mode encapsulation. The value (positive or negative) is added to the current PCR to generate the PTS timestamp inserted in the PES header.

The recommended values are between -90000 and +90000 (1 second). The value 0 is equivalent to use the Asynchronous PES encapsulation.

It requires to use the PCR option --pcr-pid.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Specify an input PID or range of PID's to encapsulate.

Several --pid options can be specified. The null PID 0x1FFF cannot be encapsulated.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

```
--only-label label1[-label2]
```

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

## **Encapsulation format**

This section describes the private encapsulation format. It is informative only.

Due to the encapsulation overhead, the number of output packets is slightly larger than the input packets. The input stream must contain a few null packets to absorb the extra output packets. For this reason, null packets (PID 0x1FFF) are never encapsulated.

There are two encapsulation formats, the *plain* mode and the *PES* mode. The plain mode is more compact but its structure is completely specific. The PES mode uses more overhead but it encapsulates the TS packets into PES packets, which may be easier to process in some cases.

## Plain encapsulation format

We define the output elementary stream (ES) as the concatenation of all payloads of all TS packets in the output tunnel PID. In this ES, all input TS packets are contiguous, without encapsulation. The initial  $0\times47$  synchronization byte is removed from all input packets since it is redundant and contains no information. Only the remaining 187 bytes are copied in the output ES.

The Payload Unit Start Indicator (PUSI) bit is set in the header of outer TS packets containing the start of an encapsulated packet. When the PUSI bit is set, the first byte of the payload is a *pointer field* to the beginning of the first encapsulated packet. This packetization method is directly adapted from the standard packetization process for sections, with 187-byte packets instead of sections.

# PES encapsulation format

The same plain elementary stream is used, but with a PES envelope. This reduces the payload size, but makes the outer encapsulation more transparent. The overhead is increased by approximately 14 to 20%.

Version 3.22-1926 163 / 395



The PES envelope uses a KLVA SMPTE-336M encapsulation<sup>5</sup> to insert the inner payload into one private (testing) key. Each TS packet contains only one key, with a size no larger than the payload of one TS packet. So each PES packet fits into a single TS packet.

The SMPTE-336M encapsulation can be either asynchronous (without timestamps) or synchronous (with PTS). The latter consumes more space (+10 bytes) and is only useful when it is needed to remux the encapsulated stream with an external tool that requires to use PTS marks. No other advantages are provided.

Two variant strategies are implemented. The *fixed* mode uses the short (7-bit) BER encoding. This limits the PES payload to a maximum of 127 bytes. And the adaptation field of the outer packet is enlarged with some stuff. However, the advantage is that the PES is sufficient small to include more data in the outer TS packet. This reduces the possibility than some external processing will split the outer packet in two to accommodate the entire PES data.

The *variable* mode does not impose this restriction and outer packets are filled to the maximum. The drawback is that sometimes the long form of BER encoding is used with two bytes and others the short form with one byte. Furthermore, this increases the chances that some external processing occupies two outer packets for the same inner PES packet. Still, support for those split PES packets is included. The only requirement is that the 26 or 27 PES+KLVA header is inserted in the first packet (with PUSI on). The remaining payload can be distributed in the following TS packets.

The PES envelope has an overhead of 26, 27, 36 or 37 bytes based on:

- 9 bytes for the PES header.
- 0 or 5 bytes for the PTS (synchronous mode).
- 0 or 5 bytes for the Metadata AU Header (synchronous mode)
- 16 bytes for the UL key.
- 1 or 2 bytes for the payload size (BER short or long format).

To enable the use of the Synchronous encapsulation, it is required to use PCR's and provide an offset. This value (positive or negative) will be added to the PCR to compute the PTS. Recommended values are between -90000 and +90000 (-1 and +1 second, respectively). If you use negative values, then you can restore in advance the encapsulated stream after remuxing. However, this will be valid only if you use an external tool to remux. If you're unsure, then don't enable it.

Warning about the Synchronous mode: At start, the PTS marks can't be synchronized with the target PCR PID. This is because the PCR value is not read at start. But the PTS is required to be in all PES packets of the encapsulation. So, it is recommended to discard the outcoming stream until valid PTS values appear in the encapsulated stream.

In order to correctly identify the encapsulated PES stream, it is recommended to declare its PID as a component of an existing or new service. This PID component shall be described as follow in the PMT of the service:

- Stream type:
  - Asynchronous mode : Private Type (0x06)
  - Synchronous mode : Metadata Type (0x15)
- Descriptors :
  - Add a registration descriptor for "KLVA" (0x4B4C5641)

# Example

We encapsulate several PID's in outer PID 7777. We attach this outer PID to service id 100. We add a *registration\_descriptor* in the description of the outer PID in the PMT.

Asynchronous PES mode encapsulation:

```
tsp ... \
    -P encap -o 7777 --pes-mode ... \
    -P pmt -s 100 -a 7777/0x06 --add-pid-registration 7777/0x4B4C5641 \
    ...
```

<sup>&</sup>lt;sup>5</sup> See https://impleotv.com/2017/02/17/klv-encoded-metadata-in-stanag-4609-streams/



Synchronous PES mode encapsulation (with PCR) :

```
tsp ... \
    -P encap -o 7777 --pes-mode --pes-offset -50000 --pcr-pid 101 ... \
    -P pmt -s 100 -a 7777/0x15 --add-pid-registration 7777/0x4B4C5641 \
    ...
```

Version 3.22-1926 165 / 395



# file (input)

## **Transport Stream Files Input**

This input module reads transport stream packets from one or more files. The specified files do not need to be regular files, they can be named pipes or anything that can be named and read from.

The default file is the standard input, which can also be a pipe. Since the plugin *file* is the default input plugin (if no option -I is specified), this means that the default *tsp* input is the standard input.

By default, the input files must contain a flow of contiguous 188-bytes TS packets. If this is not the case, see option --format or consider using the *tsresync* utility.

## **Input time-stamps**

With M2TS files, each TS packet is preceded by a 4-byte header containing a time-stamp. This value is used as input time-stamp by *tsp*.

The specific TSDuck proprietary format (see option --format) propagates all metadata of all TS packets. When the input is such a file (typically piped from another instance of *tsp*), the original input time-stamps from the first instance of *tsp* are propagated and used as input time-stamps by the receiving instance of *tsp*.

### **Usage**

```
tsp -I file [options] [file-name ...]
```

### **Parameter**

Name of the input files. The files are read in sequence, unless --interleave is specified.

If no file is specified, the standard input is read by default. When several files are specified, use '-' as file name to specify the standard input.

## **Options**

### -b value

### --byte-offset value

Start reading each file at the specified byte offset (default: 0). This option is allowed only if the input file is a regular file.

-f

### --first-terminate

With --interleave, terminate the processing when any file reaches the end of file.

By default, continue reading until the last file reaches the end of file (other files are replaced with null packets after their end of file).

### --format name

Specify the format of the input files. See section 2.1.2 for more details.

By default, the format of each input file is automatically detected and can be different from one file to another. When the option --format is specified, all input files must have the same format.

-i


### --infinite

Repeat the playout of the file infinitely (default: only once). This option is allowed only if the input file is a regular file and there is only one input file.

### --interleave[=value]

Interleave files instead of reading them one by one. All files are simultaneously opened.

The optional value is a chunk size *N*, a packet count (default is 1). *N* packets are read from the first file, then *N* from the second file, etc. and then loop back to *N* packets again from the first file, etc.

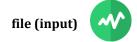

## -l value

### --label-base value

Set a label on each input packet. Packets from the first file are tagged with the specified base label, packets from the second file with base label plus one, and so on.

For a given file, if the computed label is above the maximum (31), its packets are not labelled.

#### -p value

### --packet-offset value

Start reading each file at the specified TS packet (default: 0).

This option is allowed only if all input files are regular file.

### -r count

# --repeat count

Repeat the playout of each file the specified number of times (default: only once).

This option is allowed only if all input files are regular files.

If several input files are specified, the first file is repeated the specified number of times, then the second file is repeated the same number of times, and so on.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

### --help

Display plugin help text.

Version 3.22-1926 167 / 395



# file (output)

# **Transport Stream Files Output**

This output plugin writes the TS packets to a file. The output file receives a flow of contiguous 188-bytes TS packets.

The default file is the standard output, which can be a pipe. Since the plugin *file* is the default output plugin (if no option –0 is specified), this means that the default tsp output is the standard output.

### **Usage**

```
tsp -0 file [options] [file-name]
```

## **Parameter**

Name of the created output file. Use standard output by default.

## **Options**

-a

### --append

If the file already exists, append to the end of the file. By default, existing files are overwritten.

#### --format name

Specify the format of the output file. See section 2.1.2 for more details.

By default, the format is a standard TS file. If the format is M2TS, the inserted time stamp is identical to the input time stamp for each packet.

-k

### --keep

Keep existing file (abort if the specified file already exists). By default, existing files are overwritten.

## --max-retry value

With --reopen-on-error, specify the maximum number of times the file is reopened on error. By default, the file is indefinitely reopened.

-r

## --reopen-on-error

In case of write error, close the file and try to reopen it several times. After a write error, attempt to reopen or recreate the file immediately. Then, in case of open error, periodically retry to open the file.

See also options --retry-interval and --max-retry.

### --retry-interval milliseconds

With --reopen-on-error, specify the number of milliseconds to wait before attempting to reopen the file after a failure.

The default is 2000 milliseconds.

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

### --help

Display plugin help text.



# file (packet processing)

## Save Packets to a File and Pass

This plugin writes the TS packets to a file and pass them to the next plugin in the chain. The output file receives a flow of contiguous 188-bytes TS packets.

## **Usage**

```
tsp -P file [options] file-name
```

### **Parameter**

Name of the created output file.

# **Options**

-a

## --append

If the file already exists, append to the end of the file. By default, existing files are overwritten.

### --format name

Specify the format of the output file. See section 2.1.2 for more details.

By default, the format is a standard TS file. If the format is M2TS, the inserted time stamp is identical to the input time stamp for each packet.

-k

### --keep

Keep existing file (abort if the specified file already exists). By default, existing files are overwritten.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 169 / 395





## **General-Purpose Packet Filter**

This plugin filters TS packets according to various conditions. When a packet meets at least one of the specified condition, it is passed to the next packet in the chain. Otherwise, it is dropped.

Note: To filter packets which meets several simultaneous conditions ("and" instead of "or"), simply chain several filter plugins on the command line.

### Usage

```
tsp -P filter [options]
```

## **Options**

### --adaptation-field

Select packets with an adaptation field.

### --after-packets count

Let the first *count* packets pass transparently without filtering. Start to apply the filtering criteria after that number of packets.

- c

### --clear

Select clear (unscrambled) packets. Equivalent to "--scrambling-control 0".

### --every count

Select one packet every that number of packets.

### --has-splice-countdown

Select packets which contain a *splice\_countdown* value in adaptation field.

# --input-stuffing

Select packets which were articially inserted as stuffing before the input plugin using *tsp* options --add-start-stuffing, --add-input-stuffing and --add-stop-stuffing.

Be aware that these packets may no longer be null packets if some previous plugin injected data, replacing stuffing.

```
-i index1[-[index2]]
```

# --interval index1[-[index2]]

Select all packets in the specified interval from the start of the stream. The packets in the stream are indexed starting at zero.

- In the form *index1*, only one packet is selected, at the specified index.
- In the form *index1-index2*, all packets in the specified range of indexes, inclusive, are selected.
- In the form *index1-*, all packets starting at the specified index are selected, up to the end of the stream.

Several options --interval can be specified.

# -1 label1[-label2]

### --label label1[-label2]

Select packets with any of the specified labels. Labels should have typically been set by a previous plugin in the chain.

Several --label options may be specified.

Note that the option --label is different from the generic option --only-label. The generic option --only-label acts at *tsp* level and controls which packets are passed to the plugin. All other packets are directly passed to the next plugin without going through this plugin. The option --label, on the other hand, is specific to the *filter* plugin and selects packets with specific labels among the packets which are passed to this plugin.



### --max-adaptation-field-size value

Select packets with no adaptation field or with an adaptation field the size (in bytes) of which is not greater than the specified value.

### --max-payload-size value

Select packets with no payload or with a payload the size (in bytes) of which is not greater than the specified value.

### --max-splice-countdown value

Select packets with a *splice\_countdown* value in adaptation field which is lower than or equal to the specified value.

### --min-adaptation-field-size value

Select packets with an adaptation field the size (in bytes) of which is equal to or greater than the specified value.

### --min-payload-size value

Select packets with a payload the size (in bytes) of which is equal to or greater than the specified value

### --min-splice-countdown value

Select packets with a *splice\_countdown* value in adaptation field which is greater than or equal to the specified value.

#### -n

## --negate

Negate the filter: specified packets are excluded.

### --nullified

Select packets which were explicitly turned into null packets by some previous plugin in the chain (typically using a --stuffing option).

Be aware that these packets may no longer be null packets if some intermediate plugin injected data, replacing stuffing.

### --pattern value

Select packets containing the specified pattern bytes. The value must be a string of hexadecimal digits specifying any number of bytes.

By default, the packet is selected when the value is anywhere inside the packet.

With option --search-payload, only search the pattern in the payload of the packet.

With option --search-offset, the packet is selected only if the pattern is at the specified offset in the packet.

When --search-payload and --search-offset are both specified, the packet is selected only if the pattern is at the specified offset in the payload.

## --payload

Select packets with a payload.

## --pcr

Select packets with PCR or OPCR.

## --pes

Select packets with clear PES headers.

# **-p** *pid1*[-*pid2*]

## **--pid** *pid1*[-*pid2*]

PID filter: select packets with these PID values.

Several -p or --pid options may be specified.

# --reset-label label1[-label2]

Clear the specified labels on the selected packets.

Version 3.22-1926 171 / 395



Do not drop unselected packets, simply clear one or more labels on selected ones.

Several --reset-label options may be specified.

## --reset-permanent-label label1[-label2]

Clear the specified labels on all packets, selected and unselected ones, after at least one was selected.

Do not drop unselected packets, simply use selected ones as trigger.

Several --reset-permanent-label options may be specified.

### --scrambling-control value

Select packets with the specified scrambling control value.

Valid values are 0 (clear), 1 (reserved), 2 (even key), 3 (odd key).

### --search-offset value

With --pattern, only search the set of bytes at the specified offset in the packet (the default) or in the payload (with --search-payload).

### --search-payload

With --pattern, only search the set of bytes in the payload of the packet. Do not search the pattern in the header or adaptation field.

## --set-label label1[-label2]

Set the specified labels on the selected packets.

Do not drop unselected packets, simply mark selected ones with one or more labels.

Several --set-label options may be specified.

## --set-permanent-label label1[-label2]

Set the specified labels on all packets, selected and unselected ones, after at least one was selected.

Do not drop unselected packets, simply use selected ones as trigger.

Several --set-permanent-label options may be specified.

### --splice-countdown value

Select packets with the specified *splice\_countdown* value in adaptation field.

## --stream-id id1[-id2]

Select PES PID's with any of the specified stream ids.

The PID's are dynamically selected. A PID starts to be selected when a specified stream id is detected in a PES header. Such a PID becomes no longer selected when a non-specified stream id is found in this PID.

Several --stream-id options may be specified.

### - c

### --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

## --unit-start

Select packets with payload unit start indicator.

### - v

### --valid

Select valid packets. A valid packet starts with 0x47 and has its transport\_error\_indicator cleared.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 173 / 395



# fork (input)

## Receive packets from a forked process

This input plugin forks a process and receives all TS packets from the standard output of this process.

Using this input plugin with *tsp* is equivalent to reading the input pipe. The following two commands have the same effect (the command *"receive"* being a fictitious one):

```
receive stream | tsp ...
tsp -I fork 'receive stream' ...
```

So, this plugin is redundant with the shell pipe features. However, this plugin is useful when the *tsp* process is created from another native application (not a shell script). In that case, it is much easier for this application to create a simple binary process rather than a shell and its commands.

Additionally, this input plugin becomes necessary with *tsswitch* which accepts several inputs. The following command has no equivalent with shell pipes:

```
tsswitch -I fork 'receive stream1' -I fork 'receive stream2' -0 ...
```

## **Usage**

```
tsp -I fork [options] 'command'
```

### **Parameter**

The 'command' parameter specifies the shell command to execute in the forked process. The standard output of this process is a pipe from which the TS packets are received by the input plugin. If the command contains spaces or shell special sequences, the complete command string must be surrounded by quotes.

If the command is too long or too complicated, it is recommended to use a script. If the created command is another TSDuck command, it is possible to shorten the command using partial command line redirection (see 3.1.5).

### **Options**

- -b value
- --buffered-packets value

Windows only: Specifies the pipe buffer size in number of TS packets.

--format name

Specify the format of the input stream which comes from the created process. See section 2.1.2 for more details.

-n

--nowait

Do not wait for child process termination at end of input.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

--help

Display plugin help text.



# fork (output)

# Send packets to a forked process

This output plugin forks a process and sends all TS packets to the standard input of this process.

Using this output plugin with *tsp* is equivalent to writing to the output pipe. The following two commands have the same effect (the command "*send*" being a fictitious one):

```
tsp ... | send stream
tsp ... -O fork 'send stream'
```

So, this plugin is redundant with the shell pipe features. However, this plugin is useful when the *tsp* process is created from another native application (not a shell script). In that case, it is much easier for this application to create a simple binary process rather than a shell and its commands.

## **Usage**

```
tsp -0 fork [options] 'command'
```

### **Parameter**

The 'command' parameter specifies the shell command to execute in the forked process. The standard input of this process is a pipe receiving the TS packets. If the command contains spaces or shell special sequences, the complete command string must be surrounded by quotes.

If the command is too long or too complicated, it is recommended to use a script. If the created command is another TSDuck command, it is possible to shorten the command using partial command line redirection (see 3.1.5).

## **Options**

-b value

### --buffered-packets value

Windows only: Specifies the pipe buffer size in number of TS packets.

### --format name

Specify the format of the output stream which is passed to the created process. See section 2.1.2 for more details.

By default, the format is a standard TS file. If the format is M2TS, the inserted time stamp is identical to the input time stamp for each packet.

-n

## --nowait

Do not wait for child process termination at end of input.

## Generic common output plugin options

The following options are implicitly defined in all output plugins.

## --help

Display plugin help text.

Version 3.22-1926 175 / 395



# fork (packet processing)

## Redirect packets to a forked process

This plugin forks a process and sends all TS packets to the standard input of this process. The TS packets are also normally passed to the next processor in the chain.

This plugin can be used to duplicate the output stream at any point in the packet processing chain.

### **Usage**

```
tsp -P fork [options] 'command'
```

### **Parameter**

The 'command' parameter specifies the shell command to execute in the forked process. The standard input of this process is a pipe receiving the TS packets. If the command contains spaces or shell special sequences, the complete command string must be surrounded by quotes.

If the command is too long or too complicated, it is recommended to use a script. If the created command is another TSDuck command, it is possible to shorten the command using partial command line redirection (see 3.1.5).

## **Options**

-b value

### --buffered-packets value

Specifies the number of TS packets to buffer before sending them through the pipe to the forked process. When set to zero, the packets are not buffered and sent one by one.

The default is 500 packets in real-time mode and 1000 packets in offline mode.

#### --format name

Specify the format of the output stream which is passed to the created process. See section 2.1.2 for more details.

By default, the format is a standard TS file. If the format is M2TS, the inserted time stamp is identical to the input time stamp for each packet.

-i

## --ignore-abort

Ignore early termination of child process. By default, if the child process aborts and no longer reads the packets, *tsp* also aborts.

-n

### --nowait

Do not wait for child process termination at end of input.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# # hides (output)

# Send the Transport Stream to a HiDes Modulator Device

This plugin sends the output transport stream to a HiDes modulator device.

### Usage

```
tsp -0 hides [options]
```

## **Options**

- -a value
- --adapter value

Specify the HiDes adapter number to use. By default, the first HiDes device is selected.

Use the command tshides to list all HiDes devices.

Use --adapter or --device but not both.

- -b value
- --bandwidth value

Bandwidth in MHz. Must be one of 5, 6, 7, 8.

The default is 8 MHz.

- -c value
- --constellation value

Constellation type. Must be one of "QPSK", "16-QAM", "64-QAM".

The default is 64-QAM.

--dc-compensation i-value/q-value

Specify the DC offset compensation values for I and Q. Each offset value shall be in the range -512 to 512.

- -d "name"
- --device "name"

Specify the HiDes device name to use. By default, the first HiDes device is selected.

Use the command tshides to list all HiDes devices.

Use --adapter or --device but not both.

- -f value
- --frequency value

Frequency, in Hz, of the output carrier. There is no default, this is a mandatory parameter.

--gain value

Adjust the output gain to the specified value in dB.

- -g value
- --guard-interval value

Guard interval. Must be one of "1/32", "1/16", "1/8", "1/4".

The default is 1/32.

- --h value
- --high-priority-fec value

Error correction for high priority streams. Must be one of "1/2", "2/3", "3/4", "5/6", "7/8".

The default is 2/3.

- --s value
- --spectral-inversion value

Spectral inversion. Must be one of "off", "on", "auto".

The default is "auto".

Version 3.22-1926 177 / 395



Note that this option is ignored on Windows.

- -t value
- --transmission-mode value

Transmission mode. Must be one of "4K", "2K", "8K". The default is "8K".

# Generic output plugin options

The following options are implicitly defined in all ouput plugins.

--help

Display this help text.



# **H**history

## Report a History of Major Events on the Transport Stream

This plugin reports a history of the major events on the transport stream: new PID's, new tables, clear ⇔ scrambled transitions, suspended and restarted PID's, etc.

By default, the messages are reported, like all other tsp messages, on the standard error file. Each output line is formatted as follow:

```
* history: packet-number: MESSAGE
```

With option --milli-seconds, the *packet-number* is replaced by a number of milliseconds (based on the TS bitrate).

Some events are detected only some time after they occurred (determining if a PID is suspended, for instance, is detected long after the last packet on this PID). As a consequence, some messages may be unsorted. To sort messages according to packet numbers, use a command like:

```
tsp -P history ... 2>&1 | grep '* history:' | sort -t : -k 2 -n
```

When an output file is specified using --output-file, the log prefix "\* history:" is not present. In this case, the sort command becomes:

```
sort -n output-file-name
```

### **Usage**

```
tsp -P history [options]
```

### **Options**

- C

## --cas

Report all CAS events (new ECM, crypto-period change). By default, only clear to/from scrambled transitions are reported.

## -e --eit

Report all EIT. By default, EIT are not reported.

-i

### --ignore-stream-id-change

Do not report stream\_id modifications in a stream. Some subtitle streams may constantly swap between "private stream" and "padding stream". This option suppresses these annoying messages.

-m

## --milli-seconds

For each message, report time in milli-seconds from the beginning of the stream instead of the TS packet number. This time is a playback time based on the current TS bitrate (use plugin *pcrbitrate* just before plugin *history* when necessary).

# -o filename

### --output-file filename

Specify the output file for reporting history lines. By default, report history lines on standard error using the tsp logging mechanism.

## -s value

### --suspend-packet-threshold value

Number of packets in the TS after which a PID is considered as suspended. By default, if no packet is found in a PID during 60 seconds (according to the TS bitrate), the PID is considered as suspended.

Version 3.22-1926 179 / 395



-t

## --time-all

Report all TDT and TOT. By default, only report TDT preceeding another event.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# ■ hls (input)

# Receive HTTP Live Streaming (HLS) media

This plugin reads a combined transport stream from an HLS streaming server. All media segments are concatenated into one single transport stream.

In the case of live content, the HLS playlist is reloaded as often as necessary to get a continuous content.

Restriction: The HLS specification allows two kinds of media content: TS and fMP4 (fragmented MP4). Since TSDuck is a *transport stream* toolkit, this plugin can only receive TS media.

#### **Usage**

```
tsp -I hls [options] url
```

### **Parameter**

Specify the URL of an HLS manifest or playlist. This is typically an URL ending in .m3u8.

This can be a **master playlist**, referencing several versions of the same content (with various bitrates or resolutions). This can also be a **media playlist**, referencing all segments of one single content.

When the playlist is a master one, the first media playlist is selected by default. Specify options can be used to select a playlist based on criteria (bandwidth or resolution for instance) When a media playlist failed to load, the next one is used (with respect to the selection criteria), etc.

Although HLS is inherently based on HTTP, it is possible to specify a local file as playlist, either using a file: URI or a simple file specification. This is typically useful to test the files which are produced by the *hls* output plugin.

# **Options**

#### --connection-timeout value

Specify the connection timeout in milliseconds.

By default, let the operating system decide.

#### --highest-bitrate

When the URL is a master playlist, use the content with the highest bitrate.

#### --highest-resolution

When the URL is a master playlist, use the content with the highest screen resolution.

-1

#### --list-variants

When the URL is a master playlist, list all possible streams bitrates and resolutions.

#### --live

Specify that the input is a live stream and the playout shall start at the last segment in the playlist. This is an alias for --start-segment -1

# --lowest-bitrate

When the URL is a master playlist, use the content with the lowest bitrate.

#### --lowest-resolution

When the URL is a master playlist, use the content with the lowest screen resolution.

#### --max-bitrate value

When the URL is a master playlist, select a content the bitrate of which is lower than the specified maximum.

### --max-height value

When the URL is a master playlist, select a content the resolution of which has a lower height than the specified maximum.

Version 3.22-1926 181 / 395



#### --max-queue value

Specify the maximum number of queued TS packets before their insertion into the stream.

The default is 1000.

#### --max-width value

When the URL is a master playlist, select a content the resolution of which has a lower width than the specified maximum.

#### --min-bitrate value

When the URL is a master playlist, select a content the bitrate of which is higher than the specified minimum.

### --min-height value

When the URL is a master playlist, select a content the resolution of which has a higher height than the specified minimum.

#### --min-width value

When the URL is a master playlist, select a content the resolution of which has a higher width than the specified minimum.

#### --proxy-host name

Optional proxy host name for Internet access.

### --proxy-password string

Optional proxy password for Internet access (for use with --proxy-user).

#### --proxy-port value

Optional proxy port for Internet access (for use with --proxy-host).

#### --proxy-user name

Optional proxy user name for Internet access.

#### --receive-timeout value

Specify the data reception timeout in milliseconds. This timeout applies to each receive operation, individually.

By default, let the operating system decide.

#### --save-files directory-name

Specify a directory where all downloaded files, media segments and playlists, are saved before being passed to the next plugin.

This is typically a debug option to analyze the input HLS structure.

#### -s value

## --segment-count value

Stop receiving the HLS stream after receiving the specified number of media segments.

By default, receive the complete content.

### --start-segment value

Start at the specified segment in the initial playlist.

The value can be positive or negative. Positive values are indexes from the start of the playlist: 0 is the first segment (the default), +1 is the second segment, etc. Negative values are indexes from the end of the playlist: -1 is the last segment, -2 is the preceding segment, etc.

By default, start with the first media segment.

### Generic common input plugin options

The following options are implicitly defined in all input plugins.

#### --help

Display plugin help text.



# 

# Generate HTTP Live Streaming (HLS) media

This output plugin generates HLS playlists and media segments on local files only. It can also purge obsolete media segments and regenerate live playlists. The plugin always generate media segments. The playlist generation is optional.

To setup a complete HLS server, it is necessary to setup an external HTTP server such as Apache which simply serves the files, playlist and media segments.

#### **Usage**

tsp -0 hls [options] filename

### **Parameter**

Specify the name template of the output media segment files. A number is automatically added to the name part so that successive segment files receive distinct names.

Example: if the specified file name is *foo-ts*, the various segment files are named *foo-000000.ts*, *foo-000001.ts*, etc.

If the specified template already contains trailing digits, this unmodified name is used for the first segment. Then, the integer part is incremented.

Example: if the specified file name is *foo-027.ts*, the various segment files are named *foo-027.ts*, *foo-028.ts*, etc.

# **Options**

- -d value
- --duration value

Specify the target duration in seconds of media segments.

The default is 10 seconds per segment for VoD streams and 5 seconds for live streams.

- -f value
- --fixed-segment-size value

Specify the size in bytes of all media segments. By default, the segment size is variable and based on the --duration parameter. When --fixed-segment-size is specified, the --duration parameter is only used as a hint in the playlist file.

# --label-close label1[-label2]

Close the current segment as soon as possible after a packet with any of the specified labels. Labels should have typically been set by a previous plugin in the chain. In practice, the current segment is closed and renewed at the start of the next PES packet on the video PID.

Several --label-close options may be specified.

This option is compatible with --duration. The current segment is closed on a labelled packed or segment duration, whichever comes first.

- -1 value
- --live value

Specify that the output is a live stream. The specified value indicates the number of simultaneously available media segments. Obsolete media segment files are automatically deleted.

By default, the output stream is considered as VoD and all created media segments are preserved.

# -p filename

# --playlist filename

Specify the name of the playlist file. The playlist file is rewritten each time a new segment file is completed or an obsolete one is deleted.

Version 3.22-1926 183 / 395



The playlist and the segment files can be written to distinct directories but, in all cases, the URI of the segment files in the playlist are always relative to the playlist location.

By default, no playlist file is created (media segments only).

- -s value
- --start-media-sequence value

 $Initial\ media\ sequence\ number\ in\ \ \texttt{\#EXT-X-MEDIA-SEQUENCE}\ directive\ in\ the\ playlist.$ 

The default is zero.

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

--help

Display plugin help text.



# #http (input)

## Read a Transport Stream from an HTTP Server

This plugin reads a transport stream from a URL. The HTTP server is expected to send a valid transport stream without encapsulation.

It is possible to repeat the operation a number of times. In that case, the URL is re-opened each time and the content may be different if the served stream is not a static file.

The expected MIME type for an MPEG transport stream is video/mp2t. If a different type is reported by the server, a warning message is displayed but the content is accepted as long as it is a valid transport stream.

## **Usage**

```
tsp -I http [options] url
```

#### **Parameter**

Specify the URL from which to read the transport stream.

# **Options**

#### --connection-timeout value

Specify the connection timeout in milliseconds.

By default, let the operating system decide.

#### --ignore-errors

With --repeat or --infinite, repeat also in case of error.

By default, repetition stops on error.

#### -i

#### --infinite

Repeat the playout of the content infinitely (default: only once).

### --max-queue value

Specify the maximum number of queued TS packets before their insertion into the stream.

The default is 1000.

# --proxy-host name

Optional proxy host name for Internet access.

#### --proxy-password string

Optional proxy password for Internet access (for use with --proxy-user).

#### --proxy-port value

Optional proxy port for Internet access (for use with --proxy-host).

#### --proxy-user name

Optional proxy user name for Internet access.

#### --receive-timeout value

Specify the data reception timeout in milliseconds. This timeout applies to each receive operation, individually.

By default, let the operating system decide.

#### --reconnect-delay value

With --repeat or --infinite, wait the specified number of milliseconds.

By default, repeat immediately.

Version 3.22-1926 185 / 395



- -r count
- --repeat count

Repeat the playout of the content the specified number of times (default: only once).

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

--help

Display plugin help text.



# **inject**

# **Inject Tables in a Transport Stream**

This plugin injects MPEG tables and sections into a transport stream, replacing a PID or stealing packets from stuffing.

When the PID is replaced, all previous content of this PID is lost and all its packets are replaced at the same position in the stream. The bitrate of the PID is unchanged.

When a new PID is created, replacing some stuffing packets, its bitrate must be known. There are several explicit or implicit ways to specify the bitrate of the new PID. First, the option --bitrate can be used. Second, the option --inter-packet can be used to specify the placement of the packets in the stream. The last option is to specify an explicit repetition rate for each input section file.

# Usage

```
tsp -P inject [options] input-file[=rate] ...
```

#### **Parameters**

```
input-file[=rate]
```

Binary or XML files containing one or more sections or tables. By default, files with a name ending in .xml are XML and files with a name ending in .bin are binary. For other file names, explicitly specify --binary or --xml.

If different repetition rates are required for different files, a parameter can be "filename=value" where value is the repetition rate in milliseconds for all sections in that file.

# **Options**

#### --binary

Specify that all input files are binary, regardless of their file name.

#### -b value

### --bitrate value

Specifies the bitrate for the new PID, in bits / second.

### --default-charset name

Default character set to use when serializing strings to tables and descriptors. This option is useful only when tables are read from XML files and converted to binary sections for injection.

By default, standard DVB encoding is used. See section 2.3 for more details.

### --eit-base-date date

With --eit-normalization, use the specified date as "last midnight" reference for the allocation of the various EIT events in sections and segments.

The date must be in the format "year/month/day".

By default, use the oldest date in all EIT sections as base date.

#### --eit-normalization

Reorganize all EIT sections according to ETSI TS 101 211 rules (see [6]).

- EIT present/following: One single EIT p/f subtable is built per service. It is split in two sections, one for present and one for following events.
- EIT schedule: All EIT schedule are kept but they are completely reorganized. All events are extracted and spread over new EIT sections according to ETSI TS 101 211 rules.

If several files are specified, the reorganization of EIT's is performed inside each file independently. This is fine as long as all EIT's for a given service are in the same input file.

See also option --eit-base-date.

# --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

Version 3.22-1926 187 / 395



#### -e value

#### --evaluate-interval value

When used with --replace and when specific repetition rates are specified for some input files, the bitrate of the target PID is re-evaluated on a regular basis. The value of this option specifies the number of packet in the target PID before re-evaluating its bitrate. The default is 100 packets.

#### -f

#### --force-crc

Force recomputation of CRC32 in long sections. Ignore CRC32 values in input file.

#### -i value

#### --inter-packet value

Specifies the packet interval for the new PID, that is to say the number of TS packets in the transport between two packets of the new PID. Use instead of --bitrate if the global bitrate of the TS cannot be determined.

### --japan

A synonym for --default-charset ARIB-STD-B24. See section 2.3 for more details.

This option also activates some specificities for Japan such as the use of JST time instead of UTC.

#### -i

#### --joint-termination

Perform a *joint termination* when section insersion is complete. Meaningful only when --repeat is specified. See the description of the tsp command for more details on *joint termination*.

#### --pack-and-flush

When loading a binary section file, pack incomplete tables, ignoring missing sections, and flush them. Sections are renumbered to remove any hole between sections.

Use with care because this may create inconsistent tables.

### -p value

# --pid value

PID of the output TS packets. This is a required parameter, there is no default value. To replace the content of an existing PID, use option --replace. To steal stuffing packets and create a new PID, use either option --bitrate or --inter-packet. Exactly one option --replace, --bitrate or --inter-packet must be specified.

#### --poll-files

Poll the presence and modification date of the input files at regular intervals. When a file is created, modified or deleted, reload all files at the next section boundary and restart the injection cycles. When a file is deleted, its sections are no longer injected. If the file reappears later, its sections will be injected again.

By default, all input files are loaded once at initialization time and an error is generated if a file is missing.

### --repeat count

Repeat the insertion of a complete cycle of sections the specified number of times. By default, the sections are infinitely repeated.

#### -r

## --replace

Replace the content of an existing PID. Do not steal stuffing.

#### - 5

### --stuffing

Insert stuffing at end of each section, up to the next TS packet boundary. By default, sections are packed and start in the middle of a TS packet, after the previous section. Note, however, that section headers are never scattered over a packet boundary.



-t

#### --terminate

Terminate packet processing when section insersion is complete. Meaningful only when --repeat is specified. By default, when section insertion is complete, the transmission continues and the stuffing is no longer modified (if --replace is specified, the PID is then replaced by stuffing).

### --xml

Specify that all input files are XML, regardless of their file name.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 189 / 395



# ip (input)

# **UDP/IP** unicast or multicast input

This input plugin receives TS packets from UDP/IP, multicast or unicast.

The received UDP datagrams are analyzed and all TS packets are extracted. Optional extra data at the beginning of the datagram (such as RTP headers) are discarded.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

# **Input time-stamps**

When the input is an RTP stream, the RTP time-stamp value is used as input time-stamp by tsp.

On Linux systems, the kernel reports a system time-stamp for each UDP datagram. This value is used as input time-stamp by *tsp* for all TS packets in the UDP datagram.

# **Usage**

```
tsp -I ip [options] [[source@]address:]port
```

#### **Parameter**

The parameter [address:]port describes the destination of UDP packets to receive. The port part is mandatory and specifies the UDP port to listen on. The address part is optional. It specifies an IP multicast address to listen on. It can be also a host name that translates to a multicast address.

An optional source address can be specified as *source@address:port* in the case of source-specific multicast (SSM).

If the address is not specified, the plugin simply listens on the specified local port and receives the packets which are sent to one of the local (unicast) IP addresses of the system.

# **UDP** reception options

- -b value
- --buffer-size value

Specify the UDP socket receive buffer size (socket option).

#### --default-interface

Let the system find the appropriate local interface on which to listen. By default, listen on all local interfaces.

-f

#### --first-source

Filter UDP packets based on the source address. Use the sender address of the first received packet as only allowed source.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

To allow a more precise selection of the sender, use option --source. Options --first-source and --source are mutually exclusive.

-1 address

#### --local-address address

Specify the IP address of the local interface on which to listen. It can be also a host name that translates to a local address. By default, listen on all local interfaces.

#### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.



#### --receive-timeout value

Specify the UDP reception timeout in milliseconds. This timeout applies to each receive operation, individually. By default, receive operations wait for data, possibly forever.

-r

#### --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

-s address[:port]

### --source address[:port]

Filter UDP packets based on the specified source address.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

Options --first-source and --source are mutually exclusive.

#### --ssm

This option forces the usage of source-specific multicast (SSM) using the source address which is specified by the option --source. Without --ssm, standard ("any-source') multicast is used and the option --source is used to filter incoming packets.

The --ssm option is implicit when the classical SSM syntax source@address:port is used.

### Other options

-d value

### --display-interval value

Specify the interval in seconds between two displays of the evaluated real-time input bitrate. The default is to never display the bitrate. This option is ignored if --evaluation-interval is not specified.

-e value

#### --evaluation-interval value

Specify that the real-time input bitrate shall be evaluated on a regular basis. The value specifies the number of seconds between two evaluations. By default, the real-time input bitrate is never evaluated and the input bitrate is evaluated from the PCR in the input packets.

### --timestamp-priority name

Specify how the input time-stamp of each packet is computed.

The name specifies an ordered list of time-stamp sources. The first available time-stamp value is used as input time-stamp. The name must be one of "rtp-kernel-tsp", "kernel-rtp-tsp", "kernel-tsp", "tsp".

The possible time-stamp sources are:

- rtp: The RTP time stamp, when the UDP packet is an RTP packet.
- kernel: A kernel-provided time-stamp for the packet, when available (Linux only).
- tsp: A software time-stamp, provided by tsp when the input plugin returns a chunk of packets. The tsp-provided time-stamp is always available, always comes last and is less precise.

The default is rtp-kernel-tsp.

### Generic common input plugin options

The following options are implicitly defined in all input plugins.

#### --help

Display plugin help text.

Version 3.22-1926 191 / 395



# ip (output)

## UDP/IP unicast or multicast output

This output plugin sends TS packets using UDP/IP, multicast or unicast.

Each UDP datagram is filled with one or more TS packets (see option --packet-burst). By default, the datagrams contain TS packets without any extra information or encapsulation. Use the option --rtp to generate RTP datagrams.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

# **Usage**

tsp -0 ip [options] address:port

#### **Parameter**

The parameter *address:port* describes the destination for UDP packets. The *address* specifies an IP address which can be either unicast or multicast. It can be also a host name that translates to an IP address. The *port* specifies the destination UDP port.

# **Options**

-e

#### --enforce-burst

Enforce that the number of TS packets per UDP packet is exactly what is specified in option -- packet-burst. By default, this is only a maximum value.

For instance, without --enforce-burst and the default --packet-burst value (7 packets), if the output plugin receives 16 TS packets, it immediately sends 3 UDP packets containing 7, 7 and 2 TS packets respectively.

With option --enforce-burst, only the first 14 TS packets would be sent, using 2 UDP packets. The remaining 2 TS packets are buffered, delaying their departure until 5 more TS packets are available.

#### -p value

# --packet-burst value

Specifies the maximum number of TS packets to be grouped into each UDP datagram.

The default is 7, the maximum is 128.

### **IP options**

-1 address

#### --local-address address

When the destination is a multicast address, specify the IP address of the outgoing local interface. It can be also a host name that translates to a local address.

#### --local-port value

Specify the local UDP source port for outgoing packets.

By default, a random source port is used.

- -s value
- --tos value

Specifies the TOS (Type-Of-Service) socket option. Depending on the specified value or on the operating system, this option may require privileges or may even have no effect at all.

-t value

# --ttl value

Specifies the TTL (Time-To-Live) socket option. The actual option is either "Unicast TTL" or "Multicast TTL", depending on the destination address.

Warning: Remember than the default Multicast TTL is 1 on most systems.



# **RTP options**

-r

### --rtp

Use the Real-time Transport Protocol (RTP) in output UDP datagrams.

By default, TS packets are sent in UDP datagrams without encapsulation.

### --payload-type value

With --rtp, specify the payload type.

By default, use 33, the standard RTP type for MPEG2-TS. Do not modify unless there is a good reason to do so.

# --pcr-pid value

With --rtp, specify the PID containing the PCR's which are used as reference for RTP timestamps.

By default, use the first PID containing PCR's.

#### --ssrc-identifier value

With --rtp, specify the SSRC identifier.

By default, use a random value. Do not modify unless there is a good reason to do so.

### --start-sequence-number value

With --rtp, specify the initial sequence number.

By default, use a random value. Do not modify unless there is a good reason to do so.

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

#### --help

Display plugin help text.

Version 3.22-1926 193 / 395





# Limit the global bitrate by dropping packets

This plugin limits the global bitrate of the transport stream. Packets are dropped when necessary to maintain the overall bitrate below a given maximum. The bitrate is computed from PCR's (the default) or from the processing wall clock time.

Packets are not dropped randomly. Some packets are more likely to be dropped than others. When the bitrate exceeds the maximum, the number of packets in excess is permanently recomputed. The type of packets to drop depends on the number of packets in excess. There are several thresholds which are specified by the corresponding options:

- Below --threshold1, only null packets are dropped.
- Below --threshold2, if --pid options are specified, video packets from the specified PID's are dropped (except packets containing a PUSI or a PCR).
- Below --threshold3, if --pid options are specified, all packets (not only video) from the specified PID's are dropped (except packets containing a PUSI or a PCR).
- Below --threshold4, packets from any video or audio PID are dropped (except packets containing a PUSI or a PCR).
- Above the last threshold, any packet can be dropped.

Note: All thresholds, except the last one, can be disabled using a zero value.

# **Usage**

```
tsp -P limit [options]
```

# **Options**

- -b value
- --bitrate value

Limit the overall bitrate of the transport stream to the specified value in bits/second. This is a mandatory option, there is no default.

```
-p pid1[-pid2]
```

--pid pid1[-pid2]

Specify PID's the content of which can be dropped when the maximum bitrate is exceeded. Several --pid options can be specified.

- -1 value
- --threshold1 value

Specify the first threshold for the number of packets in excess. The default is 10 packets.

- -2 value
- --threshold2 value

Specify the second threshold for the number of packets in excess. The default is 100 packets.

- -3 value
- --threshold3 value

Specify the third threshold for the number of packets in excess. The default is 500 packets.

- -4 value
- --threshold4 value

Specify the fourth threshold for the number of packets in excess. The default is 1000 packets.

-w

#### --wall-clock

Compute bitrates based on real wall-clock time. The option is meaningful with live streams only. By default, compute bitrates based on PCR's.



# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 195 / 395





# Merge TS packets coming from the standard output of a command

This plugin creates a process. The process is expected to write TS packets on its standard output. The resulting transport stream is merged with the main transport stream which is processed by *tsp* and the chain of plugins.

As usual with *tsp* plugins, the TS packets which come from the merged transport stream are inserted into the main transport stream by replacing stuffing packets. The obvious requirement is that the stuffing bitrate of the main stream is greater than the overall bitrate of the merged stream. Otherwise, it wouldn't fit in the main transport steam.

Typically (although not required), the created process is another *tsp* command which prepares the merged transport stream. Preparing the transport stream may include reducing the bitrate by removing stuffing and services, remapping PID's or renaming services which could conflict with existing PID's or services in the other transport stream.

By default, the following operations are performed while merging transport streams. These defaults can be changed using appropriate options.

- The PAT and SDT from the merged transport stream are merged into the corresponding tables in the main transport stream. The merged services are consequently correctly referenced in the main transport stream.
- Similarly, the CAT is also merged so that EMM PID's from the merged transport stream are correctly referenced in the main transport stream.
  - Warning: The CAT is an optional table and the *merge* plugin will not create one if there is none. If you want to make sure that a merged CAT will be present, use an instance of the *cat* plugin before *merge*.
- The PID's 0x00 to 0x1F are dropped from the merged transport stream. These PID's contain the base PSI/SI which are normally present in all transport streams. Merging these PID's would create conflicts. Instead, the most important PSI/SI tables are correctly merged as previously described. All other PID's are passed. This can be modified using options --drop and --pass.
- PID conflicts are detected. If packets from the same PID are found in the two transport streams, the PID is dropped from the merged stream.
- In packets coming from the merged transport stream, the PCR's are restamped according to their new placement in the main transport stream.

#### **Usage**

```
tsp -P merge [options] 'command'
```

#### **Parameter**

The command parameter specifies the shell command to execute in the forked process. The standard output of this process is a pipe into which the TS packets are written. If the command contains spaces or shell special sequences, the complete command string must be surrounded by quotes.

If the command is too long or too complicated, it is recommended to use a script. If the created command is another TSDuck command, it is possible to shorten the command using partial command line redirection (see 3.1.5).

#### **Options**

```
-d pid[-pid]
--drop pid[-pid]
```

Drop the specified PID or range of PID's from the merged stream. Several options --drop can be specified.

#### --format name

Specify the format of the input stream which comes from the created process. See section 2.1.2 for more details.



#### --ignore-conflicts

Ignore PID conflicts. By default, when packets with the same PID are present in the two streams, the PID is dropped from the merged stream.

Warning: this is a dangerous option which can result in an inconsistent transport stream.

-i

#### --joint-termination

Perform a *joint termination* when the merged stream is terminated. See the description of the tsp command for more details on *joint termination*.

#### --max-queue value

Specify the maximum number of queued TS packets before their insertion into the stream. The default is 1000.

### --no-pcr-restamp

Do not restamp PCR's from the merged TS into the main TS. By default, PCR's in the merged stream are restamped to match their position in the final stream.

The DTS and PTS are never restamped because they are independent from their position in the stream. When the PCR's in the merged stream have discontinuities (such as when cycling a TS file), restamping the PCR's can break the video playout since they become decorrelated with the DTS and PTS.

#### --no-psi-merge

Do not merge PSI/SI from the merged TS into the main TS. By default, the PAT, CAT and SDT are merged so that the services from the merged stream are properly referenced and PID's  $0\times0$ 0 to  $0\times1$ F are dropped from the merged stream.

#### --no-wait

Do not wait for child process termination at end of processing.

```
-p pid[-pid]
```

# --pass pid[-pid]

Pass the specified PID or range of PID's from the merged stream. Several options --pass can be specified.

### --reset-label label1[-label2]

Clear the specified labels on the merged packets. Apply to original packets from the merged stream only, not to updated PSI packets.

Several --reset-label options may be specified.

### --set-label label1[-label2]

Set the specified labels on the merged packets. Apply to original packets from the merged stream only, not to updated PSI packets.

Several --set-label options may be specified.

### --terminate

Terminate packet processing when the merged stream is terminated. By default, when packet insertion is complete, the transmission continues and the stuffing is no longer modified.

-t

# --transparent

Pass all PID's without logical transformation.

Equivalent to --no-psi-merge --ignore-conflicts --pass 0x00-0x1F.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

Version 3.22-1926 197 / 395



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **mpe**

# **Extract MPE (Multi-Protocol Encapsulation) datagrams**

This plugin extracts MPE (Multi-Protocol Encapsulation) datagrams from one or more PID's. The extracted datagrams can be either forwarded on the local network, saved in a binary file or simply logged for monitoring. See [13] for more details on MPE.

The extracted datagrams must be valid UDP/IP datagrams. Otherwise, they are ignored. When saved in a binary file or forwarded on the network, only the UDP payload is used. The original IP and UDP headers are dropped.

If the extracted datagrams are forwarded on the local network, it is recommended to activate the real-time defaults of *tsp* using the option --realtime (see the reference documentation for *tsp*).

# **Usage**

```
tsp -P mpe [options]
```

### **General options**

- -m value
- --max-datagram value

Specify the maximum number of datagrams to extract, then stop. By default, all datagrams are extracted.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Extract MPE datagrams from these PID's. Several -p or --pid options may be specified. When no PID is specified, use all PID's carrying MPE which are properly declared in the signalization.

#### **MPE filtering options**

```
-d address[:port]
```

--destination address[:port]

Filter MPE UDP datagrams based on the specified destination IP address.

--net-size value

Specify the exact size in bytes of the complete network datagrams to filter, including IP headers. This option is incompatible with --min-net-size and --max-net-size.

--min-net-size value

Specify the minimum size in bytes of the complete network datagrams to filter.

--max-net-size value

Specify the maximum size in bytes of the complete network datagrams to filter.

```
-s address[:port]
```

--source address[:port]

Filter MPE UDP datagrams based on the specified source IP address.

--udp-size value

Specify the exact size in bytes of the UDP datagrams to filter.

This option is incompatible with --min-udp-size and --max-udp-size.

--min-udp-size value

Specify the minimum size in bytes of the UDP datagrams to filter.

--max-udp-size value

Specify the maximum size in bytes of the UDP datagrams to filter.

Version 3.22-1926 199 / 395



# **Display options**

### --dump-datagram

With --log, dump each complete network datagram.

#### --dump-udp

With --log, dump the UDP payload of each network datagram.

#### --dump-max value

With --dump-datagram or --dump-udp, specify the maximum number of bytes to dump. By default, dump everything.

#### -1

#### --log

Log all MPE datagrams using a short summary for each of them.

# --skip value

With --output-file, --dump-datagram or --dump-udp, specify the initial number of bytes to skip. By default, save or dump from the beginning.

#### --sync-layout

With --log, display the layout of 0x47 sync bytes in the UDP payload.

#### Save options

#### -a

#### --append

With --output-file, if the file already exists, append to the end of the file. By default, existing files are overwritten.

#### -o filename

#### --output-file filename

Specify that the extracted UDP datagrams are saved in this file. The UDP messages are written without any encapsulation.

# **UDP** forwarding options

#### --local-address address

With --udp-forward, specify the IP address of the outgoing local interface for multicast traffic. It can be also a host name that translates to a local address.

# --local-port value

With --udp-forward, specify the local UDP source port for outgoing packets.

By default, a random source port is used.

#### -r address[:port]

### --redirect address[:port]

With --udp-forward, redirect all UDP datagrams to the specified socket address.

By default, all datagram are forwarded to their original destination address. If you specify a redirected address, it is recommended to use --destination to filter a specific stream.

If the port is not specified, the original destination port from the MPE datagram is used.

#### --ttl value

With --udp-forward, specify the TTL (Time-To-Live) socket option.

The actual option is either *Unicast TTL* or *Multicast TTL*, depending on the destination address.

By default, use the same TTL as specified in the received MPE encapsulated datagram.

#### -u

# --udp-forward

Forward all received MPE encapsulated UDP datagrams on the local network.



By default, the destination address and port of each datagram is left unchanged. The source address of the forwarded datagrams will be the address of the local machine.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 201 / 395



# **mpeinject**

# Inject an incoming UDP stream into MPE (Multi-Protocol Encapsulation)

This plugin receives UDP datagrams from the local network, encapsulates them and inserts them in an MPE (Multi-Protocol Encapsulation) PID. See [13] for more details on MPE.

By default, the inserted PID containing MPE sections replaces null packets.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

#### **Usage**

```
tsp -P mpeinject [options] [[source@]address:]port
```

#### **Parameter**

The parameter [address:]port describes the destination of incoming UDP datagrams. All datagrams which are received on this stream will be MPE-encapsulated.

The *port* part is mandatory and specifies the UDP port to listen on. The *address* part is optional. It specifies an IP multicast address to listen on. It can be also a host name that translates to a multicast address.

An optional source address can be specified as *source@address:port* in the case of source-specific multicast (SSM).

If the address is not specified, the plugin simply listens on the specified local port and receives the packets which are sent to one of the local (unicast) IP addresses of the system.

# **UDP** reception options

These options apply to the incoming UDP/IP stream from the local network.

- -b value
- --buffer-size value

Specify the UDP socket receive buffer size (socket option).

### --default-interface

Let the system find the appropriate local interface on which to listen. By default, listen on all local interfaces.

-f

#### --first-source

Filter UDP packets based on the source address. Use the sender address of the first received packet as only allowed source.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

To allow a more precise selection of the sender, use option --source. Options --first-source and --source are mutually exclusive.

### -1 address

#### --local-address address

Specify the IP address of the local interface on which to listen. It can be also a host name that translates to a local address.

By default, listen on all local interfaces.

#### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.



#### --receive-timeout value

Specify the UDP reception timeout in milliseconds. This timeout applies to each receive operation, individually.

By default, receive operations wait for data, possibly forever.

-r

### --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

#### -s address[:port]

#### --source address[:port]

Filter UDP packets based on the specified source address.

This option is useful when several sources send packets to the same destination address and port. Accepting all packets could result in a corrupted stream and only one sender shall be accepted.

Options --first-source and --source are mutually exclusive.

#### --ssm

This option forces the usage of source-specific multicast (SSM) using the source address which is specified by the option --source. Without --ssm, standard ("any-source") multicast is used and the option --source is used to filter incoming packets.

The --ssm option is implicit when the classical SSM syntax source@address:port is used.

# MPE encapsulation options

These options specify how the incoming UDP datagrams are encapsulated into MPE sections.

#### --mac-address nn:nn:nn:nn:nn

Specify the default destination MAC address to set in MPE sections for unicast IP packets. The default is 00:00:00:00:00.

For multicast IP packets, the MAC address is automatically computed.

### --new-destination address[:port]

Change the destination IP address and UDP port of the network datagram in MPE sections. If the port is not specified, the original destination port from the UDP datagram is used.

By default, the destination address is not modified.

### --new-source address[:port]

Change the source IP address and UDP port of the network datagram in MPE sections. If the port is not specified, the original source port from the UDP datagram is used.

By default, the source address is not modified.

#### Other options

### --max-queue value

Specify the maximum number of queued UDP datagrams before their insertion into the MPE stream. The default is 32.

If incoming datagrams arrive too fast and more than this number of UDP datagrams are internally buffered before having the opportunity to be inserted in the transport stream, additional datagrams are dropped and a warning message is reported.

# --pack-sections

Specify to pack DSM-CC sections containing MPE datagrams. With this option, each DSM-CC section starts in the same TS packet as the previous section, when possible.

By default, the last TS packet of a DSM-CC section is stuffed and the next section starts in the next TS packet of the PID.

Version 3.22-1926 203 / 395



- -p value
- --pid value

Specify the PID into which the MPE datagrams shall be inserted. This is a mandatory parameter.

### --replace

Replace the target PID if it exists. By default, the plugin only replaces null packets and *tsp* stops with an error if incoming packets are found with the target PID.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **mux**

# Inject TS packets in a transport stream

This plugin injects TS packets from a file into a transport stream, replacing packets from stuffing.

#### Usage

```
tsp -P mux [options] input-file
```

#### **Parameters**

input-file

Binary transport stream file.

# **Options**

#### -b value

#### --bitrate value

Specifies the bitrate for the inserted packets, in bits/second. By default, all stuffing packets are replaced which means that the bitrate is neither constant nor guaranteed.

# --byte-offset value

Start reading the file at the specified byte offset (default: 0). This option is allowed only if the input file is a regular file.

#### --format name

Specify the format of the input file. See section 2.1.2 for more details.

### -i value

#### --inter-packet value

Specifies the packet interval for the inserted packets, that is to say the number of TS packets in the transport between two new packets. Use instead of --bitrate if the global bitrate of the TS cannot be determined.

# --inter-time value

Specifies the time interval for the inserted packets, that is to say the difference between the nearest PCR clock value at the point of insertion in milliseconds.

Example: 1000 will keep roughly 1 second space between two inserted packets. The default is 0, it means inter-time is disabled. Use --pts-pid to specify the PID carrying the PCR clock of interest.

#### -j

# --joint-termination

Perform a *joint termination* when the file insertion is complete. See the description of the tsp command for more details on *joint termination*.

#### --max-insert-count value

Stop inserting packets after this number of packets was inserted.

### --max-pts value

Stop inserting packets when this PTS time has passed in the --pts-pid.

### --min-pts value

Start inserting packets when this PTS time has passed in the --pts-pid.

# --no-continuity-update

Do not update continuity counters in the inserted packets. By default, the continuity counters are updated in each inserted PID to preserve the continuity.

Version 3.22-1926 205 / 395



#### --no-pid-conflict-check

Do not check PID conflicts between the TS and the new inserted packets. By default, the processing is aborted if packets from the same PID are found both in the TS and the inserted packets.

#### --packet-offset value

Start reading the file at the specified TS packet (default: 0). This option is allowed only if the input file is a regular file.

#### -p value

### --pid value

Force the PID value of all inserted packets.

#### --pts-pid value

Defines the PID carrying PCR or PTS values for --min-pts and --max-pts. When no PTS values are found, PCR are used. PCR values are divided by 300, the system clock sub-factor, to get the corresponding PTS values.

#### -r count

# --repeat count

Repeat the playout of the file the specified number of times. By default, the file is infinitely repeated. This option is allowed only if the input file is a regular file.

### --reset-label label1[-label2]

Clear the specified labels on the muxed packets.

Several --reset-label options may be specified.

### --set-label label1[-label2]

Set the specified labels on the muxed packets.

Several --set-label options may be specified.

#### -t

#### --terminate

Terminate packet processing when the file insertion is complete. By default, when packet insertion is complete, the transmission continues and the stuffing is no longer modified.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# nit

#### Perform Various Transformations on a NIT

This plugin performs various transformations on a NIT, either the NIT Actual or some specific NIT Other. The other NIT's, if present, are left unchanged.

# **Usage**

```
tsp -P nit [options]
```

# **Options**

#### --bitrate value

Specifies the bitrate in bits / second of the PID containing the NIT if a new one is created. The default is 3,000 b/s.

### --build-service-list-descriptors

Build service list descriptors in the NIT according to the information which is collected in the PAT and the SDT.

See also option --default-service-type.

#### --cleanup-private-descriptors

Remove all private descriptors without preceding *private\_data\_specifier\_descriptor*.

#### - c

#### --create

Create a new empty NIT if none was received after one second.

This is equivalent to --create-after 1000.

#### --create-after milliseconds

Create a new empty NIT if none was received after the specified number of milliseconds. If an actual NIT is received later, it will be used as the base for transformations instead of the empty one.

#### --default-service-type value

With --build-service-list-descriptors, specify the default service type of services which are found in the PAT but not in the SDT.

By default, services without known service type are not added in created service list descriptors.

#### -i

### --increment-version

Increment the version number of the NIT.

### --inter-packet value

When a new NIT is created and --bitrate is not present, this option specifies the packet interval for the NIT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.

#### -1 value

### --lcn value

Specify which operation to perform on  $logical\_channel\_number$  (LCN) descriptors. The value is a positive integer:

- 1 : Remove all LCN descriptors.
- 2 : Remove one entry every two entries in each LCN descriptor.
- 3 : Duplicate one entry every two entries in each LCN descriptor.

Version 3.22-1926 207 / 395



#### --mpe-fec value

Set the MPE-FEC\_indicator in all terrestrial\_delivery\_system\_descriptors to the specified value (0 or 1).

# --network-id id

Set the specified new value as network id in the NIT.

#### --network-name name

Set the specified value as network name in the NIT. Any existing <code>network\_name\_descriptor</code> is removed. A new <code>network\_name\_descriptor</code> is created with the new name.

#### -v value

#### --new-version value

Specify a new value for the version of the NIT.

- -**o** id
- --other id
- --nit-other id

Do not modify the NIT Actual. Modify the NIT Other with the specified network id.

### --pds value

With option --remove-descriptor, specify the private data specifier which applies to the descriptor tag values above 0x80.

### -p value

#### --pid value

Specify the PID on which the NIT is expected.

By default, use PID 16 (0x0010), as specified for DVB-compliant networks.

### --remove-descriptor value

Remove from the NIT all descriptors with the specified tag. Several --remove-descriptor options may be specified to remove several types of descriptors. See also option --pds.

#### -r value

# --remove-service value

Remove the specified service\_id from the following descriptors: <code>service\_list\_descriptor</code>, <code>logical\_channel\_number\_ descriptor</code>. Several <code>--remove-service</code> options may be specified to remove several services.

### --remove-ts value

Remove from the NIT all references to the transport stream with the specified *ts\_id* value. Several --remove-ts options may be specified to remove several TS.

### -s value

# --**sld** value

Specify which operation to perform on *service\_list\_descriptors*. The *value* is a positive integer:

- 1 : Remove all *service\_list\_descriptors*.
- 2 : Remove one entry every two entries in each *service\_list\_descriptor*.

# --time-slicing value

Set the *Time\_Slicing\_indicator* in all *terrestrial\_delivery\_system\_descriptors* to the specified value (0 or 1).

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 209 / 395



# **iii**nitscan

## **Scan NIT for Tuning Information**

This plugin analyzes the NIT (Network Information Table) of the transport stream and outputs a list of tuning information, one per transport. The format of the tuning information is compatible with the *dvb* input plugin and the standard Linux utilities *szap*, *czap* and *tzap*.

# Usage

```
tsp -P nitscan [options]
```

# **Options**

#### -a

#### --all-nits

Analyze all NIT's ("NIT actual" and "NIT other"). By default, only the "NIT actual" is analyzed.

### -c[prefix]

#### --comment[=prefix]

Add a comment line before each tuning information. The optional prefix designates the comment prefix. If the option --comment is present but the prefix is omitted, the default prefix is "# ".

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### -d

### --dvb-options

The characteristics of each transponder are formatted as a list of command-line options for the *dvb* input plugin such as --frequency, --symbol-rate, etc.

This is the default when no --save-channels or --update-channels is specified.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### -n value

# --network-id value

Specify the network-id of a "NIT other" to analyze instead of the "NIT actual". By default, the "NIT actual" is analyzed.

-o filename

# --output-file filename

Specify the output text file for the analysis result. By default, use the standard output.

Warning: if you do not specify this option, be sure to redirect the output plugin to something different from the default. Otherwise, the text output of the analysis will be mixed with the binary output of the TS packets!

#### -p value

# --pid value

Specify the PID on which the NIT is expected. By default, the PAT is analyzed to get the PID of the NIT. DVB-compliant networks should use PID 16 (0x0010) for the NIT and signal it in the PAT.

### --save-channels filename

Save the description of all transport streams in the specified XML file. See Appendix B, page 334, for more details on channels configuration files.



If the file name is "-", use the default tuning configuration file. See also option --update-channels.

-t

#### --terminate

Stop the packet transmission after the first NIT is analyzed. Should be specified when *tsp* is used only to scan the NIT.

### --update-channels filename

Update the description of all transport streams in the specified XML file. The content of each transport stream is preserved, only the tuning information is updated. If the file does not exist, it is created. See Appendix B, page 334, for more details on channels configuration files.

If the file name is "-", use the default tuning configuration file.

See also option --save-channels.

### -v[prefix]

# --variable[=prefix]

Each tuning information line is output as a shell environment variable definition. The name of each variable is built from a prefix and the TS id. The default prefix is "TS" and can be changed through the optional value of the option --variable.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 211 / 395



# ■null (input)

# **Null Input Packets Generator**

This input module generates null packets.

#### Usage

```
tsp -I null [options] [count]
```

#### **Parameters**

#### count

Specify the number of null packets to generate. After the last packet, an end-of-file condition is generated. By default, if *count* is not specified, null packets are generated endlessly.

# **Options**

-i

### --joint-termination

When the number of null packets is specified, perform a *joint termination* when completed instead of unconditional termination. See the description of the tsp command for more details on *joint termination*.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

#### --help

Display plugin help text.



# **#pat**

#### Perform Various Transformations on the PAT

This plugin performs various transformations on the PAT.

#### Usage

```
tsp -P pat [options]
```

### **Options**

### -a sid/pid

# --add-service sid/pid

Add the specified *service\_id / PMT-PID* in the PAT. Several --add-service options may be specified to add several services.

#### --bitrate value

Specifies the bitrate in bits / second of the PID containing the PAT if a new one is created.

The default is 3,000 b/s.

#### - C

#### --create

Create a new empty PAT if none was received after one second.

This is equivalent to --create-after 1000.

#### --create-after milliseconds

Create a new empty PAT if none was received after the specified number of milliseconds. If an actual PAT is received later, it will be used as the base for transformations instead of the empty one.

#### -i

#### --increment-version

Increment the version number of the PAT.

#### --inter-packet value

When a new PAT is created and --bitrate is not present, this option specifies the packet interval for the PAT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.

#### -n pid

# --nit pid

Add or modify the NIT PID in the PAT.

### -r sid

### --remove-service sid

Remove the specified *service\_id* from the PAT. Several --remove-service options may be specified to remove several services.

#### - u

### --remove-nit

Remove the NIT PID from the PAT.

# -t id

### --ts-id id

#### --tsid id

Specify a new value for the transport stream id in the PAT.

Version 3.22-1926 213 / 395



- -v value
- --new-version value

Specify a new value for the version of the PAT.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **pattern**

# Replace Packet Payload with a Binary Pattern

This plugin replaces the payload of TS packets with a binary pattern on selected PID's. The resulting packets are meaningless on an MPEG standpoint but can be used to trace packets in order to debug transport stream routing problems either inside a transmission system or inside a set-top box.

#### Usage

```
tsp -P pattern [options] pattern
```

#### **Parameter**

Specifies the binary pattern to apply on TS packets payload. The value must be a string of hexadecimal digits specifying any number of bytes.

# **Options**

-n

# --negate

Negate the PID filter: modify packets on all PID's, expect the specified ones.

-o value

### --offset-non-pusi value

Specify starting offset in payload of packets with the PUSI (payload unit start indicator) not set. By default, the pattern replacement starts at the beginning of the packet payload (offset 0).

-**u** value

#### --offset-pusi value

Specify starting offset in payload of packets with the PUSI (payload unit start indicator) set. By default, the pattern replacement starts at the beginning of the packet payload (offset 0).

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Select packets with these PID values. Several -p or --pid options may be specified to select multiple PID's. If no such option is specified, packets from all PID's are modified.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

```
--only-label label1[-label2]
```

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 215 / 395



# **#**pcradjust

## Adjust PCR's according to a constant bitrate

This plugin recomputes all PCR values, assuming that the transport stream has a constant bitrate.

In the general case, it is impossible to recompute PCR values in non-real-time streams with a variable bitrate because the instant bitrate is usually computed according to the PCR values which are found in the stream, hence assuming that these PCR values are correct and do not need any adjustment.

In each PID, the first PCR is left unmodified and all others are recomputed according to the constant bitrate and the distance between packets.

### **Usage**

```
tsp -P pcradjust [options]
```

# **Options**

#### -b value

#### --bitrate value

Specify a constant bitrate for the transport stream. The PCR values will be adjusted according to this bitrate. By default, use the input bitrate as reported by the input device or a previous plugin.

#### --ignore-dts

Do not modify DTS (decoding time stamps) values.

By default, the DTS are modified according to the PCR adjustment.

### --ignore-pts

Do not modify PTS (presentation time stamps) values.

By default, the PTS are modified according to the PCR adjustment.

# --ignore-scrambled

Do not modify PCR values on PID's containing scrambled packets.

By default, on scrambled PID's, the PCR's are modified but not the PTS and DTS since they are scrambled. This may result in problems when playing video and audio.

# --min-ms-interval milliseconds

Specify the minimum interval between two PCR's in milliseconds.

On a given PID, if the interval between two PCR's is larger than the minimum, the next null packet will be replaced with an empty packet with a PCR for that PID.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Specifies PID's where PCR, DTS and PTS values shall be adjusted.

Several --pid options may be specified.

By default, all PID's are modified.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **pcrbitrate**

## Permanently Recompute Bitrate Based on PCR's

This plugin permanently recomputes the bitrate based on the analysis of PCR's on the packets. All packets are transparently passed.

Normally, tsp determines the input bitrate at the input plugin: either the input plugin itself can report the actual input bitrate (from a hardware device for instance) or tsp computes the bitrate based on PCR analysis. Then, the bitrate information is automatically propagated from one plugin to another, up to the output plugin. The output plugin may use or ignore this information. Typically, output to a file ignores the bitrate information while output to a hardware device (ASI or modulator) will use it as device parameter.

There may be a problem if some packet processor plugin drops packets from the transport stream. The *zap* plugin, for instance, creates an SPTS containing only one service, dropping all other packets.

Let's take an example: tsp is used to read a full MPTS from a file, extract one channel and send it to a Dektec ASI device. Tsp reads the input bitrate (here, it analyzes the PCR from the input file and finds, say, 38 Mb/s). Then, tsp propagates this bitrate along the plugin chain, up to the output plugin. By default, the output plugin will send the SPTS at 38 Mb/s, the bitrate of the original MPTS, which is a non-sense since the "normal" bitrate of the SPTS is more likely something like 3 or 4 Mb/s. By inserting the *pcrbitrate* plugin between the *zap* plugin and the *dektec* output plugin, the bitrate information will be altered and the output plugin receives a bitrate value which is consistent with the PCR's in the SPTS.

## **Usage**

```
tsp -P pcrbitrate [options]
```

## **Options**

-d

#### --dts

Use DTS (Decoding Time Stamps) from video PID's instead of PCR (Program Clock Reference) from the transport layer.

-i

#### --ignore-errors

Ignore transport stream errors such as discontinuities.

When errors are not ignored (the default), the bitrate of the original stream (before corruptions) is evaluated. When errors are ignored, the bitrate of the received stream is evaluated, missing packets being considered as non-existent.

#### --min-pcr value

Stop analysis when that number of PCR are read from the required minimum number of PID (default: 128).

#### --min-pid value

Minimum number of PID to get PCR from (default: 1).

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 217 / 395



# **#**pcrextract

## Extracts PCR, OPCR, PTS, DTS from TS packets

This plugin extracts PCR, OPCR, PTS, DTS from TS packets. The output is typically suitable for analysis with tools like Microsoft Excel.

## **Usage**

```
tsp -P pcrextract [options]
```

#### **Options**

- c

#### --csv

Report data in CSV (*comma-separated values*) format. All values are reported in decimal. This is the default output format. It is suitable for later analysis using tools such as Microsoft Excel.

-d

## --dts

Report Decoding Time Stamps (DTS). By default, if none of --pcr, --opcr, --pts, --dts is specified, report them all.

-e

#### --evaluate-pcr-offset

Evaluate the offset from the PCR to PTS/DTS for packets with PTS/DTS but without PCR. This evaluation may be incorrect if the bitrate is not constant or incorrectly estimated.

By default, the offset is reported only for packets containing a PTS/DTS and a PCR.

-g

## --good-pts-only

Keep only "good" PTS, ie. PTS which have a higher value than the previous good PTS. This eliminates PTS from out-of-sequence B-frames.

-1

#### --log

Report data in "log" format through the standard tsp logging system. All values are reported in hexadecimal.

-n

#### --noheader

Do not output initial header line in CSV format.

#### --opcr

Report Original Program Clock References (OPCR). By default, if none of --pcr, --opcr, --pts, --dts is specified, report them all.

-o filename

# --output-file filename

Output file name for CSV format (standard error by default).

#### --pcr

Report Program Clock References (PCR). By default, if none of --pcr, --opcr, --pts, --dts is specified, report them all.

**-p** *pid1*[-*pid2*]

## --pid pid1[-pid2]

Specifies PID's to analyze. By default, all PID's are analyzed. Several --pid options may be specified.



#### --pts

Report Presentation Time Stamps (PTS). By default, if none of --pcr, --opcr, --pts, --dts is specified, report them all.

#### --scte35

Also detect and report PTS in SCTE 35 commands. This option forces --log and --pts.

If no --pid option is specified, detect all PID's carrying SCTE 35 splice information.

If some --pid options are specified, they designate PID's carrying PCR or PTS. In that case, SCTE 35 commands are analyzed only from PID's which are referenced by the same services as the specified --pid options.

## -s string

## --separator string

Field separator string in CSV format (default: ';').

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 219 / 395



# **pcrverify**

#### Verify the PCR's Values

This plugin verifies the values of all PCR's and report invalid values.

By default, each PCR is compared to its expected theoretical value as computed from the previous PCR value and the transport bitrate. Note that this method works perfectly on constant bitrate streams (CBR) only. With variable bitrate streams (VBR) with high amplitudes of variation, the reported errors are usually meaningless.

For real-time streams, it is possible to use the input time-stamps as reference which is a better alternative for VBR streams.

#### **Usage**

```
tsp -P pcrverify [options]
```

## **Options**

-a

#### --absolute

Use absolute values in PCR units. By default, use micro-second equivalent values (one micro-second = 27 PCR units).

#### -b value

### --bitrate value

Verify the PCR's according to this transport bitrate. By default, use the input bitrate as reported by the input device.

-i

## --input-synchronous

Verify the PCR's according to each packet input time-stamp. See the documentation of *tsp* for a description of input time-stamps.

This method is meaningful only with real-time input sources or if the input source can recreate reliable input timestamps (M2TS files for instance). With this option, the bitrate is ignored.

## -j value

#### --jitter-max value

Maximum allowed jitter. PCR's with a higher jitter are reported, others are ignored.

If --absolute, the specified value is in PCR units, otherwise it is in micro-seconds.

The default is 27,000 PCR units or 1,000 micro-seconds. Use --jitter 0 to check that all PCR have their exact expected value.

## --jitter-unreal value

Maximum realistic jitter. Any jitter above this value is unrealistic and ignored (probably because of a PCR leap).

If --absolute, the specified value is in PCR units, otherwise it is in micro-seconds.

The default is 270,000,000 PCR units (10 seconds).

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

PID filter: select packets with these PID values. Several -p or --pid options may be specified. Without -p or --pid option, PCR's from all PID's are used.

-t

#### --time-stamp

Display time of each event.

#### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.



## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 221 / 395



# **#pes**

## **Analyze PES Packets**

This plugin detects and analyzes PES packets in all selected PID's (all PID's by default). Note that, without any option, this plugin does not report anything, you need to specify what you want to analyze.

## **Usage**

```
tsp -P pes [options]
```

#### **Options**

-a

#### --audio-attributes

Display audio attributes such as audio layer, stereo mode or sampling rate in MPEG-1 audio (ISO/IEC 11172-3), MPEG-2 audio (ISO/IEC 13818-3), AC-3 and Enhanced-AC-3 (ETSI TS 102 366).

#### --avc-access-unit

Dump all AVC (ISO/IEC 14496-10, ITU H.264) access units (aka "NALunits").

-b

#### --binary

Include binary dump in addition to hexadecimal.

-h

#### --header

Dump all PES packets header.

-x value

#### --max-dump-count value

Specify the maximum number of times data dump occurs with options --trace-packets, --header, --payload, --start-code, --avc-access-unit. Default: unlimited.

-m value

#### --max-dump-size value

Specify the maximum dump size for options --header, --payload, --start-code, --avc-access-unit. By default, the complete data section (payload, access unit, etc.) is displayed.

## --max-payload-size value

Display PES packets with no payload or with a payload the size (in bytes) of which is not greater than the specified value.

## --min-payload-size value

Display PES packets with a payload the size (in bytes) of which is equal to or greater than the specified value.

## --nal-unit-type value

AVC NAL unit filter: with --avc-access-unit, select access units with this type (default: all access units). Several --nal-unit-type options may be specified.

#### --negate-nal-unit-type

Negate the AVC NAL unit filter: specified access units are excluded.

\_ n

## --negate-pid

Negate the PID filter: specified PID's are excluded.

## --nibble

Same as --binary but add separator between 4-bit nibbles.



## -o filename

#### --output-file filename

Specify the output file for the report (default: standard output).

#### --packet-index

Display the index of the first and last TS packet of each displayed PES packet.

#### **-p** pid1[-pid2]

## **--pid** *pid1*[-*pid2*]

PID filter: select packets with this PID value (default: all PID's containing PES packets). Several -p or --pid options may be specified.

#### --payload

Dump all PES packets payload.

#### --sei-avc

Dump all SEI (Supplemental Enhancement Information) in AVC / H.264 access units.

# --sei-type value

SEI type filter: with --sei-avc, select SEI access units with this type (default: all SEI access units).

Several --sei-type options may be specified.

#### -s

#### --start-code

Dump all start codes in PES packet payload.

#### -t

## --trace-packets

Trace all PES packets (display a one-line description per packet).

## --uuid-sei value

AVC SEI filter: with --sei-avc, only select *user data unregistered* SEI access units with the specified UUID value. By default, with --sei-avc, all SEI are displayed.

Several -uuid-sei options may be specified.

The UUID value must be 16 bytes long. It must be either an ASCII string of exactly 16 characters or a hexadecimal value representing 16 bytes.

#### -v

## --video-attributes

Display video attributes such as frame size, frame rate or profile in MPEG-1 video (ISO/IEC 11172-2), MPEG-2 video (ISO/IEC 13818-2) and AVC (ISO/IEC 14496-10, ITU H.264).

#### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 223 / 395



# **#play** (output)

## Play Output on a Media Player

This output plugin sends TS packets to a supported media player. It is typically used when one service was isolated on the transport stream and the resulting audio/video must be monitored.

The *play* plugin attempts to locate a media player application which can process MPEG-2 transport streams on its standard input. If one is found in the system, the plugin creates a process executing the media player (adding the required options if necessary) and sends the output stream to this process using a pipe.

This plugin is consequently is easier alternative to the *fork* plugin. The same operation could be achieved using the *fork* plugin but it requires to specify the complete media player command line with options.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

#### **Usage**

```
tsp -0 play [options]
```

## **Options**

-n

#### --mplayer

Linux only: Use *mplayer* for rendering. The default is to look for *vlc*, *mplayer* and *xine*, in this order, and use the first available one.

-x --xine

Linux only: Use *xine* for rendering. The default is to look for *vlc*, *mplayer* and *xine*, in this order, and use the first available one.

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

--help

Display plugin help text.

#### Supported media players

- Linux: Look for VLC, mplayer and xine. Use the PATH environment variable to locate the applications.
- macOS: Same a Linux but also search into /usr/local/bin and /Applications.
- Windows: Look for VLC using the Path environment variable and various informations that are normally filled in the registry by the VLC installation procedure. See [37] for downloading and installing VLC Media Player.

To use another media player or with specific options, use the *fork* plugin instead:

```
tsp ... -P fork [options] "media player command line" -O drop
```



# **#pmt**

#### Perform Various Transformations on a PMT

This plugin performs various transformations on a PMT.

The PMT can be specified by PID, by service id or by service name.

## **Usage**

tsp -P pmt [options]

## **Options**

#### --ac3-atsc2dvb

Change the description of AC-3 (a.k.a. DD, Dolby Digital) audio streams from ATSC to DVB method. In details, this means that all components with stream\_type 0x81 are modified with stream\_type 0x06 (*PES private data*) and an *AC-3\_descriptor* is added on this component (if none was already there).

## --add-ca-descriptor casid/pid[/private-data]

Add a *CA\_descriptor* at program-level in the PMT with the specified CA System Id and ECM PID. The optional private data must be a suite of hexadecimal digits. Several -add-ca-descriptor options may be specified to add several descriptors.

#### -a pid/type

## --add-pid pid/type

Add the specified PID / stream-type component in the PMT. Both *PID* and *type* must be integer values, either decimal or hexadecimal. Several --add-pid options may be specified to add several components.

#### --add-pid-registration pid/id

Add a registration\_descriptor in the descriptor list of the specified PID in the PMT.

The value is the format\_identifier in the registration\_descriptor, e.g. 0x43554549 for "CUEI".

## --add-registration id

Add a registration\_descriptor in the program-level descriptor list in the PMT.

The value is the format\_identifier in the registration\_descriptor, e.g. 0x43554549 for "CUEI".

#### --add-stream-identifier

Add a *stream\_identifier\_descriptor* on all components. The *component\_tag* are uniquely allocated inside the service. Existing *stream\_identifier\_descriptors* are left unmodified.

## --audio-language language-code[:audio-type[:location]]

Specifies the language for an audio stream in the PMT. Several options can be specified to set the languages of several audio streams.

The *language-code* is a 3-character string. The *audio-type* is optional, its default value is zero. The *location* indicates how to locate the audio stream. Its format is either "Pn" or "An". In the first case, "n" designates a PID value and in the second case the audio stream number inside the PMT, starting with 1. The default location is "A1", ie. the first audio stream inside the PMT.

#### --bitrate value

Specifies the bitrate in bits / second of the PID containing the PMT if a new one is created.

## The default is 3,000 b/s.

--cleanup-private-descriptors

Remove all private descriptors without preceding *private\_data\_specifier\_descriptor*.

#### - c

#### --create

Create a new empty PMT if none was received after one second.

Version 3.22-1926 225 / 395



This is equivalent to --create-after 1000.

#### --create-after milliseconds

Create a new empty PMT if none was received after the specified number of milliseconds. If an actual PMT is received later, it will be used as the base for transformations instead of the empty one.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --eac3-atsc2dvb

Change the description of Enhanced-AC-3 (a.k.a. AC-3+, DD+, Dolby Digital+) audio streams from ATSC to DVB method. In details, this means that all components with stream\_type 0x87 are modified with stream\_type 0x06 (*PES private data*) and an *enhanced\_AC-3\_descriptor* is added on this component (if none was already there).

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --increment-version

Increment the version number of the PMT.

#### --inter-packet value

When a new PMT is created and --bitrate is not present, this option specifies the packet interval for the PMT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.

### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### -m old-pid/new-pid

#### --move-pid old-pid/new-pid

Change the PID value of a component in the PMT. Several --move-pid options may be specified to move several components.

#### -i value

#### --new-service-id value

Change the service id in the PMT.

## --pds value

With option --remove-descriptor, specify the private data specifier which applies to the descriptor tag values above 0x80.

## -p value

#### --pmt-pid value

Specify the PID carrying the PMT to modify. All PMT's in this PID will be modified. Options --pmt-pid and --service are mutually exclusive. If neither are specified, the first service in the PAT is used.

#### --pcr-pid value

Change the PCR PID value in the PMT.

## --remove-descriptor value

Remove from the PMT all descriptors with the specified tag. Several --remove-descriptor options may be specified to remove several types of descriptors. See also option --pds.



#### -r pid1/-pid2/

#### --remove-pid pid1/-pid2/

Remove the component with the specified PID's from the PMT. Several --remove-pid options may be specified to remove several components.

### --remove-stream-type value[-value]

Remove all components with a stream type matching the specified values. Several --remove-stream-type options may be specified.

#### -s name-or-id

#### --service name-or-id

Specify the service the PMT of which must be modified. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. Options --pmt-pid and --service are mutually exclusive. If neither are specified, the first service in the PAT is used.

## --set-cue-type pid/type

In the component with the specified PID, add an SCTE 35 *cue\_identifier\_descriptor* with the specified *cue\_stream\_type*. Several --set-cue-type options may be specified.

## --set-data-broadcast-id pid/id[/selector]

In the component with the specified PID, add a <code>data\_broadcast\_id\_descriptor</code> with the specified <code>data\_broadcast\_id</code>. The optional selector is a suite of hexadecimal characters representing the content of the selector bytes. Several <code>--set-data-broadcast-id</code> options may be specified.

#### --set-stream-identifier pid/id

In the component with the specified PID, add a *stream\_identifier\_descriptor* with the specified id as *component\_tag*. Several --set-stream-identifier options may be specified.

#### -v value

### --new-version value

Specify a new value for the version of the PAT.

#### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 227 / 395





## **Collect PSI Structure Information**

This plugin extracts all PSI tables (PAT, CAT, PMT, NIT, BAT, SDT) from a transport stream. It is equivalent to the *tspsi* utility. Actually, the following two commands produce the same result:

```
tspsi options filename
tsp -I file filename -P psi options -O drop
```

## **Usage**

```
tsp -P psi [options]
```

# **Options**

The plugin accepts exactly the same options as the *tspsi* utility.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **#**psimerge

## Merge PSI/SI from mixed streams

This plugin assumes that the PSI/SI for two independent streams are multiplexed in the same transport streams but the packets from each original stream are independently labelled. This plugin merges the PSI/SI from these two streams into one.

#### **Usage**

```
tsp -P psimerge [options]
```

## **Options**

#### --main-label value

Specify the label which is set on packets from the *main* stream. The maximum label value is 31. By default, the main stream is made of packets without label.

At least one of --main-label and --merge-label must be specified.

#### --merge-label value

Specify the label which is set on packets from the *merge* stream. The maximum label value is 31. By default, the merge stream is made of packets without label.

At least one of --main-label and --merge-label must be specified.

#### --no-bat

Do not merge the BAT.

#### --no-cat

Do not merge the CAT.

#### --no-eit

Do not merge the EIT's.

## --no-nit

Do not merge the NIT Actual.

#### --no-pat

Do not merge the PAT.

#### --no-sdt

Do not merge the SDT Actual.

## --time-from-merge

Use the TDT/TOT time reference from the merge stream.

By default, use the TDT/TOT time reference from the *main* stream.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 229 / 395



# **reduce**

## **Reduce the Bitrate by Removing Stuffing Packets**

This plugin reduces the bitrate of the transport stream by removing stuffing packets.

## **Usage**

tsp -P reduce [options] rempkt inpkt

#### **Parameters**

The parameters specify that *rempkt* TS packets must be automatically removed after every *inpkt* input TS packets in the transport stream. Only stuffing packets can be removed. Both *rempkt* and *inpkt* must be non-zero integer values.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **#regulate**

# Regulate Packets Flow According to a Bitrate or PCR

This plugin regulates the TS packets flow according to a specified bitrate or based on the Program Clock Reference from the transport stream.

It is useful to play a non-regulated input (such as a TS file) to a non-regulated output (such as IP multicast). Without this plugin, in this example, the IP packets will be sent as fast as the TS packets are read from the file, that is to say at a very much higher bitrate than expected. When inserted between the input and the output plugins, the *regulate* plugin regularly suspends the *tsp* process to slow down the output.

Note that this plugin can only slow down the stream but not accelerate it (if the input is not fast enough, there is nothing that a plugin can do!)

By default, the plugin uses a bitrate value. The plugin suspends the execution at regular intervals to ensure that its output does not exceed the target bitrate. A fixed bitrate can be specified. Otherwise, the plugin uses the bitrate information coming from the previous plugins in the chain. In the latter case, the bitrate can be variable.

When the option --pcr-synchronous is specified, the plugin does not use any bitrate information. It regulates the flow to be synchronous with the Program Clock Reference (PCR) in the transport stream.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

## Usage

tsp -P regulate [options]

## **Options**

- -b value
- --bitrate value

Specify the bitrate in b/s. By default, use the input bitrate, typically resulting from the PCR analysis of the input stream. Note that this default is the bitrate which is presented by tsp at the input of the *regulate* plugin. This is not necessarily the bitrate at the input plugin if another plugin (such as *pcrbitrate*) has altered the bitrate between the input plugin and *regulate*.

- -p value
- --packet-burst value

Number of packets to burst at a time. Does not modify the average output bitrate but influence smoothing and CPU load. The default is 16 packets.

It is inefficient, and most of the time impossible, to suspend a process too often and for a too short time. To regulate a stream at 38 Mb/s, for instance, the process must be suspended 40 micro-seconds between each TS packets. This is not possible in practice on most Linux or Windows kernels with the default configuration. If the packet burst is set to 64, the wait time is 2.5 milli-seconds, which becomes feasible.

## --pcr-synchronous

Regulate the flow based on the Program Clock Reference from the transport stream. By default, use a bitrate, not PCR's.

#### --pid-pcr value

With --pcr-synchronous, specify the reference PID for the Program Clock Reference. By default, use the first PID containing PCR's.

#### --wait-min value

With --pcr-synchronous, specify the minimum wait time in milli-seconds.

The default is 50 ms.

Version 3.22-1926 231 / 395



# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **#**remap

## **Generic PID Remapping**

This plugin modifies the PID value in selected packets. By default, the PSI are modified accordingly to preserve the consistency of the transport stream.

## **Usage**

```
tsp -P remap [options] [pid[-pid]=newpid ...]
```

## **Specifying PID remapping**

Each remapping is specified as "pid=newpid" or "pid1-pid2=newpid". All PID's can be specified as decimal or hexadecimal values. More than one PID remapping can be specified.

In the first form, the PID pid is remapped to newpid.

In the latter form, all PID's within the range *pid1* to *pid2* (inclusive) are respectively remapped to *newpid*, *newpid*+1, etc. (this behaviour is changed using option --single).

The null PID 0x1FFF cannot be remapped.

## **Options**

```
-n
```

#### --no-psi

Do not modify the PSI.

By default, the PAT, CAT and PMT's are modified so that previous references to the remapped PID's will point to the new PID values.

```
--reset-label label1[-label2]
```

Clear the specified labels on the remapped packets.

Several --reset-label options may be specified.

```
--set-label label1[-label2]
```

Set the specified labels on the remapped packets.

Several --set-label options may be specified.

#### -s

## --single

When a remapping is in the form "pid1-pid2=newpid", remap all input PID's within the range pid1 to pid2 to the same newpid value, not newpid, newpid+1, etc.

This option forces -- unchecked since distinct PID's are remapped to the same one.

#### -u

#### --unchecked

Do not perform any consistency checking while remapping PID's:

- o Remapping to or from a predefined PID is accepted.
- o Remapping two PID's to the same PID or to a PID which is already present in the input is accepted.

Note that this option should be used with care since the resulting stream can be illegal or inconsistent.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

Version 3.22-1926 233 / 395



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **#**rmorphan

## Remove unreferenced PID's

This plugin removes unreferenced (aka "orphan") PID's from the transport stream. The plugin analyses the complete TS structure, starting from the PAT and the CAT. Any packet which neither belongs to a predefined PID's nor to a referenced PID in the TS structure is removed.

## Usage

```
tsp -P rmorphan [options]
```

## **Options**

-s

## --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 235 / 395



# **#**rmsplice

## Remove ads insertions using SCTE 35 splice information

This plugin removes part of a program (typically ads insertions) based on SCTE 35 splice cueing information.

According to the SCTE 35 standard (see [18]), a dedicated stream is declared in the PMT of a service, carrying private tables. These private tables describe upcoming *splice points*. They define specific points in the program where the audio and video can be "cut" and replaced by some alternate content, typically local ads sequences. *Splice out* points define places where the main program can be left to switch to local content. *Splice in* points define places where the content should return back to the original program.

The plugin *rmsplice* uses the specific SCTE 35 splice information stream to locate what could be uninteresting sequences of ads and simply removes the program content, audio, video, subtitles, during these sequences. The content of the program is not replaced, as originally intended by the SCTE 35 standard, it is simply removed. Consequently, using this plugin makes sense on SPTS only (see the plugin *zap* for instance).

The removal is based on Presentation Time Stamps (PTS) in the various content PID's of the program. The PTS of the starting (*splice out*) and ending (*splice in*) points are defined be the SCTE 35 commands in the dedicated stream. Currently, *rmsplice* removes entire PES packets and does not dig into the video encoding.

If the original video encoding is carefully performed to resist to identified splice points, the transition should be smooth. However, it has been observed transient glitches and macro blocks in the resulting stream after removing ads sequences, even though the PTS of the splice points exactly match the signalled PTS values. VLC reports one "unref short failure" at that point. It is currently unknown if this is due to a non-splice-resistant video encoding or if the cutting method of *rmsplice* is too harsh.

### **Usage**

```
tsp -P rmsplice [options] [service]
```

## **Parameter**

The optional parameter specifies the service to modify.

If this is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If the input TS does not contain an SDT, use a service id.

When the parameter is omitted, the first service which is found in the PAT is selected.

## **Options**

-a

#### --adjust-time

Adjust all time stamps (PCR, OPCR, PTS and DTS) after removing splice-out / splice-in sequences. This can be necessary to improve the video transition.

- **c** 

## --continue

Continue stream processing even if no "splice information stream" is found for the service. Without this information stream, ads cannot be located and consequently not removed. By default, *tsp* aborts when the splice information stream is not found in the PMT of the service.

## --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.



-n

#### --dry-run

Perform a dry run, report what operations would be performed. Use with --verbose.

### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

## --event-id pid1[-pid2]

Only remove splices associated with the specified event ID's.

Several --event-id options may be specified.

**-** £

## --fix-cc

Fix continuity counters after removing splice-out / splice-in sequences.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

-s

### --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 237 / 395



# **\*\***scrambler

#### **DVB Scrambler**

This plugin is a DVB scrambler, either using a static control word or using an external ECMG. In the latter case, the plugin generates the control words, schedules crypto-periods and inserts ECM's.

The control words are generated using the default pseudo-random number generator of the operating system with additional security improvements. Although these values are reasonably random, there is no security commitment and this scrambler should be used for test purpose only, not for production.

When inserting ECM's, the plugin uses the *delay\_start* parameter, as returned by the ECMG, to synchronize the start of the crypto-period with the first insertion of an ECM. Both positive and negative *delay\_start* values are supported.

## **Usage**

tsp -P scrambler [options] [service]

## **Parameter**

The optional parameter specifies the service to scramble. If no service is specified, a list of PID's to scramble must be provided using --pid options. When specific PID's are provided, fixed control words must be specified as well.

If no fixed CW is specified, a random CW is generated for each crypto-period and ECM's containing the current and next CW's are created and inserted in the stream. ECM's can be created only when a service is specified.

If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If the input TS does not contain an SDT, use service ids only.

## **General options**

- -b value
- --bitrate-ecm value

Specifies the bitrate for ECM PID's in bits / second. The default is 30,000 b/s.

- -d seconds
- --cp-duration seconds

Specifies the crypto-period duration in seconds (default: 10 seconds).

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

## --ignore-scrambled

Ignore packets which are already scrambled. Since these packets are likely scrambled with a different control word, descrambling will not be possible the usual way.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### --no-audio

Do not scramble audio components in the selected service. By default, all audio components are scrambled.



#### --no-video

Do not scramble video components in the selected service. By default, all video components are scrambled.

#### --partial-scrambling count

Do not scramble all packets, only one packet every *count* packets. The default value is 1, meaning that all packets are scrambled. Specifying higher values is a way to reduce the scrambling CPU load while keeping the service "mostly" scrambled.

## **-p** *pid1*[-*pid2*]

## **--pid** *pid1*[-*pid2*]

Scramble packets with these PID values. Several -p or --pid options may be specified. By default, scramble the specified service.

#### --pid-ecm value

Specifies the new ECM PID for the service. By defaut, use the first unused PID immediately following the PMT PID. Using the default, there is a risk to later discover that this PID is already used. In that case, specify --pid-ecm with a notoriously unused PID value.

#### --subtitles

Scramble subtitles components in the selected service. By default, the subtitles components are not scrambled.

## --synchronous

Specify to synchronously generate the ECM's.

In real-time mode, the processing of packets continues in parallel while ECM's are generated in the ECMG. Use this option to force the stream processing to wait for ECM's.

In offline mode, this option is always on. This is usually the right thing to do. Otherwise, if an ECM takes too long to be generated, the stream processing may reach the first insertion point of the ECM before it is available.

## **DVB SimulCrypt options**

#### -a value

## --access-criteria value

Specifies the access criteria for the service as sent to the ECMG. The value must be a suite of hexadecimal digits.

## --channel-id value

Specifies the DVB SimulCrypt *ECM\_channel\_id* for the ECMG (default: 1).

#### --component-level

Add *CA\_descriptors* at component level in the PMT. By default, one *CA\_descriptor* is added at program level.

#### -i value

## --ecm-id value

Specifies the DVB SimulCrypt *ECM\_id* for the ECMG (default: 1).

## -e host:port

#### --ecmg host:port

Specify an ECM Generator host name (or IP address) and TCP port. Without ECMG, a fixed control word must be specified using --control-word.

## -v value

## --ecmg-scs-version value

Specifies the version of the ECMG <=> SCS DVB SimulCrypt protocol. Valid values are 2 and 3. The default is 2.

## --log-data[=level]

Same as --log-protocol but applies to CW\_provision and ECM\_response messages only.

Version 3.22-1926 239 / 395



To debug the session management without being flooded by data messages, use --log-protocol=info --log-data=debug.

## --log-protocol[=level]

Log all ECMG  $\Leftrightarrow$  SCS protocol messages using the specified level. If the option is not present, the messages are logged at debug level only. If the option is present without value, the messages are logged at info level. A level can be a numerical debug level or any of the following: fatal, severe, error, warning, info, verbose, debug.

#### --private-data value

Specifies the private data to insert in the *CA\_descriptor* in the PMT. The value must be a suite of hexadecimal digits.

#### --stream-id value

Specifies the DVB SimulCrypt *ECM\_stream\_id* for the ECMG (default: 1).

#### -s value

#### --super-cas-id value

Specify the DVB SimulCrypt Super\_CAS\_Id. This is required when --ecmg is specified.

## Transport stream scrambling options

#### --aes-cbc

Use AES-CBC scrambling instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte. The residue is left clear. Specify a fixed initialization vector using the --iv option.

Note that this is a non-standard TS scrambling mode. The only standard AES-based scrambling modes are ATIS-IDSA and DVB-CISSA (DVB-CISSA is the same as AES-CBC with a DVB-defined IV).

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of AES-CBC scrambling. Since there is no standard value for AES-CBC, the user-defined *scrambling\_mode* value 0xF0 is used.

#### --aes-ctr

Use AES-CTR scrambling instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte. The residue is included in the scrambling. Specify a fixed initialization vector using the --iv option. See the option --ctr-counter-bits for the size of the counter part in the IV.

Note that this is a non-standard TS scrambling mode. The only standard AES-based scrambling modes are ATIS-IDSA and DVB-CISSA.

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of AES-CTR scrambling. Since there is no standard value for AES-CTR, the user-defined *scrambling\_mode* value 0xF1 is used.

#### --atis-idsa

Use ATIS-IDSA scrambling (ATIS-0800006) instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte.

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of ATIS-IDSA scrambling.

#### --ctr-counter-bits value

With --aes-ctr, specifies the size in bits of the counter part.

In the initialization vector, the fixed nounce part uses the first 128 - N bits and the counter part uses the last N bits.

By default, the counter part uses the second half of the IV (64 bits).

#### -c value

## --cw value

Specifies a fixed and constant control word (no crypto-period scheduling, no ECM insertion). The value must be a string of 16 hexadecimal digits (32 digits with --atis-idsa or --dvb-cissa).



When using this option, no Conditional Access System is used, meaning that no ECM or ECM PID is generated, no ECMG is allowed, all DVB SimulCrypt parameters are ignored and no CA\_descriptor is inserted in the PMT.

#### --dvb-cissa

Use DVB-CISSA descrambling (see [15]) instead of DVB-CSA2 (the default).

The control words are 16-byte long instead of 8-byte.

A *scrambling\_descriptor* is automatically added to the PMT of the service to indicate the use of DVB-CISSA scrambling.

#### --dvb-csa2

Use DVB-CSA2 scrambling. This is the default.

## -f name

#### --cw-file name

Specifies a text file containing the list of control words to apply. Each line of the file must contain exactly 16 hexadecimal digits (32 digits with --atis-idsa or --dvb-cissa).

The next control word is used each time a new crypto-period is started. At the end of the list of control words, restart with the first one.

As with option --cw, no Conditional Access System is used, meaning that no ECM or ECM PID is generated, no ECMG is allowed, all DVB SimulCrypt parameters are ignored and no CA\_descriptor is inserted in the PMT.

#### --iv value

With --aes-cbc or --aes-ctr, specifies a fixed initialization vector for all TS packets.

The value must be a string of 32 hexadecimal digits. The default IV is all zeroes.

#### -n

#### --no-entropy-reduction

With DVB-CSA2, do not perform control word entropy reduction to 48 bits, keep full 64-bit control words. This option is ignored with other scrambling modes.

## --output-cw-file name

Specifies a text file to create with all control words. Each line of the file will contain a control word with 16 or 32 hexadecimal digits, depending on the scrambling algorithm. Each time a new control word is used to scramble packets, it is logged in the file.

This option is specifically useful when the control words are dynamically and randomly generated for insertion into ECM's. The created file can be used later to perform a direct descrambling test using the option--cw-file of the plugin *descrambler*.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 241 / 395



## sdt

#### Perform Various Transformations on an SDT

This plugin performs various transformations on an SDT, either the SDT Actual or some specific SDT Other. The other SDT's, if present, are left unchanged.

#### **Usage**

```
tsp -P sdt [options]
```

#### **Options**

#### --bitrate value

Specifies the bitrate in bits / second of the PID containing the SDT if a new one is created. The default is 3,000 b/s.

## --cleanup-private-descriptors

Remove all private descriptors without preceding *private\_data\_specifier\_descriptor*.

#### - c

#### --create

Create a new empty SDT if none was received after one second.

This is equivalent to --create-after 1000.

#### --create-after milliseconds

Create a new empty SDT if none was received after the specified number of milliseconds. If an actual SDT is received later, it will be used as the base for transformations instead of the empty one

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --eit-pf value

Specify a new *EIT\_present\_following\_flag* value (0 or 1) for the added or modified service. For new services, the default is 0.

#### --eit-schedule value

Specify a new *EIT\_schedule\_flag* value (0 or 1) for the added or modified service. For new services, the default is 0.

## --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### -f value

## --free-ca-mode value

Specify a new *free\_CA\_mode* value (0 or 1) for the added or modified service. For new services, the default is 0.

#### -i

## --increment-version

Increment the version number of the SDT.

## --inter-packet value

When a new SDT is created and --bitrate is not present, this option specifies the packet interval for the SDT PID, that is to say the number of TS packets in the transport between two packets of the PID.

Use instead of --bitrate if the global bitrate of the TS cannot be determined.



#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### -n value

#### --name value

Specify a new service name for the added or modified service. For new services, the default is an empty string.

#### -v value

#### --new-version value

Specify a new value for the version of the SDT.

### --original-network-id id

Modify the original network id in the SDT with the specified value.

#### -**o** id

#### --other id

Modify the SDT Other with the specified TS id. By default, modify the SDT Actual.

#### -p value

## --provider value

Specify a new provider name for the added or modified service. For new services, the default is an empty string.

#### --remove-service sid

Remove the specified service-id from the SDT. Several --remove-service options may be specified to remove several services.

#### -r value

## --running-status value

Specify a new *running\_status* value (0 to 7) for the added or modified service. For new services, the default is 4 ("*running*").

#### -s value

#### --service-id value

Add a new service or modify the existing service with the specified service-id.

#### --ts-id id

Modify the transport stream id in the SDT with the specified value.

#### -t value

## --type value

Specify a new service type for the added or modified service. For new services, the default is **0x01** ("digital television service").

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 243 / 395



# sections

## Remove or Merge Sections from Various PID's

This plugin extracts sections from one or more PID's and merges them inside an output PID.

Various filtering options can be used to selectively remove sections.

## **Usage**

```
tsp -P sections [options]
```

## **Options**

```
-e id1[-id2]
```

```
--etid-remove id1[-id2]
```

Remove all sections with the corresponding *extended table id* values. The value is a combination of the table id and the table id extension.

For example, the option -e 0x4A1234 removes all BAT sections (table id 0x4A) for bouquet id 0x1234 (table id extension).

Several options --etid-remove can be specified.

#### -n

## --null-pid-reuse

With this option, null packets can be replaced by packets for the output PID.

By default, only packets from input PID's are replaced by output packets. This option may need to be used when --stuffing is specified and the input PID's contained packed sections. In that case, the output payload can be larger than the input and additional packets must be used.

#### -o value

#### --output-pid value

Specify the output PID. By default, the first input PID on the command line is used as output PID. If the output PID is different from all input PID's and this output PID already exists in the

If the output PID is different from all input PID's and this output PID already exists in the transport stream, an error is generated.

```
-p pid1[-pid2]
--pid pid1[-pid2]
```

Specify input PID's. More than one input PID can be specified. All sections from all input PID's are merged into the output PID. At least one input PID must be specified.

#### - S

## --stuffing

Insert stuffing at end of each section, up to the next TS packet boundary. By default, sections are packed and start in the middle of a TS packet, after the previous section. Note, however, that section headers are never scattered over a packet boundary.

```
-t id1[-id2]
--tid-remove id1[-id2]
```

Remove all sections with the corresponding table ids.

Several options --tid-remove can be specified.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

```
--only-label label1[-label2]
```

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.



Several --only-label options may be specified.

Version 3.22-1926 245 / 395



# **sifilter**

## Extract PSI/SI PID's

This plugin filters PID's containing the specified PSI/SI. Other PID's are removed.

Extracting PSI/SI on predefined PID's (such as PAT or SDT) can also be performed using the plugin filter --pid. For these types of PSI/SI, the plugin sifilter is simply more user-friendly (sifilter --sdt instead of filter --pid 0x0011). But the plugin sifilter can also detect PSI/SI on non-predefined PID's (such as PMT, ECM or EMM). It can also filter CA-related SI according to the CA System Id or CA Operator (a vendor-dependent concept).

If you want to extract the PMT or ECM for one particular service, use the plugin zap before sifilter in the plugin chain.

```
Usage
   tsp -P sifilter [options]
Options
   --bat
       Extract PID 0x0011 (SDT/BAT). Same as --sdt.
   --cat
       Extract PID 0x0001 (CAT).
   --eit
       Extract PID 0x0012 (EIT).
   --nit
       Extract PID 0x0010 (NIT).
   --pat
       Extract PID 0x0000 (PAT).
   --pmt
       Extract all PMT PID's.
   --rst
       Extract PID 0x0013 (RST).
   --sdt
       Extract PID 0x0011 (SDT/BAT). Same as --bat.
   -s
   --stuffing
       Replace excluded packets with stuffing (null packets) instead of removing them. Useful to
       preserve bitrate.
   --tdt
       Extract PID 0x0014 (TDT/TOT). Same as --tot.
   --tot
       Extract PID 0x0014 (TDT/TOT). Same as --tdt.
   --tsdt
       Extract PID 0x0002 (TSDT).
```



## CAS selection options

#### --cas value

With options --ecm or --emm, select only ECM's or EMM's for the specified CA system id value. Equivalent to --min-cas value --max-cas value.

#### --conax

Equivalent to --min-cas 0x0B00 --max-cas 0x0BFF.

#### --ecm

Extract PID's containing ECM.

#### --emm

Extract PID's containing EMM.

#### --irdeto

Equivalent to --min-cas 0x0600 --max-cas 0x06FF.

#### --max-cas value

With options --ecm or --emm, select only ECM's or EMM's for the CA system id values in the range --min-cas to --max-cas.

#### --mediaguard

Equivalent to --min-cas 0x0100 --max-cas 0x01FF.

#### --min-cas value

With options --ecm or --emm, select only ECM's or EMM's for the CA system id values in the range --min-cas to --max-cas.

#### --nagravision

Equivalent to --min-cas 0x1800 --max-cas 0x18FF.

## --nds

Equivalent to --min-cas 0x0900 --max-cas 0x09FF.

## --operator value

When a CAS is specified, select only ECM's or EMM's for the specified CAS operator. The "CAS operator" is a non-standard vendor-dependent concept and is recognized for some CAS only.

#### --safeaccess

Equivalent to --cas 0x4ADC.

#### --viaccess

Equivalent to --min-cas 0x0500 --max-cas 0x05FF.

#### --widevine

Equivalent to --min-cas 0x4AD4 --max-cas 0x4AD5.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

#### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 247 / 395



# **skip**

## Skip Leading Packets in a TS

The plugin skips leading TS packets of a stream. The specified number of initial TS packets are dropped and not transmitted to the next plugin in the chain. After that, all packets are transparently passed.

## **Usage**

```
tsp -P skip [options] count
```

#### **Parameter**

Number of leading TS packets to skip.

# **Options**

-s

## --stuffing

Replace excluded leading packets with stuffing (null packets) instead of removing them.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **slice**

## **Pass or Drop Packets Based on Packet Numbers**

This plugin passes or drops packets based on packet numbers or relative transport stream time. It can be used to extract selected portions of a TS and group them into one single output.

#### **Usage**

```
tsp -P slice [options]
```

#### **Options**

- -d value
- --drop value

All packets are dropped after the specified packet number. Several --drop options may be specified.

-i

#### --ignore-pcr

When --seconds or --milli-seconds is used, do not use PCR's to compute time values. Only rely on bitrate as determined by previous plugins in the chain.

-m

#### --milli-seconds

With options --drop, --null, --pass and --stop, interpret the integer values as milli-seconds from the beginning, not as packet numbers. Time is measured based on bitrate and packet count, not on real time.

-n value

#### --null value

All packets are replaced by null packets after the specified packet number. Several --null options may be specified.

-p value

## --pass value

All packets are passed unmodified after the specified packet number. Several --pass options may be specified. This is the default for the initial packets.

#### --seconds

With options --drop, --null, --pass and --stop, interpret the integer values as seconds from the beginning, not as packet numbers. Time is measured based on bitrate and packet count, not on real time.

-s value

#### --stop value

Packet transmission stops after the specified packet number and  $\emph{tsp}$  terminates.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 249 / 395



# **spliceinject**

## Inject SCTE 35 splice commands in a transport stream

This plugin injects splice commands as *splice information sections*, as defined by the SCTE 35 standard [18]. All forms of splice information sections can be injected. The sections shall be provided by some external equipment, in real time. The format of the sections can be binary or XML (see section 2.2). All sections or tables shall be *splice information sections* (table id 0xFC).

## **Injection principles**

The whole point about splice information is synchronization with video. There are roughly two classes of splice events:

- Non-immediate splice\_insert() and time\_signal() commands. These commands contain a specific PTS value for the event. This PTS refers to a time stamp in the video and audio PID's of the service.
- Everything else.

Any splice command in the "everything else" category is injected as soon as possible after reception.

A non-immediate *splice\_insert()* or *time\_signal()* command is injected a specific number of times (2 by default) within a short period of time (2 seconds by default) preceding the specified PTS timestamp in the video stream.

When such a command is received in the plugin, the PTS of the event is compared with the current (or latest) PTS in the service. If the command is late and the PTS of the event is already in the past, the command is dropped. Otherwise, the command is placed in a waiting queue until the event time minus some predefined duration (see option --start-delay). At this time, the command is sent for the first time. It is later re-sent zero or more times. When the event time occurs, the command is no longer needed and is dropped.

## **Providing splice information tables**

There are two possible mechanisms to provide the sections: files or UDP. The two options may be used simultaneously.

Files shall be specified as one single specification with optional wildcards. Example:

```
tsp ... -P spliceinject --files '/path/to/dir/splice*.xml' ...
```

All files named *splice\*.xml* which are copied or updated into this directory are automatically loaded and injected. It is possible to automatically delete all files after being loaded.

UDP datagrams shall contain exactly one XML document or several binary sections. The XML document may contain several tables. The sections are injected upon reception. UDP reception is enabled by specifying a local port number. Example, listening on UDP port number 4444:

```
tsp ... -P spliceinject --udp 4444 ...
```

Using UDP usually provides a better reactivity than files. UDP messages are processed immediately after reception while files are detected on polling sequences only.

On a usability standpoint, remember that the *bash*<sup>6</sup> shell provides an easy way to send data or a file in an UDP message. So, sending a file though UDP is not more difficult than copying it to a directory. The following first command sends an XML file as one single UDP message on port 4444 to system 127.0.0.1 (the local host). The second command illustrates the file option.

```
cat splice_12.xml >/dev/udp/127.0.0.1/4444
cp splice_12.xml /path/to/dir
```

#### **Usage**

```
tsp -P spliceinject [options]
```

<sup>&</sup>lt;sup>6</sup> This is a feature of *bash*, not a Linux feature. It is available on all platforms, including macOS or Cygwin.



### **General options**

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --inject-count value

For non-immediate *splice\_insert()* and *time\_signal()* commands, specifies the number of times the same splice information section is injected. The default is 2. Other splice commands are injected once only.

#### --inject-interval value

For non-immediate <code>splice\_insert()</code> and <code>time\_signal()</code> commands, specifies the interval in milliseconds between two insertions of the same splice information section. The default is 800 ms

## --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### --pcr-pid value

Specifies the PID carrying the PCR reference clock. By default, use the PCR PID as declared in the PMT of the service.

#### -p value

## --pid value

Specifies the PID for the injection of the splice information tables. By default, the injection of splice commands is done in the component of the service with a stream type equal to 0x86 in the PMT, as specified by SCTE 35 standard.

#### --pts-pid value

Specifies the PID carrying PTS reference clock. By default, use the video PID as declared in the PMT of the service.

## --queue-size value

Specifies the maximum number of sections in the internal queue, sections which are received from files or UDP but not yet inserted into the TS. The default is 100.

#### -s value

## --service value

Specifies the service for the insertion of the splice information tables. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored.

If no service is specified, the options --pid and --pts-pid must be specified (--pcr-pid is optional).

#### --start-delay value

For non-immediate *splice\_insert()* and *time\_signal()* commands, start to insert the first section this number of milliseconds before the specified splice PTS value. The default is 2000 ms.

#### -W

## --wait-first-batch

When this option is specified, the start of the plugin is suspended until the first batch of splice commands is loaded and queued. Without this option, the input files or messages are loaded and queued asynchronously.

This option is typically useful when inserting splice commands from an XML file into a transport stream file. Since files are read much faster than the normal playout speed, it is possible that the

Version 3.22-1926 251 / 395



splice points are already passed in the transport stream processing when the XML file is loaded. With this option, we have the guarantee that the XML file is loaded before the transport stream processing starts.

On the other hand, this option should not be used on live transport streams. In that case, the transport stream processing must be allowed to start without splice information tables to inject. These tables may be sent much later.

## File input options

-d

#### --delete-files

Specifies that the files should be deleted after being loaded. By default, the files are left unmodified after being loaded. When a loaded file is modified later, it is reloaded and re-injected.

-f 'file-wildcard'

#### --files 'file-wildcard'

A file specification with optional wildcards indicating which files should be polled. When such a file is created or updated, it is loaded and its content is interpreted as binary or XML tables. All tables shall be splice information tables.

## --max-file-size value

Files larger than the specified size are ignored. This avoids loading large spurious files which could clutter memory. The default is 2048 bytes.

## --min-stable-delay value

A file size needs to be stable during that duration, in milliseconds, for the file to be reported as added or modified. This prevents too frequent poll notifications when a file is being written and his size modified at each poll. The default is 500 ms.

## --poll-interval value

Specifies the interval in milliseconds between two poll operations. The default is 500 ms.

## **UDP** input options

#### --buffer-size value

Specifies the UDP socket receive buffer size (socket option).

#### --no-reuse-port

Disable the reuse port socket option. Do not use unless completely necessary.

-r

## --reuse-port

Set the reuse port socket option. This is now enabled by default, the option is present for legacy only.

```
-u [address:]port
```

# --udp [address:]port

Specifies the local UDP port on which the plugin listens for incoming binary or XML splice information tables. When present, the optional address shall specify a local IP address or host name (by default, the plugin accepts connections on any local IP interface).

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# srt (input)

# Receive TS packets from Secure Reliable Transport (SRT)

This input plugin receives TS packets from Secure Reliable Transport (SRT).

The received UDP datagrams are analyzed and all TS packets are extracted. Optional extra data at the beginning of the datagram are discarded.

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

**Warning:** This plugin is not available on all platforms. It is provided only when *libsrt* is available during the compilation of TSDuck. Typically, this plugin is available on macOS, Fedora 31 onwards, Ubuntu 19.04 onwards.

**Acknowledgement:** This plugin is a contribution from Anthony Delannoy.

### **Input time-stamps**

The SRT source time value of each measage is used as input time-stamp by *tsp* for all TS packets in this message.

### **Usage**

```
tsp -I srt [options] [address:]port
```

### **Parameter**

The parameter [address:]port describes the destination for SRT packets to receive. The port part is mandatory and specifies the UDP port to listen on. The address part is optional. It specifies an IP multicast address to listen on. It can be also a host name that translates to a multicast address.

### **Common SRT options**

### --conn-timeout value

Connect timeout. SRT cannot connect for RTT > 1500 msec (2 handshake exchanges) with the default connect timeout of 3 seconds.

This option applies to the caller and rendezvous connection modes. The connect timeout is 10 times the value set for the rendezvous mode (which can be used as a workaround for this connection problem with earlier versions.

### --enforce-encryption

This option enforces that both connection parties have the same passphrase set (including empty, that is, with no encryption), or the connection is rejected.

#### --ffs value

Flight Flag Size (maximum number of bytes that can be sent without being acknowledged).

### --input-bw value

This option is effective only if SRTO\_MAXBW is set to 0 (relative).

It controls the maximum bandwidth together with SRTO\_OHEADBW option according to the formula: MAXBW = INPUTBW \* (100 + OHEADBW) / 100.

When this option is set to 0 (automatic) then the real INPUTBW value will be estimated from the rate of the input (cases when the application calls the *srt\_send* function) during transmission.

Recommended: set this option to the predicted bitrate of your live stream and keep default 25% value for SRTO\_OHEADBW.

### --iptos value

IPv4 Type of Service (see IP\_TOS option for IP) or IPv6 Traffic Class (see IPV6\_TCLASS of IPv6) depending on socket address family.

Applies to sender only. Sender: user configurable, default: 0xB8.

Version 3.22-1926 253 / 395



#### --ipttl value

IPv4 Time To Live (see IP\_TTL option for IP) or IPv6 unicast hops (see IPV6\_UNICAST\_HOPS for IPV6) depending on socket address family.

Applies to sender only, default: 64.

### --kmpreannounce value

The interval (defined in packets) between when a new Stream Encrypting Key (SEK) is sent and when switchover occurs. This value also applies to the subsequent interval between when switchover occurs and when the old SEK is decommissioned.

Note: The allowed range for this value is between 1 and half of the current value of SRTO\_KMREFRESHRATE. The minimum value should never be less than the flight window (i.e. the number of packets that have already left the sender but have not yet arrived at the receiver).

#### --kmrefreshrate value

The number of packets to be transmitted after which the Stream Encryption Key (SEK), used to encrypt packets, will be switched to the new one.

Note that the old and new keys live in parallel for a certain period of time (see SRTO\_KMPREANNOUNCE) before and after the switchover.

### --latency value

This flag sets both SRTO\_RCVLATENCY and SRTO\_PEERLATENCY to the same value.

Note that prior to version 1.3.0 this is the only flag to set the latency, however this is effectively equivalent to setting SRTO\_PEERLATENCY, when the side is sender (see SRTO\_SENDER) and SRTO\_RCVLATENCY when the side is receiver, and the bidirectional stream sending in version 1.2.0 is not supported.

### --linger value

Linger time on close.

Recommended value: 0

### --lossmaxttl value

The value up to which the Reorder Tolerance may grow.

When Reorder Tolerance is > 0, then packet loss report is delayed until that number of packets come in. Reorder Tolerance increases every time a "belated" packet has come, but it wasn't due to retransmission (that is, when UDP packets tend to come out of order), with the difference between the latest sequence and this packet's sequence, and not more than the value of this option.

By default it's 0, which means that this mechanism is turned off, and the loss report is always sent immediately upon experiencing a "gap" in sequences.

### --max-bw value

Maximum send bandwidth.

Note: This option has a default value of -1. Although in case when the stream rate is mostly constant it is recommended to use value 0 here and shape the bandwidth limit using SRTO\_INPUTBW and SRTO\_OHEADBW options.

### --messageapi

When set, this socket uses the Message API, otherwise it uses Buffer API.

### --min-version value

The minimum SRT version that is required from the peer. A connection to a peer that does not satisfy the minimum version requirement will be rejected.

### --mss value

Maximum Segment Size. Used for buffer allocation and rate calculation using packet counter assuming fully filled packets.



The smallest MSS between the peers is used. This is 1500 by default in the overall internet. This is the maximum size of the UDP packet and can be only decreased, unless you have some unusual dedicated network settings.

Not to be mistaken with the size of the UDP payload or SRT payload - this size is the size of the IP packet, including the UDP and SRT headers.

# --nakreport value

When this option is specified, the receiver will send UMSG\_LOSSREPORT messages periodically until the lost packet is retransmitted or intentionally dropped.

### --ohead-bw value

Recovery bandwidth overhead above input rate (see SRTO\_INPUTBW). It is effective only if SRTO MAXBW is set to 0.

### --packet-filter value

Set up the packet filter. The string must match appropriate syntax for packet filter setup.

See: https://github.com/Haivision/srt/blob/master/docs/packet-filtering-and-fec.md

### --passphrase value

Sets the passphrase for encryption. This turns encryption on on this side (or turns it off, if empty passphrase is passed). The passphrase must be 10 to 64 characters long.

### --payload-size value

Sets the maximum declared size of a single call to sending function in Live mode. Use 0 if this value isn't used (which is default in file mode).

This value shall not be exceeded for a single data sending instruction in Live mode.

#### --pbkeylen value

Sender encryption key length, can be 0, 16 (AES-128), 24 (AES-192), 32 (AES-256).

### --peer-idle-timeout value

The maximum time in milliseconds to wait until any packet is received from peer since the last such packet reception. If this time is passed, connection is considered broken on timeout.

### --peer-latency value

The latency value (as described in SRTO\_RCVLATENCY) that is set by the sender side as a minimum value for the receiver.

### --polling-time value

Epoll timeout value in milliseconds for non-blocking mode.

### --rcv-latency value

The time that should elapse since the moment when the packet was sent and the moment when it's delivered to the receiver application in the receiving function.

#### --rcvbuf value

Receive Buffer Size.

### --sndbuf value

Send Buffer Size.

Warning: configured in bytes, converted in packets, when set, based on MSS value.

For desired result, configure MSS first.

### --streamid value

A string limited to 512 characters that can be set on the socket prior to connecting. This stream ID will be able to be retrieved by the listener side from the socket that is returned from srt\_accept and was connected by a socket with that set stream ID (so you usually use SET on the socket used for srt\_connect and GET on the socket retrieved from srt\_accept). This string can be used completely free-form, however it's highly recommended to follow the SRT Access Control guidlines.

Version 3.22-1926 255 / 395



#### --tlpktdrop

Too-late Packet Drop. When enabled on receiver, it skips missing packets that have not been delivered in time and delivers the subsequent packets to the application when their time-to-play has come. It also sends a fake ACK to the sender. When enabled on sender and enabled on the receiving peer, sender drops the older packets that have no chance to be delivered in time. It is automatically enabled in sender if receiver supports it.

#### --transtype value

Sets the transmission type for the socket, in particular, setting this option sets multiple other parameters to their default values as required for a particular transmission type.

#### --udp-rcvbuf value

UDP Socket Receive Buffer Size.

#### --udp-sndbuf value

UDP Socket Send Buffer Size.

### Other options

#### -d value

### --display-interval value

Specify the interval in seconds between two displays of the evaluated real-time input bitrate. The default is to never display the bitrate. This option is ignored if --evaluation-interval is not specified.

#### -e value

#### --evaluation-interval value

Specify that the real-time input bitrate shall be evaluated on a regular basis. The value specifies the number of seconds between two evaluations. By default, the real-time input bitrate is never evaluated and the input bitrate is evaluated from the PCR in the input packets.

### --timestamp-priority name

Specify how the input time-stamp of each packet is computed.

The name specifies an ordered list of time-stamp sources. The first available time-stamp value is used as input time-stamp. The name must be one of "rtp-srt-tsp", "srt-rtp-tsp", "srt-tsp", "rtp-tsp", "tsp".

The possible time-stamp sources are:

- rtp: The RTP time stamp, when the UDP packet is an RTP packet.
- srt : SRT source time stamp.
- tsp: A software time-stamp, provided by tsp when the input plugin returns a chunk of packets. The tsp-provided time-stamp is always available, always comes last and is less precise.

The default is rtp-srt-tsp.

### --rendezvous address:port


Specify local address and port for rendez-vous mode.

# Generic common input plugin options

The following options are implicitly defined in all input plugins.

#### --help

Display plugin help text.



# srt (output)

# Send TS packets using Secure Reliable Transport (SRT)

This output plugin sends TS packets using Secure Reliable Transport (SRT).

Using this plugin forces *tsp* and all plugins to use their real-time defaults (see the reference documentation for *tsp*).

**Warning:** This plugin is not available on all platforms. It is provided only when *libsrt* is available during the compilation of TSDuck. Typically, this plugin is available on macOS, Fedora 31 onwards, Ubuntu 19.04 onwards.

**Acknowledgement:** This plugin is a contribution from Anthony Delannoy.

### **Usage**

```
tsp -0 srt [options] address:port
```

### **Parameter**

Specify listening the IPv4 and port..

### **Common SRT options**

### --conn-timeout value

Connect timeout. SRT cannot connect for RTT > 1500 msec (2 handshake exchanges) with the default connect timeout of 3 seconds.

This option applies to the caller and rendezvous connection modes. The connect timeout is 10 times the value set for the rendezvous mode (which can be used as a workaround for this connection problem with earlier versions.

#### --enforce-encryption

This option enforces that both connection parties have the same passphrase set (including empty, that is, with no encryption), or the connection is rejected.

#### --ffs value

Flight Flag Size (maximum number of bytes that can be sent without being acknowledged).

### --input-bw value

This option is effective only if SRTO MAXBW is set to 0 (relative).

It controls the maximum bandwidth together with SRTO\_OHEADBW option according to the formula: MAXBW = INPUTBW \* (100 + OHEADBW) / 100.

When this option is set to 0 (automatic) then the real INPUTBW value will be estimated from the rate of the input (cases when the application calls the *srt\_send* function) during transmission.

Recommended: set this option to the predicted bitrate of your live stream and keep default 25% value for SRTO\_OHEADBW.

# --iptos value

IPv4 Type of Service (see IP\_TOS option for IP) or IPv6 Traffic Class (see IPV6\_TCLASS of IPv6) depending on socket address family.

Applies to sender only. Sender: user configurable, default: 0xB8.

### --ipttl value

IPv4 Time To Live (see IP\_TTL option for IP) or IPv6 unicast hops (see IPV6\_UNICAST\_HOPS for IPV6) depending on socket address family.

Applies to sender only, default: 64.

### --kmpreannounce value

The interval (defined in packets) between when a new Stream Encrypting Key (SEK) is sent and when switchover occurs. This value also applies to the subsequent interval between when switchover occurs and when the old SEK is decommissioned.

Version 3.22-1926 257 / 395



Note: The allowed range for this value is between 1 and half of the current value of SRTO\_KMREFRESHRATE. The minimum value should never be less than the flight window (i.e. the number of packets that have already left the sender but have not yet arrived at the receiver).

#### --kmrefreshrate value

The number of packets to be transmitted after which the Stream Encryption Key (SEK), used to encrypt packets, will be switched to the new one.

Note that the old and new keys live in parallel for a certain period of time (see SRTO\_KMPREANNOUNCE) before and after the switchover.

# --latency value

This flag sets both SRTO RCVLATENCY and SRTO PEERLATENCY to the same value.

Note that prior to version 1.3.0 this is the only flag to set the latency, however this is effectively equivalent to setting SRTO\_PEERLATENCY, when the side is sender (see SRTO\_SENDER) and SRTO\_RCVLATENCY when the side is receiver, and the bidirectional stream sending in version 1.2.0 is not supported.

### --linger value

Linger time on close.

Recommended value: 0

#### --lossmaxttl value

The value up to which the Reorder Tolerance may grow.

When Reorder Tolerance is > 0, then packet loss report is delayed until that number of packets come in. Reorder Tolerance increases every time a "belated" packet has come, but it wasn't due to retransmission (that is, when UDP packets tend to come out of order), with the difference between the latest sequence and this packet's sequence, and not more than the value of this option.

By default it's 0, which means that this mechanism is turned off, and the loss report is always sent immediately upon experiencing a "gap" in sequences.

#### --max-bw value

Maximum send bandwidth.

Note: This option has a default value of -1. Although in case when the stream rate is mostly constant it is recommended to use value 0 here and shape the bandwidth limit using SRTO\_INPUTBW and SRTO\_OHEADBW options.

### --messageapi

When set, this socket uses the Message API, otherwise it uses Buffer API.

### --min-version value

The minimum SRT version that is required from the peer. A connection to a peer that does not satisfy the minimum version requirement will be rejected.

### --mss value

Maximum Segment Size. Used for buffer allocation and rate calculation using packet counter assuming fully filled packets.

The smallest MSS between the peers is used. This is 1500 by default in the overall internet. This is the maximum size of the UDP packet and can be only decreased, unless you have some unusual dedicated network settings.

Not to be mistaken with the size of the UDP payload or SRT payload - this size is the size of the IP packet, including the UDP and SRT headers.

### --nakreport

When this option is specified, the receiver will send UMSG\_LOSSREPORT messages periodically until the lost packet is retransmitted or intentionally dropped.



#### --ohead-bw value

Recovery bandwidth overhead above input rate (see SRTO\_INPUTBW). It is effective only if SRTO MAXBW is set to 0.

#### --packet-filter value

Set up the packet filter. The string must match appropriate syntax for packet filter setup.

See: https://github.com/Haivision/srt/blob/master/docs/packet-filtering-and-fec.md

### --passphrase value

Sets the passphrase for encryption. This turns encryption on on this side (or turns it off, if empty passphrase is passed). The passphrase must be 10 to 64 characters long.

### --payload-size value

Sets the maximum declared size of a single call to sending function in Live mode. Use 0 if this value isn't used (which is default in file mode).

This value shall not be exceeded for a single data sending instruction in Live mode.

### --pbkeylen value

Sender encryption key length, can be 0, 16 (AES-128), 24 (AES-192), 32 (AES-256).

#### --peer-idle-timeout value

The maximum time in milliseconds to wait until any packet is received from peer since the last such packet reception. If this time is passed, connection is considered broken on timeout.

### --peer-latency value

The latency value (as described in SRTO\_RCVLATENCY) that is set by the sender side as a minimum value for the receiver.

### --polling-time value

Epoll timeout value in milliseconds for non-blocking mode.

### --rcv-latency value

The time that should elapse since the moment when the packet was sent and the moment when it's delivered to the receiver application in the receiving function.

#### --rcvbuf value

Receive Buffer Size.

### --sndbuf value

Send Buffer Size.

Warning: configured in bytes, converted in packets, when set, based on MSS value.

For desired result, configure MSS first.

### --streamid value

A string limited to 512 characters that can be set on the socket prior to connecting. This stream ID will be able to be retrieved by the listener side from the socket that is returned from srt\_accept and was connected by a socket with that set stream ID (so you usually use SET on the socket used for srt\_connect and GET on the socket retrieved from srt\_accept). This string can be used completely free-form, however it's highly recommended to follow the SRT Access Control guidlines.

### --tlpktdrop

Too-late Packet Drop. When enabled on receiver, it skips missing packets that have not been delivered in time and delivers the subsequent packets to the application when their time-to-play has come. It also sends a fake ACK to the sender. When enabled on sender and enabled on the receiving peer, sender drops the older packets that have no chance to be delivered in time. It is automatically enabled in sender if receiver supports it.

## --transtype value

Sets the transmission type for the socket, in particular, setting this option sets multiple other parameters to their default values as required for a particular transmission type.

Version 3.22-1926 259 / 395



--udp-rcvbuf value

UDP Socket Receive Buffer Size.

--udp-sndbuf value

UDP Socket Send Buffer Size.

# Other options

--rendezvous address:port


Specify remote address and port for rendez-vous mode.

# Generic common output plugin options

The following options are implicitly defined in all output plugins.

--help

Display plugin help text.



# **stuffanalyze**

## Analyze the level of stuffing in sections

This plugin analyzes the level of "stuffing" in sections in a list of selected PID's. A section is considered as "stuffing" when its payload is larger than 2 bytes and filled with the same byte value (all 0x00 or all 0xFF for instance).

The PID's to analyze can be selected manually or using CAS criteria.

### Usage

```
tsp -P stuffanalyze [options]
```

### **Options**

- -o filename
- --output-file filename

Specify the output text file for the analysis result. By default, use the standard output.

Warning: if you do not specify this option, be sure to redirect the output plugin to something different from the default. Otherwise, the text output of the analysis will be mixed with the binary output of the TS packets!

```
-p pid1[-pid2]
```

**--pid** *pid1*[-*pid2*]

Analyze all sections from these PID values. Several -p or --pid options may be specified.

### CAS selection options

#### --cas value

With options --ecm or --emm, select only ECM's or EMM's for the specified CA system id value. Equivalent to --min-cas value --max-cas value.

#### --conax

Equivalent to --min-cas 0x0B00 --max-cas 0x0BFF.

#### --ecm

Extract PID's containing ECM.

### --emm

Extract PID's containing EMM.

### --irdeto

Equivalent to --min-cas 0x0600 --max-cas 0x06FF.

### --max-cas value

With options --ecm or --emm, select only ECM's or EMM's for the CA system id values in the range --min-cas to --max-cas.

### --mediaguard

Equivalent to --min-cas 0x0100 --max-cas 0x01FF.

#### --min-cas value

With options --ecm or --emm, select only ECM's or EMM's for the CA system id values in the range --min-cas to --max-cas.

### --nagravision

Equivalent to --min-cas 0x1800 --max-cas 0x18FF.

### --nds

Equivalent to --min-cas 0x0900 --max-cas 0x09FF.

Version 3.22-1926 261 / 395



### --operator value

When a CAS is specified, select only ECM's or EMM's for the specified CAS operator. The "CAS operator" is a non-standard vendor-dependent concept and is recognized for some CAS only.

### --safeaccess

Equivalent to --cas 0x4ADC.

### --viaccess

Equivalent to --min-cas 0x0500 --max-cas 0x05FF.

### --widevine

Equivalent to --min-cas 0x4AD4 --max-cas 0x4AD5.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

# --help

Display this help text.

## --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **svremove**

### Remove a Service

This plugin removes a service from the transport stream. The PAT, SDT Actual, NIT Actual and BAT are modified. The PMT and all components, including ECM streams, of the removed service are either removed or replaced by stuffing.

### **Usage**

```
tsp -P svremove [options] service
```

#### **Parameter**

Specifies the service to remove. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If the input TS does not contain an SDT, use a service id.

### **Options**

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

-a

#### --ignore-absent

Ignore service if not present in the transport stream. By default, *tsp* fails if the service is not found.

-b

### --ignore-bat

Do not modify the BAT.

-e

### --ignore-eit

Do not remove the EIT's for this service.

-n

### --ignore-nit

Do not modify the NIT.

# --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

-s

#### --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

Version 3.22-1926 263 / 395



# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **svrename**

### Rename a Service

This plugin renames a service. It assigns a new service name and/or a new service id.

The PAT, PMT of the service, SDT Actual, NIT Actual and BAT are modified.

The service id is modified in the PAT, PMT and SDT Actual. It is modified in the *service\_list\_descriptor* and *logical\_channel\_number\_descriptor* (EACEM/EICTA private descriptor) of the NIT Actual and the BAT. The service name is modified in the SDT Actual.

### **Usage**

```
tsp -P svrename [options] [service]
```

### **Parameter**

Specifies the service to rename. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored. If the input TS does not contain an SDT, use a service id.

When the service is omitted, the first service in the PAT is used. This is especially convenient when the transport stream is an SPTS.

### **Options**

### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

- -f value
- --free-ca-mode value

Specify a new *free\_CA\_mode* to set in the SDT (0 or 1).

- -i value
- --id value

Specify a new service id value.

### --ignore-bat

Do not modify the BAT.

# --ignore-eit

Do not modify the EIT's for this service.

### --ignore-nit

Do not modify the NIT.

#### --ianan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

- -1 value
- --lcn value

Specify a new logical channel number (LCN).

- -n name
- --name name

Specify a new service name.

Version 3.22-1926 265 / 395



- **-р** пате
- --provider name

Specify a new provider name.

- -r value
- --running-status value

Specify a new *running\_status* to set in the SDT (0 to 7).

- -t value
- --type value

Specify a new service type.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# #t2mi

## Extract T2-MI (DVB-T2 Modulator Interface) packets

This plugin extracts (or simply logs) T2-MI packets. T2-MI is the DVB-T2 Modulator Interface. This is a protocol which encapsulates DVT-T2 modulator commands (including TS packets) into one PID of a transport stream. See [9] and [10] for more details.

This plugin selects one PID from the input transport stream. This PID shall contain an encapsulated T2-MI stream. This plugin extracts the embedded transport stream from one PLP (Physical Layer Pipe) of the original PID. By default, the input transport stream is completely replaced with the extracted stream. Using the option --output-file, the extracted encapsulated transport stream is saved in a file and, in that case, the input transport stream is passed unmodified.

Alternatively, the t2mi plugin can simply log all T2-MI packets without replacing the input transport stream. This is typically useful for debug only.

**Warning:** This plugin is currently experimental and has some limitations. DVB-T2 is complex and this complexity has an impact on the encapsulation of TS packets inside a T2-MI stream. This plugin may not work with all mode or stream adaptations (see [10]). If you encounter problems with some T2-MI streams, please report an issue (see [43]) and provide a sample transport stream which exhibits the problem.

### **Usage**

```
tsp -P t2mi [options]
```

# **Options**

#### -a

### --append

With --output-file, if the file already exists, append to the end of the file. By default, existing files are overwritten.

#### -е

#### --extract

Extract encapsulated TS packets from one PLP of a T2-MI stream. The transport stream is completely replaced by the extracted stream. This is the default if neither --extract nor --log nor --identify is specified.

# -i

### --identify

Identify all T2-MI PID's and PLP's.

If --pid is specified, only identify PLP's in this PID. If --pid is not specified, identify all PID's carrying T2-MI and their PLP's (require a fully compliant T2-MI signalization).

### -k

### --keep

With --output-file, keep existing file (abort if the specified file already exists). By default, existing files are overwritten.

# -1

### --log

Log all T2-MI packets using one single summary line per packet. This is typically useful for debug only.

If --log is specified without --extract, the input transport stream is passed unmodified. If both --extract and --log are specified, the T2-MI packets are logged and the encapsulated stream replaces the input stream.

Version 3.22-1926 267 / 395



### -o filename

### --output-file filename

Specify that the extracted stream is saved in this file. In that case, the main transport stream is passed unchanged to the next plugin.

#### -p value

#### --pid value

Specify the PID carrying the T2-MI encapsulated stream. By default, the plugin automatically locates and uses the first component with a *T2MI\_descriptor* in the PMT of its service.

### --plp value

Specify the PLP (Physical Layer Pipe) to extract from the T2-MI encapsulation. By default, use the first PLP which is found. This option is ignored if --extract is not used.

To determine which PID's carry T2-MI streams and what are the PLP's inside each stream, use the command tsanalyze or the plugin analyse.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# tables

### **Collect MPEG Tables**

This plugin collects MPEG tables from a transport stream. The tables can be displayed or saved in a human readable format, saved in binary or XML files or sent over UDP/IP to some collecting server. It is equivalent to the *tstables* utility. Actually, the following two commands produce the same result:

```
tstables options filename
tsp -I file filename -P tables options -O drop
```

### **Usage**

```
tsp -P tables [options]
```

# **Options**

The plugin accepts exactly the same options as the *tstables* utility.

## Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

--only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 269 / 395



# **#**teletext

### Extract Teletext subtitles in SRT format

This plugin extracts a Teletext subtitle stream from a service and exports it in SRT format, also known as "SubRip" format. SRT is a text format which can be manipulated by many video processing tools.

Teletext subtitles are contained in a PID which is signalled in the PMT of the service. Unlike DVB subtitles, a single Teletext PID can contain more than one subtitle stream. Typically, one PID can contain a multiplex of the standard and "for hard of hearing" subtitles. Each subtitle stream is defined by its *Teletext Page* number. All page numbers inside a single Teletext PID are normally listed in a Teletext descriptor in the PMT of the service.

### **Usage**

tsp -P teletext [options]

### **Options**

- c

#### --colors

Add font color tags in the subtitles. By default, no color is specified.

#### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

#### -1 name

## --language name

Specify the language of the subtitles to select. This option is useful only with --service, when the PMT of the service declares Teletext subtitles in different languages.

#### -m value

### --max-frames value

Specifies the maximum number of Teletext frames to extract. The processing is then stopped. By default, all frames are extracted.

### -o filename

### --output-file filename

Specify the SRT output file name. This is a text file. By default, the SRT subtitles are displayed on the standard output.

#### --page value

Specify the Teletext page to extract. This option is useful only when the Teletext PID contains several pages. By default, the first Teletext frame defines the page to use.

### -p value

### --pid value

Specify the PID carrying Teletext subtitles.

Alternatively, if the Teletext PID is properly signalled in the PMT of its service, the option -- service can be used instead.



### -s value

#### --service value

Specify the service with Teletext subtitles. If the argument is an integer value (either decimal or hexadecimal), it is interpreted as a service id. Otherwise, it is interpreted as a service name, as specified in the SDT. The name is not case sensitive and blanks are ignored.

The first *teletext\_descriptor* in the PMT of the service is used to identify the PID carrying Teletext subtitles

If neither --service nor --pid is specified, the first service in the PAT is used.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 271 / 395





## **Schedule Packets Pass or Drop**

This plugin schedules in time the processing of packets (drop packets, pass packets or replace them by null packets). This plugin may be used to schedule the recording of a program at a specified time, for instance.

### **Usage**

```
tsp -P time [options]
```

### **Options**

- -d time
- --drop time

All packets are dropped after the specified time. Several --drop options may be specified.

- -n time
- --null time

All packets are replaced by null packets after the specified time. Several --null options may be specified.

- -p time
- --pass time

All packets are passed unmodified after the specified time. Several --pass options may be specified.

#### -r

#### --relative

All time values are interpreted as a number of seconds relative to the tsp start time. By default, all time values are interpreted as an absolute time in the format "year/month/day:hour:minute:second". Option --relative is incompatible with --tdt or -- utc.

- -s time
- --stop time

Packet transmission stops after the specified time and tsp terminates.

### -t

## --tdt

Use the Time & Date Table (TDT) from the transport stream as time reference instead of the system clock. Since the TDT contains UTC time, all time values in the command line must be UTC also.

### -u

#### --utc

Specifies that all time values in the command line are in UTC. By default, the time values are interpreted as system local time.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **Specifying time values**

A time value must be in the format "year/month/day:hour:minute:second" (unless --relative is specified, in which case it is a number of seconds). An empty value ("") means " $from\ the\ beginning$ ", that is to say when tsp starts. By default, packets are passed when tsp starts.

Version 3.22-1926 273 / 395



# **timeref**

# Update TDT and TOT with a new time reference

This plugin updates all TDT and TOT (and optionally EIT) in the transport stream according to a new time reference. This new reference can be completely new or an offset from the original TS.

### **Usage**

tsp -P timeref [options]

### **Options**

#### -a seconds

#### --add seconds

Add the specified number of seconds to all UTC time. Specify a negative value to make the time reference go backward.

#### --eit

Update events start time in EIT's. By default, EIT's are not modified.

When --add is used, the specified offset is applied to all events start time.

When --start is used, EIT's are dropped until the first TDT or TOT is encountered. Then, the difference between the first TDT or TOT time and the new time reference at this point is applied.

### --eit-date-only

Same as --eit but update the date field only in the event start dates in EIT's. The hour, minute and second fields of the event start dates are left unchanged.

### -1 minutes

#### --local-time-offset minutes

Specify a new local time offset in minutes to set in the TOT. The allowed range is -720 to 720 (from -12 hours to +12 hours).

By default, the local time offset is unchanged.

### --next-change value

Specify a new UTC date & time for the next DST change, to set in the TOT.

The time value must be in the format "year/month/day:hour:minute:second".

By default, the time of next DST change is unmodified.

### --next-time-offset minutes

Specify a new local time offset to be applied after the next DST change, to set in the TOT. The value is in minutes, similar to --local-time-offset.

By default, the next time offset is unchanged.

### --notdt

Do not update TDT.

### --notot

Do not update TOT.

#### --only-country name

Restrict the modification of --local-time-offset, --next-change and --next-time-offset to the specified 3-letter country code.

Several --only-country options are allowed.

# --only-region id1[-id2]

Restrict the modification of --local-time-offset, --next-change and --next-time-offset to the specified region id inside a country.

Several --only-region options are allowed.



### -s time

#### --start time

Specify a new UTC date & time reference for the first packet in the stream. Then, the time reference is updated according to the number of packets and the bitrate.

A time value must be in the format "year/month/day:hour:minute:second".

The predefined name "system" can be used to specify the current UTC time from the system clock (use --start system).

# **Generic packet processing plugin options**

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

# --only-label Label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 275 / 395



# **timeshift**

# Delay transmission by a fixed amount of packets

This plugin

### Usage

tsp -P timeshift [options]

### **Options**

# --directory path

Specify a directory where the temporary buffer file is created.

By default, the system-specific area for temporary files is used.

The temporary file is hidden and automatically deleted on termination. Specifying another location can be useful to redirect very large buffers on another disk.

If the reserved memory area is large enough to hold the buffer, no file is created.

-d

#### --drop-initial

Drop output packets during the initial phase, while the time-shift buffer is filling. By default, initial packets are replaced by null packets.

#### -m value

### --memory-packets value

Specify the number of packets which are cached in memory. Having a larger memory cache improves the performances.

By default, the size of the memory cache is 128 packets.

### -p value

### --packets value

Specify the size of the time-shift buffer in packets.

There is no default, the size of the buffer shall be specified either using --packets or --time.

## -t milliseconds

#### --time milliseconds

Specify the size of the time-shift buffer in milliseconds.

The initial bitrate is used to convert this duration in number of packets and this value is used as fixed-size for the buffer. This is convenient for constant bitrate (CBR) streams only.

There is no default, the size of the buffer shall be specified either using --packets or --time.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# trigger

# Trigger actions on selected TS packets

This plugin triggers an action (running an external command, sending an UDP packet) each time a TS packet is marked with a given label. Labels are typically set on packets by a previous plugin in the chain, such as the *filter* plugin.

By default, without option --label, --start or --stop, the actions are triggered on all packets in the stream. To avoid "avalanche effects" of too many triggers, the options --min-inter-packet and --min-inter-time can be used.

### Usage

```
tsp -P trigger [options]
```

### **Options**

-a

#### --all-labels

All labels from options --label shall be set on a packet to be selected (logical 'and').

By default, a packet is selected if any label is set (logical 'or').

-e 'command'

### --execute 'command'

Run the specified command when the current packet triggers the actions.

-1 label1[-label2]

### --label label1[-label2]

Trigger the actions on packets with any of the specified labels. Labels should have typically be set by a previous plugin in the chain.

Several --label options may be specified.

Note that the option --label is different from the generic option --only-label. The generic option --only-label acts at *tsp* level and controls which packets are passed to the plugin. All other packets are directly passed to the next plugin without going through this plugin. The option --label, on the other hand, is specific to the *trigger* plugin and selects packets with specific labels among the packets which are passed to this plugin.

### --local-address address

With --udp, when the destination is a multicast address, specify the IP address of the outgoing local interface. It can be also a host name that translates to a local address.

### --min-inter-packet count

Specify the minimum number of packets between two triggered actions.

Actions which should be triggered in the meantime are ignored.

#### --min-inter-time milliseconds

Specify the minimum time, in milliseconds, between two triggered actions.

Actions which should be triggered in the meantime are ignored.

### --start

Trigger the actions on tsp start.

### --stop

Trigger the actions on tsp stop.

#### --ttl value

With --udp, specifies the TTL (Time-To-Live) socket option. The actual option is either "Unicast TTL" or "Multicast TTL", depending on the destination address. Remember that the default Multicast TTL is 1 on most systems.

Version 3.22-1926 277 / 395



### -u address:port

### --udp address:port

Send a UDP/IP message to the specified destination when the current packet triggers the actions. The *address* specifies an IP address which can be either unicast or multicast. It can be also a host name that translates to an IP address. The *port* specifies the destination UDP port.

### --udp-message hexa-string

With --udp, specifies the binary message to send as UDP datagram. The value must be a string of hexadecimal digits specifying any number of bytes.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

## --help

Display this help text.

# --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.



# **tsrename**

### Rename a transport stream

This plugin renames the transport stream. It assigns a new transport stream id and/or a original network id

The PAT, SDT Actual, NIT Actual and BAT are modified.

#### Usage

```
tsp -P tsrename [options]
```

### **Options**

-a

### --add

Equivalent to --add-bat --add-nit.

### --add-bat

Add a new entry for the renamed TS in the BAT and keep the previous entry. By default, the TS entry is renamed. Note that if no previous entry existed for this TS in the BAT, none is created.

### --add-nit

Add a new entry for the renamed TS in the NIT and keep the previous entry. By default, the TS entry is renamed. Note that if no previous entry existed for this TS in the NIT, none is created.

### --ignore-bat

Do not modify the BAT.

#### --ignore-eit

Do not modify the EIT's for this transport stream.

# --ignore-nit

Do not modify the NIT.

- -o value
- --original-network-id value

Modify the original network id. By default, it is unchanged.

- -t value
- --ts-id value

Modify the transport stream id. By default, it is unchanged.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

### --help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

Version 3.22-1926 279 / 395



# until

## **Pass Packets Until Specified Condition**

This plugin passes all TS packets to the next plugin in the chain, until one of the specified conditions is met. At this point, the plugin simulates an "end of input stream" and all subsequent packets are dropped. The previous plugins in the chain are notified to stop. When the next plugins in the chain finish the processing of the passed packet, tsp terminates.

### **Usage**

```
tsp -P until [options]
```

# **Options**

- -b value
- --bytes value

Stop after processing the specified number of bytes.

- 6

#### --exclude-last

Exclude the last packet (the one which triggers the final condition).

-i

# --joint-termination

When the final condition is triggered, perform a *joint termination* instead of unconditional termination. See the description of the tsp command for more details on *joint termination*.

-m value

### --milli-seconds value

Stop the specified number of milli-seconds after receiving the first packet.

-**n** value

#### --null-sequence-count value

Stop when the specified number of sequences of consecutive null packets is encountered.

-p value

### --packets value

Stop after the specified number of packets.

-s value

### --seconds value

Stop the specified number of seconds after receiving the first packet.

-u value

### --unit-start-count value

Stop when the specified number of packets containing a payload unit start indicator is encountered.

### Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

--help

Display this help text.

### --only-label label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.





# Zap on one service (create an SPTS)

This plugin "zaps" on one service: it produces a Single Program Transport Stream (SPTS) containing only the specified service. The PAT and SDT are modified in order to contain only the specified service. Unless specified otherwise (see the relevant options), the PMT and all elementary streams of the service are passed transparently. All other PID's in the transport streams are removed. If some elementary streams (audio, subtitles) must be removed from the service, the PMT is modified accordingly.

For ATSC transport streams, the service is extracted as with any MPEG-compliant transport stream but the PSIP signalization (PID 0x1FFB) is not modified. The TVCT or CVCT still contains the description of all previous (and now removed) services in the transport stream.

### **Usage**

tsp -P zap [options] service

### **Parameter**

The parameter specifies the service to keep.

If the parameter is an integer value (either decimal or hexadecimal), it is interpreted as a service id. If its format is "integer.integer", it is interpreted as major and minor ids on ATSC streams. Otherwise, the parameter is interpreted as a service name, as specified in the SDT (DVB) or VCT (ATSC).

The name is not case sensitive and blanks are ignored.

If the input TS does not contain an SDT (DVB) or VCT (ATSC), use a service id.

# **Options**

- -a name
- --audio name

Remove all audio components except the specified one. The name is a three-letters language code. By default, keep all audio components.

### --audio-pid value

Remove all audio components except the specified audio PID. By default, keep all audio components.

This option and the --audio option are mutually exclusive.

-с

#### --cas

Keep Conditional Access System sections (CAT and EMM's). Remove them by default. Note that the ECM's for the specified service are always kept.

### --default-charset name

Default character set to use when interpreting strings from tables and descriptors. This is is used, for instance, to control the way service names are extracted from the signalization.

By default, standard DVB encoding is used. See section 2.3 for more details.

### --eit

Keep EIT sections for the specified service. EIT sections for other services are removed. By default, all EIT's are removed.

#### --europe

A synonym for --default-charset ISO-8859-15. See section 2.3 for more details.

#### --japan

A synonym for '--default-charset ARIB-STD-B24'. See section 2.3 for more details.

Version 3.22-1926 281 / 395



-е

#### --no-ecm

Remove all ECM PID's. By default, keep all ECM PID's.

-n

### --no-subtitles

Remove all subtitles. By default, keep all subtitles.

-p

### --pes-only

Keep only the PES elementary streams (audio, video, subtitles). Remove all PSI/SI and CAS information.

**-** S

### --stuffing

Replace excluded packets with stuffing (null packets) instead of removing them. Useful to preserve bitrate.

-t name

### --subtitles name

Remove all subtitles except the specified one. The name is a three-letters language code. By default, keep all subtitles.

# Generic packet processing plugin options

The following options are implicitly defined in all packet processing plugins.

#### --help

Display this help text.

# --only-label Label1[-label2]

Invoke this plugin only for packets with any of the specified labels. Other packets are transparently passed to the next plugin, without going through this one.

Several --only-label options may be specified.

\$



# **5 Usage Examples**

# 5.1 TSDuck Utilities

# 5.1.1 tsdektec examples

```
Listing all (-a) Dektec devices:
  $ tsdektec -a
  0: DTA-110 (DTA-110T Modulator with UHF Upconverter)
  1: DTA-140 (DTA-140 DVB/ASI Input+Output)
Listing all (-a) Dektec devices in verbose format (-v):
  $ tsdektec -av
  DTAPI version: 4.1.1.108
  PCI device driver: 2.2.0.124
  USB device driver: unknown
  * Device 0: DTA-110 (DTA-110T Modulator with UHF Upconverter)
    Physical ports: 1
    Channels: input: 0, output: 1
    Output 0: Port 1, Modulator, Failsafe, ATSC/VSB, DVB-T/DVB-H, DVB-C,
         QAM-B (USA), QAM-C (Japan), UHF
    Subsystem id: 0xD10A (DTA-110)
    Subsystem vendor id: 0x14B4
    Device id: 0x9056
    Vendor id: 0x10B5
    Serial number: 0000000F50268FF
    Firmware version: 4 (0x00000004)
    Firmware variant: 4 (0x00000004)
    PCI bus: 5, slot: 5
    Customer id: 301819
    Engineering change level: Rev 3
    Manufacture id: 03
    Production date: 2002.07
    Part number: DTA-110T
    Serial number: 4110575871
    Crystal stability: RF:1ppm;Sym:25ppm
   * Device 1: DTA-140 (DTA-140 DVB/ASI Input+Output)
    Physical ports: 2
    Channels: input: 1, output: 1
    Input 0: Port 1, top socket, ASI/SDI, ASI
    Output 0: Port 2, ASI/SDI, ASI
    Subsystem id: 0xD128 (DTA-140)
    Subsystem vendor id: 0x14B4
    Device id: 0x9056
    Vendor id: 0x10B5
    Serial number: 0000000F6C458E8
    Firmware version: 2 (0x00000002)
    Firmware variant: 0 (0x0000000)
    PCI bus: 5, slot: 6
    Customer id: 301819
    Engineering change level: Rev 1A
    Manufacture id: 03
    Production date: 2003.05
    Part number: DTA-140
    Serial number: 4140062952
    Crystal stability: 10ppm
```

Version 3.22-1926 283 / 395



## 5.1.2 tslsdvb examples

Listing all DVB receiver devices on a Linux system with a dual-tuner Hauppauge Nova-T 500. Each tuner of the single PCI board is seen as one DVB receiver device:

```
$ tslsdvb
/dev/dvb/adapter0 (DiBcom 3000MC/P, DVB-T)
/dev/dvb/adapter1 (DiBcom 3000MC/P, DVB-T)
$
```

The DVB receiver device name is /dev/dvb/adapter0 but it can also be specified using the option --adapter (-a) in all TSDuck commands: the options "--device-name /dev/dvb/adapter1" and "-a 1" are equivalent.

Listing all DVB receiver devices on a Windows system with one USB receiver:

```
C:\> tslsdvb
0: "Nova-T Stick DVB-T Tuner (Dev1 Path0)" (DVB-T)
C:\>
```

The DVB receiver device name is "Nova-T Stick DVB-T Tuner (Dev1 Path0)". This is the name of the DirectShow tuner filter supplied by the hardware vendor.

Listing all DVB receiver devices on a Windows system with two other USB receivers:

```
C:\> tslsdvb
0: "Cinergy T USB XE (MKII) Tuner" (DVB-T)
1: "PCTV DiBcom BDA Digital Tuner (Dev1 Path0)" (DVB-T)
C:\>
```

Listing all DVB receiver devices on a Linux system in verbose (-v) format. Note that the current modulation parameters are usually accessible on Linux systems only. On Windows systems, most tuner drivers do not return them and tslsdvb cannot display the characteristics of the current transponder.

```
$ tslsdvb -v
/dev/dvb/adapter0 (DiBcom 3000MC/P, DVB-T)
 Status: has signal, has carrier, has viterbi, has sync, has lock
 Bit error rate ..... 0 (0%)
 Signal/noise ratio ...... 0 (0%)
 Signal strength ...... 39,586 (60%)
 Uncorrected blocks ..... 0
 Frequencies:
  Current ..... 562,000,000 Hz
  UHF channel ...... 32
  Min ..... 48,000,000 Hz
  Max ...... 860,000,000 Hz
  Step ..... 62,500 Hz
  Tolerance ..... 0 Hz
 Spectral inversion ..... auto
 Bandwidth ..... 8-MHz
 FEC (high priority) ...... 2/3
 FEC (low priority) ..... 1/2
 Constellation ..... 64-QAM
 Transmission mode ...... 8K
 Guard interval ...... 1/32
 Hierarchy ..... none
 Capabilities: inversion auto, FEC 1/2, FEC 2/3, FEC 3/4, FEC 5/6, FEC 7/8,
  FEC auto, QPSK, 16-QAM, 64-QAM, QAM auto, transmission mode auto,
  guard interval auto, hierarchy auto, recover
/dev/dvb/adapter1 (DiBcom 3000MC/P, DVB-T)
 Status: has signal, has carrier, has viterbi, has sync, has lock
```



```
Bit error rate ...... 0 (0%)
Signal/noise ratio ...... 0 (0%)
Signal strength ...... 40,690 (62%)
Uncorrected blocks ..... 0
Frequencies:
 Current ..... 490,000,000 Hz
 UHF channel ..... 23
 Min ...... 48,000,000 Hz
 Max ...... 860,000,000 Hz
 Step ..... 62,500 Hz
 Tolerance ..... 0 Hz
Spectral inversion ..... auto
Bandwidth ..... 8-MHz
FEC (high priority) ...... 2/3
FEC (low priority) ...... 1/2
Constellation ...... 16-QAM
Transmission mode ...... 8K
Guard interval ...... 1/32
Hierarchy ..... none
Capabilities: inversion auto, FEC 1/2, FEC 2/3, FEC 3/4, FEC 5/6, FEC 7/8,
 FEC auto, QPSK, 16-QAM, 64-QAM, QAM auto, transmission mode auto,
 guard interval auto, hierarchy auto, recover
```

\$

# 5.1.3 tsscan examples

UHF-band scanning, including a global service list at end of network scanning:

- \$ tsscan -g
- \* UHF channel 21, offset +1 (474.166 MHz), strength: 59% Transport stream id: 2, 0x0002
- \* UHF channel 23, offset +1 (490.166 MHz), strength: 62% Transport stream id: 8, 0x0008
- \* UHF channel 24, offset +1 (498.166 MHz), strength: 62% Transport stream id: 4, 0x0004
- \* UHF channel 27, offset +1 (522.166 MHz), strength: 63% Transport stream id: 3, 0x0003
- \* UHF channel 32, offset +1 (562.166 MHz), strength: 61% Transport stream id: 6, 0x0006
- \* UHF channel 35, offset +1 (586.166 MHz), strength: 63% Transport stream id: 1, 0x0001

LCN	Name	Provider	ServId	TSId	ONetId	Type	PMTPID
1	TF1	SMR6	0x0601	0x0006	0x20FA	0x01	0x0064
2	France 2	GR1	0x0101	0x0001	0x20FA	0x01	0x006E
3	France 3	GR1	0x0111	0x0001	0x20FA	0x01	0x00D2
4	CANAL+	CNH	0x0301	0x0003	0x20FA	0x01	0x0500
5	France 5	GR1	0x0104	0x0001	0x20FA	0x01	0x0136
6	M6	MULTI4	0x0401	0x0004	0x20FA	0x01	0x006E
7	ARTE	GR1	0x0105	0x0001	0x20FA	0x01	0x01FE
8	Direct 8	NTN	0x0201	0x0002	0x20FA	0x01	0x0500
9	W9	MULTI4	0x0402	0x0004	0x20FA	0x01	0x00D2
10	TMC	SMR6	0x0606	0x0006	0x20FA	0x01	0x0258
11	NT1	MULTI4	0x0403	0x0004	0x20FA	0x01	0x0136
12	NRJ12	SMR6	0x0602	0x0006	0x20FA	0x01	0x00C8
13	LCP	GR1	0x0106	0x0001	0x20FA	0x01	0x0262
14	France 4	NTN	0x0207	0x0002	0x20FA	0x01	0x0506
15	BFM TV	NTN	0x0203	0x0002	0x20FA	0x01	0x0502
16	i>TELE	NTN	0x0204	0x0002	0x20FA	0x01	0x0503
17	Virgin 17	NTN	0x0205	0x0002	0x20FA	0x01	0x0504
18	Gulli	NTN	0x0206	0x0002	0x20FA	0x01	0x0505
20	France Ô	GR1	0x0176	0x0001	0x20FA	0x01	0x02C6
21	Canal 21	Multi-7	0x0802	0x0008	0x20FA	0x01	0x10E1

Version 3.22-1926 285 / 395



```
22 IDF1
                  Multi-7 0x0803 0x0008 0x20FA 0x01 0x10E2
23 NRJ Paris
                 Multi-7 0x0804 0x0008 0x20FA 0x01 0x10E3
24 CAP 24
                  Multi-7 0x0805 0x0008 0x20FA 0x01 0x10E4
30 TPS STAR
                  CNH
                           0x0306 0x0003 0x20FA 0x01 0x0505
31 PARIS PREMIERE MULTI4 0x0404 0x0004 0x20FA 0x01 0x019A
32 CANAL+ SPORT CNH
                           0x0303 0x0003 0x20FA 0x01 0x0502
33 CANAL+ CINEMA
                   CNH
                           0x0302 0x0003 0x20FA 0x01 0x0501
                   MULTI4
34 AB1
                           0x0406 0x0004 0x20FA 0x01 0x0262
35 PLANETE
                           0x0304 0x0003 0x20FA 0x01 0x0503
                  CNH
36 TF6
                   MULTI4 0x0405 0x0004 0x20FA 0x01 0x01FE
37 CANAL J
                   CNH
                           0x0305 0x0003 0x20FA 0x01 0x0504
38 LCI
                   SMR6
                           0x0603 0x0006 0x20FA 0x01 0x012C
39 Eurosport France SMR6
                           0x0604 0x0006 0x20FA 0x01 0x0190
                           0x01FF 0x0001 0x20FA
                                                    0x03F2
                           0x02FF 0x0002 0x20FA
                                                    0x050A
                   CNH
                            0x03F0 0x0003 0x20FA 0x0C 0x050A
                           0x03F1 0x0003 0x20FA 0x0C 0x050B
                   CNH
                           0x04FF 0x0004 0x20FA 0x0C 0x03F2
```

UHF-band scanning, including modulation parameters information (usually unavailable on Windows, depending on the tuner driver):

```
$ tsscan -m
* UHF channel 21, offset +1 (474.166 MHz), strength: 59%
  Transport stream id: 2, 0x0002
  Carrier frequency: 474,166,666 Hz
  Constellation: 64-QAM
 HP streams FEC: 2/3
  LP streams FEC: 1/2
  Guard interval: 1/32
  Transmission mode: 8K
 Hierarchy: none
* UHF channel 23, offset +1 (490.166 MHz), strength: 62%
  Transport stream id: 8, 0x0008
  Carrier frequency: 490,166,666 Hz
  Constellation: 16-QAM
  HP streams FEC: 2/3
  LP streams FEC: 1/2
  Guard interval: 1/32
  Transmission mode: 8K
 Hierarchy: none
* UHF channel 24, offset +1 (498.166 MHz), strength: 62%
  Transport stream id: 4, 0x0004
  Carrier frequency: 498,166,666 Hz
  Constellation: 64-QAM
  HP streams FEC: 2/3
  LP streams FEC: 1/2
  Guard interval: 1/32
  Transmission mode: 8K
 Hierarchy: none
* UHF channel 27, offset +1 (522.166 MHz), strength: 63%
  Transport stream id: 3, 0x0003
  Carrier frequency: 522,166,666 Hz
  Constellation: 64-QAM
 HP streams FEC: 2/3
  LP streams FEC: 1/2
  Guard interval: 1/32
  Transmission mode: 8K
  Hierarchy: none
* UHF channel 32, offset +1 (562.166 MHz), strength: 61%
  Transport stream id: 6, 0x0006
  Carrier frequency: 562,166,666 Hz
  Constellation: 64-QAM
 HP streams FEC: 2/3
  LP streams FEC: 1/2
```



```
Guard interval: 1/32
Transmission mode: 8K
Hierarchy: none
* UHF channel 35, offset +1 (586.166 MHz), strength: 63%
Transport stream id: 1, 0x0001
Carrier frequency: 586,166,666 Hz
Constellation: 64-QAM
HP streams FEC: 3/4
LP streams FEC: 1/2
Guard interval: 1/8
Transmission mode: 8K
Hierarchy: none
$
```

# 5.1.4 tssmartcard examples

Listing all smartcard readers in the system:

```
$ tssmartcard
OmniKey CardMan 3121 00 00
OmniKey CardMan 3121 01 00
OmniKey CardMan 3121 02 00
OmniKey CardMan 3121 03 00
$
```

Listing all smartcard readers in the system, in verbose (-v) format:

```
$ tssmartcard -v
OmniKey CardMan 3121 00 00: empty
OmniKey CardMan 3121 01 00: smartcard present
   ATR: 3B DE 18 00 40 11 90 28 43 29 4C 6F 67 69 77 61 79 73 AA 55
OmniKey CardMan 3121 02 00: empty
OmniKey CardMan 3121 03 00: smartcard present
   ATR: 3B DE 18 00 40 11 90 28 43 29 4C 6F 67 69 77 61 79 73 AA 55
$
```

Perform a warm (-w) reset on the second smartcard then list all readers in verbose format again: the smartcard now returns its "warm reset" ATR.

```
$ tssmartcard "OmniKey CardMan 3121 01 00" -w
$ tssmartcard -v
OmniKey CardMan 3121 00 00: empty
OmniKey CardMan 3121 01 00: smartcard present
    ATR: 3B D3 18 00 40 11 90 AA 55
OmniKey CardMan 3121 02 00: empty
OmniKey CardMan 3121 03 00: smartcard present
    ATR: 3B DE 18 00 40 11 90 28 43 29 4C 6F 67 69 77 61 79 73 AA 55
$
```

# 5.1.5 tsterinfo examples

Converting UHF channels to frequencies:

```
$ tsterinfo -u 21
Carrier Frequency: 474,000,000 Hz
$
$ tsterinfo -u 21 -o 1
Carrier Frequency: 474,166,666 Hz
$
$ tsterinfo -u 21 -o 1 -s
474166666
$
```

Converting frequencies to UHF channels:

```
$ tsterinfo -f 474166666
UHF channel: 21, offset: 1
$
```

Version 3.22-1926 287 / 395



```
$ tsterinfo -f 474166000
UHF channel: 21, offset: 1
Warning: exact frequency for channel 21, offset 1 is 474,166,666 Hz, differ by -666 Hz
$
```

Computing transport stream bitrate from OFDM modulation parameters:

```
$ tsterinfo -h 2/3 -g 1/32
Transport stream bitrate: 24,128,342 b/s
$
$ tsterinfo -h 2/3 -g 1/32 -c QPSK
Transport stream bitrate: 8,042,780 b/s
$
$ tsterinfo -h 2/3 -g 1/32 -c QPSK -s
8042780
$
```

Retrieving OFDM modulation parameters from the transport stream bitrate. Note that the second example gives two possible sets of parameters with the same bitrate difference.

```
$ tsterinfo -b 24128300
 Nominal bitrate ..... 24,128,342 b/s
 Bitrate difference ..... -42 b/s
 Bandwidth ..... 8-MHz
 FEC (high priority) ..... 2/3
 Constellation ..... 64-QAM
 Guard interval ..... 1/32
$ tsterinfo -b 24882000
 Nominal bitrate ..... 24,882,352 b/s
 Bitrate difference ..... -352 b/s
 Bandwidth ..... 8-MHz
 FEC (high priority) ..... 3/4
 Constellation ..... 64-QAM
 Guard interval ..... 1/8
 Nominal bitrate ..... 24,882,352 b/s
 Bitrate difference ..... -352 b/s
 Bandwidth ..... 8-MHz
 FEC (high priority) ..... 5/6
 Constellation ..... 64-QAM
 Guard interval ..... 1/4
```

### 5.1.6 tshides examples

The command *tshides* lists the HiDes devices, typically cheap modulators. Since these devices are simple encapsulations around chips from ITE Technologies, using device drivers from ITE, they usually appear as ITE 950x, from the model name of the main chip in the HiDes device.

Using tshides on Windows:

```
C:\> tshides
0: "IT9507 TX Filter"

C:\> tshides -v
Found 1 HiDes device

Index ..... 0
Name ..... "IT9507 TX Filter"
Device ..... \?\usb#vid_048d&pid_9507#ut100cv4201504240422#{fbf6f530-07b9-11d2-a71e-0000f8004788}\{9963cc0e-ee70-11e0-ba8f-92d34824019b}
USB mode .... 0x0200
Vendor id .... 0x048D
Product id .... 0x9507
Chip type .... 0x9507
Device type .... 11
```



```
Driver version .. 21.17.39.1
Link firmware ... 255.39.2.0
OFDM firmware ... 255.9.11.0
```

The option --gain-range is used to display the adjustable gain range for a given frequency and a given bandwidth. Sample usage on Windows, using the default values for frequency and bandwidth:

```
C:\> tshides --gain-range
Device: 0: "IT9507 TX Filter"
Frequency: 474,000,000 Hz
Bandwidth: 8-MHz
Min. gain: -52 dB
Max. gain: 6 dB
>
```

Using tshides on Linux with the same HiDes device. Notice the naming difference.

```
$ tshides
0: "usb-it950x0" (/dev/usb-it950x0)
$ tshides -v
Found 1 HiDes device
Index ..... 0
Name ..... "usb-it950x0"
Device ......... /dev/usb-it950x0
Chip type ..... 0x9507
Device type ..... 11
Driver version .. v16.11.10.1
API version ..... 1.3.20160929.0
Link firmware ... 255.39.2.0
OFDM firmware ... 255.9.11.0
Company ..... ITEtech
Hardware info ... Eagle DVBT
$
```

# 5.1.7 tsswitch examples

The following diagram illustrates a sample usage of the *tsswitch* command:



Figure 3: Sample input switching configuration

In the example above, four inputs are used. Each input contains an SPTS (single-program transport stream).

Two of these inputs are network streams already containing an SPTS. They can be directly received by an input plugin in *tsswitch* (the plugin *ip* is used to receive an UDP/IP multicast stream and the plugin *http* is used to receive an HTTP unicast stream).

Version 3.22-1926 289 / 395



The two other inputs are taken from broadcast transport streams which contain multiple services. The target service must be extracted before input to *tsswitch*. To achieve that, we run two *tsp* commands which extract the target services and we inject the output into an input of *tsswitch*.

The complete command skeleton is the following:

In this command, the remote control will send commands to UDP port 4444. For instance:

```
$ echo >/dev/udp/127.0.0.1/4444 2
$ echo >/dev/udp/127.0.0.1/4444 0
$ echo >/dev/udp/127.0.0.1/4444 next
$ echo >/dev/udp/127.0.0.1/4444 prev
```

# 5.2 TSP Examples

This section demonstrates the usage of the transport stream processor on some typical examples. Refer to the documentation of each specific plugin for more details.

# 5.2.1 Capturing a TS from an external source

The following example captures 20 seconds of the satellite transponder containing the Canal+ service and saves it into a file. We assume that we have a DVB-S adapter and a dish which is pointed to the Astra satellite.

```
tsp -I dvb --channel canal+ \
   -P until --seconds 20 \
   -0 file ts_capture.ts
```

Same example, using specific tuning information for the satellite transponder (carrier 11.856 GHz, vertical polarity, 27.5 mega-symbols / second):

```
tsp -I dvb --frequency 11,856,000,000 --polarity vertical --symbol-rate 27,500,000 \
    -P until --seconds 20 \
    -0 file ts_capture.ts
```

Same example using short names for options, knowing that the default polarity is vertical:

```
tsp -I dvb -f 11856000000 -s 27500000 -P until -s 20 -O file ts_capture.ts
```

#### 5.2.2 Routing a TS between several physical transports

The following example reads the same satellite transponder and redirects its content to the first Dektec DVB-ASI output device. The output bitrate of the ASI stream is locked to the input bitrate (from the satellite transponder).

```
tsp -I dvb -t 11856:v:0:27500 -O dektec
```

#### **5.2.3 Using IP multicast**

The following example reads a transport stream from the second Dektec DVB-ASI input device ("device 1"), extracts the service named "Arte", with French audio track only (identified as "fra" in the PMT) and broadcasts the resulting SPTS on the LAN using multicast IP (port 1000 on multicast address 224.10.11.12).

```
tsp -I dektec -d 1 \
    -P zap arte -a fra \
    -0 ip 224.10.11.12:1000
```

Then, the service Arte can be received from any workstation on the LAN using, for instance, the free VLC media player.



As an alternative to VLC, the Linux receivers may use the following example to view the channel using the standard Linux media player:

```
tsp -I ip 224.10.11.12:1000 | mplayer -
```

# 5.2.4 Regulating the output speed

The following example reads a captured transport stream file, extracts the service Arte and broadcasts it on the LAN.

```
tsp -I file -i ts_capture.ts \
    -P zap arte \
    -P pcrbitrate \
    -P regulate \
    -0 ip 224.10.11.12:1000
```

Since reading a file can be extremely fast, it is not reasonable to broadcast the TS packets without regulation. If the receivers wish to play the TV program, the TS packets arrive too fast. The *pcrbitrate* plugin re-computes the expected TS bitrate after extraction of the selected service. Then, the *regulate* plugin introduces wait periods to slow down the stream to the previously computed bitrate.

On the contrary, when the input source is a live transponder, this kind of regulation may be useless since the input source is already regulated at the appropriate speed.

Unfortunately, this is not completely true in all cases. The *average* bitrate is regulated by the source (the live transponder) but there is a potential burst problem. If the broadcaster system and all receivers use the same type in connection to the LAN (100 Mb/s for instance) and if the LAN backbone does not slow down the bandwidth, this is fine. However, there is a problem if the broadcaster has a faster connection to the LAN than the receivers (say 100 Mb/s vs. 10 Mb/s). Of course, 10 Mb/s is enough to receive one service which usually needs around 4 Mb/s. However, there is a potential burst problem.

To avoid burst in case of non-homogeneous access speed to the LAN, the broadcaster should smooth the flow at all stages, as illustrated in the following command

```
tsp --max-input-packets 128 \
   -I dvb -c arte \
   -P zap arte \
   -P pcrbitrate --min-pcr 256 \
   -P regulate --packet-burst 128 \
   -0 ip 224.10.11.12:1000 --packet-burst 128
```

### 5.2.5 Scheduling the recording of a program

The following example records the contents of the channel named "France 2" between 17:15 and 17:30 the  $6^{th}$  of July 2006.

```
tsp -I dvb -c france2 \
   -P time -d "" -p "2006/07/06:17:15:00" -s "2006/07/06:17:30:00" \
   -P zap france2 \
   -O file program.ts
```

The -I option selects the first DVB input device, tuning on the transponder containing the channel named "France 2".

The first -P option specifies to:

- Initially drop packets (-d "")
- Start passing packets at 17:15 the 6<sup>th</sup> of July 2006.
- Stop packet processing (and make tsp terminate) at 17:30 the 6<sup>th</sup> of July 2006.

The second -P option extracts only the service named "France 2" and the -O option finally saves the resulting SPTS in the file program.ts.

#### **5.2.6** Extracting selected packets

The following silly example dumps the content of the  $20^{th}$  TS packet with the *payload unit start indicator* set in PID 0x0208:

Version 3.22-1926 291 / 395



```
tsp -I file /data1/mpeg/test/frtv_tnt.mpg \
    -P filter --pid 0x208 \
    -P filter --unit-start \
    -P skip 19 \
    -P until --packets 1 | \
    tsdumn
```

Note that the *filter* plugin selects packets matching any of the specified conditions (an "or" selection). Here, to select packets matching two conditions (an "and" selection), we chain two *filter* plugins.

# 5.2.7 Monitoring selected MPEG tables (here, EMM's)

The following example demonstrates how to monitor the EMM's for a given operator. The first command determines on which PID are sent the EMMs. This command analyzes the satellite transponder which carries the channel Canal+ during 2 seconds. Instead of the full human-readable analysis report, we ask for a "normalized" output format and we filter the conditions we need: a line starting with "pid:" for description of a PID, ":emm:" for a PID carrying EMM's, ":cas=256:" to filter EMM's for CA System Id 256 (0x100, ie. MediaGuard).

```
tsp -I dvb -c canal+ \
   -P until -s 2 \
   -P analyze --normalized \
   -O drop | \
   grep ^pid: | grep :emm: | grep :cas=256:
```

The output of this command is:

```
pid:pid=193:emm:cas=256:access=clear: [...]
pid:pid=196:emm:cas=256:operator=129:access=clear: [...]
```

We now know that PID 193 carries the MediaGuard individual EMM's and PID 196 carries the MediaGuard group EMM's for operator 129 (OPI of Canal+).

The second command, below, filters the contents of those two PID's and formats the contents of the MPEG tables that are carried in those PID's:

```
tsp -I dvb -c canal+ -P filter -p 193 -p 196 | tstables | less
```

Of course, since EMM's are ciphered, their contents are obscure to the user and the display looks like:

```
* EMM (0x82), TID 130 (0x82), PID 193 (0x00C1)
  Version: 0, sections: 1, total size: 117 bytes
  - Section 0:
    0000: 00 00 09 F3 87 00 00 80 00 B0 10 01 5E E7 07 85
                                                               ...ó.....°..^ç..
    0010: 22 C3 DB 13 75 43 3B 5C 1E 08 DC 4A 05 35 AD 54
                                                              "ÃÛ.uC;\..ÜJ.5-T
    0020: B5 52 35 B1 61 FB 37 BB EC 6D 55 F5 21 B6 4C 58 μR5±aû7»ìmUõ!¶LX
    0030: 80 F4 FA FB D9 C5 D0 A2 C7 22 BA 77 51 B9 C8 96 0040: A3 79 9E 5A 24 74 2A 01 7D 00 62 A3 EC D4 AF DF
                                                               .ôúûÙÅĐ¢Ç"ºwQ¹È.
                                                               fy.Z$t*.}.bfìÔ¯ß
    0050: F2 43 B1 3A 72 B5 B3 E0 C9 22 68 2D 50 F0 FE 82 δC±:rμ³àÉ"h-Pðþ.
    0060: 47 1F AC 95 5F D2 59 E6 C8 C6 78 BE F3 C5 A9 CF G.-._ÒYæÈÆx¾óÅ®Ï
    0070: 05 90
* EMM (0x82), TID 130 (0x82), PID 193 (0x00C1)
  Version: 0, sections: 1, total size: 105 bytes
  - Section 0:
    0000: 00 00 F1 F2 F3 F4 00 00 00 B0 10 01 98 3E EF 81 ..ñòóô...°...>ï.
    0010: 45 E1 A1 D3 76 B9 B0 21 D6 F9 5F AB 4B 07 9D 13 Eá¡Óv¹º!Öù «K...
```

## 5.2.8 Scanning all services by CAS operator

The following complex example scans a complete satellite network, looking for the list of services which are scrambled for an operator.

We assume that we have a DVB-S adapter and a dish which is pointed to the Astra satellite.

The first command scans the NIT (Network Information Table) of a known transponder. The output is the list of all transponders in the network. This list is sorted and duplicate lines are removed ("sort -u").



Then, each transponder is analyzed during 3 seconds ("-P until -s 3") and the result of the analysis in normalized format is saved in a temporary file. From this analysis file, we extract the PID's carrying ECM's with CA system id 256 (MediaGuard) and MediaGuard OPI 128 (CanalSat). For each ECM PID, we extract the list of services this PID belongs to.

Thus, for each transponder, we get a list of services (actually, a list of *service ids*) which are scrambled for the CanalSat MediaGuard operator. Finally, we use again the transponder analysis in normalized format to get the service name for each of these service id.

```
inittune='-f 1185600000'
                           # Initial transponder to scan the NIT
cas=256
                           # MediaGuard CA system id
                           # MediaGuard OPI for CanalSat
opi=128
tsp -I dvb $inittune -P nitscan -t -O drop | \
sort -u | \
while read tune; do
   tsp -I dvb -t $tune \
        -P until -s 3 \
        -P analyze --normalized -o tmp.tmp \
        -0 drop
    grep "^pid:" tmp.tmp | \
    grep ":ecm:" | \
    grep ":cas=$cas:" | \
    grep ":operator=$opi:" | \
    sed -e 's/^.*:servlist=//' -e 's/:.*$//' -e 's/,/\n/' | \
    while read serv; do
        grep "^service:" tmp.tmp | \
        grep ":id=$serv:" | \
        sed -e "s/^.*:name=/Transponder: $tune Service: /"
    done
    rm -f tmp.tmp
done
```

The output of this script gives the following output (107 lines):

```
Transponder: 11739:v:0:27500 Service: MTV F
Transponder: 11739:v:0:27500 Service: MTV HITS.
Transponder: 11739:v:0:27500 Service: MTV Base.
...
Transponder: 12640:v:0:22000 Service: TOON DISNEY
Transponder: 12640:v:0:22000 Service: MOTORS TV
Transponder: 12640:v:0:22000 Service: E! ENTERTAINMENT
```

#### 5.2.9 On-the-fly replacement of an SI table

The following example tests an updated version of a *Bouquet Association Table* (BAT) on a live transport stream.

We assume to have a DVB-T tuner card to capture live streams and a Dektec DTA-110T DVB-T modulator (PCI card) to send the modified stream into a local distribution network (or even to one single directly-connected STB).

We capture one transport stream (the "R4" from the French DTTV network, on UHF channel 24). We remove the BAT of the *Tv Numéric* operator and we replace it with a new one, the table we wish to test. The new table is stored in binary section format into a file named BAT\_TvNumeric\_V3.si.

First, we capture all tables from the PID 0x0011 (the one which carries the SDT's and the BAT's).

```
rm -f r4_p0011_*.si # remove previous files if any
tsp -I dvb --uhf 24 -P until -s 10 -P filter -p 0x011 | tstables -m -b r4.si
rm -f r4_p0011_t4A_e0086_*.si # remove current Tv Numeric BAT
```

These commands capture and save all tables (SDT's and BAT's) in binary files named r4\_p0011\_\*.psi during 10 seconds. Each section is stored in a separate file (option -m in *tstables*). The current TV Numeric BAT is removed. Note the file name r4\_p0011\_t4A\_e0086\_\*.si which means all sections from PID 0x0011 with TID 0x4A (BAT) and TID extension 0x0086 (bouquet identifier for operator TV Numeric).

Version 3.22-1926 293 / 395



The following command now performs the live replacement. The *inject* plugin is used to replace the content of PID 0x0011 with the sections in all the specified files. These files are all the previously captured sections from this PID (minus the previous BAT which was deleted) and the new BAT.

```
tsp -I dvb -u 24 \
    -P inject --replace 0x0011 r4_p0011_*.si BAT_TvNumeric_V3.si \
    -0 dektec -u 24 --convolution 2/3 --guard 1/32
```

# 5.2.10 Performing the global analysis of a transponder

The following command receives a DVB-T transport stream from UHF channel 35 during 100 seconds and produces an analysis report in the text file *R1.analysis*. The first 5000 packets are ignored since the signal may not be quite stable right after the tuning operation.

```
tsp -I dvb --uhf-channel 35 \
   -P skip 5000 \
   -P until -s 100 \
   -P analyze --title "R1 (Channel 35)" -o R1.analysis \
   -O drop
```

The report file is quite large:

```
______
 TRANSPORT STREAM ANALYSIS REPORT
 ______

      Transport Stream Id:
      1 (0x0001)
      PID's: Total:
      35

      Bytes:
      317,825,468
      Clear:
      35

      TS packets:
      1,690,561
      Scrambled:
      0

      Invalid TS packets:
      0
      With PCR's:
      6

      Services:
      7
      Unreferenced:
      0

  Transport stream bitrate, based on ...... 188 bytes/pkt 204 bytes/pkt
  User-specified: ...... 24,882,352 b/s 26,999,998 b/s
  Estimated based on PCR's: ...... 24,882,351 b/s 26,999,998 b/s
  Broadcast time: ...... 102 sec (1 mn 42 sec)
  First TDT time stamp: ...... 2008/06/11 09:34:25
  TOT country code: ..... FRA
      ______
 Serv.Id Service Name
                                             Access
                                                           Bitrate
                                                    3,637,078 b/s

      0x0101
      France 2
      C

      0x0104
      France 5
      C

      0x0105
      ARTE
      C

      0x0106
      LCP
      C

                                                      4,567,443 b/s
                                                      3,688,018 b/s
                                                      3,554,581 b/s
  0x0111 France 3 ...... C 4,828,238 b/s
  0x0176 .France Ô ...... C
                                                      3,286,441 b/s
  0x01FF (System Software Update) ...... C
                                                         35,015 b/s
  Note 1: C=Clear, S=Scrambled
  Note 2: Unless explicitely specified otherwise, all bitrates are based on
  188 bytes per packet.
______
```

```
R1 (Channel 35)
SERVICES ANALYSIS REPORT
______
Global PID's
TS packets: 87,342, PID's: 7 (clear: 7, scrambled: 0)
  ______
 PID Usage
                         Bitrate
 15,027 b/s
0x0000 PAT ..... C
                          4,503 b/s
0x0010 DVB-NIT ..... C
0x0011 SDT/BAT ..... C
                           750 b/s
0x0012 EIT ..... C 37,075 b/s
```



```
        0x0014
        TDT/TOT
        C
        132 b/s

        0x0015
        Network Synchronization
        C
        2,737 b/s

                                                     132 b/s
 0x1FFF Stuffing ...... C 1,225,306 b/s
______
 Service: 257 (0x0101), TS: 1 (0x0001), Original Netw: 8442 (0x20FA)
  Service name: France 2, provider: GR1
  Service type: 1 (0x01), Digital television service
  TS packets: 247,111, PID's: 4 (clear: 4, scrambled: 0)
 PMT PID: 110 (0x006E), PCR PID: 120 (0x0078)
Access Bitrate
    PID Usage
  Total Digital television service ............ C 3,637,078 b/s

        0x006E
        PMT
        C
        15,042 b/s

        0x0078
        MPEG-2 Video
        C
        3,404,836 b/s

 (C=Clear, S=Scrambled, +=Shared)
|-----|
| Service: 260 (0x0104), TS: 1 (0x0001), Original Netw: 8442 (0x20FA)
```

... more services skipped ...

... more PID's skipped ...

```
| PID: 8191 (0x1FFF) | Stuffing |
```

Version 3.22-1926 295 / 395



# 5.2.11 Performing the global analysis of a network

This section presents an automated way to analyze a network (here, the French terrestrial network) using a GNU makefile.

Using the simple command "make", each known transport stream (designated by its UHF channel number) is analyzed. For each TS, for instance the one named R1, the following text files are created:

- R1.analysis: Global analysis of the TS in human-readable format, as in 5.2.10.
- R1.anl: Global analysis of the TS in normalized format, for use by other scripts.
- R1.psi: Analysis of the main PSI/SI tables (PAT, CAT, PMT, SDT, NIT, BAT).

Individual targets, such as "make R1" can be used to analyze only one TS. Use the make option -B to force the analysis again when the files already exist.

The command "make capture" captures 120 seconds of each TS in files named R1.ts, R2.ts, etc. Similarly, commands like "make R1.ts" capture only one TS.

The content of the makefile follows:

```
# === This is a GNU makefile ===
# List of UHF channels:
ALL CHAN = R1 R2 R3 R4 R5 R6 L8
R1_CHAN = 35
R2_CHAN = 21
R3_CHAN = 27
R4_CHAN = 24
R5_CHAN = 29
R6 CHAN = 32
L8\_CHAN = 23
# Channel full names:
$(foreach R,$(ALL_CHAN),$(eval $R_NAME=$R (Channel $($R_CHAN))))
# Default target is analysis of all TS
all: $(ALL CHAN)
$(ALL CHAN): %: %.analysis %.anl %.psi
%.analysis %.services %.anl %.psi:
    tsp -I dvb $(DEVICE) --uhf $($(*F)_CHAN) \
        -P skip 5000 \
        -P until -s 100 \
        -P analyze --title "$($(*F) NAME)" -o $*.analysis \
        -P analyze --title "$($(*F) NAME)" -o $*.anl --normalized \
        -P psi -a -o $*.psi \
        -O drop
# Capture TS content:
capture: $(foreach R,$(ALL_CHAN),$R.ts)
%.ts:
    tsp -I dvb (DEVICE) --uhf ((*F)_CHAN)
        -P skip 5000 \
        -P until -s 120 \
        -O file $@
```



# 5.2.12 Monitoring the stuffing rate of all transponders in a network

The following script monitors the stuffing bitrate of a list of selected transport streams. The output is suitable for importation into Excel so that further analysis can be performed. It can be executed on Linux or Windows (using the Cygwin shell).

In this script, the transport streams are designated by a list of UHF channels, meaning DVB-T only. Here, the UHF channels represent the 5 main MUX of the French DTTV in the Paris area.

```
# List of UHF channels
  UHF_CHANNELS="35 21 27 24 32"
  # Analysis time per TS, in seconds
  ANALYSIS TIME=20
  # Sample interval, in seconds
  SAMPLE INTERVAL=300
  # Excel separator character for "csv" files (depends on Excel locale)
  EXCEL_SEPARATOR=';'
  # Main loop
  while true; do
      # Current date in seconds since epoch
      curtime=$(date "+%s")
      # Loop on all TS
      outline=
      for uhf in $UHF CHANNELS; do
           stuffing=$(
               tsp -I dvb --uhf-channel $uhf \
                   -P until -s $ANALYSIS_TIME \
                   -P analyze --normalized \
                   -0 drop | \
                   grep '^pid:' | \
                   grep ':pid=8191:' | \
                   sed -e 's/^.*:bitrate=//' -e 's/:.*//')
           outline="${outline}${EXCEL_SEPARATOR}${stuffing}"
      done
      # Current date and stuffing rates in Excel format
      echo "$(date -d @$curtime '+%d/%m/%Y %H:%M')${outline}"
      # Sleep until next sample time
      sleeptime=$(( $curtime + $SAMPLE_INTERVAL - $(date "+%s") ))
       [[ $sleeptime -le 0 ]] || sleep $sleeptime
  done
The script runs infinitely and produces the following output:
  12/06/2008 14:01;1208706;4501497;3762828;626932;1145037
  12/06/2008 14:06;1232543;4505620;3782431;621524;1172479
  12/06/2008 14:11;1225293;4505553;3487315;613616;1151119
  12/06/2008 14:16;1231288;4505958;3415868;665393;1156933
```

It may be imported into Microsoft Excel to produce the following graph:

Version 3.22-1926 297 / 395



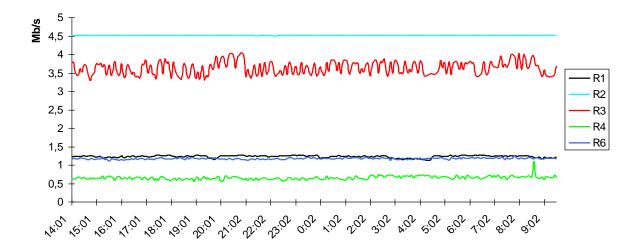


Figure 4: Stuffing bitrate sample diagram

# 5.2.13 Analyzing the bitrate of all services in a network

The following script demonstrates a way to produce a report of the bitrate of all services in a network. First, you need to analyze all TS in the network and get the result in *normalized format* (see 5.2.11 for an example). Then run the following script on all normalized analysis files.

```
echo "MUX Service
                                                 Video bitrate Access"
                                      Bitrate
echo "---
for f in $*; do
    tsid=$(grep '^ts:' $f | sed -e 's/.*:id=//' -e 's/:.*//')
    grep '^service:' $f | grep ':servtype=1:' | \
    while read line; do
        name=$(sed <<<"$line" -e 's/.*:name=//')</pre>
        bitrate=$(sed <<<"$line" -e 's/.*:bitrate=//' -e 's/:.*//')
        access=$(sed <<<"$line" -e 's/.*:access=//' -e 's/:.*//')
        pidgrep=$(sed <<<"$line" -e 's/.*:pidlist=//' -e 's/:.*//' \</pre>
                                 -e 's/^/-e :pid=/' \
                                 -e 's/,/: -e :pid=/g' -e 's/$/:/')
        vbitrate=0
        for br in $(grep '^pid:' $f | grep $pidgrep | grep ':video:' | \
                    sed -e 's/.*:bitrate=//' -e 's/:.*//')
            vbitrate=$(( $vbitrate + $br ))
        done
        printf "R%d
                      %-18s %'10d b/s %'10d b/s %s\n" \
            $tsid "$name" $bitrate $vbitrate $access
    done
```

When used in conjunction with the makefile from 5.2.11, you get:

```
make -f Makefile.tnt
bitrate-summary *.anl
MUX Service
                                         Video bitrate Access
                                Bitrate
R8
    Canal 21
                          2,803,938 b/s
                                         2,588,374 b/s
                                                        clear
R8
    IDF1
                          3,502,350 b/s
                                          3,254,550 b/s
R8
    NRJ Paris
                          6,462,333 b/s
                                          6,214,518 b/s
                                                         clear
                          2,929,000 b/s
R8
    CAP 24
                                          2,681,200 b/s
                                                         clear
R1
     France 2
                          3,655,962 b/s
                                          3,419,466 b/s
                                                         clear
R1
    France 5
                          4,600,309 b/s
                                          4,379,003 b/s
                                                         clear
                          5,052,002 b/s
R1
    ARTE
                                          4,627,464 b/s clear
R1
     LCP
                          2,867,453 b/s
                                          2,649,782 b/s clear
```



```
3,293,801 b/s clear
R1
     France 3
                         3,510,985 b/s
                                        3,643,981 b/s clear
R1
     .France Ô
                        3,857,456 b/s
R2
    Direct 8
                        2,740,873 b/s
                                        2,432,179 b/s clear
R2
    BFM TV
                        3,120,068 b/s
                                       2,913,715 b/s clear
                        2,699,497 b/s
                                       2,493,143 b/s clear
R2
    i>TELE
                                        4,676,283 b/s clear
                        4,947,397 b/s
R2
    Virgin 17
R2
    Gulli
                         3,280,344 b/s
                                        3,036,397 b/s clear
R2
    France 4
                         2,748,753 b/s
                                         2,477,639 b/s clear
                                        7,477,442 b/s scrambled
R3
    CANAL+
                        8,369,816 b/s
                                        2,531,416 b/s scrambled
R3
    CANAL+ CINEMA
                        2,975,779 b/s
R3
    CANAL+ SPORT
                        2,930,938 b/s 2,493,595 b/s scrambled
R3
    PLANETE
                        2,340,974 b/s 2,095,053 b/s scrambled
                        2,609,858 b/s 2,371,848 b/s scrambled
R3
    CANAL J
    TPS STAR
                        3,203,408 b/s
                                       2,779,778 b/s scrambled
R3
R4
    M6
                        4,628,819 b/s
                                        3,834,868 b/s clear
R4
    W9
                         3,231,344 b/s
                                        2,694,826 b/s clear
                                        2,887,844 b/s clear
R4
    NT1
                         3,278,883 b/s
    PARIS PREMIERE
                                        3,404,277 b/s scrambled
R4
                        4,009,594 b/s
R4
    ARTE HD
                         7,725,247 b/s
                                        7,171,310 b/s clear
R5
    TF1 HD
                         9,032,166 b/s
                                        8,635,108 b/s clear
R5
    France 2 HD
                        7,593,045 b/s
                                        7,080,227 b/s clear
R5
    M6HD
                         7,301,165 b/s
                                        6,714,945 b/s clear
R6
    TF1
                        5,022,465 b/s
                                        3,951,056 b/s clear
                         6,883,049 b/s
R6
    NRJ12
                                        6,026,657 b/s
                                                       clear
R6
    LCI
                         1,379,288 b/s
                                        1,224,422 b/s scrambled
R6
                         3,535,155 b/s
                                        3,380,304 b/s scrambled
    Eurosport
                         1,701,739 b/s
R6
    TF6
                                        1,543,181 b/s scrambled
     TMC
                         4,103,693 b/s
                                       3,890,212 b/s clear
R6
```

# 5.2.14 Analyzing the number of PCR per second

It is sometimes useful to get a complete overview of the number of PCR per second in each service of a network. The following script illustrates this. First, you need to analyze all TS in the network and get the result in *normalized format* (see 5.2.11 for an example). Then run the following script on all normalized analysis files.

```
for file in $*; do
    sec=$(grep '^ts:' $file | grep ':duration=' | \
          sed -e 's/.*:duration=//' -e 's/:.*//')
    if [[ "$sec" -gt 1 ]]; then
        grep '^service:' $file | grep ':pcrpid=' | grep ':name=' |
        while read line; do
            pid=$(sed <<<$line -e 's/.*:pcrpid=//' -e 's/:.*//')</pre>
            name=$(sed <<<$line -e 's/.*:name=//')
            count=$(grep '^pid:' $file | grep ":pid=$pid:" | grep ':pcr=' | \
                    sed -e 's/.*:pcr=//' -e 's/:.*//')
            if [[ "$count" -ne 0 ]]; then
                printf "%4d PCR/s - %s\n" \
                       $((($count + ($sec / 2)) / $sec)) "$name"
            fi
        done
    fi
done | sort
```

When used in conjunction with the makefile from 5.2.11, you get:

```
make -f Makefile.tnt
...

pcrrate *.anl
29 PCR/s - France 2 HD
29 PCR/s - TF1 HD
30 PCR/s - ARTE
30 PCR/s - ARTE HD
30 PCR/s - BFM TV
30 PCR/s - Canal 21
30 PCR/s - CAP 24
```

Version 3.22-1926 299 / 395



```
30 PCR/s - Direct 8
30 PCR/s - France 2
30 PCR/s - France 3
30 PCR/s - France 4
30 PCR/s - France 5
30 PCR/s - .France Ô
30 PCR/s - Gulli
30 PCR/s - IDF1
30 PCR/s - i>TELE
30 PCR/s - LCP
30 PCR/s - M6
30 PCR/s - M6HD
30 PCR/s - NRJ12
30 PCR/s - NRJ Paris
30 PCR/s - NT1
30 PCR/s - Virgin 17
30 PCR/s - W9
31 PCR/s - CANAL+
31 PCR/s - TF1
31 PCR/s - TMC
50 PCR/s - CANAL+ CINEMA
50 PCR/s - CANAL J
50 PCR/s - CANAL+ SPORT
50 PCR/s - Eurosport
50 PCR/s - LCI
50 PCR/s - PARIS PREMIERE
50 PCR/s - PLANETE
50 PCR/s - TF6
50 PCR/s - TPS STAR
```

# 5.2.15 Injecting a System Software Update (SSU) service into a transport stream

This example illustrates how to inject a new System Software Update (SSU) service into a transport stream as defined in [8]. This type of procedure can be used to test the SSU capabilities of a Set Top Box in real conditions, using a live transport stream.

The test is the following:

- A DVB-T transport stream is received on UHF channel 24.
- This transport stream has at least 56 kb/s of stuffing packets (much more actually). Our *tsp* command steals 56 kb/s of stuffing and replaces them with a new service (16 kb/s for the new service's PMT and 40 kb/s for the SSU data PID).
- The STB software provider delivers three types of SSU tables: a DSI, a DII and a lot of DDB's. The
  tables are provided as binary files containing the sections. There is one file dsi.bin containing the
  DSI section, one file dii.bin containing the DII section and one file ddb.bin containing all DDB
  sections.
- These tables are multiplexed in the same SSU data PID but have different repetition rates constraints. Here, we use 14 seconds for the DSI and 60 seconds for the DII. The DDB use the rest of the available bitrate in the SSU data PID.
- After analysis of the transport stream, the new SSU service will use the service id 0x04F0 and PID values 0x1F00 (SSU data) and 0x1F01 (PMT). These values are chosen since they are not used in the original transport stream.
- The resulting transport stream with the added SSU service in sent to an embedded Dektec OFDM modulator on the same frequency as the original service. The output of the modulator can be directly connected to a STB.

The PMT of the service is defined as follow in file pmt.xml:



In this example, the specified OUI value and selector bytes are those which are used by Logiways SSU on Skardin-based STB.

The binary version of the PMT is generated in file pmt.bin by the table compiler:

```
tstabcomp pmt.xml
```

The files pmt.bin, dsi.bin, dii.bin and ddb.bin are injected in the transport stream using the following command:

```
tsp -I dvb -u 24 \
    -P pat -v 31 -a 0x04F0/0x1F01 \
    -P inject -b 16000 -p 0x1F01 -s pmt.bin \
    -P inject -b 40000 -p 0x1F00 -s dsi.bin=14000 dii.bin=60000 ddb.bin \
    -O dektec -u 24 --convolution 2/3 --guard 1/32
```

Notes: We have previously checked in the TS that the PAT version was not 31. By assigning the new version 31 to the PAT, we state that the content of the PAT has changed. Thus, the STB will analyze it again and will discover the new service.

In the case were the transport stream does not initially contain enough stuffing to inject the SSU service, it is possible to remove a service and replace it with stuffing. In the following command, the service named AB1 is first replaced by stuffing, representing a stuffing increase of 4 Mb/s.

```
tsp -I dvb -u 24 \
    -P svremove -s AB1 \
    -P pat -v 31 -a 0x04F0/0x1F01 \
    -P inject -b 16000 -p 0x1F01 -s pmt.bin \
    -P inject -b 40000 -p 0x1F00 -s dsi.bin=14000 dii.bin=60000 ddb.bin \
    -0 dektec -u 24 --convolution 2/3 --guard 1/32
```

#### 5.2.16 Analyzing EPG data

This example illustrates how to analyze EIT sections and report which service supports EPG data (EIT schedule) and for how many days. The command analyzes the content of UHF channel 27 (DVB-T) during 30 seconds and reports a summary of EIT analysis.

```
$ tsp -I dvb -u 27 -P until -s 30 -P eit -O drop
Summary
-----
TS id:
TS id: 3 (0x0003)
Last UTC: 2008/08/13 14:19:28
EITp/f actual: 186
EITp/f other: 435
EITs actual: 461
EITs other: 0
    Services With EITp/f With EITs EPG days
Actual 8 6 6 3 Other 66 66 0 0
A/O TS Id Srv Id Name
                           EITp/f EITs EPG days
Oth 0x0001 0x0101
                                Yes
                                       No
Oth 0x0001 0x0104
                                Yes
                                       No
                                                  0
                           Yes No
Yes No
Yes No
Yes No
Oth 0x0001 0x0105
Oth 0x0001 0x0106
                                              0
Oth 0x0001 0x0110
```

Version 3.22-1926 301 / 395



Oth	0x0001	0x0111		Yes	No	0
0th	0x0001	0x0112		Yes	No	0
0th	0x0001	0x0112		Yes	No	0
0th	0x0001	0x0113		Yes	No	0
0th	0x0001	0x0114 0x0115			No	0
				Yes		
0th	0x0001	0x0116		Yes	No	0
0th	0x0001	0x0117		Yes	No	0
0th	0x0001	0x0118		Yes	No	0
Oth	0x0001	0x0119		Yes	No	0
0th	0x0001	0x011A		Yes	No	0
0th	0x0001	0x011B		Yes	No	0
0th	0x0001	0x011C		Yes	No	0
Oth	0x0001	0x011D		Yes	No	0
0th	0x0001	0x011E		Yes	No	0
0th	0x0001	0x011F		Yes	No	0
Oth	0x0001	0x0120		Yes	No	0
0th	0x0001	0x0121		Yes	No	0
0th	0x0001	0x0122		Yes	No	0
0th	0x0001	0x0122		Yes	No	0
0th	0x0001	0x0123		Yes	No	0
Oth	0x0001	0x0125		Yes	No	0
0th	0x0001	0x0126		Yes	No	0
0th	0x0001	0x0127		Yes	No	0
Oth	0x0001	0x0128		Yes	No	0
Oth	0x0001	0x0129		Yes	No	0
0th	0x0001	0x012A		Yes	No	0
Oth	0x0001	0x012B		Yes	No	0
0th	0x0001	0x012C		Yes	No	0
0th	0x0001	0x012D		Yes	No	0
0th	0x0001	0x012E		Yes	No	0
0th	0x0001	0x012F		Yes	No	0
0th	0x0001	0x0130		Yes	No	0
0th	0x0001	0x0131		Yes	No	0
0th	0x0001	0x0131		Yes	No	0
0th	0x0001	0x0132		Yes	No	0
0th	0x0001	0x0133			No	
		0x0134 0x0135		Yes		0
Oth	0x0001			Yes	No	0
0th	0x0001	0x0136		Yes	No	0
0th	0x0001	0x0137		Yes	No	0
Oth	0x0001	0x0138		Yes	No	0
Oth	0x0001	0x0139		Yes	No	0
0th	0x0001	0x013A		Yes	No	0
0th	0x0001	0x013B		Yes	No	0
Oth	0x0001	0x0176		Yes	No	0
0th	0x0002	0x0201		Yes	No	0
Oth	0x0002	0x0203		Yes	No	0
0th	0x0002	0x0204		Yes	No	0
0th	0x0002	0x0205		Yes	No	0
Oth	0x0002	0x0206		Yes	No	0
0th	0x0002	0x0207		Yes	No	0
Act	0x0003	0x0301	CANAL+	Yes	Yes	3
Act	0x0003	0x0301	CANAL+ CINEMA	Yes	Yes	3
Act	0x0003	0x0302	CANAL+ SPORT			3
				Yes	Yes	3
Act	0x0003	0x0304	PLANETE	Yes	Yes	2
Act	0x0003	0x0305	CANAL J	Yes	Yes	3
Act	0x0003	0x0306	TPS STAR	Yes	Yes	3
Act	0x0003	0x03F0		No	No	0
Act	0x0003	0x03F1		No	No	0
0th	0x0004	0x0401		Yes	No	0
0th	0x0004	0x0402		Yes	No	0
Oth	0x0004	0x0403		Yes	No	0
		0x0404		Yes	No	0
0th	0x0004	0710.0.				
Oth Oth	0x0004 0x0004	0x0405		Yes	No	0
				Yes Yes	No No	0 0
0th	0x0004	0x0405				
Oth Oth	0x0004 0x0004	0x0405 0x0406		Yes	No	0



```
        Oth
        0x0006
        0x0603
        Yes
        No
        0

        Oth
        0x0006
        0x0604
        Yes
        No
        0

        Oth
        0x0006
        0x0606
        Yes
        No
        0

        $
        1
        0x0006
        0x000
```

# 5.2.17 Analyzing audio and video attributes

This example illustrates how to display the audio and video attributes from a captured transport stream file.

```
$ tsp -I file cap.ts -P pes -a -v -O drop
 PID 0x0083, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 160 kb/s, sampled at 48,000 Hz, stereo
* PID 0x014A, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 192 kb/s, sampled at 48,000 Hz, stereo
* PID 0x0085, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 64 kb/s, sampled at 48,000 Hz, single channel
* PID 0x0082, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 192 kb/s, sampled at 48,000 Hz, stereo
* PID 0x0276, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 192 kb/s, sampled at 48,000 Hz, stereo
* PID 0x01AE, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 256 kb/s, sampled at 48,000 Hz, stereo
* PID 0x00E6, stream_id 0xC0 (Audio 0), audio attributes:
 Audio layer II, 256 kb/s, sampled at 48,000 Hz, stereo
* PID 0x0078, stream_id 0xE0 (Video 0), video attributes:
 720x576i, 25 Hz, 16/9, 4:2:0
 Maximum bitrate: 15,000,000 b/s, VBV buffer size: 1,835,008 bits
* PID 0x01A4, stream_id 0xE0 (Video 0), AVC video attributes:
 720x576, AVC main profile (77), level 30
* PID 0x00DC, stream id 0xE0 (Video 0), video attributes:
 720x576i, 25 Hz, 16/9, 4:2:0
 Maximum bitrate: 15,000,000 b/s, VBV buffer size: 1,835,008 bits
* PID 0x026C, stream_id 0xE0 (Video 0), video attributes:
 720x576i, 24 Hz, 4/3, 4:2:0
 Maximum bitrate: 15,000,000 b/s, VBV buffer size: 1,835,008 bits
* PID 0x0140, stream_id 0xE0 (Video 0), AVC video attributes:
  704x576, AVC main profile (77), level 30
```

#### 5.2.18 Conditional Access System scrambling and ECM functional tests

The following command receives a DVB-T live stream on UHF channel 21 and remodulates it on the same frequency using a Dektec modulator. In the middle, the service named BFM TV is scrambled. An external ECMG is used (host name ecmg1 on TCP port 10000). The crypto-periods are scheduled using the default duration of 10 seconds. A new control word is generated for each crypto-period. The corresponding ECM's are generated using the specified ECMG (Super\_CAS\_Id and access criteria specified by options -s and -a) and inserted in the TS. The PMT of the service is modified to include a CA\_descriptor. The private part of this descriptor is specified using option -p.

### 5.2.19 Complete Conditional Access System test bed

The following commands implements a complete Conditional Access System test bed in one single *tsp* process. It emulates all functions of a MUX system for testing a CAS.

The command uses the French DVB-T network but it can be easily adapted to any environment.

Version 3.22-1926 303 / 395



The command transforms the R2 MUX into a new R9 MUX with new services (actually renamed services from R2) and outputs the resulting TS to a modulator on a different UHF channel. In the meantime, the service named "Gulli Test" is scrambled using an external ECMG and EMM injection is allowed from an external EMMG.

The modulated output stream can be used alone (direct connection to STB) or mixed with the public antenna signals using a UHF coupler.

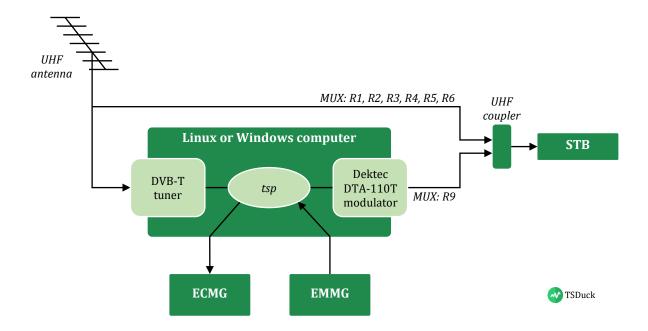


Figure 5: Conditional Access System sample test bed

For the sake of clarity of this example, all significant parameters are first assigned into environment variables, then the tsp command references these variables.

```
# Transmission parameters:
UHF INPUT=21
UHF OUTPUT=60
# EMM parameters
MUX_SERVER_PORT=32000
CAS ID=0x4ADC
EMM PID=0x01F0
EMM_MAX_BITRATE=50000
CAT_CADESC_PRIVATE=FF0001
# ECM parameters
ECMG=ecmg1:10000
SUPER_CAS_ID=0x4ADC0001
ECM_PID=0x01F1
ECM BITRATE=30000
PMT CADESC PRIVATE=FE
AC=6B0A010100000000000000006B0A010200000000000000000105000005000660400000002
# One single command implementing the CAS test bed:
tsp -v \
    -I dvb -u $UHF INPUT \
   -P tsrename -t 9 -a ∖
   -P svrename direct8 -i 0x0901 -l 41 -n "Direct 8 Test" \
                        -i 0x0903 -l 42 -n "BFM TV Test" \
    -P svrename bfmtv
    -P svrename 'i>tele' -i 0x0904 -l 43 -n "i>TELE Test" \
    -P svrename virgin17 -i 0x0905 -l 44 -n "Virgin 17 Test" \
    -P svrename gulli
                        -i 0x0906 -l 45 -n "Gulli Test" \
```



#### 5.2.20 Emulation of a Conditional Access head-end

This example is a variant of the previous one. Instead of using a real ECMG from a real Conditional Access System, we use the command *tsecmg*.

The utility *tsecmg* implements the DVB SimulCrypt ECMG  $\Leftrightarrow$  SCS protocol and behaves like a real ECMG. All ECM generation requests are accepted but, instead of generating robust ciphered proprietary ECM's, *tsecmg* returns pseudo ECM's which contain the control words and the access criteria in the clear.

The utility *tsecmg* can be used anywhere a DVB SimulCrypt ECMG can be used. Consequently, it can be used from any real MUX or from the *tsp* plugin *scrambler*. Used from a real MUX, *tsecmg* becomes a useful debugging tool. All ECMG⇔SCS messages are displayed (using option --verbose). The returned ECM's are inserted in the stream like any real ECM. Since these ECM's contain the access criteria in the clear, this is also a useful debug tool for the EIS or ACG or both.

**Important:** Note that the control words are also inserted in the clear. It is consequently obvious that *tsecmg* shall never be used on a production system, alone or in addition to any real operational CAS.

The *tsp* plugin *descrambler* is normally a static descrambler using fixed control words. But, to facilitate the prototyping of end-to-end systems, the plugin *descrambler* can also recognize the clear ECM's which are generated by *tsecmg* and use their control words to descramble the stream.

Thus, it is easy to build a complete end-to-end Conditional Access System using TSDuck components only. This kind of configuration is mainly useless in itself (except maybe as a tutorial for DVB SimulCrypt). But because all components are replaceable, this can become a very useful integration framework. First, start with a complete configuration using TSDuck components only. Verify that the system works as expected. Then, replace the TSDuck components one by one with the real components which shall be tested.

Sample configurations:

- Testing a MUX: Replace the plugin *scrambler* with the real MUX. Use *tsecmg* to generate ECM's. Use the plugin *analyze* to analyze the output of the MUX. Use the plugin *descrambler* to verify the insertion and synchronization of ECM's.
- Testing a CAS: Replace *tsecmg* with the real ECMG. Replace the plugin *descrambler* with a real set-top box. Use plugin *scrambler* to make the link between to two end-points of the CAS (ECMG and STB).

Let's have a look at a real demo.

First, run the utility *tsecmg*. Without option, it simply creates a TCP server on port 2222. The option -- verbose (or simply -v) is useful to dump all protocol exchanges.

```
tsecmg -v
* TCP server listening on 0.0.0.0:2222, using ECMG <=> SCS protocol version 2
```

Then, the following command performs a complete end-to-end CAS demo in one single process, using a live satellite stream as input:

Version 3.22-1926 305 / 395



The first plugin receives a live transport stream from a DVB-S2 satellite. In this TS, there is a clear service named "CNEWS". We are going to use this clear channel as a test.

The next plugin scrambles the service using our instance of *tsecmg* on the same system. The Super CAS Id is here a fake value (*tsecmg*, unlike a real ECMG, accepts to serve any Super CAS Id). The access criteria are also fake values.

The next plugin permanently analyzes the stream at this point in the chain and produces a report every 30 seconds in a text file named *cas\_scrambled.txt*. Looking at this text file, we can see that the service CNEWS is now scrambled and there is an ECM stream in its PMT with CA\_system\_id 0xDEAD (the MSB part of the Super CAS Id). The bitrate of the ECM stream is reported as 30 kb/s, the default ECM bitrate for the plugin *scrambler*.

The next plugin is a descrambler. Only the service name is required. The plugin automatically locates the ECM stream in the PMT (there is only one here), collects the ECM's and uses the clear control words from these fake ECM's to descramble the stream.

The next plugin performs the same periodic analysis as the previous one. This time, the report demonstrates that the service CNEWS is back in the clear.

Finally, the plugin *zap* extracts the service CNEWS and the output plugin *play* sends the output to a media player (VLC by default).

We can see that the service is in the clear and plays correctly. If we restart the command without the plugin *descrambler*, the player stays with a black screen because the service stays scrambled.

If we are interested in the DVB SimulCrypt ECMG⇔SCS protocol, the option --verbose of *tsecmg* displays all exchanges, as listed below. This can be useful to debug an ECMG⇔SCS integration.

```
* 127.0.0.1:1302: 2018/04/10 23:11:58: session started
* 127.0.0.1:1302: 2018/04/10 23:11:58: received message:
    channel setup (ECMG<=>SCS)
    protocol\_version = 0x02
    message\_type = 0x0001
    ECM channel id = 0 \times 0001
    Super CAS id = 0xDEADBEEF
* 127.0.0.1:1302: 2018/04/10 23:11:58: sending message:
    channel status (ECMG<=>SCS)
    protocol_version = 0x02
    message type = 0x0003
    ECM channel id = 0x0001
    section_TSpkt_flag = 1
    AC delay start = 200
    AC_delay_stop = 200
    delay_start = 200
    delay\_stop = 200
    transition_delay_start = -500
    transition_delay_stop = 0
    ECM_rep_period = 100
    max streams = 0
    min CP duration = 10
    lead_CW = 1
    CW_per_msg = 2
    max\_comp\_time = 100
* 127.0.0.1:1302: 2018/04/10 23:11:58: received message:
    stream setup (ECMG<=>SCS)
    protocol\_version = 0x02
    message\_type = 0x0101
    ECM channel id = 0x0001
    ECM stream id = 0 \times 0001
    ECM_id = 0x0001
    nominal_CP_duration = 100
* 127.0.0.1:1302: 2018/04/10 23:11:58: sending message:
    stream_status (ECMG<=>SCS)
```



```
protocol\_version = 0x02
  message\_type = 0x0103
  ECM channel id = 0x0001
  ECM_stream_id = 0x0001
  ECM id = 0 \times 0001
  access_criteria_transfer_mode = 0
* 127.0.0.1:1302: 2018/04/10 23:11:58: received message:
  CW provision (ECMG<=>SCS)
  protocol version = 0x02
  message type = 0x0201
  ECM channel id = 0x0001
  ECM stream id = 0x0001
  CP number = 0
  CP duration = 100
  access_criteria (5 bytes) =
     01 23 45 67 89
  CP = 0
  CW (8 bytes) = 26 E9 2C D9 C8 96 06 B2
  CP = 1
  CW (8 bytes) = 8B 37 0B 94 69 64 93 CE
* 127.0.0.1:1302: 2018/04/10 23:11:58: sending message:
  ECM response (ECMG<=>SCS)
  protocol_version = 0x02
  message\_type = 0x0202
  ECM channel id = 0x0001
  ECM stream id = 0x0001
  CP number = 0
  ECM_datagram (188 bytes) =
     47 5F FF 10 00 80 70 26 80 AA 03 00 21 00 10 00 08 26 E9 2C D9 C8
     96 06 B2 <mark>00 11 00 08</mark> 8B 37 0B 94 69 64 93 CE <mark>00 12 00 05</mark>
     FF FF FF FF FF FF FF FF FF FF
```

The returned ECM is a TS packet containing a section with *table\_id* 0x80 (an ECM). The payload of the ECM is a TLV structure following the same syntax as DVB SimulCrypt protocols. The command and parameter tags are private to TSDuck and documented in its development documentation (Doxygengenerated, available online).

To create a more realistic environment, we can split the big command into two parts, a "head-end part" which can be replaced by a real MUX and a "set-top box part" which can be replaced by a real STB. The communication between the two parts can be done using a modulator-tuner pair, an ASI link or UDP/IP. All these interconnections are supported by TSDuck and can be driven directly from *tsp*.

Let's have a look at the head-end emulation command, using an UDP/IP output link:

The output is a multicast address.

Also note that we used the option --atis-idsa in the plugin *scrambler*. This means that we use the ATIS IIF Default Scrambling Algorithm (IDSA) instead of the default DVB Common Scrambling Algorithm (CSA2). ATIS being based on AES-128, we can see in the ECMG  $\Leftrightarrow$  SCS exchanges that the control words are now 16-byte long. There is no particular reason to use ATIS in this demo (except that ATIS is typically used in IP-TV while DVB-CSA2 is mainly used in broadcast).

Version 3.22-1926 307 / 395



The set-top box emulation command is simply:

```
tsp -v \
   -I ip 224.10.11.12:9999 \
   -P descrambler cnews \
   -0 play
```

Note that we do not need to specify --atis-idsa in the plugin *descrambler*. During the scrambling, the plugin *scrambler* has inserted a *scrambling\_descriptor* in the PMT of the service to indicate the non-default scrambling type. This descriptor is automatically recognized by the plugin *descrambler* and the right descrambling algorithm is used, just like any properly integrated set-top box would do.

## 5.2.21 Multi-Protocol Encapsulation (MPE)

These examples describe a test bed or demo infrastructure for MPE injection and MPE extraction. See [13] for more details on MPE.

#### 5.2.21.1 MPE insertion in an existing transport stream

In this example, we insert MPE in an existing transport stream. The input TS is read from a tuner, the MPE stream is inserted on the fly and the resulting TS is output on a modulator.

The network infrastructure is illustrated in the diagram below.

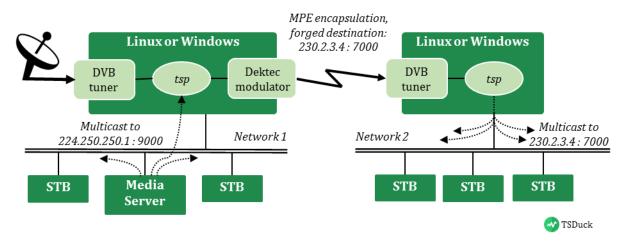


Figure 6: Multi-Protocol Encapsulation (MPE) sample test bed

In network 1, a media server multicasts a transport stream on address 224.250.250.1, port 9000.

We want to encapsulate this UDP multicast stream in an existing transport stream using MPE. We do this using *tsp*. We also change the multicast destination address for the UDP stream to 230.2.3.4, port 7000, in the MPE-encapsulated datagrams. There is no particular reason for this, we just illustrate the feasibility.

The resulting transport stream with embedded MPE is then broadcast. Here, the broadcast network is a Dektec modulator, followed by another computer using a DVB tuner.

This computer is connected to a second network. Another instance of *tsp* extracts the datagrams from the MPE stream and multicasts them on its network using the modified destination address.

Let's review the various steps and commands in details.

The existing transport stream is here a live satellite TS which is received on a Linux or Windows computer using a DVB tuner. The insertion of the MPE stream adds two new services. We carefully select service ids and PID's which are not used in the existing transport stream.

• A service carrying the IP/MAC Notification Table (INT).

o Service id: 700

Service name: "Demo INT"

o PMT PID: 5000

</PMT>

</PMT>



- o PID of the component carrying the INT: 5001
- A service carrying the MPE stream. Such a service may carry many MPE streams. Here, we use only one.
  - o Service id: 701
  - Service name: "Demo MPE"
  - o PMT PID: 5002
  - o PID of the component carrying the MPE stream: 5003

We need to create three tables from scratch, the PMT's of the two new services and the INT. We create them using XML files.

PMT of the service carrying the INT (file pmt-int.xml):

<?xml version="1.0" encoding="UTF-8"?>
<tsduck>

</tsduck>

PMT of the service carrying the MPE stream (file pmt-mpe.xml):

<?xml version="1.0" encoding="UTF-8"?>

</tsduck>
IP/MAC Notification Table (file int.xml):

</component>

</device>
</INT>
</tsduck>

</target IP slash descriptor>

```
tsp -I dvb --frequency ... \
   -P svremove Service1 --stuffing \
   -P pat --add-service 700/5000 --add-service 701/5002 \
   -P inject pmt-int.xml --pid 5000 --bitrate 15000 \
```

Version 3.22-1926 309 / 395



```
-P inject int.xml --pid 5001 --bitrate 15000 \
-P inject pmt-mpe.xml --pid 5002 --bitrate 15000 \
-P sdt --service-id 700 --name "Demo INT" --provider "TSDuck" --type 0x0C \
-P sdt --service-id 701 --name "Demo MPE" --provider "TSDuck" --type 0x0C \
-P mpeinject 224.250.250.1:9000 --max-queue 512 \
--new-destination 230.2.3.4:7000 --pid 5003 \
-O dektec --frequency ...
```

The following chain of plugins is used:

- The input plugin *dvb* receives an existing satellite stream.
- The plugin *svremove* removes one service from the TS and replaces it with stuffing. We are going to insert an MPE stream and we need bandwidth for it. If the existing TS does not have enough stuffing bandwidth, we need to create some. Depending on the target MPE bandwidth, we may need to remove several existing services.
- The plugin *pat* adds the two new services in the PAT.
- The three plugin *inject* insert the three XML tables we created, each one on its own PID.
- The two plugins *sdt* add the descriptions of the two new services in the SDT.
- The plugin *mpeinject* inserts the MPE stream. It receives the UDP multicast datagrams for address 224.250.250.1, port 9000. In each datagram, the destination address is modified as 230.2.3.4, port 7000. The UDP datagrams are encapsulated into MPE sections which are injected in PID 5003. The option --max-queue is a tuning parameter. It specifies the number of UDP datagrams which can be buffered before insertion in the MPE stream. The parameter shall be tuned according to the receiving multicast rate and bursts and the placement of stuffing packets in the exiting TS. We need to tune it when we get "UDP overflow" messages.
- Finally, the plugin *dektec* sends the resulting TS on a modulator.

On the second system, the following command is used to extract the MPE stream and to re-multicast it on the network 2:

```
tsp -I dvb --frequency ... -P mpe --udp-forward -O drop
```

Here, the command is simple since we assume that there is only one MPE stream in the TS and it is properly signaled in the PSI/SI. If there are several MPE streams in the TS, more options are required in the plugin *mpe*.

The option --udp-forward specifies that the UDP datagrams shall be forwarded on the local network. Note that when the UDP packets are multicast and the system running *tsp* has several network interfaces, it may be necessary to specify the --local-address option to select through which local interface the multicast packets shall be sent.

We may want to use *tsanalyze* on the intermediate transport stream. The two services we created are described as follow:

```
|-----|
 Service: 0x02BC (700), TS: 0x0438 (1080), Original Netw: 0x0001 (1)
 Service name: Demo INT, provider: TSDuck
 Service type: 0x0C (Data broadcast service)
 TS packets: 600, PID's: 2 (clear: 2, scrambled: 0)
 PMT PID: 0x1388 (5000), PCR PID: None
 0x1388 PMT ...... C 14,969 b/s
 0x1389 MPEG-2 Private sections (INT, IP/MAC Notifica C
                                        14,969 b/s
     (C=Clear, S=Scrambled, +=Shared)
Service: 0x02BD (701), TS: 0x0438 (1080), Original Netw: 0x0001 (1)
 Service name: Demo MPE, provider: TSDuck
 Service type: 0x0C (Data broadcast service)
 TS packets: 154,507, PID's: 2 (clear: 2, scrambled: 0)
 PMT PID: 0x138A (5002), PCR PID: None
                                Access Bitrate
   PID Usage
  Total Data broadcast service ...... C
                                      7,709,471 b/s
 0x138A PMT ...... C 14,969 b/s |
```



#### 5.2.21.2 Creating a transport stream from scratch

This example is a variant of the previous one. This time, we do not have access to an existing transport stream. Instead, a new transport stream is created from scratch by TSDuck and MPE is inserted on the fly. The resulting stream is an SPTS (single program transport stream) which is output on UDP/IP. This UDP/IP stream is then typically collected by a MUX for insertion in an MPTS (multiple programs transport stream).

Note: The generated TS is not really an SPTS because it contains two services, one for the INT and one for the MPE sections. This is how MPE is structured. But, logically, the two services serve a common function: an MPE stream. So, by extension, we will call it an SPTS.

Creating a TS from scratch using TSDuck is usually done using the input plugin *null*, a plugin which generates an endless stream of null packets. Then, all tables and elementary streams are inserted using appropriate plugins. Remember that "inserting" packets means replacing null packets.

The TS will contain the same two services which were created in the previous example. We already have XML files for their PMT. To create a minimal TS, we also need a PAT and an SDT. For the sake of consistency, we reuse the same PID's as the previous example.

```
PAT of the new TS (file pat.xml):
```

```
<?xml version="1.0" encoding="UTF-8"?>
   <tsduck>
     <PAT transport_stream_id="1">
       <service service_id="700" program_map_PID="5000"/>
<service service_id="701" program_map_PID="5002"/>
     </PAT>
   </tsduck>
SDT of the new TS (file sdt.xml):
   <?xml version="1.0" encoding="UTF-8"?>
   <tsduck>
     <SDT transport stream id="1" original network id="1">
       <service service id="700" running status="running">
          <service_descriptor service_type="0x0C"</pre>
                                service_name="MPE Demo (INT)"
                                service_provider_name="TSDuck"/>
       </service>
       <service service_id="701" running_status="running">
          <service_descriptor service_type="0x0C"</pre>
                                service name="MPE Demo"
                                service_provider_name="TSDuck"/>
       </service>
     </SDT>
   </tsduck>
```

The *tsp* command which generates the TS and inserts MPE is the following:

```
tsp --verbose --bitrate 30000000 --max-flushed-packets 70 \
    -I null \
    -P regulate --packet-burst 14 \
    -P inject pat.xml --pid 0 --bitrate 15000 \
    -P inject sdt.xml --pid 17 --bitrate 15000 \
    -P inject pmt-int.xml --pid 5000 --bitrate 15000 \
    -P inject int.xml --pid 5001 --bitrate 15000 \
    -P inject pmt-mpe.xml --pid 5002 --bitrate 15000 \
    -P mpeinject 230.2.3.4:4000 --pid 5003 --max-queue 512 \
    -0 ip 230.5.6.7:4500 --packet-burst 7 --enforce-burst
```

The following chain of plugins is used:

• The input plugin *null* generates null packets.

Version 3.22-1926 311 / 395



- The plugin *regulate* slows down the playout speed at the target TS bitrate. Unlike the previous example where the playout speed was naturally regulated at the input speed of the tuner, here the input plugin generates null packets at full speed (CPU-bound). Note that the bitrate is specified here at *tsp* level and is propagated to all plugins. We have chosen an arbitrary value of 30 Mb/s.
- The subsequent plugins are similar to the previous example, except that the PAT and SDT are inserted from XML file because they did not exist in the input TS.
- The output plugin *ip* sends the resulting SPTS to multicast IP address 230.5.6.7, port 4500.

# 5.2.21.3 Creating a transport stream from scratch with PCR

Most the time, the command in the previous example will do the job. The generated SPTS is perfectly valid and can be multiplexed in an MPTS when necessary.

However, this SPTS contains only section data (basic signalization, INT and DSM-CC sections for MPE). It does not contain any clock reference. There is no PCR. Usually, this is not a problem since there is no need for a clock in the absence of video or audio streams. However, some MUX or monitoring equipment may generate errors in the absence of PCR.

Additionally, TSDuck will not be able to determine the bitrate of this MPTS (not important in practice, but annoying for us).

Let's see how to modify the previous *tsp* command to generate a valid PCR stream.

We will create a dedicated PCR PID and attach it to the service carrying the MPE stream. We need to modify the XML file for its PMT to reference the new PCR PID.

PMT of the service carrying the MPE stream (file pmt-mpe-with-pcr.xml) with highlighted modified fields:

The new *tsp* command is the following, with highlighted modifications:

```
BITRATE=30000000
PCR PER SEC=5
PCR_DISTANCE=$(( $BITRATE / $(( $PCR_PER_SEC * 188 * 8 )) ))
PCR_PID=5004
tsp --verbose --bitrate $BITRATE --max-flushed-packets 70 \
    -I null \
    -P regulate --packet-burst 14 \
   -P filter --every $PCR_DISTANCE --set-label 1 \
    -P craft --only-label 1 --pid $PCR_PID --no-payload --pcr 0 \
    -P continuity --pid $PCR_PID --fix \
    -P pcradjust --pid $PCR_PID \
    -P inject pat.xml --pid 0 --bitrate 15000 \
    -P inject sdt.xml --pid 17 --bitrate 15000 \
    -P inject pmt-int.xml --pid 5000 --bitrate 15000 \
    -P inject int.xml --pid 5001 --bitrate 15000 \
    -P inject pmt-mpe-with-pcr.xml --pid 5002 --bitrate 15000 \
    -P mpeinject 230.2.3.4:4000 --pid 5003 --max-queue 512 \
    -0 ip 230.5.6.7:4500 --packet-burst 7 --enforce-burst
```

Note the initial shell variables. We decide that the number of PCR's per second shall be 5 (PCR\_PER\_SEC). From the bitrate (30 Mb/s, now in variable BITRATE), we compute the interval between two PCR packets (PCR\_DISTANCE). This is the number of TS packets between two packets containing a PCR.



To generate a PCR PID in the TS, the following chain of plugins was added:

- The plugin *filter* selects one packet every PCR\_DISTANCE packets. The selected packets will become the PCR packets. Note that we use the option "--set-label 1" which means that the selected packets are flagged with label 1. No modification is applied to the TS, only flagging some packets.
- The plugin *craft* is applied only on the previously selected packets (option "--only-label 1"). The plugin *craft* performs low-level modifications on the packets. Here, we modify the PID value, we remove the payload and we insert a PCR (with value zero for now).
- The plugin *continuity* fixes the continuity counters on the PCR PID.
- The plugin *pcradjust* fixes the PCR values based on the bitrate.

We now have a valid PCR PID in the MPE service. Let's see how tsanalyze evaluates the generated SPTS:

```
-----
 TRANSPORT STREAM ANALYSIS REPORT
______

      Transport Stream Id:
      1 (0x0001)
      Services:
      2

      Bytes:
      112,355,004
      PID's: Total:
      8

      TS packets:
      597,633
      Clear:
      8

      With invalid sync:
      0
      Scrambled:
      0

      With transport error:
      0
      With PCR's:
      1

      Suspect and ignored:
      0
      Unreferenced:
      0

-----
 Transport stream bitrate, based on ...... 188 bytes/pkt 204 bytes/pkt
 User-specified: ...... 29,996,462 b/s 32,549,352 b/s
 Estimated based on PCR's: ...... 29,934,196 b/s 32,481,787 b/s
 Srv Id Service Name
 30,115 b/s
 Note 1: C=Clear, S=Scrambled
 Note 2: Unless specified otherwise, bitrates are based on 188 bytes/pkt
 _____
```

SERVICES ANALYSIS REPORT Global PID's TS packets: 464,779, PID's: 3 (clear: 3, scrambled: 0) -----PID Usage Access Bitrate Total Global PID's ...... C 23,328,239 b/s 

 Subt.
 Global PSI/SI PID's (0x00-0x1F)
 C
 30,115 b/s

 0x0000
 PAT
 C
 15,057 b/s

 0x0011
 SDT/BAT
 C
 15,057 b/s

 0x1FFF Stuffing ...... C 23,298,123 b/s \_\_\_\_\_\_ Service: 0x02BC (700), TS: 0x0001 (1), Original Netw: 0x0001 (1) Service name: MPE Demo (INT), provider: TSDuck Service type: 0x0C (Data broadcast service) TS packets: 600, PID's: 2 (clear: 2, scrambled: 0) PMT PID: 0x1388 (5000), PCR PID: None (C=Clear, S=Scrambled, +=Shared) \_\_\_\_\_| Service: 0x02BD (701), TS: 0x0001 (1), Original Netw: 0x0001 (1)

Version 3.22-1926 313 / 395



# 5.2.22 DVB-T2 Modulator Interface (T2-MI)

A DVB T2-MI stream is encapsulated into one PID of a TS. A DVB-T2 stream may contain several Physical Layer Pipes (PLP). Each PLP contains a complete TS. The plugin *t2mi* is designed to extract the TS from a PLP of a T2-MI stream.

With a fully DVB-compliant signalization, the PID carrying T2-MI is signaled in the PMT of its service using a T2-MI descriptor.

Sample PMT using *tstables*:

```
* PMT, TID 2 (0x02), PID 33 (0x0021)

Version: 11, sections: 1, total size: 27 bytes

- Section 0:

Program: 800 (0x0320), PCR PID: none

Elementary stream: type 0x06 (MPEG-2 PES private data), PID: 64 (0x0040)

- Descriptor 0: Extension Descriptor (0x7F, 127), 4 bytes

Extended descriptor: T2MI (0x11, 17)

T2-MI stream id: 0, T2-MI stream count: 1, PCR/ISCR common clock: no
```

Excerpt from *tsanalyze* for the service containing the T2-MI stream:

```
|-----|
 Service: 0x0320 (800), TS: 0x03A2 (930), Original Netw: 0x0000 (0)
 Service name: (T2-MI), provider: (unknown)
 Service type: 0x00 (unknown)
 TS packets: 145,024, PID's: 2 (clear: 2, scrambled: 0)
PMT PID: 0x0021 (33), PCR PID: None
_____
                         Access Bitrate
  PID Usage
 Unknown
                                 Unknown
 Unknown
    (C=Clear, S=Scrambled, +=Shared)
|-----|
```

The option --identify of the plugin *t2mi* lists the same information. With this option, the plugin does not modify the stream, it only identify T2-MI PID's and PLP's.

```
$ tsp -I dvb ... -P t2mi --identify -O drop
* t2mi: found T2-MI PID 0x0040 (64)
* t2mi: PID 0x0040 (64), found PLP 102
^C
* tsp: user interrupt, terminating...
* t2mi: summary: found 1 PID's with T2-MI
* t2mi: PID 0x0040 (64): PLP 102
$
```

But since T2-MI streams are received by designated professional equipment, many operators do not setup the required signalization and it is necessary to guess which PID in which service may carry T2-MI.

Example service which is a good candidate for T2-MI:



In this example, the TS contains only one service. This service contains only one component and it carries private sections. Since there is no video PID, there is no PCR and *tsanalyze* is not able to compute bitrates. If we know, from other sources, that the TS contains T2-MI, it must be there. In this case, we need to explicitly provide the PID number to the plugin *t2mi*:

```
$ tsp -I dvb ... -P t2mi --pid 0x1000 --identify -O drop
* t2mi: PID 0x1000 (4096), found PLP 0
* t2mi: PID 0x1000 (4096), found PLP 2
* t2mi: PID 0x1000 (4096), found PLP 1
^C
* tsp: user interrupt, terminating...
* t2mi: summary: found 1 PID's with T2-MI
* t2mi: PID 0x1000 (4096): PLP 0, 1, 2
```

If we want to redistribute on a local DVB network one of these PLP's, the command is the following:

```
$ tsp -I dvb ... -P t2mi --pid 0x1000 --plp 1 -O dektec ...
```

Without the option --identify, the plugin *t2mi* extracts the TS from the specified PLP and completely replaces the TS with the extracted one. The output of the plugin is the extracted TS, the original TS carrying T2-MI has disappeared. The final output is a Dektec modulator (or ASI board) which broadcasts the extracted TS.

The plugin t2mi can extract only one PLP because this is the basic principle of tsp: end-to-end processing of one single TS. Even if one plugin produces a radical transformation such as completely replacing the TS with another one (here, the extracted PLP), there is only one TS at all points in the chain.

If we want to process all PLP's at the same time, we must re-route the original TS in parallel instances of *tsp* using the plugin *fork*. Each instance of *tsp* extracts one PLP.

This is illustrated by the following command:

```
tsp -I dvb ... \
   -P until -seconds 30 \
   -P fork 'tsp -P t2mi --pid 0x1000 --plp 0 -P analyze -o plp0.txt -O drop' \
   -P fork 'tsp -P t2mi --pid 0x1000 --plp 1 -P analyze -o plp1.txt -O drop' \
   -P fork 'tsp -P t2mi --pid 0x1000 --plp 2 -P analyze -o plp2.txt -O drop' \
   -P analyze -o main.txt -O drop
```

This command analyzes the enclosing stream and the three different PLP's in parallel during 30 seconds. Each plugin *fork* creates a process and passes the complete TS to this process. Each created process runs another instance of *tsp* which extracts one PLP. Note that the default input plugin of *tsp* is the plugin *file* which, by default, reads the standard input.

#### **5.2.23 Merging transport streams**

The plugin *merge* can be used to merge a transport stream into another one. The service references are correctly merged into the final transport stream.

Let's illustrate this using two live transport streams from satellite Astra 19.2 E. We use one transport stream as base. We remove one service from this stream and we replace it with another live service coming from another transport stream.

We use the transport stream with id 1028 as base. Using the plugin dvb, the tuning options are:

```
--freq 11,626,500,000 --symbol 22,000,000 --fec 5/6 --polarity vertical --delivery DVB-S
```

Version 3.22-1926 315 / 395



To simplify the command lines, we save these options, one per line, in a text file named ts1028.txt to be used by partial command line redirection (see 3.1.5).

The structure of this transport stream can be seen using the plugin *analyze*. Here is the list of services from the analyze output:

Srv Id	Service Name Access	Bitrate
0x1131	TVE INTERNACIONAL EUROPA C	3,572,410 b/s
0x1132	CANAL 24 HORAS C	3,423,043 b/s
0x113B	RNE RADIO 1 C	140,998 b/s
0x113C	RNE RADIO 3 C	278,941 b/s
0x113D	RNE RADIO 4 C	141,045 b/s
0x113E	RNE RADIO 5 TODO NOTICIAS C	141,092 b/s
0x113F	RNE RADIO CLASICA C	347,819 b/s
0x1140	RNE RADIO EXTERIOR DE ESPAÑA C	141,139 b/s
0x1146	CNN Int C	4,008,806 b/s
0x114E	DW (English) C	3,488,065 b/s
0x1158	Al Jazeera English C	3,803,631 b/s

We use the transport stream with id 1022 to extract a service and inject it into the previous transport stream. The dvb tuning options are:

```
--freq 11,538,000,000 --symbol 22,000,000 --fec 5/6 --polarity vertical --delivery DVB-S
```

Again, we save them, one by line, in a text file named ts1022.txt.

The list of services from transport stream 1022 is shown below. Note that we use transport streams with clear channels only to be able to watch the result.

Srv Id	Service Name Access	Bitrate
0x1AF4	DATASYSTEM C	44,884 b/s
0x1AF8	Russia Today C	4,038,071 b/s
0x1AF9	France 24 (en Français) C	2,703,659 b/s
0x1AFA	France 24 (in English) C	2,700,842 b/s
0x1AFE	France 24 (in Arabic) C	2,465,576 b/s
0x1B00	CGTN Documentary C	2,504,263 b/s
0x1B01	CGTN F C	2,247,071 b/s
0x1B02	CGTN C	2,443,463 b/s
0x1B03	TV5MONDE EUROPE C	3,619,747 b/s
0x1B06	TRT World HD C	5,984,240 b/s

We assume that we have two satellite tuners in the system. Adapter 0 will be used to receive TS 1022 and adapter 1 will be used to receive TS 1028.

We also have a Dektec modulator to redistribute the resulting transport stream. Again, to shorten the command line, we place all modulation options into one text file named modulation.txt.

In our example, we extract the service *TV5MONDE EUROPE* from TS 1022 and we merge it into TS 1028. To make sure that the transport stream has enough free space, we remove the service *Al Jazeera English* from TS 1028 before the merge<sup>7</sup>.

The merging command is the following:

```
tsp -I dvb -a 1 @ts1028.txt \
   -P svremove -s AlJazeeraEnglish \
   -P merge "tsp -I dvb -a 0 @ts1022.txt -P zap TV5MondeEurope" \
   -P analyze -i 30 -o merged.txt \
   -O dektec @modulation.txt
```

Note that the service *Al Jazeera English* is replaced by stuffing (option -s) in TS 1028.

<sup>&</sup>lt;sup>7</sup> In practice, on the day of this experiment, the service TS 1028 had more than enough stuffing to insert one or two services without removing any other. However, in the general case, we need to make some room first. So, let's do it anyway.



In the created command, everything is removed from TS 1022, except service *TV5MONDE EUROPE* (the service names are not case-sensitive and spaces are ignored).

The final plugin *analyze* continuously analyzes the output stream and produces a report file every 30 seconds. Here is the merged list of services from this report:

Srv Id	Service Name Access	Bitrate
0x1131	TVE INTERNACIONAL EUROPA C	3,529,507 b/s
0x1132	CANAL 24 HORAS C	3,382,237 b/s
0x113B	RNE RADIO 1 C	139,475 b/s
0x113C	RNE RADIO 3 C	275,915 b/s
0x113D	RNE RADIO 4 C	139,425 b/s
0x113E	RNE RADIO 5 TODO NOTICIAS C	139,374 b/s
0x113F	RNE RADIO CLASICA C	343,831 b/s
0x1140	RNE RADIO EXTERIOR DE ESPAÑA C	139,425 b/s
0x1146	CNN Int C	3,963,218 b/s
0x114E	DW (English) C	3,448,180 b/s
0x1B03	TV5MONDE EUROPE C	3,566,805 b/s

We can see that the service Al Jazeera English has been replaced with TV5MONDE EUROPE.

Luckily, there was no PID or service id conflict between the two transport streams. If the same service id or PID had existed in the two streams, the plugin *merge* would have reported an error and the component from the merged stream would have been dropped. In case of conflict, we use the plugin *remap* to modify PID's or the plugin *svrename* to rename a service (including modifying its service id).

#### 5.2.24 Injecting SCTE 35 cue information

SCTE 35 cue information are single-section tables which are sent in one dedicated PID in a service. These commands are used to signal *video splicing points* where alternate content (typically ads) can replace the original video content. The video splicing points are defined by PTS (presentation time stamp) values in the video PID of the service.

Inserting SCTE 35 cue information is consequently different from traditional signalization. Each section defines one specific splicing event. It is not cycled. It is inserted once or twice only in the PID. The traffic on this PID is very low and not regular (it depends on the occurrences of the splicing events).

The splicing points are usually defined on the fly, with the cooperation of the video encoder. The exact PTS values of the splicing points are defined in real time. It is usually impossible to define in advance the list of all splicing events in the life of a service. Moreover, inserting cue information section needs to be synchronized with the associated video PID. Typically, a splice event is signaled twice, once two seconds before the event and once one second before.

Because of this dynamics, there are two distinct use cases: real-time live streams and offline test files.

#### 5.2.24.1 Real-time live stream

This example illustrates the insertion of cue information in a real-time live transport stream. We receive a DTTV stream from a DVB-T tuner, we insert cue information for one service and we restream the result through a DVB-T modulator.

The transmission chain is processed by a *tsp* command. The generation of the cue information is externally performed by some real-time system, cooperating with the content management system and the video encoder. The format of the splice commands is defined by SCTE 35 [18]. Splice information sections can be provided in binary or XML format (see 2.2).

Here is an XML example of a pair of splice commands, a "splice out" event, followed 20 seconds later by a "splice in" event. This is typically an ads replacement opportunity. Here, the sections are minimal. You may want to add "break duration" information or additional descriptors.

```
<?xml version="1.0" encoding="UTF-8"?>
<tsduck>
    <splice_information_table>
        <splice_insert splice_event_id="100" unique_program_id="1"</pre>
```

Version 3.22-1926 317 / 395



The PTS timestamps are synchronized with the video PID. Moreover, these timestamp shall correspond to *video splice points*, ie. frames where the binary replacement of the encoded video content is smooth. This is why splicing shall be done with the cooperation of the video encoder.

The following command performs the real-time processing.

```
tsp -I dvb -u 24 \
   -P pmt --service 1010 --add-programinfo-id 0x43554549 --add-pid 600/0x86 \
   -P spliceinject --service 1010 --files 'splice-*.xml' --udp 4444 \
   -0 dektec -u 24 --convolution 2/3 --guard 1/32
```

The input plugin *dvb* reads a DVB-T live stream from UHF channel 24. At the end of the processing, the output plugin *dektec* sends the stream to a Dektec DVB-T modulator on the same frequency.

The transport stream contains several services. We will add cue information on service id 1010. We could process multiple services using successive instances of the plugin *spliceinject* in the same command.

The plugin *pmt* modifies the PMT of the target service on the fly. To comply with the SCTE 35 standard, we add a *registration\_descriptor* with id 0x43554549 and we add the declaration of the PID 600 with stream type 0x86 (meaning SCTE 35 cue information).

The plugin *spliceinject* performs the injection. The service id is sufficient to locate the target PID: the plugin searches the service and then searches a component with stream type 0x86 in its PMT.

The splice information sections can be supplied in real time using two methods: file (binary or XML) and UDP datagrams. Here, for the sake of the example, we use both. We can also use only one. The file specification is a wildcard because different files can be provided. It is also possible to rewrite the same file. Each time a file is modified, it is reloaded. We can also receive UDP datagrams (here on port number 4444). The datagram can contain binary or XML sections.

See the reference documentation of the plugin *spliceinject* for more details.

#### 5.2.24.2 Cue insertion in offline files

Sometimes, it is necessary to prepare a transport stream file for demo or test. Usually, the same *tsp* command can be used indifferently on live streams and offline files. For SCTE 35 cue information, this is a bit different because of the dynamics.

The plugin *spliceinject* processes a transport stream and, on the other hand, it asynchronously receives splice information sections. On a real time stream, the events are received slightly in advance but in a timely fashion. The plugin does not expect any section file to be present at the time the processing starts. It does not wait for the section files.

With an offline transport stream file, the processing is very fast, running at the speed of the disk storage. So, even if the splice information section files are already present, they are read asynchronously from the transport stream processing. Specifically, they can be read *after* the processing the target event in the stream. In that case, no section would be injected. To avoid this problem, we use the option --wait-first-batch which forces the transport stream processing to wait for at least the first batch of splice section files. Thus, if the section files are present at the time the command is run, it is guaranteed that they are loaded and injected.

Additionally, in the following example, we use an SPTS file (containing only one service). These files usually contain no stuffing. However, *tsp* cannot insert new packets in a transport stream. It can only replace stuffing packets. So, unlike broadcast transport streams which always contain some stuffing, nothing can be injected in such a stream. To make room for insertion, we use the *tsp* option --add-input-stuffing which artificially injects null packets at input level (here one null packet every 10 input



packets). This artificial stuffing will be used by *spliceinject* to insert its sections. Note that we remove the extra unused stuffing before the output plugin using the plugin *filter*.

The rest of the command is similar to the previous example.

```
tsp --add-input-stuffing 1/10 \
   -I file spts.ts \
   -P pmt --service 1010 --add-programinfo-id 0x43554549 --add-pid 600/0x86 \
   -P spliceinject --service 1010 --files splice.xml --wait-first-batch \
   -P filter --negate --pid 0x1FFF \
   -O file spts-out.ts
```

# 5.2.25 Encapsulating PID's into a private tunnel

In this example, we start from a transport stream containing two services, CANAL+ DECALE (id 0x2262) and CNEWS (id 0x226A). We want to process the first service through some external equipment (transcoder, transrater, etc.) However, this equipment can only process SPTS (single-program transport stream).

To preserve the structure of the transport stream while crossing this equipment, we use the following trick. We encapsulate the second service into one single "tunnel" PID and then we erase this service from the structure of the TS. This tunnel PID is added as a private component of the first service. Now, we have a true SPTS which can be processed by the external equipment.

The structure of the service CNEWS is reported as follow by *tsanalyze*:

```
______
 Service: 0x226A (8810), TS: 0x0438 (1080), Original Netw: 0x0001 (1)
 Service name: CNEWS, provider: CSAT
 Service type: 0x19 (Advanced codec HD digital television service)
 TS packets: 9,298, PID's: 4 (clear: 4, scrambled: 0)
 PMT PID: 0x03E8 (1000), PCR PID: 0x03F2 (1010)
    PID Usage
                                          Access
                                                    Bitrate
  Total Advanced codec HD digital television service . C
                                                   3,983,427 b/s
 0x03E8 PMT ...... C
                                                    14,994 b/s
 0x03F2 AVC video (1920x1080, high profile, level 4.0 C
0x03FD AC-3 Audio (fra, AC-3, stereo (L,R), @48,000 C
                                                   3,771,361 b/s
                                                    197,072 b/s
 0x0413 Subtitles (fra, DVB subtitles for hard of hea C
                                                         0 b/s
        (C=Clear, S=Scrambled, +=Shared)
|-----|
```

The first step is performed using the following command.

```
tsp -I ... \
    -P encap -o 0x1000 -p 0x03E8 -p 0x03F2 -p 0x03FD -p 0x0413 \
    -P pat --remove-service 0x226A \
    -P sdt --remove-service 0x226A \
    -P pmt -s 0x2262 -a 0x1000/0x99 \
    -0 ...
```

The plugin *encap* creates a tunnel PID 0x1000. This tunnel contains the 4 PID's of the service CNEWS, PMT, video, audio and subtitles. The plugins *pat* and *sdt* remove the service from the PAT and SDT, respectively. At this point, the service CNEWS has disappeared but the new PID 0x1000 is orphan. To preserve this PID through the processing of the service CANAL+ DECALE, we add it to the PMT of the service using the plugin *pmt*. We use the reserve stream type 0x99 for this PID to indicate some private type (any other reserved stream type should be OK).

After processing the SPTS through the external equipment (and hoping that the equipment has preserved the private components of the service), we restore the structure of the transport stream using the following command:

```
tsp -I ... \
   -P decap -p 0x1000 \
   -P pat -a 0x226A/0x03E8 \
   -P sdt -s 0x226A -n CNEWS -p CSAT \
   -P pmt -s 0x2262 -r 0x1000 \
```

Version 3.22-1926 319 / 395



```
-0 ...
```

The plugin *decap* decapsulates the content of the tunnel PID 0x1000. It is replaced by all original PID's of the service CNEWS. Then, we need to restore the reference to the service in the PAT and SDT using the plugins *pat* and *sdt*. Finally, since the private component 0x1000 no longer exists, we remove it from the PMT of the service CANAL+ DECALE using the plugin *pmt*.

Note: in a real-life example, the MPTS would probably contain more than two services. In that case, we would encapsulate all other services in the private tunnel PID as well. The principle remains the same. The command is only a bit longer.

## 5.2.26 Interleaving input files and merging their PSI

This example command reads two input files *file1.ts* and *file2.ts*. We assume here that the two files have no conflicting allocation of service ids and no conflicting PID's into services. Only the PSI/SI PID's are common

Using the option --interleave in the *file* input plugin, we read one packet of *file1.ts*, then one packet of *file2.ts*, then one packet of *file1.ts* again, and so on. So, the two input files are multiplexed one by one.

Using the option --label-base, we assign the label 1 to all packets from *file1.ts* and label 2 to all packets from *file2.ts*.

```
tsp -I file --interleave file1.ts file2.ts --label-base 1 \
    -P psimerge --main-label 1 --merge-label 2 \
    ...
```

The plugin *psimerge* uses all packets with label 1 as a "main" stream and all packets with label 2 as a "merge" stream. It merges the PSI/SI from the two streams, creating a PAT and SDT-Actual containing all services from the two streams, creating a CAT containing all EMM PID's from the two streams. All EIT sections are multiplexed into the EIT PID.

# 5.2.27 Using Secure Reliable Transport (SRT) transmission

The input and output plugins *srt* can be used to send and receive a transport stream using the Secure Reliable Transport (SRT) protocol. These plugins are not available everywhere, the *libsrt* (SRT library, see [40]) must be present during the compilation of TSDuck.

First example: On a system named *vmfedora*, a *tsp* command sends a stream (here, a simple file playback) using SRT. The system is the SRT listener. It waits for an incoming connection on port 12345

```
tsp -v \
    -I file input.ts --infinite \
    -P regulate \
    -0 srt 12345 --transtype live --messageapi
```

On a receiver system, a *tsp* command connects to *vmfedora* on port 12345 and receives the stream over SRT. Here, the preocessing of the stream is simply an analysis during 30 seconds.

```
tsp -v \
   -I srt vmfedora:12345 --transtype live --messageapi --conn-timeout 100000 \
   -P until --seconds 30 \
   -P analyze \
   -0 drop
```

Second example with encrypted transmission: The passphrase is used to derive the encryption key. The passphrase must be 10 to 64 characters long. The option --pbkeylen selects the actual derived encryption key length. The option --min-version rejects connection with a *libsrt* version lower than 1.4.0 in this case

On the receiver system:



Version 3.22-1926 321 / 395



# 6 Hardware Device Support

# 6.1 Tuner Receiver Devices (DVB, ATSC, ISDB)

#### 6.1.1 Overview

The tuner receiver devices are specialized hardware devices which receive DVB-T, DVB-S, DVB-C, ATSC, ISDB-T, ISDB-S signals and transmit the demodulated binary transport stream to the computer system.

The input of a tuner receiver device is the antenna cable. The receiver device has either an F-connector (satellite, cable) or a standard TV connector (terrestrial, cable).

Most terrestrial receivers come with a small linear antenna. The usage of such an antenna should be avoided when possible since the reception is usually very poor. Always use the signal coming from a classical roof TV antenna when available (wall TV socket).

The physical output of a tuner receiver is a standard PC bus: PCI, USB, PCMCIA (PC Card) or Express Card. Some PCI devices are actually composed of one or more USB receivers and a USB-to-PCI bridge.

Most receivers simply contain a tuner and a demodulator. They transmit the complete transport stream over the bus (PCI, USB, etc.) The demultiplexing and MPEG audio / video decoding is performed by some software, either in the kernel of the operating system or in a user-space application. Since TSDuck works on transport streams, the embedded hardware demux are never used. So, the simplest and cheapest receivers are usually fine for TSDuck.

Some receivers contain two tuners in order to receive two independent transport streams. They usually appear as two distinct devices in the operating system.

Some recent receivers support multiple protocols, for instance both DVB-T and DVB-C or both DVB-S and DVB-S2.

## **6.1.2 Operating System Integration**

#### 6.1.2.1 Linux Platforms

The tuner receiver devices are managed by Linux under a common DVB framework.

#### **Drivers:**

The drivers for the DVB receiver devices come with the Linux kernel.

The drivers for recent devices may not be integrated yet into the mainstream Linux kernel, see [36] for details on how to install the latest Linux drivers for DVB devices.

#### Firmware:

Some devices need a firmware file in /lib/firmware which is loaded by the driver when the system boots or when the device is plugged-in (USB device for instance).

Some firmware files are packaged with the Linux kernel, but only when no copyright applies. Most firmware files are extracted from the proprietary Windows drivers of the device and are not free. Consequently, they are not included in the kernel distributions. Such proprietary firmware files must be fetched from various sites all over the Web.

#### **Device naming:**

The DVB devices are identified as /dev/dvb/adapterN, where N is a number between 0 and the number of DVB adapters in the system.

When several DVB devices are present in the system, the allocation of the adapter numbers depends on the kernel initialization sequence, the PCI slots, the way the USB devices are plugged and unplugged. It is possible to assign a specific adapter number to each device using the adapter\_nr parameter in the relevant drivers (kernel modules) configuration.



For instance, let's take the example of a system with a Hauppauge WinTV Nova-T-500 (dual DVB-T tuner) and a Hauppauge WinTV Nova-HD-S2 (DVB-S/S2 tuner). The two tuners in the DVB-T PCI board are actually USB devices with an embedded USB hub and the numbering of the tuners is not deterministic. The adapter number for each tuner may vary after each boot. To always allocate adapter numbers 0 and 1 to the DVB-T dual tuner and adapter number 2 to the DVB-S tuner, add the following lines to a *modprobe* configuration file, for instance /etc/modprobe.d/local.conf:

```
options dvb-usb-dib0700 adapter_nr=0,1
options cx88-dvb adapter_nr=2
```

Then, the following allocation is always used:

```
$ tslsdvb
/dev/dvb/adapter0 (DiBcom 3000MC/P, DVB-T)
/dev/dvb/adapter1 (DiBcom 3000MC/P, DVB-T)
/dev/dvb/adapter2 (Conexant CX24116/CX24118, DVB-S)
```

#### 6.1.2.2 Microsoft Windows Platforms

#### DirectShow framework:

On Windows XP and higher, the DVB devices are managed by "DirectShow", a Microsoft framework for multimedia. The specific subsystem of DirectShow for DVB receiver devices is BDA (Broadcast Device Architecture). Most of the time, the hardware vendors provide BDA drivers for their receivers. Windows does not include any predefined BDA driver.

On Windows Vista, a new "Media Foundation" framework has been introduced by Microsoft. On the long term, Media Foundation was supposed to supersede DirectShow but its current features are reputed to be inferior. DirectShow is still present on Windows 7 and 10 and is supposed to remain on subsequent versions of Windows.

On all Windows platforms, TSDuck uses basic DirectShow features to access the BDA drivers of the receiver devices.

#### Retrieving actual modulation parameters:

On Windows, it is not possible to retrieve the actual tuning parameters of a transport stream as detected by the tuner device.

This can be annoying in a DVB-T environment where many transmission parameters may be inaccurate but the tuner device will detect the actual parameters. For instance, you may tune on a transport specifying a FEC 2/3 and a guard interval 1/32. If the actual signal uses a FEC 3/4 and a guard interval 1/8, the tuner device will automatically adjust the parameters. On Linux, the command "tslsdvb -v" displays the actual parameters, as reported by the tuner device. Moreover, the dvb plugin can compute the exact theoretical bitrate of the transport stream based on the actual transmission parameters. On Windows, it is not possible to query the tuner device for the actual parameters. It is not possible to display the actual transmission parameters. The dvb plugin must use the analysis of PCR's to evaluate the bitrate.

#### 6.1.2.3 MacOS Platforms

There is no uniform or standard software framework to support tuners on macOS. Some tuners are officially supported on macOS but they are shipped with proprietary drivers and proprietary TV-watching applications. The driver API's are not documented.

As a result, TSDuck provides no support for tuners on macOS.

#### 6.1.3 Device Naming

All TSDuck modules using DVB receivers (tslsdvb, tsscan, dvb plugin) use a "device name" to designate a DVB receiver device. The syntax of the device name depends on the operating system.

Version 3.22-1926 323 / 395



Use the tslsdvb utility to list all available DVB receiver devices. By default, when no device name is specified, the "first" DVB receiver device is used, that is the say the device which appears first when the command "tslsdvb" is invoked.

In all cases (tslsdvb, tsscan, dvb plugin), the option --adapter (or -a) can be used to simply designate the  $N^{th}$  receiver device in the system, the first index being zero. When the system has several receiver devices, tslsdvb also displays the corresponding device index.

#### 6.1.3.1 Linux Platforms

On Linux, a receiver device is named as /dev/dvb/adapterA[:F[:M[:V]]] where:

```
    A = adapter number
    F = frontend number (default: 0).
    M = demux number (default: 0).
    V = dvr number (default: 0).
```

Usually, only the adapter number is important if there is more than one DVB receiver device in the system. The frontend number is useful only if the device adapter includes several tuners. There is usually no good reason to specify non-zero demux and dvr.

Additionally, the full unique description of a tuner can be used instead of the classical device name. The full description, when available, includes some unique identification of a device such as the serial number ("SN").

#### Example:

```
$ tslsdvb
/dev/dvb/adapter0 ("Silicon Labs Si2168, AVerMedia TD310 Device 2.00 SN:202866000009",
DVB-T, DVB-T2, DVB-C)
/dev/dvb/adapter1 ("DiBcom 7000MA/MB/PA/PB/MC, Hauppauge Nova-T Stick 2.00
SN:4027216814", DVB-T)
```

The following commands are then equivalent:

```
$ tsp -I dvb -d "Silicon Labs Si2168, AVerMedia TD310 Device 2.00 SN:202866000009" ...
$ tsp -I dvb -d /dev/dvb/adapter0 ...
$ tsp -I dvb -a 0 ...
```

This type of identification can be useful when using several USB tuners of the same model. USB devices have no fixed /dev/dvb/adapterN identification. After unplugging and replugging the device or after rebooting the system, the tuner ordering can change. Using a complete identification, including a unique serial number, provides a way to address a specific physical tuner without ambiguity.

#### 6.1.3.2 Microsoft Windows Platforms

On Windows, a receiver device name is the name of a DirectShow tuner filter. Since these names are usually complicated, with spaces and mixed cases ("Nova-T Stick DVB-T Tuner (Dev1 Path0)" for instance), the specified name is not case sensitive and spaces are ignored.

As an alternative, the name ":N" can be used to designate the N<sup>th</sup> receiver device in the system, the first index being zero. So, the following commands are equivalent:

```
C:\> tsp -I dvb -d :0 ...
C:\> tsp -I dvb -a 0 ...
```

When several tuners of identical models are used, the DirectShow tuner filters will have identical names. To address a specific tuner, it is possible to use the adapter number. However, if the tuners are connected to distinct antenna sources, we must be sure to address a specific physical tuner. If the tuners are USB devices, they may be assigned different adapter numbers each time they are plugged in.

To solve this problem, it is possible to use the device path of a tuner as "tuner name". The device path remains contant for a given physical tuner.

To get the device paths, use the following command:

```
C:\> tslsdvb -v
```



```
0: "AVerMedia TD310 BDA C Filter" (ATSC, DVB-C, DVB-C/C)
    Device: @device:pnp:\\?\usb#vid_07ca&pid_1871#202866000009#{71985f48-1ca1-11d3-9cc8-
00c04f7971e0}\{cacacefd-1b5f-49f4-af24-0ce559cc1e90}
....
1: "AVerMedia TD310 BDA Filter" (DVB-T, DVB-T2)
    Device: @device:pnp:\\?\usb#vid_07ca&pid_1871#202866000009#{71985f48-1ca1-11d3-9cc8-
00c04f7971e0}\{cacacefd-1b5f-49f4-af24-0ce559cc1f6d}
....
```

The following commands are then equivalent:

```
C:\> tsp -I dvb -d "AVerMedia TD310 BDA Filter" ...
C:\> tsp -I dvb -d "@@device:pnp:\\?\usb#vid_07ca&pid_1871#202866000009#{71985f48-1ca1-
11d3-9cc8-00c04f7971e0}\{cacacefd-1b5f-49f4-af24-0ce559cc1f6d}" ...
C:\> tsp -I dvb -d :1 ...
C:\> tsp -I dvb -a 1 ...
```

Note that, when the device path starts with @, we must double it (@@) to avoid the interpretation as partial command line redirection (see section 3.1.5 for more details).

### 6.1.4 Tested Devices

On Linux, TSDuck works indifferently with any supported DVB device. If a driver exists (with optional firmware) for a given DVB receiver, it should work with TSDuck.

On Windows, TSDuck should work with any DVB receiver coming with a BDA driver but the integration is less straightforward than on Linux and additional testing should be performed. Typically, if the device comes with a "DVB Network Tuner" DirectShow filter and an optional "BDA Receiver Component" DirectShow filter, it should work with TSDuck. At least one device (one from TechniSat) has exhibited different software architecture and could not be used by TSDuck.

The following table summarizes the DVB receiver devices which have been tested with TSDuck.

Please note that this table is informational only. It was built from various users' feedback at some point in time. There is no exhaustive test suite using all these devices. Probably no one, neither the author of TSDuck nor any of its users, have all these devices. So, keep in mind that these devices are not tested for every new version of TSDuck.

# (1) **Brand** Model Network Bus Linux Windows AVerMedia TD310 DVB-T2/C 1 USB Tested OK(30) Tested OK BlackGold PCIe BGT3620 DVB-T2/C 6 Not tested Tested OK **DVBSky** S960 DVB-S/S2 1 USB Tested OK Tested OK **DVBSky** S960C (3) USB Tested OK Tested OK DVB-S/S2 1 2 (4) DVB-T2/C USB Tested OK GoTView MasterHD3 Tested OK (5) 2 WinTV Nova-T-500 (6) DVB-T PCI Tested OK (7) Not tested Hauppauge Hauppauge WinTV Nova-TD-500 (8) DVB-T 2 PCI Tested OK (7,9) Not tested Tested OK (7, 11) WinTV Nova-T-Stick (10) DVB-T Tested OK (12) Hauppauge 1 USB USB Hauppauge WinTV Nova-T-Stick SE DVB-T Tested OK (7, 13) Tested OK (13) WinTV Nova-S DVB-S 1 PCI Tested OK Not tested Hauppauge WinTV Nova-HD-S2 (14) PCI Tested OK (15) Tested OK DVB-S/S2 1 Hauppauge Tested OK (16) WinTV-soloHD (2) DVB-T2/C 1 USB Not tested Hauppauge Hauppauge WinTV-dualHD (2) DVB-T2/C 2 USB Tested OK Not tested Hauppauge WinTV-HVR-935 DVB-T2/C 1 USB Tested OK Not tested MaxMedia HU 372 (24) DVB-T2/C 2 (4) USB Tested OK (5) Tested OK Tested OK MyGica S270<sup>(26)</sup> ISDB-T 1 USB Tested OK (27)

**Table 8: Tested DVB receiver devices** 

Version 3.22-1926 325 / 395



Brand	Model	Network	# (1)	Bus	Linux	Windows
MyGica	S2870	ISDB-T	2	USB	Tested OK (28)	Tested OK
Pinnacle	PCTV DVB-T Stick 72e	DVB-T	1	USB	Tested OK (7)	Tested OK
Pinnacle	PCTV nanoStick T2 290e (2)	DVB-T2/C	2	USB	Tested OK (17)	Tested OK
Pinnacle	PCTV DVB-S2 Stick 461e (2)	DVB-S/S2	1	USB	Not working (18, 19)	Tested OK (20)
PLEX	PX-S1UD (26)	ISDB-T	1	USB	Tested OK (27)	Tested OK
TBS	TBS 6284	DVB-T/T2	4	PCIe	Not tested	Tested OK
TBS	TBS 6903	DVB-S/S2	2	PCIe	Not tested	Tested OK
TBS	TBS 5922	DVB-S/S2	1	USB	Not tested	Tested OK
TBS	TBS 5925	DVB-S/S2	1	USB	Not tested	Tested OK
TBS	TBS 5580	Multiple (29)	2	USB	Tested OK	Tested OK
TBS	TBS 6704	ATSC	4	PCIe	Tested OK	Not tested
TBS	TBS 6904	DVB-S/S2	4	PCIe	Tested OK	Not tested
TechniSat	SkyStar USB HD	DVB-S/S2	1	USB	Not tested	Not working (21)
TechnoTrend	TT-connect CT-3650 CI	DVB-T/C	1	USB	Tested OK	Not tested
TechnoTrend	TT-connect S2-3600	DVB-S/S2	1	USB	Not tested	Tested OK (22)
TechnoTrend	TT-connect S2-4600	DVB-S/S2	1	USB	Not tested	Tested OK
TechnoTrend	TT-budget S2-4100	DVB-S/S2	1	PCIe	Not tested	Tested OK
Terratec	Cinergy T USB XE Rev 2 (23)	DVB-T	1	USB	Tested OK (24)	Tested OK
TeVii	H640 (24)	DVB-T2/C	2 (4)	USB	Tested OK (5)	Tested OK
TeVii	S482 DVB-S2	DVB-S/S2	2	PCIe	Not tested	Tested OK

## Notes from the table:

- 1. Number of tuners. When more than one is present, they usually appear as different receiver devices in the operating system.
- 2. This tuner discards null packets and cannot be used to modify a running TS on the fly and cannot compute reliable bitrates.
- 3. The DVBSky S960C has a DVB-CI CAM slot (not CI+).
- 4. The GoTView MasterHD3 has two demodulators, one for DVB-T and one for DVB-T2/C. On Windows, they appear as one single DVB-T tuner. On Linux, they appear as two frontends, one for DVB-T and one for DVB-T2/C.
- 5. With Linux kernels 4.2 up to 4.7, two frontends are available: frontend0 is DVB-T, frontend1 is DVB-T2/DVB-C. The support in kernels after version 4.7 is partial, something was broken. The device starts but only with the one (DVB-T) frontend. The second frontend (Si2168 demodulator for DVB-T2 and DVB-C) doesn't start due to i2c error.
- 6. The Hauppauge WinTV Nova-T-500 is a PCI board which embeds two USB tuners and a USB-to-PCI bridge.
- 7. Need the firmware file revision 1.20 for DiBcom-based DVB receiver devices on Linux, http://www.wi-bw.tfh-wildau.de/~pboettch/home/files/dvb-usb-dib0700-1.20.fw
- 8. The Nova-TD-500 is similar to the Nova-T-500 but has two aerial inputs instead of one.
- 9. Do not plug antenna cables in both aerial inputs, this leads to garbage reception. Use only the top aerial input and this feeds the two tuners. The bottom aerial input is not used. Also specify the following options in /etc/modprobe.d/options:
  - options dvb\_usb\_dib0700 force\_lna\_activation=1
    options dvb usb disable rc polling=1
- 10. Two different revisions exist: 70001 and 70009 (read the sticker).



- 11. Revision 70001 tested, works OK. Revision 70009 not tested.
- 12. Revision 70001 tested, works OK with the Hauppauge driver CD version 2.5E but does not work with recent drivers versions 3.x and 4.x. Revision 70009 not tested (requires drivers CD version 4.x).
- 13. Model 203, revision D1F4 70019 tested.
- 14. This is a "lite" version of the Hauppauge HVR-4000.
- 15. Need the dvb-fe-cx24116.fw firmware file. Known limitation: Some PCI DMA transfers are aborted without known reason, resulting in packet loss. The problem appears only on some hardware systems and may be related to PCI bus configuration. The problem is characterized by the following error messages from dmesg:

```
cx88[0]: irq mpeg [0x80000] pci_abort*
cx88[0]/2-mpeg: general errors: 0x00080000
```

- 16. On Windows, the Hauppauge software installation is incomplete. After installing the drivers, the WinTV-soloHD initially appears as one single DVB-T tuner. DVB-C is not accessible. The bundled application WinTV must be run at least once and tuned to a DVB-C transport. Afterwards, a second tuner is installed for DVB-C. This tuner is persistent after reboots.
- 17. Need the firmware file dvb-demod-si2168-b40-01.fw.
- 18. Need the firmware file for Montage M88DS3103-based DVB receiver devices on Linux from the OpenELEC dvb-firmware package. https://github.com/OpenELEC/dvb-firmware/blob/master/firmware/dvb-demod-m88ds3103.fw
- 19. Documented to work on Linux. But the experience demonstrates that it is mostly unreliable. The first tuning operation after insertion of the USB device works. Subsequent tuning operations fail.
- 20. On Windows, it has been observed that the PCTV 461e discards all null packets (PID 0x1FFF). As a consequence, transport stream analyses are incorrect, bitrates are incorrect and all *tsp* plugins which use stuffing to insert new packets do not work correctly.
- 21. The TechniSat drivers for Windows have a proprietary and unusual interface. They cannot be integrated in a DirectShow reception graph and, consequently, cannot be used by TSDuck.
- 22. DVB tuners drivers for Windows: http://www.tt-pc.com/2959/PC\_Products.html
- 23. Two different revisions exist: Rev 1 and Rev 2. They use different chipsets and need different drivers. Only the Rev 2 has been tested with TSDuck.
- 24. Reported as identical to GoTView Master HD3.
- 25. Need the firmware file for Afatech-based DVB receiver devices on Linux, http://www.otit.fi/~crope/v4l-dvb/af9015/af9015\_firmware\_cutter/firmware\_files/4.95.0/dvb-usb-af9015.fw
- 26. The ISDB-T tuners MyGica S270 and PLEX PX-S1UD are internally identical.
- 27. Need the firmware file from http://plex-net.co.jp/plex/px-s1ud/PX-S1UD\_driver\_Ver.1.0.1.zip or https://www.linuxtv.org/downloads/firmware/isdbt\_rio.inp
- 28. Need the firmware file https://linuxtv.org/downloads/firmware/dvb-usb-dib0700-1.20.fw
- 29. The TBS 5580 device has two tuners. The first one supports DVB-T/T2, DVB-C/C2 and ISDB-T. The second tuner supports DVB-S/S2/S2X with a CI interface.
- 30. Need the firmware files dvb-usb-it9303-01.fw, dvb-demod-si2168-b40-01.fw and dvb-demod-si2168-02.fw from https://github.com/OpenELEC/dvb-firmware/blob/master/firmware/

Version 3.22-1926 327 / 395



## 6.2 Dektec Devices

### 6.2.1 Overview

The Dektec devices include a wide range of professional MPEG/DVB devices: ASI input or output, modulators (QPSK, QAM, OFDM, ATSC, DMB, ISDB, etc), demodulators and IP multicasting. The PCI devices are named DTA-1xx and the USB devices are named DTU-2xx. The ASI devices can perform either input, output or both. See [31] for more details.

The tsp plugin named dektec can perform input or output on any Dektec device, provided that the appropriate drivers are installed on the system. Dektec provides drivers and API for their devices on Windows and Linux (see [32]). For each operating system, there are two Dektec drivers: one for all PCI devices and one for all USB devices.

## 6.2.2 Linux Platforms

The Dektec drivers are provided in source format. They must be compiled for each specific version of the Linux kernel.

For a better integration with the various distros, an independent project has been setup to create DKMS packages for Dektec drivers (see [33]). This project provides a script to build packages for Red Hat, CentOS, Fedora and Ubuntu distros, using the source code from the Dektec site. Pre-built packages are also available from the *releases* section in [33].

### 6.2.3 Microsoft Windows Platforms

The Dektec drivers are provided in binary format and can be directly installed. An installation guide is included in the zip file of each driver. See [32].

### 6.2.4 MacOS Platforms

Dektec provides no support for macOS. All Dektec features of TSDuck are disabled on macOS.

### **6.2.5 Tested Devices**

The following Dektec devices have been successfully tested with TSDuck:

- DTA-140 : PCI ASI input and output.
- DTU-245 : USB ASI input and output.
- DTA-107 : PCI DVB-S modulator.
- DTA-107S2: PCI DVB-S2 modulator.
- DTA-110T : PCI DVB-T modulator.
- DTA-115 : PCI multi-standard modulator (some modulation types are subject to optional licences) with an additional bidirectional ASI port.
- DTU-315 : USB-3 multi-standard modulator (subject to optional licences).
- DTA-2137C: PCIe DVB-S/S2 demodulator with ASI outputs.
- DTA-2138B : PCIe DVB-T/T2, DVB-C/C2, ISDB-T demodulator.

Any other Dektec device should work with TSDuck. Not having a Dektec device listed above is usually not an issue. The Dektec software interface is stable and consistent between Linux and Windows. The experience has demonstrated that using new Dektec devices using recent builds of TSDuck (i.e. containing a recent version of the Dektec API library) has always worked.

It is possible that new Dektec devices introduce new features or protocols which are not yet supported by TSDuck. Please report this in the TSDuck issue tracker (see [43]) so that the new feature can be implemented.



## 6.3 HiDes Devices

### 6.3.1 Overview

HiDes is a company from Taiwan, a manufacturer of cheap DVB-T devices (see [34]). These devices are based on chips from ITE Technologies Inc., also from Taiwan.

The UT-100C model is a USB DVB-T modulator adaptor (transmission). This device is probably the cheapest modulator on Earth for Digital TV.

Other models from HiDes include reception, ISDB-T support or PCIe interface. Currently, only USB DVB-T modulators are supported by TSDuck.

The tsp plugin named hides can perform output on HiDes devices, provided that the appropriate drivers are installed on the system. These drivers are available at [35].

### 6.3.2 Linux Platforms

The drivers for HiDes devices are provided in source format. It is unclear if these drivers were provided by HiDes or ITE. They must be compiled for each specific version of the Linux kernel.

For a better integration with the various distros, an independent project has been setup to create DKMS packages for HiDes drivers (see [35]). This project provides a script to build packages for Red Hat, CentOS, Fedora and Ubuntu distros. Pre-built packages are also available from the *releases* section in [35].

The name of a HiDes device is illustrated below:

```
$ tshides -v
Found 1 HiDes device

Index ...... 0
Name ........ "usb-it950x0"
Device ...... /dev/usb-it950x0
Chip type ..... 0x9507
Device type ..... 11
Driver version ... v16.11.10.1w
API version .... 1.3.20160929.0
Link firmware ... 255.39.2.0
OFDM firmware ... 255.9.11.0
Company ...... ITEtech
Hardware info ... Eagle DVBT
```

Note the 'w' at the end of the driver version. This indicates a modified "waiting" version of the driver as provided in [35].

The original driver from HiDes or ITE has a "polling" design which is much less efficient. If you have a driver version without trailing 'w', this is probably an original version of the driver. TSDuck will work but in a very inefficient way: each time packets shall be sent to the modulator, the *tsp* application has to actively wait (looping on very short timers) for the modulator to be ready, unnecessarily consuming CPU and lacking accuracy. With the modified 'w' version, the output thread of the *tsp* application is simply suspended until the very precise moment where the modulator is ready.

### 6.3.3 Microsoft Windows Platforms

The HiDes driver is provided in binary format and can be directly installed. The installer is in a zip file.

There is no known fixed reference URL for the latest version of the Windows driver. To make sure that TSDuck users can always find a working version of this driver, it is also available from the *releases* section in [35].

Unlike the Linux driver, the Windows driver has not been modified for TSDuck. The original driver is anyway delivered in binary form and cannot be easily modified. Note that the original Windows driver has a standard "waiting" design and does not suffer from the "polling" design of the original Linux driver.

The name of a HiDes device is a DirectShow filter name, as illustrated below:

```
C:\> tshides -v
```

Version 3.22-1926 329 / 395



### Found 1 HiDes device

```
Index ...... 0
Name ...... "IT9507 TX Filter"
Device ...... \?\usb#vid_048d&pid_9507#ut100cv4201504240422#{fbf6f530-07b9-11d2-a71e-0000f8004788}\{9963cc0e-ee70-11e0-ba8f-92d34824019b}
USB mode ..... 0x0200
Vendor id .... 0x048D
Product id .... 0x9507
Chip type .... 0x9507
Device type .... 11
Driver version .. 21.17.39.1
Link firmware ... 255.39.2.0
OFDM firmware ... 255.9.11.0
```

Identical devices use the same DirectShow filter and have probably identical names. The device path is unique but is a complicated Windows device reference and is barely usable. So, when we have several identical HiDes devices on the same machine, it is probably easier to reference them by adapter index (0, 1, 2, etc.) using option --adapter.

Note that the verbose display (option -v) is different between Windows and Linux. This is due to the distinct API's of the HiDes drivers on distinct operating system. The command *tshides* displays what is available for the platform it is running on.

## 6.3.4 MacOS Platforms

HiDes provides no support for macOS. All HiDes features of TSDuck are disabled on macOS.

## **6.3.5 Tested Devices**

The following HiDes devices have been successfully tested with TSDuck:

- UT-100C : USB DVB-T modulator.
- UT-100A: USB DVB-T receptor and modulator. Only the modulator is supported with TSDuck.

### 6.3.6 Power Constraints

The HiDes devices have no external power. They are exclusively powered through the USB port. It has been reported that some USB ports did not provide sufficient power to the device, resulting in random corruptions in the output stream.

In case of problem, try to connect the HiDes device to a powered USB 3.0 hub.

In [34], the HiDes documentation states that the maximum required power is 390 mA. But it is currently unclear if the HiDes device requires more than the normalized maximum of 500 mA from the USB port or if some USB ports fail to provide the required 500 mA.



# **Appendix A** TSDuck Configuration File

The TSDuck configuration file is used to specify default command line options or alternate options for all or selected TSDuck commands. This configuration file is specific per user.

## A.1 Configuration file location

The location of the user's TSDuck configuration file depends on the operating system.

• Unix: \$HOME/.tsduck

Windows: %APPDATA%\tsduck\tsduck.ini

## A.2 Configuration file format

The format of this file resembles the old ".INI" files on Windows systems. There is one main section, followed by several command-specific sections.

Here are the main rules for the configuration files:

- The main section comes first.
- A section starts with the section name enclosed in square brackets.
- The name of a section is the name of a TSDuck command (e.g. [tsp], [tsswitch], etc.)
- In a section, an entry has the syntax "name = value".
- An entry can be specified several times in a section when multiple values are allowed.
- When a TSDuck command searches for an entry in the configuration file, it searches first in the section with the name of the command. If the entry is not found here, it is searched in the top main section
- Lines starting with a dieresis (#) are comments and are ignored.
- Lines ending with a back-slash are continued on the next text line.
- Quotes can be used to group command line arguments when necessary.
- Back-slashes in the middle of a line are used to escape characters.

The following table lists the supported entries in the configuration file.

**Table 9: Configuration file entries** 

Entry name	Description	Apply to
default.options	Used as command line options when none are specified.	All commands
prepend.options	Options to prepend before the actual options.	All commands
append.options	Options to append after the actual options.	All commands
default.input	Default input plugin (with options) when none are specified.	tsp,tsswitch
default.plugin	Default packet processing plugin (with options) when none are specified.	tsp
default.output	Default output plugin (with options) when none are specified.	tsp,tsswitch
default.region	Default region for UHF / VHF frequency layout 8.	All commands
default.lnb	Default LNB type for satellite reception <sup>9</sup> .	All commands

The following example configuration file illustrates most entries.

# Sample configuration file

Version 3.22-1926 331 / 395

<sup>&</sup>lt;sup>8</sup> A list of all supported regions can be found in the file named *tsduck.hfbands.xml* in the same directory as all TSDuck binaries, commands and plugins.

<sup>&</sup>lt;sup>9</sup> A list of all supported LNB names and aliases can be found on the documentation of the option --1nb in the documentation of the *dvb* plugin and in the file named *tsduck.lnbs.xml* in the same directory as all TSDuck binaries, commands and plugins.



```
prepend.options = --verbose
   [tsversion]
   default.options = --all
   default.input = file '/home/john doe/name with spaces \' and quotes\'.ts'
   default.plugin = until --packet 1,000,000
   default.plugin = analyze
   default.output = drop
In this case, when the command tsp is used alone without arguments, the actual command will be:
   tsp --verbose \
       -I file '/home/john doe/name with spaces \' and quotes\'.ts' \
       -P until --packet 1,000,000 \
       -P analyze \
       -0 drop
If one type of plugin is specified, the defaults no longer apply. For instance, the command:
   tsp -P regulate
will become:
   tsp --verbose \
       -I file '/home/john doe/name with spaces \' and quotes\'.ts' \
       -P regulate \
       -0 drop
```

## A.3 Sample configuration files

### A.3.1 Using TSDuck on Japanese ISDB transport streams

A user who routinely analyzes Japanese transport streams only will have to use specific options in all TSDuck commands. It is consequently easier to setup a configuration file as follow:

```
default.region = japan
default.lnb = japan
prepend.options = --japan
[tsanalyze]
prepend.options = --japan
[tscharset]
prepend.options = --japan
[tspacketize]
prepend.options = --japan
[tspsi]
prepend.options = --japan
[tsscan]
prepend.options = --japan
[tstabcomp]
prepend.options = --japan
[tstabdump]
prepend.options = --japan
[tstables]
prepend.options = --japan
```



[tsterinfo]
prepend.options = --japan

Version 3.22-1926 333 / 395



# **Appendix B** Channel Configuration XML Reference Model

This appendix describes the XML reference format for the channel configuration file.

## B.1 File usage

A channel configuration file is an XML file containing the description of TV channels (networks, transport streams, services). This file is typically used to simplify the specification of tuning parameters on the command line. Instead of specifying all tuning parameters, use the option --channel-transponder followed by a service name. The TSDuck command retrieves the characteristics of the transport stream which contains the specified service and automatically uses its tuning parameters.

If the same service appears in networks of different types (for instance a DVB-S and a DVB-T network), the TSDuck command will use the one in the same type of network as the hardware tuner in use.

There is one default file per user but any other file can be specified using the option --tuning-file. The location of the user's default file depends on the operating system.

Unix: \$HOME/.tsduck.channels.xmlWindows: %APPDATA%\tsduck\channels.xml

## **B.2** Channel configuration file format

### **B.2.1** Conventions

The format which is used here is informal. It shall be considered as a template. It does not conform to any formal specification such as XML-Schema.

All allowed nodes and attributes are present in the template. The contents of attributes in this template are comments describing the expected content of the corresponding attribute in real XML files. The values of these attributes in the template are descriptive only; they would be invalid if directly used in input XML files for TSDuck.

Notes on types and formats:

- Tags and attributes are not case-sensitive.
- Integer values can be represented in decimal or hexadecimal (0x prefix).
- Booleans are "true" or "false".
- Some attributes accept symbols in addition to plain numerical values. The names of accepted symbols are listed in the attribute. Example:

```
type="ATSC|DVB-C|DVB-S|DVB-T|ISDB-T"
```

## **B.2.2 XML file structure**

An XML file describing channels for TSDuck uses <tsduck> as root node. The root node contains any number of networks which, in turn contain transport streams and services.

All XML files shall be encoded in UTF-8 format to allow international character sets in service names for instance. The initial declaration line "<?xml version="1.0" encoding="UTF-8"?>" is optional but recommended.

The global structure of the XML channel configuration file is the following:

```
<?xml version="1.0" encoding="UTF-8"?>
<tsduck>

<!-- Several networks in an XML file -->
    <!-- The type attribute must match the tuner type to locate a service -->
    <network id="uint16, required" type="ATSC|DVB-C|DVB-S|DVB-T|ISDB-T, required">
        <!-- Several transport streams in a network -->
        <ts id="uint16, required" onid="uint16, optional">
```



```
<!-- Tuning information: exactly one of atsc, dvbc, dvbs, dvbt -->
      <!-- Must match the network type -->
      <!-- Several services in the TS -->
      <service id="uint16, required"</pre>
               name="string, optional"
               provider="string, optional"
               LCN="uint16, optional"
               PMTPID="uint13, optional"
               type="uint8, optional"
               cas="bool, optional"
               atsc_type="uint6, optional"
               atsc_major_id="uint10, optional"
               atsc_minor_id="uint10, optional"/>
    </ts>
  </network>
</tsduck>
```

## **B.3** Tuning parameters

There must be exactly one tuning parameter structure per transport stream description (<ts> structure).

### B.3.1 ATSC

To be used for ATSC tuners:

```
<atsc frequency="uint64, required"
    modulation="8-VSB|16-VSB, default=8-VSB"
    inversion="on|off|auto, default=auto"/>
```

## B.3.2 DVB-C

To be used for DVB-C/C2 tuners:

### B.3.3 DVB-S

To be used for DVB-S/S2 tuners:

```
<dvbs satellite="uint2, default=0"
    orbital="string, optional"
    frequency="uint64, required"
    symbolrate="uint32, default=27,500,000"
    modulation="QPSK|8-PSK|16-APSK|32-APSK, default=QPSK"
    system="DVB-S|DVB-S2, default=DVB-S"
    polarity="horizontal|vertical|left|right|auto|none, default=auto"
    inversion="on|off|auto, default=auto"
    FEC="1/2|2/3|3/4|4/5|5/6|6/7|7/8|8/9|9/10|3/5|1/3|1/4|2/5|5/11|auto|none, default=auto"
    pilots="on|off|auto, default=auto"
    rolloff="0.20|0.25|0.35|auto, default=auto"
    ISI="uint8, optional"
    PLS_code="uint18, optional"
    PLS_mode="ROOT|GOLD|COMBO, default=ROOT"/>
```

## B.3.4 DVB-T

To be used for DVB-T/T2 tuners:

```
<dvbt frequency="uint64, required"
```

Version 3.22-1926 335 / 395



### B.3.5 ISDB-T

To be used for ISDB-T tuners:

```
<isdbt frequency="uint64, required"
    inversion="on|off|auto, default=auto"
    bandwidth="5-MHz|6-MHz|7-MHz|8-MHz|auto, default=auto"
    transmission="2K|4K|8K|auto, default=auto"
    guard="1/4|1/8|1/16|1/32|auto, default=auto"/>
```

### B.3.6 ISDB-S

To be used for ISDB-S tuners:

```
<isdbs satellite="uint2, default=0"
    orbital="string, optional"
    frequency="uint64, required"
    symbolrate="uint32, default=27,500,000"
    polarity="horizontal|vertical|left|right|auto|none, default=auto"
    inversion="on|off|auto, default=auto"
    FEC="1/2|2/3|3/4|5/6|7/8|auto|none, default=auto"/>
```



# Appendix C PSI/SI XML Reference Model

This appendix describes the XML reference format for all tables and descriptors.

## C.1 PSI/SI file format

### C.1.1 Conventions

The format which is used here is informal. It shall be considered as a template. It does not conform to any formal specification such as XML-Schema.

All allowed nodes and attributes are present in the template. The contents of attributes in this template are comments describing the expected content of the corresponding attribute in real XML files. The values of these attributes in the template are descriptive only; they would be invalid if directly used in input XML files for TSDuck.

Notes on types and formats:

- Tags and attributes are not case-sensitive.
- The names of tags and attributes are copied from ISO or DVB standards.
- Integer values can be represented in decimal or hexadecimal (0x prefix).
- Booleans are "true" or "false".
- Some attributes accept symbols in addition to plain numerical values. The names of accepted symbols are listed in the attribute. Example:

```
running status="undefined|not-running|starting|pausing|running|off-air"
```

- Hexadecimal content is a suite of hexadecimal digits. Spaces are ignored. Note that the name *hexadecimal content* is used for data blocks, usually private ones, of arbitrary length. This is different from integer values in attributes which can be represented as hexadecimal using the prefix 0x. In *hexadecimal content* blocks, there is no 0x prefix, everything is hexadecimal.
- The pseudo-node *<DESCRIPTOR LIST>* is a place-holder for a sequence a descriptor nodes.
- Unsupported tables and descriptors can still be used. Their payloads must be specified as hexadecimal content. See tags <generic\_short\_table>, <generic\_long\_table> and <generic descriptor> in section C.17, page 394.

## C.1.2 XML file structure

An XML file containing PSI/SI tables for TSDuck uses <tsduck> as root node. The root node contains any number of tables.

All XML files shall be encoded in UTF-8 format to allow international character sets in service names or event descriptions for instance. The initial declaration line "<?xml version="1.0" encoding="UTF-8"?>" is optional but recommended.

```
<?xml version="1.0" encoding="UTF-8"?>
<tsduck>
  <!-- any number of table structures -->
</tsduck>
```

## C.2 MPEG-defined tables

## C.2.1 Conditional Access Table (CAT)

Version 3.22-1926 337 / 395



### C.2.2 DSM-CC Stream Descriptors Table

```
Defined by MPEG in [2].

<DSMCC_stream_descriptors_table
    version="uint5, default=0"
    current="bool, default=true"
    table_id_extension="uint16, default=0xFFFF">
    <DESCRIPTOR_LIST>
    </DSMCC_stream_descriptors_table>
```

### C.2.3 Program Association Table (PAT)

### C.2.4 Program Map Table (PMT)

## C.2.5 Transport Stream Description Table (TSDT)

```
Defined by MPEG in [1].

<TSDT version="uint5, default=0" current="bool, default=true">

<DESCRIPTOR_LIST>

</TSDT>
```

## **C.3 DVB-defined tables**

### **C.3.1** Application Information Table (AIT)



## **C.3.2** Bouquet Association Table (BAT)

Defined by DVB in [5].

The optional attribute preferred\_section indicates in which section the description of a transport stream should be preferably serialized. When unspecified for a TS, the corresponding TS description is serialized in an arbitrary section.

### **C.3.3** Discontinuity Information Table

Defined by DVB in [5].

```
<discontinuity_information_table transition="bool, required"/>
```

## **C.3.4** Event Information Table (EIT)

Defined by DVB in [5]. This is the DVB version of an EIT. ATSC uses a different structure for EIT.

If type="pf", this is an EITp/f (present/following).

If type is a 4-bit integer, this is an EITs (schedule) with TID 0x50 + type (EITs Actual) or 0x60 + type (EITs Other), depending on the actual attribute.

When an EIT is compiled by TSDuck (serialized as binary sections), the events are sorted in ascending order of start time and spread over sections as described in [6].

The attribute last\_table\_id is optional. By default, it is set to the same table id as the table. Upon serialization, the DVB rules are enforced to bind its value within the DVB-specified limits.

```
<EIT type="pf|uint4, default=pf"
    version="uint5, default=0"
    current="bool, default=true"
    actual="bool, default=true"
    service_id="uint16, required"
    transport_stream_id="uint16, required"
    original_network_id="uint16, required"
    last_table_id="uint8, default=same as table id">

    <!-- One per event -->
    <event event_id="uint16, required"
        start_time="YYYY-MM-DD hh:mm:ss, required"
        duration="hh:mm:ss, required"
        running_status="undefined|not-running|starting|pausing|running|off-air,</pre>
```

Version 3.22-1926 339 / 395



## C.3.5 IP/MAC Notification Table (INT)

```
Defined by DVB in [13].
   <INT version="uint5, default=0"</pre>
        current="bool, default=true"
        action_type="uint8, default=0x01"
        processing_order="uint8, default=0x00"
        platform_id="uint24, required">
     <!-- Plaform-level descriptors -->
     <DESCRIPTOR_LIST>
     <!-- One per device -->
     <device>
       <target>
         <DESCRIPTOR_LIST>
       </target>
       <operational>
         <DESCRIPTOR LIST>
       </operational>
     </device>
   </INT>
```

## C.3.6 Network Information Table (NIT)

Defined by DVB in [5].

The optional attribute preferred\_section indicates in which section the description of a transport stream should be preferably serialized. When unspecified for a TS, the corresponding TS description is serialized in an arbitrary section.

## C.3.7 Running Status Table (RST)



```
running_status="undefined|not-running|starting|pausing|running|off-air,
                             required"/>
   </RST>
C.3.8
        Selection Information Table (SIT)
Defined by DVB in [5].
   <selection_information_table version="uint5, default=0" current="bool, default=true">
     <!-- Common descriptors loop, for transmission parameters -->
     <DESCRIPTOR LIST>
     <!-- One per service -->
     <service service_id="uint16, required"</pre>
              running_status="undefined|not-running|starting|pausing|running|off-air,
                               required">
       <DESCRIPTOR_LIST>
     </service>
   </selection_information_table>
C.3.9
        Service Description Table (SDT)
Defined by DVB in [5].
   <SDT version="uint5, default=0"</pre>
        current="bool, default=true"
        transport stream id="uint16, required"
        original_network_id="uint16, required"
        actual="bool, default=true">
     <!-- One per service -->
     <service service_id="uint16, required"</pre>
              EIT_schedule="bool, default=false"
              EIT_present_following="bool, default=false"
              running_status="undefined|not-running|starting|pausing|running|
                               off-air, default=undefined"
              CA mode="bool, default=false">
       <DESCRIPTOR LIST>
     </service>
   </SDT>
C.3.10
        Time and Date Table (TDT)
Defined by DVB in [5].
   <TDT UTC time="YYYY-MM-DD hh:mm:ss, required"/>
        Time Offset Table (TOT)
C.3.11
Defined by DVB in [5].
   <TOT UTC_time="YYYY-MM-DD hh:mm:ss, required">
     <DESCRIPTOR_LIST>
   </T0T>
        Update Notification Table (UNT)
C.3.12
Defined by DVB in [8].
   <UNT version="uint5, default=0"</pre>
        current="bool, default=true"
        action_type="uint8, default=0x01"
```

Version 3.22-1926 341 / 395

OUI="uint24, required"

processing\_order="uint8, default=0x00">



```
<!-- Common descriptors, apply to all SSU -->
  <DESCRIPTOR_LIST>
  <!-- One per set of devices -->
  <devices>
    <!-- More than one allowed, each one is an individual descriptor -->
    <!-- inside compatibilityDescriptor() -->
    <compatibilityDescriptor</pre>
        descriptorType="uint8, required"
        specifierType="uint8, default=0x01"
        specifierData="uint24, required"
        model="uint16, default=0x00"
        version="uint16, default=0x00">
     <!-- Several subdescriptors -->
      <subDescriptor subDescriptorType="uint8, required">
        Hexadecimal content
      </subDescriptor>
    </compatibilityDescriptor>
   <!-- One per platform -->
    <platform>
      <target>
        <DESCRIPTOR LIST>
      </target>
     <operational>
        <DESCRIPTOR LIST>
      </operational>
    </platform>
  </devices>
</UNT>
```

### C.4 SCTE-defined tables

## C.4.1 Cable Emergency Alert Table (SCTE 18)

Defined by ANSI/SCTE in [17].

```
<cable emergency alert table</pre>
    sequence_number="uint5, required"
   protocol_version="uint8, default=0"
   EAS_event_ID="uint16, required"
   EAS_originator_code="char3, required"
   EAS_event_code="string, required"
   alert_message_time_remaining="uint8, optional"
   event_start_time="YYYY-MM-DD hh:mm:ss, optional"
   event_duration="uint16, optional"
   alert_priority="uint4, required"
   details_00B_source_ID="uint16, optional"
   details_major_channel_number="uint10, optional"
   details_minor_channel_number="uint10, optional"
   audio_00B_source_ID="uint16, optional">
 <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
  <nature_of_activation_text>
    <string language="char3, required" text="string, required"/>
  </nature_of_activation_text>
 <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
  <alert text>
    <string language="char3, required" text="string, required"/>
  </alert_text>
  <!-- From 1 to 31 location structures -->
  <location</pre>
```



## **C.4.2** Splice Information Table (SCTE 35)

Defined by ANSI/SCTE in [18].

Exactly one of the following tags is allowed. This is the splice command in this table.

```
<splice null>
   <splice_schedule>
   <splice_insert>
   <time_signal>
   <bandwidth_reservation>
   <private_command>
Table definition:
   <splice_information_table</pre>
       protocol_version="uint8, default=0"
       pts_adjustment="uint33, default=0"
       tier="uint12, default=0xFFF">
     <!-- Splice commands, only one of them is allowed -->
     <splice_null/>
     <splice schedule>
       <!-- One per splice event -->
       <splice_event</pre>
           splice event id="uint32, required"
           splice event cancel="bool, default=false"
           out_of_network="bool, required when splice_event_cancel is false"
           utc_splice_time="uint32, required when splice_event_cancel is false and
                             program_splice_flag is to be set"
           unique_program_id="uint16, required when splice_event_cancel is false"
           avail_num="uint8, default=0"
           avails_expected="uint8, default=0">
         <!-- Optional -->
         <break duration</pre>
             auto_return="bool, required"
             duration="uint33, required"/>
         <!-- One per component when splice_event_cancel is false and
              utc_splice_time is not specified -->
         <component</pre>
             component_tag="uint8, required"
             utc_splice_time="uint32, required"/>
       </splice event>
     </splice_schedule>
     <splice_insert</pre>
         splice_event_id="uint32, required"
         splice_event_cancel="bool, default=false"
```

Version 3.22-1926 343 / 395

out\_of\_network="bool, required when splice\_event\_cancel is false"



```
splice_immediate="bool, default=false"
      pts_time="uint33, required when splice_event_cancel is false and
                splice_immediate is false and program_splice_flag is to be set"
      unique_program_id="uint16, required when splice_event_cancel is false"
      avail_num="uint8, default=0"
      avails_expected="uint8, default=0">
    <!-- Optional -->
    <break duration</pre>
        auto return="bool, required"
        duration="uint33, required"/>
    <!-- One per component when splice event cancel is false and
        pts time is not specified -->
    <component</pre>
         component_tag="uint8, required"
         pts_time="uint33, required when splice_immediate is false"/>
  </splice_insert>
  <time_signal pts_time="uint33, optional"/>
  <bandwidth_reservation/>
  <private_command identifier="uint32, required">
   Hexadecimal digits.
  </private command>
  <DESCRIPTOR_LIST>
</splice information table>
```

### C.5 ATSC-defined tables

## C.5.1 Cable Virtual Channel Table (CVCT)

```
Defined by ATSC in [21].
  <CVCT version="uint5, default=0"</pre>
         current="bool, default=true"
         protocol_version="uint8, default=0"
         transport_stream_id="uint16, required">
     <!-- Common descriptors loop -->
     <DESCRIPTOR_LIST>
     <!-- One per channel -->
     <channel short_name="string, required"</pre>
              major_channel_number="uint10, required"
              minor_channel_number="uint10, required"
              modulation_mode="analog|64-QAM|256-QAM|8-VSB|16-VSB|uint8, required"
              carrier_frequency="uint32, default=0"
              channel_TSID="uint16, required"
              program_number="uint16, required"
              ETM location="uint2, default=0"
              access_controlled="bool, default=false"
              hidden="bool, default=false"
              path_select="uint1, default=0"
              out_of_band="bool, default=0"
              hide_guide="bool, default=false"
              service_type="analog|dtv|audio|data|software|uint6, default=dtv"
              source_id="uint16, required">
       <DESCRIPTOR LIST>
     </channel>
   </CVCT>
```



#### C.5.2Directed Channel Change Table (DCCT)

```
Defined by ATSC in [21].
   <DCCT version="uint5, default=0"</pre>
         protocol_version="uint8, default=0"
         dcc_subtype="uint8, default=0"
         dcc_id="uint8, required">
     <!-- Common descriptors loop -->
     <DESCRIPTOR LIST>
     <!-- One per channel change test -->
     <dcc_test dcc_context="temporary_retune|channel_redirect|uint1, required"</pre>
               dcc_from_major_channel_number="uint10, required"
               dcc_from_minor_channel_number="uint10, required"
               dcc_to_major_channel_number="uint10, required"
               dcc_to_minor_channel_number="uint10, required"
               dcc_start_time="YYYY-MM-DD hh:mm:ss, required"
               dcc_end_time="YYYY-MM-DD hh:mm:ss, required">
       <!-- DCC test descriptors loop -->
       <DESCRIPTOR LIST>
       <!-- One per channel change test -->
       <dcc_term dcc_selection_type="uint8, required"</pre>
                 dcc_selection_id="uint64, required">
         <!-- DCC term descriptors loop -->
         <DESCRIPTOR_LIST>
       </dcc_term>
     </dcc_test>
   </DCCT>
        Directed Channel Change Selection Code Table (DCCSCT)
```

## C.5.3

```
Defined by ATSC in [21].
   <DCCSCT version="uint5, default=0"</pre>
           protocol_version="uint8, default=0"
           dccsct_type="uint16, default=0">
     <!-- Common descriptors loop -->
     <DESCRIPTOR_LIST>
     <!-- One per update -->
     <update update_type="new_genre_category|new_state|new_county|uint8, required"</pre>
             genre_category_code="uint8, required when update_type == new_genre_category"
             dcc_state_location_code="uint8, required when update_type == new_state"
             state_code="uint8, required when update_type == new county"
             dcc_county_location_code="uint10, required when update_type == new_county">
       <!-- Update descriptors loop -->
       <DESCRIPTOR LIST>
       <!-- multiple_string_structure(), required when update_type==new_genre_category -->
       <genre_category_name_text>
         <string language="char3, required" text="string, required"/>
       </genre category name text>
       <!-- ATSC multiple_string_structure(), required when update_type == new_state -->
       <dcc state location code text>
         <string language="char3, required" text="string, required"/>
       </dcc_state_location_code_text>
       <!-- ATSC multiple_string_structure(), required when update_type == new_county -->
```

Version 3.22-1926 345 / 395



## **C.5.4** Event Information Table (EIT)

Defined by ATSC in [21].

To avoid conflicts with the DVB version of an EIT, the XML structure is named <ATSC\_EIT>. The tag <EIT> designates a DVB EIT.

```
<artsc eif version="uint5, default=0"
          source id="uint16, required"
          protocol_version="uint8, default=0">
  <!-- One per event -->
  <event event id="uint16, required"</pre>
         start time="YYYY-MM-DD hh:mm:ss, required"
         ETM location="uint2, required"
         length_in_seconds="uint20, required">
    <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
    <title_text>
      <string language="char3, required" text="string, required"/>
    </title_text>
    <!-- Event descriptors loop -->
    <DESCRIPTOR_LIST>
  </event>
</ATSC_EIT>
```

## C.5.5 Extended Text Table (ETT)

### C.5.6 Master Guide Table (MGT)

```
Defined by ATSC in [21].
```



```
version_number="uint5, required"
            number_bytes="uint32, required">
       <DESCRIPTOR LIST>
     </MGT>
C.5.7
        Rating Region Table (RRT)
Defined by ATSC in [21].
   <RRT version="uint5, default=0"</pre>
       protocol_version="uint8, default=0"
       rating_region="uint8, required">
     <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
     <rating region name>
       <string language="char3, required" text="string, required"/>
     </rating_region_name>
    <!-- One per dimension -->
    <dimension graduated_scale="bool, required">
       <!-- Optional ATSC multiple string structure() containing one or more strings -->
       <dimension name>
         <string language="char3, required" text="string, required"/>
       </dimension name>
       <!-- One per rating value -->
       <value>
         <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
         <abbrev_rating_value>
           <string language="char3, required" text="string, required"/>
         </abbrev_rating_value>
         <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
         <rating_value>
           <string language="char3, required" text="string, required"/>
         </rating_value>
       </value>
     </dimension>
     <DESCRIPTOR LIST>
  </RRT>
C.5.8
        System Time Table (STT)
Defined by ATSC in [21].
   <STT protocol_version="uint8, default=0"</pre>
        system_time="uint32, required"
        GPS_UTC_offset="uint8, required"
       DS_status="bool, required"
       DS day of month="uint5, default=0"
       DS_hour="uint8, default=0">
    <DESCRIPTOR LIST>
  </STT>
```

### **C.5.9** Terrestrial Virtual Channel Table (TVCT)

Defined by ATSC in [21].

Version 3.22-1926 347 / 395



```
<TVCT version="uint5, default=0"
      current="bool, default=true"
      protocol version="uint8, default=0"
      transport_stream_id="uint16, required">
  <!-- Common descriptors loop -->
  <DESCRIPTOR LIST>
  <!-- One per channel -->
  <channel short name="string, required"</pre>
           major channel number="uint10, required"
           minor channel number="uint10, required"
           modulation_mode="analog|64-QAM|256-QAM|8-VSB|16-VSB|uint8, required"
           carrier_frequency="uint32, default=0"
           channel_TSID="uint16, required"
           program_number="uint16, required"
           ETM_location="uint2, default=0"
           access_controlled="bool, default=false"
           hidden="bool, default=false"
           hide_guide="bool, default=false"
           service_type="analog|dtv|audio|data|software|uint6, default=dtv"
           source_id="uint16, required">
    <DESCRIPTOR LIST>
  </channel>
</TVCT>
```

### **C.6** ISDB-defined tables

## **C.6.1** Broadcaster Information Table (BIT)

## **C.6.2** Event Relation Table (ERT)



</ERT>

## **C.6.3** Index Transmission information Table (ITT)

### **C.6.4** Linked Description Table (LDT)

### **C.6.5** Local event Information Table (LIT)

## C.6.6 Network Board Information Table (NBIT)

Version 3.22-1926 349 / 395



```
<DESCRIPTOR_LIST>
</information>
</NBIT>
```

The attribute *body* indicates if the NBIT carries actual information body (table id 0xC5 when true) or reference to information (table id 0xC6 when false).

## C.6.7 Partial Content Announcement Table (PCAT)

```
Defined by ARIB in [24].
   <PCAT version="uint5, default=0"</pre>
         current="bool, default=true"
         service_id="uint16, required"
         transport_stream_id="uint16, required"
         original network id="uint16, required"
         content_id="uint32, required">
     <!-- One per content version -->
     <version content version="uint16, required"</pre>
              content_minor_version="uint16, required"
              version indicator="uint2, required">
       <!-- One per schedule entry -->
       <schedule start_time="YYYY-MM-DD hh:mm:ss, required"</pre>
                 duration="hh:mm:ss, required"/>
       <DESCRIPTOR LIST>
     </re>
```

## **C.7** MPEG-defined descriptors

### C.7.1 af\_extensions\_descriptor

```
Defined by MPEG in [1]. <af_extensions_descriptor/>
```

## C.7.2 association\_tag\_descriptor

Defined by MPEG in [2].

</PCAT>

```
<association_tag_descriptor
    association_tag="uint16, required"
    use="uint16, required">
    <selector_bytes>
        Hexadecimal content
    </selector_bytes>
    <private_data>
        Hexadecimal content
    </private_data>
        </private_data>
        </association_tag_descriptor>
```

# C.7.3 audio\_stream\_descriptor

```
Defined by MPEG in [1].
    <audio_stream_descriptor
          free_format="bool, required"
          ID="uint1, required"</pre>
```

layer="uint2, required"
variable\_rate\_audio="bool, required"/>



## C.7.4 AVC\_timing\_and\_HRD\_descriptor

```
Defined by MPEG in [1].

<avc_timing_and_HRD_descriptor
    hrd_management_valid="bool, required"
    N_90khz="uint32, optional"
    K_90khz="uint32, optional"
    num_units_in_tick="uint32, optional"
    fixed_frame_rate="bool, required"
    temporal_poc="bool, required"
    picture_to_display_conversion="bool, required"/>
```

### C.7.5 AVC\_video\_descriptor

```
Defined by MPEG in [1].
```

```
<AVC video descriptor
```

```
profile_idc="uint8, required"
constraint_set0="bool, required"
constraint_set1="bool, required"
constraint_set2="bool, required"
AVC_compatible_flags="uint5, required"
level_idc="uint8, required"
AVC_still_present="bool, required"
AVC_24_hour_picture="bool, required"/>
```

### C.7.6 CA\_descriptor

## C.7.7 carousel\_identifier\_descriptor

Defined by MPEG in [2].

</CA\_descriptor>

```
<carousel_identifier_descriptor carousel_id="uint32, required">
  <private_data>
    Hexadecimal content
  </private_data>
</carousel_identifier_descriptor>
```

### C.7.8 copyright\_descriptor

Defined by MPEG in [1].

```
<copyright_descriptor copyright_identifier="uint32, required">
    <additional_copyright_info>
        Hexadecimal content (optional element)
      </additional_copyright_info>
    </copyright_descriptor>
```

## C.7.9 data\_stream\_alignment\_descriptor

```
Defined by MPEG in [1].
```

```
<data_stream_alignment_descriptor alignment_type="uint8, required"/>
```

### C.7.10 deferred\_association\_tags\_descriptor

Defined by MPEG in [2].

```
<deferred_association_tags_descriptor
    transport_stream_id="uint16, required"</pre>
```

Version 3.22-1926 351 / 395



```
program_number="uint16, required">
     <!-- One per association tag -->
     <association tag="uint16, required"/>
     <private_data>
       Hexadecimal content
     </private_data>
   </deferred association tags descriptor>
C.7.11
        external_ES_ID_descriptor
Defined by MPEG in [1].
   <external_ES_ID_descriptor external_ES_ID="uint16, required"/>
         flexmux_timing_descriptor
Defined by MPEG in [1].
   <flexmux_timing_descriptor</pre>
       FCR_ES_ID="uint16, required"
       FCRResolution="uint32, required"
       FCRLength="uint8, required"
       FmxRateLength="uint8, required"/>
C.7.13
        FMC_descriptor
Defined by MPEG in [1].
   <FMC_descriptor>
     <!-- One per SL packetized stream -->
     <stream ES_ID="uint16, required" FlexMuxChannel="uint8, required"/>
   </FMC_descriptor>
C.7.14
         HEVC_timing_and_HRD_descriptor
Defined by MPEG in [1].
   <HEVC timing and HRD descriptor</pre>
       hrd_management_valid="bool, required"
       target_schedule_idx="uint5, optional"
       N_90khz="uint32, optional, specify both N and K or none"
       K_90khz="uint32, optional, specify both N and K or none"
num_units_in_tick="uint32, optional"/>
C.7.15
        HEVC_video_descriptor
Defined by MPEG in [1].
   <HEVC_video_descriptor</pre>
       profile_space="uint2, required"
       tier flag="bool, required"
       profile_idc="uint5, required"
       profile_compatibility_indication="uint32, required"
       progressive_source_flag="bool, required"
       interlaced source flag="bool, required"
       non_packed_constraint_flag="bool, required"
       frame_only_constraint_flag="bool, required"
       copied_44bits="uint44, default=0"
       reserved zero 44bits="uint44, default=0"
       level_idc="uint8, required"
       HEVC_still_present_flag="bool, required"
       HEVC_24hr_picture_present_flag="bool, required"
       sub_pic_hrd_params_not_present="bool, default=true"
       HDR_WCG_idc="uint2, default=3"
       temporal_id_min="uint3, optional, specify both min and max or none"
       temporal_id_max="uint3, optional, specify both min and max or none"/>
```



Note: The attributes  $reserved\_zero\_44bits$  and  $copied\_44bits$  are identical. The former is the original name in amendment 3 of [1] and the latter is the new name when the amendment was integrated in [1]. Both attributes are optional but only one shall be specified.

## C.7.16 hierarchy\_descriptor

```
Defined by MPEG in [1].
```

```
<hierarchy_descriptor</pre>
```

```
temporal_scalability="bool, required"
spatial_scalability="bool, required"
quality_scalability="bool, required"
hierarchy_type="uint4, required"
hierarchy_layer_index="uint6, required"
tref_present="bool, required"
hierarchy_embedded_layer_index="uint6, required"
hierarchy_channel="uint6, required"/>
```

## C.7.17 IBP\_descriptor

### C.7.18 ISO\_639\_language\_descriptor

```
Defined by MPEG in [1].
```

```
<ISO_639_language_descriptor>
  <!-- One per Language -->
    <language code="char3, required" audio_type="uint8, required"/>
</ISO 639 language descriptor>
```

### C.7.19 J2K\_video\_descriptor

```
Defined by MPEG in [1].
```

```
<J2K_video_descriptor
```

```
profile_and_level="uint16, required"
horizontal_size="uint32, required"
vertical_size="uint32, required"
max_bit_rate="uint32, required"
max_buffer_size="uint32, required"
DEN_frame_rate="uint16, required"
NUM_frame_rate="uint16, required"
color_specification="uint8, required"
still_mode="bool, required"
interlaced_video="bool, required">
<private_data>
    Hexadecimal content
</private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></private_data></pri>
```

## C.7.20 maximum\_bitrate\_descriptor

```
Defined by MPEG in [1].
```

```
<maximum bitrate_descriptor maximum bitrate="uint32, in bits/second, required"/>
```

### C.7.21 metadata\_STD\_descriptor

Defined by MPEG in [1].

Version 3.22-1926 353 / 395



```
<metadata_STD_descriptor</pre>
       metadata_input_leak_rate="uint22, required"
       metadata buffer size="uint22, required"
       metadata_output_leak_rate="uint22, required"/>
C.7.22
        MPEG2_AAC_audio_descriptor
Defined by MPEG in [1].
   <MPEG2_AAC_audio_descriptor</pre>
       MPEG2_AAC_profile="uint8, required"
       MPEG2 AAC channel configuration="uint8, required"
       MPEG2_AAC_additional_information="uint8, required"/>
C.7.23
        MPEG2_stereoscopic_video_format_descriptor
Defined by MPEG in [1].
   <MPEG2_stereoscopic_video_format_descriptor arrangement_type="uint7, optional"/>
C.7.24
         MPEG4_audio_descriptor
Defined by MPEG in [1].
   <MPEG4_audio_descriptor MPEG4 audio profile and level="uint8, required"/>
C.7.25
        MPEG4_video_descriptor
Defined by MPEG in [1].
   <MPEG4_video_descriptor MPEG4_visual_profile_and_level="uint8, required"/>
C.7.26
        multiplex_buffer_descriptor
Defined by MPEG in [1].
   <multiplex_buffer_descriptor</pre>
       MB buffer size="uint24, required"
       TB_leak_rate="uint24, required"/>
C.7.27
         multiplex_buffer_utilization_descriptor
Defined by MPEG in [1]. The two attributes must be present both or absent both.
   <multiplex_buffer_utilization_descriptor</pre>
       LTW_offset_lower_bound="uint15, optional"
       LTW_offset_upper_bound="uint15, optional"/>
C.7.28
       MVC_extension_descriptor
Defined by MPEG in [1].
   <MVC extension descriptor
       average_bitrate="uint16, required"
       maximum bitrate="uint16, required"
       view association not present="bool, required"
       base view is left eyeview="bool, required"
       view_order_index_min="uint10, required"
       view_order_index_max="uint10, required"
       temporal id start="uint3, required"
       temporal_id_end="uint3, required"
       no_sei_nal_unit_present="bool, required"
       no_prefix_nal_unit_present="bool, required"/>
C.7.29
        NPT_endpoint_descriptor
Defined by MPEG in [2].
   <NPT endpoint descriptor
```

354 / 395 Version 3.22-1926

start\_NPT="uint33, required"



```
stop_NPT="uint33, required"/>
```

### C.7.30 NPT\_reference\_descriptor

Defined by MPEG in [2].

```
<NPT_reference_descriptor
  post_discontinuity="bool, default=false"
  content_id="uint7, default=0x7F"
  STC_reference="uint33, required"
  NPT_reference="uint33, required"
  scale numerator="uint16, required"</pre>
```

scale\_denominator="uint16, required"/>

### C.7.31 private\_data\_indicator\_descriptor

```
Defined by MPEG in [1].
```

```
<private_data_indicator_descriptor private_data_indicator="uint32, required"/>
```

### C.7.32 registration\_descriptor

```
Defined by MPEG in [1].
```

```
<registration_descriptor format_identifier="uint32, required">
    <additional_identification_info>
        Hexadecimal content (optional element)
      </additional_identification_info>
</registration descriptor>
```

### C.7.33 SL\_descriptor

```
Defined by MPEG in [1].

<SL_descriptor ES_ID="uint16, required"/>
```

## C.7.34 smoothing\_buffer\_descriptor

```
Defined by MPEG in [1].
```

```
<smoothing_buffer_descriptor
    sb_leak_rate="uint22, required"
    sb size="uint22, required"/>
```

### C.7.35 STD\_descriptor

### C.7.36 stereoscopic\_program\_info\_descriptor

```
Defined by MPEG in [1].
```

```
<stereoscopic_program_info_descriptor stereoscopic_service_type="uint3, required"/>
```

## C.7.37 stereoscopic\_video\_info\_descriptor

Defined by MPEG in [1].

### <stereoscopic\_video\_info\_descriptor</pre>

```
base_video="bool, required"
leftview="bool, optional"
usable_as_2D="bool, optional"
horizontal_upsampling_factor="uint4, optional"
vertical_upsampling_factor="uint4, optional"/>
```

Version 3.22-1926 355 / 395



### C.7.38 stream\_event\_descriptor

Defined by MPEG in [2]. Note: <private\_data> and <private\_text> are mutually exclusive. They both define the same private data part, the former using hexadecimal format and the latter ASCII text.

```
<stream_event_descriptor</pre>
       event_id="uint16, required"
       event_NPT="uint33, required">
     <private_data>
      Hexadecimal content
     </private data>
     <private text>
      ASCII string to be used instead of private_data
     </private_text>
   </stream_event_descriptor>
C.7.39
        stream_mode_descriptor
Defined by MPEG in [2].
   <stream_mode_descriptor stream_mode="uint8, required"/>
C.7.40
        SVC_extension_descriptor
Defined by MPEG in [1].
   <SVC_extension_descriptor
       width="uint16, required"
       height="uint16, required"
       frame rate="uint16, required"
       average_bitrate="uint16, required"
       maximum_bitrate="uint16, required"
       dependency_id="uint3, required"
       quality_id_start="uint4, required"
       quality_id_end="uint4, required"
       temporal_id_start="uint3, required"
       temporal id end="uint3, required"
       no_sei_nal_unit_present="bool, required"/>
C.7.41
        system_clock_descriptor
Defined by MPEG in [1].
   <system_clock_descriptor</pre>
       external_clock_reference="bool required"
       clock accuracy integer="uint6, required"
       clock_accuracy_exponent="uint3, required"/>
C.7.42
        target_background_grid_descriptor
Defined by MPEG in [1].
   <target_background_grid_descriptor</pre>
       horizontal size="uint14, required"
       vertical size="uint14, required"
       aspect_ratio_information="uint4, required"/>
C.7.43
        transport_profile_descriptor
Defined by MPEG in [1].
   <transport_profile_descriptor transport_profile="uint8, required">
     <private data>
      Hexadecimal content
     </private_data>
   </transport_profile_descriptor>
```



### C.7.44 video\_stream\_descriptor

### C.7.45 video\_window\_descriptor

```
Defined by MPEG in [1].

<video_window_descriptor
    horizontal_offset="uint14, required"
    vertical_offset="uint14, required"
    window priority="uint4, required"/>
```

## **C.8 DVB-defined descriptors**

Note that a few descriptors are allowed in specific tables only since they reuse tag values which are otherwise MPEG-reserved [1]. They cannot be used elsewhere. These restrictions, when applicable, are documented in XML comments for the table-specific descriptor. Such descriptors exist for the AIT [11], the UNT [12] and the INT [13].

## C.8.1 AAC\_descriptor

```
Defined by DVB in [5].
```

```
<AAC_descriptor
    profile_and_level="uint8, required"
    SAOC_DE="bool, default=false"
    AAC_type="uint8, optional">
    <additional_info>
        Hexadecimal content, optional
    </additional_info>
</AAC_descriptor>
```

### C.8.2 AC3\_descriptor

Defined by DVB in [5].

Because of the presence of an ATSC version of the *AC3\_descriptor*, the XML name for the DVB version is <DVB\_AC3\_descriptor>. For compatibility, <AC3\_descriptor> is still accepted.

```
<DVB_AC3_descriptor
    component_type="uint8, optional"
    bsid="uint8, optional"
    mainid="uint8, optional"
    asvc="uint8, optional">
    <additional_info>
        Hexadecimal content, optional
    </additional_info>
</DVB_AC3_descriptor>
```

## C.8.3 AC4\_descriptor

Defined by DVB in [5].

Because of the possible introduction of an ATSC version of the *AC4\_descriptor*, the XML name for the DVB version is <DVB\_AC4\_descriptor>. For compatibility, <AC4\_descriptor> is still accepted.

```
<DVB_AC4_descriptor
```

Version 3.22-1926 357 / 395



```
ac4_dialog_enhancement_enabled="bool, optional"
    ac4_channel_mode="uint2, optional">
    <ac4_dsi_toc>
        Hexadecimal content, optional
    </ac4_dsi_toc>
        <additional_info>
        Hexadecimal content, optional
        </additional_info>
        </ddditional_info>
    </dDVB_AC4_descriptor>
```

## C.8.4 adaptation\_field\_data\_descriptor

```
Defined by DVB in [5].
```

```
<adaptation_field_data_descriptor adaptation_field_data_identifier="uint8, required"/>
```

### C.8.5 ancillary\_data\_descriptor

```
Defined by DVB in [5].
```

```
<ancillary_data_descriptor ancillary_data_identifier="uint8, required"/>
```

## C.8.6 announcement\_support\_descriptor

Defined by DVB in [5].

Note that the 16-bit field named *announcement\_support\_indicator* is automatically built as a bit-mask from all *announcement\_type* values.

```
<announcement_support_descriptor>
  <!-- One per announcement type -->
```

```
<announcement
    announcement_type="uint4, required"
    reference_type="uint3, required"
    original_network_id="uint16, optional"
    transport_stream_id="uint16, optional"
    service_id="uint16, optional"
    component_tag="uint8, optional"/>
</announcement support descriptor>
```

### C.8.7 application\_descriptor

Defined by DVB in [11]. Must be in an AIT (table id 0x74).

```
<application_descriptor</pre>
```

```
service_bound="bool, required"
  visibility="uint2, required"
  application_priority="uint8, required">
  <!-- One per profile -->
  <profile
     application_profile="uint16, required"
     version="string 'major.minor.micro', required"/>
  <!-- One per transport_protocol_label -->
  <transport_protocol label="uint8, required"/>
</application_descriptor>
```

## C.8.8 application\_icons\_descriptor

Defined by DVB in [11]. Must be in an AIT (table id 0x74).

```
<application_icons_descriptor</pre>
```

```
icon_locator="string, required"
icon_flags="uint16, required">
<reserved_future_use>
Hexadecimal content
</reserved_future_use>
</application_icons_descriptor>
```



```
C.8.9
         application_name_descriptor
Defined by DVB in [11] and [14]. Must be in an AIT (table id 0x74).
   <application_name_descriptor>
     <!-- One per Language -->
     <language code="char3, required" application_name="string, required"/>
   </application_name_descriptor>
C.8.10
        application_recording_descriptor
Defined by DVB in [11]. Must be in an AIT (table id 0x74).
   <application_recording_descriptor</pre>
       scheduled recording="bool, required"
       trick_mode_aware="bool, required"
       time_shift="bool, required"
       dynamic="bool, required"
       av synced="bool, required"
       initiating_replay="bool, required">
     <!-- One per label -->
     <label label="string, required" storage_properties="uint2, required"/>
     <!-- One per component tag -->
     <component tag="uint8, required"/>
     <private>
       Hexadecimal content
     </private>
     <reserved future use>
       Hexadecimal content
     </reserved_future_use>
   </application recording descriptor>
        application_signalling_descriptor
C.8.11
Defined by DVB in [11].
   <application_signalling_descriptor>
     <!-- One per application -->
     <application application_type="uint15, required"</pre>
                  AIT_version_number="uint5, required"/>
```

```
</application_signalling_descriptor>
```

#### application\_storage\_descriptor C.8.12

Defined by DVB in [11]. Must be in an AIT (table id 0x74).

```
<application_storage_descriptor</pre>
    storage_property="uint8, required"
    not_launchable_from_broadcast="bool, required"
    launchable_completely_from_cache="bool, required"
    is_launchable_with_older_version="bool, required"
    version="uint31, required"
    priority="uint8, required"/>
```

#### C.8.13application\_usage\_descriptor

```
Defined by DVB in [11]. Must be in an AIT (table id 0x74).
   <application_usage_descriptor usage_type="uint8, required"/>
```

#### C.8.14 audio\_preselection\_descriptor

Defined by DVB in [5].

```
<audio_preselection_descriptor>
 <!-- One entry per preselection, up to 31 preselections -->
  ction
     preselection id="uint5, required"
     audio rendering indication="uint3, required"
```

Version 3.22-1926 359 / 395



### C.8.15 bouquet\_name\_descriptor

Defined by DVB in [5].

```
<bouquet_name_descriptor bouquet_name="string, required"/>
```

### C.8.16 C2\_bundle\_delivery\_system\_descriptor

Defined by DVB in [5].

## C.8.17 C2\_delivery\_system\_descriptor

Defined by DVB in [5].

```
<C2_delivery_system_descriptor
    plp_id="uint8, required"
    data_slice_id="uint8, required"
    C2_system_tuning_frequency="FrequencyHz, required"
    C2_system_tuning_frequency_type="uint2, required"
    active_OFDM_symbol_duration="uint3, required"
    guard_interval="1/128|1/64|uint3, required"/>
```

## C.8.18 CA\_identifier\_descriptor

```
Defined by DVB in [5].
```

```
<CA_identifier_descriptor>
  <!-- One per CAS -->
   <CA_system_id value="uint16, required"/>
</CA_identifier_descriptor>
```

## C.8.19 cable\_delivery\_system\_descriptor

Defined by DVB in [5].

```
<cable_delivery_system_descriptor</pre>
```

```
frequency="FrequencyHz, required"
FEC_outer="undefined|none|RS, default=RS"
modulation="auto|16-QAM|32-QAM|64-QAM|128-QAM|256-QAM, default=16-QAM"
symbol_rate="SymbolsPerSecond, required"
FEC_inner="undefined|1/2|2/3|3/4|5/6|7/8|8/9|3/5|4/5|9/10|none, required"/>
```



#### C.8.20 cell\_frequency\_link\_descriptor

```
Defined by DVB in [5].
   <cell_frequency_link_descriptor>
     <!-- One per cell -->
     <cell cell_id="uint16, required" frequency="FrequencyHz, required">
       <!-- One per subcell -->
       <subcell cell id extension="uint8, required"</pre>
                 transposer_frequency="FrequencyHz, required"/>
     </cell>
   </cell frequency link descriptor>
C.8.21
         cell_list_descriptor
Defined by DVB in [5].
   <cell_list_descriptor>
     <!-- One per cell -->
     <cell cell id="uint16, required"</pre>
            cell_latitude="int16, required"
            cell_longitude="int16, required"
            cell extent of latitude="uint12, required"
            cell extent of longitude="uint12, required">
       <!-- One per subcell -->
       <subcell cell_id_extension="uint8, required"</pre>
                 subcell_latitude="int16, required"
subcell_longitude="int16, required"
                 subcell_extent_of_latitude="uint12, required"
                 subcell_extent_of_longitude="uint12, required"/>
     </cell>
   </cell_list_descriptor>
C.8.22
         CI_ancillary_data_descriptor
Defined by DVB in [5].
   <CI_ancillary_data_descriptor>
     <ancillary data>
       Hexadecimal content
     </ancillary_data>
   </CI ancillary data descriptor>
C.8.23
         component_descriptor
Defined by DVB in [5].
   <component_descriptor</pre>
       stream_content="uint4, required"
       stream_content_ext="uint4, default=0xF"
       component_type="uint8, required"
       component_tag="uint8, default=0"
language_code="char3, required"
       text="string, optional"/>
C.8.24 content_descriptor
Defined by DVB in [5].
   <content_descriptor>
     <!-- One per classification -->
     <content content_nibble_level_1="uint4, required"</pre>
               content_nibble_level_2="uint4, required"
```

Version 3.22-1926 361 / 395



```
user_byte="uint8, required"/>
   </content_descriptor>
C.8.25
        country_availability_descriptor
Defined by DVB in [5].
   <country_availability_descriptor country availability="bool, required">
     <!-- One per country -->
     <country country_code="char3, required"/>
   </country_availability_descriptor>
C.8.26
        CP_descriptor
Defined by DVB in [5].
   <CP_descriptor CP_system_id="uint16, required" CP_PID="uint13, required">
     <private_data>
      Hexadecimal content
     </private data>
   </CP_descriptor>
C.8.27
        CP_identifier_descriptor
Defined by DVB in [5].
   <Pre><CP_identifier_descriptor>
     <!-- One per CP system -->
     <CP system id value="uint16, required"/>
   </CP identifier descriptor>
C.8.28
        data_broadcast_descriptor
Defined by DVB in [5].
   <data_broadcast_descriptor</pre>
       data_broadcast_id="uint16, required"
       component_tag="uint8, required"
       language_code="char3, required">
     <selector bytes>Hexadecimal content</selector bytes>
     <text>String</text>
   </data broadcast descriptor>
C.8.29
        data_broadcast_id_descriptor
Defined by DVB in [5].
   <data_broadcast_id_descriptor data_broadcast_id="uint16, required">
     <selector_bytes>Hexadecimal content</selector_bytes>
   </data_broadcast_id_descriptor>
C.8.30
        DII_location_descriptor
Defined by DVB in [14]. Must be in an AIT (table id 0x74).
   <DII_location_descriptor transport protocol label="uint8, required">
     <!-- One per module -->
     <module DII_identification="uint15, required" association_tag="uint16, required"/>
   </DII_location_descriptor>
C.8.31
        DSNG_descriptor
Defined by DVB in [5] and [16].
   <DSNG_descriptor station_identification="string, required"/>
C.8.32
        DTS_descriptor
Defined by DVB in [5].
```



```
<DTS_descriptor</pre>
       sample_rate_code="uint4, required"
       bit rate code="uint6, required"
       nblks="uint7, 0x05 to 0x1F, required"
       fsize="uint14, 0x005F to 0x2000, required"
       surround_mode="uint6, required"
       lfe="bool, default=false"
       extended surround="uint2, default=0">
     <additional info>
       Hexadecimal content
     </additional info>
   </DTS descriptor>
C.8.33
        DTS_HD_descriptor
Defined by DVB in [5].
   <DTS_HD_descriptor>
     <!-- Each substructure is optional and may appear at most once -->
     <substream_core
         channel_count="uint5, required"
         LFE="bool, required"
         sampling frequency="uint4, required"
         sample resolution="bool, required">
       <!-- From 1 to 8 asset_info -->
       <asset_info
           asset construction="uint5, required"
           vbr="bool, required"
           post_encode_br_scaling="bool, required"
           bit_rate="uint13, required"
           component_type="uint8, optional"
           ISO_639_language_code="char3, optional"/>
     </substream_core>
     <substream_0
         channel_count="uint5, required"
         LFE="bool, required"
         sampling_frequency="uint4, required"
         sample resolution="bool, required">
       <!-- From 1 to 8 asset_info -->
       <asset_info
           asset_construction="uint5, required"
           vbr="bool, required"
           post_encode_br_scaling="bool, required"
           bit_rate="uint13, required"
           component_type="uint8, optional"
ISO_639_language_code="char3, optional"/>
     </substream_0>
     <substream 1
         channel count="uint5, required"
         LFE="bool, required"
         sampling_frequency="uint4, required"
         sample_resolution="bool, required">
       <!-- From 1 to 8 asset_info -->
       <asset_info
           asset_construction="uint5, required"
           vbr="bool, required"
           post_encode_br_scaling="bool, required"
           bit_rate="uint13, required"
           component_type="uint8, optional"
           ISO_639_language_code="char3, optional"/>
     </substream 1>
```

Version 3.22-1926 363 / 395



```
<substream_2</pre>
         channel_count="uint5, required"
         LFE="bool, required"
         sampling_frequency="uint4, required"
         sample_resolution="bool, required">
       <!-- From 1 to 8 asset_info -->
       <asset info
           asset construction="uint5, required"
           vbr="bool, required"
           post_encode_br_scaling="bool, required"
           bit_rate="uint13, required"
           component_type="uint8, optional"
           ISO_639_language_code="char3, optional"/>
     </substream 2>
     <substream_3
         channel_count="uint5, required"
         LFE="bool, required"
         sampling_frequency="uint4, required"
         sample_resolution="bool, required">
       <!-- From 1 to 8 asset_info -->
       <asset_info
           asset_construction="uint5, required"
           vbr="bool, required"
           post_encode_br_scaling="bool, required"
           bit_rate="uint13, required"
           component_type="uint8, optional"
           ISO_639_language_code="char3, optional"/>
     </substream_3>
     <additional info>
       Hexadecimal content
     </additional_info>
   </DTS_HD_descriptor>
C.8.34
        DTS_neural_descriptor
Defined by DVB in [5].
   <DTS_neural_descriptor config_id="uint8, required">
     <additional_info>
       Hexadecimal content
     </additional info>
   </DTS neural descriptor>
C.8.35
         dvb_html_application_boundary_descriptor
Defined by DVB in [14]. Must be in an AIT (table id 0x74).
   <dvb_html_application_boundary_descriptor</pre>
       label="string, required"
       regular_expression="string, required"/>
C.8.36
        dvb_html_application_descriptor
Defined by DVB in [14]. Must be in an AIT (table id 0x74).
   <dvb_html_application_descriptor parameter="string, optional">
     <!-- One per application id: -->
     <application id="uint16, required"/>
   </dvb_html_application_descriptor>
C.8.37
         dvb_html_application_location_descriptor
Defined by DVB in [14]. Must be in an AIT (table id 0x74).
   <dvb_html_application_location_descriptor
```



```
physical_root="string, required"
initial_path="string, required"/>
```

#### C.8.38 dvb\_j\_application\_descriptor

Defined by DVB in [14]. Must be in an AIT (table id 0x74).

```
<dvb_j_application_descriptor>
  <!-- One per parameter: -->
   <parameter value="string, required"/>
</dvb_j_application_descriptor>
```

#### C.8.39 dvb\_j\_application\_location\_descriptor

Defined by DVB in [14]. Must be in an AIT (table id 0x74).

```
<dvb_j_application_location_descriptor
  base_directory="string, required"
  classpath_extension="string, required"
  initial_class="string, required"/>
```

#### C.8.40 ECM\_repetition\_rate\_descriptor

```
Defined by DVB in [13].
```

```
<ECM_repetition_rate_descriptor
    CA_system_id="uint16, required"
    ECM_repetition_rate="uint16, required">
    <private_data>
        Hexadecimal content
    </private_data>
</ECM_repetition_rate_descriptor>
```

#### C.8.41 enhanced\_AC3\_descriptor

Defined by DVB in [5].

Because of the presence of an ATSC version of the *enhanced\_AC3\_descriptor*, the XML name for the DVB version is <DVB\_enhanced\_AC3\_descriptor>. For compatibility, the previous <enhanced\_AC3\_descriptor> is still accepted.

```
<DVB_enhanced_AC3_descriptor
    mixinfoexists="bool, required"
    component_type="uint8, optional"
    bsid="uint8, optional"
    mainid="uint8, optional"
    asvc="uint8, optional"
    substream1="uint8, optional"
    substream3="uint8, optional"
    substream3="uint8, optional">
    <additional_info>
        Hexadecimal content
    </additional_info>
</DVB enhanced AC3 descriptor>
```

#### C.8.42 extended\_event\_descriptor

Defined by DVB in [5].

```
<extended_event_descriptor
    descriptor_number="uint8, required"
    last_descriptor_number="uint8, required"
    language_code="char3, required">
    <text>String</text>
    <!-- One per item -->
    <item>
        description>String</description>
        <name>String</name>
```

Version 3.22-1926 365 / 395



```
</item>
</extended_event_descriptor>
```

#### C.8.43 external\_application\_authorization\_descriptor

```
Defined by DVB in [11]. Must be in an AIT (table id 0x74).

<external_application_authorization_descriptor>
    <!-- One per application -->
    <application
        organization_id="uint32, required"
        application_id="uint16, required"
        application_priority="uint8, required"/>
```

</external\_application\_authorization\_descriptor>

#### C.8.44 frequency\_list\_descriptor

```
Defined by DVB in [5].
```

```
<frequency_list_descriptor
    coding_type="undefined|satellite|cable|terrestrial|uint2, required">
    <!-- List of frequencies, one element per frequency -->
        <centre_frequency value="FrequencyHz, required"/>
</frequency_list_descriptor>
```

#### C.8.45 FTA\_content\_management\_descriptor

Defined by DVB in [5].

```
<FTA_content_management_descriptor
   user_defined="bool, required"
   do_not_scramble="bool, required"
   control_remote_access_over_internet="uint2, required"
   do_not_apply_revocation="bool, required"/>
```

#### C.8.46 graphics\_constraints\_descriptor

Defined by DVB in [11]. Must be in an AIT (table id 0x74).

```
<graphics_constraints_descriptor
    can_run_without_visible_ui="bool, required"
    handles_configuration_changed="bool, required"
    handles_externally_controlled_video="bool, required">
    <graphics_configuration>
        Hexadecimal content
    </graphics_configuration>
</graphics_constraints_descriptor>
```

## C.8.47 image\_icon\_descriptor

Defined by DVB in [5].

```
<image_icon_descriptor
  descriptor_number="uint4, required"
  last_descriptor_number="uint4, required"
  icon_id="uint3, required"
  icon_transport_mode="uint2, optional"
  coordinate_system="uint3, optional"
  icon_horizontal_origin="uint12, optional"
  icon_vertical_origin="uint12, optional"
  icon_type="string, optional"
  url="string, optional">
```

<icon data>



```
Hexadecimal content
</icon_data>
</image_icon_descriptor>
```

#### C.8.48 IPMAC\_generic\_stream\_location\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

```
<IPMAC_generic_stream_location_descriptor
   interactive_network_id="uint16, required"
   modulation_system_type="DVB-S2|DVB-T2|DVB-C2|DVB-NGH|uint8, required"
   modulation_system_id="uint16, default=0"
   PHY_stream_id="uint16, default=0">
   <selector_bytes>Hexadecimal content</selector_bytes>
</IPMAC_generic_stream_location_descriptor>
```

#### C.8.49 IPMAC\_platform\_name\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

```
<IPMAC_platform_name_descriptor
  language_code="char3, required"
  text="string, required"/>
```

#### C.8.50 IPMAC\_platform\_provider\_name\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

```
<IPMAC_platform_provider_name_descriptor
language_code="char3, required"
text="string, required"/>
```

#### C.8.51 IPMAC\_stream\_location\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

```
<IPMAC_stream_location_descriptor
  network_id="uint16, required"
  original_network_id="uint16, required"
  transport_stream_id="uint16, required"
  service_id="uint16, required"
  component_tag="uint8, required"/>
```

#### C.8.52 ip\_signalling\_descriptor

```
Defined by DVB in [14]. Must be in an INT (table id 0x4C). 
<ip_signalling_descriptor platform_id="uint24, required"/>
```

#### C.8.53 ISP\_access\_mode\_descriptor

```
Defined by DVB in [13]. Must be in an INT (table id 0x4C).
```

```
<ISP_access_mode_descriptor access_mode="unused|dialup|uint8, required"/>
```

## C.8.54 linkage\_descriptor

Defined by DVB in [5].

```
<linkage_descriptor
    transport_stream_id="uint16, required"
    original_network_id="uint16, required"
    service_id="uint16, required"
    linkage_type="uint8, required">
    <!-- if linkage_type == 0x08 -->
    <mobile_handover_info
    handover_type="uint4, required"
    origin_type="NIT/SDT, required"</pre>
```

Version 3.22-1926 367 / 395



```
network_id="uint16, required if hand-over_type is 0x01, 0x02, 0x03"
         initial_service_id="uint16, required if origin_type is NIT"/>
     <!-- else if linkage_type == 0x0D -->
     <event_linkage_info</pre>
         target_event_id="uint16, required"
         target_listed="bool, required"
         event_simulcast="bool, required"/>
     <!-- else if linkage type >= 0x0E && linkage type <= 0x1F -->
     <extended event linkage info>
       <!-- For each event -->
       <event
           target event id="uint16, required"
           target listed="bool, required"
           event_simulcast="bool, required"
           link_type="uint2, required"
           target_id_type="uint2, required"
           user_defined_id="uint16, required if target_id_type == 3"
           target_transport_stream_id="uint16, required if target_id_type == 1"
           target_original_network_id="uint16, optional"
           target_service_id="uint16, optional"/>
     </extended_event_linkage_info>
     <private_data>
      Hexadecimal content
     </private data>
   </linkage_descriptor>
C.8.55
        local_time_offset_descriptor
Defined by DVB in [5].
  <local_time_offset_descriptor>
     <!-- One per region -->
     <region country_code="char3, required"
             country_region_id="uint6, required"
             local_time_offset="int, required"
             time of change="YYYY-MM-DD hh:mm:ss, required"
             next_time_offset="int, required"/>
     <!-- local_time_offset and next_time_offset: -->
     <!-- -780 to +780 minutes (-13 to +13 hours) -->
  </local_time_offset_descriptor>
C.8.56
        message_descriptor
Defined by DVB in [5].
   <message_descriptor message_id="uint8, required" language_code="char3, required">
     <text>String</text>
   </message_descriptor>
C.8.57
        mosaic_descriptor
Defined by DVB in [5].
   <mosaic descriptor
       mosaic_entry_point="bool, required"
       \verb|number_of_horizontal_elementary_cells="uint3", required"|\\
       number_of_vertical_elementary_cells="uint3, required">
     <!-- One per cell in the mosaic -->
     <cell logical_cell_id="uint6, required"</pre>
           logical_cell_presentation_info="uint3, required"
           cell_linkage_info="uint8, required"
           bouquet_id="uint16, optional"
           original_network_id="uint16, optional"
           transport_stream_id="uint16, optional"
           service_id="uint16, optional"
           event_id="uint16, optional">
```



```
<!-- One per elementary cell -->
       <elementary cell id="uint6, required"/>
     </cell>
  </mosaic descriptor>
C.8.58
        multilingual_bouquet_name_descriptor
Defined by DVB in [5].
   <multilingual_bouquet_name_descriptor>
     <!-- One per Language -->
     <language code="char3, required" bouquet_name="string, required"/>
  </multilingual_bouquet_name_descriptor>
C.8.59
        multilingual_component_descriptor
Defined by DVB in [5].
   <multilingual_component_descriptor component_tag="uint8, required">
     <!-- One per Language -->
     <language code="char3, required" description="string, required"/>
  </multilingual component descriptor>
        multilingual\_network\_name\_descriptor
C.8.60
Defined by DVB in [5].
  <multilingual_network_name_descriptor>
     <!-- One per Language -->
     <language code="char3, required" network_name="string, required"/>
  </multilingual_network_name_descriptor>
C.8.61
        multilingual_service_name_descriptor
Defined by DVB in [5].
  <multilingual_service_name_descriptor>
     <!-- One per Language -->
     <language code="char3, required"</pre>
               service provider name="string, required"
               service name="string, required"/>
  </multilingual_service_name_descriptor>
C.8.62
        network_change_notify_descriptor
Defined by DVB in [5].
   <network change notify descriptor>
     <!-- One per cell -->
     <cell cell_id="uint16, required">
       <!-- One per network change -->
       <change network change id="uint8, required"</pre>
               network_change_version="uint8, required"
               start_time_of_change="YYYY-MM-DD hh:mm:ss, required"
               change_duration="hh:mm:ss, required"
               receiver category="uint3, required"
               change_type="uint4, required"
               message_id="uint8, required"
```

invariant\_ts\_tsid="uint16, optional"
invariant\_ts\_onid="uint16, optional"/>

</cell>

</network\_change\_notify\_descriptor>

Version 3.22-1926 369 / 395



#### C.8.63 network\_name\_descriptor

#### C.8.64 NVOD\_reference\_descriptor

service\_id="uint16, required"/>

## C.8.65 parental\_rating\_descriptor

</NVOD\_reference\_descriptor>

Defined by DVB in [5].

```
<parental_rating_descriptor>
  <!-- One per country -->
    <country country_code="char3, required" rating="uint8, required"/>
</parental_rating_descriptor>
```

#### C.8.66 partial\_transport\_stream\_descriptor

Defined by DVB in [5].

```
<partial_transport_stream_descriptor
   peak_rate="uint22, required"
   minimum_overall_smoothing_rate="uint22, default=0x3FFFFF"
   maximum_overall_smoothing_buffer="uint14, default=0x3FFFF"/>
```

## C.8.67 PDC\_descriptor

Defined by DVB in [5].

```
<PDC_descriptor programme identification label="MM-DD hh:mm, required"/>
```

#### C.8.68 prefetch\_descriptor

Defined by DVB in [14]. Must be in an AIT (table id 0x74).

```
<prefetch_descriptor transport_protocol_label="uint8, required">
   <!-- One per module -->
   <module label="string, required" prefetch_priority="int, 1 to 100, required"/>
</prefetch_descriptor>
```

## C.8.69 private\_data\_specifier\_descriptor

Defined by DVB in [5].

```
<private_data_specifier_descriptor private_data_specifier="uint32|name, required"/>
```

The value of the attribute is either a 32-bit private data specifier value or a predefined name, one of eacem, eicta (same as eacem), ofcom (UK DTG), eutelsat, bskyb, nordig, canalplus, nagra, logiways, tps.

#### C.8.70 protection\_message\_descriptor

Defined by DVB in [11].

```
<protection_message_descriptor>
  <!-- One per component, up to 15 components -->
    <component tag="uint8, required"/>
</protection_message_descriptor>
```



#### C.8.71 S2\_satellite\_delivery\_system\_descriptor

Defined by DVB in [5].

```
<S2_satellite_delivery_system_descriptor
  backwards_compatibility="bool, required"
  scrambling_sequence_index="uint18, optional"
  input_stream_identifier="uint8, optional"/>
```

#### C.8.72 S2X\_satellite\_delivery\_system\_descriptor

Defined by DVB in [5].

```
<S2X_satellite_delivery_system_descriptor</pre>
    receiver_profiles="uint5, required"
    S2X_mode="uint2, required"
    TS_GS_S2X_mode="uint2, required"
    scrambling sequence index="uint18, optional"
    timeslice_number="uint8, required for S2X_mode==2">
  <!-- Master channel is required -->
  <master channel
      frequency="SatelliteFrequencyHz, required"
      orbital_position="SatelliteOrbitalPosition, eg. 19.2, required"
      west_east_flag="east|west, required"
      polarization="horizontal|vertical|left|right, required"
      roll off="0.35|0.25|0.20|0.15|0.10|0.05|uint3, required"
      symbol rate="SatelliteSymbolRate, required"
      input_stream_identifier="uint8, optional"/>
  <!-- When S2X mode==3, there must be exactly 1 or 2 channel bond -->
  <channel bond
      frequency="SatelliteFrequencyHz, required"
      orbital position="SatelliteOrbitalPosition, eq. 19.2, required"
      west east flag="east|west, required"
      polarization="horizontal|vertical|left|right, required"
      roll_off="0.35|0.25|0.20|0.15|0.10|0.05|uint3, required"
      symbol rate="SatelliteSymbolRate, required"
      input_stream_identifier="uint8, optional"/>
  <reserved_future_use>
   Hexadecimal content
  </reserved future use>
</S2X_satellite_delivery_system_descriptor>
```

#### C.8.73 satellite\_delivery\_system\_descriptor

Defined by DVB in [5]. Redefined in a slightly different way by ARIB (ISDB) in [24].

When this descriptor is extracted from a binary stream to be decompiled in XML format, there is no way to check if this is a DVB or ISDB descriptor without knowing the context. If the command line specifies an option such as --isdb or --japan, or if an ISDB-specific table was previously encountered, then the stream is assumed to be an ISDB one and the ISDB format of this descriptor is used. Otherwise, the original DVB format is assumed.

#### <satellite\_delivery\_system\_descriptor</pre>

Version 3.22-1926 371 / 395



```
ISDB-S|2.6GHzMobile|AdvancedCS|none, required"/>
```

The attribute *roll\_off* is used only when *modulation\_system* is "DVB-S2".

The list of allowed values for modulation\_type and FEC\_inner depends on the value of modulation\_system.

#### C.8.74 scheduling\_descriptor

```
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
```

```
<scheduling_descriptor
    start_date_time="YYYY-MM-DD hh:mm:ss, required"
    end_date_time="YYYY-MM-DD hh:mm:ss, required"
    final_availability="bool, required"
    periodicity="bool, required"
    period_unit="second|minute|hour|day|uint2, required"
    duration_unit="second|minute|hour|day|uint2, required"
    estimated_cycle_time_unit="second|minute|hour|day|uint2, required"
    period="uint8, required"
    duration="uint8, required"
    estimated_cycle_time="uint8, required">
    </private_data>
        Hexadecimal content
    </private_data>
    </private_data>
    </private_data>
    </private_data>
    </private_data>
    </private_data>
    </private_data>
```

#### C.8.75 scrambling\_descriptor

```
Defined by DVB in [5].
```

```
<scrambling_descriptor scrambling_mode="uint8, required"/>
```

#### C.8.76 service\_descriptor

```
Defined by DVB in [5].

<service_descriptor
    service_type="uint8, required"
    service_provider_name="string, required"
    service name="string, required"/>
```

## C.8.77 service\_availability\_descriptor

```
Defined by DVB in [5].
```

```
<service_availability_descriptor availability="bool, required">
  <!-- One per cell -->
    <cell id="uint16, required"/>
</service_availability_descriptor>
```

#### C.8.78 service\_identifier\_descriptor

```
Defined by DVB in [5].
```

```
<service_identifier_descriptor service_identifier="string, required"/>
```

## C.8.79 service\_list\_descriptor

```
Defined by DVB in [5].
```

```
<service_list_descriptor>
  <!-- One per service -->
    <service service_id="uint16, required" service_type="uint8, required"/>
</service_list_descriptor>
```



#### C.8.80 service\_move\_descriptor

## <service\_relocated\_descriptor</pre>

```
old_original_network_id="uint16, required"
old_transport_stream_id="uint16, required"
old_service_id="uint16, required"/>
```

#### C.8.82 SH\_delivery\_system\_descriptor

Defined by DVB in [5].

```
<SH_delivery_system_descriptor diversity mode="uint4, required">
  <!-- Number of modulations depends on the SH config, e.g. 1 in SFN, 2 in non-SFN -->
  <modulation>
    <!-- Modulation type: exactly one of TDM or OFDM must be present -->
        polarization="horizontal|vertical|left|right, required"
        roll off="0.35|0.25|0.15|reserved, required"
        modulation_mode="QPSK|8PSK|16APSK|reserved, required"
        code_rate="uint4, required"
        symbol_rate="uint5, required"/>
    <OFDM
        bandwidth="8MHz|7MHz|6MHz|5MHz|1.7MHz|uint3, required"
        priority="uint1, required"
        constellation_and_hierarchy="uint3, required"
        code_rate="uint4, required"
        guard interval="1/32|1/16|1/8|1/4|uint2, required"
        transmission_mode="1k|2k|4k|8k|uint2, required"
        common_frequency="bool, required"/>
    <!-- At most one interleaver, optional fields must be all absent or all present -->
    <interleaver</pre>
        common multiplier="uint6, required"
        nof late taps="uint6, optional"
        nof slices="uint6, optional"
        slice_distance="uint8, optional"
        non_late_increments="uint6, optional"/>
  </modulation>
</SH_delivery_system_descriptor>
```

#### C.8.83 short\_event\_descriptor

```
Defined by DVB in [5].
```

```
<short_event_descriptor language_code="char3, required">
  <event_name>String</event_name>
    <text>String</text>
</short_event_descriptor>
```

#### C.8.84 short\_smoothing\_buffer\_descriptor

Defined by DVB in [5].

```
<short_smoothing_buffer_descriptor</pre>
```

Version 3.22-1926 373 / 395



```
sb_size="uint2, required"
       sb_leak_rate="uint6, required">
     Hexadecimal content (optional DVB-reserved data)
   </short_smoothing_buffer_descriptor>
C.8.85
        simple_application_boundary_descriptor
Defined by DVB in [11]. Must be in an AIT (table id 0x74).
   <simple_application_boundary_descriptor>
     <!-- One per prefix: -->
     <prefix boundary_extension="string, required"/>
   </simple_application_boundary_descriptor>
        simple_application_location_descriptor
C.8.86
Defined by DVB in [11]. Must be in an AIT (table id 0x74).
   <simple_application_location_descriptor initial_path="string, required"/>
C.8.87
        SSU_enhanced_message_descriptor
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
   <SSU_enhanced_message_descriptor
       descriptor number="uint4, required"
       last_descriptor_number="uint4, required"
       ISO 639 language code="char3, required"
       message index="uint5, required">
     <text>String</text>
   </SSU_enhanced_message_descriptor>
C.8.88
        SSU_event_name_descriptor
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
   <SSU_event_name_descriptor ISO_639_language_code="char3, required"</pre>
     <name>String</name>
     <text>String</text>
   </SSU event name descriptor>
C.8.89
        SSU_location_descriptor
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
   <SSU_location_descriptor
       data_broadcast_id="uint16, required"
       association_tag="uint16, optional">
     <private_data>
       Hexadecimal content
     </private_data>
   </SSU_location_descriptor>
C.8.90
        SSU_message_descriptor
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
   <SSU_message_descriptor
       descriptor_number="uint4, required"
       last descriptor number="uint4, required"
       ISO_639_language_code="char3, required">
     <text>String</text>
```



```
</SSU_message_descriptor>
```

#### C.8.91 SSU\_subgroup\_association\_descriptor

Defined by DVB in [8]. Must be in a UNT (table id 0x4B).

```
<SSU_subgroup_association_descriptor subgroup_tag="uint40, required"/>
```

#### C.8.92 SSU\_uri\_descriptor

Defined by DVB in [8]. Must be in a UNT (table id 0x4B).

```
<SSU_uri_descriptor
  max_holdoff_time="uint8, required"
  min_polling_interval="uint8, required"
  uri="string, required"/>
```

Warning: As defined in [8], max\_holdoff\_time is a number of minutes and min\_polling\_interval is a number of hours.

## C.8.93 stream\_identifier\_descriptor

Defined by DVB in [5].

```
<stream_identifier_descriptor component tag="uint8, required"/>
```

#### C.8.94 stuffing\_descriptor

Defined by DVB in [5].

Because of the presence of an ATSC version of the *stuffing\_descriptor*, the XML name for the DVB version is <DVB\_stuffing\_descriptor>. For compatibility, <stuffing\_descriptor> is still accepted.

```
<DVB_stuffing_descriptor>
  Hexadecimal content
</DVB_stuffing_descriptor>
```

#### C.8.95 subtitling\_descriptor

Defined by DVB in [5].

## C.8.96 supplementary\_audio\_descriptor

Defined by DVB in [5].

```
<supplementary_audio_descriptor
   mix_type="uint1, required"
   editorial_classification="uint5, required"
   language_code="char3, optional">
   <private_data>
        Hexadecimal content
   </private_data>
</supplementary_audio_descriptor>
```

# $C.8.97 \quad T2\_delivery\_system\_descriptor$

Defined by DVB in [5].

```
<T2_delivery_system_descriptor
plp_id="uint8, required"
T2_system_id="uint16, required">
```

Version 3.22-1926 375 / 395



```
<!-- Optional extension -->
     <extension
         SISO_MISO="SISO|MISO|uint2, required"
         bandwidth="8MHz|7MHz|6MHz|5MHz|10MHz|1.712MHz|uint4, required"
         guard_interval="1/32|1/16|1/8|1/4|1/128|19/128|19/256|uint3, required"
         transmission_mode="2k|8k|4k|1k|16k|32k|uint3, required"
         other frequency="bool, required"
         tfs="bool, required">
       <!-- One per cell -->
       <cell cell id="uint16, required">
         <!-- Only one if tfs is false, any number if tfs is true -->
         <centre_frequency value="FrequencyHz, required"/>
         <!-- One per subcell -->
         <subcell cell_id_extension="uint8, required"</pre>
                  transposer_frequency="FrequencyHz, required"/>
       </cell>
     </extension>
   </T2_delivery_system_descriptor>
C.8.98
        T2MI_descriptor
Defined by DVB in [5].
   <T2MI_descriptor
       t2mi stream id="uint3, required"
       num_t2mi_streams_minus_one="uint3, default=0"
       pcr_iscr_common_clock_flag="bool, default=false">
     <reserved>
      Hexadecimal content
     </reserved>
   </T2MI_descriptor>
C.8.99
         target_IP_address_descriptor
Defined by DVB in [13] and [8]. Must be in a UNT (table id 0x4B) or INT (table id 0x4C).
   <target IP address descriptor IPv4 addr mask="IPv4 address, required">
     <!-- One per IPv4 address: -->
     <address IPv4 addr="IPv4 address, required"/>
   </target_IP_address_descriptor>
C.8.100 target_IP_slash_descriptor
Defined by DVB in [13]. Must be in an INT (table id 0x4C).
   <target_IP_slash_descriptor>
     <!-- One per IPv4 address: -->
     <address
         IPv4_addr="IPv4 address, required"
         IPv4 slash mask="uint8, required"/>
   </target IP slash descriptor>
C.8.101 target_IP_source_slash_descriptor
Defined by DVB in [13]. Must be in an INT (table id 0x4C).
   <target_IP_source_slash_descriptor>
     <!-- One per pair of IPv4 address: -->
         IPv4 source_addr="IPv4 address, required"
         IPv4_source_slash_mask="uint8, required"
         IPv4_dest_addr="IPv4 address, required"
         IPv4_dest_slash_mask="uint8, required"/>
   </target IP source slash descriptor>
```



#### C.8.102 target\_IPv6\_address\_descriptor

```
Defined by DVB in [13] and [8]. Must be in a UNT (table id 0x4B) or INT (table id 0x4C).
```

```
<target_IPv6_address_descriptor IPv6_addr_mask="IPv6 address, required">
<!-- One per IPv6 address: -->
<address IPv6_addr="IPv6 address, required"/>
</target_IPv6_address_descriptor>
```

#### C.8.103 target\_IPv6\_slash\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

#### C.8.104 target\_IPv6\_source\_slash\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

#### C.8.105 target\_MAC\_address\_descriptor

Defined by DVB in [13] and [8]. Must be in a UNT (table id 0x4B) or INT (table id 0x4C).

```
<target_MAC_address_descriptor MAC_addr_mask="MAC address, required">
    <!-- One per MAC address: -->
    <address MAC_addr="MAC address, required"/>
    </target_MAC_address_descriptor>
```

#### C.8.106 target\_MAC\_address\_range\_descriptor

Defined by DVB in [13]. Must be in an INT (table id 0x4C).

#### C.8.107 target\_region\_descriptor

Defined by DVB in [5].

#### C.8.108 target\_region\_name\_descriptor

Defined by DVB in [5].

```
<target_region_name_descriptor</pre>
```

Version 3.22-1926 377 / 395



#### C.8.109 target\_serial\_number\_descriptor

Defined by DVB in [13] and [8]. Must be in a UNT (table id 0x4B) or INT (table id 0x4C).

```
<target_serial_number_descriptor>
  <!-- Serial data bytes -->
   Hexadecimal content
</target_serial_number_descriptor>
```

#### C.8.110 target\_smartcard\_descriptor

Defined by DVB in [13] and [8]. Must be in a UNT (table id 0x4B) or INT (table id 0x4C).

```
<target_smartcard_descriptor super_CA_system_id="uint32, required">
  <!-- Private data bytes -->
   Hexadecimal content

</target_smartcard_descriptor>
```

#### C.8.111 telephone\_descriptor

Defined by DVB in [5].

```
<telephone_descriptor
```

```
foreign_availability="bool, required"
connection_type="uint5, required"
country_prefix="string, 3 chars max, optional"
international_area_code="string, 7 chars max, optional"
operator_code="string, 3 chars max, optional"
national_area_code="string, 7 chars max, optional"
core_number="string, 15 chars max, optional"/>
```

#### C.8.112 teletext\_descriptor

Defined by DVB in [5].

## C.8.113 terrestrial\_delivery\_system\_descriptor

Defined by DVB in [5].

#### <terrestrial\_delivery\_system\_descriptor</pre>

```
centre_frequency="FrequencyHz, required"
bandwidth="8MHz|7MHz|6MHz|5MHz, required"
priority="HP|LP, required"
no_time_slicing="bool, required"
no_MPE_FEC="bool, required"
constellation="QPSK|16-QAM|64-QAM, required"
hierarchy_information="uint3, required"
code_rate_HP_stream="1/2|2/3|3/4|5/6|7/8, required"
code_rate_LP_stream="1/2|2/3|3/4|5/6|7/8, required"
guard_interval="1/32|1/16|1/8|1/4, required"
```



```
transmission_mode="2k|8k|4k, required"
other_frequency="bool, required"/>
```

#### C.8.114 time\_shifted\_event\_descriptor

Defined by DVB in [5].

```
<time_shifted_event_descriptor
    reference_service_id="uint16, required"
    reference_event_id="uint16, required"/>
```

#### C.8.115 time\_shifted\_service\_descriptor

Defined by DVB in [5].

Because of the presence of an ATSC version of the *time\_shifted\_service\_descriptor*, the XML name for the DVB version is <DVB\_time\_shifted\_service\_descriptor>.

For compatibility, <time\_shifted\_service\_descriptor> is still accepted.

```
<DVB time shifted service descriptor reference service id="uint16, required"/>
```

#### C.8.116 time\_slice\_fec\_identifier\_descriptor

Defined by DVB in [13].

```
<time_slice_fec_identifier_descriptor
    time_slicing="bool, required"
    mpe_fec="uint2, required"
    frame_size="uint3, required"
    max_burst_duration="uint8, required"
    max_average_rate="uint4, required"
    time_slice_fec_id="uint4, default=0">
    <id_selector_bytes>Hexadecimal content</id_selector_bytes>
</time_slice_fec_identifier_descriptor>
```

#### C.8.117 transport\_protocol\_descriptor

Defined by DVB in [14]. Must be in an AIT (table id 0x74).

```
<transport_protocol_descriptor transport_protocol_label="uint8, required">
  <!-- Only one of the following shall be present -->
  <!-- For protocol id 1: -->
  <object_carousel</pre>
      original_network_id="uint16, optional"
      transport_stream_id="uint16, optional"
      service_id="uint16, optional"
      component_tag="uint8, required"/>
  <!-- For protocol id 2: -->
  <ip_mpe
      original_network_id="uint16, optional"
      transport_stream_id="uint16, optional"
      service_id="uint16, optional"
      alignment indicator="bool, required">
    <!-- One per URL -->
    <url value="string, required"/>
  </ip_mpe>
  <!-- For protocol id 3: -->
  <http>
    <!-- One per URL -->
    <url base="string, required">
      <!-- One per URL extension -->
      <extension value="string, required"/>
    </url>
  </http>
  <!-- For other (unknown) protocol ids: -->
  cprotocol id="uint16, required">
    Hexadecimal content.
```

Version 3.22-1926 379 / 395



```
</protocol>
   </transport_protocol_descriptor>
C.8.118 transport_stream_descriptor
Defined by DVB in [5].
   <transport_stream_descriptor compliance="string, required"/>
C.8.119 update_descriptor
Defined by DVB in [8]. Must be in a UNT (table id 0x4B).
   <update_descriptor</pre>
       update_flag="uint2, required"
       update method="uint4, required"
       update priority="uint2, required">
     <private_data>
      Hexadecimal content
     </private data>
   </update_descriptor>
C.8.120 URI_linkage_descriptor
Defined by DVB in [5].
   <URI linkage descriptor</pre>
       uri_linkage_type="uint8, required"
       uri="string, required"
      min_polling_interval="uint16, optional">
     <private_data>
      Hexadecimal content
     </private_data>
   </URI_linkage_descriptor>
C.8.121 VBI_data_descriptor
Defined by DVB in [5].
   <VBI data descriptor>
     <!-- One per VBI data service -->
     <service data_service_id="uint8, required">
      <!-- One per field in the service -->
      <field field_parity="bool, default=false" line_offset="uint5, default=0"/>
       <!-- Valid only when data_service_id is not any of 1, 2, 4, 5, 6, 7 -->
      <reserved>
        Hexadecimal content
       </reserved>
     </service>
   </VBI_data_descriptor>
C.8.122 VBI_teletext_descriptor
Defined by DVB in [5].
   <VBI_teletext_descriptor>
     <!-- One per page -->
     <teletext language_code="char3, required"
               teletext_type="uint5, required"
               page_number="uint16, required"/>
   </VBI_teletext_descriptor>
C.8.123 video_depth_range_descriptor
Defined by DVB in [5].
   <video_depth_range_descriptor>
```



## C.9 DTG/OFCOM-defined descriptors (DVB private descriptors)

#### C.9.1 dtg\_guidance\_descriptor

#### C.9.2 dtg\_HD\_simulcast\_logical\_channel\_descriptor

```
Defined by DTG in [30].
```

#### C.9.3 dtg\_logical\_channel\_descriptor

```
Defined by DTG in [30].
```

## C.9.4 dtg\_preferred\_name\_identifier\_descriptor

```
Defined by DTG in [30].
```

```
<dtg_preferred_name_identifier_descriptor name_id="uint8, required"/>
```

#### C.9.5 dtg\_preferred\_name\_list\_descriptor

Defined by DTG in [30].

```
<dtg_preferred_name_list_descriptor>
  <!-- One per Language -->
  <language code="char3, required">
       <!-- One per name -->
       <name name_id="uint8, required" name="string, required"/>
  </language>
```

Version 3.22-1926 381 / 395



```
</dtg_preferred_name_list_descriptor>
```

#### C.9.6 dtg\_service\_attribute\_descriptor

```
Defined by DTG in [30].
```

## C.9.7 dtg\_short\_service\_name\_descriptor

```
Defined by DTG in [30].
```

```
<dtg_short_service_name_descriptor name="string, required"/>
```

## **C.10 EACEM-defined descriptors (DVB private descriptors)**

#### C.10.1 eacem\_HD\_simulcast\_logical\_channel\_descriptor

Defined by EACEM in [27].

Because there are several forms of HD\_simulcast\_logical\_channel\_descriptor, this EACEM-defined form is named <eacem\_HD\_simulcast\_logical\_channel\_descriptor>. For compatibility, the previous XML syntax <HD\_simulcast\_logical\_channel\_descriptor> is still accepted and is equivalent.

#### C.10.2 eacem\_logical\_channel\_number\_descriptor

Defined by EACEM in [27].

Because there are several forms of logical\_channel\_number\_descriptor, this EACEM-defined form is named <eacem\_logical\_channel\_number\_descriptor>. For compatibility, the previous XML syntax <logical\_channel\_number\_descriptor > is still accepted and is equivalent.

#### C.10.3 eacem\_preferred\_name\_identifier\_descriptor

Defined by EACEM in [27].

```
<eacem_preferred_name_identifier_descriptor name_id="uint8, required"/>
```

#### C.10.4 eacem\_preferred\_name\_list\_descriptor

Defined by EACEM in [27].



#### C.10.5 eacem\_stream\_identifier\_descriptor

```
Defined by EACEM in [27]. 
<eacem_stream_identifier_descriptor version_byte="uint8, required"/>
```

## **C.11 Eutelsat-defined descriptors (DVB private descriptors)**

#### C.11.1 eutelsat\_channel\_number\_descriptor

Defined by Eutelsat in [28].

## C.12 NorDig-defined descriptors (DVB private descriptors)

#### C.12.1 nordig\_logical\_channel\_descriptor\_v1

Defined by NorDig in [29].

## C.12.2 nordig\_logical\_channel\_descriptor\_v2

Defined by NorDig in [29].

#### C.13 BskyB-defined descriptors (DVB private descriptors)

No public reference is available for BskyB private descriptors.

#### C.13.1 sky\_logical\_channel\_number\_descriptor

Version 3.22-1926 383 / 395



## C.14 SCTE-defined descriptors

#### C.14.1 cue\_identifier\_descriptor

#### C.14.2 EAS\_audio\_file\_descriptor

Defined by ANSI/SCTE in [17]. Must be in a Cable Emergency Alert Table (table id 0xD8).

```
<EAS_audio_file_descriptor>
  <!-- One entry per audio file -->
  <file audio_format="uint7, required"
      file_name="string, optional"
      audio_source="uint8, required"
      program_number="uint16, optional"
      carousel_id="uint32, optional"
      application_id="uint16, optional"
      download_id="uint32, optional"
      module_id="uint32, optional"/>
  </EAS_audio_file_descriptor>
```

## C.14.3 EAS\_inband\_details\_channel\_descriptor

Defined by ANSI/SCTE in [17]. Must be in a Cable Emergency Alert Table (table id 0xD8).

```
<EAS_inband_details_channel_descriptor
  details_RF_channel="uint8, required"
  details_program_number="uint16, required"/>
```

#### C.14.4 EAS\_inband\_exception\_channels\_descriptor

Defined by ANSI/SCTE in [17]. Must be in a Cable Emergency Alert Table (table id 0xD8).

```
<EAS_inband_exception_channels_descriptor>
  <!-- One entry per exception channel -->
    <exception RF_channel="uint8, required" program_number="uint16, required"/>
</EAS_inband_exception_channels_descriptor>
```

#### C.14.5 EAS\_metadata\_descriptor

Defined by ANSI/SCTE in [19]. Must be in a Cable Emergency Alert Table (table id 0xD8).

```
<EAS_metadata_descriptor fragment_number="uint8, default=1">
  <!-- The text inside this element is an XML fragment -->
</EAS_metadata_descriptor>
```

## C.14.6 splice\_avail\_descriptor

Defined by ANSI/SCTE in [18]. Must be in a Splice Information Table (table id 0xFC).

```
<splice_avail_descriptor
  identifier="uint32, default=0x43554549"
  provider_avail_id="uint32, required"/>
```

## C.14.7 splice\_DTMF\_descriptor

Defined by ANSI/SCTE in [18]. Must be in a Splice Information Table (table id 0xFC).

```
<splice_DTMF_descriptor
  identifier="uint32, default=0x43554549"
  preroll="uint8, required"
  DTMF="string, required"/>
```



#### C.14.8 splice\_segmentation\_descriptor

Defined by ANSI/SCTE in [18]. Must be in a Splice Information Table (table id 0xFC).

```
<splice_segmentation_descriptor</pre>
    identifier="uint32, default=0x43554549"
    segmentation_event_id="uint32, required"
    segmentation_event_cancel="bool, default=false"
    web_delivery_allowed="bool, default=true"
    no regional_blackout="bool, default=true"
    archive_allowed="bool, default=true"
    device_restrictions="uint2, default=3"
    segmentation_duration="uint40, optional"
    segmentation_type_id="uint8, required"
    segment_num="uint8, required"
segments_expected="uint8, required"
    sub_segment_num="uint8, required when segmentation_type_id == 0x34 or 0x36"
    sub_segments_expected="uint8, required when segmentation_type_id == 0x34 or 0x36">
  <segmentation upid type="uint8, required">
    Hexadecimal content
  </segmentation upid>
  <!-- One per component when program segmentation flag is to be set to 0 -->
  <component component tag="uint8, required" pts offset="uint33, required"/>
</splice segmentation descriptor>
```

#### C.14.9 splice\_time\_descriptor

Defined by ANSI/SCTE in [18]. Must be in a Splice Information Table (table id 0xFC).

```
<splice_time_descriptor
   identifier="uint32, default=0x43554549"
   TAI_seconds="uint48, required"
   TAI_ns="uint32, required"
   UTC_offset="uint16, required"/>
```

#### **C.15 ATSC-defined descriptors**

#### C.15.1 AC3\_audio\_stream\_descriptor

Defined by ATSC in [20].

This is the ATSC version of the AC-3 descriptor. DVB uses a distinct descriptor. In [20], the so-called "System A" designates ATSC while "System B" designates DVB.

```
<ATSC_AC3_audio_stream_descriptor</pre>
    sample_rate_code="uint3, required"
   bsid="uint5, required"
   bit_rate_code="uint6, required"
   surround mode="uint2, required"
   bsmod="uint3, required"
   num channels="uint4, required"
   full_svc="bool, required"
   mainid="uint3, optional"
   priority="uint2, optional"
   asvcflags="uint8, optional"
   text="string, optional"
   language="char3, optional"
   language_2="char3, optional">
  <additional_info>
   Hexadecimal content
  </additional info>
</ATSC_AC3_audio_stream_descriptor>
```

#### C.15.2 caption\_service\_descriptor

Defined by ATSC in [21].

```
<caption_service_descriptor>
```

Version 3.22-1926 385 / 395



```
<!-- One per service -->
     <service language="char3, required"</pre>
              digital cc="bool, required"
              line21_field="bool, optional"
              caption service number="uint6, required"
              easy_reader="bool, required"
wide_aspect_ratio="bool, required"/>
   </caption service descriptor>
C.15.3
        component_name_descriptor
Defined by ATSC in [21].
   <component_name_descriptor>
     <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
     <component name string>
       <string language="char3, required" text="string, required"/>
     </component_name_string>
   </component_name_descriptor>
C.15.4
        content_advisory_descriptor
Defined by ATSC in [21].
   <content_advisory_descriptor>
     <!-- One per rating region -->
     <region rating_region="uint8, required">
       <!-- One per rated dimension -->
       <dimension rating dimension j="uint8, required" rating value="uint4, required"/>
       <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
       <rating_description>
         <string language="char3, required" text="string, required"/>
       </rating_description>
     </region>
   </content_advisory_descriptor>
C.15.5
        dcc_arriving_request_descriptor
Defined by ATSC in [21].
   <dcc_arriving_request_descriptor dcc_arriving_request_type="uint8, required">
     <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
     <dcc_arriving_request_text>
       <string language="char3, required" text="string, required"/>
     </dcc arriving request text>
   </dcc arriving request descriptor>
        dcc_departing_request_descriptor
C.15.6
Defined by ATSC in [21].
   <dcc_departing_request_descriptor dcc_departing_request_type="uint8, required">
     <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
     <dcc_departing_request_text>
       <string language="char3, required" text="string, required"/>
     </dcc_departing_request_text>
   </dcc_departing_request_descriptor>
C.15.7
        EAC3_audio_descriptor
Defined by ATSC in [20].
This is the ATSC version of the Enhanced-AC-3 descriptor. DVB uses a distinct descriptor.
   <ATSC_EAC3_audio_descriptor
       mixinfoexists="bool, required"
       full service="bool, required"
       audio_service_type="uint3, required"
       number_of_channels="uint3, required"
```



```
bsid="uint5, optional"
       priority="uint2, optional"
       mainid="uint3, optional"
       asvc="uint8, optional"
       \verb|substream1="uint8", optional"|\\
       \verb|substream2="uint8, optional"|\\
       substream3="uint8, optional"
       language="char3, optional"
       language_2="char3, optional"
       substream1_lang="char3, optional"
       substream2_lang="char3, optional"
       substream3 lang="char3, optional">
     <additional info>
       Hexadecimal content
     </additional info>
   </ATSC_EAC3_audio_descriptor>
C.15.8
        extended_channel_name_descriptor
Defined by ATSC in [21].
   <extended_channel_name_descriptor>
     <!-- Optional ATSC multiple_string_structure() containing one or more strings -->
     <long channel_name_text>
       <string language="char3, required" text="string, required"/>
     </long channel name text>
   </extended channel name descriptor>
C.15.9
        genre_descriptor
Defined by ATSC in [21].
   <genre descriptor>
     <!-- One per attribute -->
     <attribute value="uint8, required"/>
   </genre_descriptor>
C.15.10 redistribution_control_descriptor
Defined by ATSC in [21].
   <redistribution_control_descriptor>
     <rc information>
       Hexadecimal content
     </rc information>
   </redistribution control descriptor>
C.15.11 service_location_descriptor
Defined by ATSC in [21].
   <service_location_descriptor PCR_PID="uint13, optional">
     <!-- One per component -->
     <component stream_type="uint8, required"</pre>
                elementary_PID="uint13, required"
                ISO_639_language_code="char3, optional"/>
   </service_location_descriptor>
C.15.12 stuffing_descriptor
Defined by ATSC in [21].
This is the ATSC version of the stuffing_descriptor. DVB uses a distinct descriptor.
   <ATSC_stuffing_descriptor>
    Hexadecimal content
   </ATSC stuffing descriptor>
```

Version 3.22-1926 387 / 395



#### C.15.13 time\_shifted\_service\_descriptor

```
Defined by ATSC in [21].
```

This is the ATSC version of the *time\_shifted\_service\_descriptor*. DVB uses a distinct descriptor.

## **C.16 ISDB-defined descriptors**

## C.16.1 area\_broadcasting\_information\_descriptor

```
Defined by ARIB in [24].
```

```
<area_broadcasting_information_descriptor>
```

#### C.16.2 audio\_component\_descriptor

Defined by ARIB in [24].

```
<audio_component_descriptor</pre>
```

```
stream_content="uint4, default=2"
component_type="uint8, required"
component_tag="uint8, required"
stream_type="uint8, required"
simulcast_group_tag="uint8, default=0xFF"
main_component="bool, default=true"
quality_indicator="uint2, required"
sampling_rate="uint3, required"
ISO_639_language_code="char3, required"
ISO_639_language_code_2="char3, optional"
text="string, optional"/>
```

#### C.16.3 board\_information\_descriptor

```
Defined by ARIB in [24].
```

```
<board_information_descriptor
    title="string, required"
    text="string, required"/>
```

#### C.16.4 broadcaster\_name\_descriptor

```
Defined by ARIB in [24].
```

```
<broadcaster_name_descriptor name="string, required"/>
```

## C.16.5 CA\_contract\_info\_descriptor

```
Defined by ARIB in [26].
```

```
<CA_contract_info_descriptor
```



```
TSDuck User's Guide
       CA_system_id="uint16, required"
       CA_unit_id="uint4, required"
       fee_name="string, optional">
     <!-- One per component -->
     <component tag="uint8, required"/>
     <contract verification info>
      Hexadecimal content
     </contract_verification_info>
  </CA contract info descriptor>
        CA_EMM_TS_descriptor
C.16.6
Defined by ARIB in [26].
   <CA_EMM_TS_descriptor
       CA system id="uint16, required"
       transport_stream_id="uint16, required"
       original_network_id="uint16, required"
       power_supply_period="uint8, required"/>
C.16.7
        CA_service_descriptor
Defined by ARIB in [26].
   <CA_service_descriptor
       CA system id="uint16, required"
       ca_broadcaster_group_id="uint8, required"
       message_control="uint8, required">
     <!-- One per service -->
     <service id="uint16, required"/>
  </CA_service_descriptor>
C.16.8
        conditional_playback_descriptor
Defined by ARIB in [26].
   <conditional_playback_descriptor</pre>
       CA_system_id="uint16, required"
       CA_PID="uint13, required">
     <private data>
      Hexadecimal content
     </private_data>
  </conditional playback descriptor>
```

#### C.16.9 content\_availability\_descriptor

Defined by ARIB in [24].

```
<content_availability_descriptor</pre>
   copy_restriction_mode="bool, required"
   image_constraint_token="bool, required"
   retention_mode="bool, required"
   retention_state="uint3, required"
   encryption_mode="bool, required">
  <reserved future use>
   Hexadecimal content
  </reserved_future_use>
```

</content availability descriptor>

Version 3.22-1926 389 / 395



#### C.16.10 data\_component\_descriptor

```
Defined by ARIB in [24].
   <data_component_descriptor data_component_id="uint16, required">
     <additional data component info>
       Hexadecimal content
     </additional_data_component_info>
   </data_component_descriptor>
C.16.11 data_content_descriptor
Defined by ARIB in [24].
   <data_content_descriptor</pre>
       data_component_id="uint16, required"
       entry_component="uint8, required"
       ISO_639_language_code="char3, required"
       text="string, required">
     <selector_bytes>
       Hexadecimal content
     </selector bytes>
     <!-- One per component_ref -->
     <component ref="uint8, required"/>
   </data_content_descriptor>
C.16.12 digital_copy_control_descriptor
Defined by ARIB in [24].
   <digital_copy_control_descriptor</pre>
       digital_recording_control_data="uint2, required"
       user_defined="uint4, default=0"
       maximum_bitrate="uint8, optional">
     <!-- One per component in the service -->
     <component control</pre>
         component_tag="uint8, required"
         digital_recording_control_data="uint2, required"
         user defined="uint4, default=0"
         maximum bitrate="uint8, optional"/>
   </digital_copy_control_descriptor>
Note: as specified in [24], the maximum_bitrate attribute is set in units of ¼ Mb/s (250 kb/s).
C.16.13 emergency_information_descriptor
Defined by ARIB in [24].
   <emergency_information_descriptor>
     <!-- One entry per event -->
     <event service_id="uint16, required"</pre>
```

started="bool, required"

<!-- One entry per area code -->
<area code="uint12, required"/>

</emergency\_information\_descriptor>

</event>

signal\_level="uint1, required">



#### C.16.14 event\_group\_descriptor

```
Defined by ARIB in [24].
```

#### C.16.15 extended\_broadcaster\_descriptor

```
Defined by ARIB in [24].
```

Note: While the fields have different names in [24], the structure of the descriptor is identical for *broadcaster\_type* values 0x01 and 0x02. In the XML, the attributes are unified. For instance, the attribute *terrestrial\_broadcaster\_id* is in fact *terrestrial\_sound\_broadcaster\_id* when *broadcaster\_type* is 0x02.

#### C.16.16 hierarchical\_transmission\_descriptor

```
Defined by ARIB in [24].
```

```
<hierarchical_transmission_descriptor
high_quality="bool, required"
reference_PID="uint13, required"/>
```

#### C.16.17 ISDB\_access\_control\_descriptor

Defined by ARIB in [24].

```
<ISDB_access_control_descriptor
    CA_system_id="uint16, required"
    transmission_type="uint3, default=7"
    PID="uint13, required">

<private_data>
    Hexadecimal content
    </private_data></pri>
```

Version 3.22-1926 391 / 395



```
</ISDB_access_control_descriptor>
```

#### C.16.18 ISDB\_terrestrial\_delivery\_system\_descriptor

Defined by ARIB in [24].

```
<ISDB_terrestrial_delivery_system_descriptor
    area_code="uint12, required"
    guard_interval="1/32|1/16|1/8|1/4, required"
    transmission_mode="2k|4k|8k|mode1|mode2|mode3, required">
    <!-- More than one frequency in case of MFN -->
    <frequency value="FrequencyHz, required"/>
</ISDB_terrestrial_delivery_system_descriptor>
```

#### C.16.19 logo\_transmission\_descriptor

Defined by ARIB in [24].

```
<logo_transmission_descriptor
   logo_transmission_type="uint8, required"
   logo_id="uint9, optional"
   logo_version="uint12, optional"
   download_data_id="uint16, optional"
   logo_char="string, optional">
   <reserved_future_use>
        Hexadecimal content
   </reserved_future_use>
</logo_transmission_descriptor>
```

Note: the presence of the various attributes depends on the value of logo\_transmission\_type (see [24]).

#### C.16.20 node\_relation\_descriptor

Defined by ARIB in [24].

```
<node_relation_descriptor
    reference_type="uint4, default=0"
    information_provider_id="uint16, optional"
    event_relation_id="uint16, optional"
    reference_node_id="uint16, required"
    reference number="uint8, required"/>
```

## C.16.21 partial\_reception\_descriptor

```
Defined by ARIB in [24].
```

```
<partial_reception_descriptor>
    <service id="uint16, required"/>
</partial_reception_descriptor>
```

#### C.16.22 reference\_descriptor

Defined by ARIB in [24].

```
<reference_descriptor
   information_provider_id="uint16, required"
   event_relation_id="uint16, required">
   <!-- One per reference -->
   <reference
      reference_node_id="uint16, required"
      reference_number="uint8, required"
      last_reference_number="uint8, required"/>
   </reference_descriptor>
```



#### C.16.23 satellite\_delivery\_system\_descriptor

Defined by DVB in [5]. Redefined in a slightly different way by ARIB in [24]. See section C.8.73.

```
C.16.24 series_descriptor
Defined by ARIB in [24].
   <series_descriptor</pre>
      series_id="uint16, required"
      repeat_label="uint4, required"
      program_pattern="uint3, required"
      expire_date="YYYY-MM-DD, optional"
      episode_number="uint12, required"
      last_episode_number="uint12, required"
      series_name="string, optional"/>
C.16.25 service_group_descriptor
Defined by ARIB in [24].
  <service_group_descriptor service_group_type="uint4, required">
     <!-- One per service when service_group_type == 1 -->
     <service primary_service_id="uint16, required"</pre>
             secondary service id="uint16, required"/>
    <!-- Optional private data for other group types -->
     <private data>
      Hexadecimal content
     </private_data>
  </service_group_descriptor>
C.16.26 short_node_information_descriptor
Defined by ARIB in [24].
   <short_node_information_descriptor</pre>
      ISO_639_language_code="char3, required"
      node_name="string, optional"
      text="string, optional"/>
C.16.27 SI_parameter_descriptor
Defined by ARIB in [24].
   <SI_parameter_descriptor
      parameter_version="uint8, required"
      update_time="YYYY-MM-DD, required">
    <!-- One per SI table -->
     Hexadecimal content (table description bytes)
     </SI_parameter_descriptor>
C.16.28 SI_prime_TS_descriptor
```

Defined by ARIB in [24].

```
<SI_prime_TS_descriptor
    parameter_version="uint8, required"
```

update\_time="YYYY-MM-DD, required" SI\_prime\_TS\_network\_id="uint16, required" SI\_prime\_transport\_stream\_id="uint16, required">

Version 3.22-1926 393 / 395



```
<!-- One per SI table -->
     Hexadecimal content (table description bytes)
     </SI_prime_TS_descriptor>
C.16.29 system_management_descriptor
Defined by ARIB in [24].
   <system_management_descriptor</pre>
      broadcasting_flag="uint2, required"
      broadcasting_identifier="uint6, required"
      additional_broadcasting_identification="uint8, required">
     <additional_identification_info>
      Hexadecimal content
     </additional_identification_info>
  </system_management_descriptor>
C.16.30 TS_information_descriptor
Defined by ARIB in [24].
  <TS_information_descriptor
      remote_control_key_id="uint8, required"
      ts name="string, required">
    <!-- Up to 3 transmission types -->
     <transmission_type transmission_type_info="uint8, required">
      <service id="uint16, required"/>
     </transmission_type>
     <reserved future use>
      Hexadecimal content
     </reserved_future_use>
  </TS information descriptor>
C.16.31 video_decode_control_descriptor
Defined by ARIB in [24].
   <video_decode_control_descriptor</pre>
      still_picture="bool, required"
      sequence_end_code="bool, required"
      video_encode_format="uint4, required"
```

## C.17 Generic format for unsupported tables and descriptors

reserved future use="uint2, default=3"/>

Unsupported tables and descriptors can be represented using generic XML tags.

# C.17.1 Generic short table

```
<generic_short_table table_id="uint8, required" private="bool, default=true">
Generic table with binary payload of one short section, to be used when a
specific table is not yet implemented. The body of this element shall contain
an even number of hexadecimal digits, the payload of the short section.

The private indicator shall be false on MPEG-defined sections and preferably
true on DVB-defined and user-defined sections.
</generic_short_table>
```



#### C.17.2 Generic long table

```
<generic_long_table
    table_id="uint8, required"
    table_id_ext="uint16, default=0xFFFF"
    version="uint5, default=0"
    current="bool, default=true"
    private="bool, default=true">
```

Generic table with binary payload of long sections, to be used when a specific table is not yet implemented.

The private indicator shall be false on MPEG-defined sections and preferably true on DVB-defined and user-defined sections.

```
<!-- One per section -->
<section>
    The body of the section elements shall contain an even number of hexadecimal digits, the payload of the long section. The CRC32 field is not part of this payload, it will be recomputed.
</section>
</generic_long_table>
```

#### **C.17.3** Generic descriptor

```
<generic_descriptor tag="uint8, required">
```

Generic descriptor with binary payload, to be used when a specific descriptor is not yet implemented. The body of this element shall contain an even number of hexadecimal digits.

```
</generic_descriptor>
```

Version 3.22-1926 395 / 395