

Gold Solo Twitter Digital Servo Drive Installation Guide



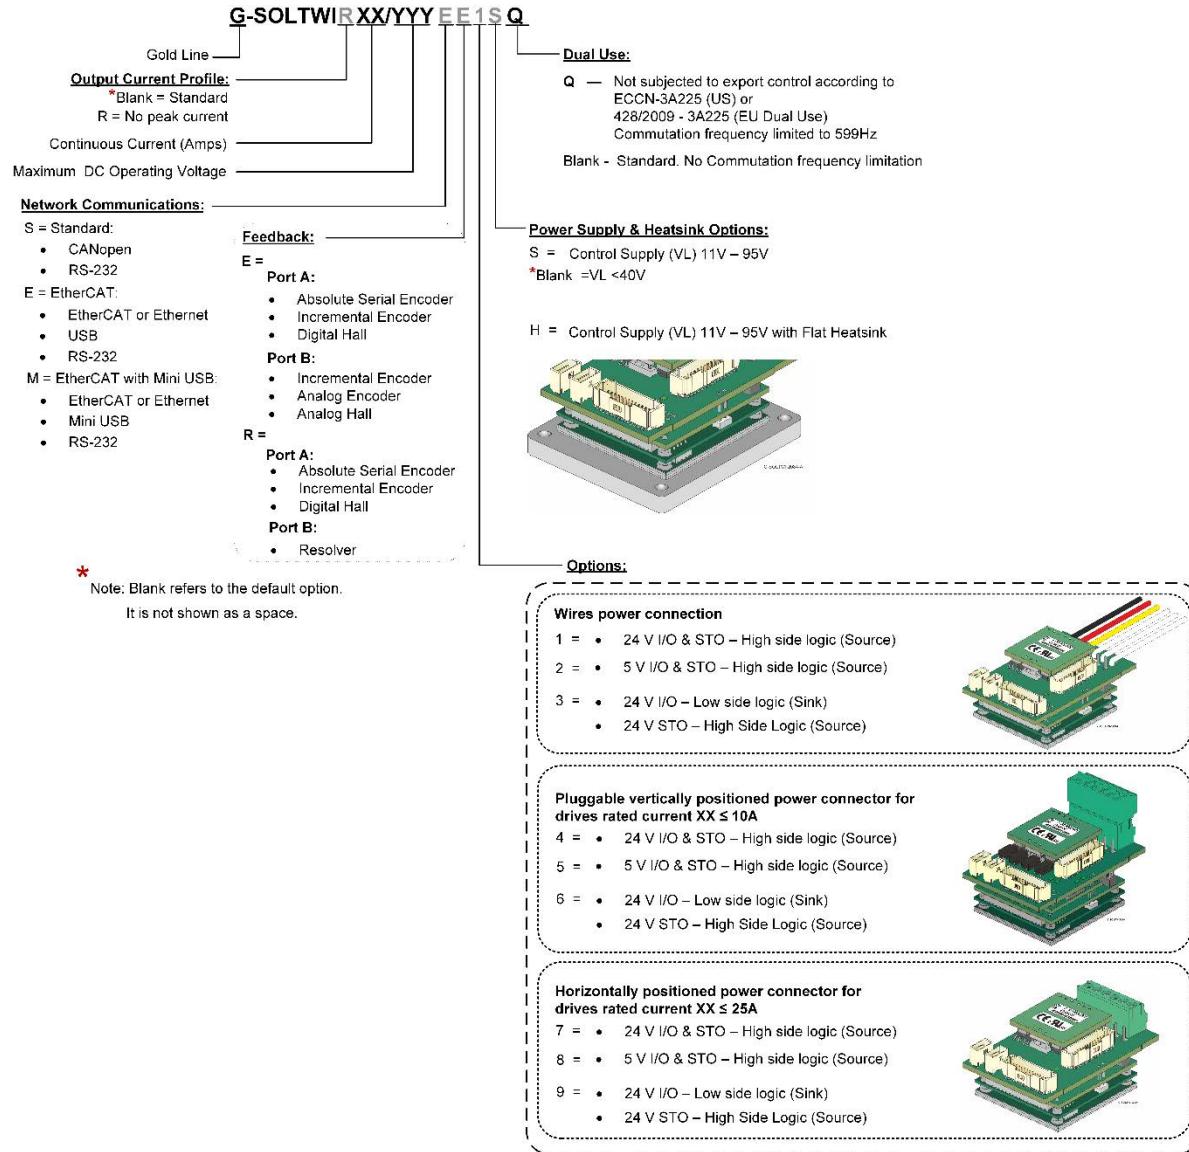
Notice

This guide is delivered subject to the following conditions and restrictions:

- This guide contains proprietary information belonging to Elmo Motion Control Ltd. Such information is supplied solely for the purpose of assisting users of the Gold Solo Twitter servo drive in its installation.
- The text and graphics included in this manual are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- Information in this document is subject to change without notice.

Document no. MAN-G-SOLTWI (Ver. 5.002)
Copyright ©2021
Elmo Motion Control Ltd.
All rights reserved.

Catalog Number



To order the accessories refer to the Chapter 11: Accessories.

Revision History

| Version | Date |
|------------|----------|
| Ver. 1.000 | Apr 2016 |
| Ver. 1.001 | Sep 2016 |
| Ver. 1.002 | Oct 2016 |
| Ver. 2.000 | Dec 2016 |
| Ver. 2.001 | Feb 2017 |
| Ver. 2.002 | Feb 2017 |
| Ver. 2.003 | Mar 2017 |
| Ver. 2.004 | Apr 2017 |
| Ver. 2.005 | Apr 2017 |
| Ver. 2.006 | Oct 2017 |
| Ver. 2.007 | May 2018 |
| Ver. 2.008 | Oct 2018 |
| Ver. 3.000 | May 2018 |
| Ver. 4.000 | Nov 2018 |
| Ver. 4.001 | Dec 2018 |
| Ver. 4.002 | Apr 2019 |
| Ver. 4.003 | Jan 2020 |
| Ver. 4.004 | Apr 2020 |
| Ver. 4.005 | May 2020 |
| Ver. 4.006 | Dec 2020 |
| Ver. 5.000 | Mar 2021 |
| Ver. 5.001 | Aug 2021 |
| Ver. 5.002 | Dec 2021 |

| | | |
|-------------------|--|-----------|
| Chapter 1: | This Installation Guide | 9 |
| Chapter 2: | Safety Information | 9 |
| 2.1. | Warnings | 10 |
| 2.2. | Cautions..... | 10 |
| 2.3. | Warranty Information | 10 |
| Chapter 3: | Product Description | 11 |
| Chapter 4: | Technical Information..... | 12 |
| 4.1. | Physical Specifications..... | 12 |
| 4.2. | 60V and 100V Models Technical Data..... | 16 |
| 4.3. | 200V Models Technical Data..... | 16 |
| 4.4. | R Type Technical Data | 17 |
| 4.5. | Control Supply Input Voltage (VL)..... | 18 |
| 4.6. | Product Features..... | 19 |
| 4.7. | Environmental Conditions..... | 20 |
| Chapter 5: | Standards and Certifications | 21 |
| 5.1. | Functional Safety..... | 21 |
| 5.2. | Electrical Safety | 21 |
| 5.3. | Electromagnetic Compatibility..... | 21 |
| 5.4. | Environmental | 22 |
| 5.5. | Other Compliant Standards..... | 22 |
| 5.6. | CE Declaration | 22 |
| 5.7. | Dual Use | 22 |
| Chapter 6: | Installation | 23 |
| 6.1. | Unpacking the Drive Components | 23 |
| 6.2. | Mounting the Optional Accessories Heat Sinks | 24 |
| 6.3. | Mounting Gold Solo Twitter to an External Heatsink | 26 |
| 6.4. | The Gold Solo Twitter Connection Diagrams | 27 |
| 6.4.1. | EtherCAT with Molex Connection USB Connection Diagram..... | 27 |
| 6.4.2. | EtherCAT with Mini USB Connector Connection Diagram | 28 |
| 6.4.3. | CAN Connection Diagram..... | 29 |
| Chapter 7: | Wiring | 30 |
| 7.1. | Wiring Legend | 30 |
| 7.2. | Connectors Types..... | 31 |

| | | |
|-------------------|--|-----------|
| 7.3. | Mating Connectors..... | 31 |
| 7.4. | Logic and Control Cabling and Wiring..... | 32 |
| 7.4.1. | J10 and J11 (Feedback ports, VL, RS232, USB, Analog Input) | 32 |
| 7.4.2. | J11 (Digital Inputs/Outputs, STO)..... | 32 |
| 7.4.3. | J17, J18 EtherCAT or CAN Communication | 32 |
| 7.4.4. | COMRET to PE Connection..... | 32 |
| 7.5. | Wiring the Female Connectors..... | 33 |
| Chapter 8: | Connections | 34 |
| 8.1. | Main, Control, and Motor Power..... | 34 |
| 8.1.1. | Motor Power | 34 |
| 8.1.1.1. | Motor Power Connections | 35 |
| 8.1.2. | Main Power Wires & Connector..... | 36 |
| 8.1.2.1. | Main Power | 36 |
| 8.1.2.2. | Wiring Technical Details | 37 |
| 8.1.3. | Control Supply (J10) | 38 |
| 8.1.4. | Control Supply Connections for Power Supply & Heatsink Option: (Blank)39 | 39 |
| 8.1.4.1. | Dual Power Supply..... | 39 |
| 8.1.4.2. | Single Power Supply (VP+ < 40VDC) | 41 |
| 8.1.5. | Control Supply Connections for Power Supply & Heatsink Option: S or H42 | 42 |
| 8.1.5.1. | Dual Power Supply..... | 42 |
| 8.1.5.2. | Single Power Supply (VP+ < 95VDC) | 43 |
| 8.2. | Drive Status Indicator..... | 44 |
| 8.3. | J10 VL and Feedback Connector..... | 45 |
| 8.3.1. | Port A..... | 47 |
| 8.3.1.1. | Incremental Encoder | 47 |
| 8.3.1.2. | Absolute Serial Encoder | 48 |
| 8.3.1.3. | Hall Sensors | 49 |
| 8.3.2. | Port B | 50 |
| 8.3.2.1. | Incremental Encoder | 50 |
| 8.3.2.2. | Interpolated Analog Encoder | 50 |
| 8.3.2.3. | Resolver | 51 |
| 8.3.3. | Port C – Emulated Encoder Output (J10) | 52 |
| 8.4. | J11 I/O and Communication Connector..... | 53 |
| 8.4.1. | Digital Inputs | 55 |
| 8.4.1.1. | Source PLC Voltage Level Digital Input..... | 55 |
| 8.4.1.2. | Sink PLC Voltage Level Digital Input | 57 |

| | |
|--|-----------|
| 8.4.1.3. Source 5V Logic Level Digital Input | 59 |
| 8.4.2. Digital Outputs..... | 61 |
| 8.4.2.1. Source PLC Voltage Level Digital Output..... | 61 |
| 8.4.2.2. Sink PLC Voltage Level Digital Output | 63 |
| 8.4.2.3. Digital Outputs Source 5V Logic Mode..... | 65 |
| 8.4.3. STO (Safe Torque Off)..... | 67 |
| 8.4.4. Analog Input | 67 |
| 8.4.5. Standard RS-232 | 68 |
| 8.4.6. USB 2.0 Communication (Only for EtherCAT version)..... | 68 |
| 8.5. J19 Mini USB Communication Connector (Option M) | 69 |
| 8.6. EtherCAT Communications Version | 70 |
| 8.6.1. EtherCAT IN/Ethernet Connector (J17) | 70 |
| 8.6.2. EtherCAT OUT Connector (J18) | 71 |
| 8.6.3. EtherCAT Schematic Connections | 72 |
| 8.6.3.1. EtherCAT Communication | 72 |
| 8.6.3.2. EtherCAT Status Indicator (D2)..... | 73 |
| 8.6.3.3. EtherCAT Link Indicators (D3, D4) | 73 |
| 8.7. CAN Communications Version | 74 |
| 8.7.1. CAN IN Connector (J17) | 74 |
| 8.7.2. CAN OUT Connector (J18) | 75 |
| 8.7.3. CAN Schematic Connections | 76 |
| 8.7.3.1. Interface | 76 |
| 8.7.3.2. CAN Network Topology | 77 |
| Chapter 9: Powering Up..... | 78 |
| 9.1. Initializing the System | 78 |
| 9.2. Heat Dissipation | 78 |
| 9.2.1. Heat Dissipation Data..... | 78 |
| 9.2.2. How to Use the Chart | 81 |
| Chapter 10: Dimensions, Physical Specifications..... | 82 |
| 10.1. EtherCAT Option E without Heatsink | 82 |
| 10.1.1. Wires To Power Supply G-SOLTWIRXX/YYYYEE1SQ..... | 82 |
| 10.1.2. Horizontal Power Connector G-SOLTWIRXX/YYYYEE1SQ..... | 83 |
| 10.1.3. Vertical Power Connector G-SOLTWIRXX/YYYYEE1SQ..... | 84 |
| 10.2. EtherCAT Option E with Heatsink..... | 85 |
| 10.2.1. Wires to Power Supply G-SOLTWIRXX/YYYYEE1HQ..... | 85 |
| 10.2.2. Horizontal Power Connector G-SOLTWIRXX/YYYYEE1HQ..... | 86 |

| | | |
|--------------------|--|------------|
| 10.2.3. | Vertical Power Connector G-SOLTWIRXX/YYYYEE1HQ | 87 |
| 10.3. | EtherCAT Option M without Heatsink..... | 88 |
| 10.3.1. | Wires to Power Supply G-SOLTWIRXX/YYYYME1SQ | 88 |
| 10.3.2. | Horizontal Power Connector G-SOLTWIRXX/YYYYME1SQ..... | 89 |
| 10.3.3. | Vertical Power Connector G-SOLTWIRXX/YYYYME1SQ..... | 90 |
| 10.4. | EtherCAT Option M with Heatsink | 91 |
| 10.4.1. | Wires to Power Supply G-SOLTWIRXX/YYYYME1HQ..... | 91 |
| 10.4.2. | Horizontal Power Connector G-SOLTWIRXX/YYYYME1HQ | 92 |
| 10.4.3. | Vertical Power Connector G-SOLTWIRXX/YYYYME1HQ..... | 93 |
| 10.5. | CAN without Heatsink | 94 |
| 10.5.1. | Wires to Power Supply G-SOLTWIRXX/YYYYSE1SQ..... | 94 |
| 10.5.2. | Horizontal Power Supply G-SOLTWIRXX/YYYYSE1SQ..... | 95 |
| 10.5.3. | Vertical Power Supply G-SOLTWIRXX/YYYYSE1SQ | 96 |
| 10.6. | CAN with Heatsink..... | 97 |
| 10.6.1. | Wires to Power Supply G-SOLTWIRXX/YYYYSE1HQ | 97 |
| 10.6.2. | Horizontal Power Connector G-SOLTWIRXX/YYYYSE1HQ | 98 |
| 10.6.3. | Vertical Power Supply G-SOLTWIRXX/YYYYSE1HQ..... | 99 |
| Chapter 11: | Accessories..... | 100 |
| 11.1. | Accessories Heat Sink Dimensions | 102 |



Chapter 1: This Installation Guide

This installation Guide details the technical data, pinouts, and power connectivity of the Gold Solo Twitter. For a comprehensive detailed description of the functions and connections of the drive, refer to the Gold Board Level Module Hardware Manual.

Chapter 2: Safety Information

In order to achieve the optimum, safe operation of the Gold Solo Twitter, it is imperative that you implement the safety procedures included in this installation guide. This information is provided to protect you and to keep your work area safe when operating the Gold Solo Twitter and accompanying equipment.

Please read this chapter carefully before you begin the installation process.

Before you start, ensure that all system components are connected to earth ground. Electrical safety is provided through a low-resistance earth connection.

Only qualified personnel may install, adjust, maintain and repair the servo drive. A qualified person has the knowledge and authorization to perform tasks such as transporting, assembling, installing, commissioning and operating motors.

The Gold Solo Twitter contains electrostatic-sensitive components that can be damaged if handled incorrectly. To prevent any electrostatic damage, avoid contact with highly insulating materials, such as plastic film and synthetic fabrics. Place the product on a conductive surface and ground yourself in order to discharge any possible static electricity build-up.

To avoid any potential hazards that may cause severe personal injury or damage to the product during operation, keep all covers and cabinet doors shut.

The following safety symbols are used in this and all Elmo Motion Control manuals:



Warning:

This information is needed to avoid a safety hazard, which might cause bodily injury or death as a result of incorrect operation.



Hot Surface Warning:

To alert against surfaces that may reach high temperatures. The heatsink and wires may reach high temperatures.



Caution:

This information is necessary to prevent bodily injury, damage to the product or to other equipment.



Important:

Identifies information that is critical for successful application and understanding of the product.



2.1. Warnings

- To avoid electric arcing and hazards to personnel and electrical contacts, never connect/disconnect the servo drive while the power source is on.
- Power cables can carry a high voltage, even when the motor is not in motion. Disconnect the Gold Solo Twitter from all voltage sources before servicing.
- The high voltage products within the Gold Line range contain grounding conduits for electric current protection. Any disruption to these conduits may cause the instrument to become hot (live) and dangerous.
- After shutting off the power and removing the power source from your equipment, wait at least 1 minute before touching or disconnecting parts of the equipment that are normally loaded with electrical charges (such as capacitors or contacts). Measuring the electrical contact points with a meter, before touching the equipment, is recommended.



2.2. Cautions

- The maximum DC power supply connected to the instrument must comply with the parameters outlined in this guide.
- When connecting the Gold Solo Twitter to an approved control supply, connect it through a line that is separated from hazardous live voltages using reinforced or double insulation in accordance with approved safety standards.
- Before switching on the Gold Solo Twitter, verify that all safety precautions have been observed and that the installation procedures in this manual have been followed.
- Make sure that the Safe Torque Off is operational.

2.3. Warranty Information


The products covered in this manual are warranted to be free of defects in material and workmanship and conform to the specifications stated either within this document or in the product catalog description. All Elmo drives are warranted for a period of 12 months from the date of shipment. No other warranties, expressed or implied — and including a warranty of merchantability and fitness for a particular purpose — extend beyond this warranty.




Chapter 3: Product Description

The Gold Solo Twitter is a “ready to use Gold Twitter”, advanced high power density, highly intelligent servo drive operational within a few minutes, delivering up to **5.6 kW power** in an average 30.59 cm^3 (1.87 in^3) compact package (refer to Chapter 10: Dimensions, Physical Specifications for details). A cable kit and optional heat sinks are available for easy and fast operation of the Gold Solo Twitter.

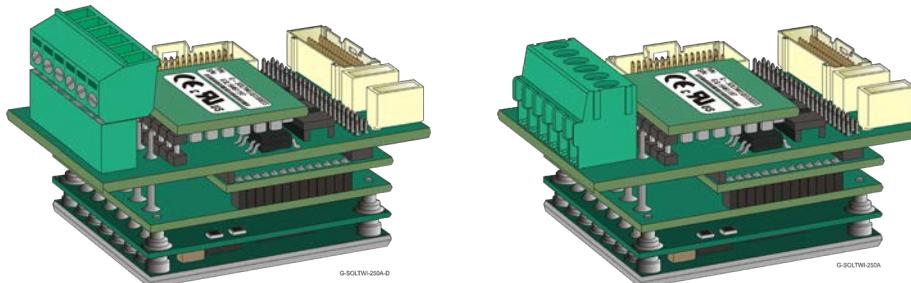The Gold Solo Twitter which is provided in the optional forms shown in Figure 1, provides top performance, advanced networking and built-in certified safety, as well as a fully featured motion controller and local intelligence.



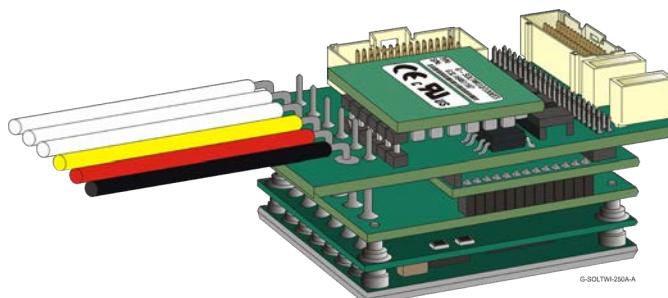Vertical ($\leq 10\text{A}$) or Horizontal ($\leq 25\text{A}$) Power Connector for Output Current



Wired Power Connection (recommended for $>25\text{A}$ Output Current, but optional for $\leq 25\text{A}$)

Figure 1: Gold Solo Twitter with Power Connectors Options

Power to the Gold Solo Twitter is provided by a DC power source which is isolated from the Mains. The Gold Solo Twitter can operate with single or dual power supplies. If separation between the main DC power source and a control supply is required, then a control supply (also isolated from the Mains) is required.

The drive can operate as a stand-alone device or as part of a multi-axis system in a distributed configuration on a real-time network.

The Gold Solo Twitter drive is easily set up and tuned using the Elmo Application Studio (EASII) software tools. As part of the Gold product line, it is fully programmable with the Elmo motion control languages. For more information about software tools refer to the Elmo Application Studio (EASII) User Guide.

Optionally, where necessary, Elmo offers two external heat sinks (Catalog number: G-TWIHSFINS01, and G-TWIHSFLAT01) which should be ordered separately. Refer to the section 6.2 Mounting the Optional Accessories Heat Sinks for details of installing the heatsinks.






Chapter 4: Technical Information







Note: It should be noted that for all models, the Max Output current is guaranteed for $T_{Heat-Sink} < 85^{\circ}\text{C}$

4.1. Physical Specifications




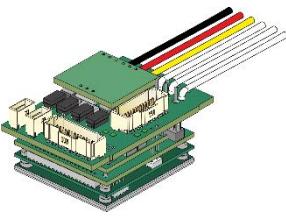
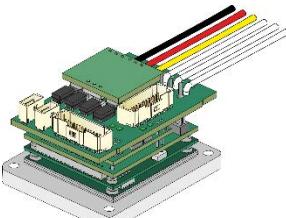
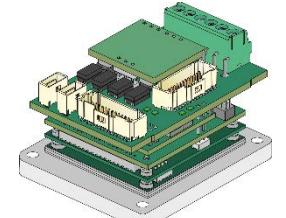
Throughout the feature column, for each product, there is a blue hyperlink to the relevant section in the Dimensions chapter.

| Product | Catalog Number | Description |
|---|--------------------------------------|--|
| EtherCAT with USB Molex Connector | | |
|  | G-SOLTWIRXX/YYYEE1SQ | <p>Gold Solo Twitter with wired power connections:</p> <ul style="list-style-type: none">• E = EtherCAT with USB Molex Connector• E = Feedback options• 1 = Power connector option, for Wires power connection select 1, 2, or 3• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYEE1HQ | <p>Gold Solo Twitter with the Phoenix horizontal power connector:</p> <ul style="list-style-type: none">• E = EtherCAT with USB Molex Connector• E = Feedback options• 1 = Power connector option, for Horizontal power connector select 7, 8, or 9• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYEE1HQ | <p>Gold Solo Twitter with the Phoenix horizontal power connector:</p> <ul style="list-style-type: none">• E = EtherCAT with USB Molex Connector• E = Feedback options• 1 = Power connector option, for Horizontal power connector select 7, 8, or 9• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |

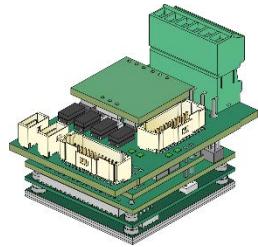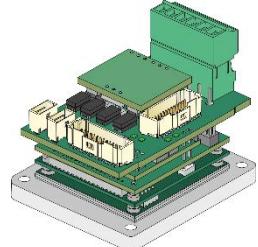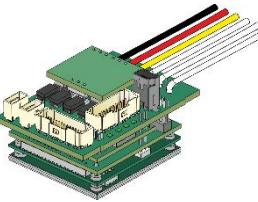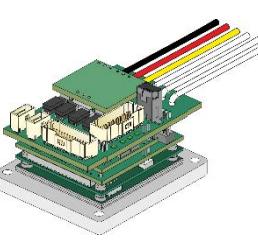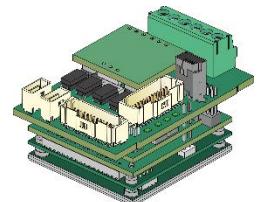
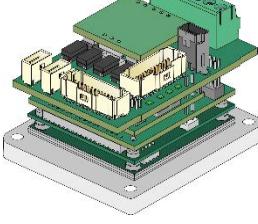


| Product | Catalog Number | Description |
|---|-----------------------|--|
|  | G-SOLTWIRXX/YYYYEE1SQ | <p>Gold Solo Twitter with the Phoenix pluggable vertical power connector:</p> <ul style="list-style-type: none">• E = EtherCAT with USB Molex Connector• E = Feedback options• 1 = Power connector option, for Vertical power connector select 4, 5, or 6• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYEE1HQ | |
| EtherCAT with Mini USB | | |
|  | G-SOLTWIRXX/YYYYME1SQ | <p>Gold Solo Twitter with wired power connections:</p> <ul style="list-style-type: none">• M = EtherCAT with Mini USB• E = Feedback options• 1 = Power connector option, for Wires power connection select 1, 2, or 3• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYME1HQ | |
|  | G-SOLTWIRXX/YYYYME1SQ | <p>Gold Solo Twitter with the Phoenix horizontal power connector:</p> <ul style="list-style-type: none">• M = EtherCAT with Mini USB• E = Feedback options• 1 = Power connector option, for Horizontal power connector select 7, 8, or 9• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink |
|  | G-SOLTWIRXX/YYYYME1HQ | |

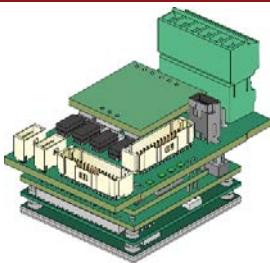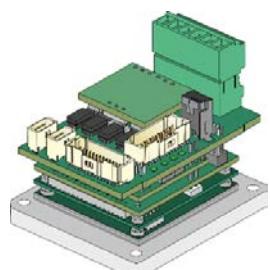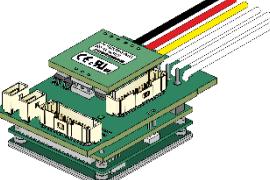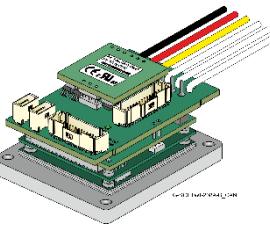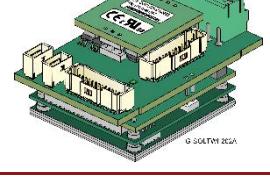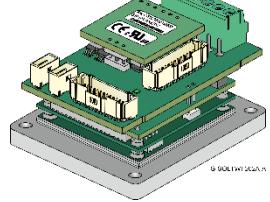

| Product | Catalog Number | Description |
|---|-----------------------|--|
| | | <ul style="list-style-type: none">• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYME1SQ | Gold Solo Twitter with the Phoenix pluggable vertical power connector: <ul style="list-style-type: none">• M = EtherCAT with Mini USB• E = Feedback options• 1 = Power connector option, for Vertical power connector select 4, 5, or 6• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYME1HQ | |
| CAN | | |
|  | G-SOLTWIRXX/YYYYSE1SQ | Gold Solo Twitter with wired power connections: <ul style="list-style-type: none">• S = Standard CANopen• E = Feedback options• 1 = Power connector option, for Wires power connection select 1, 2, or 3• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYSE1HQ | |
|  | G-SOLTWIRXX/YYYYSE1SQ | Gold Solo Twitter with the Phoenix horizontal power connector: <ul style="list-style-type: none">• S = Standard CANopen• E = Feedback options• 1 = Power connector option, for Horizontal power connector select 7, 8, or 9• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink |
|  | G-SOLTWIRXX/YYYYSE1HQ | |

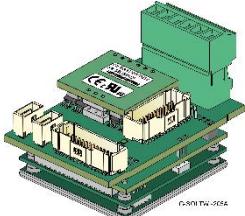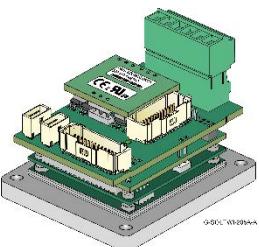

| Product | Catalog Number | Description |
|---|-----------------------|---|
| | | <ul style="list-style-type: none">• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYSE1SQ | <p>Gold Solo Twitter with the Phoenix pluggable vertical power connector:</p> <ul style="list-style-type: none">• S = Standard CANopen• E = Feedback options• 1 = Power connector option, for Vertical power connector select 4, 5, or 6• S = control supply VL 11V – 95V without Heatsink• (Blank) = control supply VL<40V without Heatsink• H = control supply with flat Heatsink |
|  | G-SOLTWIRXX/YYYYSE1HQ | |



4.2. 60V and 100V Models Technical Data

| Feature | Units | 30/60 | 1/100 | 3/100 | 6/100 | 10/100 | 15/100 | 25/100 |
|---|-------|-------|-------|-------|-------|-----------------------------|--------|--------|
| Minimum supply voltage | VDC | 8 | | | | 10 | | |
| Nominal supply voltage | VDC | 48 | | | | 85 | | |
| Maximum supply voltage | VDC | 55 | | | | 95 | | |
| Maximum continuous power output | W | 1370 | 80 | 235 | 470 | 800 | 1125 | 2000 |
| Efficiency at rated power (at nominal conditions) | % | | | | | > 99 | | |
| Maximum output voltage | | | | | | Up to 96% of DC bus voltage | | |
| I _c , Amplitude sinusoidal/DC continuous current | A | 30 | 1 | 3 | 6 | 10 | 15 | 25 |
| Sinusoidal continuous RMS current limit (I _c) | A | 21 | 0.7 | 2.1 | 4.2 | 7.1 | 10 | 17.7 |
| Peak current limit | A | | | | | 2 x I _c | | |

Table 1: 60V and 100V Models Technical Data

4.3. 200V Models Technical Data

| Feature | Units | 3/200 | 6/200 | 10/200 |
|---|-------|-------|-----------------------------|--------|
| Minimum supply voltage | VDC | | 20 | |
| Nominal supply voltage | VDC | | 170 | |
| Maximum supply voltage | VDC | | 195 | |
| Maximum continuous power output | W | 485 | 975 | 1650 |
| Efficiency at rated power (at nominal conditions) | % | | > 99 | |
| Maximum output voltage | | | Up to 96% of DC bus voltage | |
| I _c , Amplitude sinusoidal/DC continuous current | A | 3 | 6 | 10 |
| Sinusoidal continuous RMS current limit (I _c) | A | 2.1 | 4.2 | 7.1 |
| Peak current limit | A | | 2 x I _c | |

Table 2: 200V Models Technical Data



4.4. R Type Technical Data

| Feature | Units | R50/60 | R80/80 | R50/100 | R70/100 | R45/150 | R15/200 | R35/200 |
|---|-------|--------|--------|---------|---------|---------|-----------------------------|---------|
| Minimum supply voltage | VDC | 8 | 10 | 10 | 10 | 12 | 20 | 20 |
| Nominal supply voltage | VDC | 48 | 65 | 85 | 85 | 115 | 170 | 170 |
| Maximum supply voltage | VDC | 55 | 75 | 95 | 95 | 135 | 195 | 195 |
| Maximum continuous Electrical power output | kW | 2.3 | 5 | 4.0 | 5.6 | 5 | 2.5 | 5.6 |
| Efficiency at rated power (at nominal conditions) | % | | | | > 99 | | | |
| Maximum output voltage | | | | | | | Up to 96% of DC bus voltage | |
| Amplitude sinusoidal/DC continuous current | A | 50 | 80 | 50 | 70 | 45 | 15 | 35 |
| Sinusoidal continuous RMS current limit (Ic) | A | 35.3 | 56.5 | 35.3 | 49.5 | 32 | 10.6 | 24.7 |

Table 3: R Type Models Technical Data



4.5. Control Supply Input Voltage (VL)

| Feature | Unit | Details |
|---|------|-----------|
| Standard CAN | | |
| Input range for Power Supply & Heatsink Option: (Blank) | V | 12V – 40V |
| Input range for Power Supply & Heatsink Option: S or H | V | 11V – 95V |
| Power consumption (including 5 V/200 mA for encoder) | W | <2.5W |
| ETHERCAT (E or M option) | | |
| Input range for Power Supply & Heatsink Option: (Blank) | V | 14V – 40V |
| Input range for Power Supply & Heatsink Option: S or H | V | 11V – 95V |
| Power consumption (including 5 V/200 mA for encoder) | W | <4W |



4.6. Product Features

| Main Feature | Details | Presence / No. |
|----------------------|---|----------------|
| STO | +5V Logic, Opto isolated from the Control section, or | ✓ |
| | PLC Source, Opto isolated from the Control section | ✓ |
| Digital Input | +5V Logic, Opto isolated from the Control section or | 6 |
| | PLC Source, Opto isolated from the Control section or | 6 |
| | PLC Sink Opto isolated from the Control section | 6 |
| Digital Output | +5V Logic, Opto isolated from the Control section or | 4 |
| | PLC Source, Opto isolated from the Control section or | 4 |
| | PLC Sink, Opto isolated from the Control section | 4 |
| Analog Input | Differential ±10V or Single Ended | 1 |
| Feedback | Standard Port A, B, & C | ✓ |
| Communication Option | USB (only for EtherCAT version) | ✓ |
| | EtherCAT or | ✓ |
| | CAN | ✓ |
| | Standard RS232 | ✓ |



4.7. Environmental Conditions

You can guarantee the safe operation of the Gold Solo Twitter by ensuring that it is installed in an appropriate environment. The following table describes the certified environmental conditions for STO of the Gold series servo drives.



Warning: During operation the Gold Solo Twitter becomes hot to the touch (the heatsink and wires may heat up to 92 °C). Care should be taken when handling it.



Caution:

The Gold Solo Twitter dissipates its heat by convection or by conduction. The maximum ambient operating temperature of 50 °C (122°F) must not be exceeded.

| Feature | Details |
|---|---|
| Operating ambient temperature | 0 °C to +50 °C (32 °F to +122 °F) |
| Storage temperature | -40 °C to +85 °C (-40 °F to +185 °F) |
| Maximum non-condensing humidity according to IEC60068-2-78 | 95% |
| Maximum Operating Altitude | 2,000 m (6562 feet) It should be noted that servo drives capable of higher operating altitudes are available on request. |
| Mechanical Shock according to IEC60068-2-27 | 15g / 11ms Half Sine |
| Vibration according to IEC60068-2-6 | 5 Hz ≤ f ≤ 10 Hz: ±10mm 10 Hz ≤ f ≤ 57 Hz: 4G 57 Hz ≤ f ≤ 500 Hz: 5G |



Chapter 5: Standards and Certifications

5.1. Functional Safety

| Standard | Item |
|----------------------------|---|
| IEC 61800-5-2:2017 | Adjustable speed electrical power drive systems – Safety requirements – Functional |
| EN ISO 13849-1:2015 | Safety of machinery — Safety-related parts of control systems. |
| EN 61508-1:2010 | Functional safety of electrical/electronic/programmable electronic safety-related systems |
| EN 61508-2:2010 | Functional safety of electrical/electronic/programmable electronic safety-related systems |
| EN 61508-3:2010 | Functional safety of electrical/electronic/programmable electronic safety-related systems |

5.2. Electrical Safety

| Specification | Details |
|--------------------------------|---|
| Recognized UL 61800-5-1 | Adjustable speed electrical power drive systems: Safety requirements – Electrical, thermal and energy |
| CSA C22.2 NO. 274-17 | Adjustable speed drives |

5.3. Electromagnetic Compatibility

| Specification | Details |
|-----------------------------------|---|
| EN 61800-3:2004/A1:2011 | Adjustable speed electrical power drive systems Part 3: EMC requirements and specific test methods |
| EN 61800-5-2: 2017 Annex E | Adjustable speed electrical power drive systems Part 5-2: Safety requirements – Functional |



5.4. Environmental

| Specification | Details |
|---------------|-------------------------|
| IEC60068-2-78 | Damp heat, steady state |
| IEC60068-2-6 | Vibration (sinusoidal) |
| IEC60068-2-2 | Dry heat |
| IEC60068-2-27 | Shock |

5.5. Other Compliant Standards

For other compliant standards refer to the

[MAN-G-Board Level Modules Hardware Manual section 17.7](#) or refer to the Elmo website:

<https://www.elmomc.com/capabilities/standards-compliance/gold-family/>

5.6. CE Declaration

Refer to the complete EC Declaration of Conformity available on the internet at:

[https://www.elmomc.com/wp-content/uploads/dlm_uploads/2018/05/Gold-Line-CE-Declaration-of-Conformity.pdf.](https://www.elmomc.com/wp-content/uploads/dlm_uploads/2018/05/Gold-Line-CE-Declaration-of-Conformity.pdf)

5.7. Dual Use

No export license is required for the Gold Line products signified with the suffix Q in the Part Number.

The operating frequency of the Gold Line products is “factory limited” to ≤ 599 Hz, and therefore complies with the EU Dual Use Regulation 428/2009, 3A225, and the US Dual Use regulation EAR ECCN# 3A225.

This statement applies to all identical specimens and will become invalid if a change is made in the firmware.



Chapter 6: Installation

The Gold Solo Twitter must be installed in a suitable environment and properly connected to its voltage supplies and the motor.

6.1. Unpacking the Drive Components

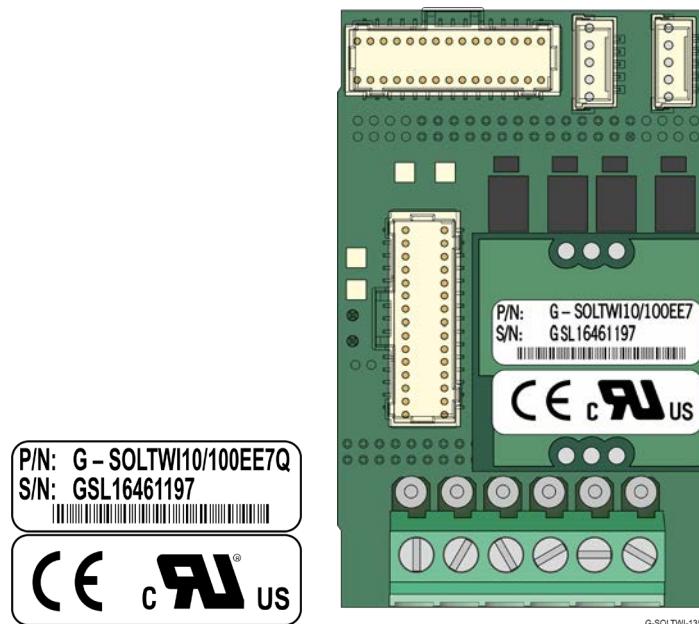
Before you begin working with the Gold Solo Twitter, verify that you have all of its components, as follows:

- The Gold Solo Twitter servo drive
- The Elmo Application Studio (EASII) software and software manual

The Gold Solo Twitter is shipped in a cardboard box with Styrofoam protection.

To unpack the Gold Solo Twitter:

1. Carefully remove the servo drive from the box and the Styrofoam.
2. Check the drive to ensure that there is no visible damage to the instrument. If any damage has occurred, report it immediately to the carrier that delivered your drive.
3. To ensure that the Gold Solo Twitter you have unpacked is the appropriate type for your requirements, locate the part number sticker on the top of the Gold Solo Twitter. It looks like this:




4. Verify that the Gold Solo Twitter type is the one that you ordered, and ensure that the voltage meets your specific requirements.

The part number at the top provides the type designation. Refer to the appropriate part number in the Catalog Number section at the beginning of the installation guide.




6.2. Mounting the Optional Accessories Heat Sinks

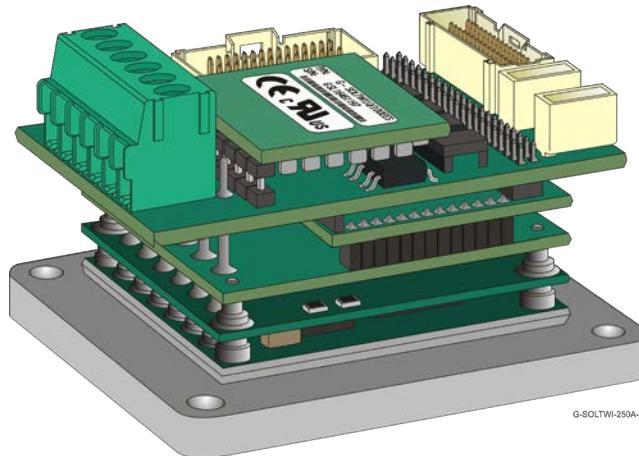There are two optional heat sinks, available as accessory kits (the model Power Supply & Heatsink Option: **H** is integrated with the Flat Heatsink P/N G-TWIHSFLAT01):



Flat Heat Sink (P/N G-TWIHSFLAT01)

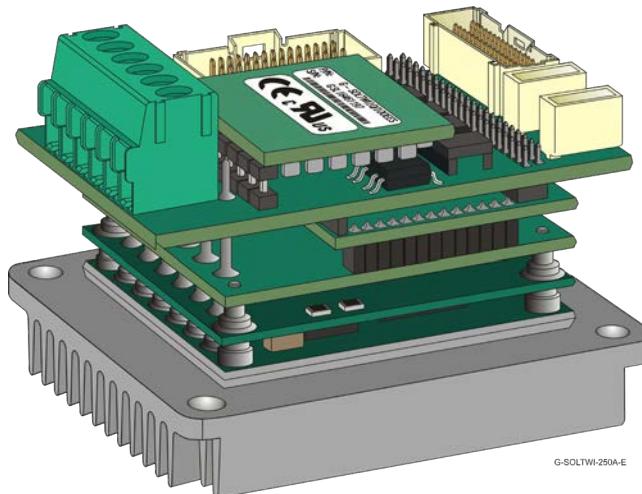


Fins Heat Sink (P/N G-TWIHSFINS01)

The optional heat sink must be screwed to the lower surface of the Gold Solo Twitter.

**To mount the accessory heatsink (Not available for the option****Power Supply & Heatsink Option: H):**

1. Mount the heat sink under the base of the Gold Solo Twitter.
2. Place the Thermal foil (enclosed in the heat sink accessories kit) between the lower surface of the servo drive, and the upper surface of the heatsink.
3. Use four M2 screws (enclosed in the heat sink accessories kit) to secure the heatsink under the servo drive.
4. Tighten the screws to the relevant torque force applicable to an M2 stainless steel A2 screw.

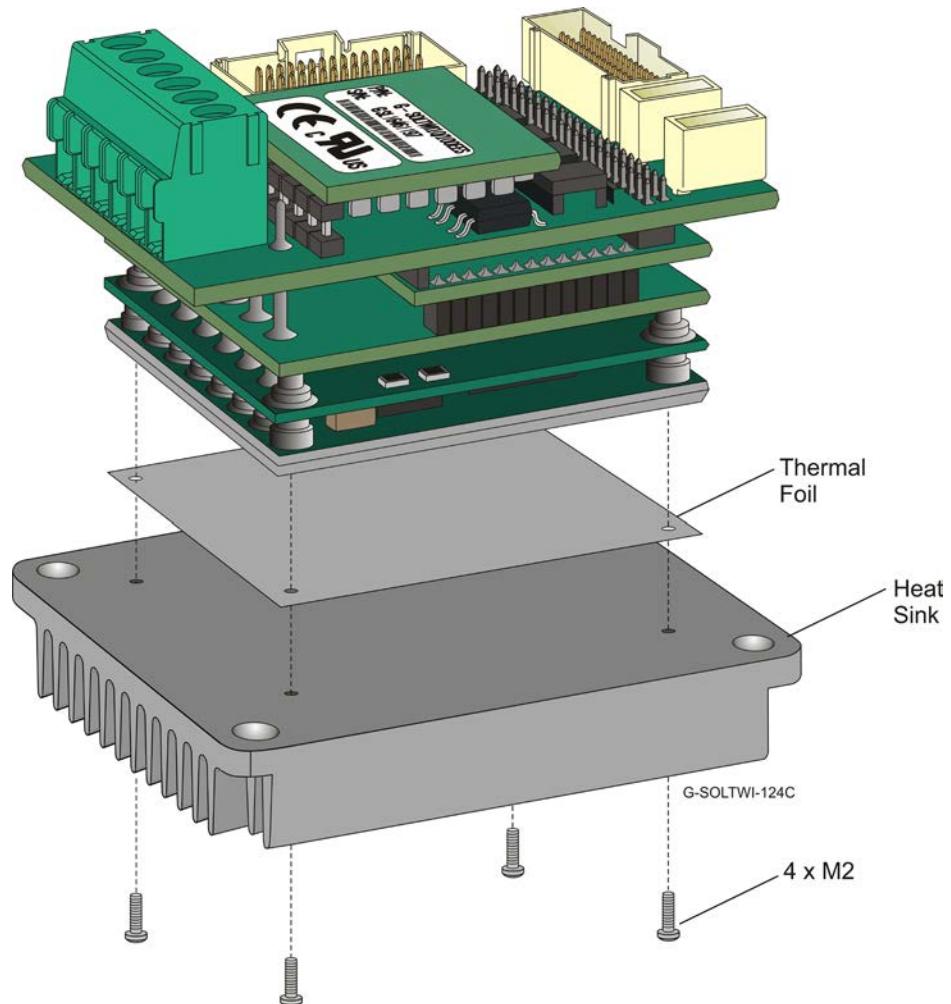**Figure 2: Mount the Heat Sink and Thermal Foil to the Gold Solo Twitter**



6.3. Mounting Gold Solo Twitter to an External Heatsink

This option is only available for Power Supply & Heatsink Option: **H**.

The selected heat sink must be screwed to the lower surface of the Gold Solo Twitter.

To mount the Gold Solo Twitter to an external heat sink:

1. Mount the heat sink under the base of the Gold Solo Twitter.
2. Place the Thermal foil (PN IMT-GTWIALHFLAT purchased from Elmo) between the lower surface of the servo drive, and the upper surface of the heatsink.
3. Use four M2.5 head cup Allen screws to secure the heat sink under the servo drive.
4. Tighten the screws to the relevant torque force applicable to an M2.5 stainless steel A2 screw.

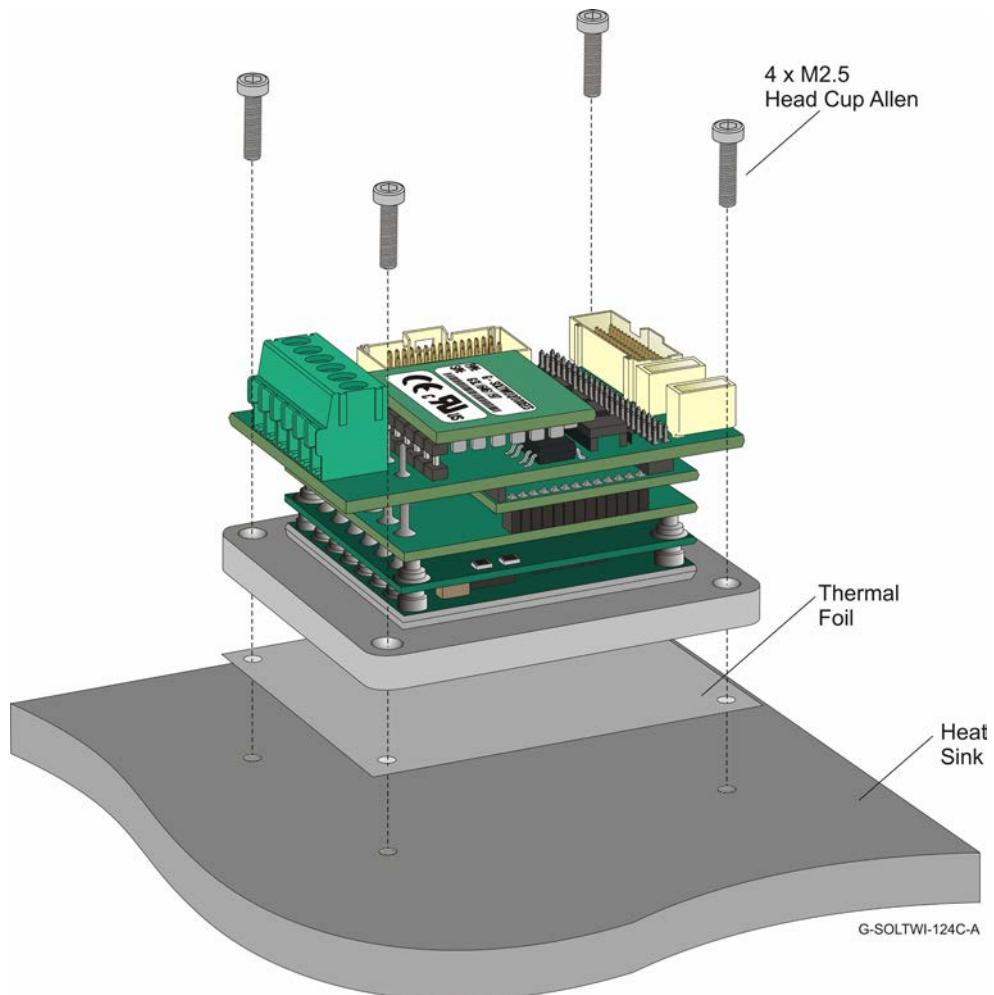


Figure 3: Mounting the Heat Sink and Thermal Foil to the Gold Solo Twitter



6.4. The Gold Solo Twitter Connection Diagrams

6.4.1. EtherCAT with Molex Connection USB Connection Diagram


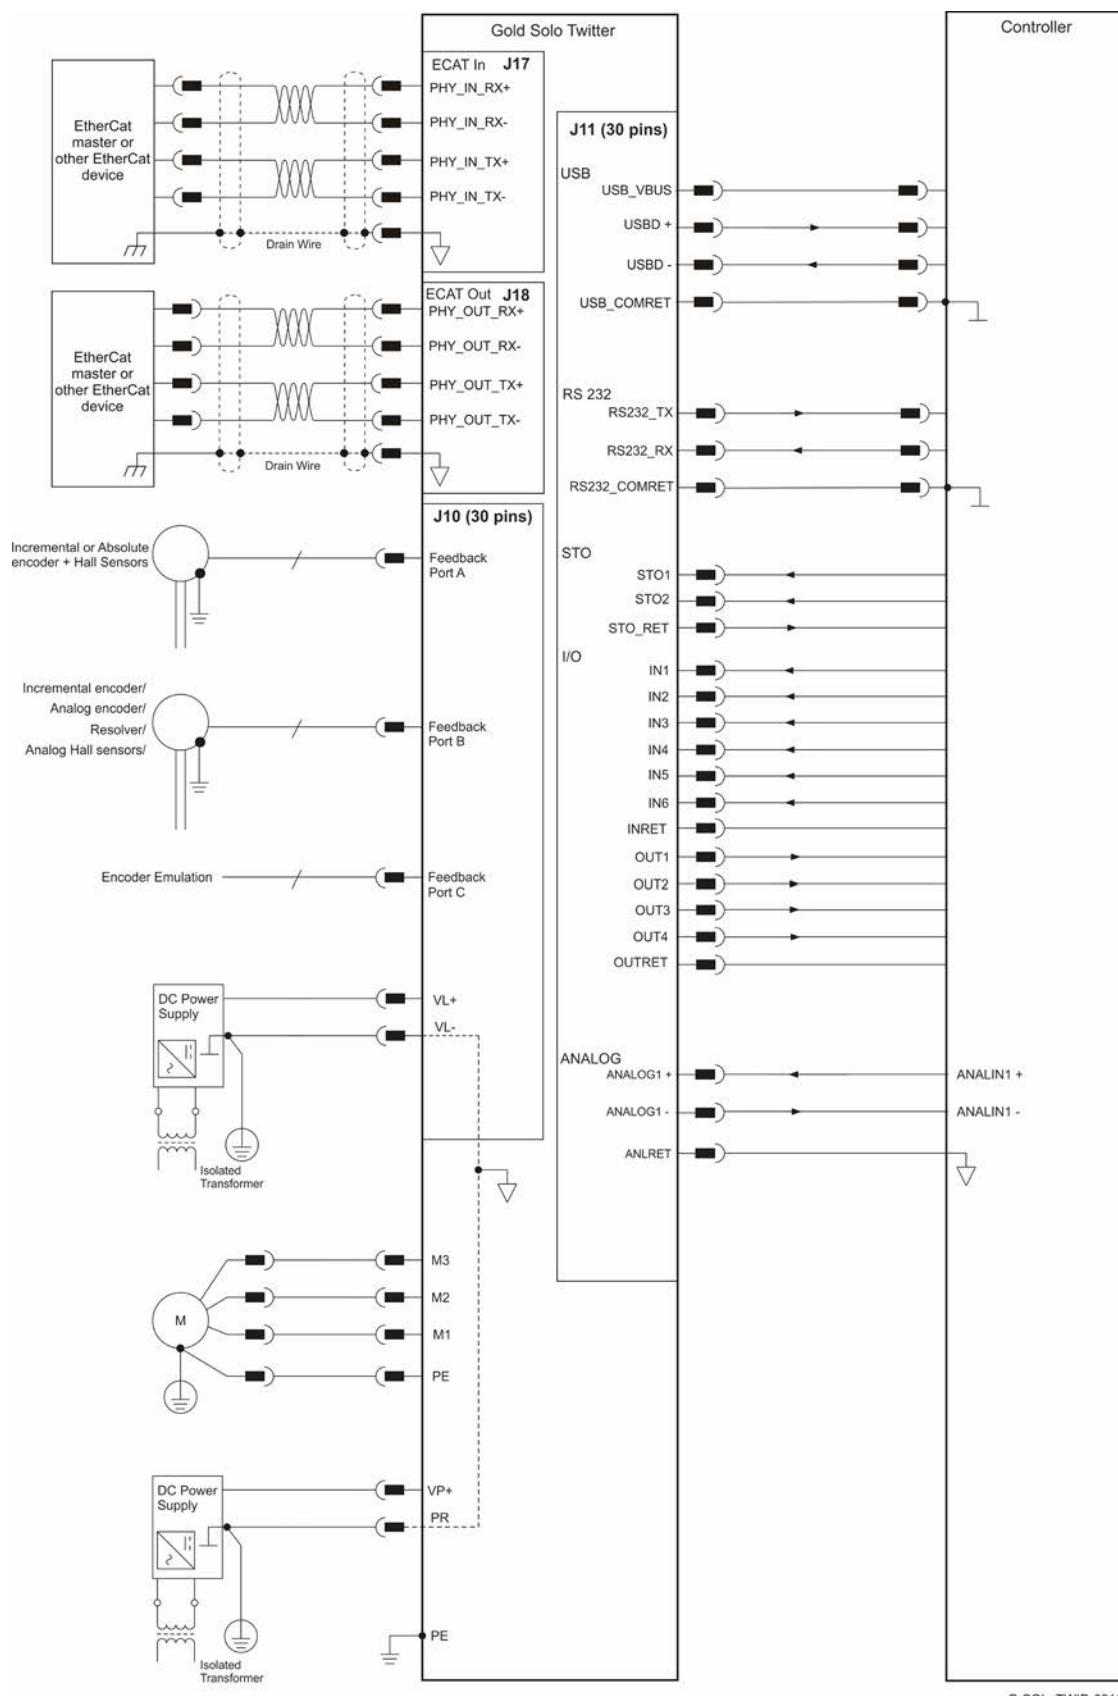


Figure 4: The Gold Solo Twitter EtherCAT Connection Diagram (Option E)

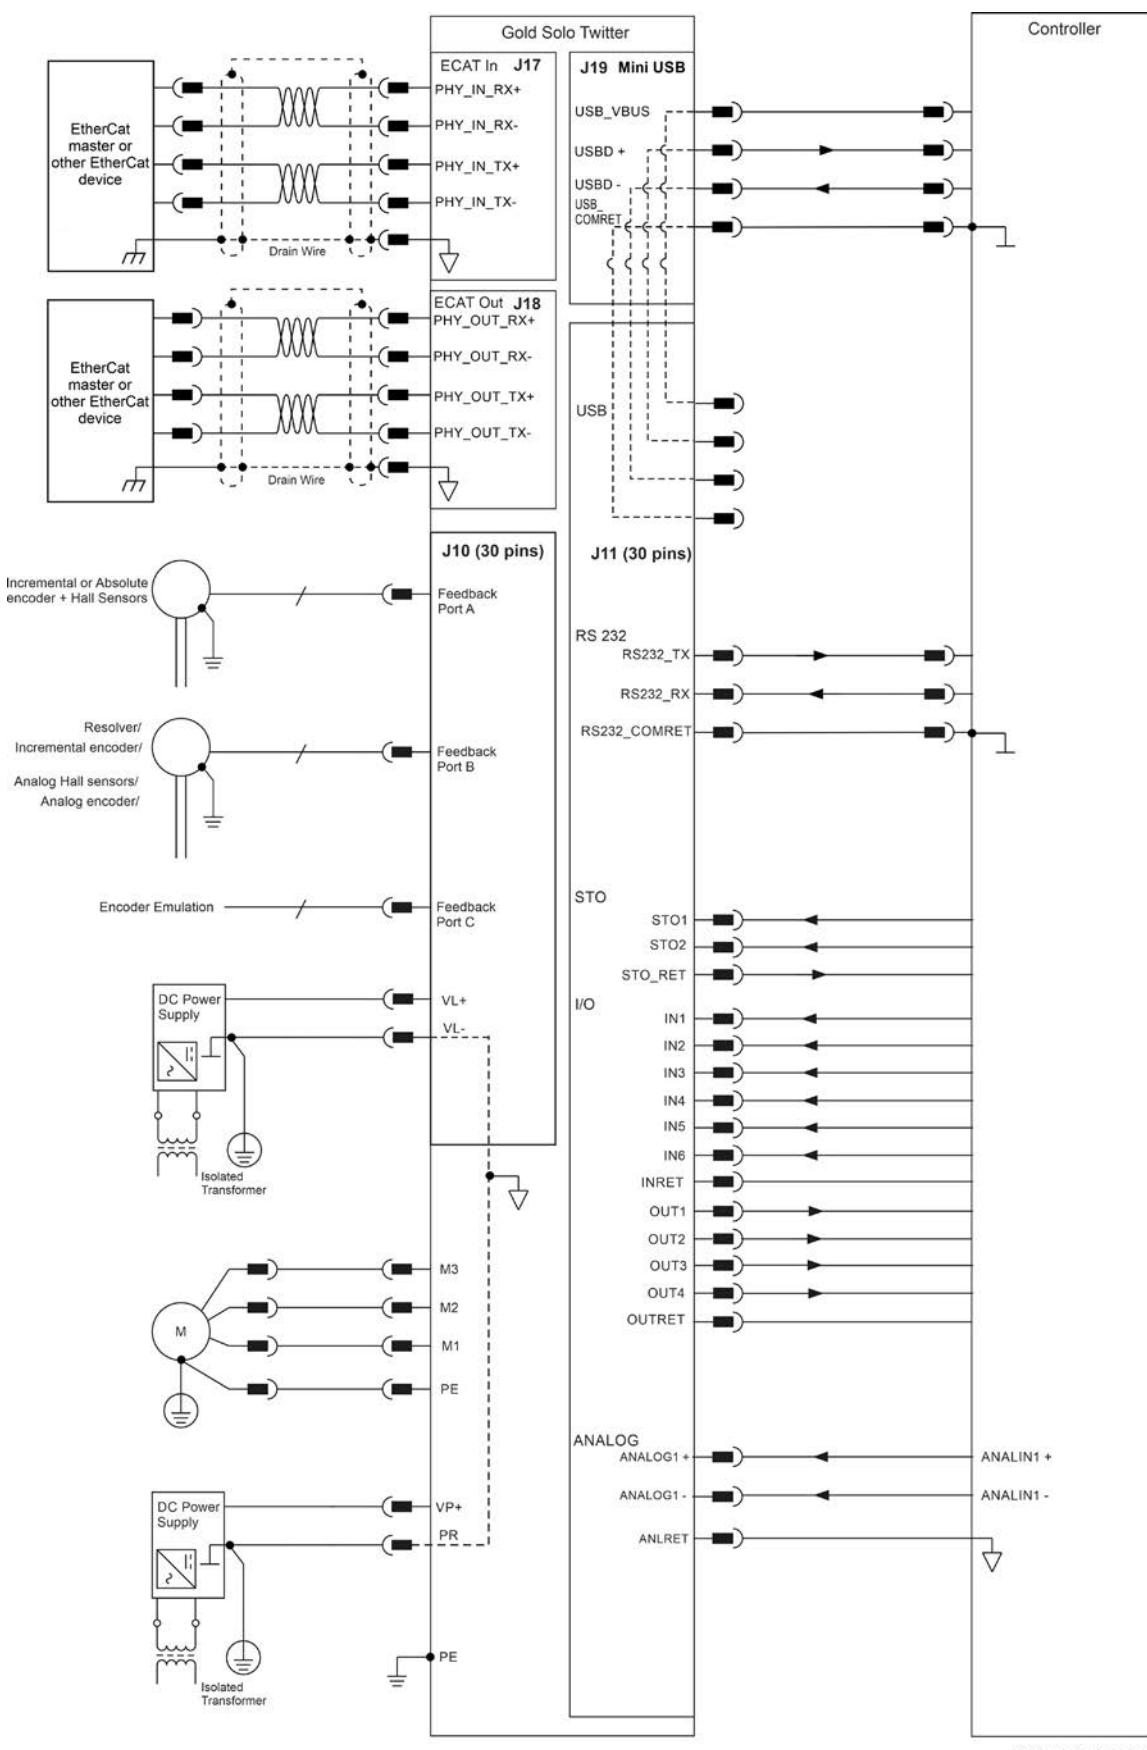

6.4.2. EtherCAT with Mini USB Connector Connection Diagram




G-SOLTWI_V5-0213C

Figure 5: The Gold Solo Twitter EtherCAT Connection Diagram (Option M)



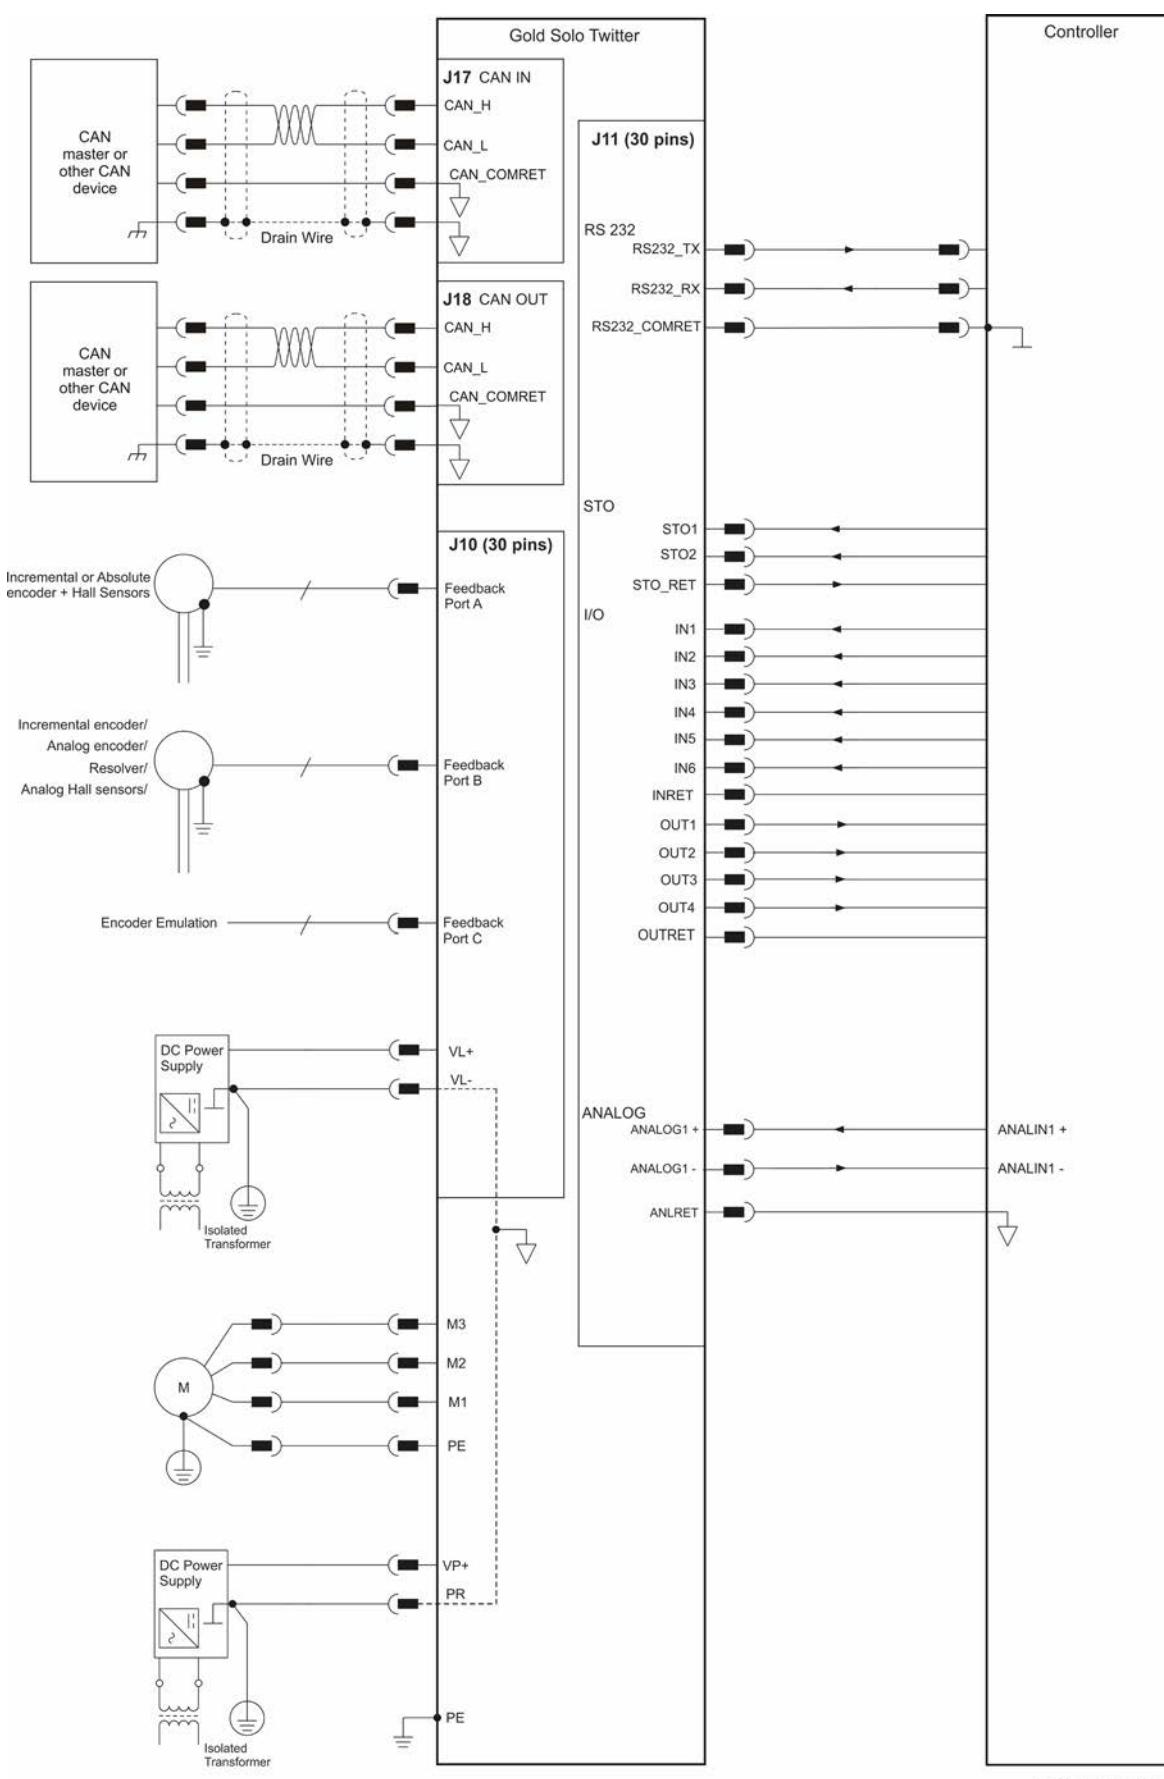6.4.3. CAN Connection Diagram



G-SOL_TWID_CAN-F






Figure 6: The Gold Solo Twitter CAN Connection Diagram



Chapter 7: Wiring

7.1. Wiring Legend

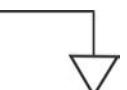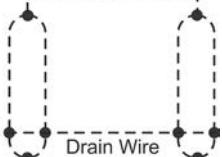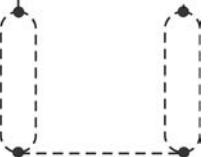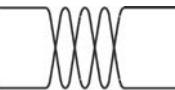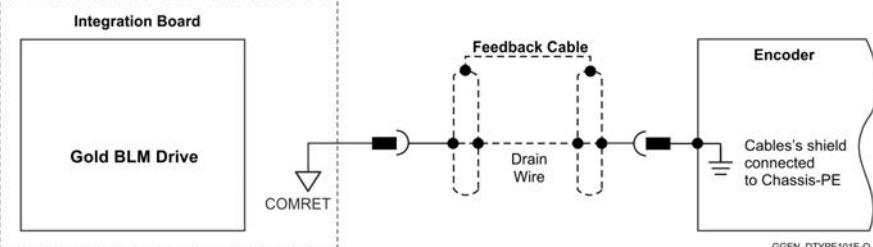The following table legend describes the wiring symbols detailed in all installation guides.

| Wiring Symbol | Description |
|--|--|
|  GGEN_101D-A | Earth connection (PE) |
|  GGEN_101D-B | Earth Connection |
|  GGEN_101D-C | Common at the Controller |
|  GGEN_101D-D | <p>Shielded cable with drain wire. The drain wire is a non-insulated wire that is in direct contact with the braid (shielding). Shielded cable with drain wire significantly simplifies the wiring and earthing.</p> |
|  GGEN_101D-E | Shielded cable braid only, without drain wire. |
|  GGEN_101D-F | Twisted-pair wires |
|  | <p>Encoder Earthing. The cable's shield is connected to the chassis (PE) in the connector. Earthing the Encoder and connecting the Earth (PE) to the drive COMRET is mandatory to insure reliable operation, high noise immunity and rejection of voltage common mode interferences.</p> |



7.2. Connectors Types

The Gold Solo Twitter has five connectors:

| Connector | Connector Type |
|-----------------|---|
| Power | Wires, Horizontal or Pluggable Vertical Pheonix connector |
| J10, J11 | J10 - VL & Feedback Ports Connector (2 rows x 15 Pins) J11 - IO and Communication Connector (2 rows x 15 Pins) |
| J17, 18 | J17 - CAN/EtherCAT IN Communication J18 - CAN/EtherCAT OUT Communication |
| J19 | J19 – Mini USB (Only for Option M) |

7.3. Mating Connectors

| Connector | Mating Connector Type | Mating Crimping Pins |
|--|--|--|
| Power(Vertical model) | PHEONIX 3.5 mm pitch terminal 6-pin plug straight 1840405 | N/A |
| J10, J11 VL & Feedback Ports IO and Communication | MOLEX 1.00mm "Pico-Clasp" 501189-3010 | MOLEX 1.00mm crimp terminal 501193-3000 |
| J17, 18 IN/OUT CAN/EtherCAT Communication | MOLEX 1.00mm "Pico-Clasp" 501330-0500 | MOLEX 1.00mm crimp terminal 501334-0100 |
| Connectors Location | | |
| | | |

Table 4: Connector Types



7.4. Logic and Control Cabling and Wiring

7.4.1. J10 and J11 (Feedback ports, VL, RS232, USB, Analog Input)

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

7.4.2. J11 (Digital Inputs/Outputs, STO)

Wires can always be used, no need for twisting, no need for shielding.

7.4.3. J17, J18 EtherCAT or CAN Communication

Always use CAT5e cables (see Elmo's Gold Solo Twitter Cable Kit (MAN-G-SOLTWI-CBLKIT)).

7.4.4. COMRET to PE Connection

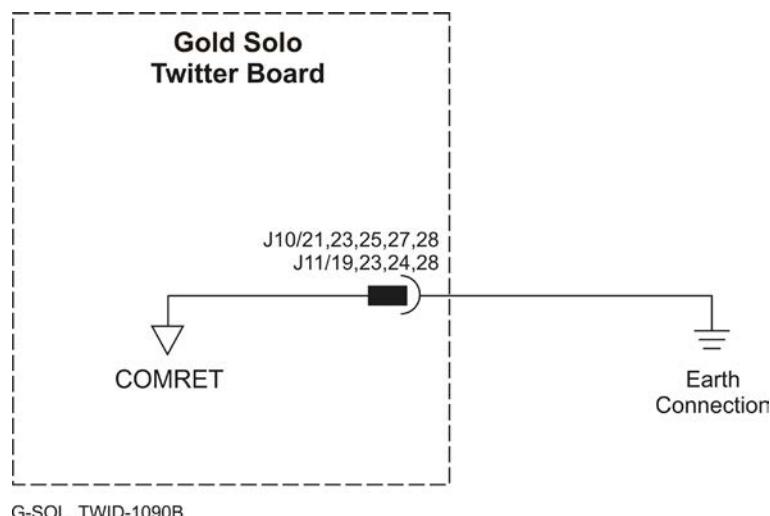


Figure 7: COMRET Connection to the PE

At least one COMRET pin (Figure 7) must be connected to the Protective Earth (PE).

Earthing the COMRET by connecting the Earth (PE) to the drive COMRET is mandatory to insure reliable operation, high noise immunity and rejection of voltage common mode interferences.



7.5. Wiring the Female Connectors

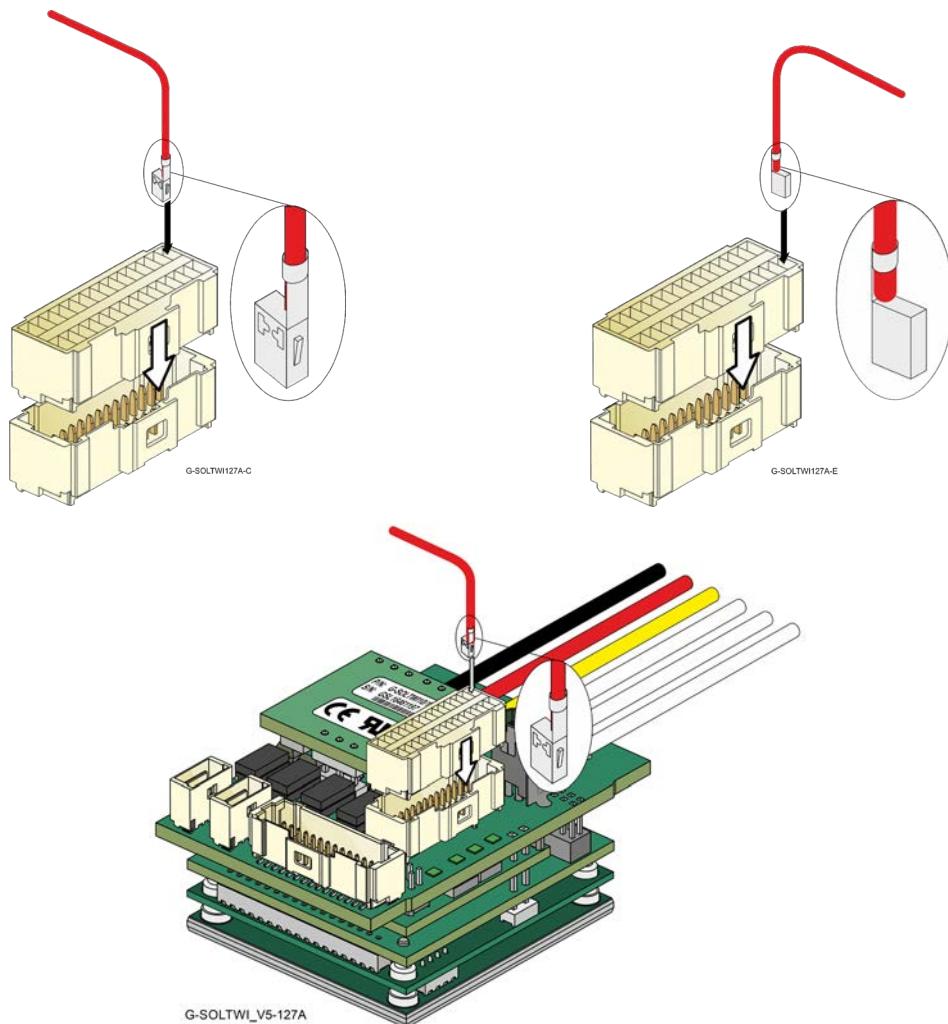


Figure 8: Inserting a wire/pin to the Female Connector

To insert a wire/pin to the female connectors of J10, J11, J17, and J18 do the following:

1. Select the relevantly colored wire to insert to a specific rectangular compartment on the female connector.
2. Use the appropriate Molex crimping plier (Molex P/N 63819-1500) to fasten a pin connector to the end of the wire.
3. Place the connector on a flat surface, in the orientation as shown in Figure 8. Notice that the rectangular slot has a niche at the bottom of the slot.
4. Insert the wire connector to the slot as shown in Figure 8. Make sure that the connector protrusion is inserted to the bottom of the rectangular slot.
When inserting the wire connector to a slot in the second row, make sure to rotate the connector in the opposite orientation.
5. Repeat the same procedure for any other wire connections.



Chapter 8: Connections

8.1. Main, Control, and Motor Power

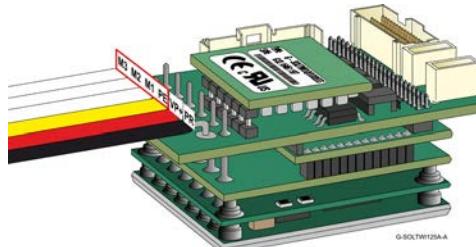
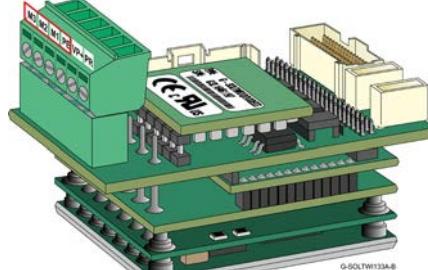
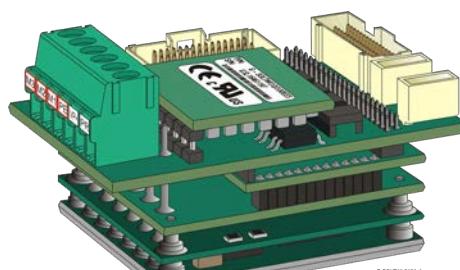
This section describes the Main and Control supplies, and Motor Power connections.

There are three optional Motor and Main Power interfaces:


- The current carrying capacity of the Solo board wires is up to 80A (57A RMS)
- Phoenix horizontal connector on models have an output current of 25A (17.7A RMS) or less
- Phoenix pluggable vertical connector on models have an output current of 10A (7.1A RMS) or less

8.1.1. Motor Power

For full details see Section 7.3 in the manual: **MAN-G-Board Level Modules Hardware manual**.

| Pin | Wire Color | Function | Cable | | Pin Positions |
|-----|------------|------------------|-----------------|------------------|--|
| | | | Brushless Motor | Brushed DC Motor | |
| PE | Yellow | Connection earth | Motor | Motor |  G-SOLTWI125A-A |
| M1 | White | Motor phase | Motor | N/C |  G-SOLTWI133A-B |
| M2 | White | Motor phase | Motor | Motor |  G-SOLTWI212A |
| M3 | White | Motor phase | Motor | Motor | |

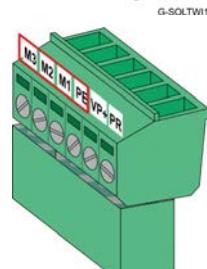
G-SOLTWI125A-C


G-SOLTWI133A-D

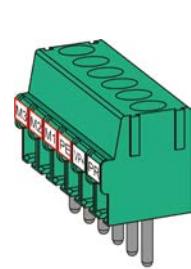

G-SOLTWI-209A-B

Table 5: Motor Wires or Connector

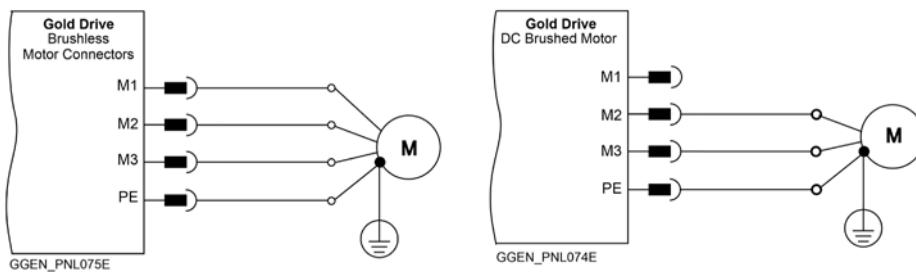


Figure 9: Brushless Motor Power and Brushed Motor Power Connection Diagrams

8.1.1.1. Motor Power Connections

1. Ensure that the motor chassis is properly earthed.
2. Connect the appropriate wire from the Motor Power cables to the M1, M2, M3, and PE terminals on the Gold Solo Twitter.

The phase connection is arbitrary as Elmo Application Studio (EAS II) will establish the proper commutation automatically during setup. When tuning a number of drives, you can copy the setup file to the other drives and thus avoid tuning each drive separately. In this case the motor-phase order must be the same as on the first drive.

3. For high EMI environment, it is highly recommended to use a 4-wire shielded (not twisted) cable for the motor connection. The gauge is determined by the actual RMS current consumption of the motor.

Connect the cable shield to the closest ground connection at the motor end.

For better EMI performance, the shield should be connected to Earth Connection (heat sink mounting holes).

4. Connect the motor power wires as shown in Figure 10. The Yellow wire is the Grounding wire.

Make sure not to bundle the wires.

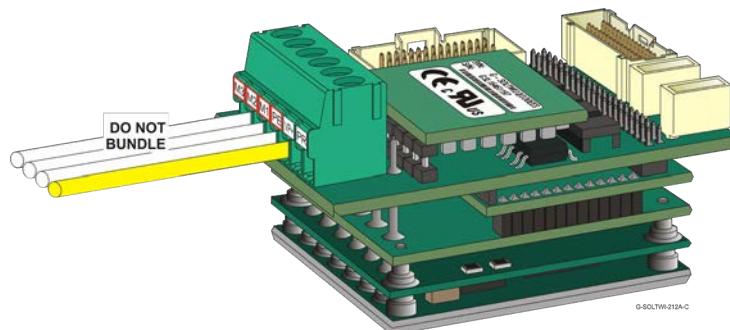


Figure 10: Connecting the Motor Power Wires

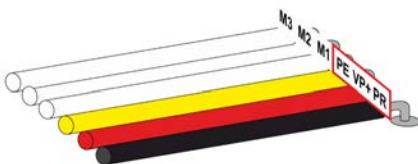
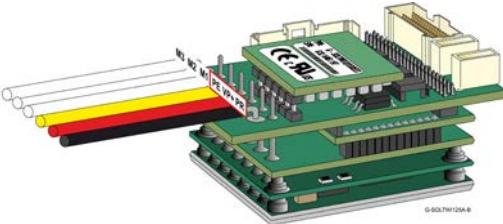
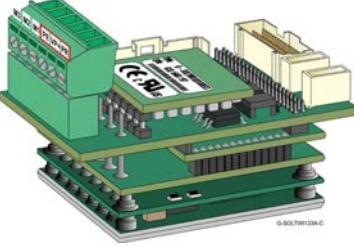


8.1.2. Main Power Wires & Connector


This section describes the Main Power and the Control supply connector.

8.1.2.1. Main Power

The isolated DC power source is not included with the Gold Solo Twitter.

| Pin | Wire Color | Function | Cable | Pin Positions |
|-----|------------|---------------------|-------|--|
| VP+ | Red | DC Pos. Power input | Power |  G-SOLTWI125A-D |
| PR | Black | Power return | Power |  G-SOLTWI125A-B |
| PE | Yellow | Connection earth | Power |  G-SOLTWI125A-C |

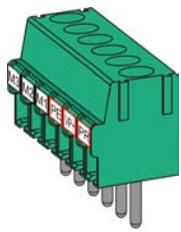
G-SOLTWI133A-E


G-SOLTWI-209A-C



G-SOLTWI215A-B

Table 6: Connector or Wires for Main Power

Connect the DC power cable to the VP+ and PR terminals on the main power connector.

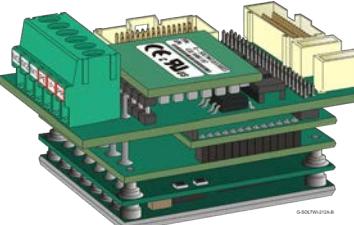To connect the Gold Solo Twitter to the DC power source:

1. The source of the VDC power supply must be isolated from the Mains.
2. Verify that the rectified VDC is indeed within the range of the drive.
3. Connect the VP+ and PR wires to the terminals on the servo-drive as shown in Figure 11.
It is highly recommended to twist the two DC main power cables at intervals of 10 cm.

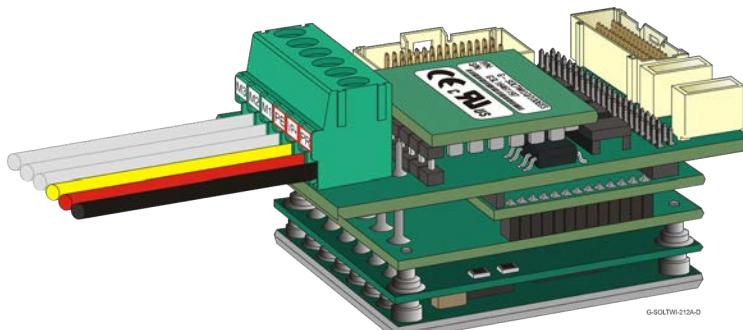


Figure 11: Connecting the Main Power Wires

4. Connect the PE to the closest earth connection near the power supply.



5. Connect the PR to the closest earth connection near the power supply.
6. Before applying power, first verify the polarity of the connection.

8.1.2.2. Wiring Technical Details

The six 14-AWG, silicon insulated, 300mm length colored high quality, power connection wires are rated to operate up to 200°C:

The Gold Solo Twitter wire connection conforms to UL standards for operation up to 105°C (on the wires). Under extensive load conditions the wires temperature gradient is ≈50 °C above ambient.



8.1.3. Control Supply (J10)

Connect the VL+ and VL- pins on the Gold Solo Twitter in the manner described in the table and drawing below.


| Pin | Signal | Function | Pin Positions |
|-----|--|--|---|
| 30 | VL+ | Control Supply Input | |
| 29 | VL- | Control Supply Return | |
| 1. | Standard CAN (Power Supply & Heatsink Option: (Blank)) | Input range: 12VDC – 40VDC Power consumption: <2.5W (including 5 V/200 mA for encoder) | |
| 2. | EtherCAT (E or M option) (Power Supply & Heatsink Option: (Blank)) | Input range: 14VDC – 40VDC Power consumption: <4W (including 5 V/200 mA for encoder) | |
| 3. | Standard CAN (Power Supply & Heatsink Option: S or H) | Input range: 11VDC – 95VDC Power consumption: <2.5W (including 5 V/200 mA for encoder) | |
| 4. | EtherCAT (E or M option) (Power Supply & Heatsink Option: S or H) | Input range: 11VDC – 95VDC Power consumption: <4W (including 5 V/200 mA for encoder) |  |

Table 7: Control Supply Pins

Connect the VL+ and VL- terminals to the power supply Control Connector.

To connect the VL+ and VL- to the control supply:

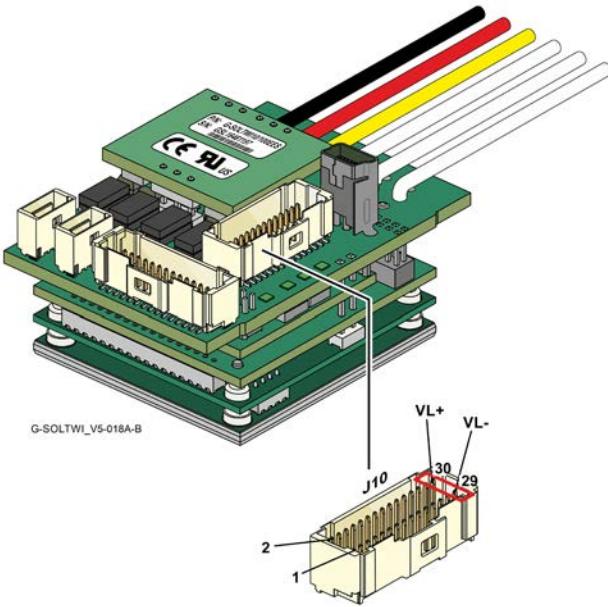1. The source of the control supply must be isolated from the Mains.
2. Connect the return (common) of the control supply source to the closest earth connection near the control supply source.



3. Connect the VL+ and VL- wires to the terminals on the servo-drive as shown in Figure 12.

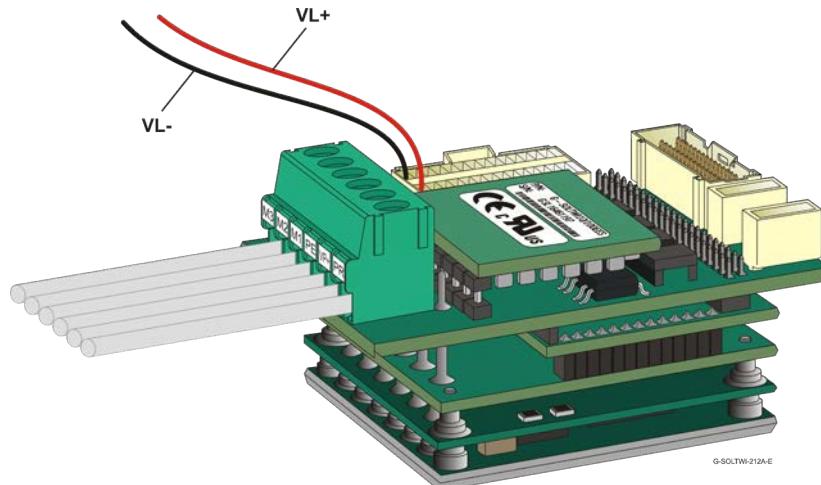


Figure 12: Connecting the Control Supply Wires

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

4. Before applying power, first verify the polarity of the connection.

Note: For VL 12VDC to 40VDC (Power Supply & Heatsink Option: **(Blank)**) refer to section 8.1.4.

For VL 11VDC to 95VDC (Power Supply & Heatsink Option: **S or H**) refer to section 8.1.5.

8.1.4. Control Supply Connections for Power Supply & Heatsink Option: **(Blank)**

Note: This section is for VL 12VDC to 40VDC.

For VL 11VDC to 95VDC (Power Supply & Heatsink Option: **S or H**) refer to section 8.1.5.

8.1.4.1. Dual Power Supply

Whenever the VP+ is >40VDC, a separate supply for the Logic is required. Both the Power and Logic supplies are required to be isolated-from-the-mains:

- A battery or main DC power source rectified from the Mains, according to specification
- A control supply for the logic (VL+, VL-)

The following figure describes an ordinary power supply for Servo drives with sufficient internal capacitance and shunt regulator to manage power flow in both directions to-and-from the motor.

Note: The PR, COMRET, and VL- are connected internally in the Gold Solo Twitter.

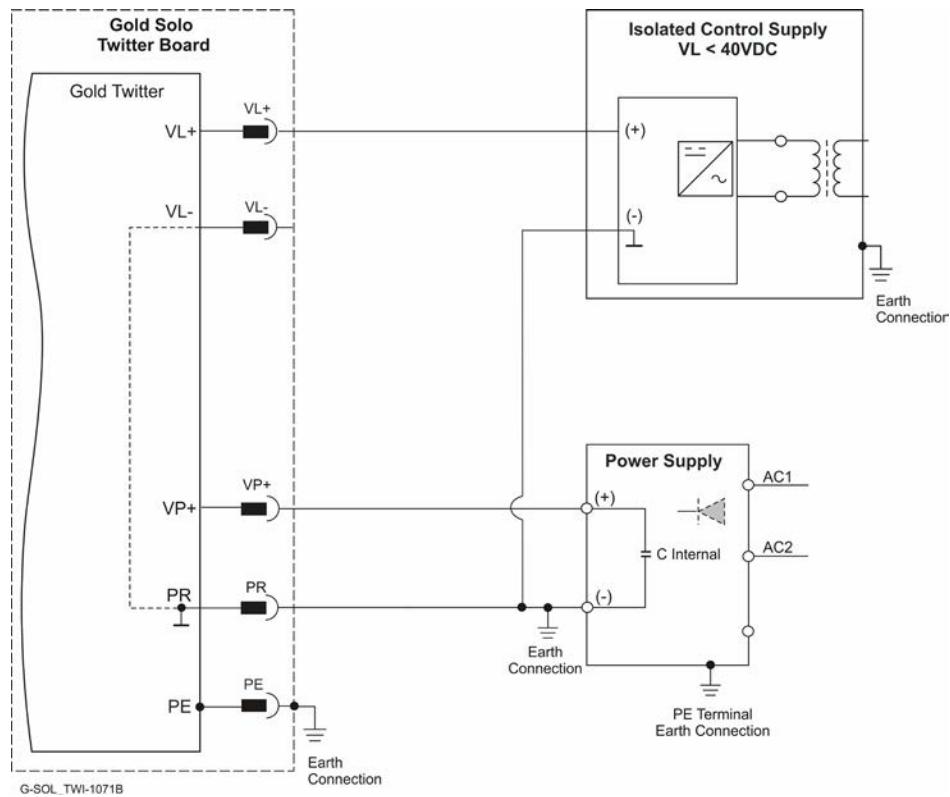


Figure 13: Separate VP and VL Power Supplies Connection Diagram –Highly Recommended

The (+) of the control power supply is connected to the VL+ terminal, while the (-) of the control power supply is connected directly to the (-) of the DC bus power supply. This connection avoids high current ground loops due to poor wiring (Figure 13).

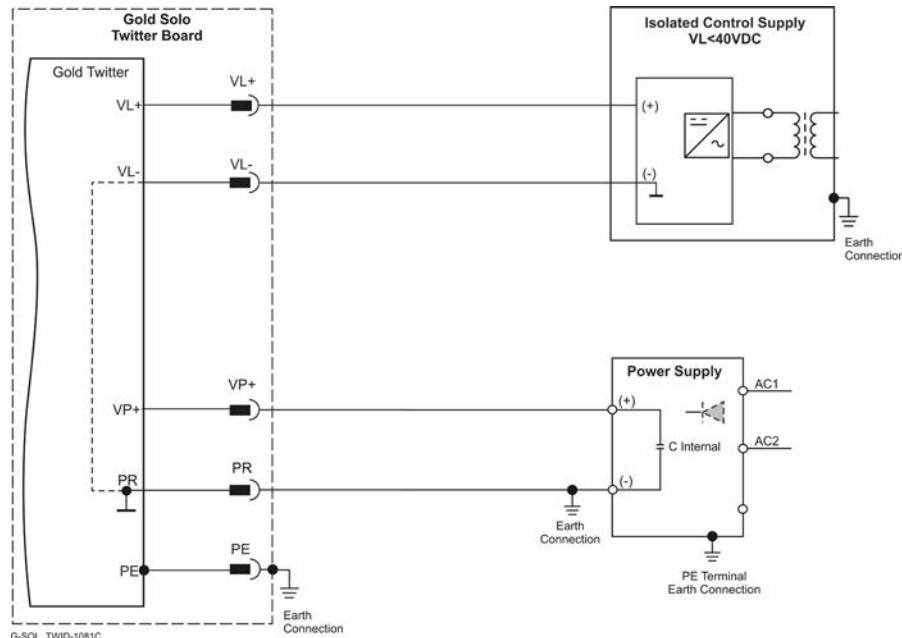


Figure 14: Separate VP and VL Power Supplies Connection Diagram - Alternative

The (-) of the control power supply is connected to the VL- of the Gold Solo Twitter (Figure 14).



8.1.4.2. Single Power Supply (VP+ < 40VDC)

Where a single power supply is used (VL+ connected to VP+), the absolute maximum VP+ and VL+ voltage must be < 40VDC, under all conditions, to prevent VL+ supply failure.

When regeneration or braking occurs, the DC bus may increase and may exceed the VL limit of over 40VDC, possibly causing the VL to fail. Under these conditions, you must install the Dual Power Supply described above in section 8.1.4.1.

Note: For the EtherCAT (E or M option), the minimum VL is 14 VDC.

For the CAN version power rating of 12VDC to 40VDC, or 14VDC to 40VDC for the EtherCAT version, a single power supply can be used for the main and control power.

The following figure describes a single connection of main power and control.

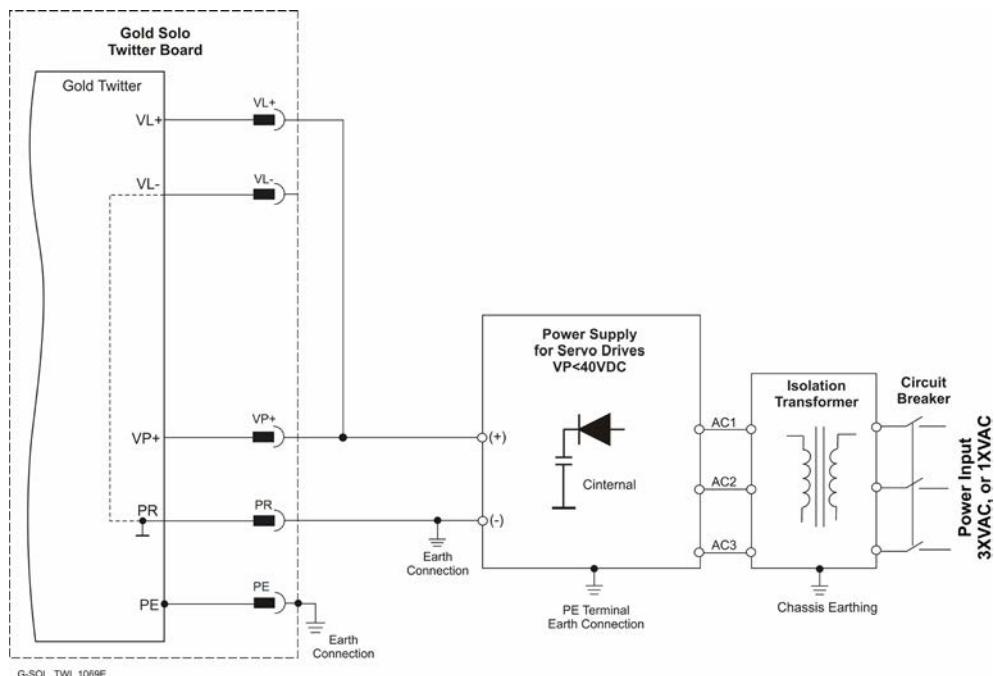


Figure 15: Single Power Supply (VP+ <40V) Connection Diagram

Note: This option is available for power supply up to 40VDC.



8.1.5. Control Supply Connections for Power Supply & Heatsink Option: S or H

Note:

This section is for VL 11VDC to 95VDC.

For VL 12VDC to 40VDC (Power Supply & Heatsink Option: (Blank)) refer to section 8.1.4.

8.1.5.1. Dual Power Supply

Whenever the VP+ is >95VDC, a separate supply for the Logic is required. Both the Power and Logic supplies are required to be isolated-from-the-mains:

- A battery or main DC power source rectified from the Mains, according to specification
- A control supply for the logic (VL+, VL-)

The following figure describes an ordinary power supply for Servo drives with sufficient internal capacitance and shunt regulator to manage power flow in both directions to-and-from the motor.

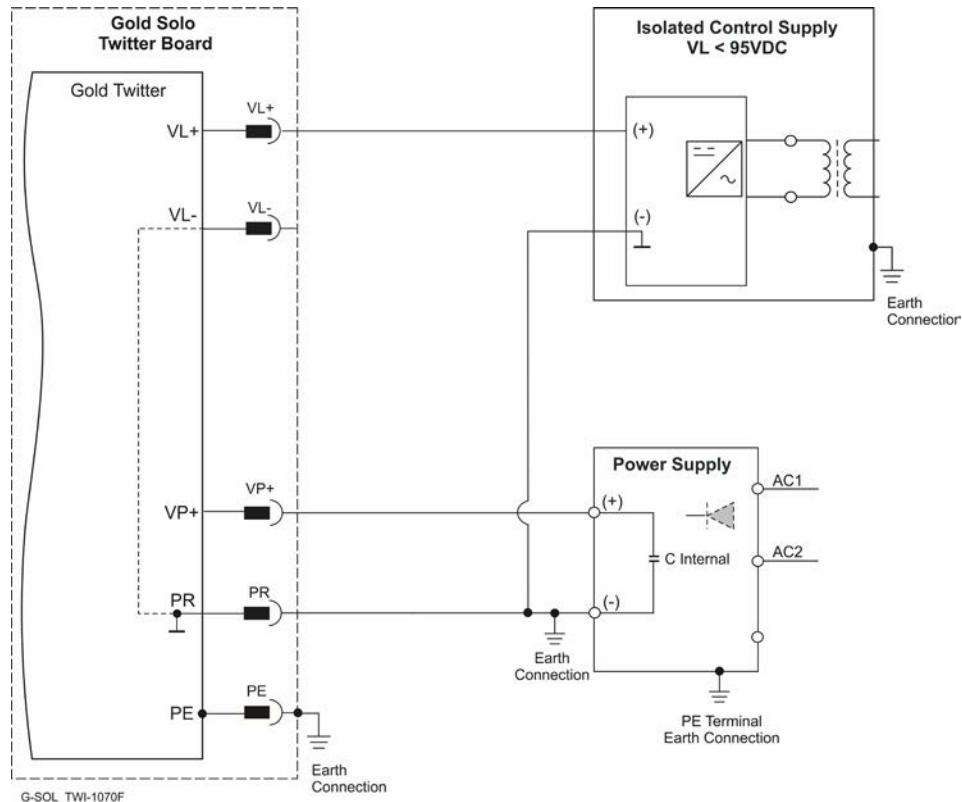
Note: The PR, COMRET, and VL- are connected internally in the Gold Solo Twitter.

Figure 16: Separate VP and VL Power Supplies Connection Diagram –Highly Recommended

The (+) of the control power supply is connected to the VL+ terminal, while the (-) of the control power supply is connected directly to the (-) of the DC bus power supply. This connection avoids high current ground loops due to poor wiring (Figure 16).

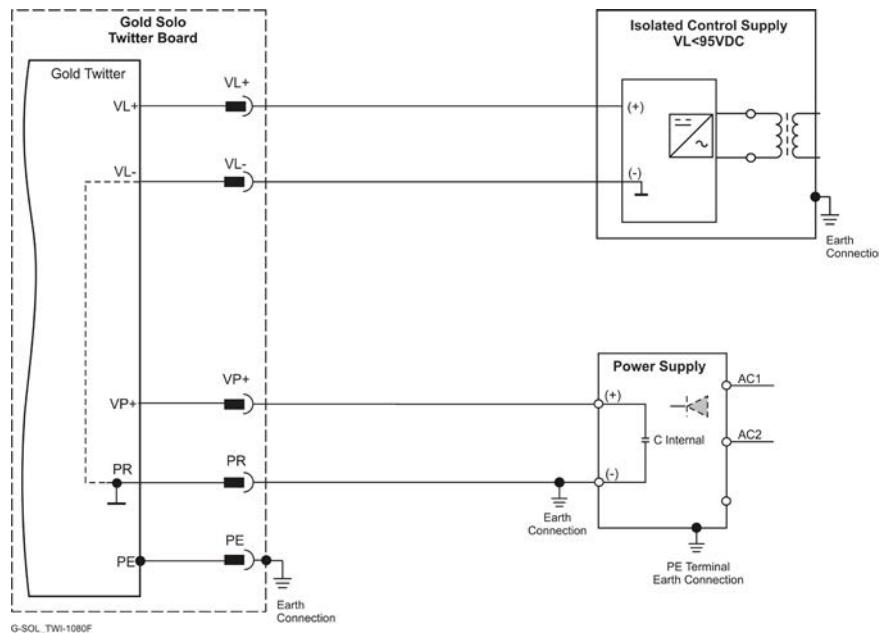


Figure 17: Separate VP and VL Power Supplies Connection Diagram - Alternative

The (-) of the control power supply is connected to the VL- of the Gold Solo Twitter (Figure 17).

8.1.5.2. Single Power Supply (VP+ < 95VDC)

Where a single power supply is used (VL+ connected to VP+), the absolute maximum VP+ and VL+ voltage must be < 95VDC, under all conditions, to prevent VL+ supply failure.

A single power supply can be used for the main and control power in the range of 11VDC to 95VDC.

The following figure describes a single connection of main power and control.

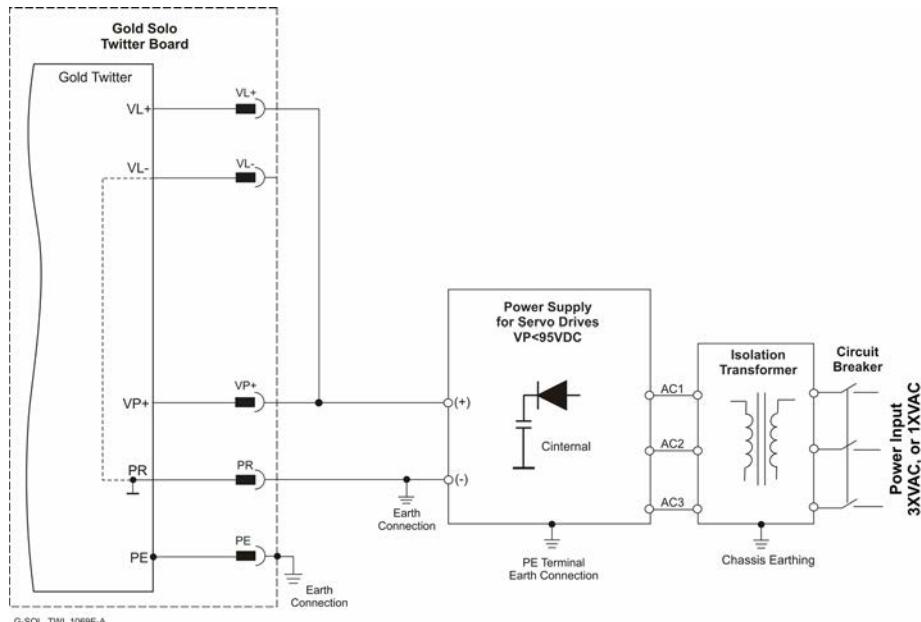


Figure 18: Single Power Supply (VP+ <95V) Connection Diagram

Note: This option is available for power supply up to 95VDC.



8.2. Drive Status Indicator

Figure 20 shows the position of the D1 red/green dual LED, which is used for immediate indication of the Initiation and Working states. For details refer to Chapter 7 Drive Status Indicator, in the MAN-G-Panel Mounted Drives Hardware manual.

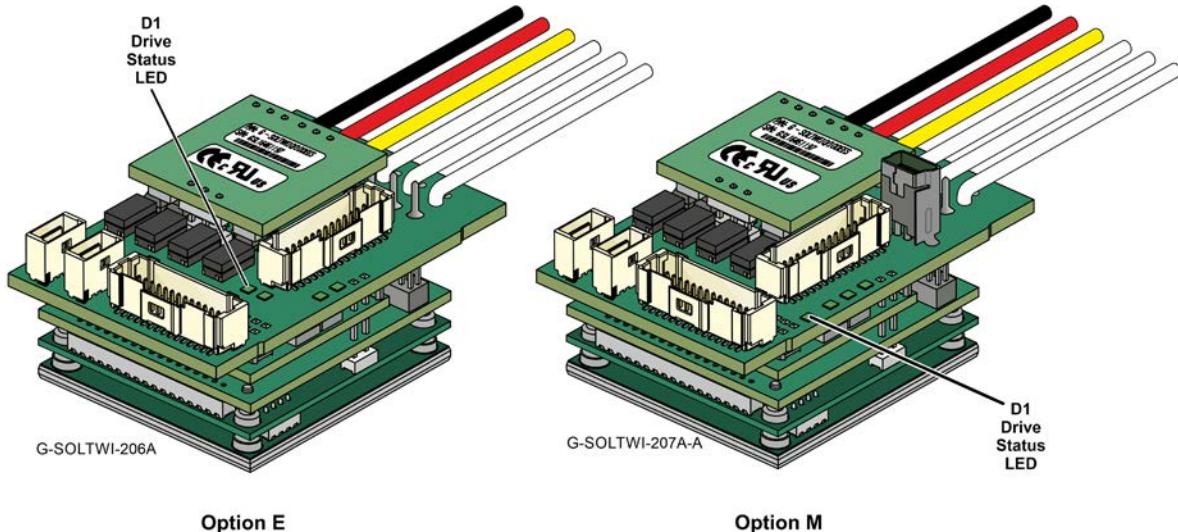


Figure 19:Drive Status Indicator – EtherCAT (options E and M)

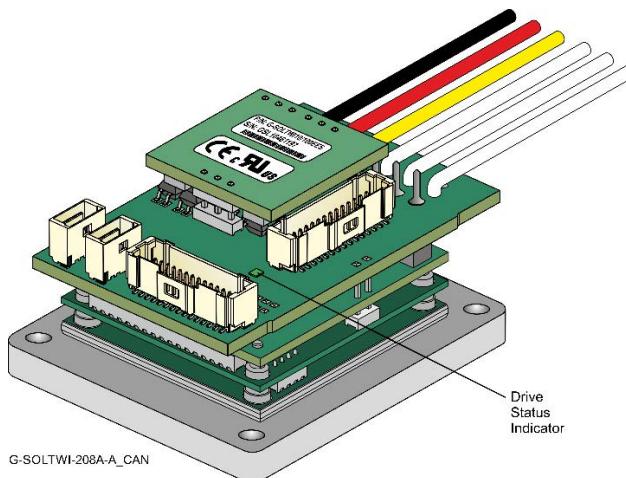



Figure 20: Drive Status Indicator - CAN (Option S) (with heat sink)

The red/green dual LED is used for immediate indication of the following states:

- **Initiation state:** In this state the LED indicates whether the drive is in the boot state (blinking red) or in the operational state (steady red).
- **Working state:** In this state the LED indicates whether the drive is in an amplifier failure state (red) or is ready to enable the motor (green).



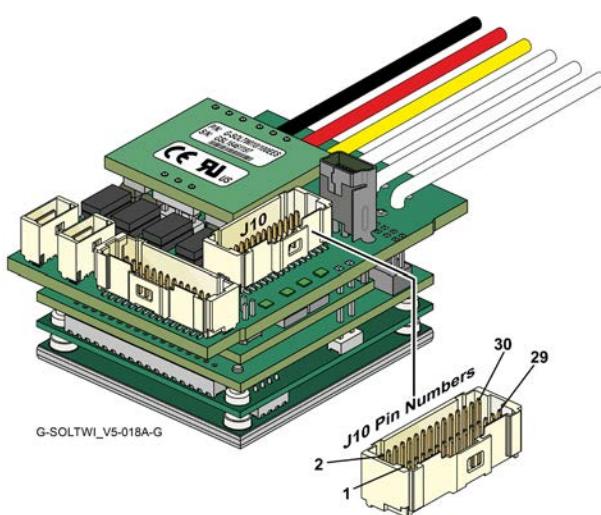8.3. J10 VL and Feedback Connector



Feedback A/B/C, Digital Halls
– see Section 9.2 in the
manual: **MAN-G-Board Level
Modules Hardware Manual.**

J10 VL & Feedback Connector

The following table describes the J10 VL and Feedback connections to the 2 x 15 pins female connector.

| Pin J10 | Signal | Function |
|---------|--------------------------|--|
| 1 | PortA_ENC_A+ / ABS_CLK+ | Channel A+ / Abs encoder clock + |
| 2 | PortB_ENC_A- | Port B Channel A- |
| 3 | PortA_ENC_A- / ABS_CLK- | Channel A- / Abs encoder clock - |
| 4 | PortB_ENC_A+ | Port B Channel A+ |
| 5 | PortA_ENC_B+ / ABS_DATA+ | Channel B+ / Abs encoder data + |
| 6 | PortB_ENC_B- | Port B Channel B- |
| 7 | PortA_ENC_B- / ABS_DATA- | Channel B- / Abs encoder data - |
| 8 | PortB_ENC_B+ | Port B Channel B+ |
| 9 | PortA_ENC_INDEX+ | Index+ |
| 10 | PortB_ENC_INDEX- | Port B Index- |
| 11 | PortA_ENC_INDEX- | Index- |
| 12 | PortB_ENC_INDEX+ | Port B Index+ |
| 13 | HA | Hall sensor A |
| 14 | PortC_ENCO_A- | Buffered Channel A- output / Pulse- / PWM- |
| 15 | HB | Hall sensor B |
| 16 | PortC_ENCO_A+ | Buffered Channel A+ output/Pulse+/PWM+ |



| Pin J10 | Signal | Function |
|---------|-------------------|---|
| 17 | HC | Hall sensor C |
| 18 | PortC_ENCO_B- | Buffered Channel B- output / Dir- |
| 19 | +5V | Encoder +5V supply with a total allowable maximum consumption of 200mA using Pins 19 or 26. |
| 20 | PortC_ENCO_B+ | Buffered Channel B+ output / Dir+ |
| 21 | COMRET | Common return |
| 22 | PortC_ENCO_Index- | Buffered Channel INDEX- output |
| 23 | COMRET | Common return |
| 24 | PortC_ENCO_Index+ | Buffered Channel INDEX+ output |
| 25 | COMRET | Common return |
| 26 | +5V | Encoder +5V supply with a total allowable maximum consumption of 200mA using Pins 19 or 26. |
| 27 | COMRET | Common return |
| 28 | COMRET | Common return |
| 29 | VL- | Control 24V supply return |
| 30 | VL+ | Control 24V supply |

Table 8: Connector J10 – VL & Feedback

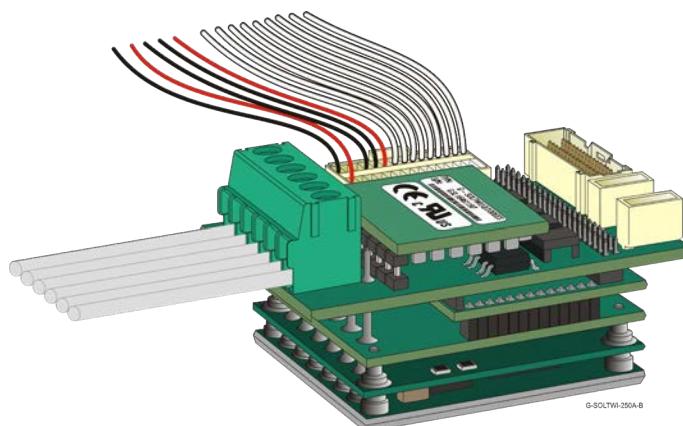


Figure 21: Connecting the Feedback Wires

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.1. Port A

Refer to section 10.3 in the MAN-G-Board Level Modules Hardware Manual for further details of the Port A connections.

8.3.1.1. Incremental Encoder

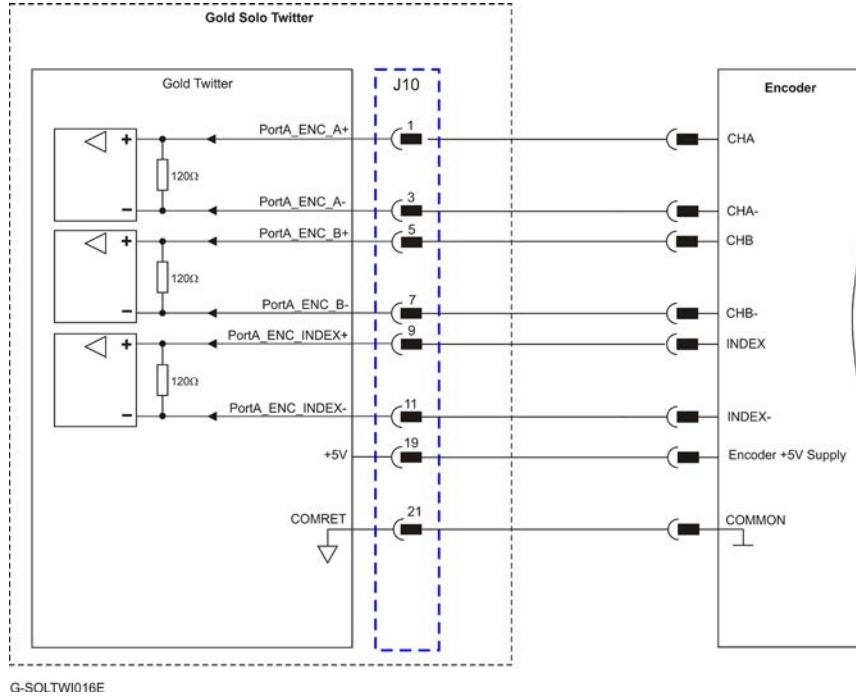


Figure 22: Port A Incremental Encoder Input – Recommended Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.1.2. Absolute Serial Encoder

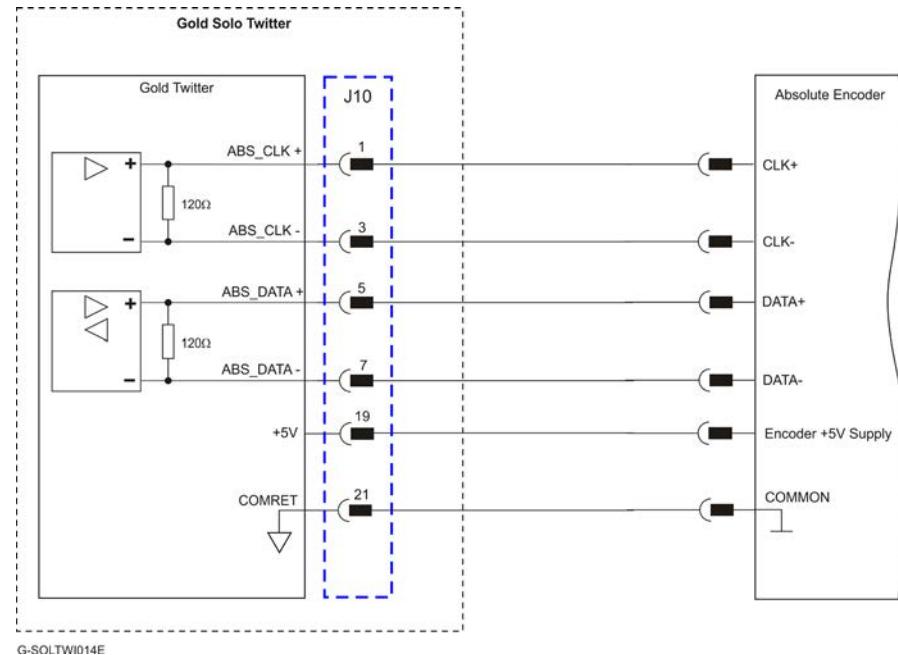


Figure 23: Absolute Serial Encoder – Recommended Connection Diagram for Sensors Supporting Data/Clock (e.g., Biss / SSI / EnDAT, etc.)

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

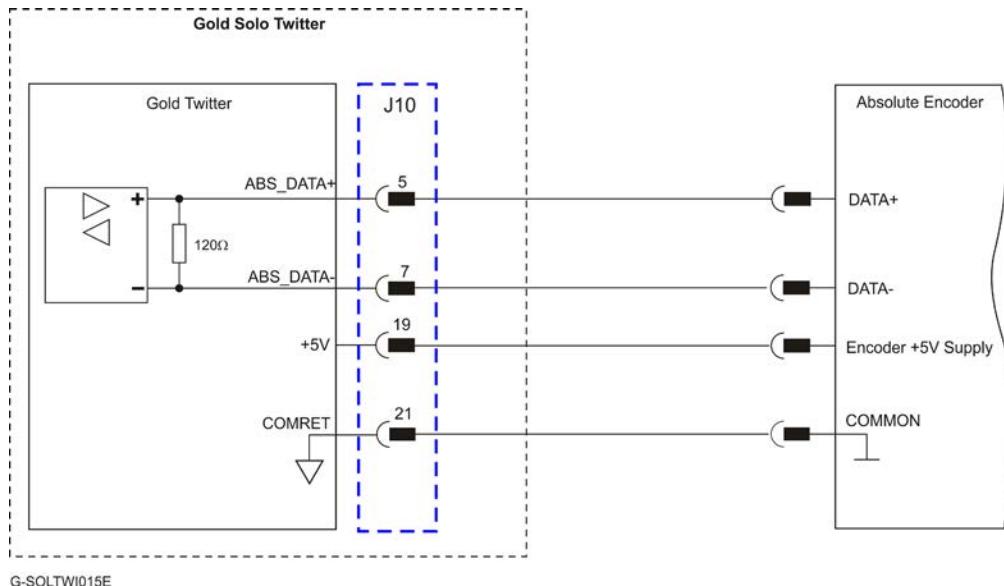


Figure 24: Absolute Serial Encoder – Recommended Connection Diagram for Sensors Supporting Data Line Only (NRZ types, e.g., Panasonic / Mitutoyo / etc.)

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.1.3. Hall Sensors

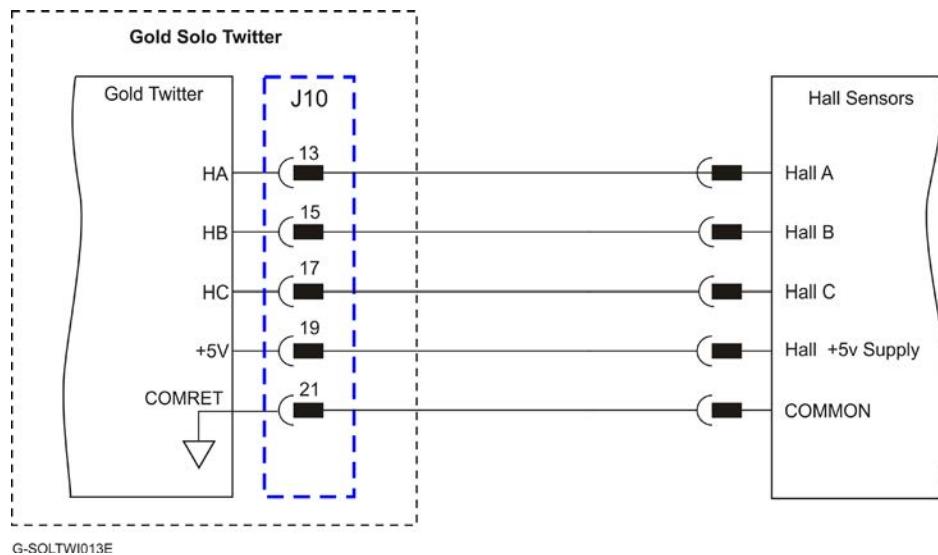


Figure 25: Hall Sensors Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.2. Port B

Refer to section 10.4 in the MAN-G-Board Level Modules Hardware Manual for further details of the Port B connections.

8.3.2.1. Incremental Encoder

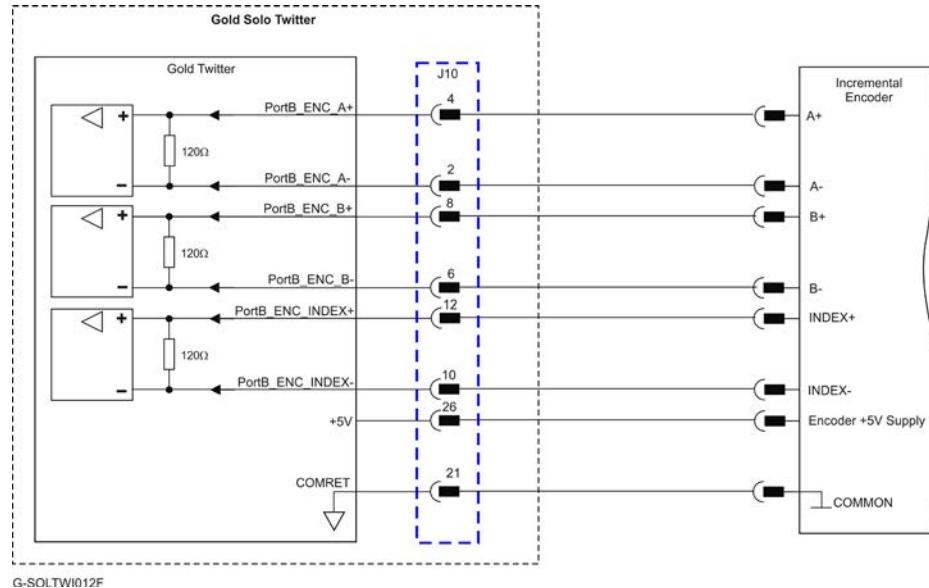


Figure 26: Port B Incremental Encoder Input – Recommended Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

8.3.2.2. Interpolated Analog Encoder

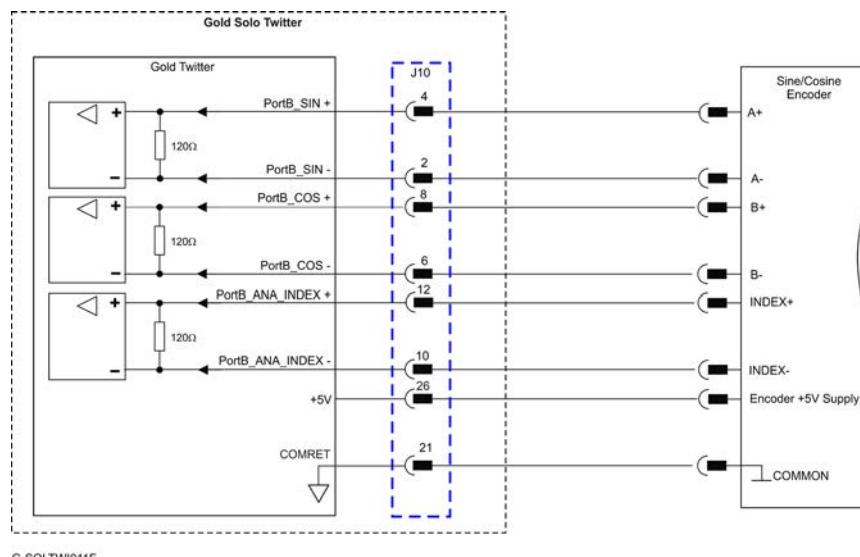


Figure 27: Port B - Interpolated Analog Encoder Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.2.3. Resolver

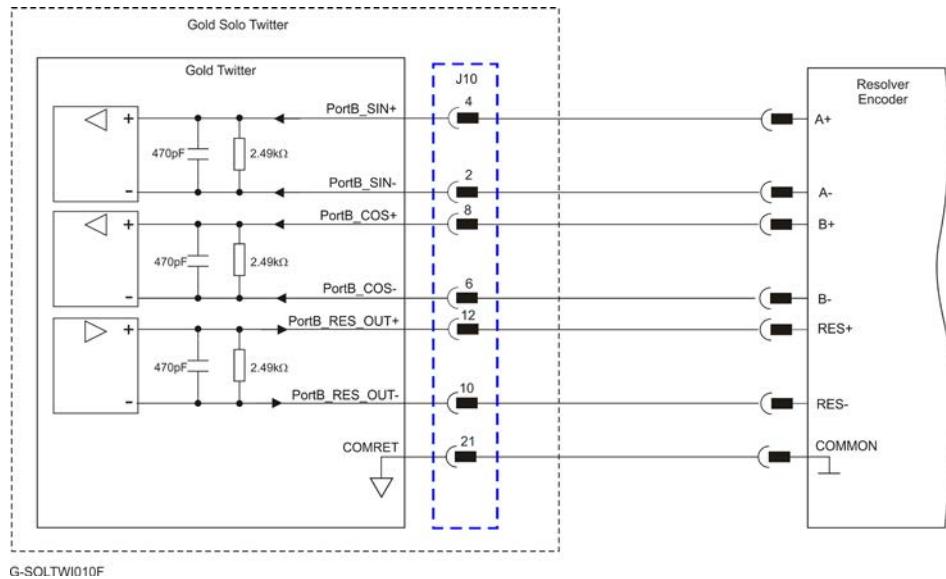


Figure 28: Port B – Resolver Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.3.3. Port C – Emulated Encoder Output (J10)

See Section 10.5 in the manual: **MAN-G-Board Level Modules Hardware Manual** for further details of Port C.


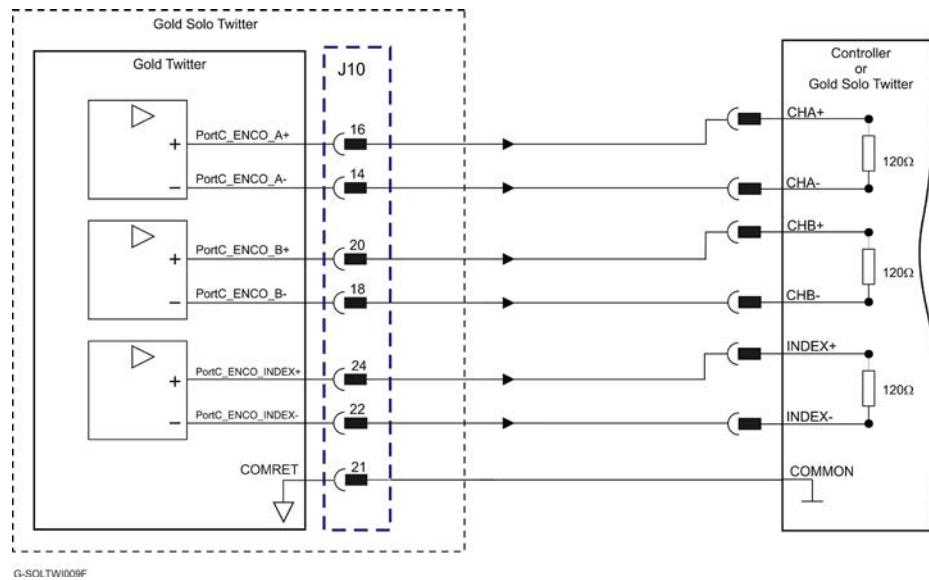


Figure 29: Emulated Encoder Differential Output – Recommended Connection Diagram

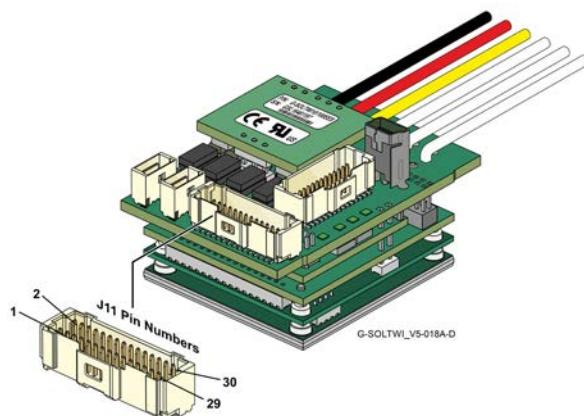For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.4. J11 I/O and Communication Connector



STO (safety): For full details on STO, see Chapter 9 in the in the MAN-G-Board Level Modules Hardware manual for full details.

J11 I/O and Communication Connector

| Pin J11 | Signal | Function |
|---------|--------|---|
| 1 | IN1 | High speed programmable digital input 1 (opto isolated from control COMRET) |
| 2 | IN2 | High speed programmable digital input 2 (opto isolated from control COMRET) |
| 3 | IN3 | High speed programmable digital input 3 (opto isolated from control COMRET) |
| 4 | IN4 | High speed programmable digital input 4 (opto isolated from control COMRET) |
| 5 | IN5 | High speed programmable digital input 5 (opto isolated from control COMRET) |
| 6 | IN6 | High speed programmable digital input 6 (opto isolated from control COMRET) |
| 7 | INRET | D _{in} return |
| 8 | INRET | D _{in} return |
| 9 | OUT1 | Programmable output 1 (opto isolated from control COMRET) |
| 10 | OUT2 | Programmable output 2 (opto isolated from control COMRET) |
| 11 | OUT3 | Programmable output 3 (opto isolated from control COMRET) |
| 12 | OUT4 | Programmable output 4 (opto isolated from control COMRET) |
| 13 | OUTRET | D _{out} return |
| 14 | OUTRET | D _{out} return |
| 15 | STO1 | STO 1 input opto isolated from control COMRET |
| 16 | STO2 | STO 2 input opto isolated from control COMRET |



| Pin J11 | Signal | Function |
|---------|------------|---|
| 17 | STO_RET | STO signal return. The two digital STO inputs are optically isolated from the other parts of the drive, and share one return line. |
| 18 | STO_RET | STO signal return. The two digital STO inputs are optically isolated from the other parts of the drive, and share one return line. |
| 19 | COMRET | Common return |
| 20 | ANALOG_IN2 | Analog input 2 |
| 21 | ANALOG1+ | Analog input 1 |
| 22 | ANALOG1- | Analog input 1 complement |
| 23 | COMRET | Common return |
| 24 | COMRET | Common return |
| 25 | RS-232_TX | RS-232 Transmit |
| 26 | RS-232_RX | RS-232 Receive |
| 27 | USB_VBUS | USB VBUS detector (Only for EtherCAT version) |
| 28 | COMRET | Common return |
| 29 | USB D+ | USB _P line (Only for EtherCAT version) |
| 30 | USB D- | USB _N line (Only for EtherCAT version) |

Table 9: I/O, STO, Analog, RS-232, and USB Connector

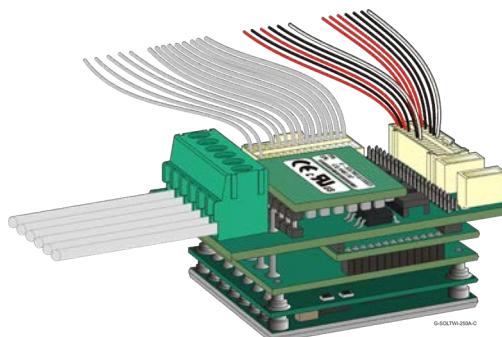


Figure 30: Connecting the USB, RS232, and Analog Input Wires

For USB, RS232, and Analog Input Wires

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

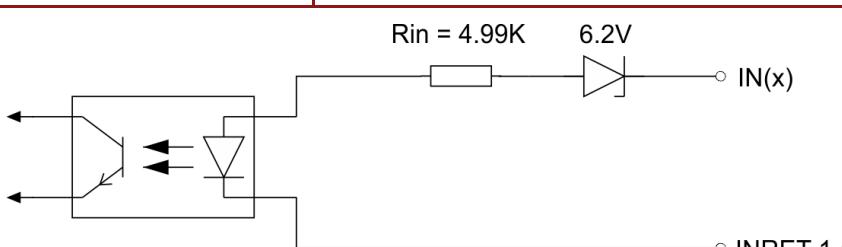
For Digital Inputs/Outputs, STO

Wires can be always used, no need for twisting, no need for shielding.



8.4.1. Digital Inputs

8.4.1.1. Source PLC Voltage Level Digital Input

| Feature | Details |
|---|---|
| Standard | Isolated PLC source Conforming to IEC 61131-2 |
| Input current | $I_{in} = (V_{in}-7.4)/4.99\text{ Kohm}$ $I_{in} = 920\text{ uA} @ V_{in} = 12\text{ V}$ $I_{in} = 4.5\text{ mA} @ V_{in} = 30\text{ V}$ |
| High-level input voltage | $12\text{ V} < V_{in} < 30\text{ V}$ |
| Low-level input voltage | $0\text{ V} < V_{in} < 7\text{ V}$ |
| Minimum pulse width | >250 μsec |
| Execution time (all inputs): the time from application of voltage on input until execution is complete | $0 < T < 250\text{ }\mu\text{sec}$ |
| High-speed inputs – 1–6 minimum pulse width, in high-speed mode | $T > 5\text{ }\mu\text{sec}$ if the input functionality is set to latch/capture (index/strobe). Notes: <ul style="list-style-type: none">• Home mode is high-speed mode and can be used for fast capture and precise homing.• Highest speed is achieved when turning on optocouplers. |
| Capture with differential input Port A, Port B Index | $T > 0.1\text{ }\mu\text{sec}$ if the differential input functionality is set to touch probe/capture (index/strobe). |
|  <p>G-SOLTWI-150B</p> | |
| Figure 31: Digital Input PLC Source Schematic | |
| NOTE: | In the default state, when there is no current in the optocoupler diode of GOLD SOLTWI OPTO, the digital input is "1". It is possible to change the default state by the IL[] command. |



The following are the connection diagram of Digital inputs:

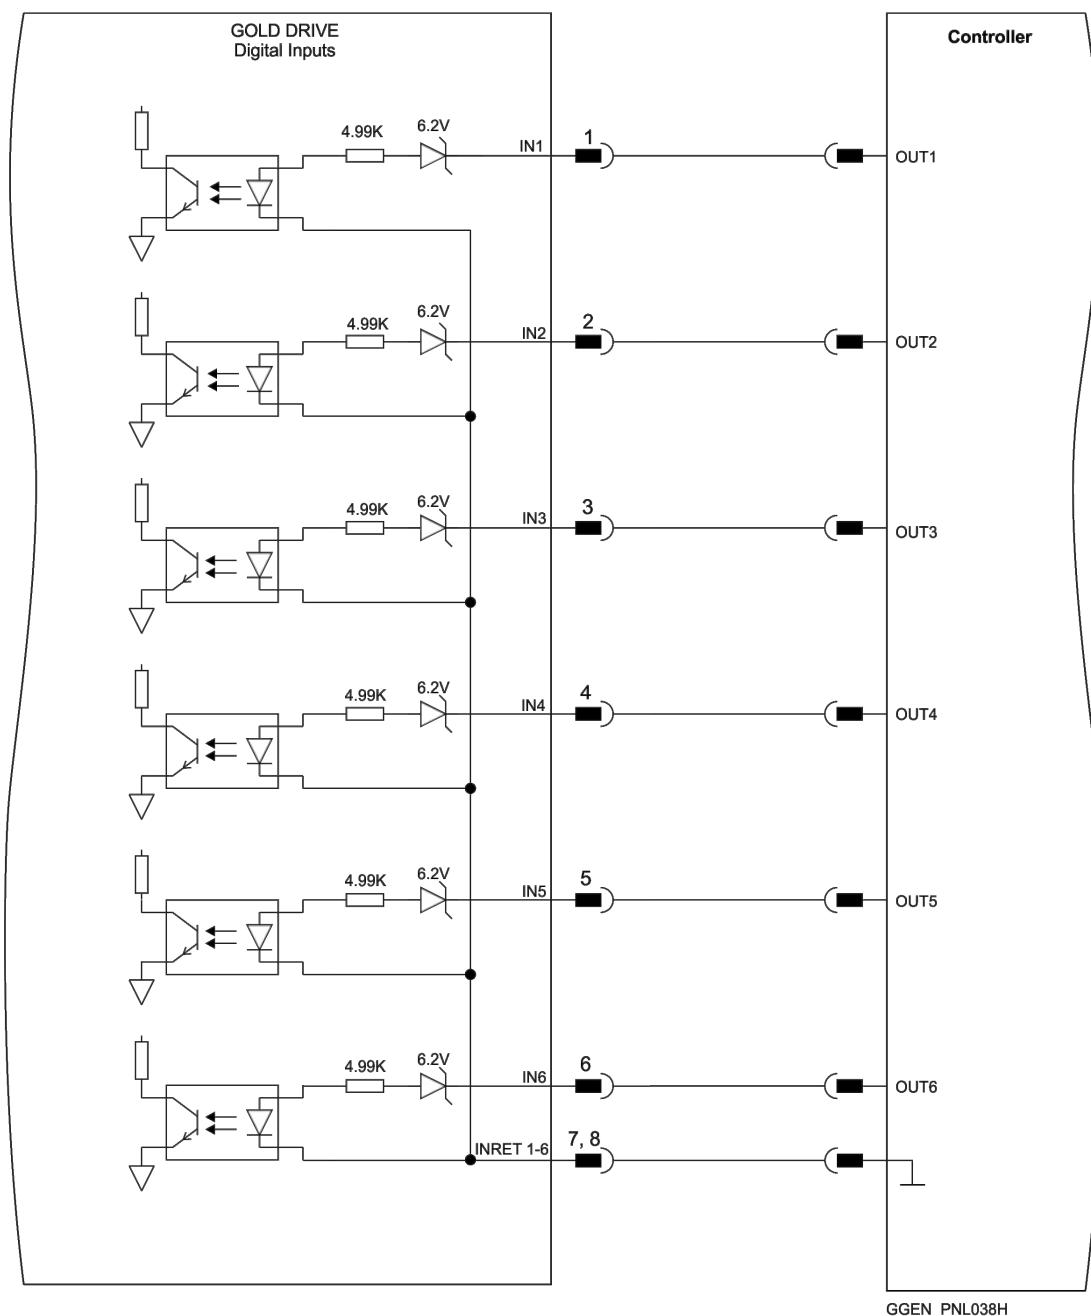


Figure 32: Digital Input Connection Diagram Example – Source PLC Option



8.4.1.2. Sink PLC Voltage Level Digital Input

| Feature | Details |
|---|--|
| Type of input | Isolated PLC Sink |
| Input current | $I_{in} = (V_{in} - 7.4) / 4.99\text{Kohm}$ $I_{in} = 920 \mu\text{A} @ V_{in} = 12 \text{ V}$ $I_{in} = 4.5 \text{ mA} @ V_{in} = 30 \text{ V}$ |
| High-level input voltage | $12 \text{ V} < V_{in} < 30 \text{ V}$ |
| Low-level input voltage | $0 \text{ V} < V_{in} < 7 \text{ V}$ |
| Minimum pulse width | $>250 \mu\text{sec}$ |
| Execution time (all inputs): the time from application of voltage on input until execution is complete | $0 < T < 250 \mu\text{sec}$ |
| High-speed inputs – 1–6 minimum pulse width, in high-speed mode | $T > 5 \mu\text{sec}$ if the input functionality is set to latch/capture (index/strobe). Notes: <ul style="list-style-type: none">• Home mode is high-speed mode and can be used for fast capture and precise homing.• Highest speed is achieved when turning on optocouplers. |
| Capture with differential input Port A, Port B Index | $T > 0.1 \mu\text{sec}$ if the differential input functionality is set to touch probe/capture (index/strobe). |
| | |
| Figure 33: Digital Input Sink PLC Schematic | |
| NOTE: | In the default state, when there is no current in the optocoupler diode of GOLD SOLTWI OPTO, the digital input is "1". It is possible to change the default state by the IL[] command. |

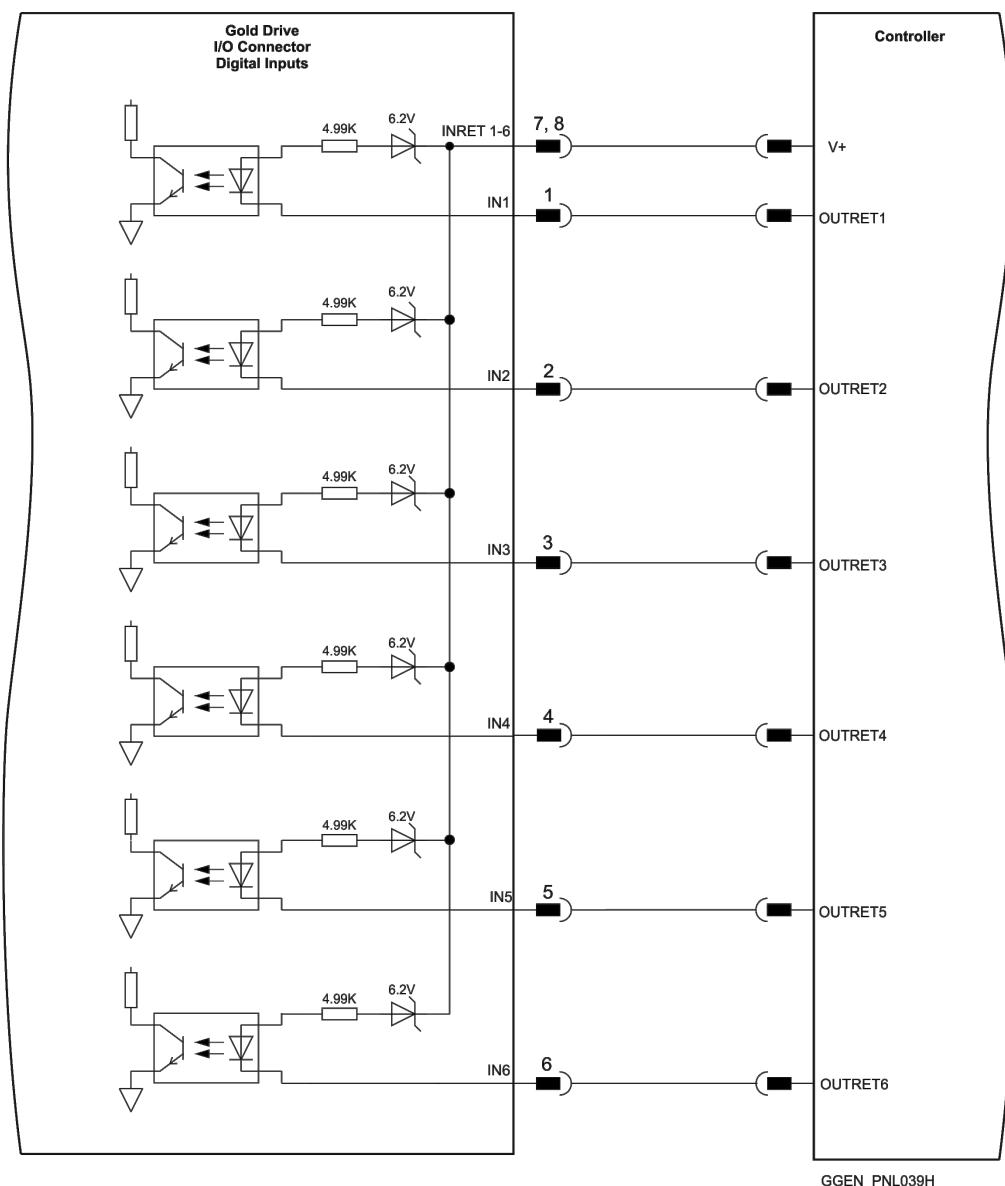


Figure 34: Digital Input Sink Mode Example – PLC voltage level Connection Diagram



8.4.1.3. Source 5V Logic Level Digital Input

| Feature | Details |
|--|--|
| Type of input | Optically isolated |
| Input current for all inputs | $I_{in} = 3.8 \text{ mA} @ V_{in} = 5 \text{ V}$ |
| High-level input voltage | $3.0 \text{ V} < V_{in} < 10 \text{ V}$, 5 V typical |
| Low-level input voltage | $0 \text{ V} < V_{in} < 0.8 \text{ V}$ |
| Minimum pulse width | $> 250 \mu\text{sec}$ |
| Execution time (all inputs): the time from application of voltage on input until execution is complete | $0 < T < 250 \mu\text{sec}$ |
| High-speed inputs – 1–6 minimum pulse width, in high-speed mode | <p>$T > 5 \mu\text{sec}$ if the input functionality is set to latch/capture (index/strobe).</p> <p>Notes:</p> <p>Home mode is high-speed mode and can be used for fast capture and precise homing.</p> <p>Highest speed is achieved when turning on optocouplers.</p> |
| <p>The schematic diagram shows a digital input circuit. On the left, there is a G-SOLTWI160A integrated circuit. One pin of the IC is connected to ground through a diode. Another pin is connected to a logic inverter (represented by a triangle symbol). The output of the inverter is connected to one terminal of a photo-diode (represented by a rectangle with a diagonal line). The other terminal of the photo-diode is connected to ground. A 1K resistor is connected between the other terminal of the photo-diode and the IN (x) input terminal. The IN (x) input terminal is also connected to ground through a diode. The INRET 1-6 terminal is connected to ground through another diode. The INRET 1-6 terminal is also connected to the IN (x) input terminal through a diode.</p> | |
| <p>NOTE: In the default state, when there is no current in the optocoupler diode of GOLD SOLTWI OPTO, the digital input is "1". It is possible to change the default state by the IL[] command</p> | |

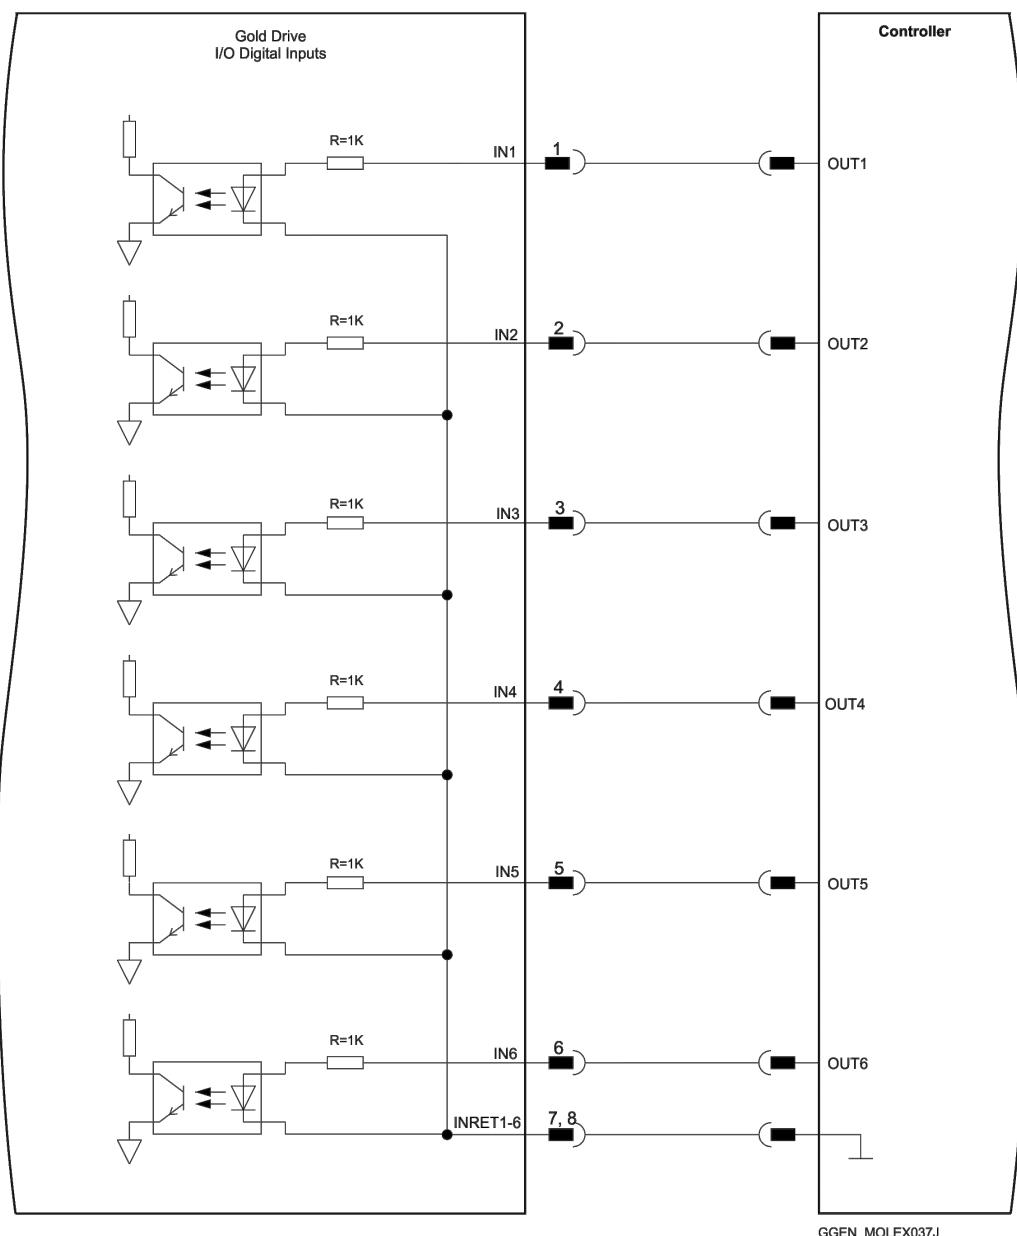



Figure 36: Digital Input Source 5V Logic Mode Connection Diagram



8.4.2. Digital Outputs

8.4.2.1. Source PLC Voltage Level Digital Output

| Feature | Details |
|--|--|
| Type of output | Optically isolated PLC source |
| Supply output (VDD) | 12V to 30V (typically 24V) |
| Max. output current I_{out} (max) ($V_{out} = \text{High}$) | I_{out} (max) $\leq 30 \text{ mA}$ |
| Collector Emitter saturation voltage | 1V |
| T_{on} (Time from low to high) If $V_{dd} = 24\text{V}$ | < 15usec |
| T_{off} (Time from high to Low) | < 250usec |
| R_L | The external R_L must be selected to limit output current to no more than 30 mA. $R_L = \frac{VDD - 1}{I_{out} (\text{max})}$ |
| Executable time | $0 < T < 250 \mu\text{sec}$ |

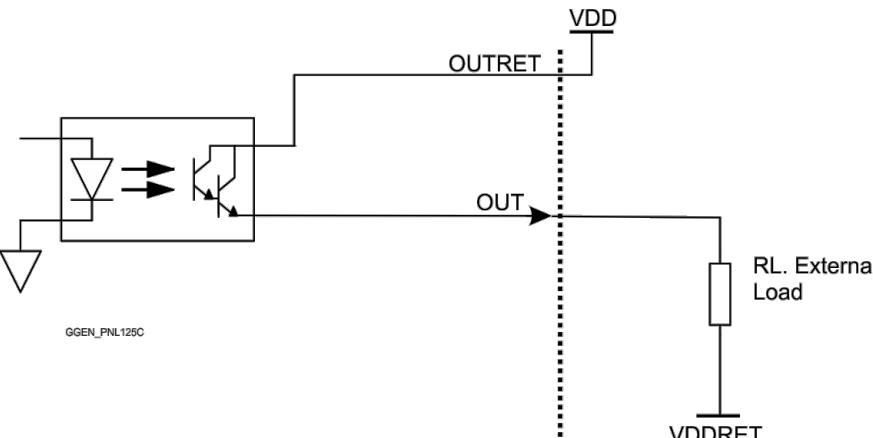

GGEN_PNL125C

Figure 37: Digital Photodarlington Output Schematic – Source Mode PLC Level

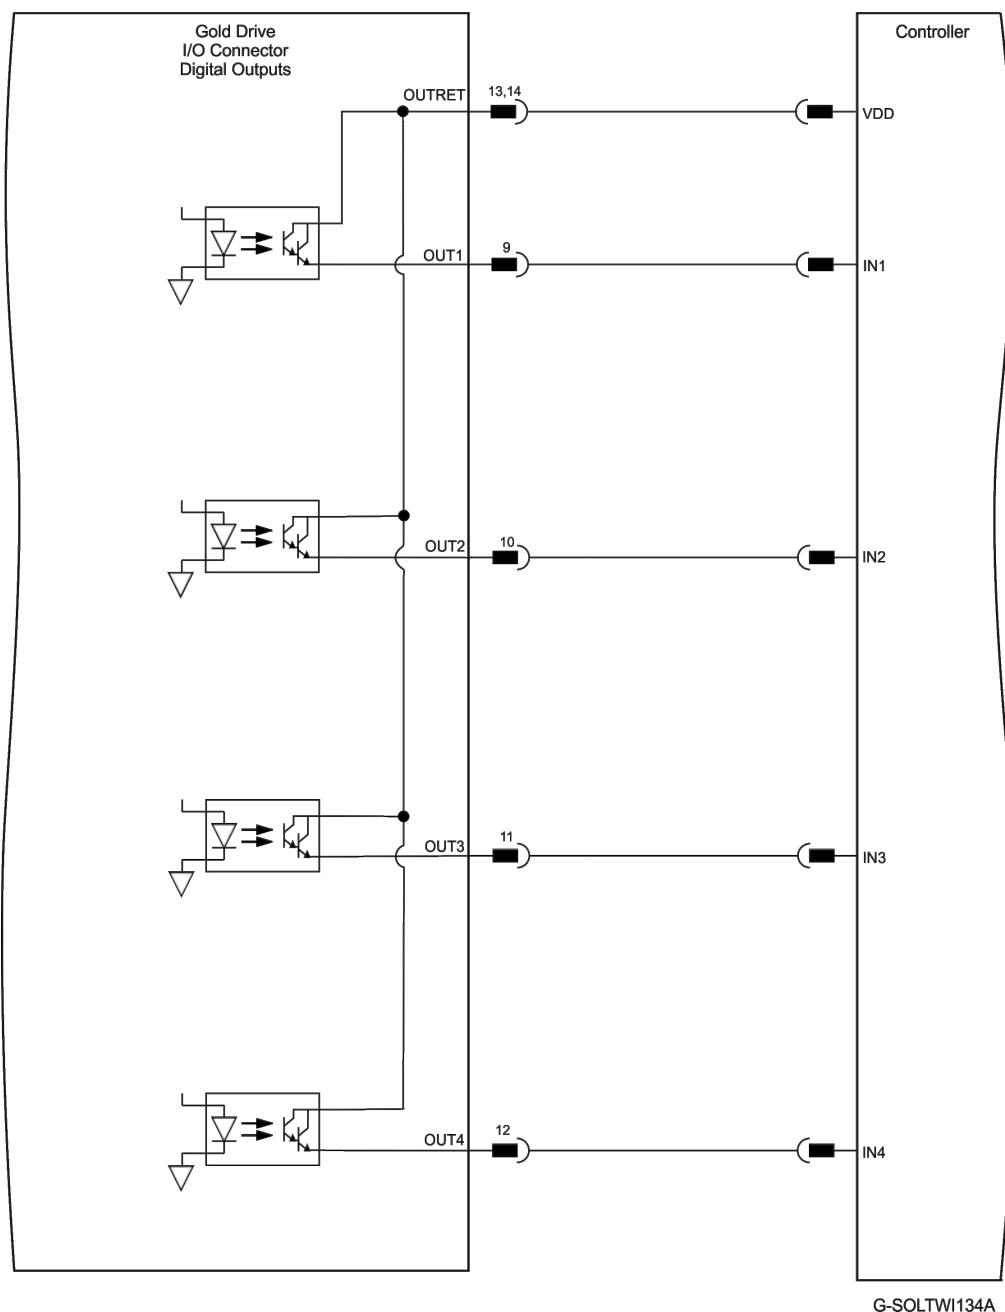


Figure 38: Digital Output Connection Diagram Example – Source PLC Option



8.4.2.2. Sink PLC Voltage Level Digital Output

| Feature | Details |
|---|--|
| Type of output | Optically isolated PLC Sink |
| Supply output (VDD) | 12V to 30V (Typically 24V) |
| Max. output current I_{out} (max) ($V_{out} = \text{Low}$) | $I_{out} (\text{max}) \leq 30 \text{ mA}$ |
| Collector Emitter saturation voltage | 1V |
| T_{on} (Time from low to high) If $V_{dd} = 24V$ | < 15usec |
| T_{off} (Time from high to Low) | < 300usec |
| R_L | The external R_L must be selected to limit output current to no more than 30 mA. $R_L = \frac{VDD - 1}{I_{out} (\text{max})}$ |
| Executable time | $0 < T < 250 \mu\text{sec}$ |

$R_L = \frac{VDD - 1}{I_{out} (\text{max})}$

Figure 39: Digital Photodarlington Output Schematic for Sink – PLC level

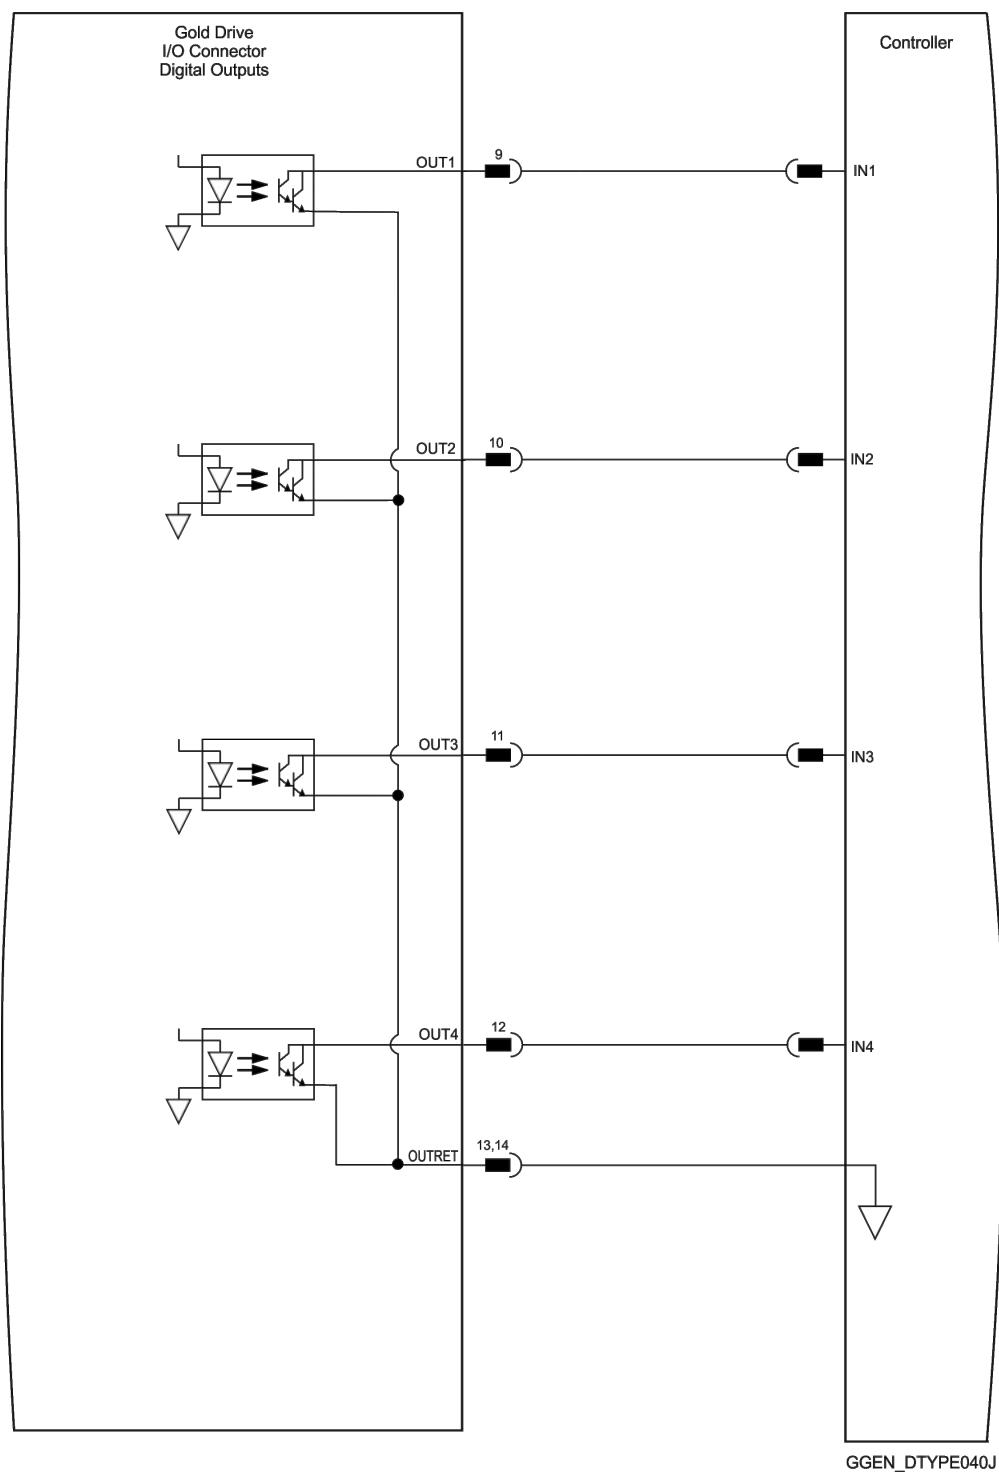


Figure 40: Digital Output Connection Diagram Example – Sink PLC Option



8.4.2.3. Digital Outputs Source 5V Logic Mode

| Feature | Details |
|--|--|
| Type of output | Optically isolated 5V Logic source |
| Supply output (VDD) | < 30 V (Typically 5 V) |
| Max. output current I_{out} (max) ($V_{out} = \text{High}$) | I_{out} (max) $\leq 30 \text{ mA}$ |
| Collector Emitter saturation voltage | 1V |
| T_{on} (Time from low to high) If $V_{dd} = 5\text{V}$ | < 10usec |
| T_{off} (Time from high to Low) | < 100usec |
| R_L | The external R_L must be selected to limit output current to no more than 30 mA. $R_L = \frac{VDD - 1}{I_{out} (\text{max})}$ |
| Executable time | $0 < T < 250 \mu\text{sec}$ |

Figure 41: Digital Photodarlington Output Schematic – Source Mode 5V Logic Level

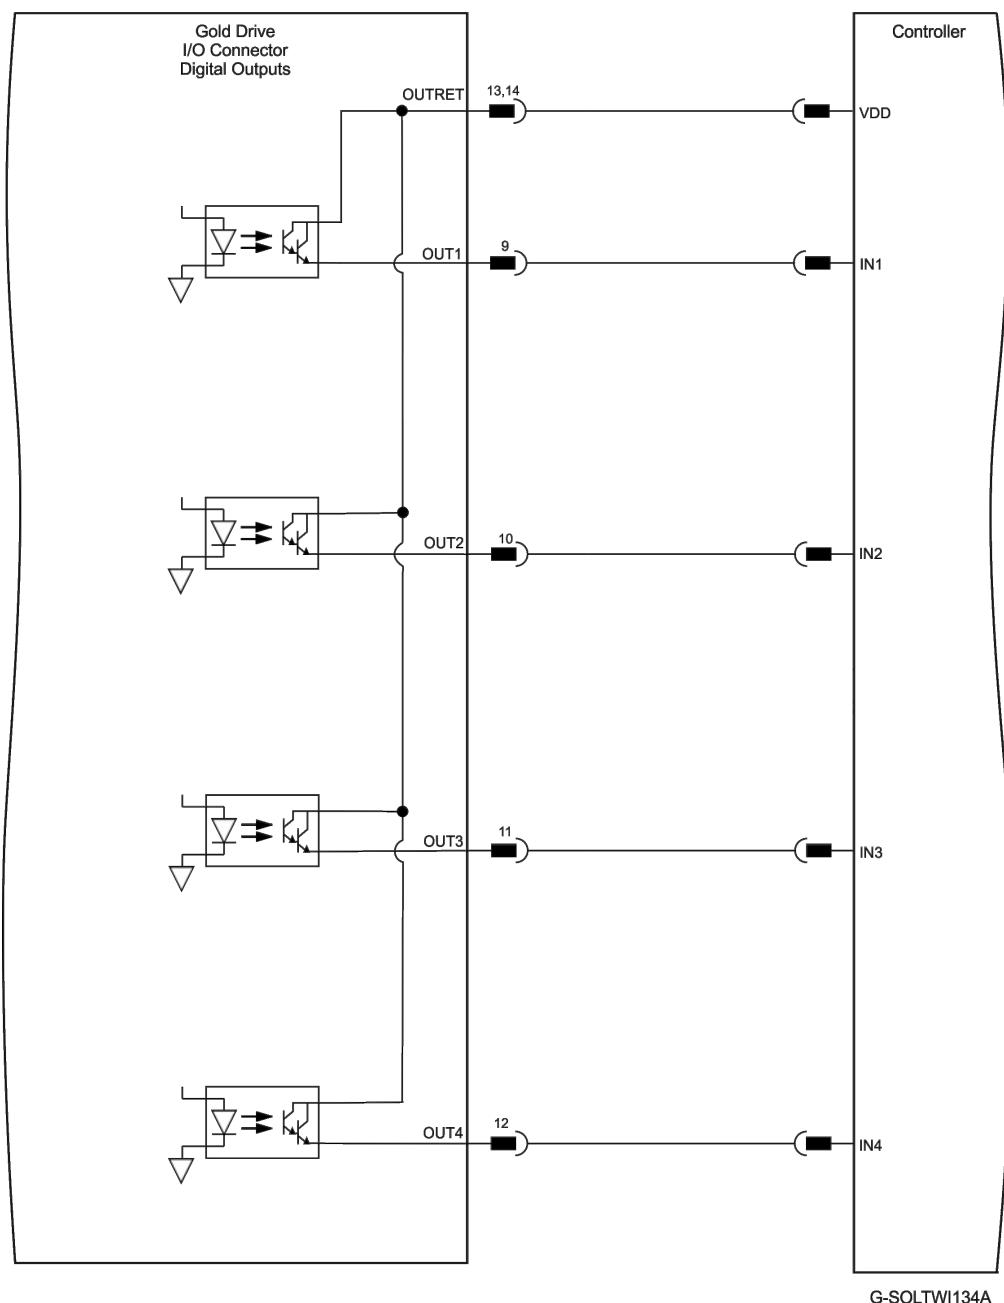


Figure 42: Digital Output Connection Diagram Example – Source 5V Logic Option



8.4.3. STO (Safe Torque Off)

For full details on STO, see Chapter 9 in the MAN-G-Board Level Modules Hardware manual.

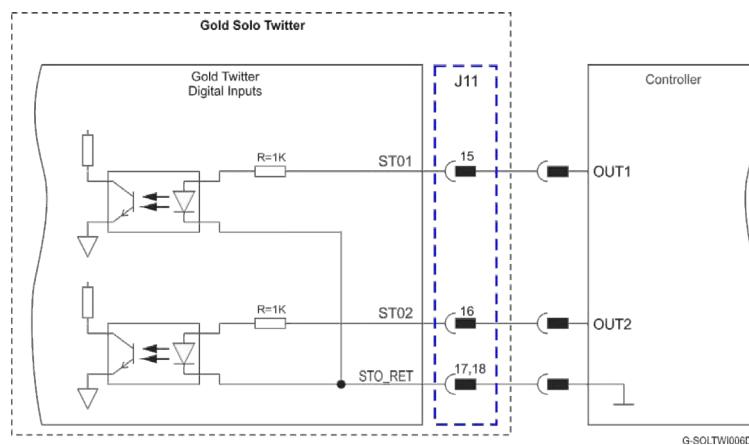


Figure 43: STO Input Connection – 5V Logic

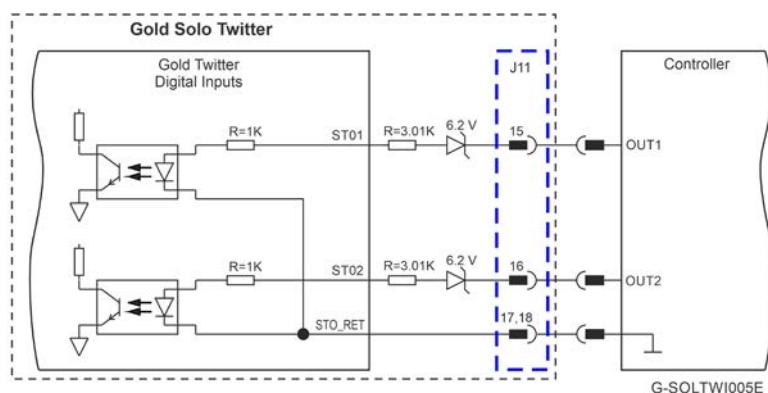


Figure 44: STO Input Connection – PLC (24V Logic)

8.4.4. Analog Input

For full details on Analog Inputs, see section 11.3 in the MAN-G-Board Level Modules Hardware manual.

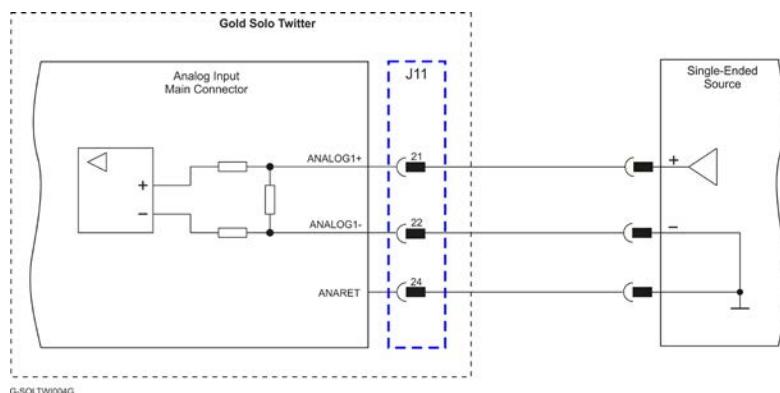


Figure 45: Analog Input

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.4.5. Standard RS-232

Figure 46 describes the Standard RS-232 connection diagram.

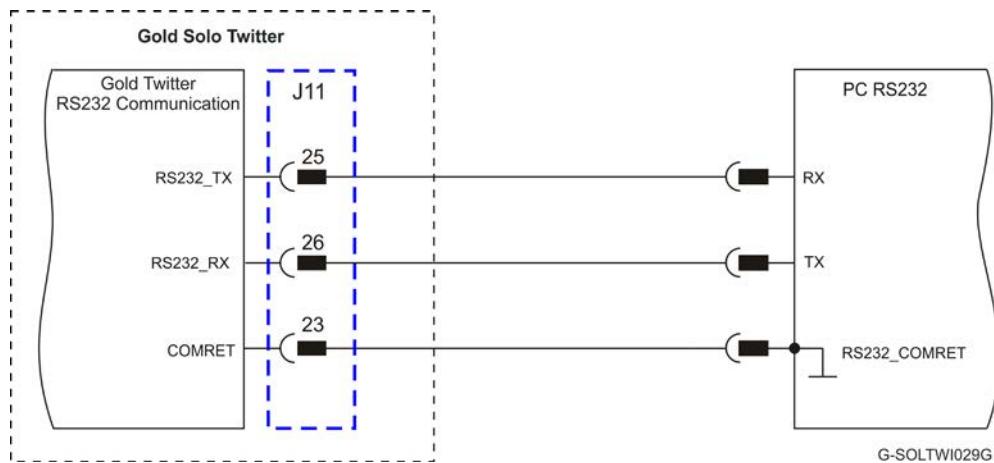


Figure 46: Standard RS-232 Connection Diagram

For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.

8.4.6. USB 2.0 Communication (Only for EtherCAT version)

For full details on USB communication, see section 12.1 in the **MAN-G-Board Level Modules Hardware manual**.


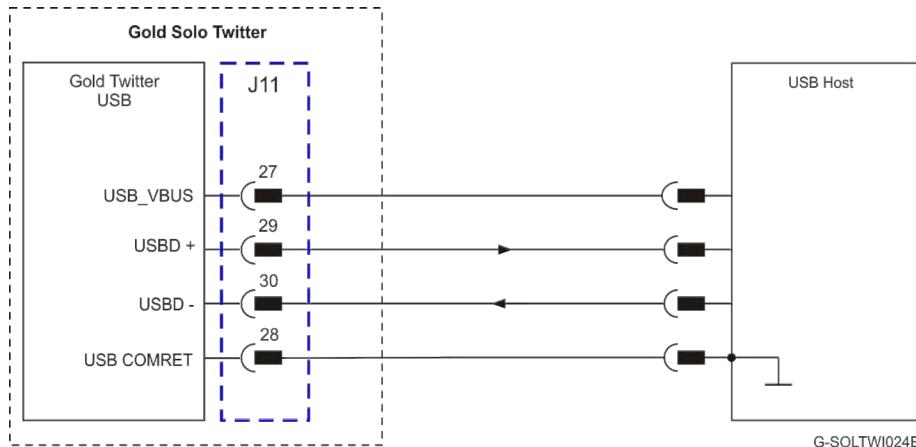


Figure 47: USB Network Diagram

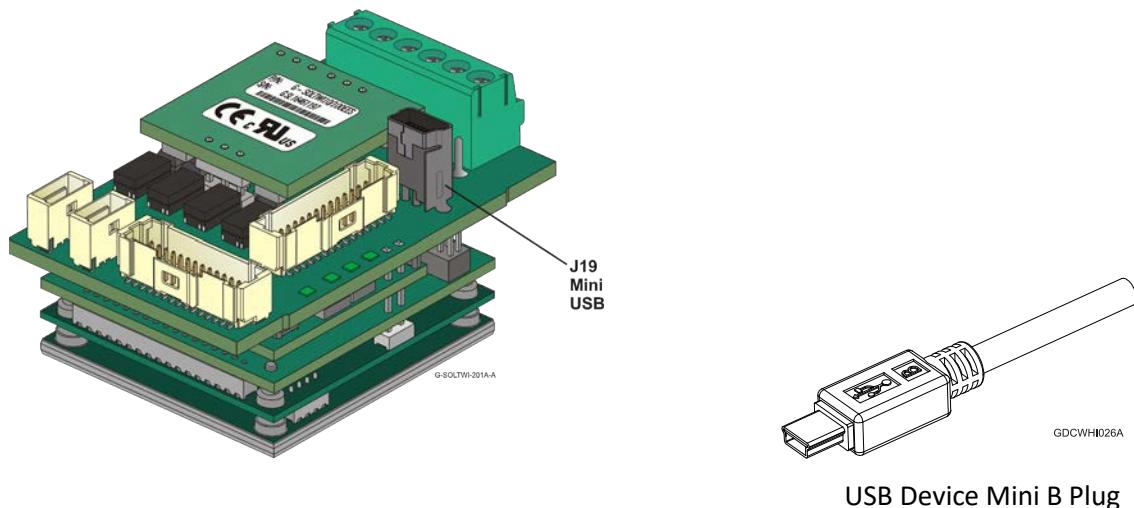For short distances between the drive and control, 0.5 to 1.0 m wires can be used and shielding is not required. For longer distances than 1.0 m and/or high EMI environment, shielded and twisted wires should be used. Drain wires should be connected to Elmo COMRET.



8.5. J19 Mini USB Communication Connector (Option M)



J19 Mini USB Communication Connector

Note: In the Mini USB model (Option M) the USB connection can be either from the mini USB connector or from the IO and Communication connector.

DO NOT connect the USB communication from the mini USB and the IO and Communication connector simultaneously.

| Pin J19 | Signal | Function |
|---------|------------|--------------------------|
| 1 | USB VBUS | USB VBUS 5V |
| 2 | USBD- | USB _N line |
| 3 | USBD+ | USB _P line |
| 5 | USB COMRET | USB communication return |

Table 10: Mini USB Connector

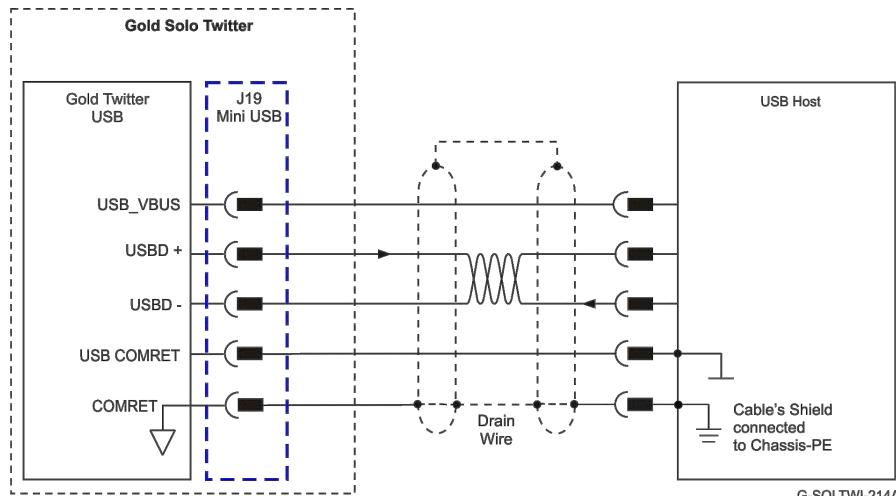


Figure 48: USB Network Diagram



8.6. EtherCAT Communications Version

Fieldbus communications are industrial network protocols for real-time distributed control that allows connection of servo drives. The Gold Solo Twitter supports the following EtherCAT fieldbus type industrial network protocol:

| Fieldbus Type | Product Number |
|---------------|---------------------|
| EtherCAT | G-SOLTWIXX/YYYYEXXX |
| | G-SOLTWIXX/YYYYMXXX |

8.6.1. EtherCAT IN/Ethernet Connector (J17)

Refer to section 12.2 in the MAN-G-Panel Mounted Drives Hardware manual for more details.

| Pin (J17) | Signal | Function |
|-----------|------------------------------|---------------------------------|
| 1 | EtherCAT_IN_TX+/Ethernet_TX+ | EtherCAT in/Ethernet transmit + |
| 2 | EtherCAT_IN_TX-/Ethernet_TX- | EtherCAT in/Ethernet transmit - |
| 3 | EtherCAT_IN_RX+/Ethernet_RX+ | EtherCAT in/Ethernet receive + |
| 4 | EtherCAT_IN_RX-/Ethernet_RX- | EtherCAT in/Ethernet receive - |
| 5 | COMRET | Shield drain wire |

| Pin Positions | Cable Connector |
|---------------|--|
| | <p>Ethernet Cable Connector</p> |

Table 11: EtherCAT IN / Ethernet Pin Assignments

Note: Always use CAT5e cables.



8.6.2. EtherCAT OUT Connector (J18)

See Section 12.2 in the MAN-G-Panel Mounted Drives Hardware manual for the electrical diagram.

| Pin (J18) | Signal | Function |
|-----------|------------------|-------------------------|
| 1 | EtherCAT_OUT_TX+ | EtherCAT out transmit + |
| 2 | EtherCAT_OUT_TX- | EtherCAT out transmit - |
| 3 | EtherCAT_OUT_RX+ | EtherCAT out receive + |
| 4 | EtherCAT_OUT_RX- | EtherCAT out receive - |
| 5 | COMRET | Shield drain wire |


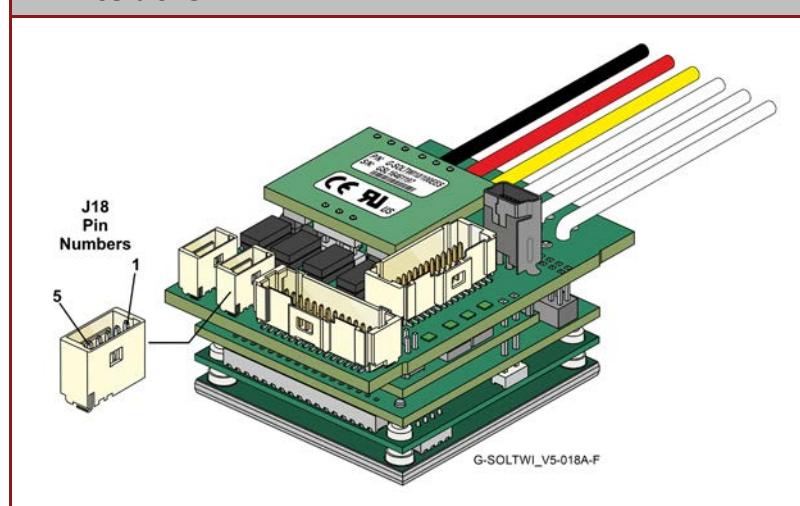
| Pin Positions | Cable Connector |
|--|--|
|  |  <p>Ethernet Cable Connector</p> |

Table 12: EtherCAT OUT Pin Assignments

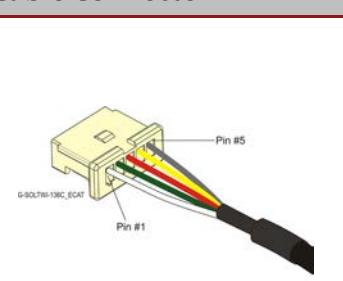Note: Always use CAT5e cables.



8.6.3. EtherCAT Schematic Connections

For full details on EtherCAT communication, see Section 12.2 in the in the MAN-G-Board Level Modules Hardware manual.

Note: The EtherCAT IN port can be configured to an Ethernet Port.

8.6.3.1. EtherCAT Communication

This section only describes the EtherCAT communication, and the pinout drawing of the connector.



When the EtherCAT is connected and the FoE is in operation, the USB cable connection must be disconnected.

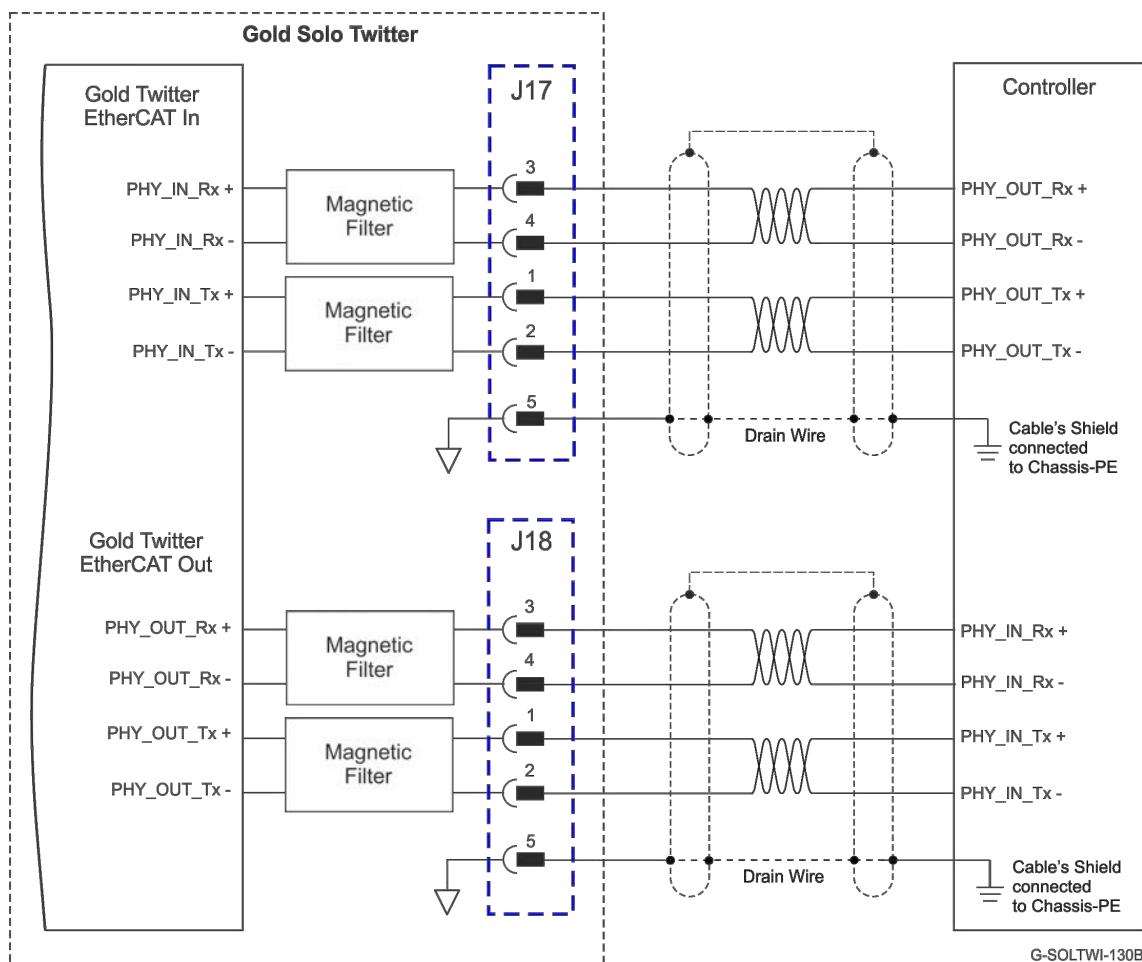


Figure 49: EtherCAT Connection Schematic Diagram

Note: Always use CAT5e cables.



8.6.3.2. EtherCAT Status Indicator (D2)

The EtherCAT status indicator D2 is a single red/green dual bi-colored LED that combines the green RUN indicator and the red ERROR indicator of the EtherCAT state machine. For further details, see the EtherCAT Application Manual.

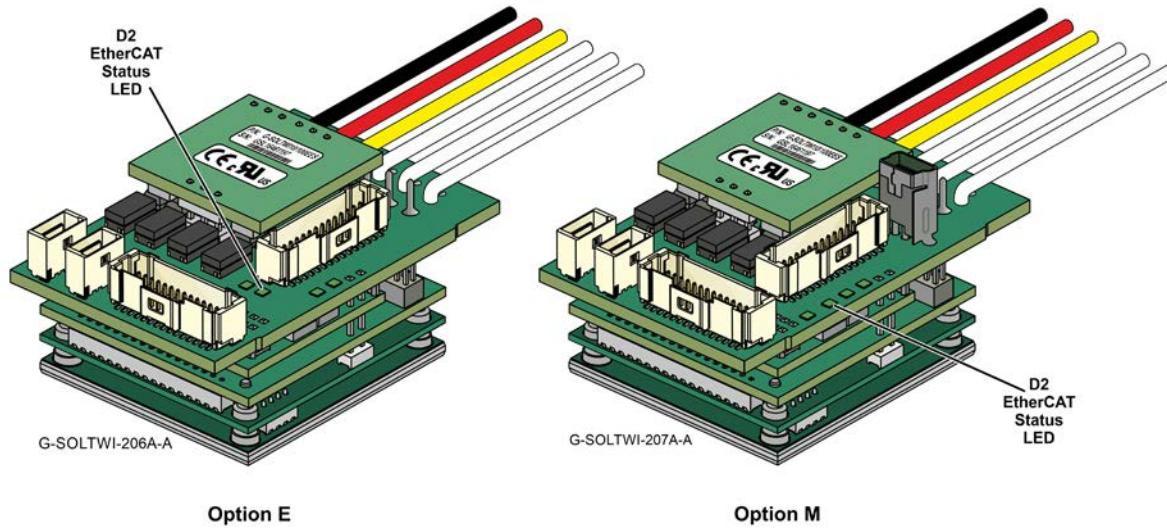


Figure 50: EtherCAT Status LED

8.6.3.3. EtherCAT Link Indicators (D3, D4)

The Gold Solo Twitter can serve as an EtherCAT slave device. For this purpose it has two Ports J17 and J18, which are designated as EtherCAT In and EtherCAT Out. Each of these Ports has a status LED; D3 EtherCAT In and D4 EtherCAT Out, which are shown in Figure 51.

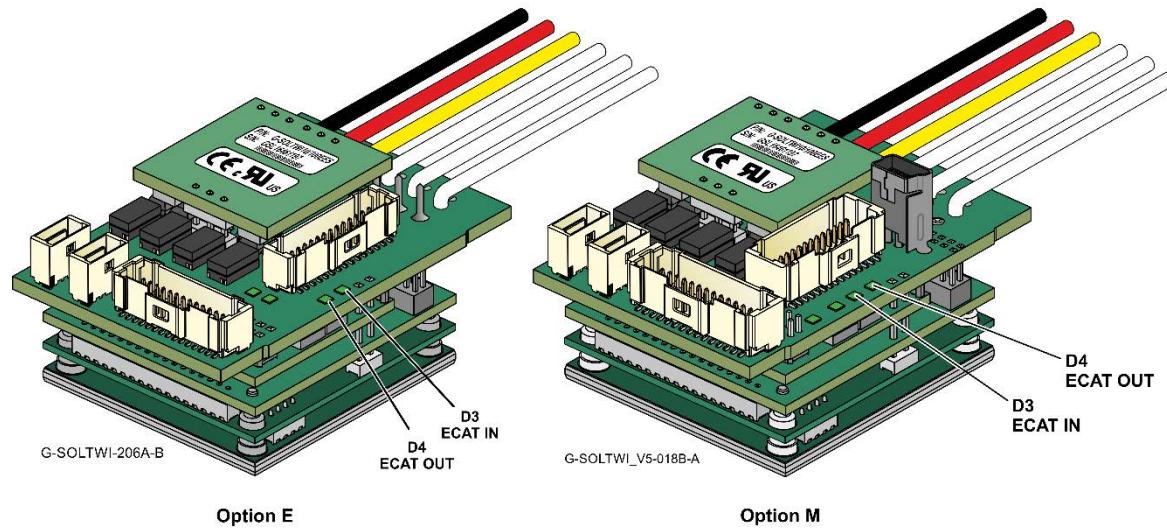


Figure 51: EtherCAT Link LEDs

The green LEDs D3 and D4 are the link/activity indicators. They show the state of the applicable physical link and the activity on that link; blinking green, D3 for the Link Act IN, and D4 for the Link Act OUT.



8.7. CAN Communications Version

Fieldbus communications are industrial network protocols for real-time distributed control that allows connection of servo drives. The Gold Solo Twitter supports the following CAN fieldbus type industrial network protocol:

| Fieldbus Type | Product Number |
|---------------|---------------------|
| CAN | G-SOLTWIXX/YYYYSXXX |

See Section 12.4 in the MAN-G-Panel Mounted Drives Hardware manual for the electrical diagram.

8.7.1. CAN IN Connector (J17)

| Pin (J17) | Signal | Function |
|-----------|---------|--------------------------------|
| 1 | NC | NC |
| 2 | CAN_RET | CAN Return |
| 3 | CAN_H | CAN_H bus line (dominant high) |
| 4 | CAN_L | CAN_L bus line (dominant low) |
| 5 | COMRET | Shield drain wire |


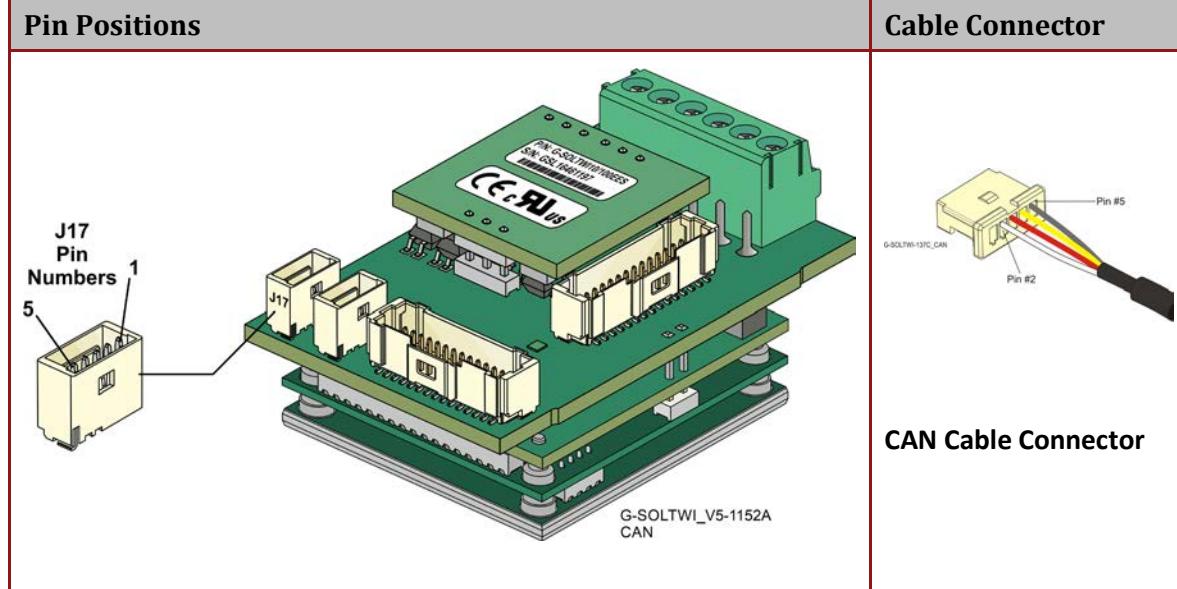
| Pin Positions | Cable Connector |
|---|---|
|  |  CAN Cable Connector |

Table 13: CAN IN Connector Pin Assignments

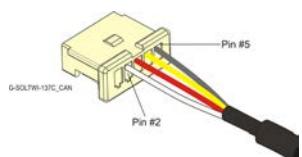Note: Always use CAT5e cables.



8.7.2. CAN OUT Connector (J18)

| Pin (J18) | Signal | Function |
|-----------|---------|--------------------------------|
| 1 | NC | NC |
| 2 | CAN_RET | CAN Return |
| 3 | CAN_H | CAN_H bus line (dominant high) |
| 4 | CAN_L | CAN_L bus line (dominant low) |
| 5 | COMRET | Shield drain wire |

| Pin Positions | Cable Connector |
|---------------|-----------------|
| | |

Table 14: CAN OUT Connectors Pin Assignments

Note: Always use CAT5e cables.



8.7.3. CAN Schematic Connections

For full details on CANopen communication, see section 14.3 in the **MAN-G-Board Level Modules Hardware manual**.

8.7.3.1. Interface

The Gold Solo Twitter includes the CAN transceiver, common mode choke, and a CAN Bus Protector against ESD and other harmful transient voltage events.

The following signals describe how to connect CAN to the external connector.

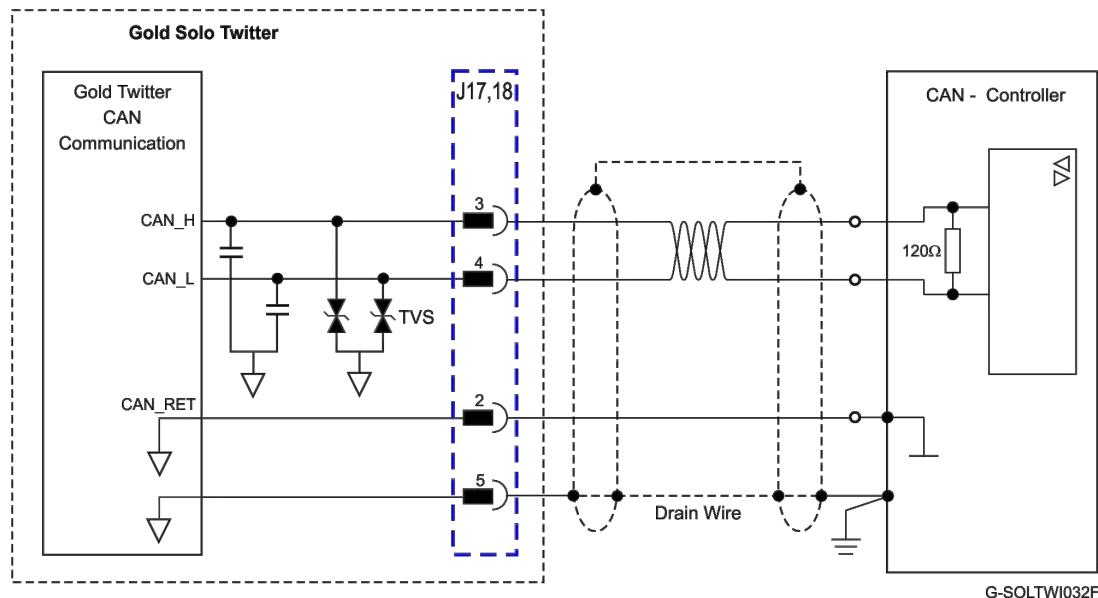


Figure 52: CAN Interface



8.7.3.2. CAN Network Topology

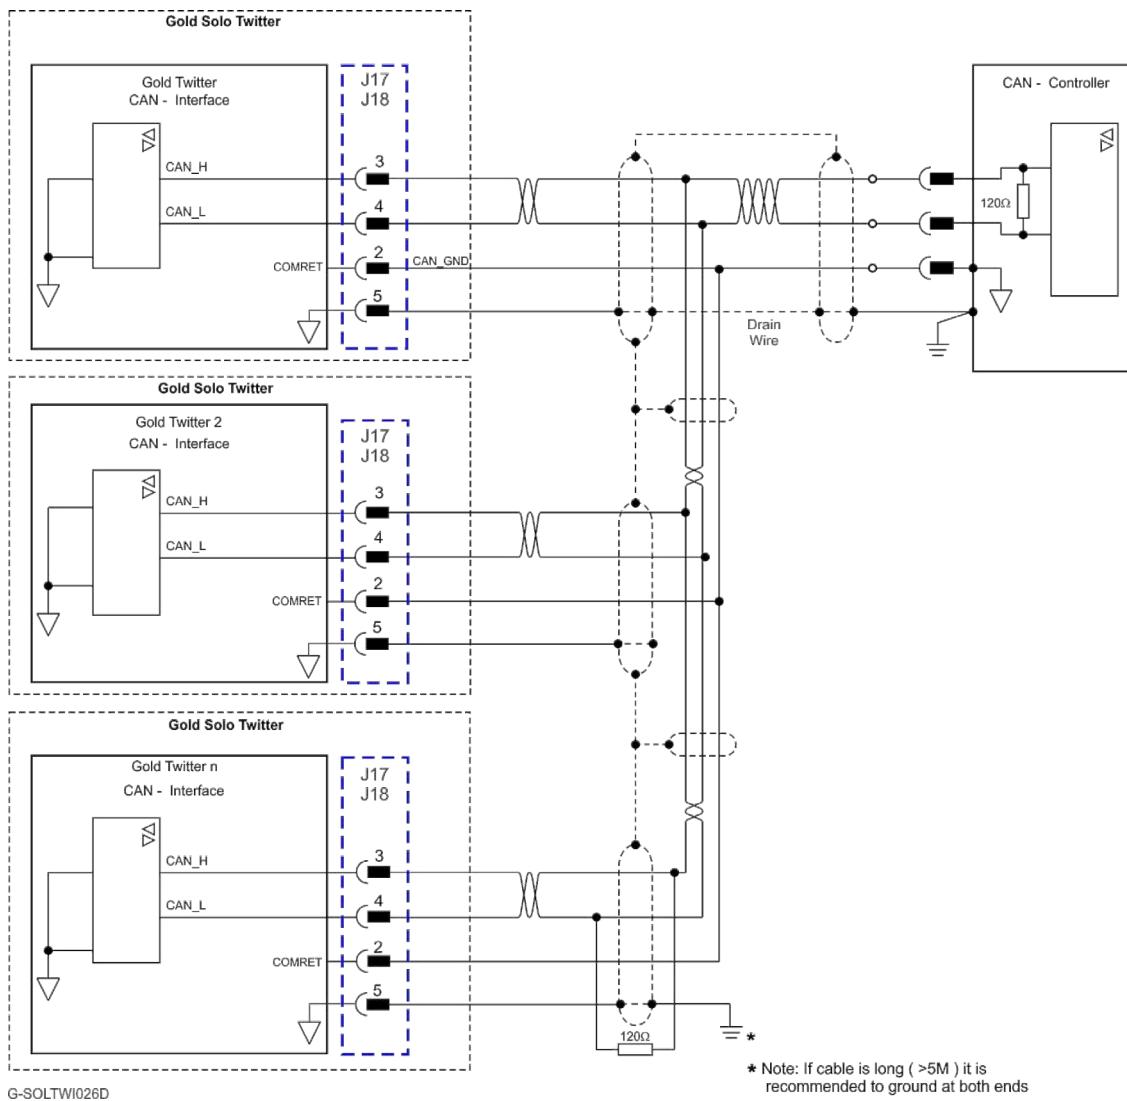


Figure 53: CAN Network Diagram – Drop Off Topology



Caution: When installing CAN communication, ensure that each servo drive is allocated a unique ID. Otherwise, the CAN network may “hang”.

Note: Daisy chain topology can also be accomplished using J18.

Note: Always use CAT5e cables.



Chapter 9: Powering Up

After the Gold Solo Twitter is connected to its device, it is ready to be powered up.



Caution:

Before applying power, ensure that the DC supply is within the specified range and that the proper plus-minus connections are in order.

9.1. Initializing the System

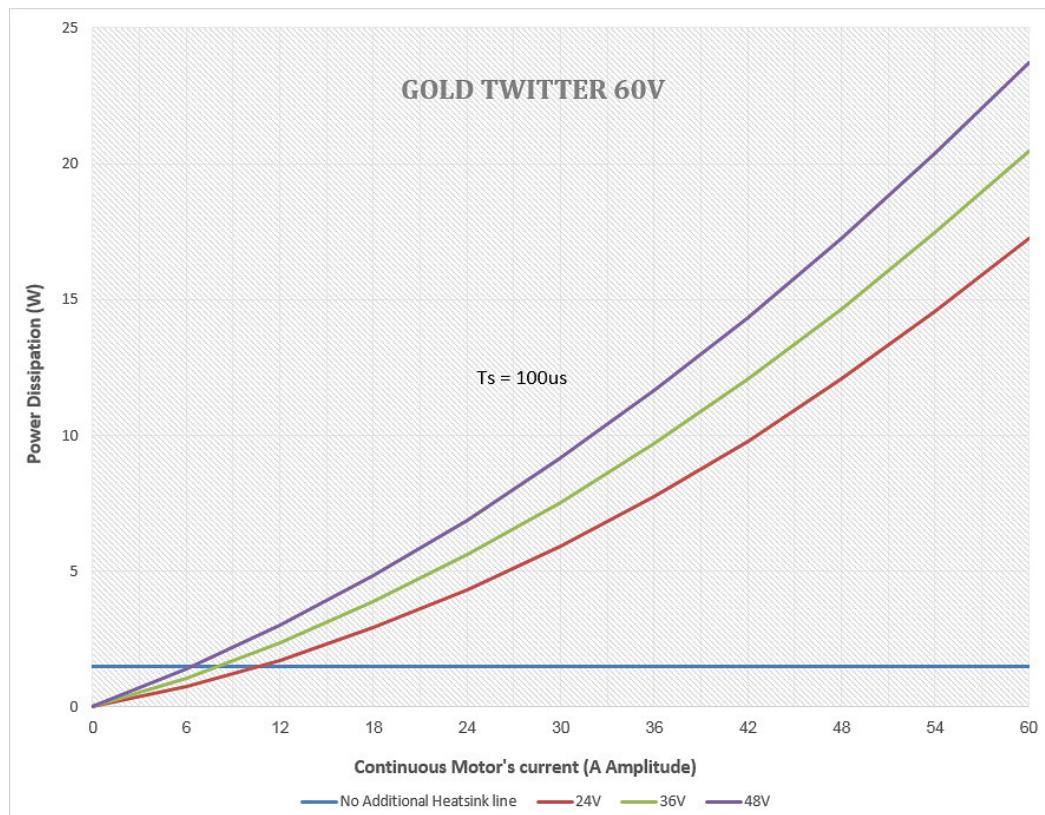
After the Gold Solo Twitter has been connected and mounted, the system must be set up and initialized. This is accomplished using the *EASII*, Elmo's Windows-based software application. Install the application and then perform setup and initialization according to the directions in the *EASII User Manual*.

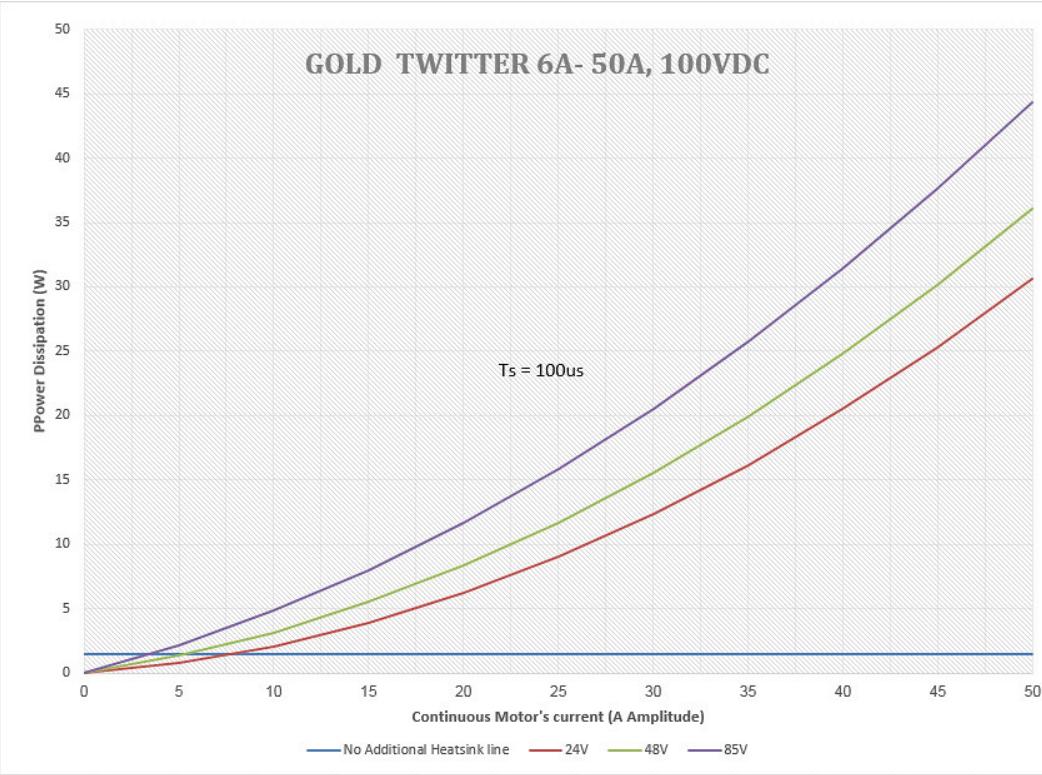
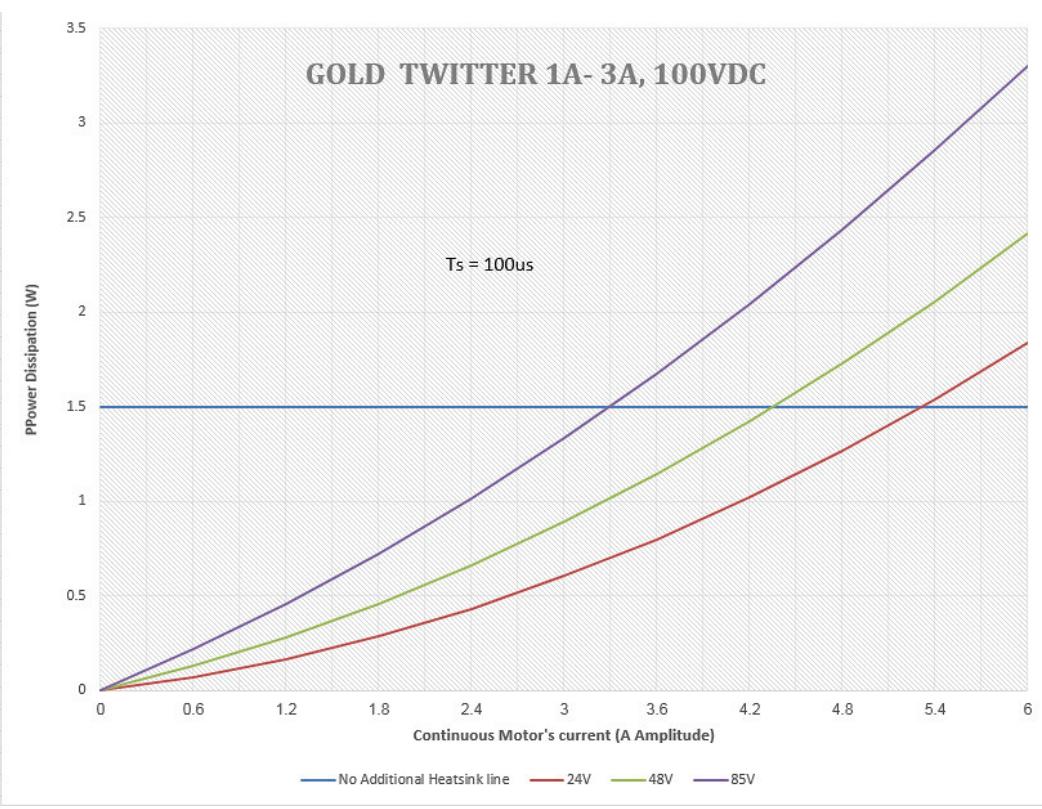
9.2. Heat Dissipation

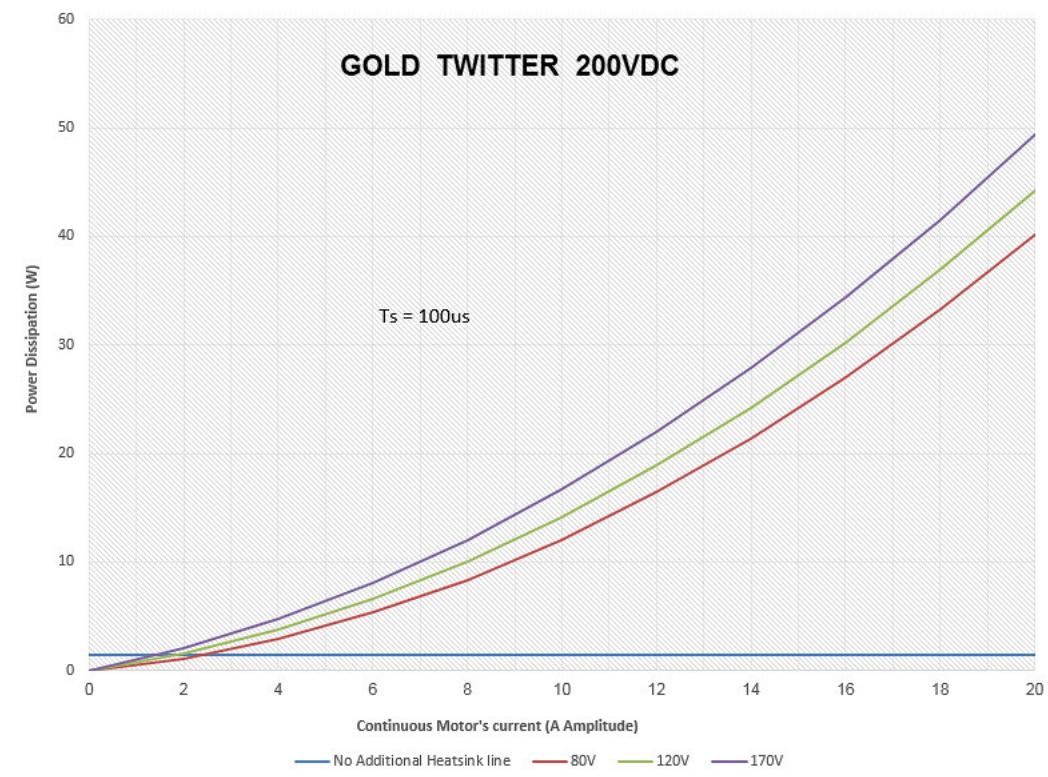
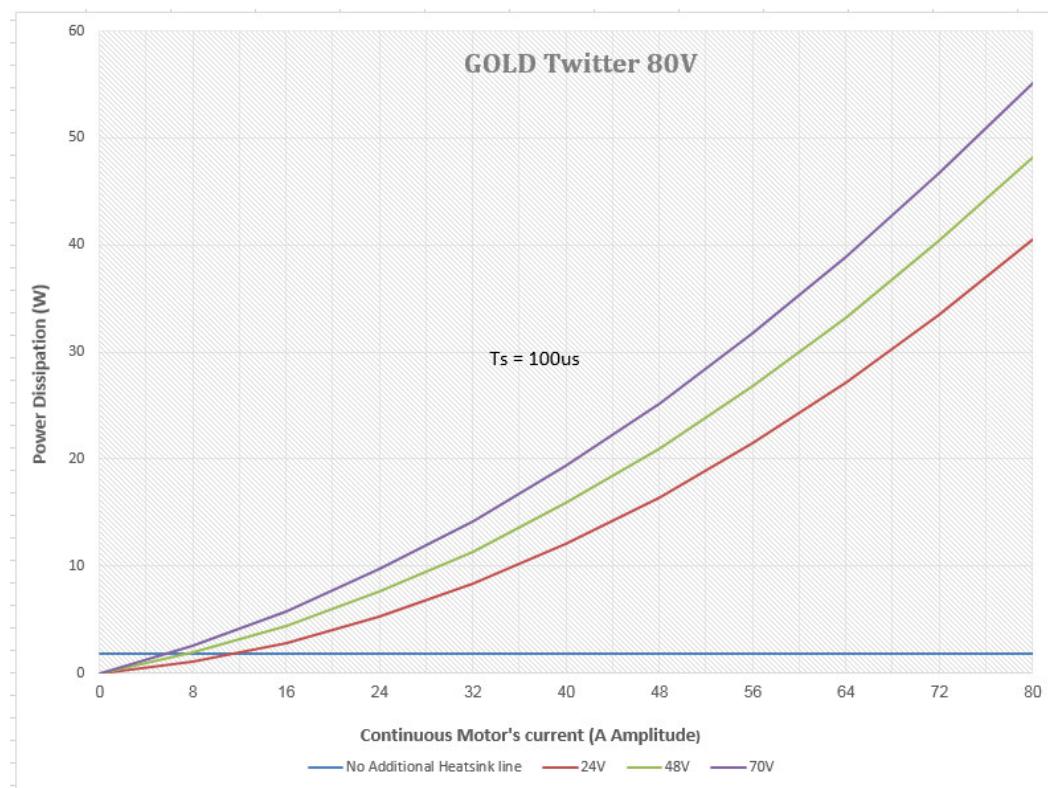
The best way to dissipate heat from the Gold Solo Twitter is to mount it so that its heat-sink is attached to the machine chassis. If mounted with its heat-sink suspended, then for best results mount the servo drive faced upwards and leave approximately 10 mm of space between the Gold Solo Twitter's heat-sink and any other assembly.

9.2.1. Heat Dissipation Data

Heat Dissipation is shown graphically below. It should be noted in the graphs below that the Flat Heat Sink and Fins Heat Sink can dissipate up to 5.5W and 7.0W respectively:









9.2.2. How to Use the Chart

The charts above are based upon the theoretical worst-case scenario. The actual test results display a 20% -30% lower power dissipation.

The above charts indicate the net power conversion losses and exclude the control losses.

To determine if your application heat dissipation requires a heat sink:

1. Determine the power dissipation according to the "continuous current" and the DC bus voltage curve.
If the DC bus is not one of the three curves above, estimate the dissipation by interpolation.
The estimation error is not critical.
2. The chart is calculated for continuous current operation, if the actual operation is pulsed current, add 25% to 30% to the power dissipation of the average (RMS) current.
3. When the Heat-Sink temperature reaches $\approx 85^{\circ}\text{C}$, the Gold Solo Twitter will shut down.
Design the system for continuous operation so that the maximum Heat Sink temperature should be no higher than between 80°C to 82°C .

4. For models Power Supply & Heatsink Option: (Blank) or S

If the average heat dissipation is less than $\approx 1.5\text{W}$ (Average operating power of 100W to 200W) there will be no requirement for an external heat sink.

If the average Heat dissipation is higher than 1.5W then an additional heat dissipation means is required, usually by connecting to an external heat-sink.

For model Power Supply & Heatsink Option: H

If the average heat dissipation is less than $\approx 4\text{W}$ to 5W (Average operating power of 300W to 600W) there will be no requirement for an additional external heat sink.

If the average Heat dissipation is higher than 4W then an additional heat dissipation means is required, usually by connecting to an additional external heat-sink.

5. When an external Heat-Sink is required, calculate the thermal resistance of the heat sink according to:

$$\varnothing_{\text{C/W}} = \frac{80^{\circ}\text{C} - T_{\text{Ambient}}}{\text{Heat Dissipation}}$$



Chapter 10: Dimensions, Physical Specifications

This chapter provides detailed technical dimensions regarding the Gold Solo Twitter.

10.1. EtherCAT Option E without Heatsink

10.1.1. Wires To Power Supply G-SOLTWIRXX/YYYEE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 47.2 x 30.0 x 22.2 mm (1.85" x 1.18" x 0.87") | 60.5 (2.13) |


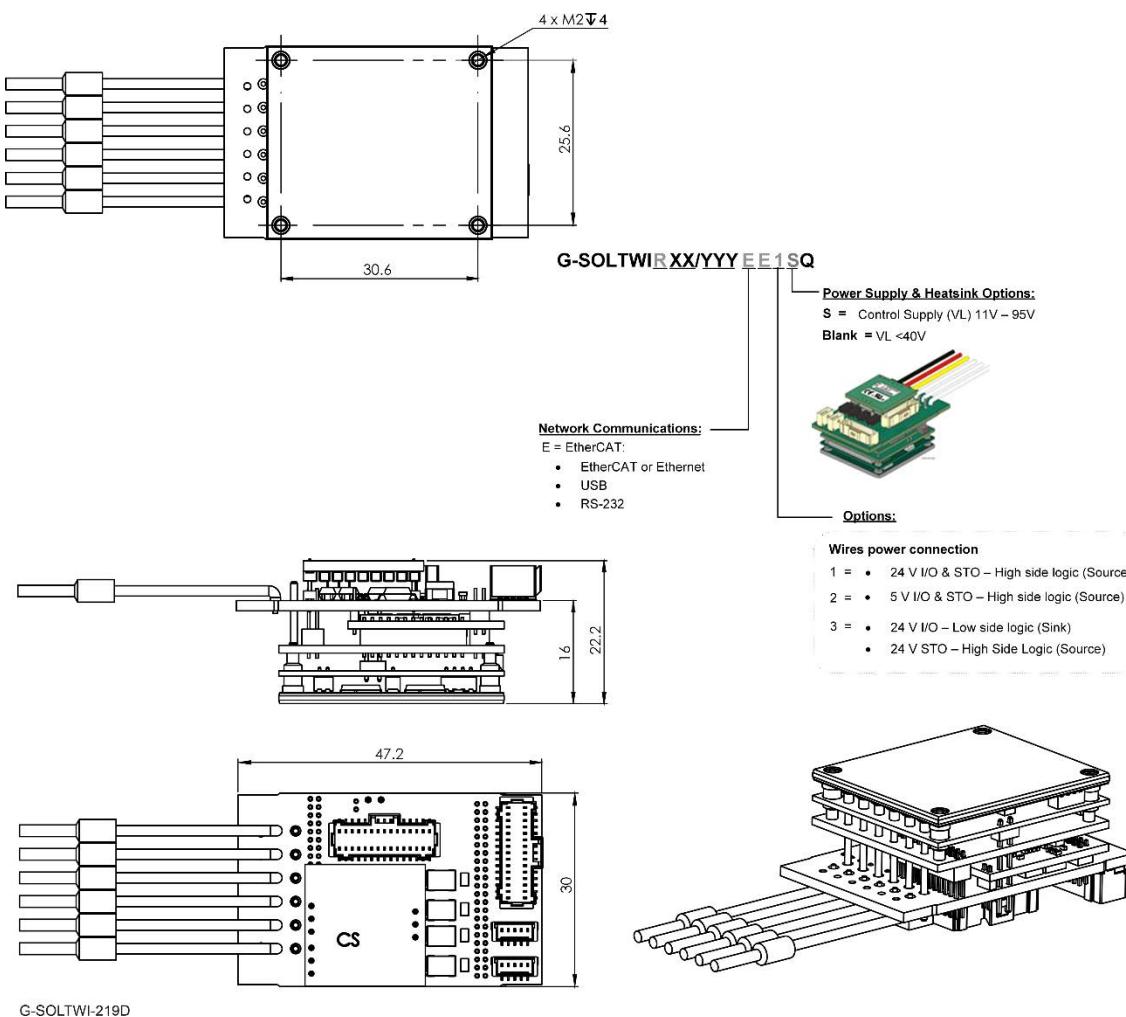


Figure 54: G-Solo Twitter –EtherCAT version (Option E) with wires to power supply and motor

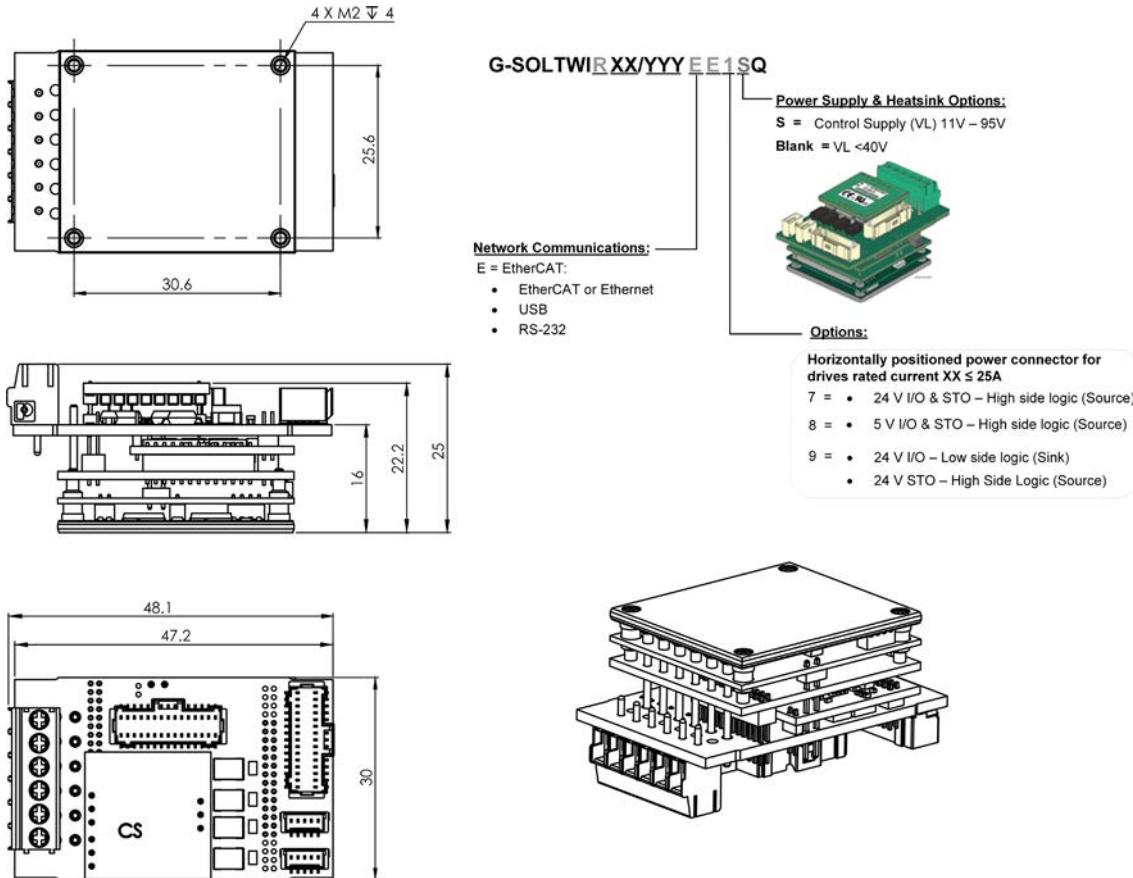

10.1.2. Horizontal Power Connector G-SOLTWIRXX/YYYEE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.1 x 30.6 x 25.6 mm (1.89" x 1.21" x 1.01") | 36.5 (1.29) |




G-SOLTWI-216D

Figure 55: G-Solo Twitter –EtherCAT version (Option E) with horizontal power connector



10.1.3. Vertical Power Connector G-SOLTWIRXX/YYYEE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.3 x 30 x 34.7 mm (1.90" x 1.18" x 1.37") | 39.0 (1.38) |

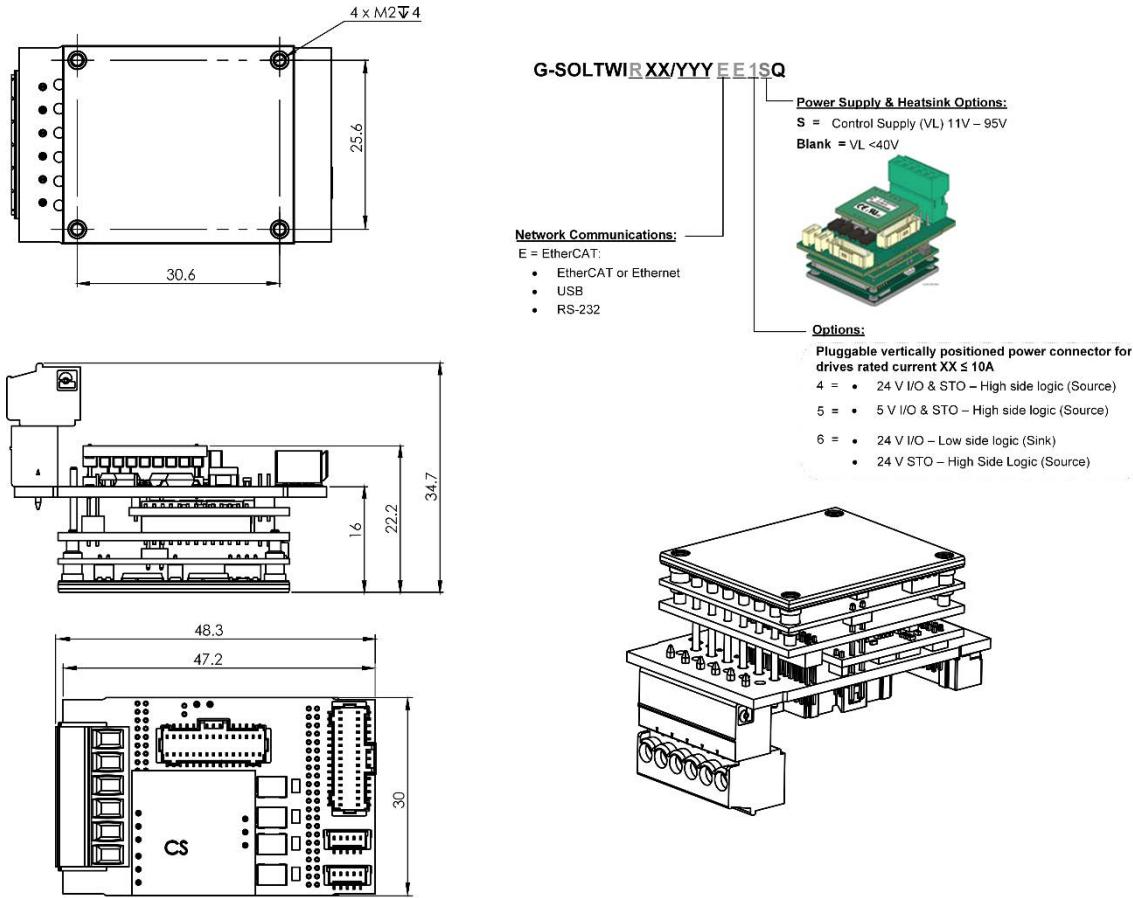

G-SOLTWI-2180D

Figure 56: G-Solo Twitter –EtherCAT version (Option E) with vertical power connector



10.2. EtherCAT Option E with Heatsink

10.2.1. Wires to Power Supply G-SOLTWIRXX/YYYEE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 47.6 x 41.3 x 26.2 mm (1.87" x 1.63" x 1.03") | 81.5 (2.88) |


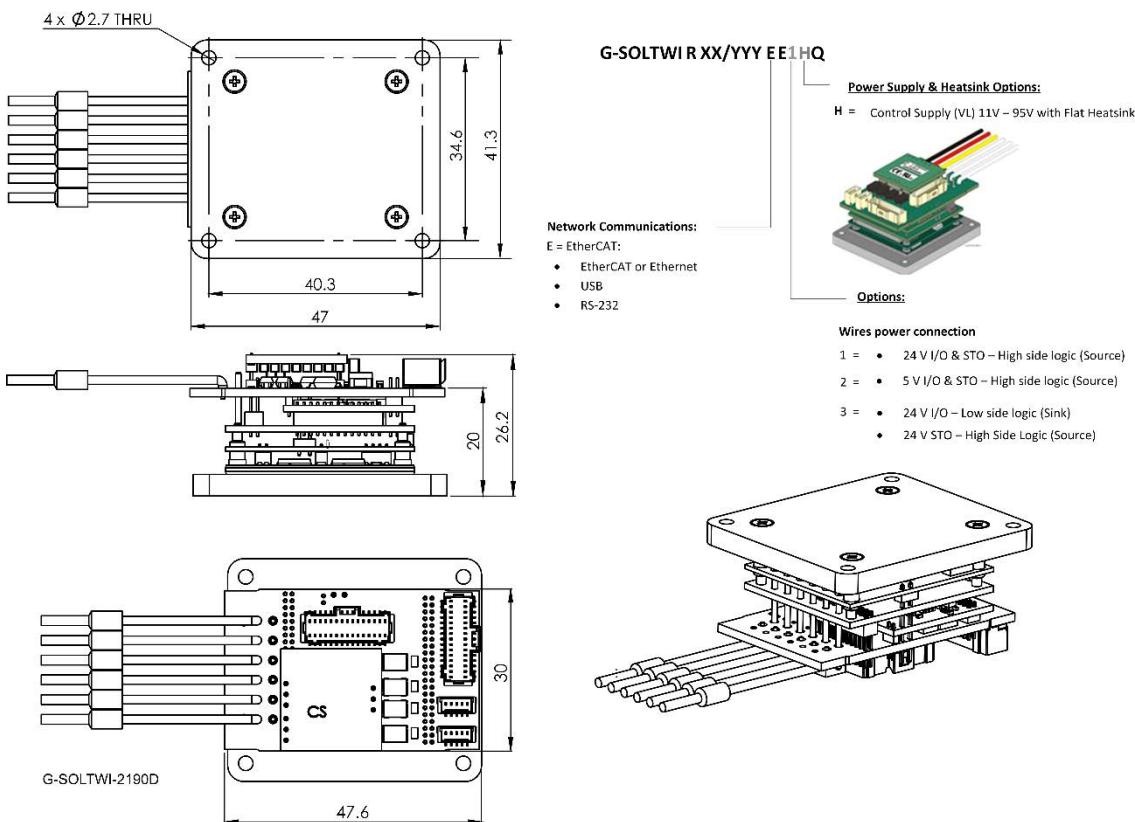


Figure 57: G-Solo Twitter –EtherCAT version with wires to power supply and motor

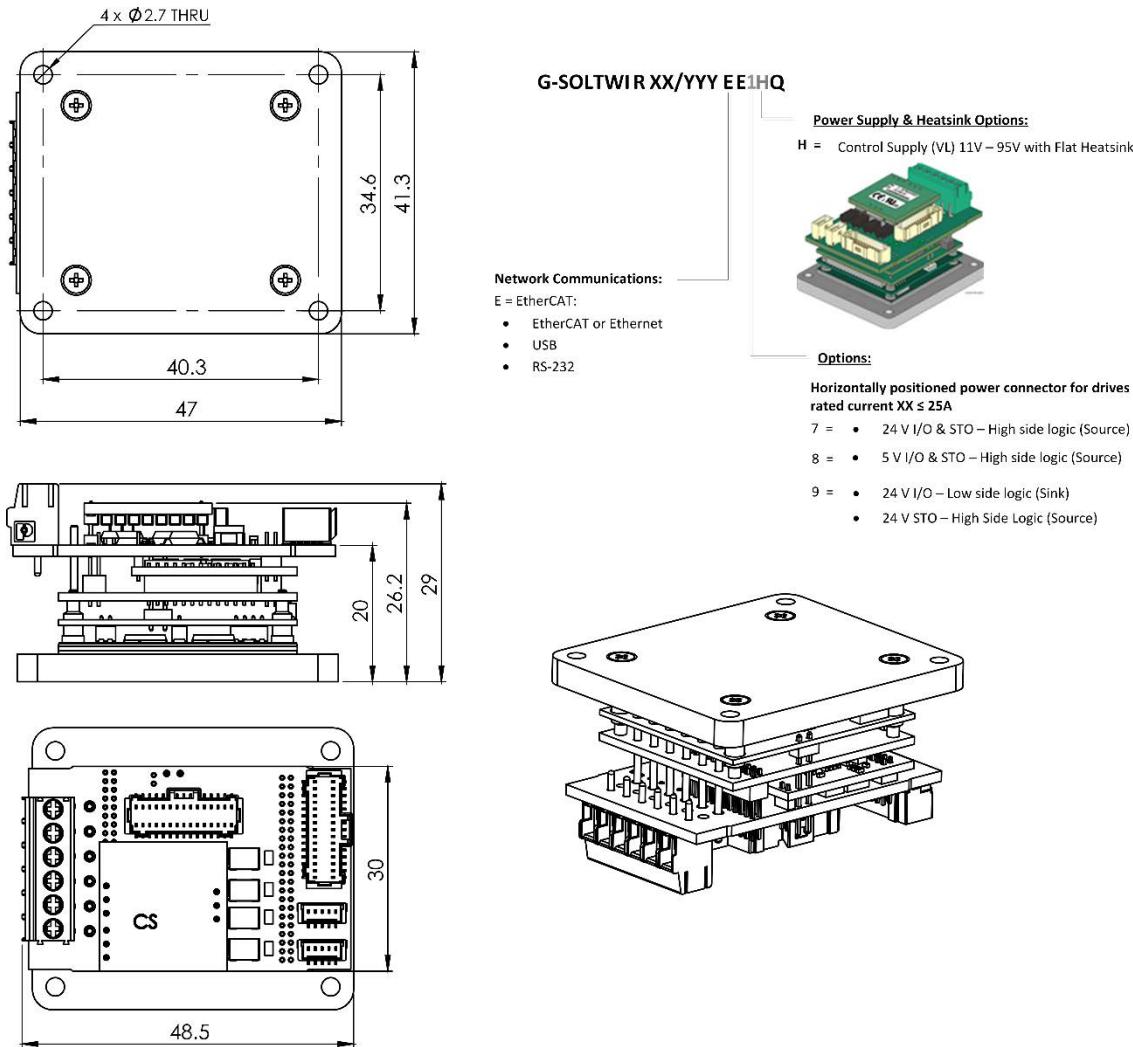

10.2.2. Horizontal Power Connector G-SOLTWIRXX/YYYEE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.5 x 41.3 x 29.0 mm (1.91" x 1.63" x 1.14") | 57.5 (2.03) |




G-SOLTWI-2216D

Figure 58: G-Solo Twitter –EtherCAT version with horizontal power connector



10.2.3. Vertical Power Connector G-SOLTWIRXX/YYYEE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.7 x 41.3 x 38.7 mm (1.92" x 1.63" x 1.52") | 60.0 (2.12) |

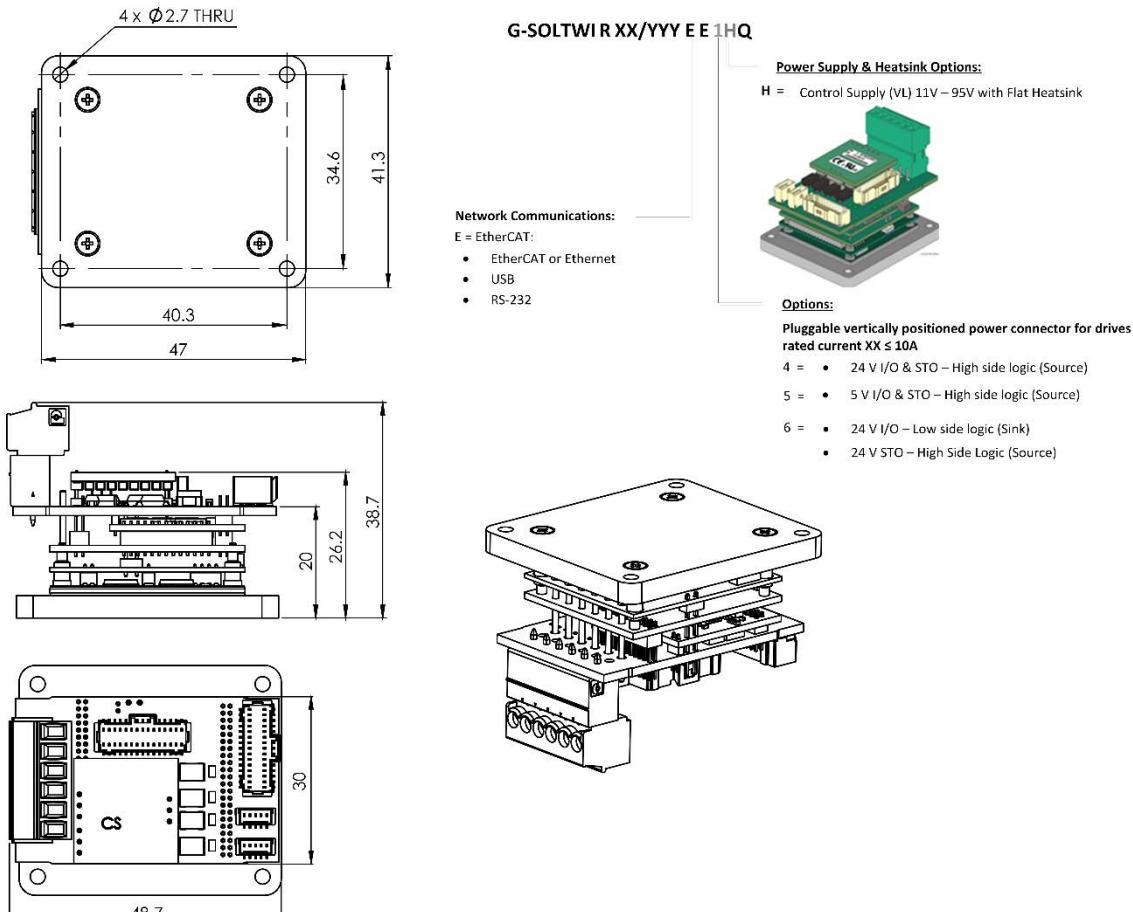

G-SOLTWI-2118D

Figure 59: G-Solo Twitter –EtherCAT version with vertical power connector



10.3. EtherCAT Option M without Heatsink

10.3.1. Wires to Power Supply G-SOLTWIRXX/YYYME1SQ

| Dimensions (mm (in)) | Weight g/oz |
|--|-------------|
| 47.2 x 31.2 x 25.4 mm (1.86" x 1.23" x1.00") | 60.5 (2.13) |


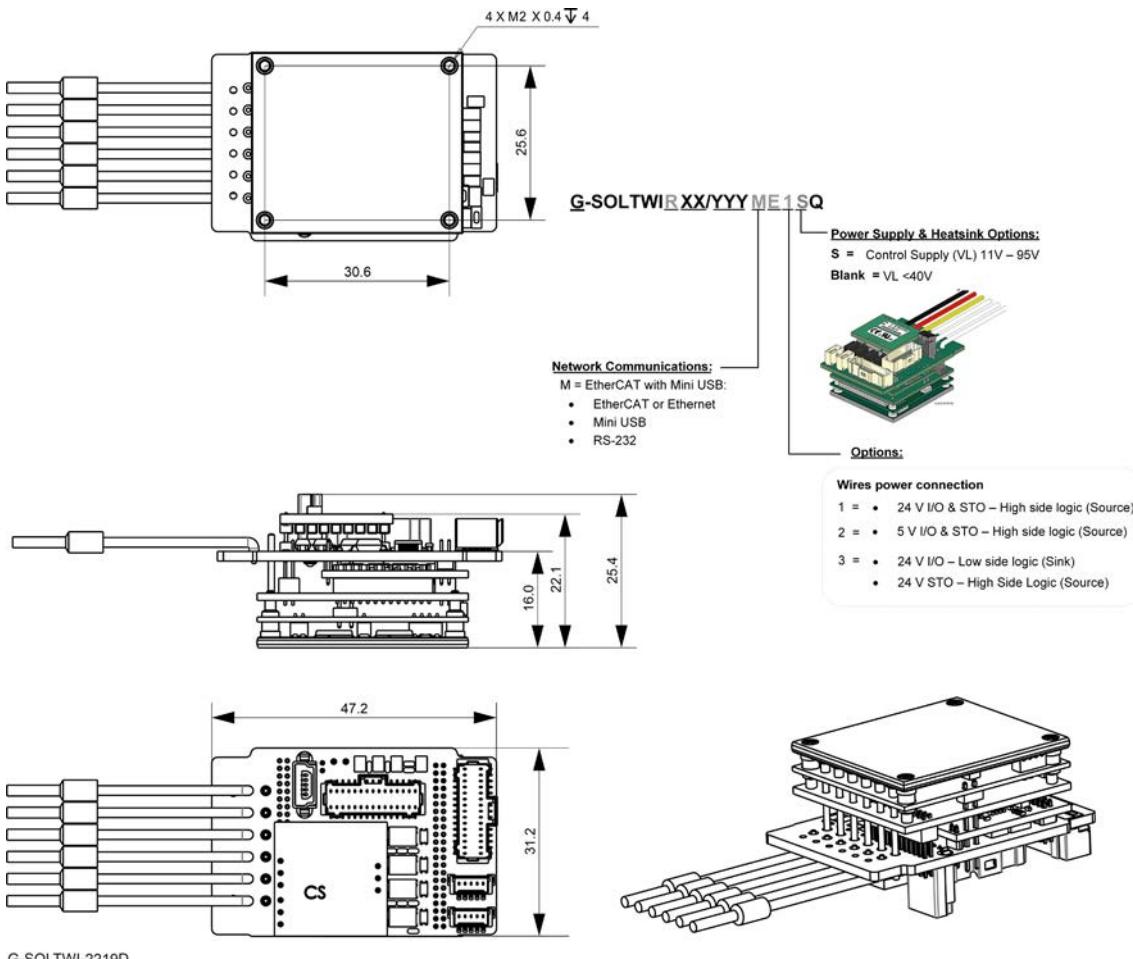


Figure 60: G-Solo Twitter –EtherCAT version (Option M) with wires to power supply and motor

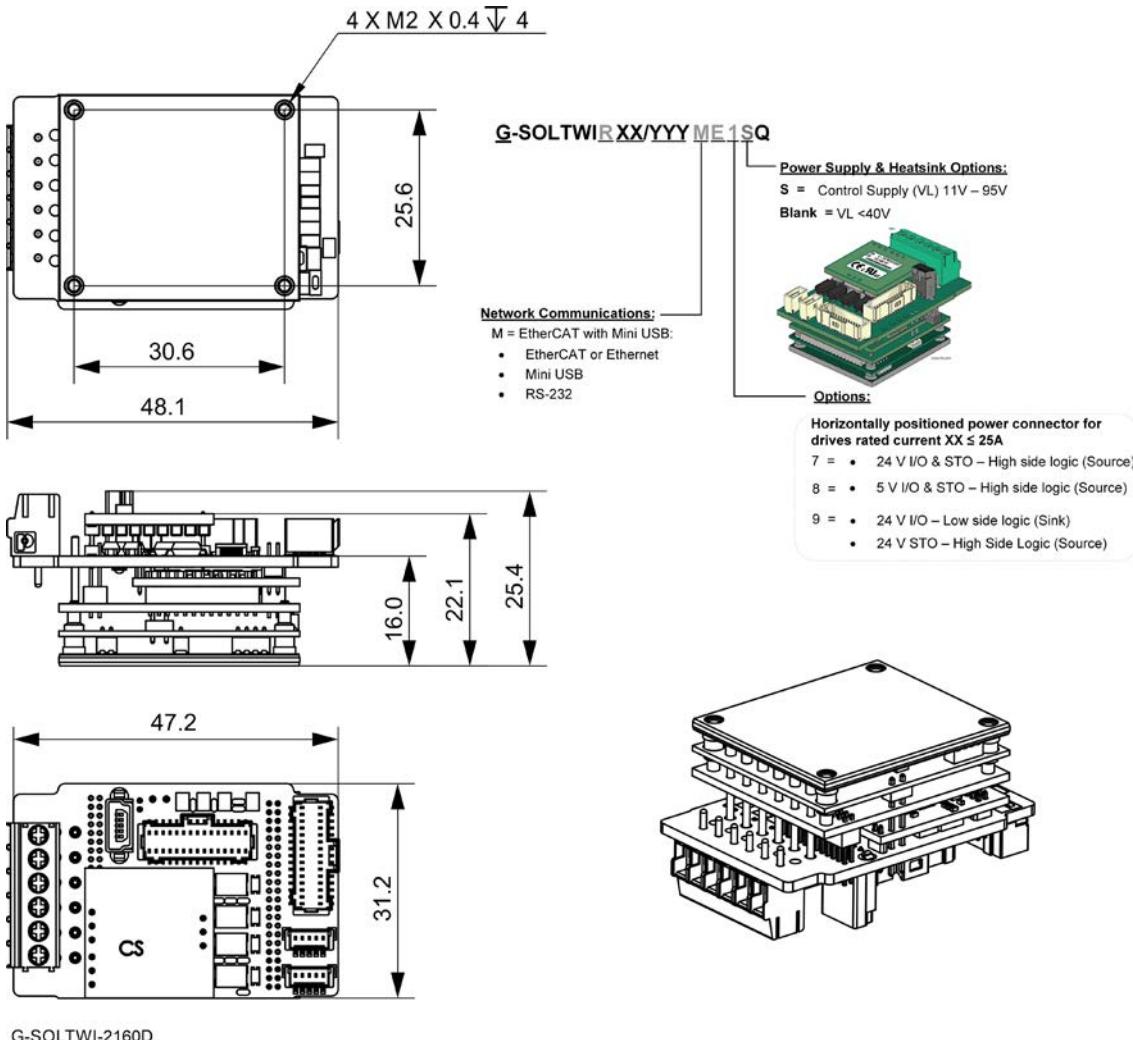

10.3.2. Horizontal Power Connector G-SOLTWIRXX/YYYME1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.1 x 30.6 x 25.4 mm (1.89" x 1.21" x 1.00") | 36.5 (1.29) |



G-SOLTWI-2160D

Figure 61: G-Solo Twitter –EtherCAT version (Option M) with Horizontal Pheonix connector



10.3.3. Vertical Power Connector G-SOLTWIRXX/YYYME1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 47.2 x 30 x 34.7 mm (1.85" x 1.18" x 1.37") | 39.0 (1.38) |

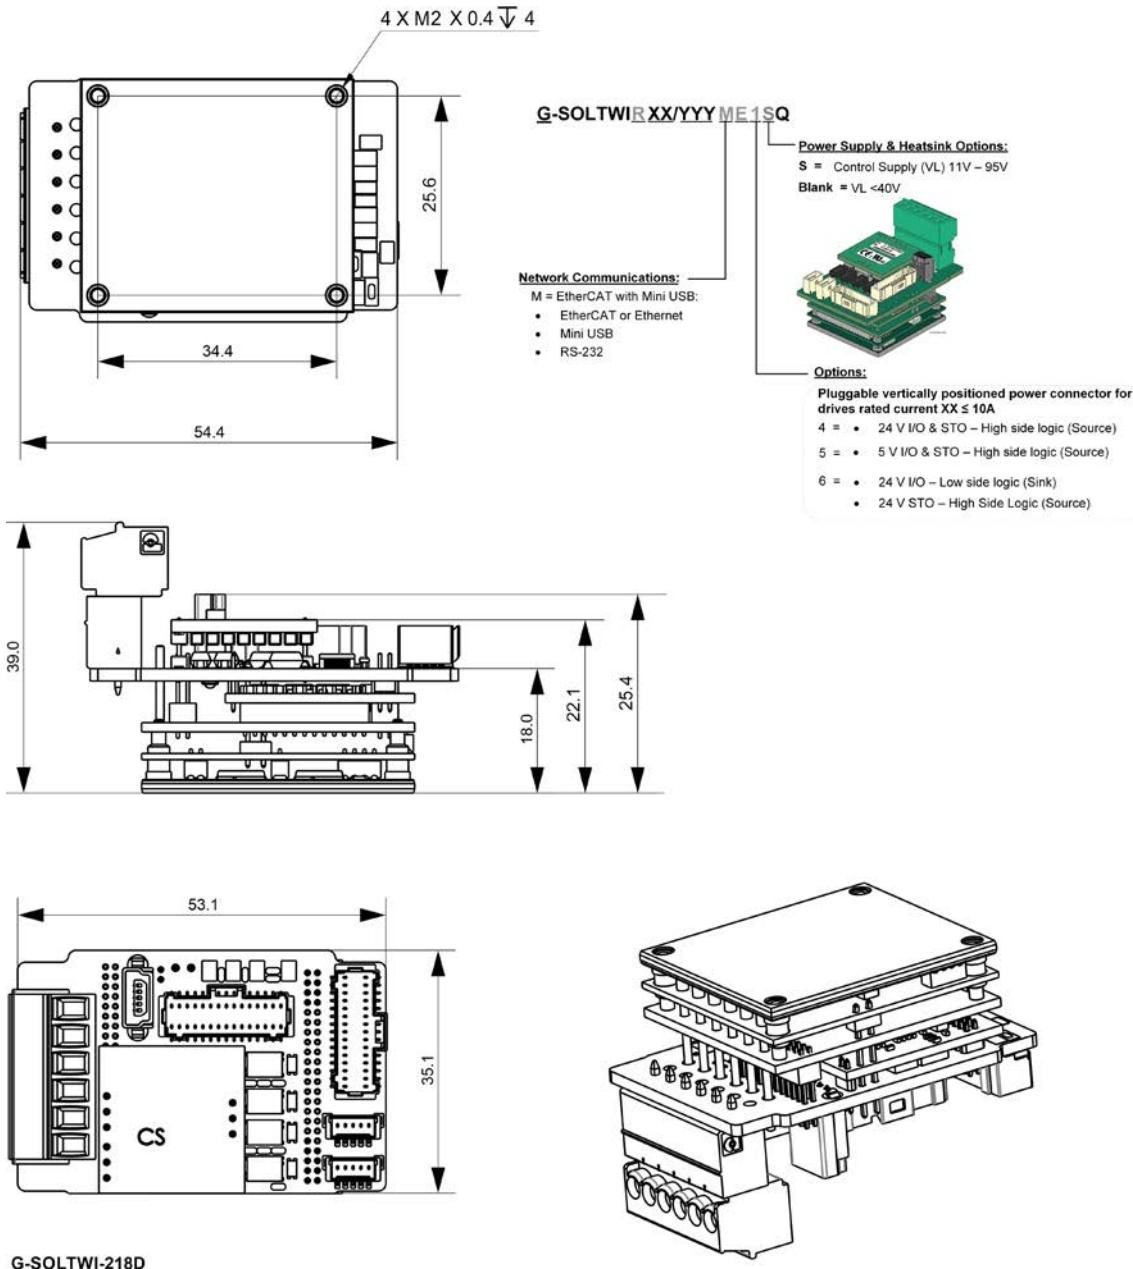


Figure 62: G-Solo Twitter –EtherCAT version (Option M) with Pluggable Vertical Phenix connector



10.4. EtherCAT Option M with Heatsink

10.4.1. Wires to Power Supply G-SOLTWIRXX/YYYME1HQ

| Dimensions (mm (in)) | Weight g/oz |
|--|-------------|
| 47.2 x 41.3 x 29.4 (1.86" x 1.63" x 1.16") | 81.5 (2.88) |

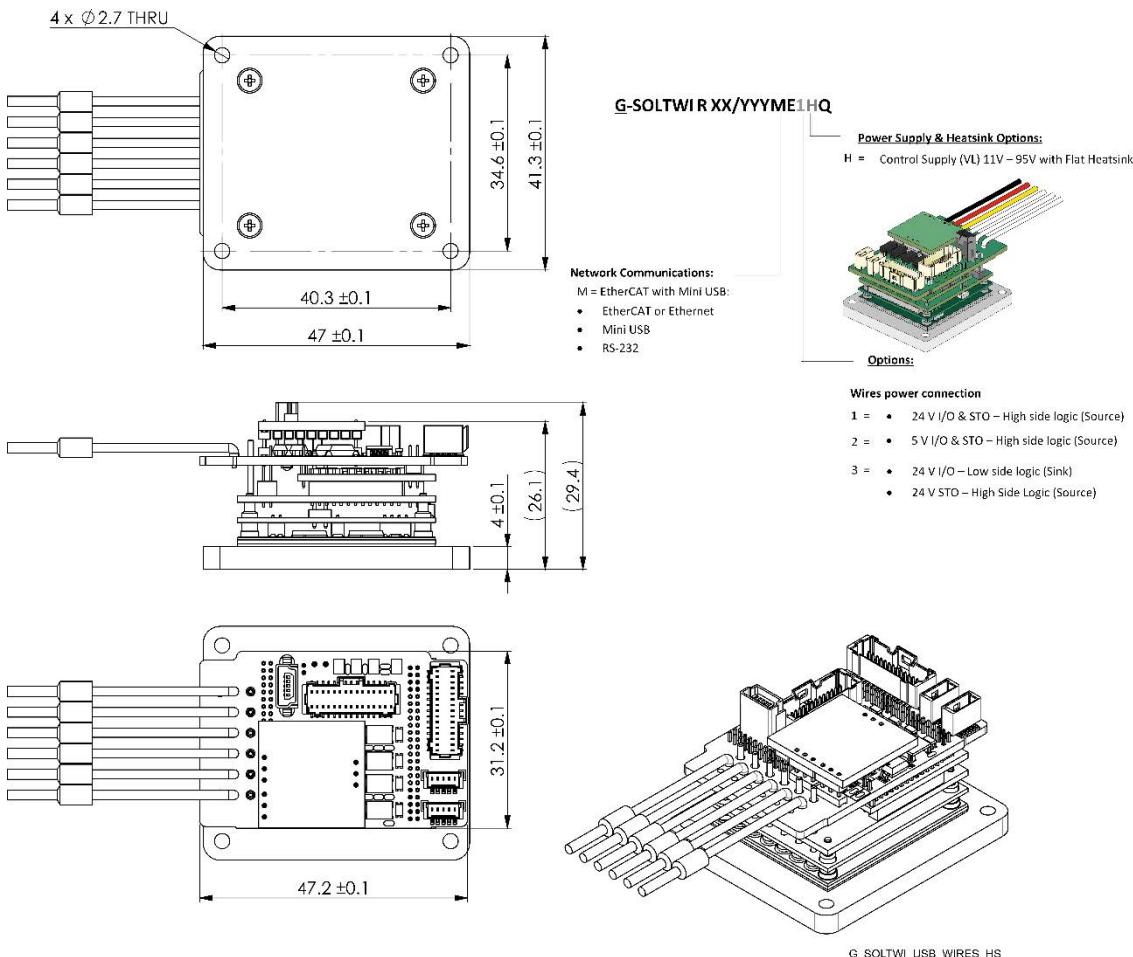


Figure 63: G-Solo Twitter –EtherCAT version (Option M) with wires to power supply and motor, and with Heat sink



10.4.2. Horizontal Power Connector G-SOLTWIRXX/YYYME1HQ

| Dimensions (mm (in)) | Weight g/oz |
|--|-------------|
| 47.2 x 41.3 x 29.4 (1.86" x 1.63" x 1.16") | 57.5 (2.03) |

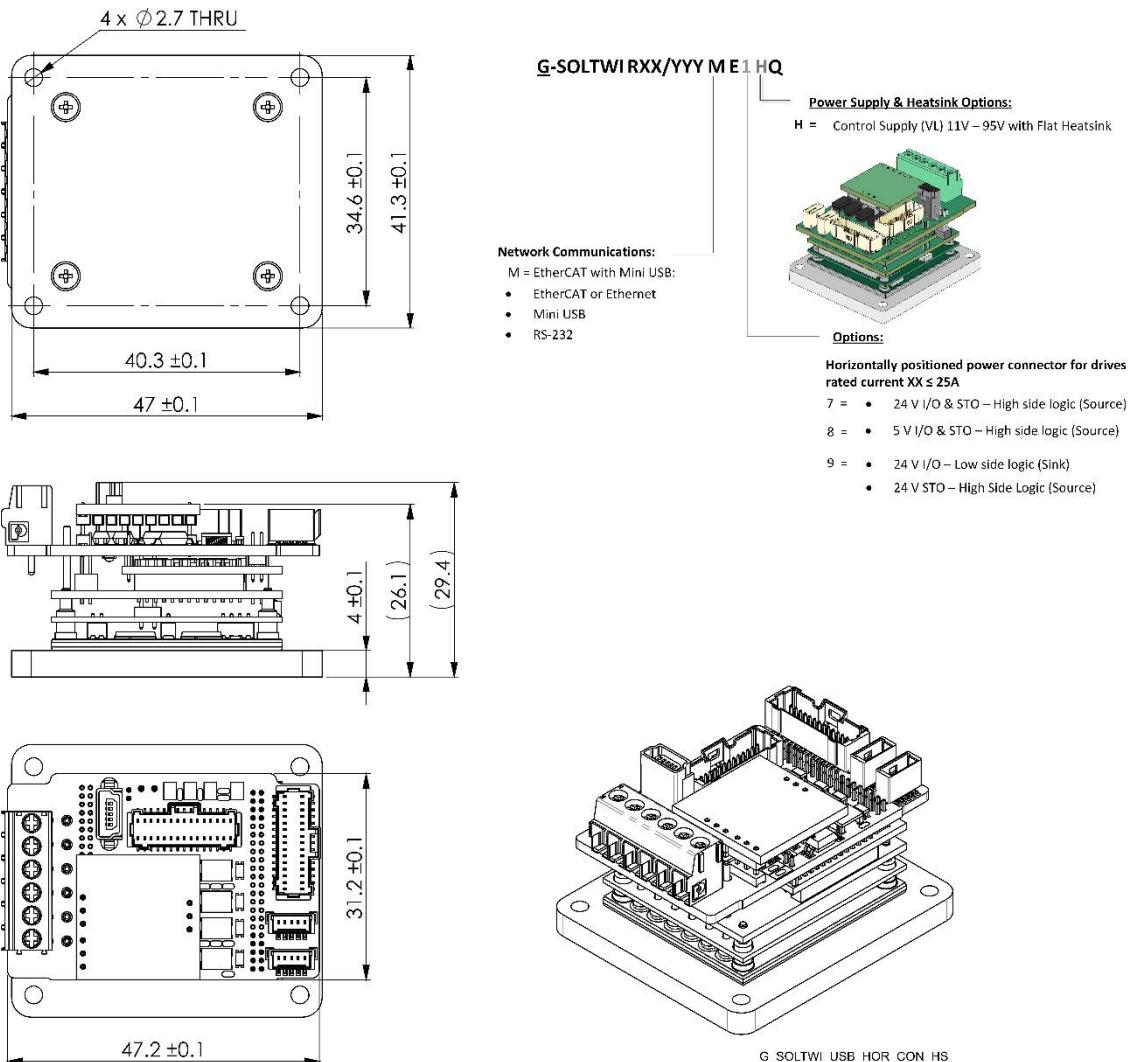


Figure 64: G-Solo Twitter –EtherCAT version (Option M) with Horizontal Phoenix connector and with Heat sink



10.4.3. Vertical Power Connector G-SOLTWIRXX/YYYME1HQ

| Dimensions (mm (in)) | Weight g/oz |
|--|-------------|
| 47.2 x 41.3 x 38.7 (1.86" x 1.63" x 1.52") | 60.0 (2.12) |

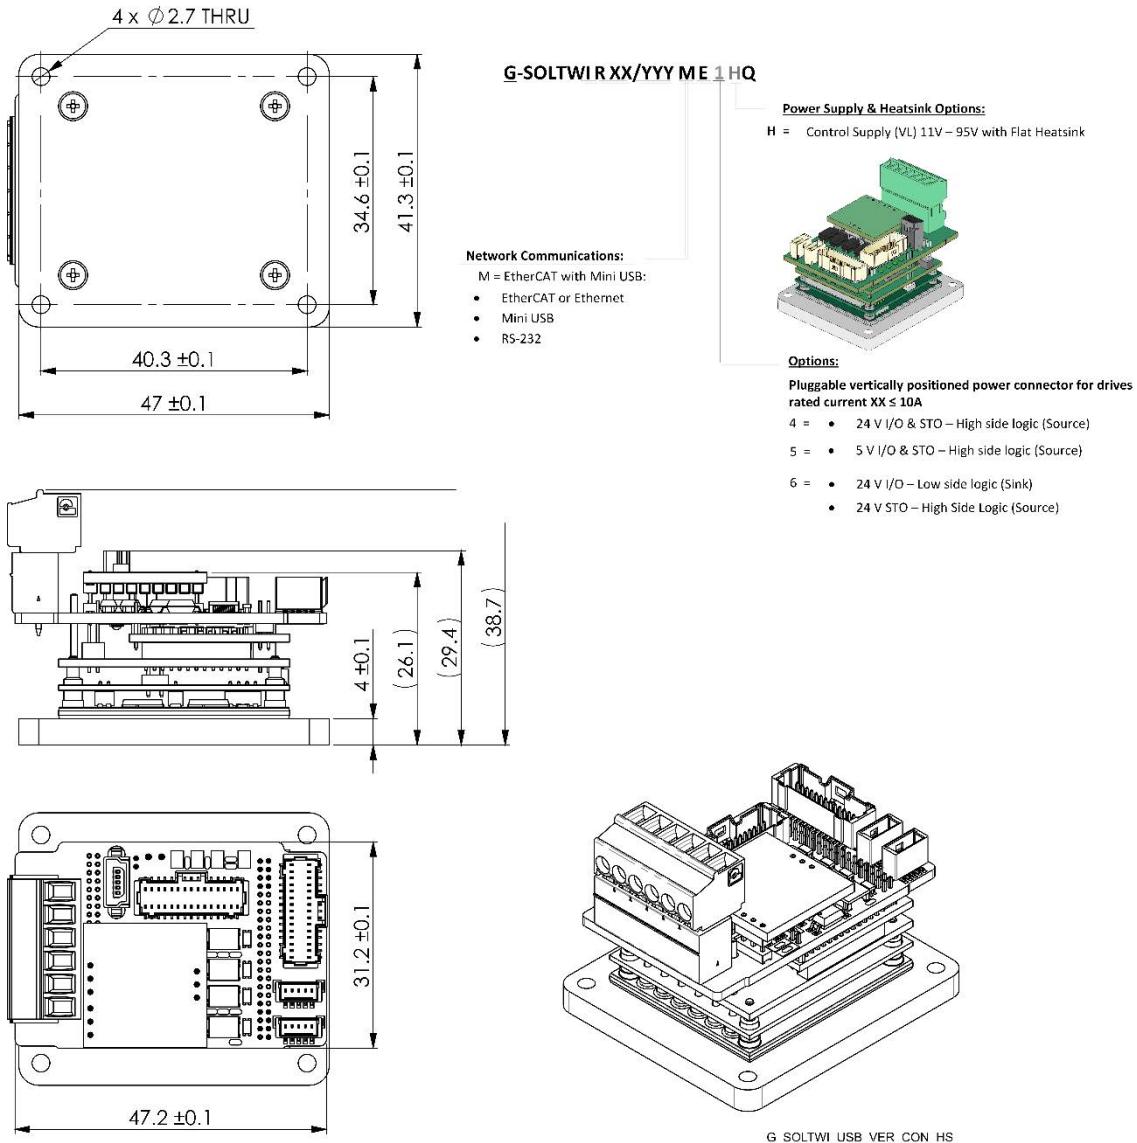


Figure 65: G-Solo Twitter –EtherCAT version (Option M) with Pluggable Vertical Pheonix connector and with Heat sink



10.5. CAN without Heatsink

10.5.1. Wires to Power Supply G-SOLTWIRXX/YYYSE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 47.2 x 30 x 19.3 mm (1.86" x 1.18" x 0.76") | 56.0 (1.97) |

G-SOLTWIR XX/YYY SE1SQ

Network Communications:

S = Standard:

- CANopen
- RS-232

Power Supply & Heatsink Options:

S = Control Supply (VL) 11V – 95V
Blank = VL <40V

Options:

Wires power connection

1 = • 24 V I/O & STO – High side logic (Source)
2 = • 5 V I/O & STO – High side logic (Source)
3 = • 24 V I/O – Low side logic (Sink)
• 24 V STO – High Side Logic (Source)

G-SOLTWI-143D

Figure 66: G-Solo Twitter –CAN version with wires to power supply and motor



10.5.2. Horizontal Power Supply G-SOLTWIRXX/YYYSE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.1 x 30 x 22.1 mm (1.89" x 1.18" x 0.87") | 32.5 (1.14) |

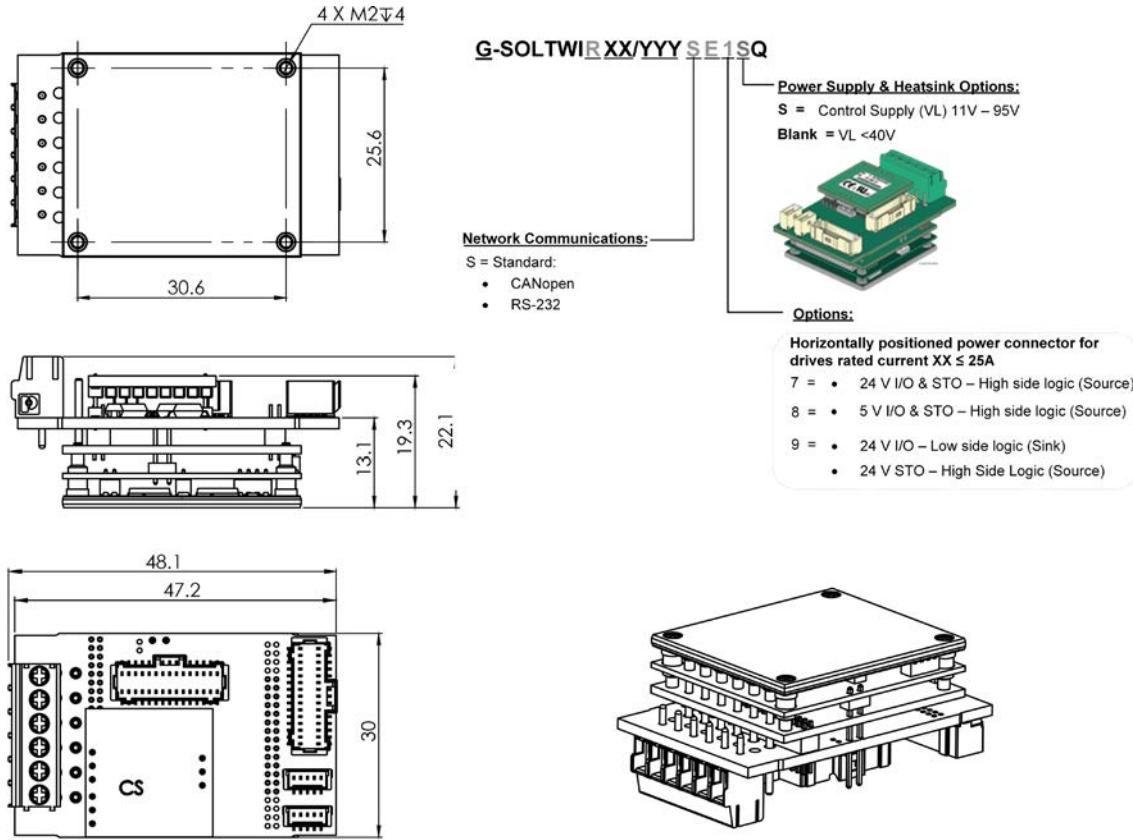


Figure 67: G-Solo Twitter –CAN version with horizontal power connector



10.5.3. Vertical Power Supply G-SOLTWIRXX/YYYSE1SQ

| Dimensions (mm (in)) | Weight g/oz |
|--|-------------|
| 48.3 x 30 x 31.8 mm (1.9" x 1.18" x 1.25") | 35.0 (1.23) |

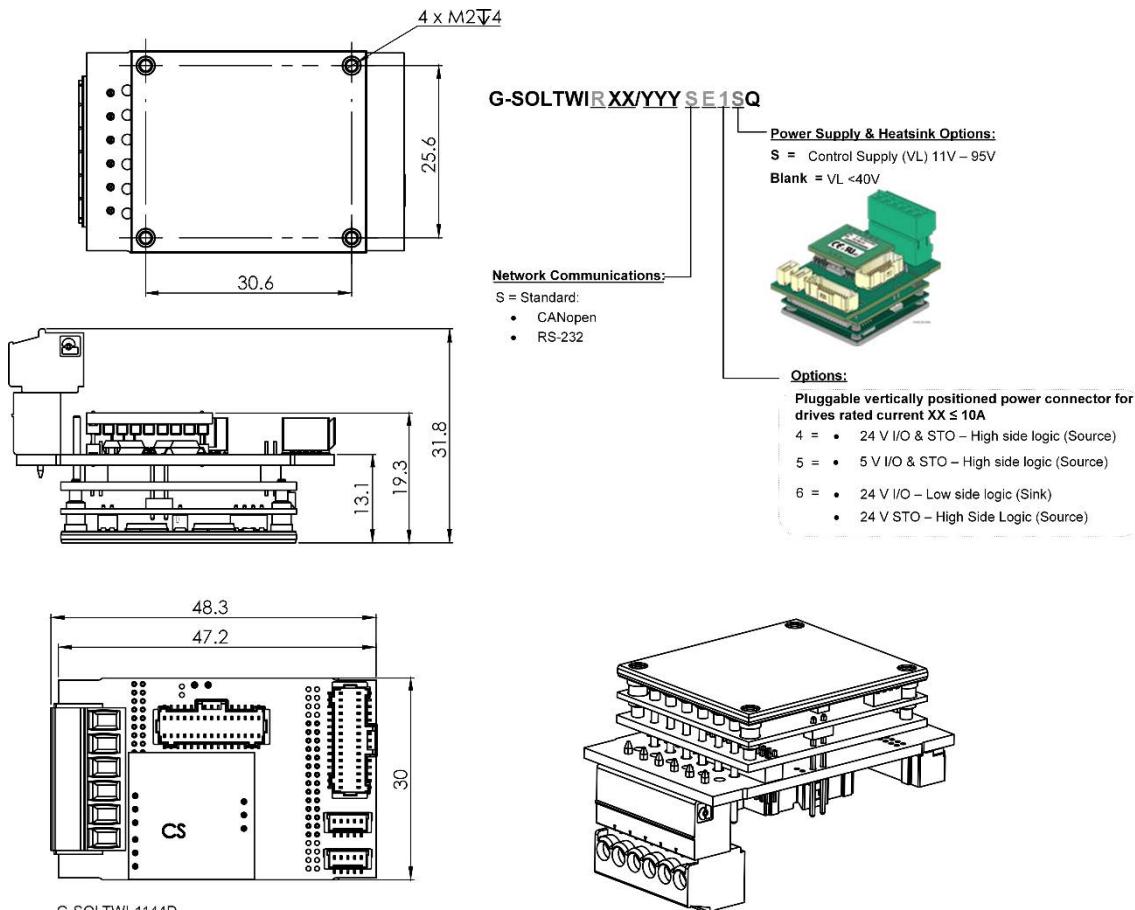


Figure 68: G-Solo Twitter –CAN version with vertical power connector



10.6. CAN with Heatsink

10.6.1. Wires to Power Supply G-SOLTWIRXX/YYYSE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 47.6 x 41.3 x 23.3 mm (1.87" x 1.63" x 0.92") | 77.0 (2.72) |

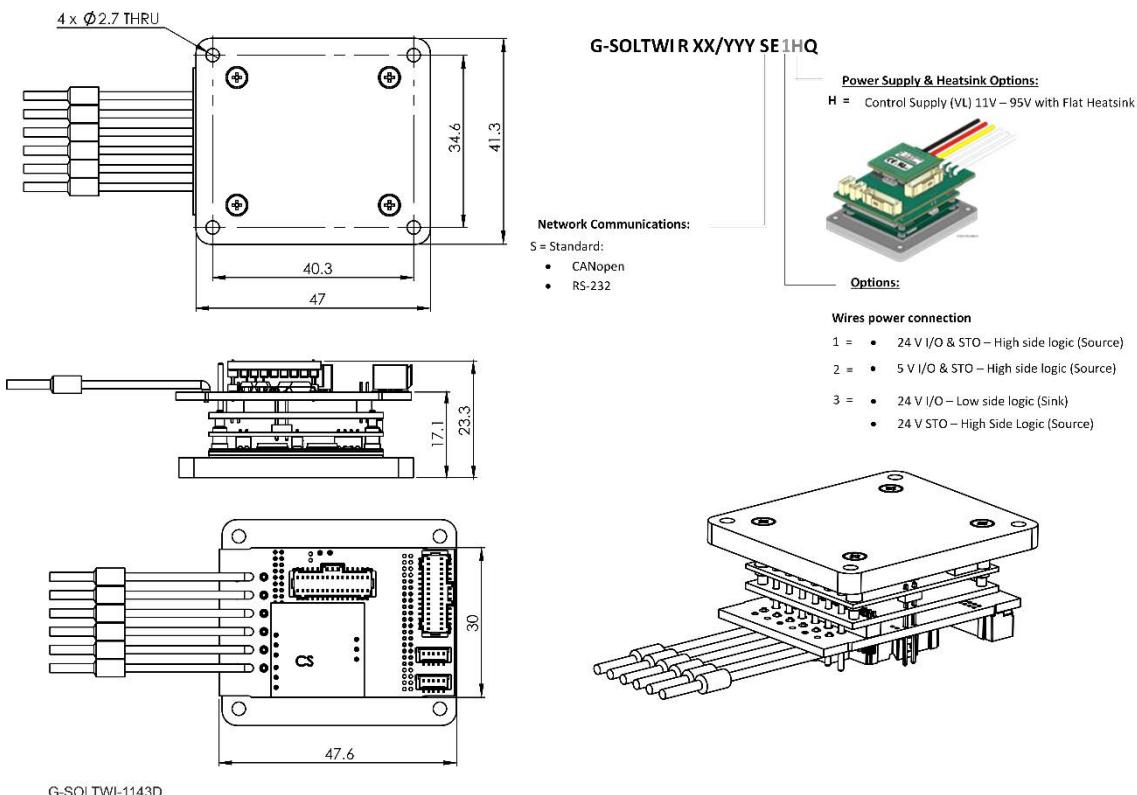


Figure 69: G-Solo Twitter –CAN version with wires to power supply and motor



10.6.2. Horizontal Power Connector G-SOLTWIRXX/YYYSE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.5 x 41.3 x 26.1 mm (1.91" x 1.63" x 1.03") | 53.5 (1.89) |

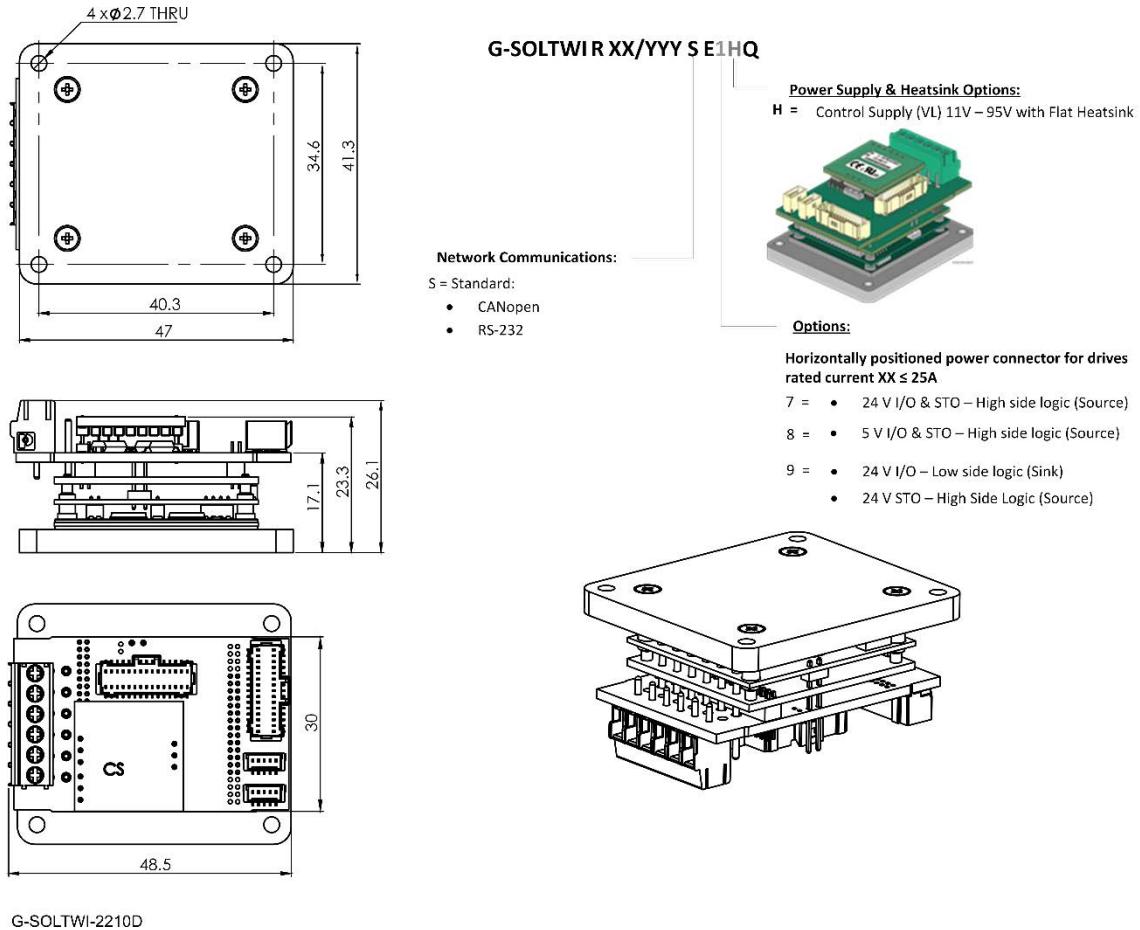


Figure 70: G-Solo Twitter –CAN version with horizontal power connector



10.6.3. Vertical Power Supply G-SOLTWIRXX/YYYSE1HQ

| Dimensions (mm (in)) | Weight g/oz |
|---|-------------|
| 48.7 x 41.3 x 35.8 mm (1.92" x 1.63" x 1.41") | 56.0 (1.98) |

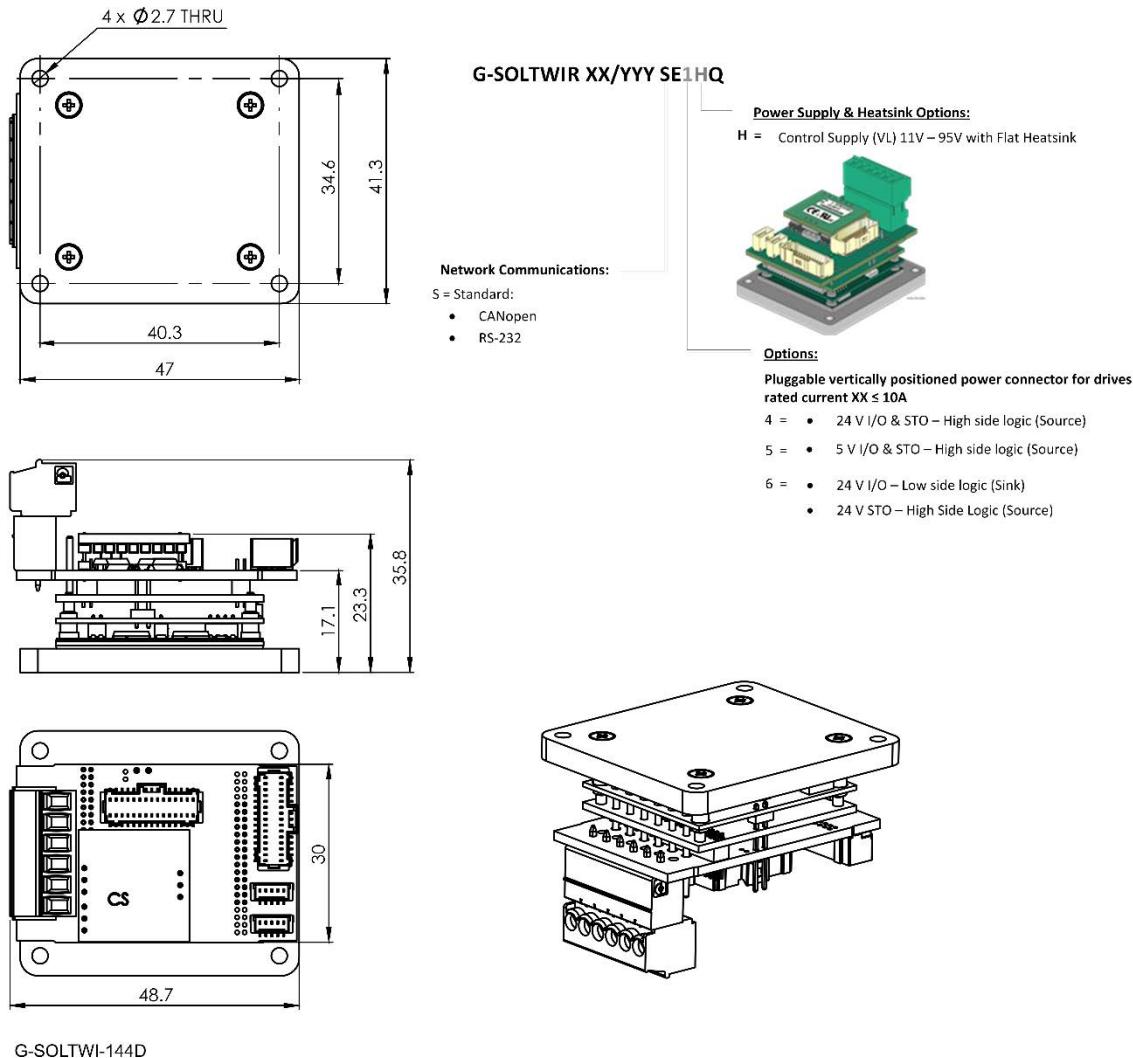


Figure 71: G-Solo Twitter –CAN version with vertical power connector



Chapter 11: Accessories

The model Power Supply & Heatsink Option: **H** is integrated with the Flat Heatsink P/N G-TWIHSFLAT01.

The following describes the accessory kits available for the Gold Solo Twitter.

| Part Number | Description |
|------------------|------------------------------|
| CBL-GSOLTWIKIT03 | Kit cable for EtherCAT model |
| CBL-GSOLTWIKIT04 | Kit cable for CAN model |
| CBL-GSOLTWIKIT05 | CONNECTORS AND PINS KIT |
| G-TWIHSFLAT01 | Flat Heat-Sink Kit |
| G-TWIHSFINS01 | FINS Heat-Sink Kit |

A specific Crimping Tool (available for purchase from Elmo) is required to mount extra connecting pins on the wires. A number of wires are provided in the kit as pre-crimped for convenience:



Crimping Tool

Molex P/N 63819-1500

Elmo P/N TOOL-P000040



Pins for Single Row Connector

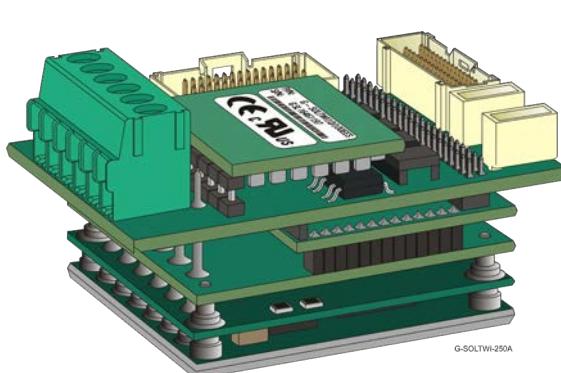
MOLEX P/N 501334-0100

Pins for Dual Row Connector


MOLEX P/N 501193-3000




Optionally, the Gold Solo Twitter has two standard heat-sink configurations which are obtainable separately as kit accessories from Elmo:



Default Heat Sink

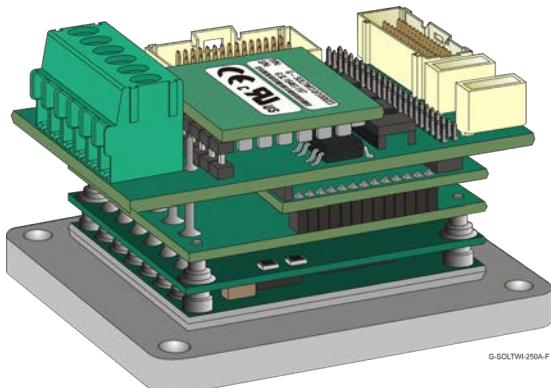

Flat Heat Sink (P/N G-TWIHSFLAT01)

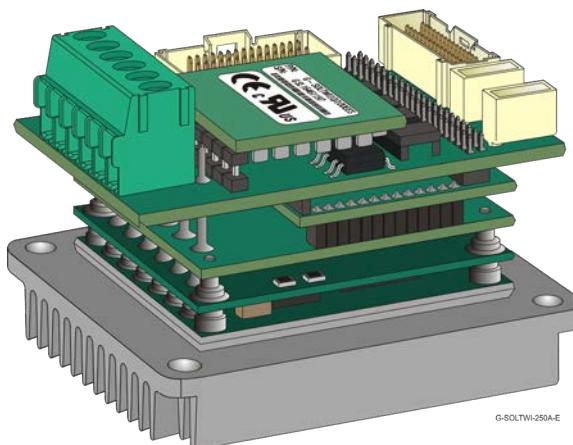

Fins Heat Sink (P/N G-TWIHSFINS01)



11.1. Accessories Heat Sink Dimensions

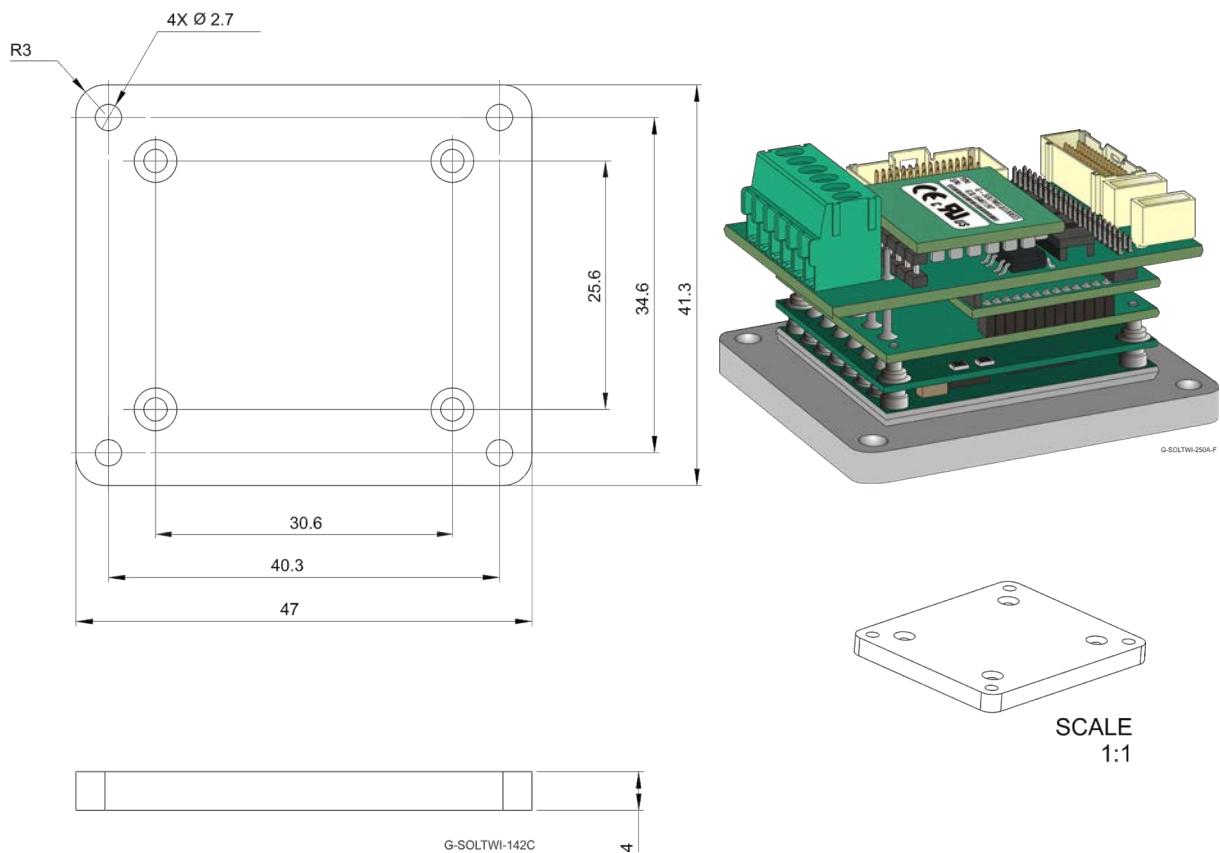


Figure 72: G-Solo Twitter – Flat Heat Sink (P/N G-TWIHSFLAT01) Dimensions

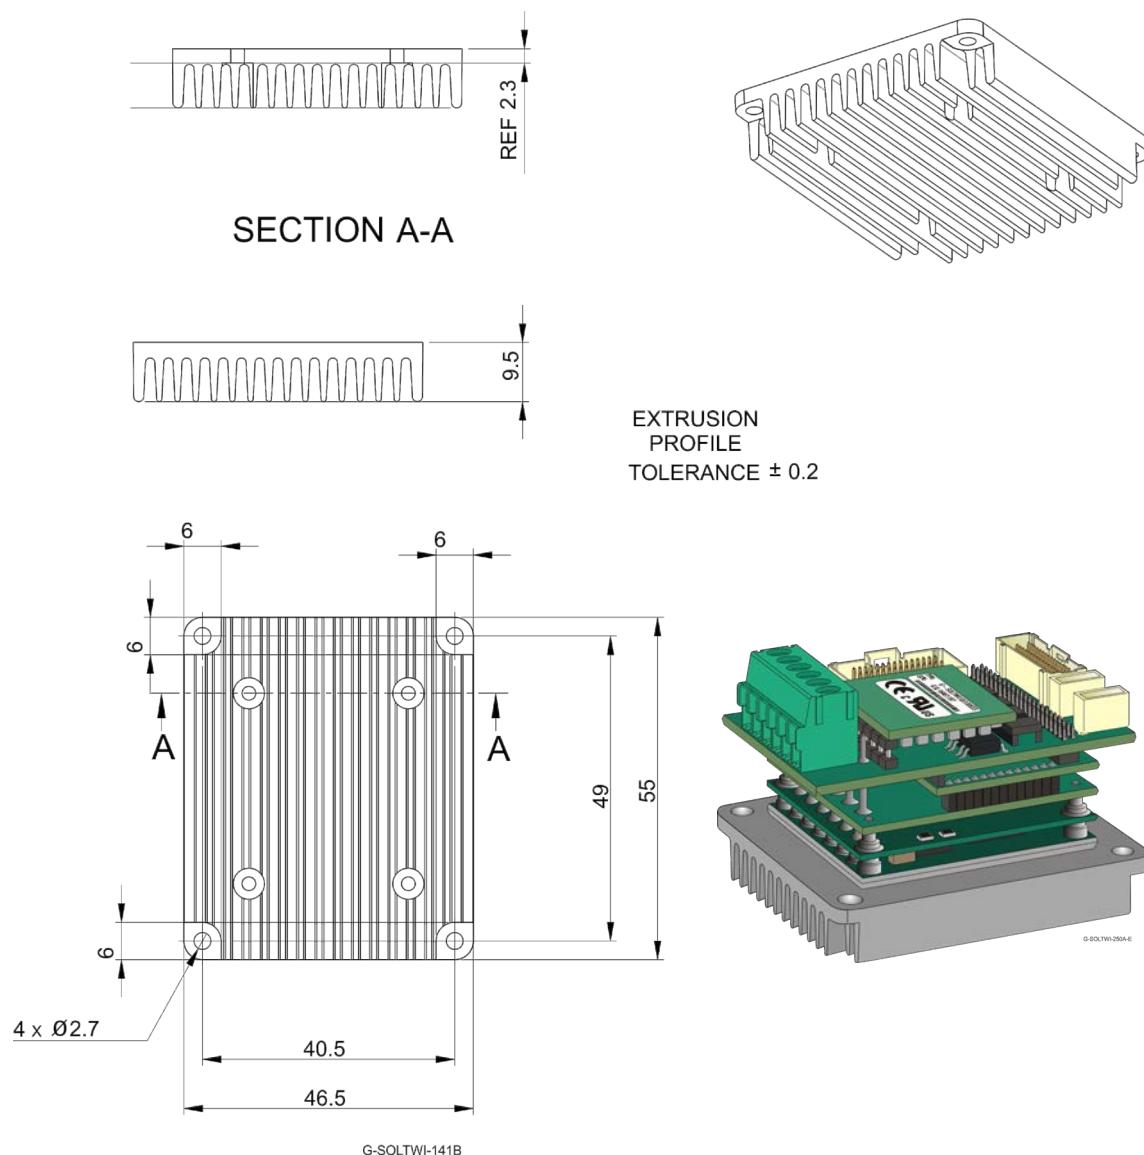


Figure 73: G-Solo Twitter – Fins Heat Sink (P/N G-TWIHSFINS01)

Inspiring Motion

Since 1988

For a list of Elmo's branches, and your local area office, refer to the Elmo site www.elmomc.com

