


# How does CAN data flow?



Activate Windows  
Go to Settings to activate Windows.

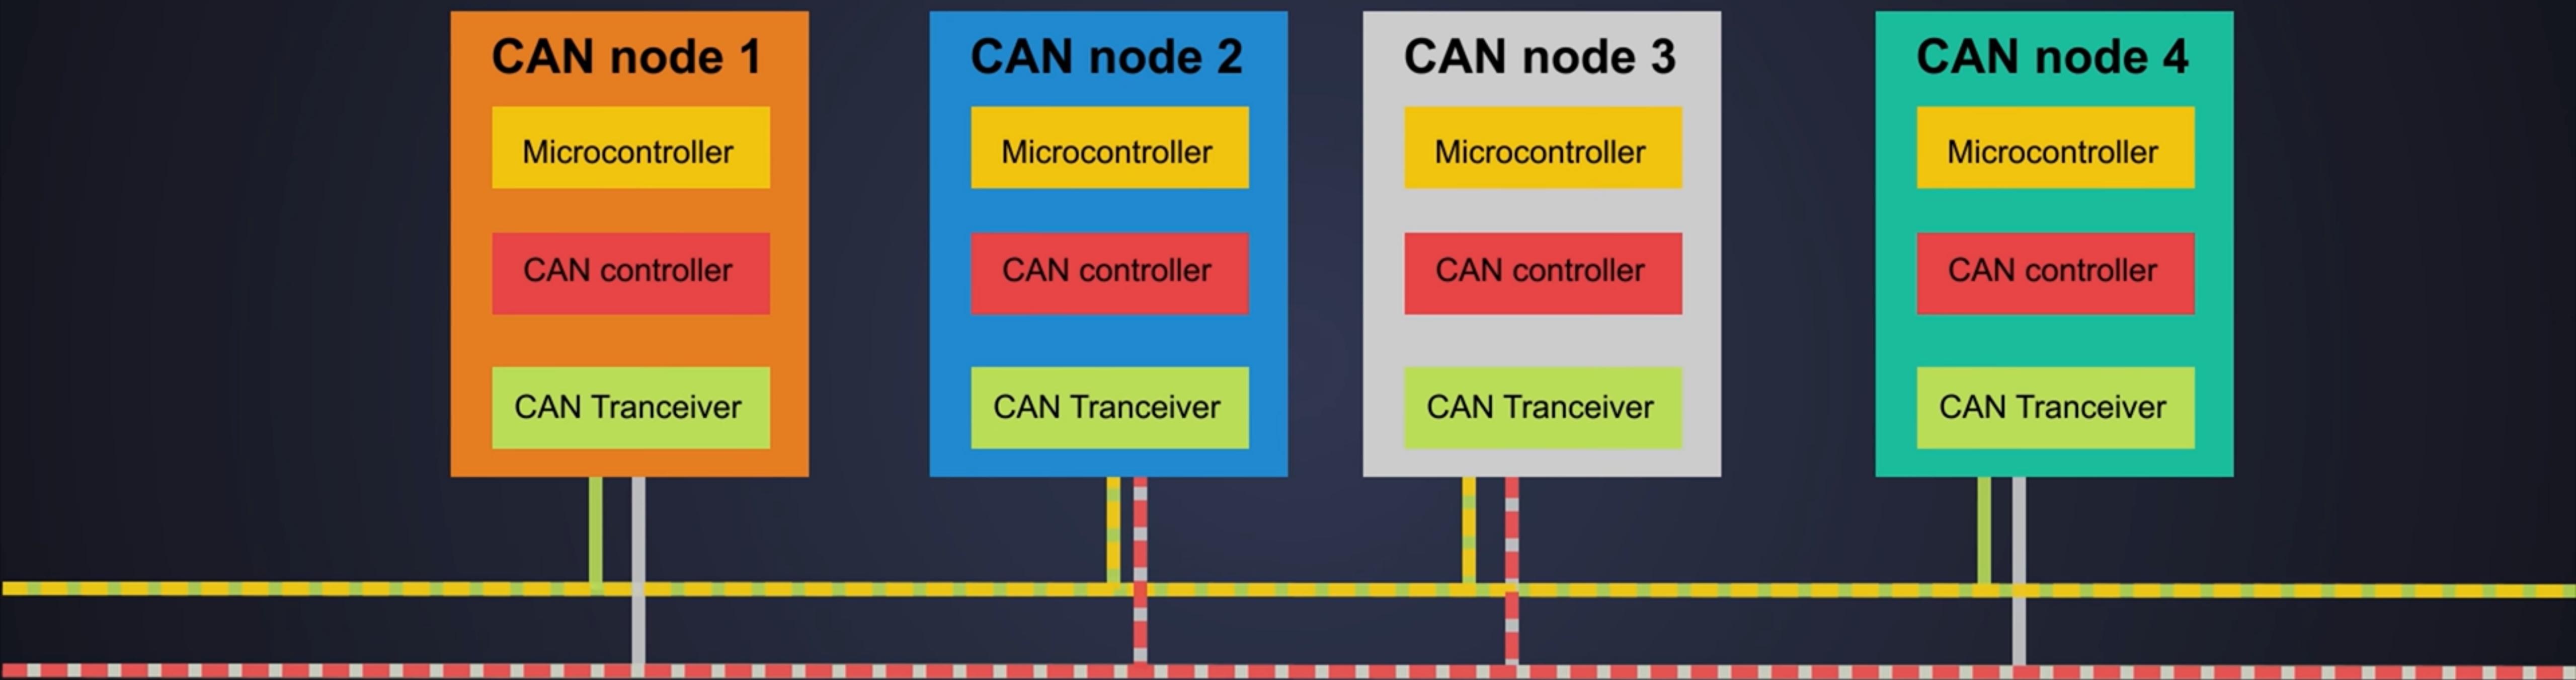

# CAN node 1


Microcontroller

CAN controller

CAN Tranceiver

Activate Windows  
Go to Settings to activate Windows.



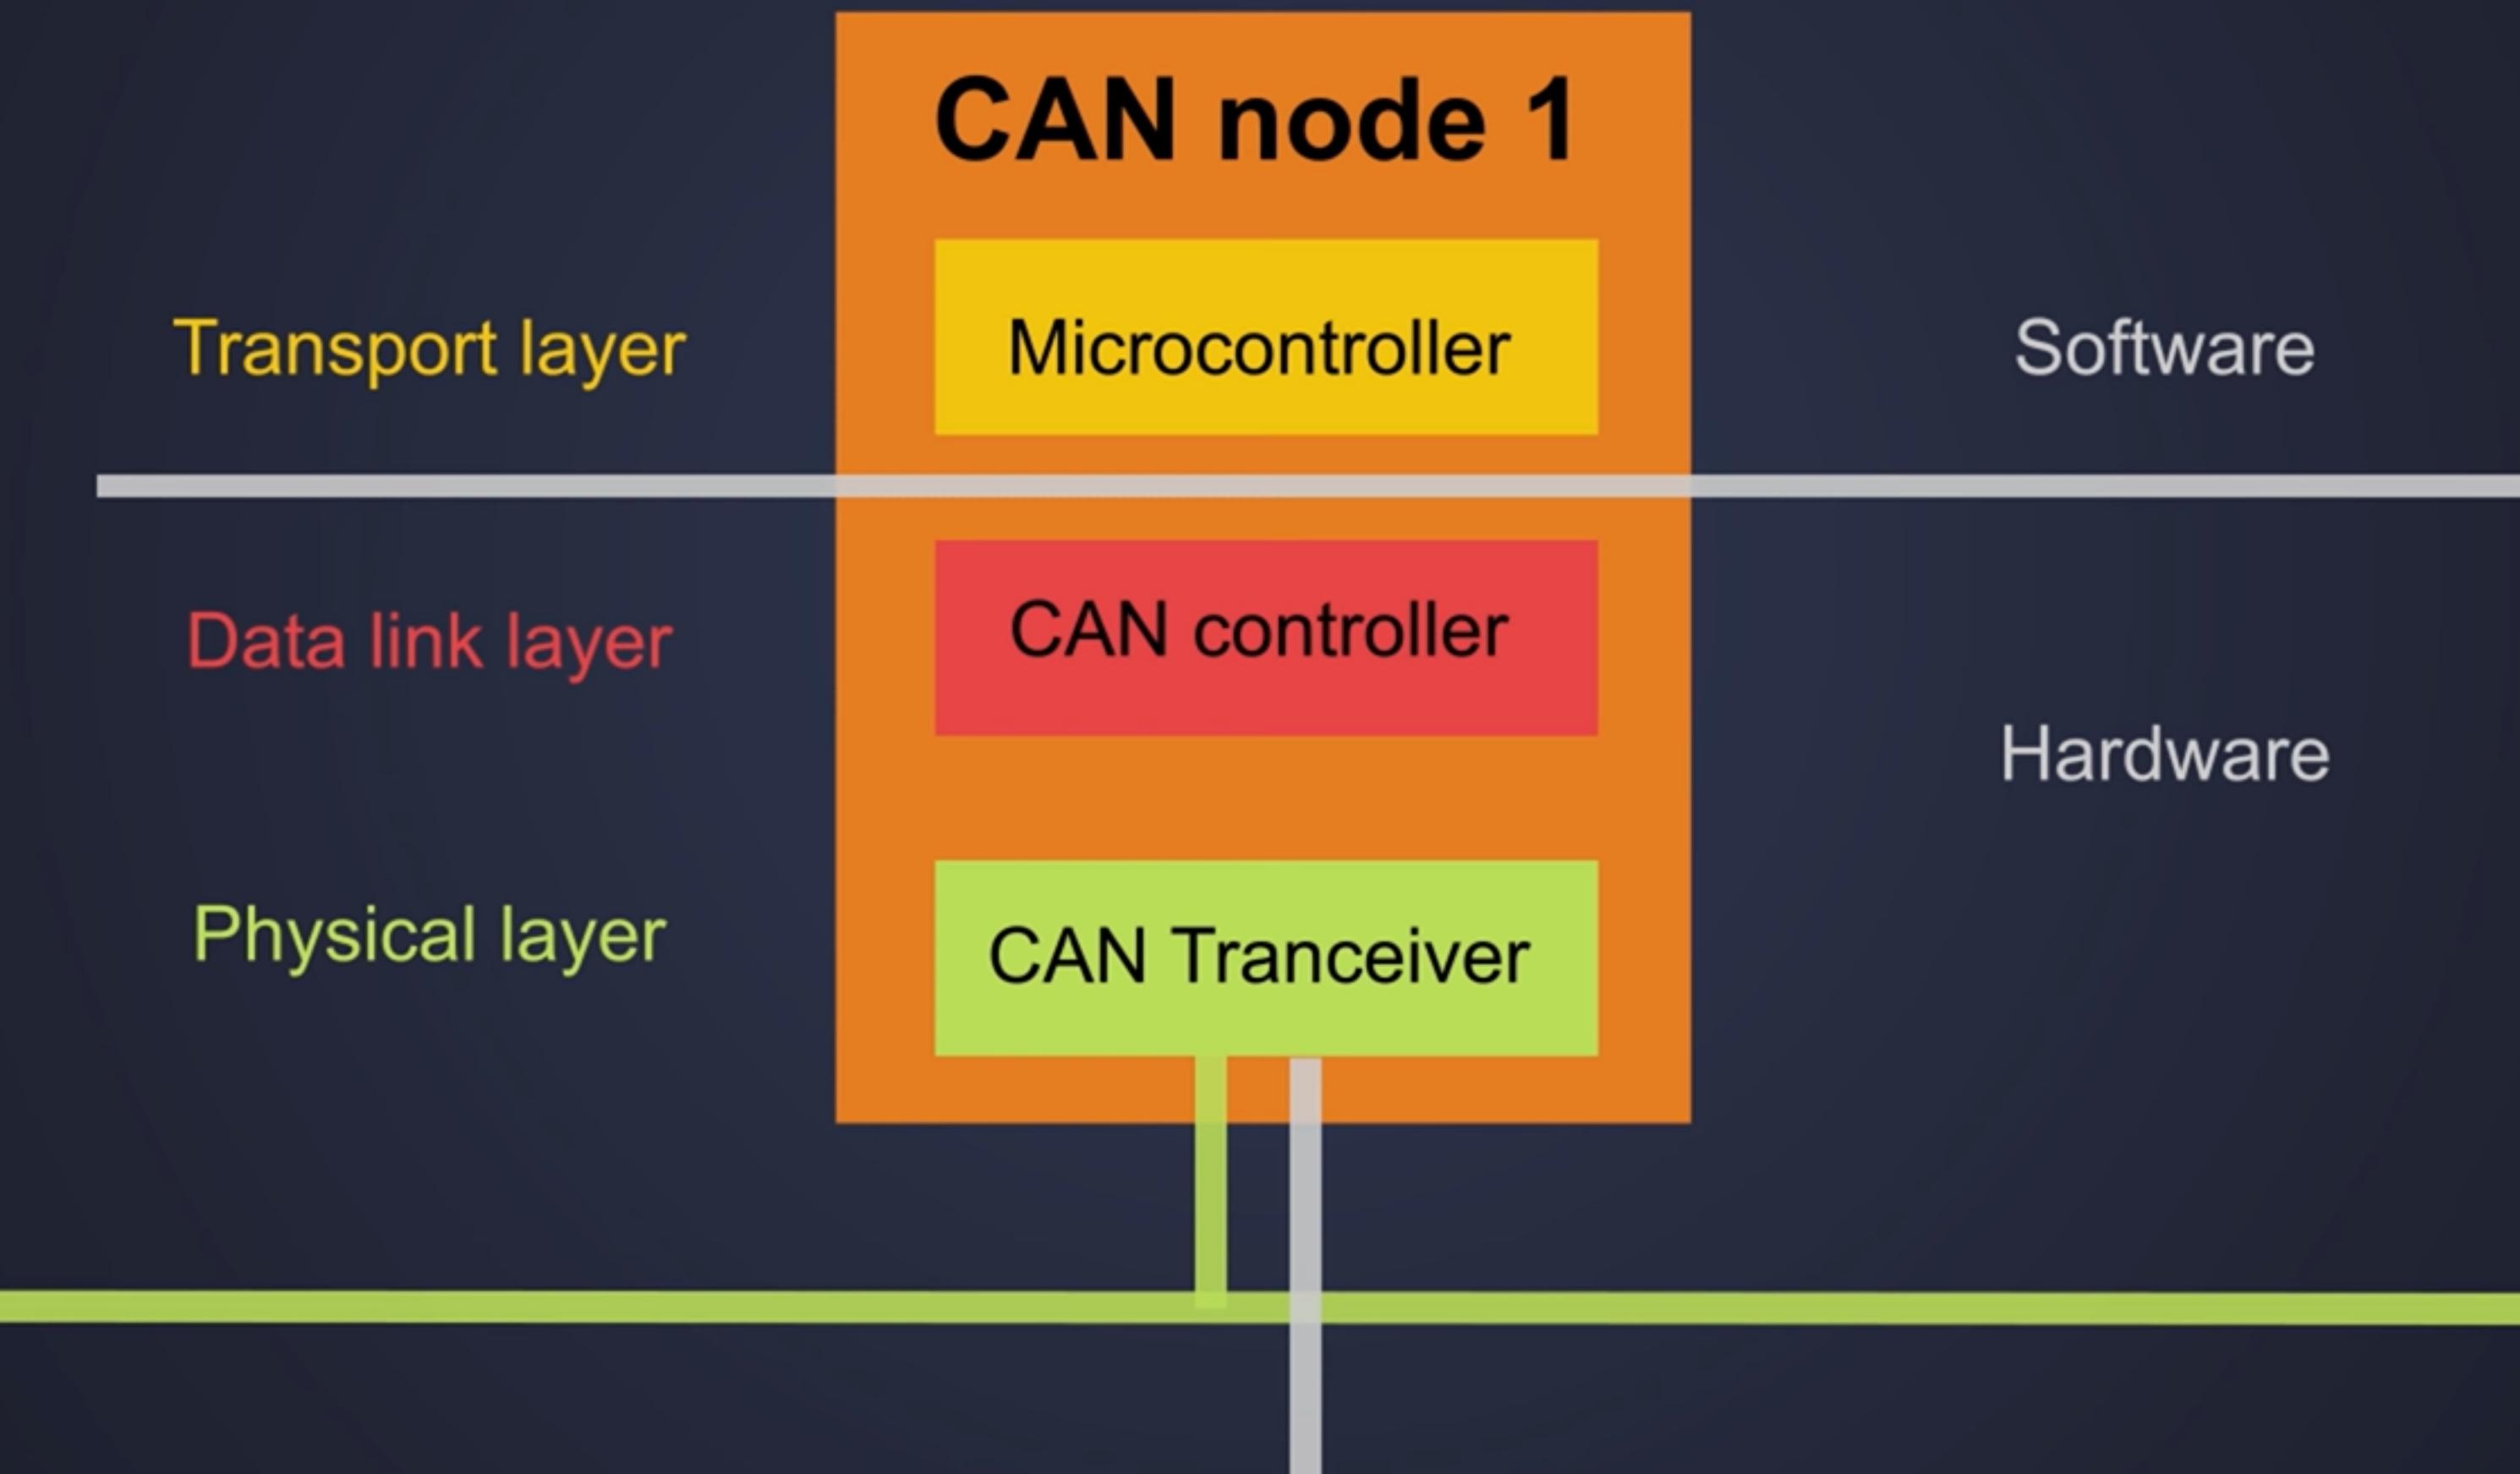

Activate Windows

Go to Settings to activate Windows.



## CAN node

Microcontroller


CAN controller


CAN Tranceiver

Hey, we need to send a message.  
Prepare yourself with a baud rate  
of 1 Mbps

Activate Windows


Go to Settings to activate Windows.

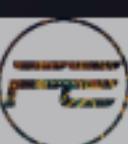

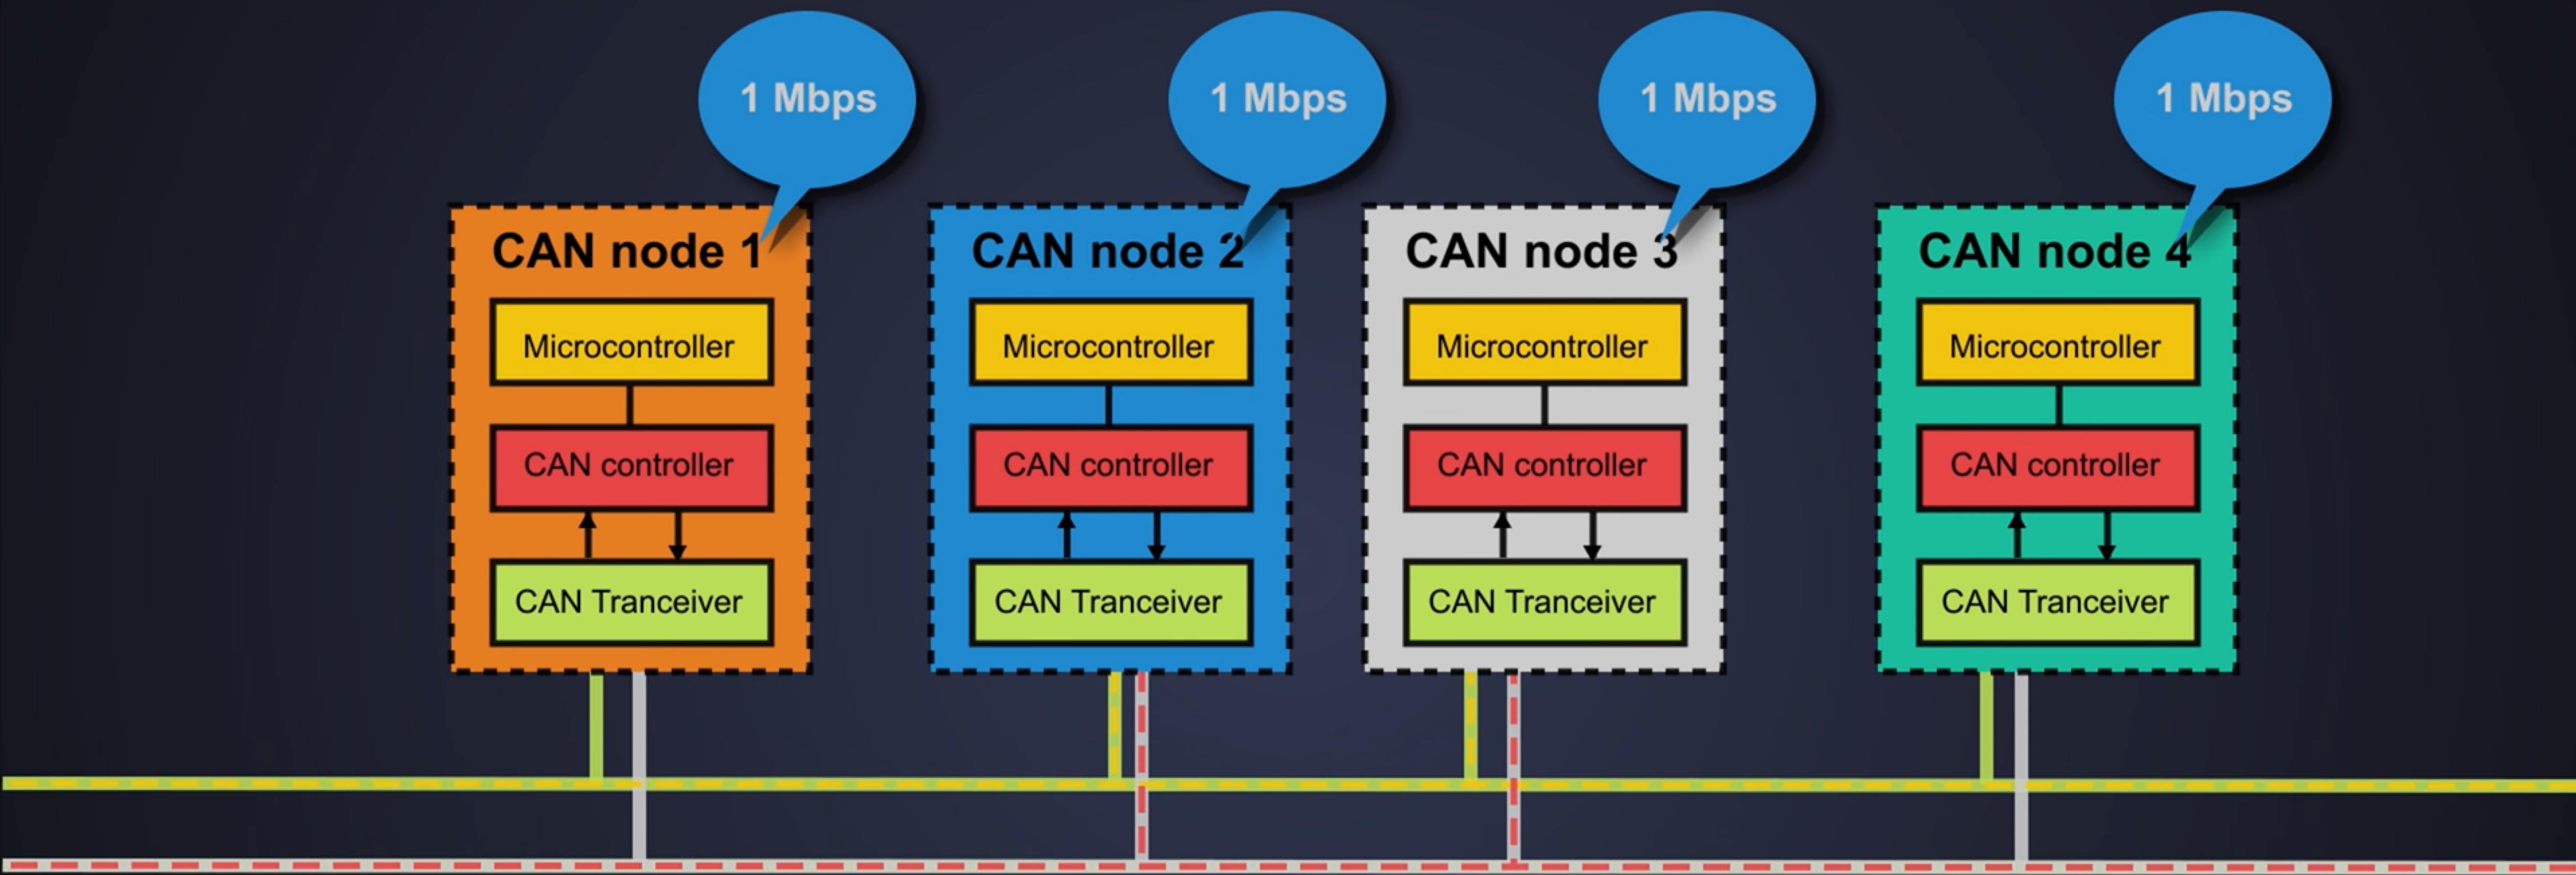


Activate Windows  
Go to Settings to activate Windows.



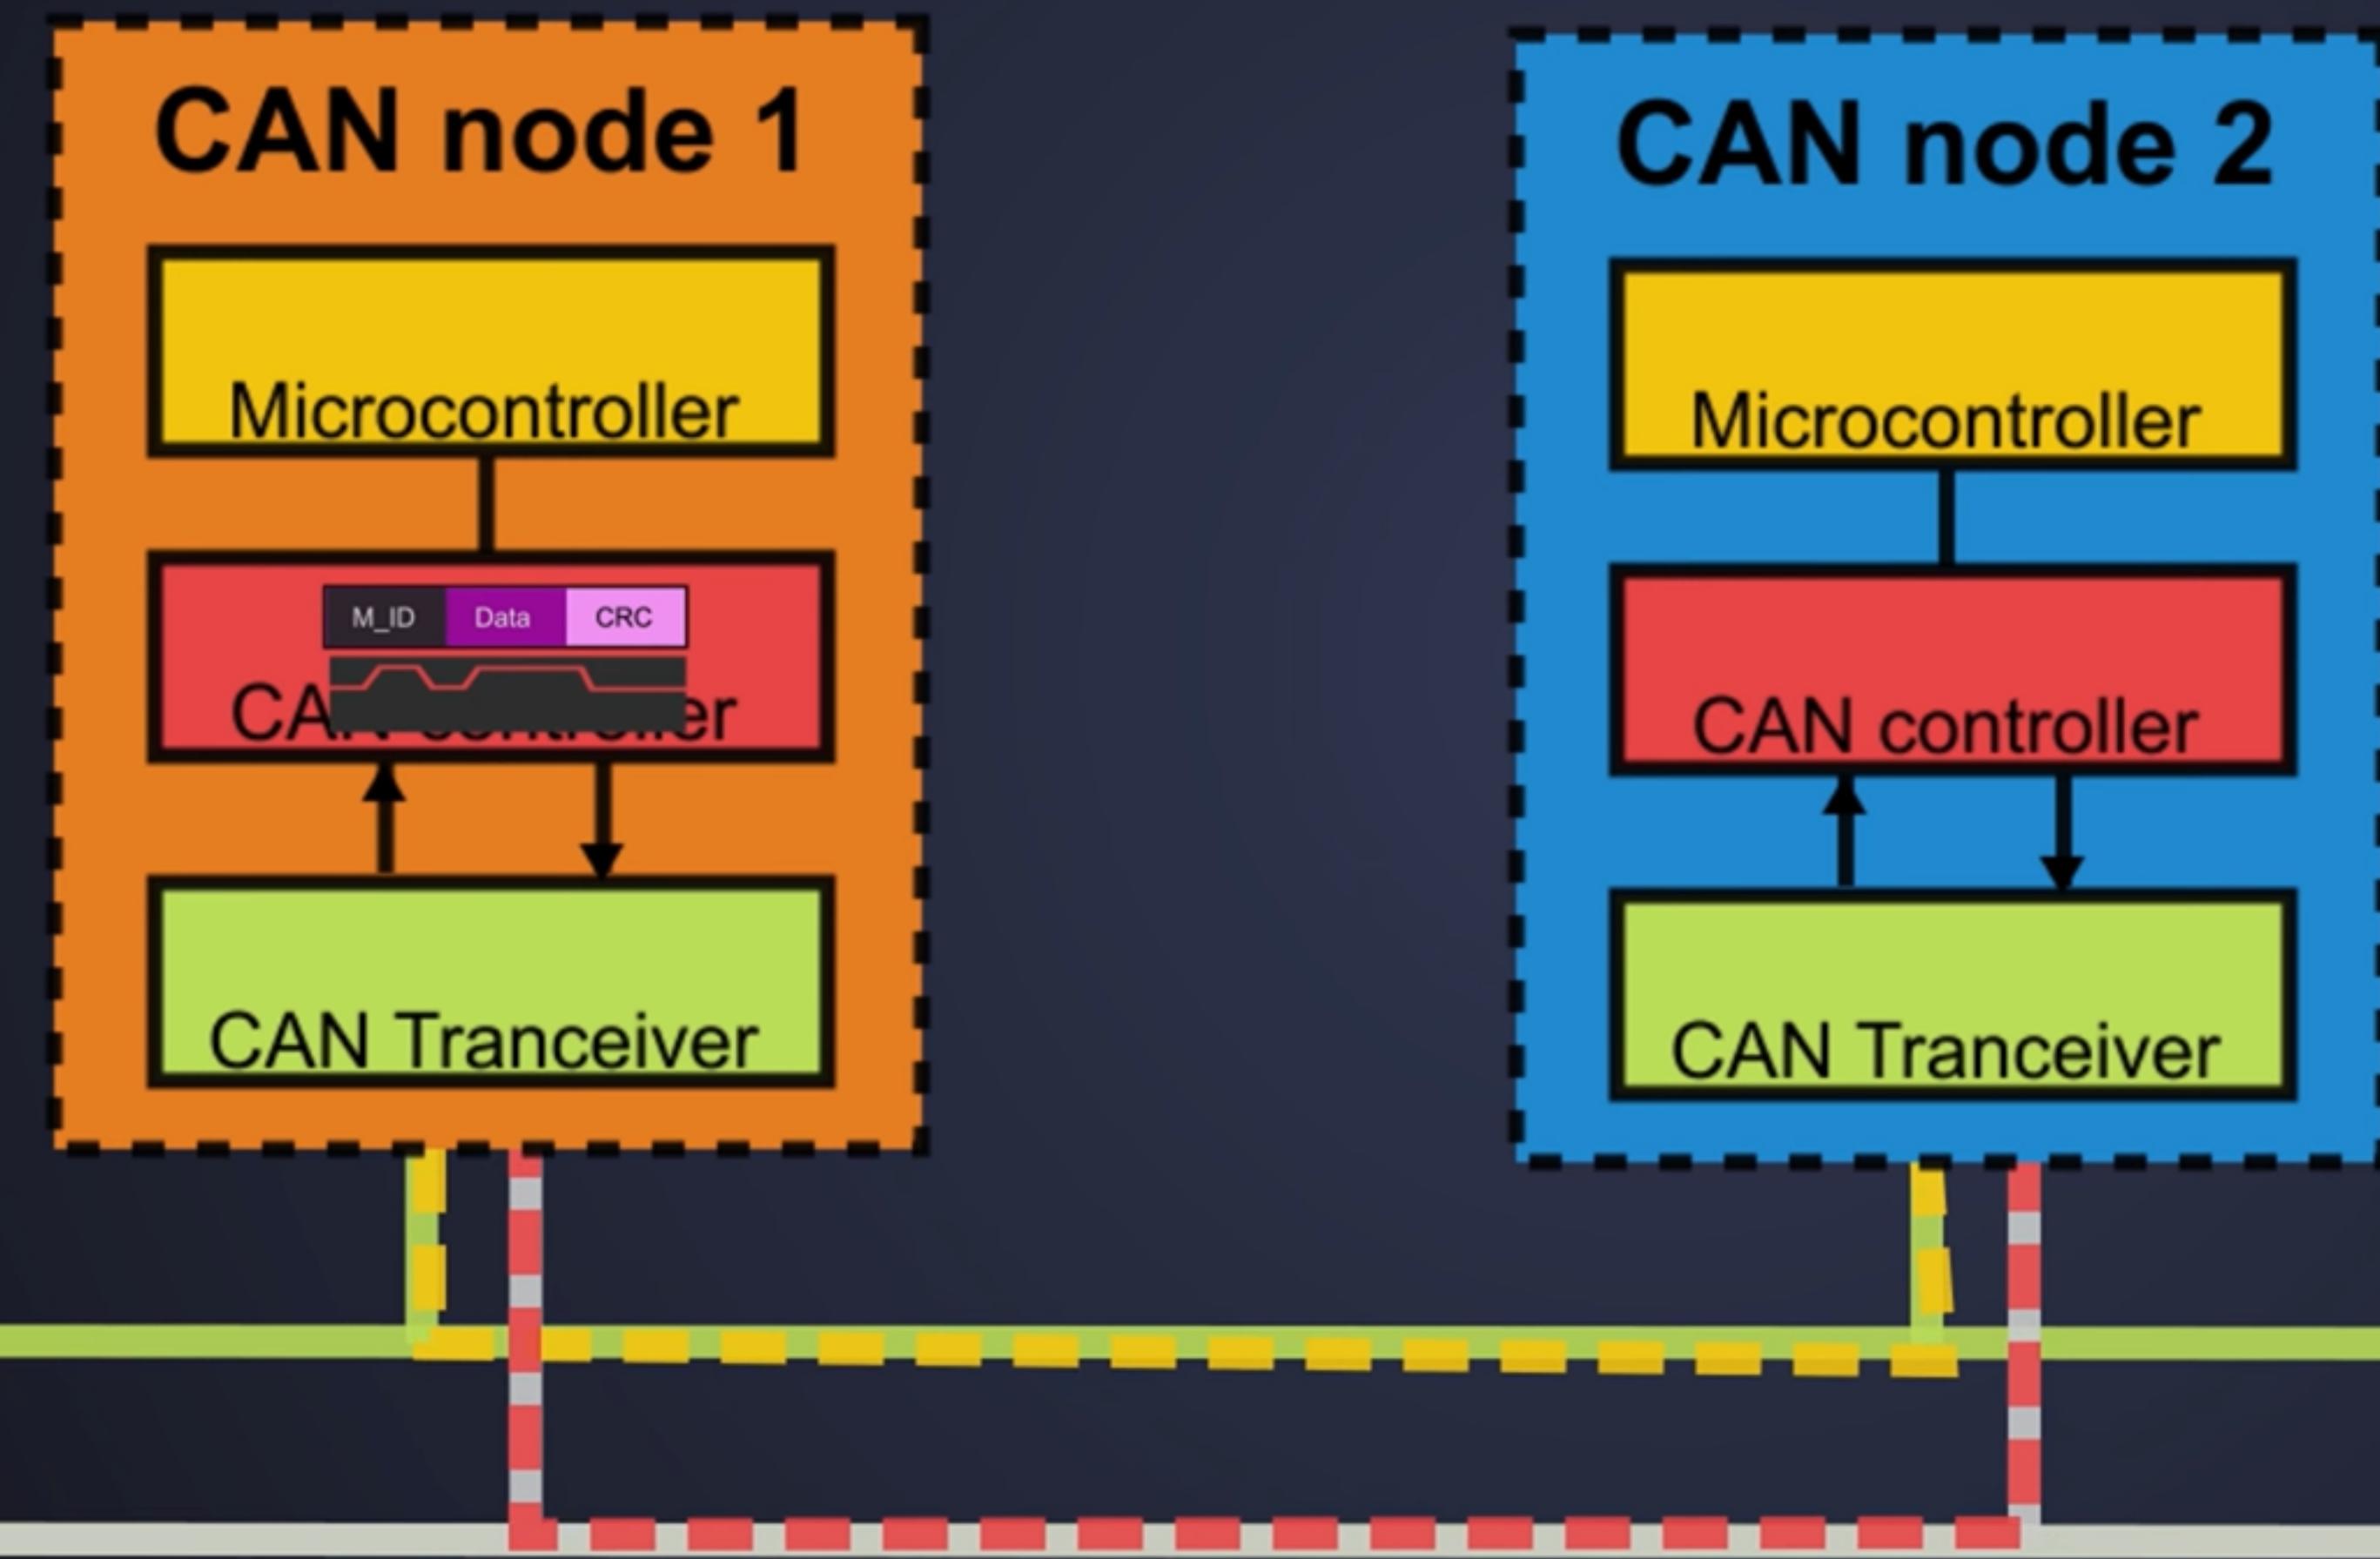


Activate Windows  
Go to Settings to activate Windows.



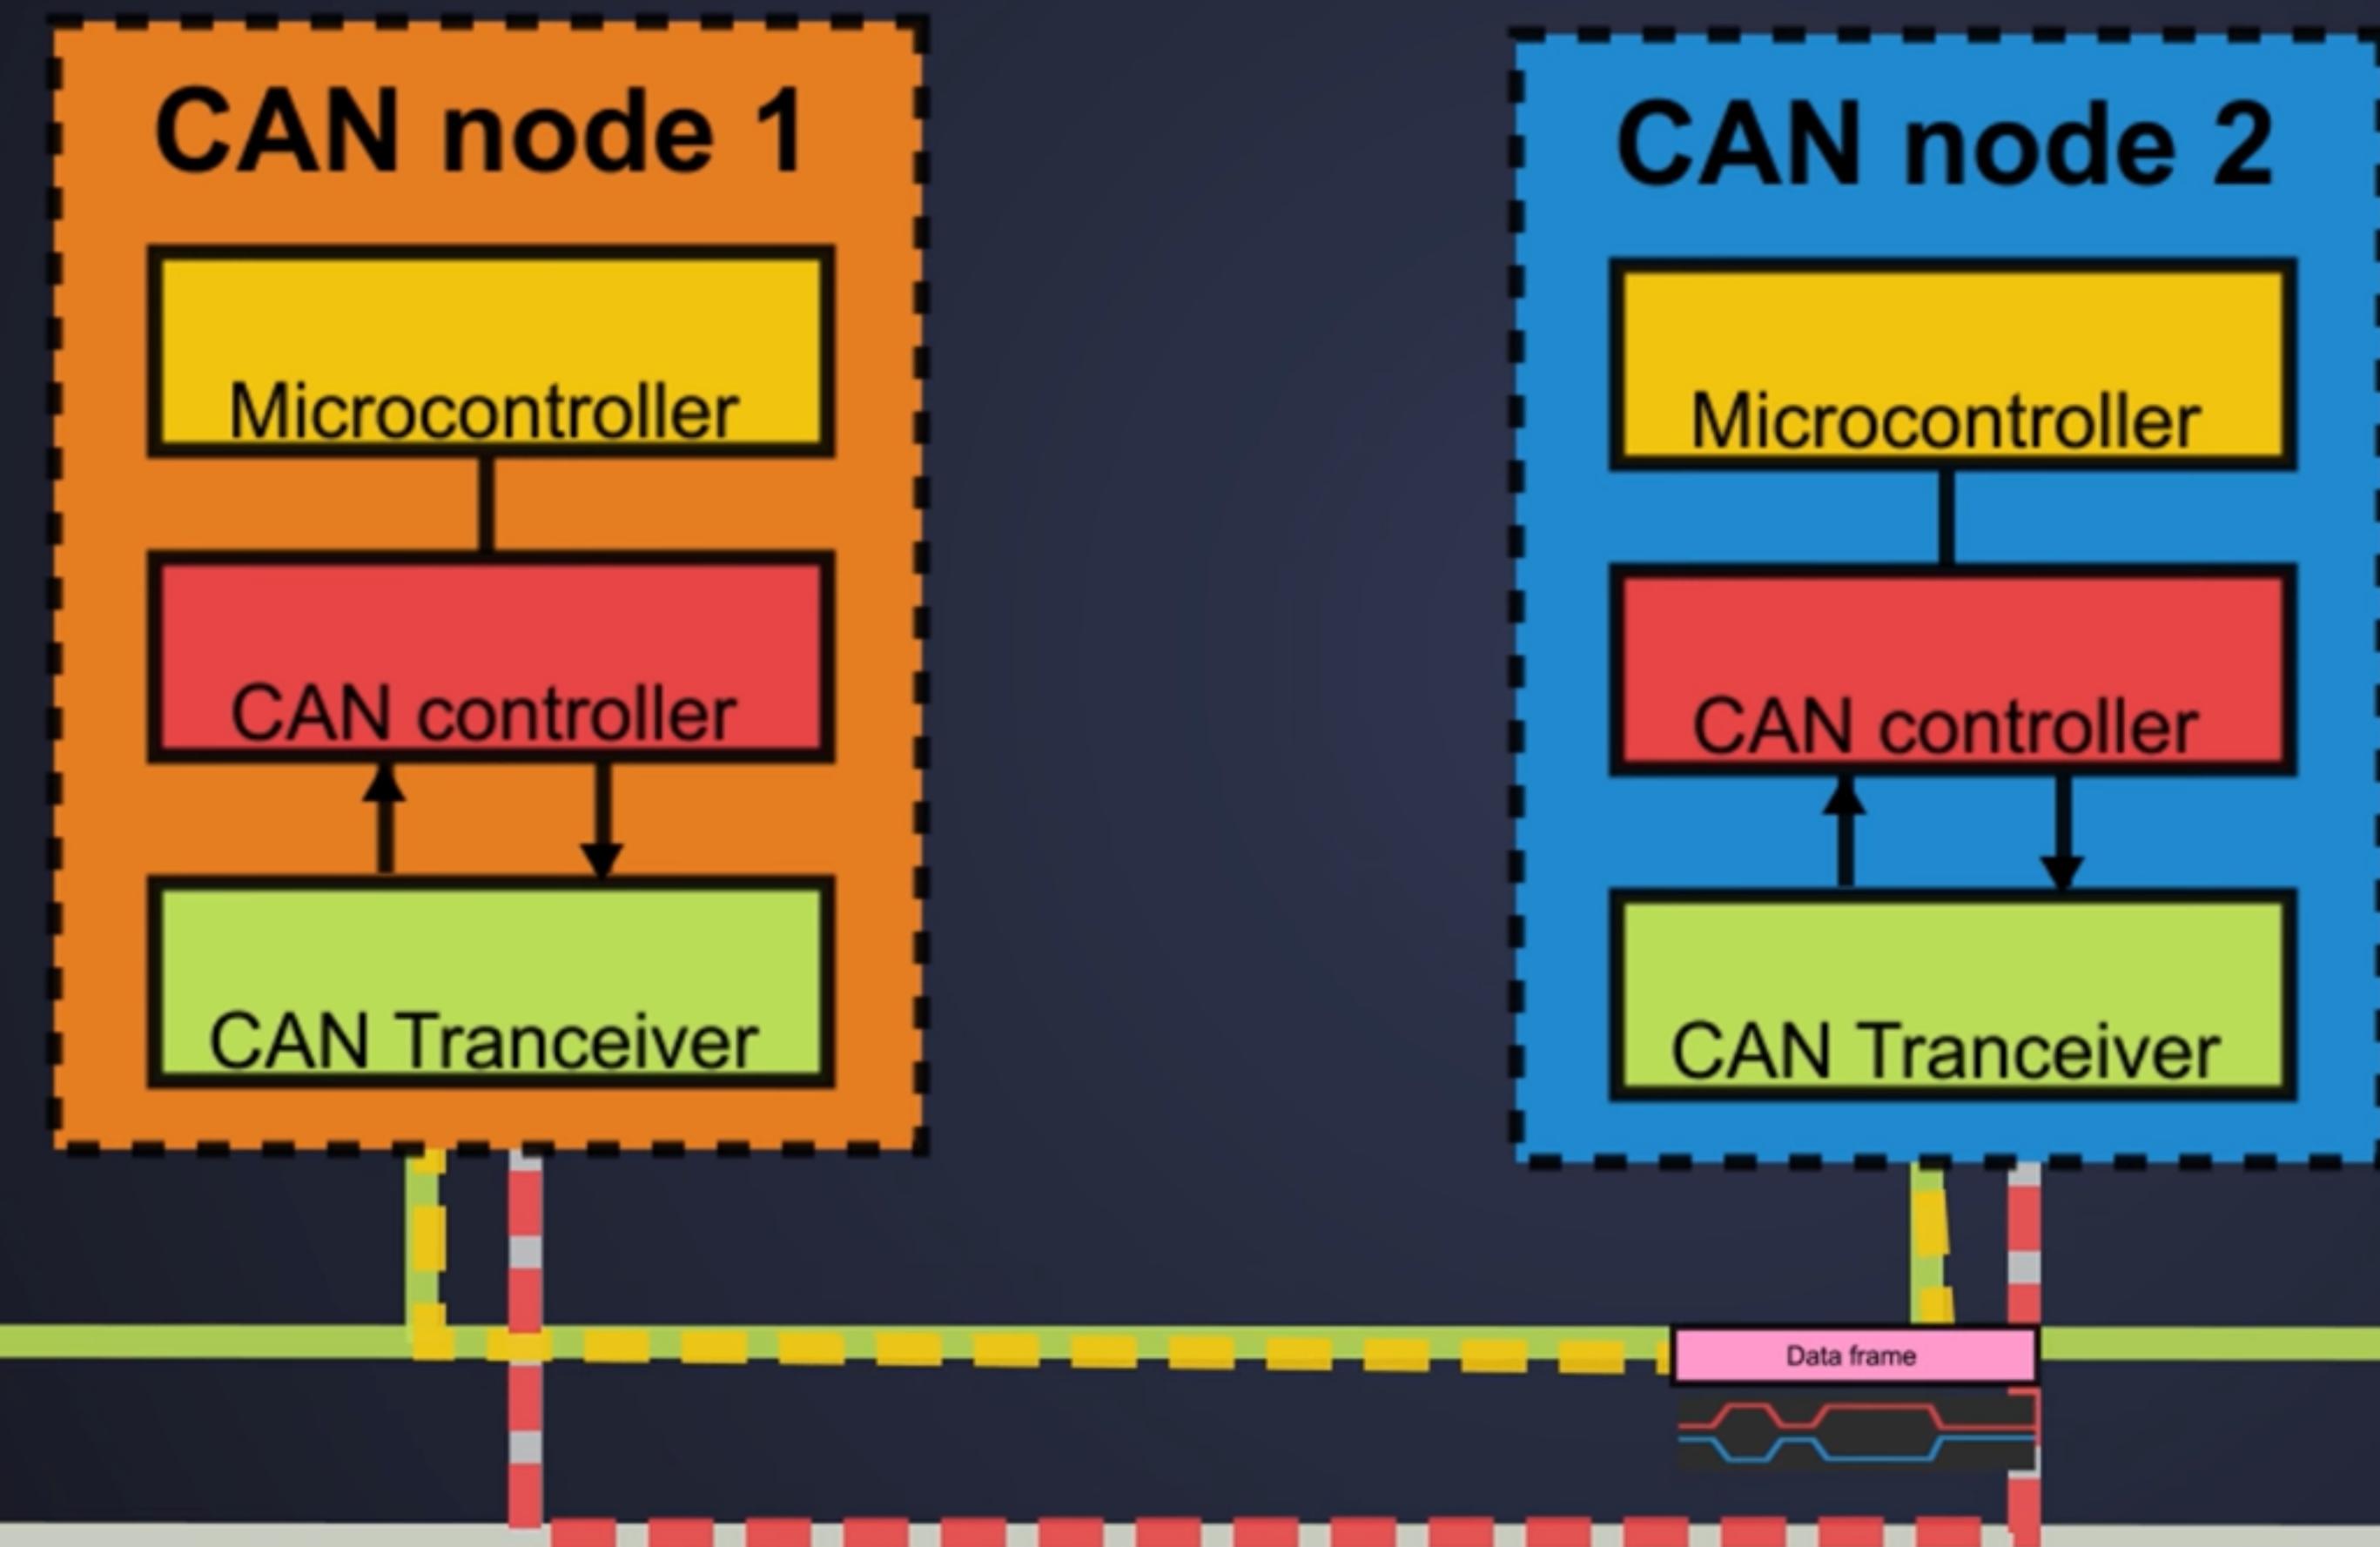


Activate Windows  
Go to Settings to activate Windows.



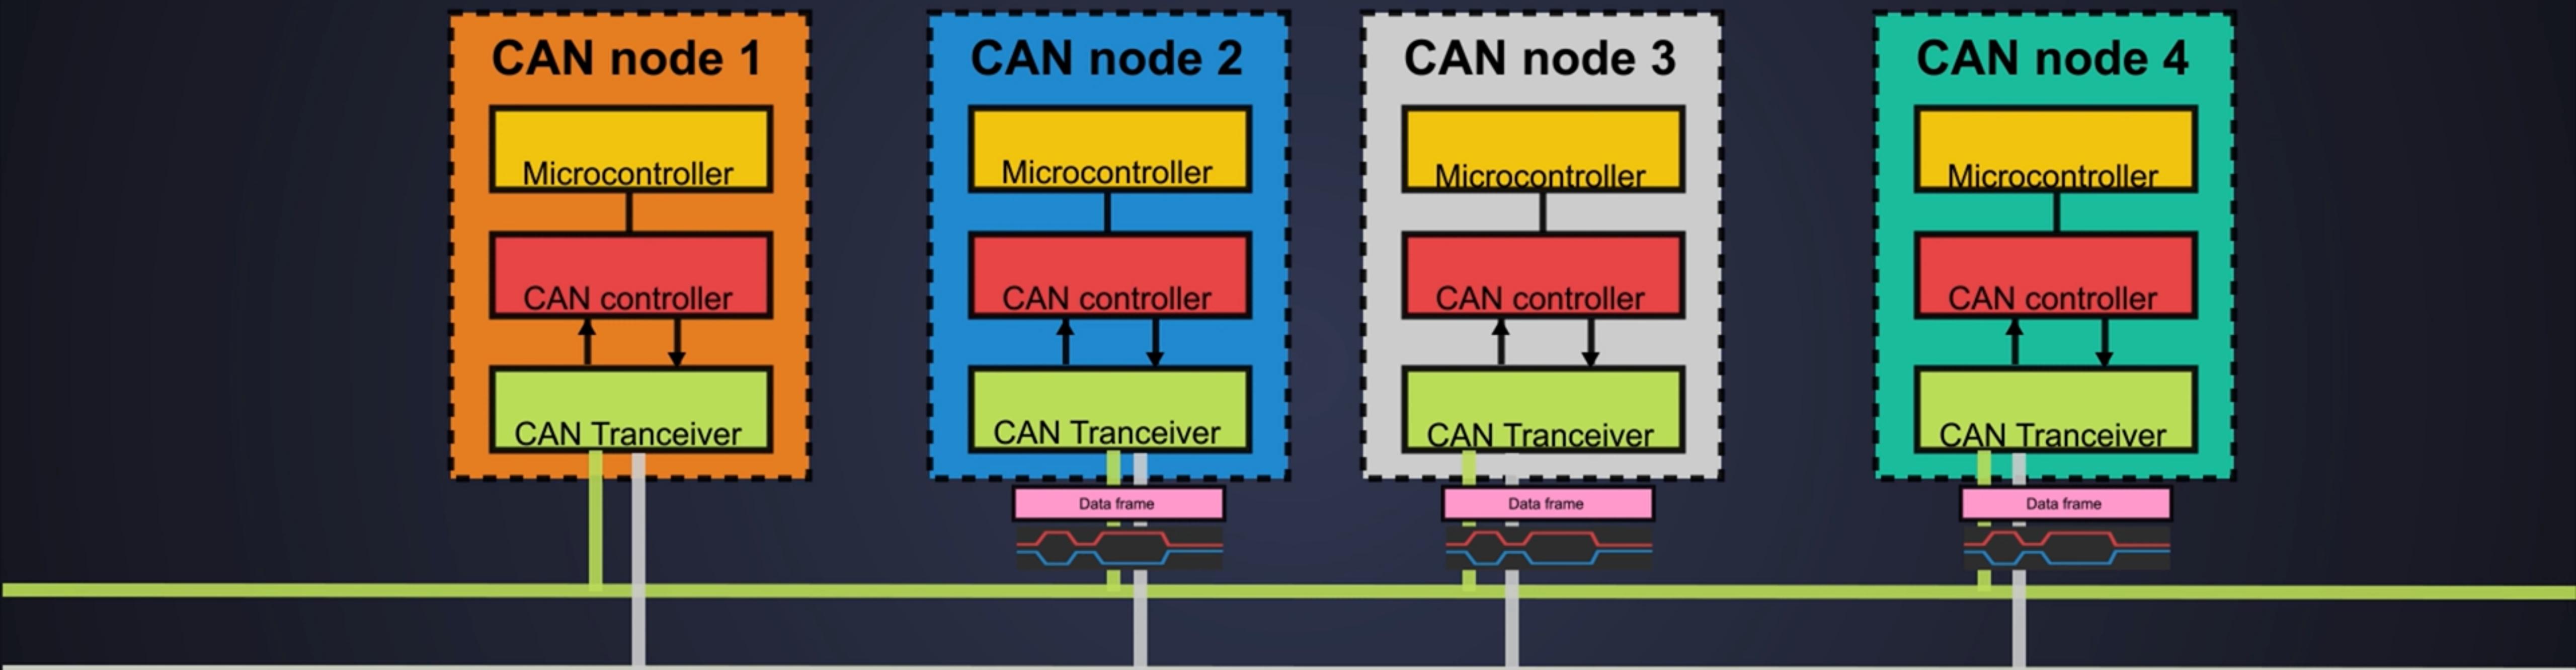



Activate Windows  
Go to Settings to activate Windows.



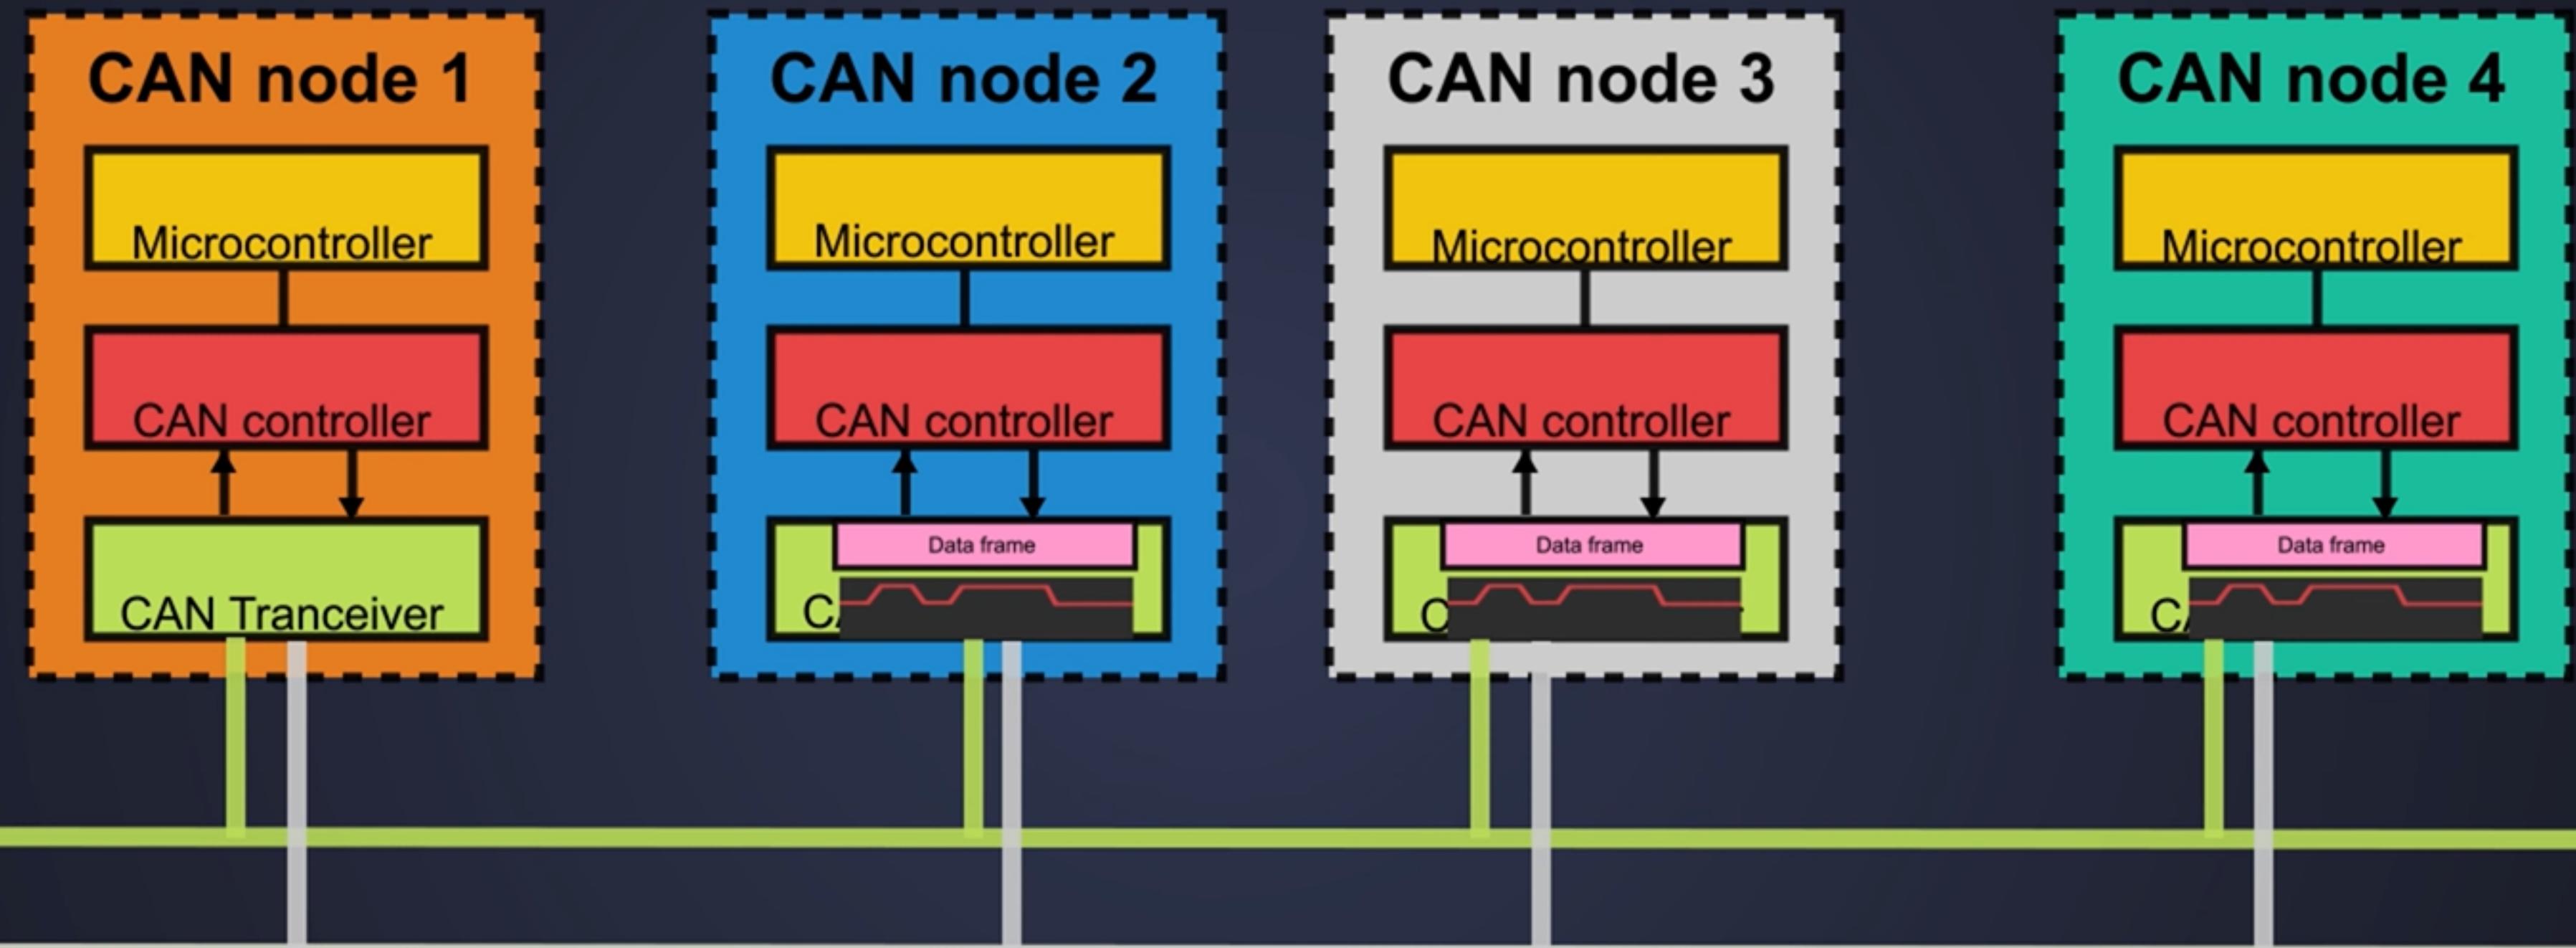


Activate Windows  
Go to Settings to activate Windows.

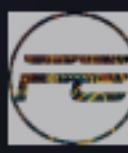

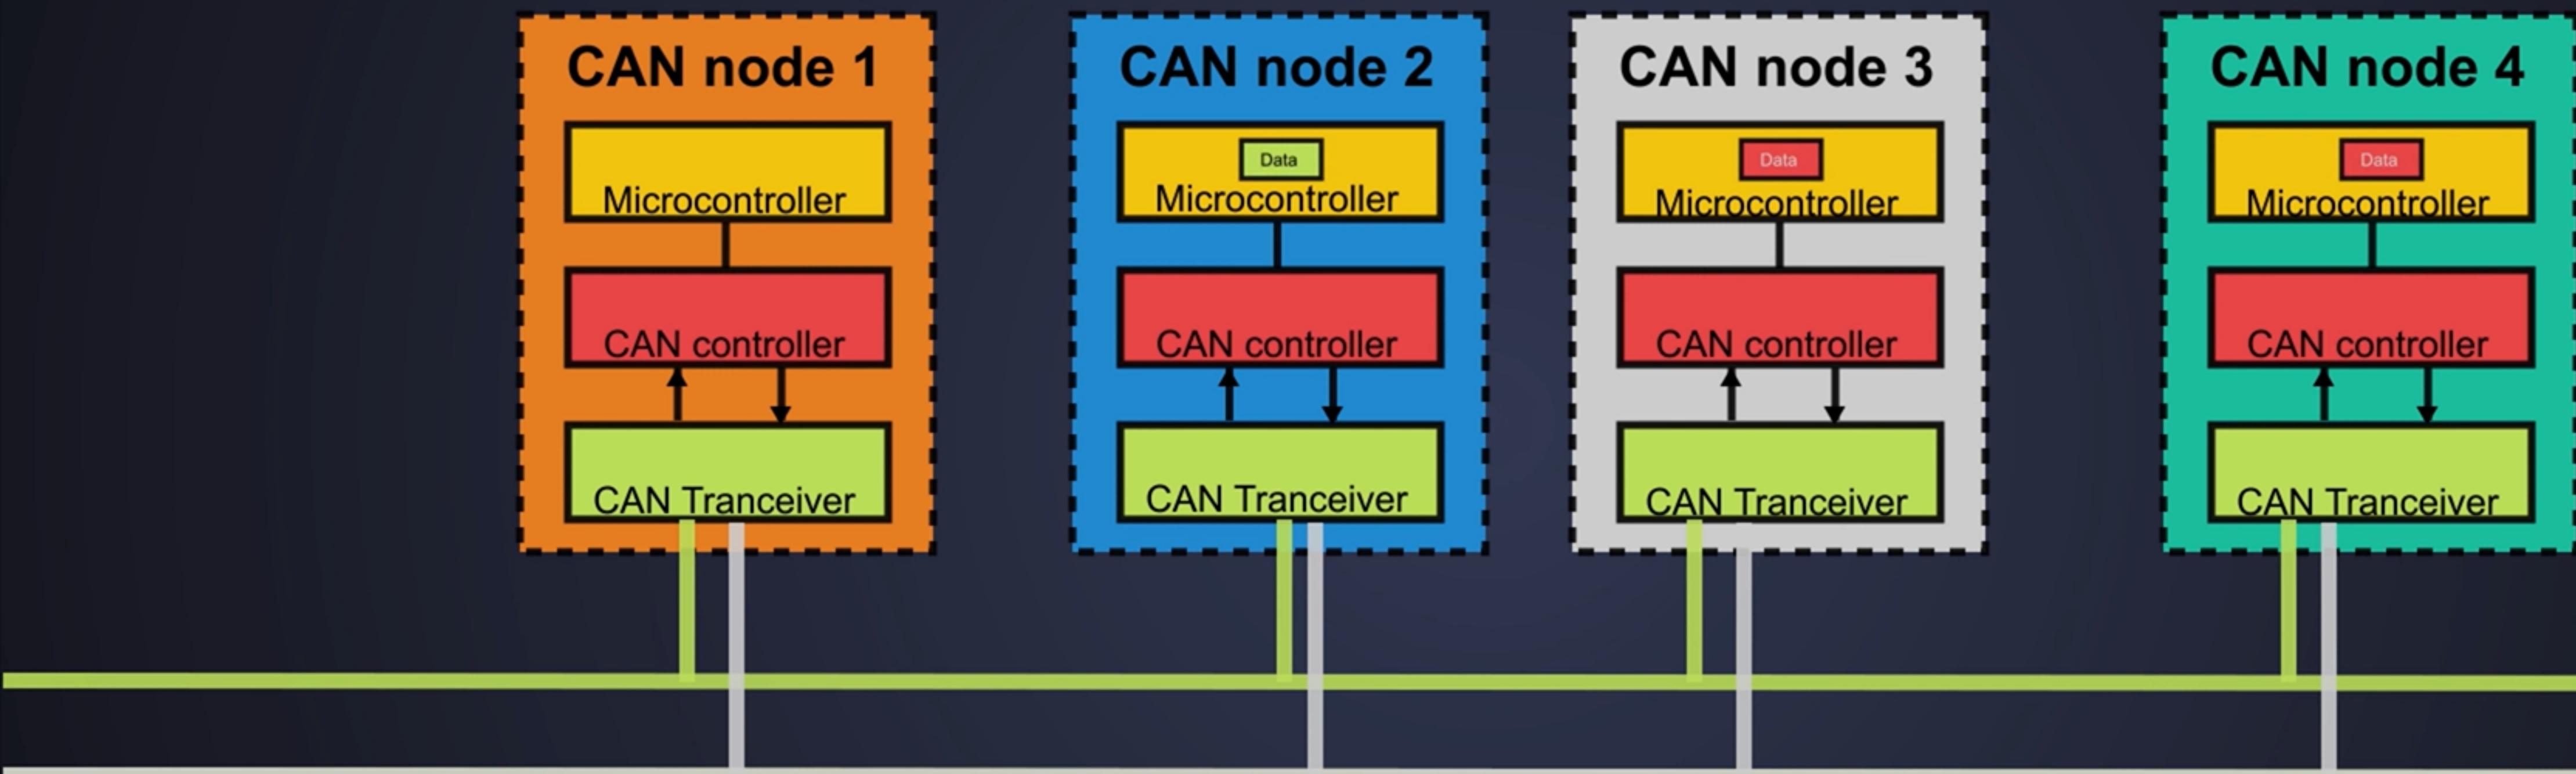

Activate Windows  
Go to Settings to activate Windows.



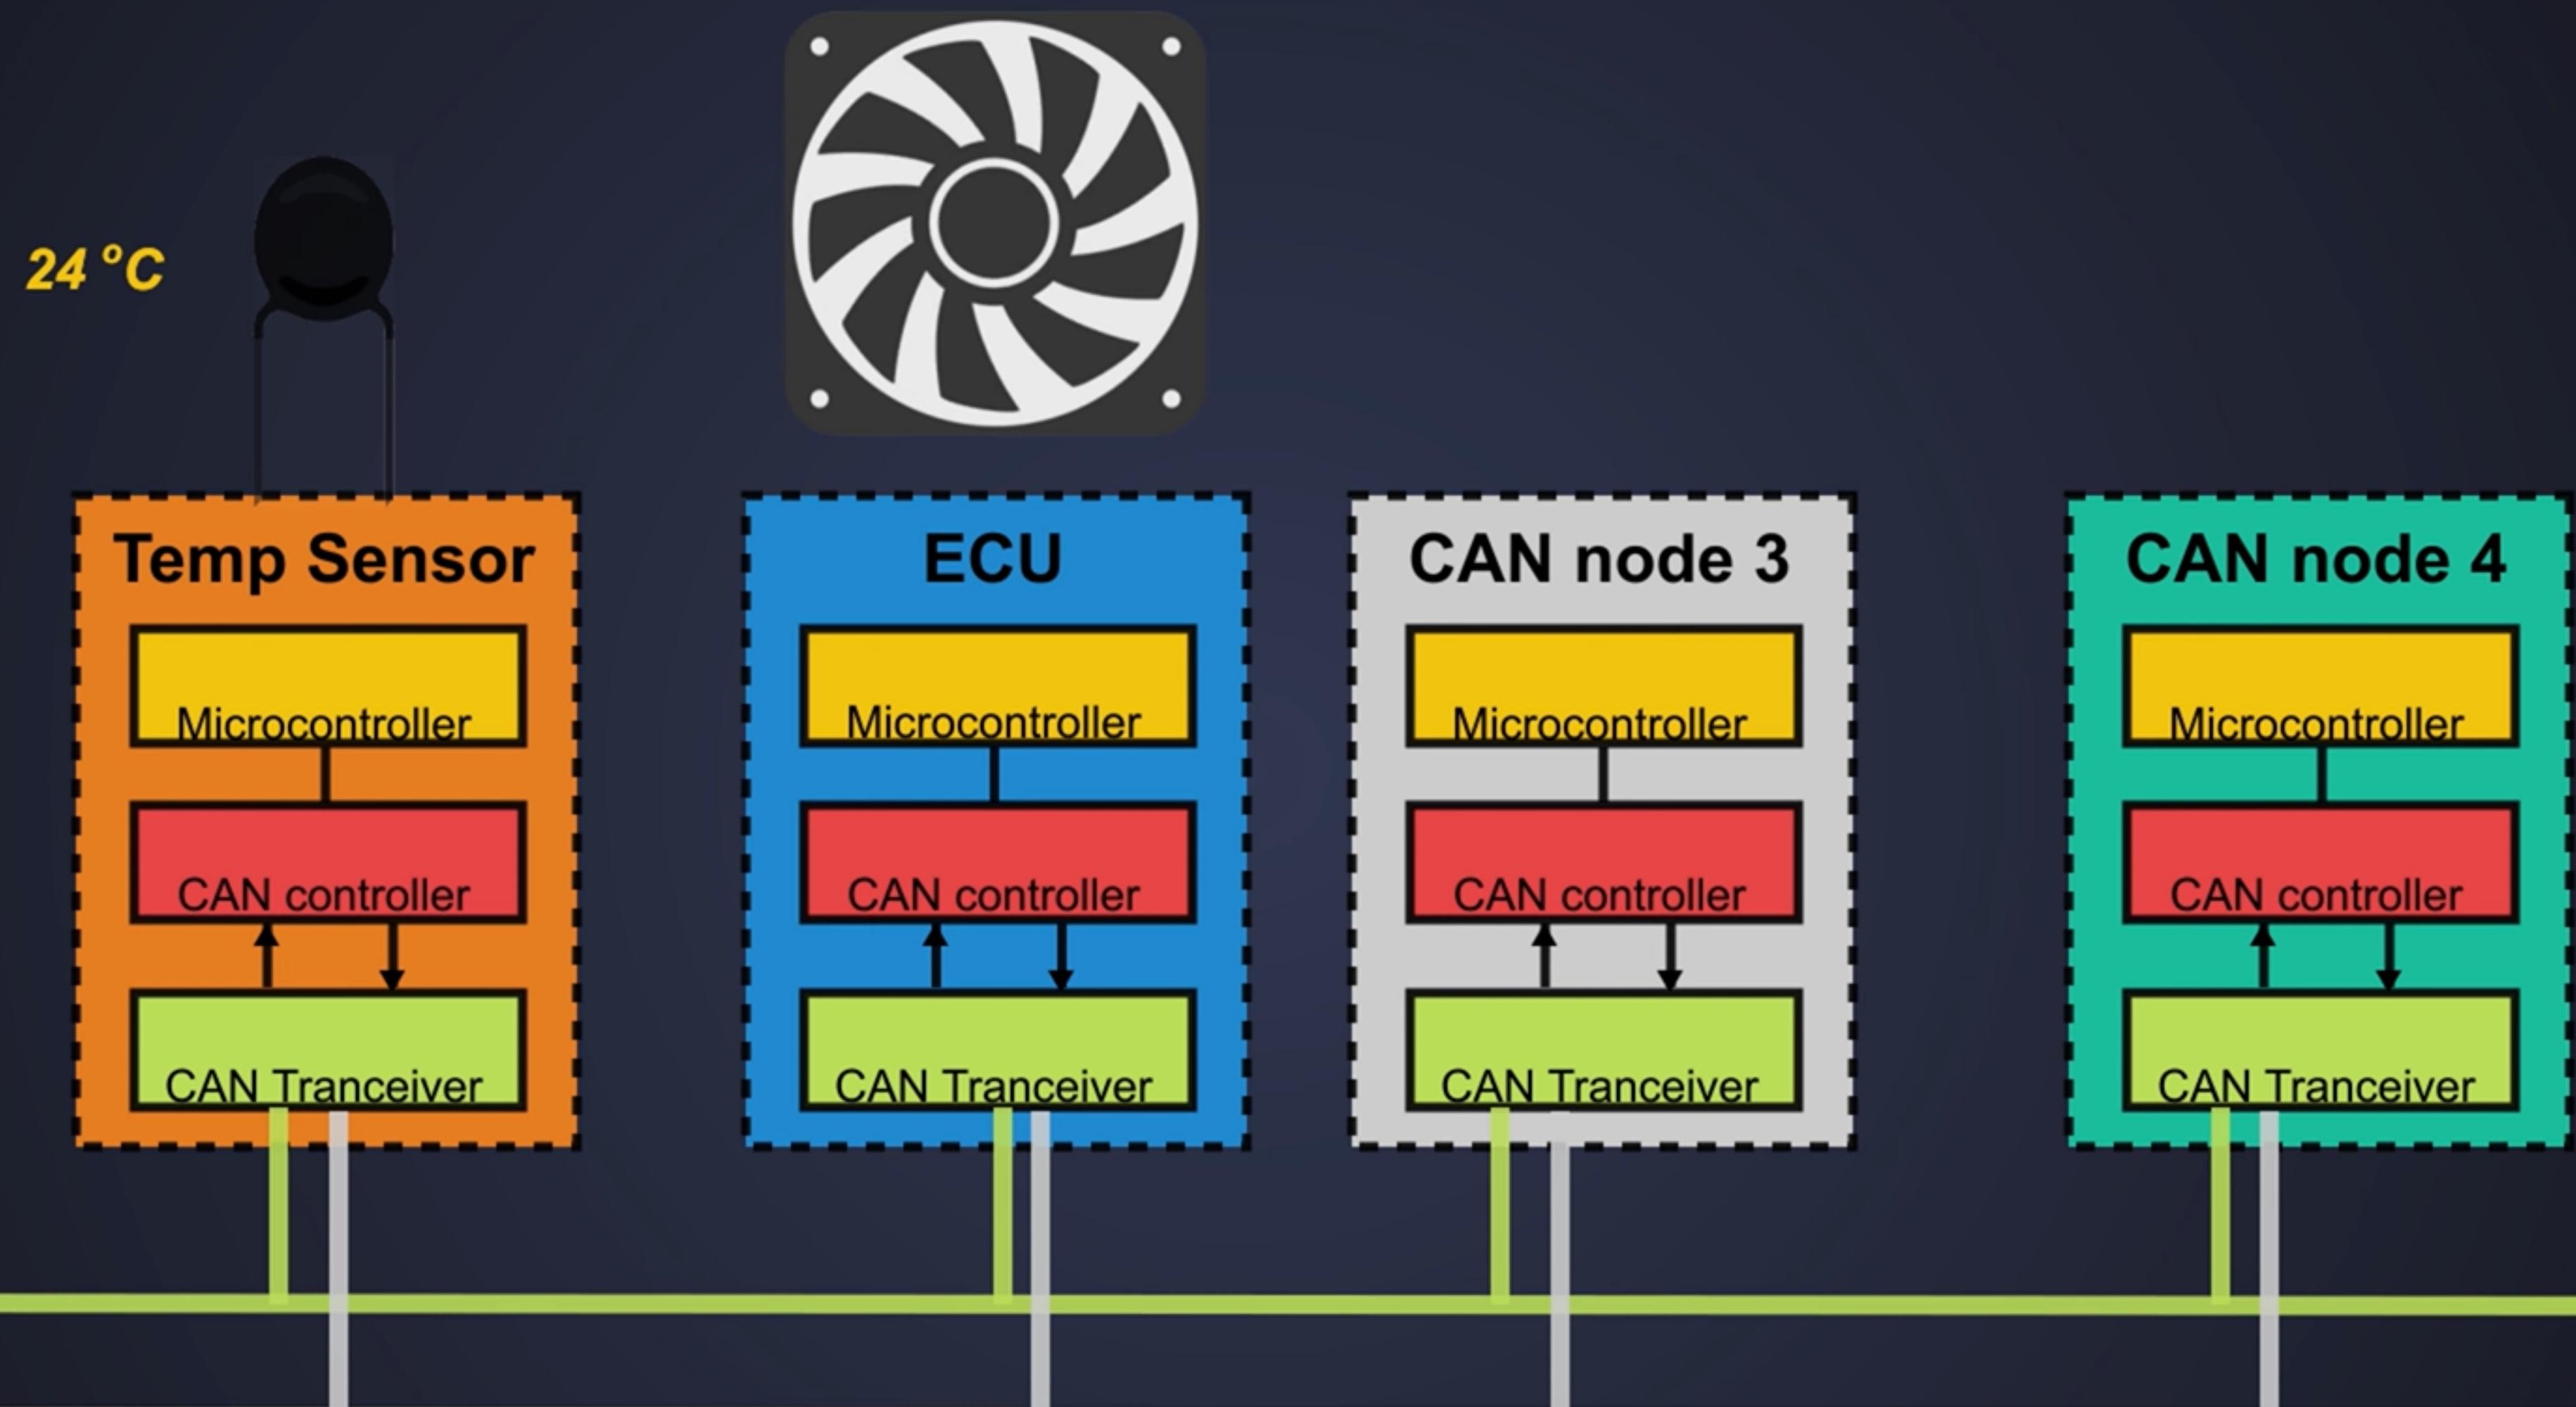



Activate Windows  
Go to Settings to activate Windows.







Activate Windows  
Go to Settings to activate Windows.

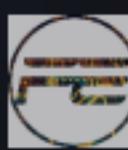

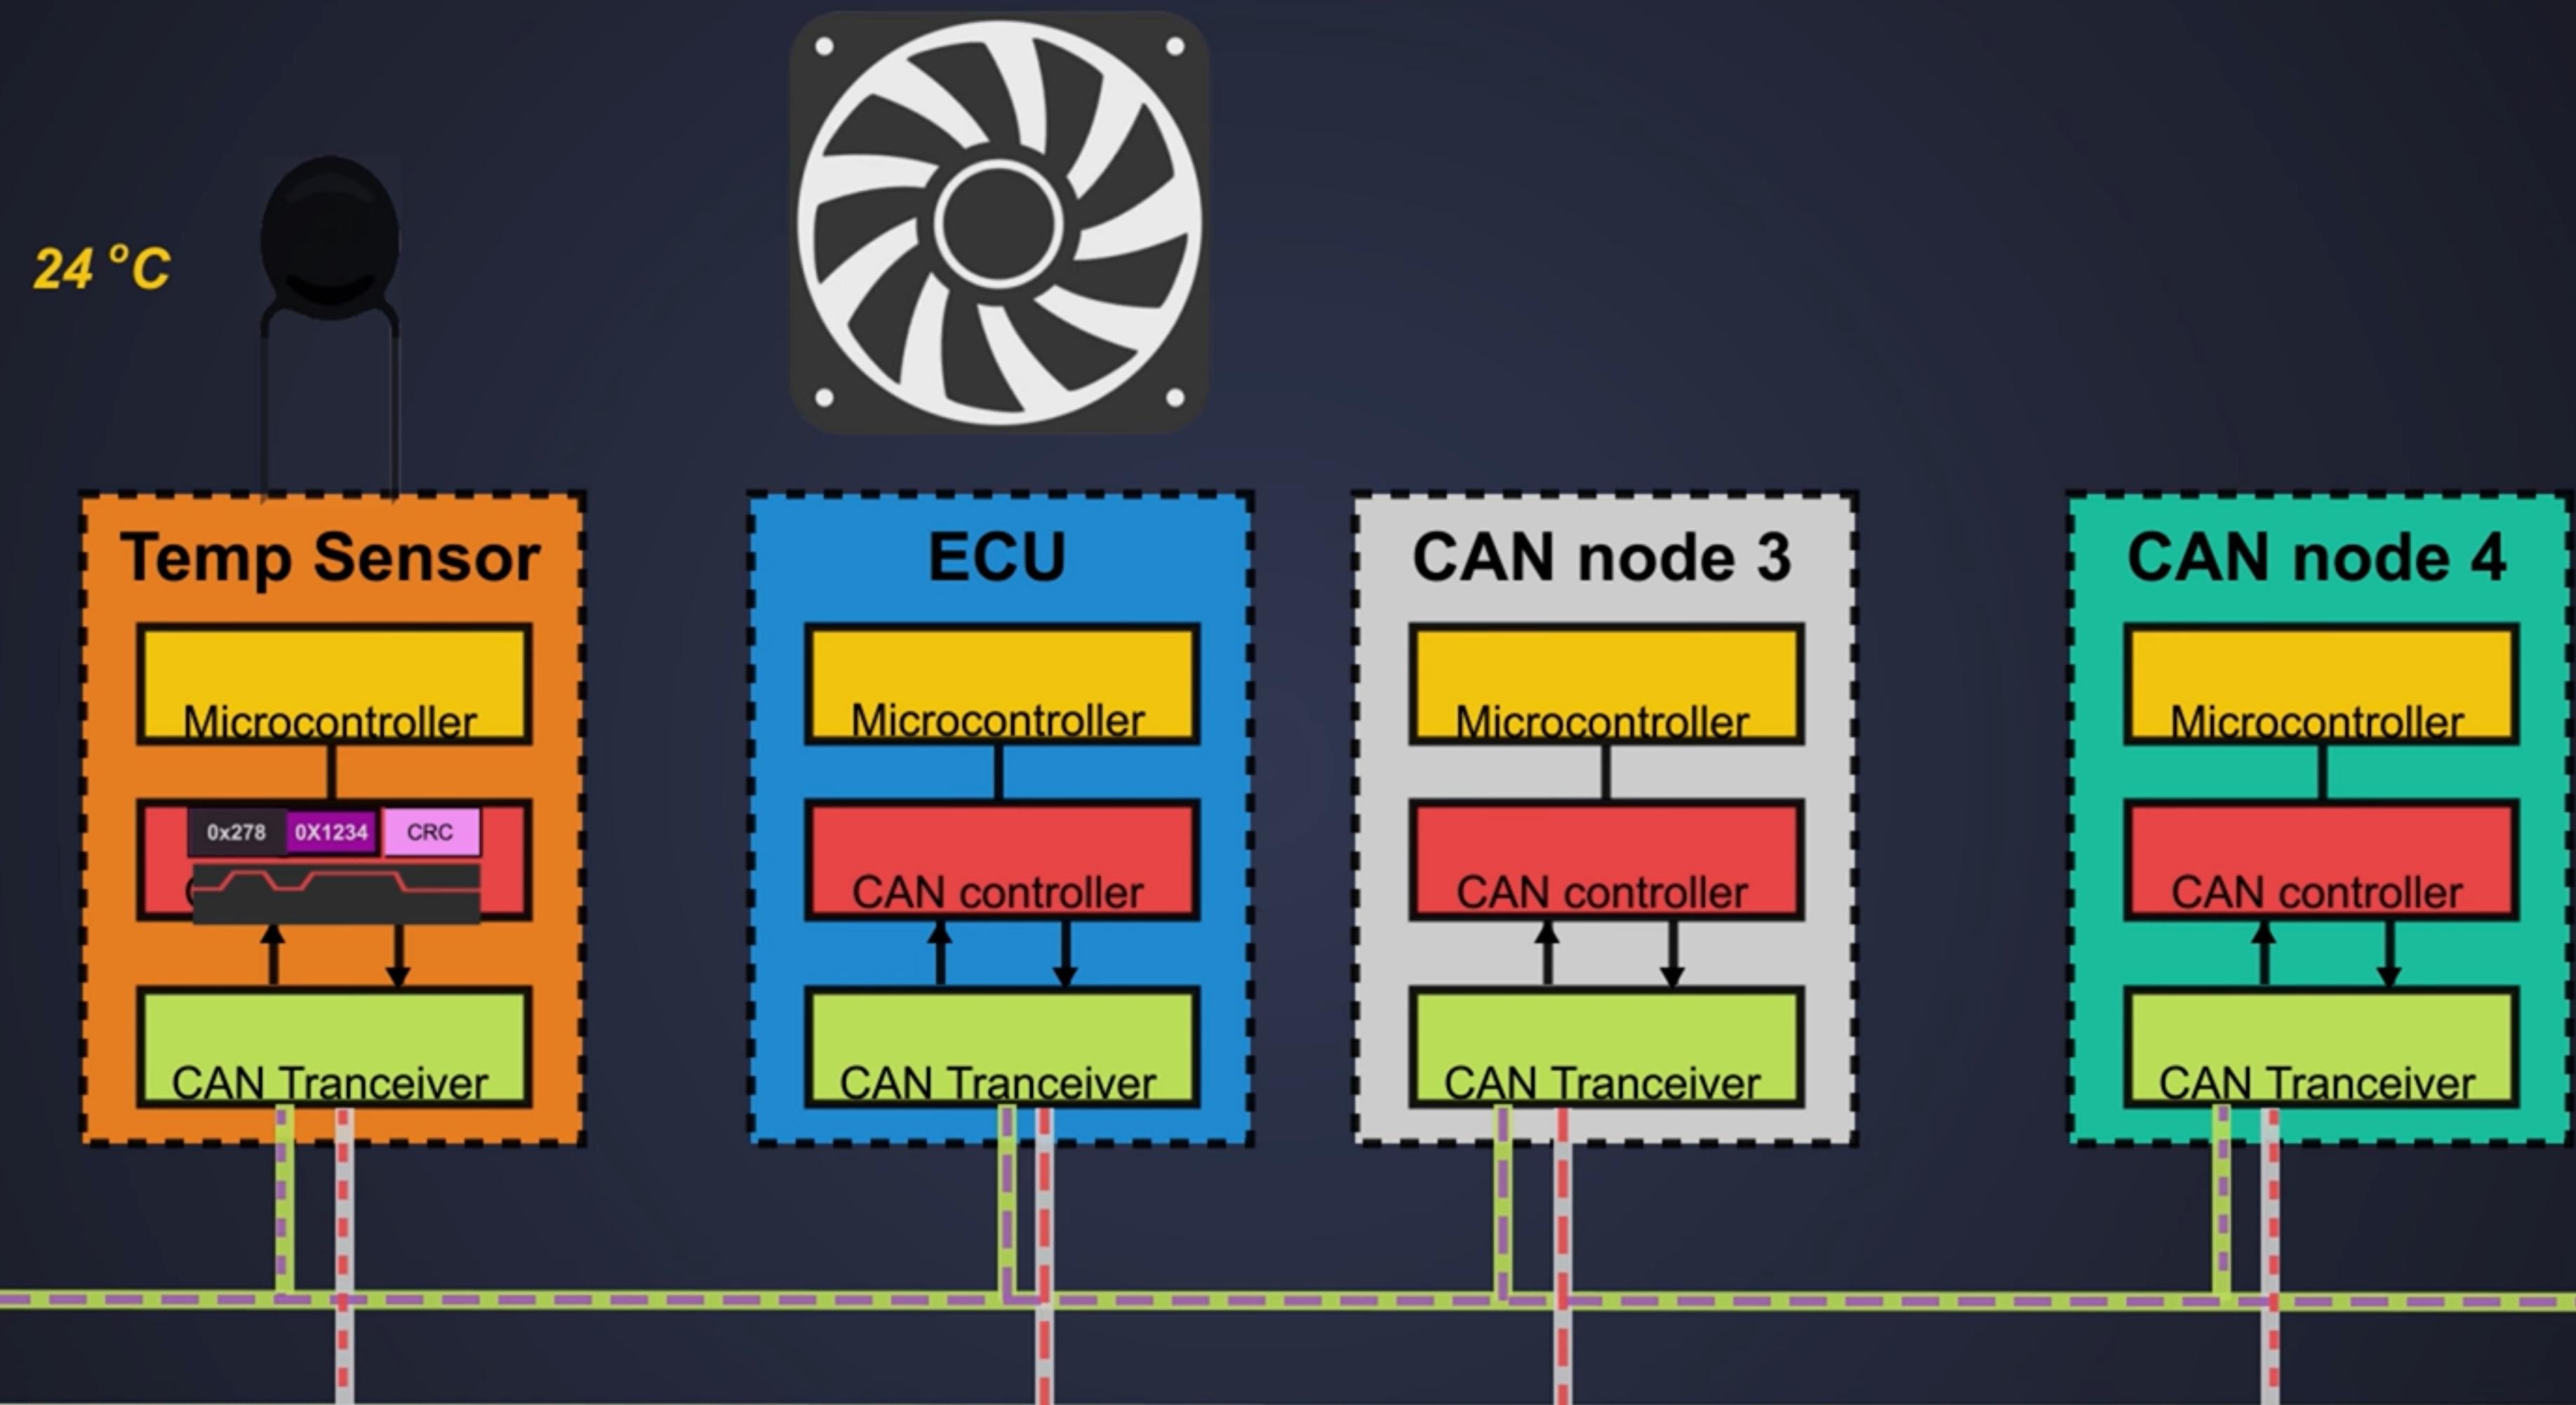


Activate Windows  
Go to Settings to activate Windows.

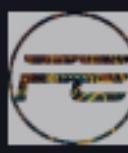

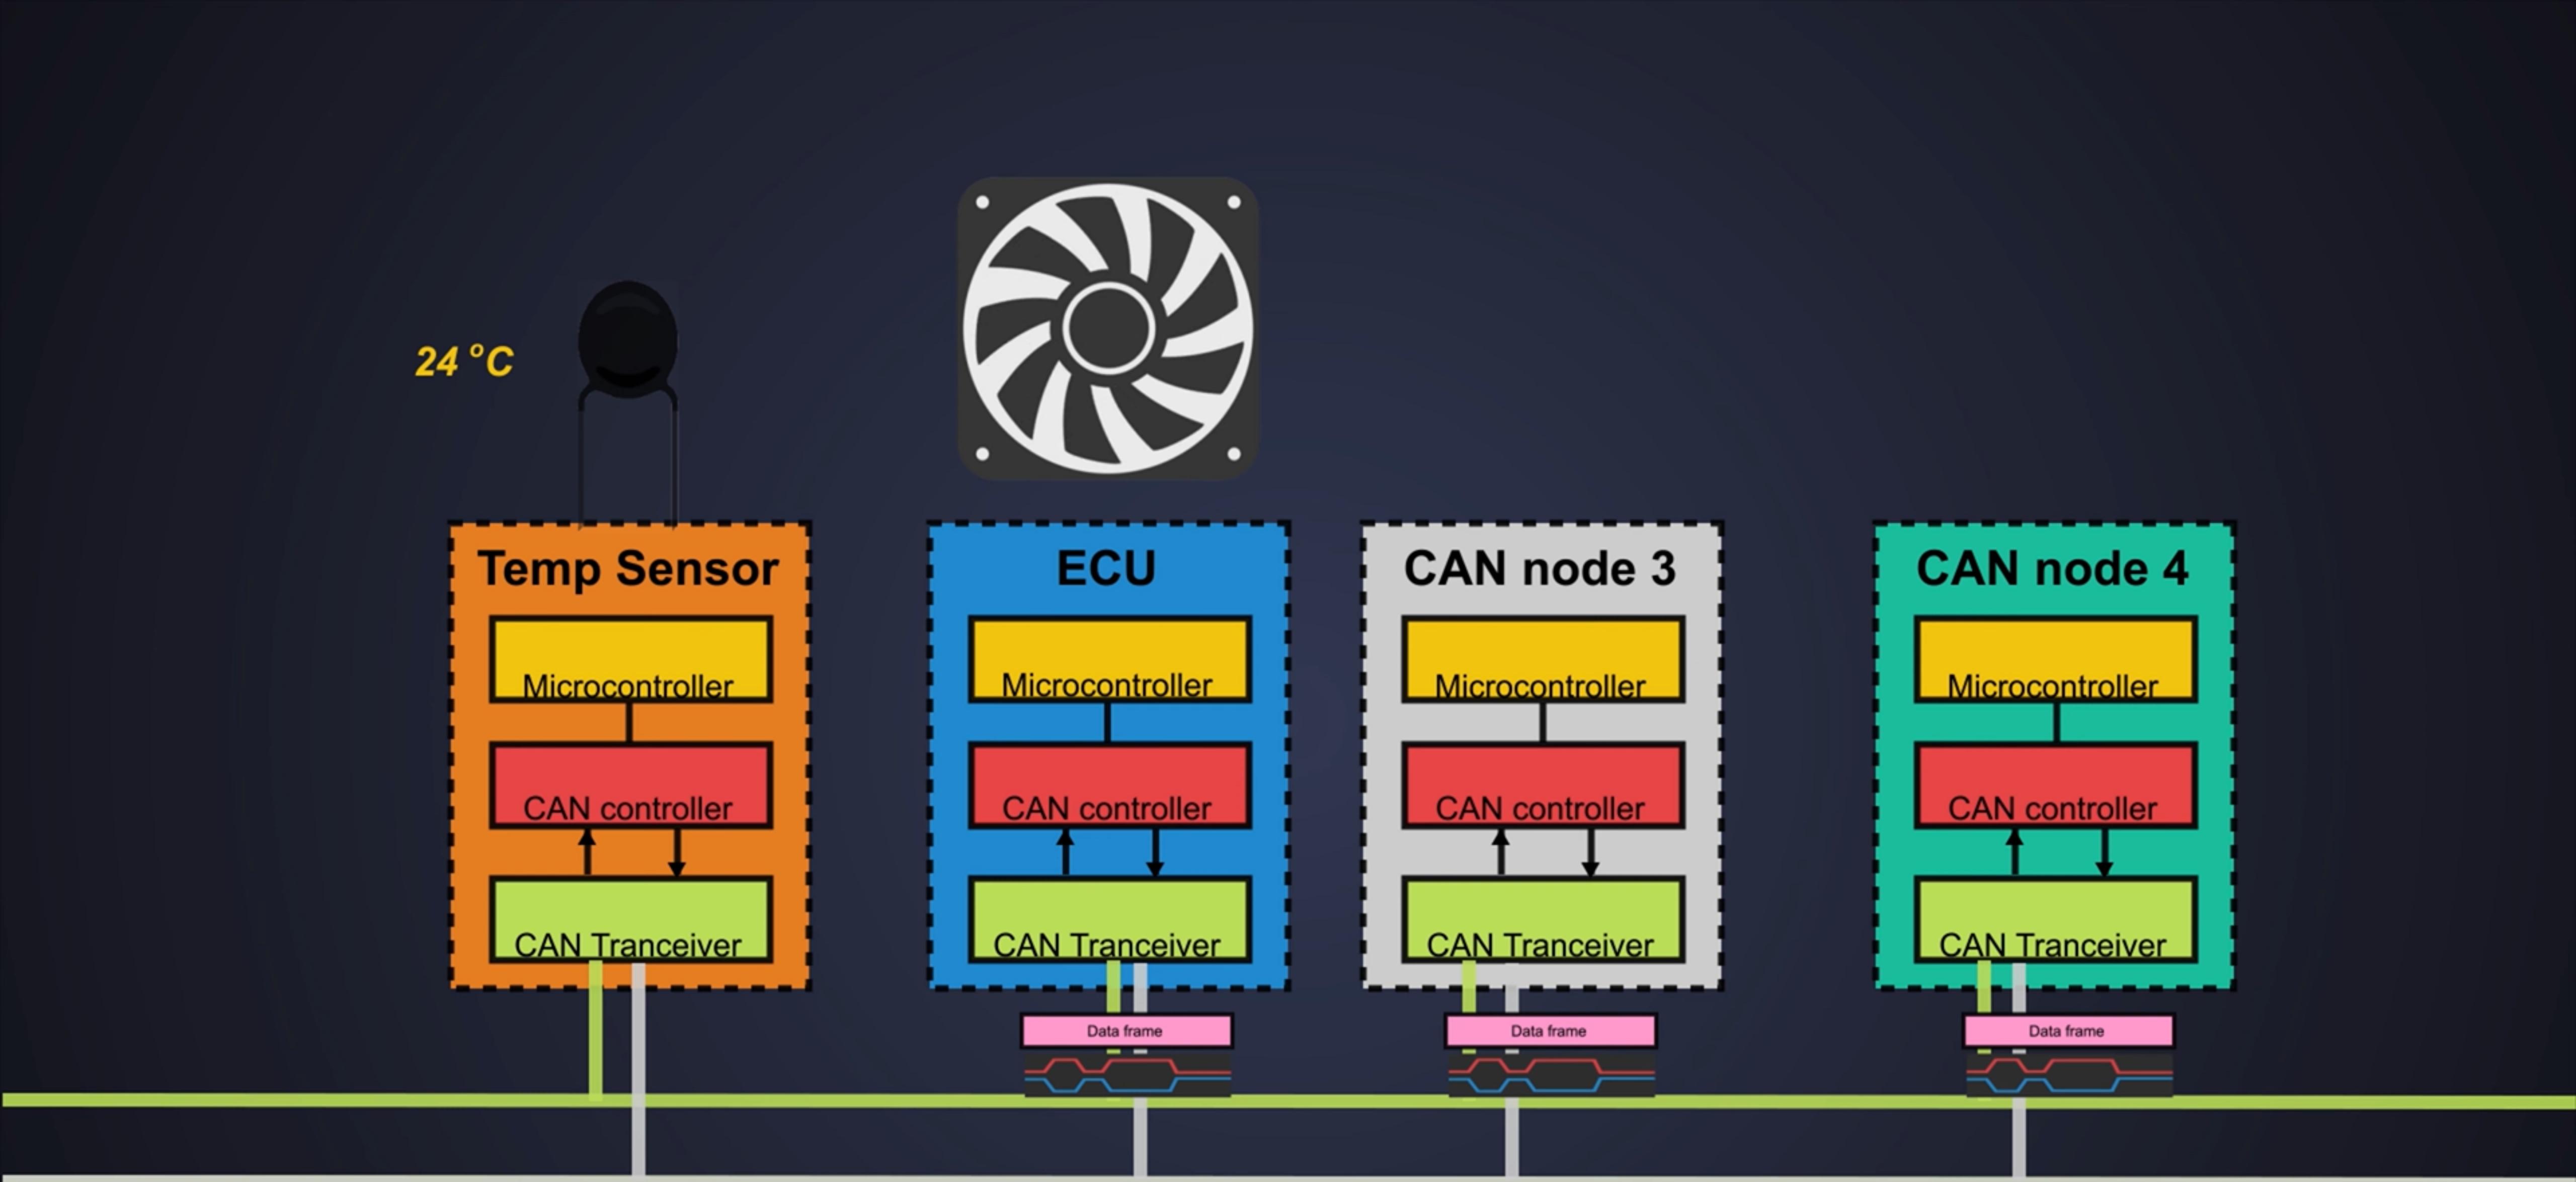


Activate Windows  
Go to Settings to activate Windows.



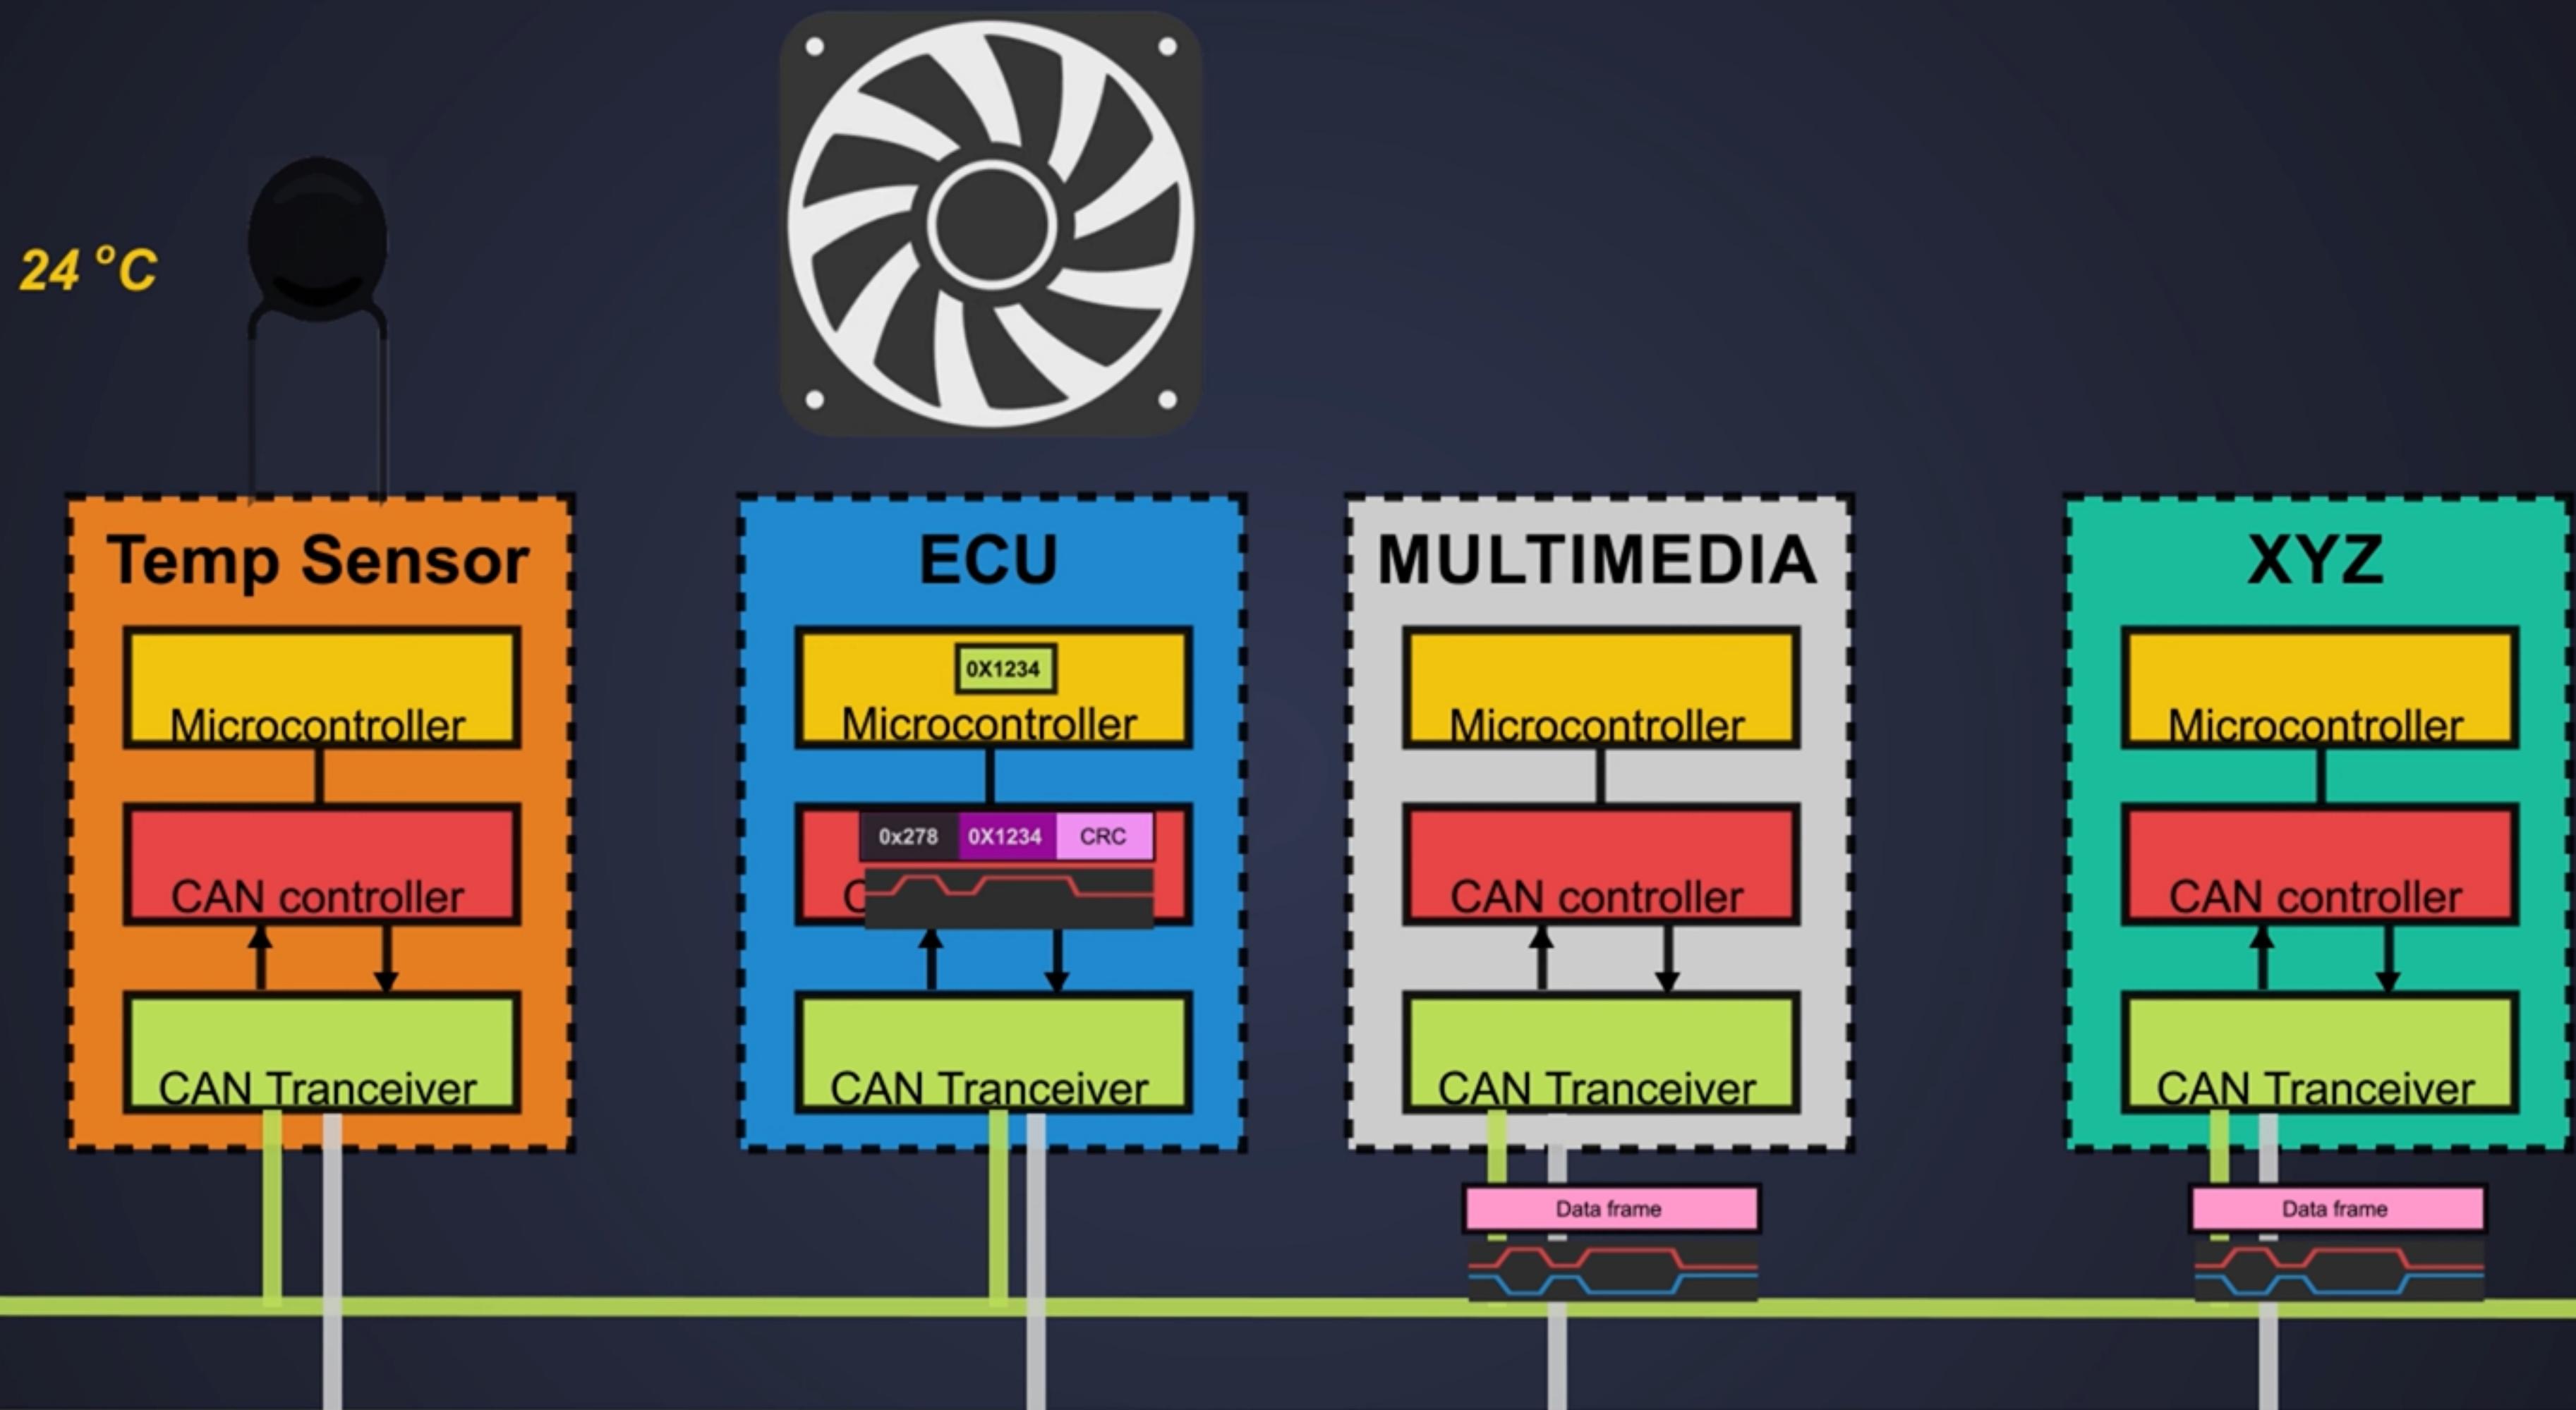

Activate Windows  
Go to Settings to activate Windows.



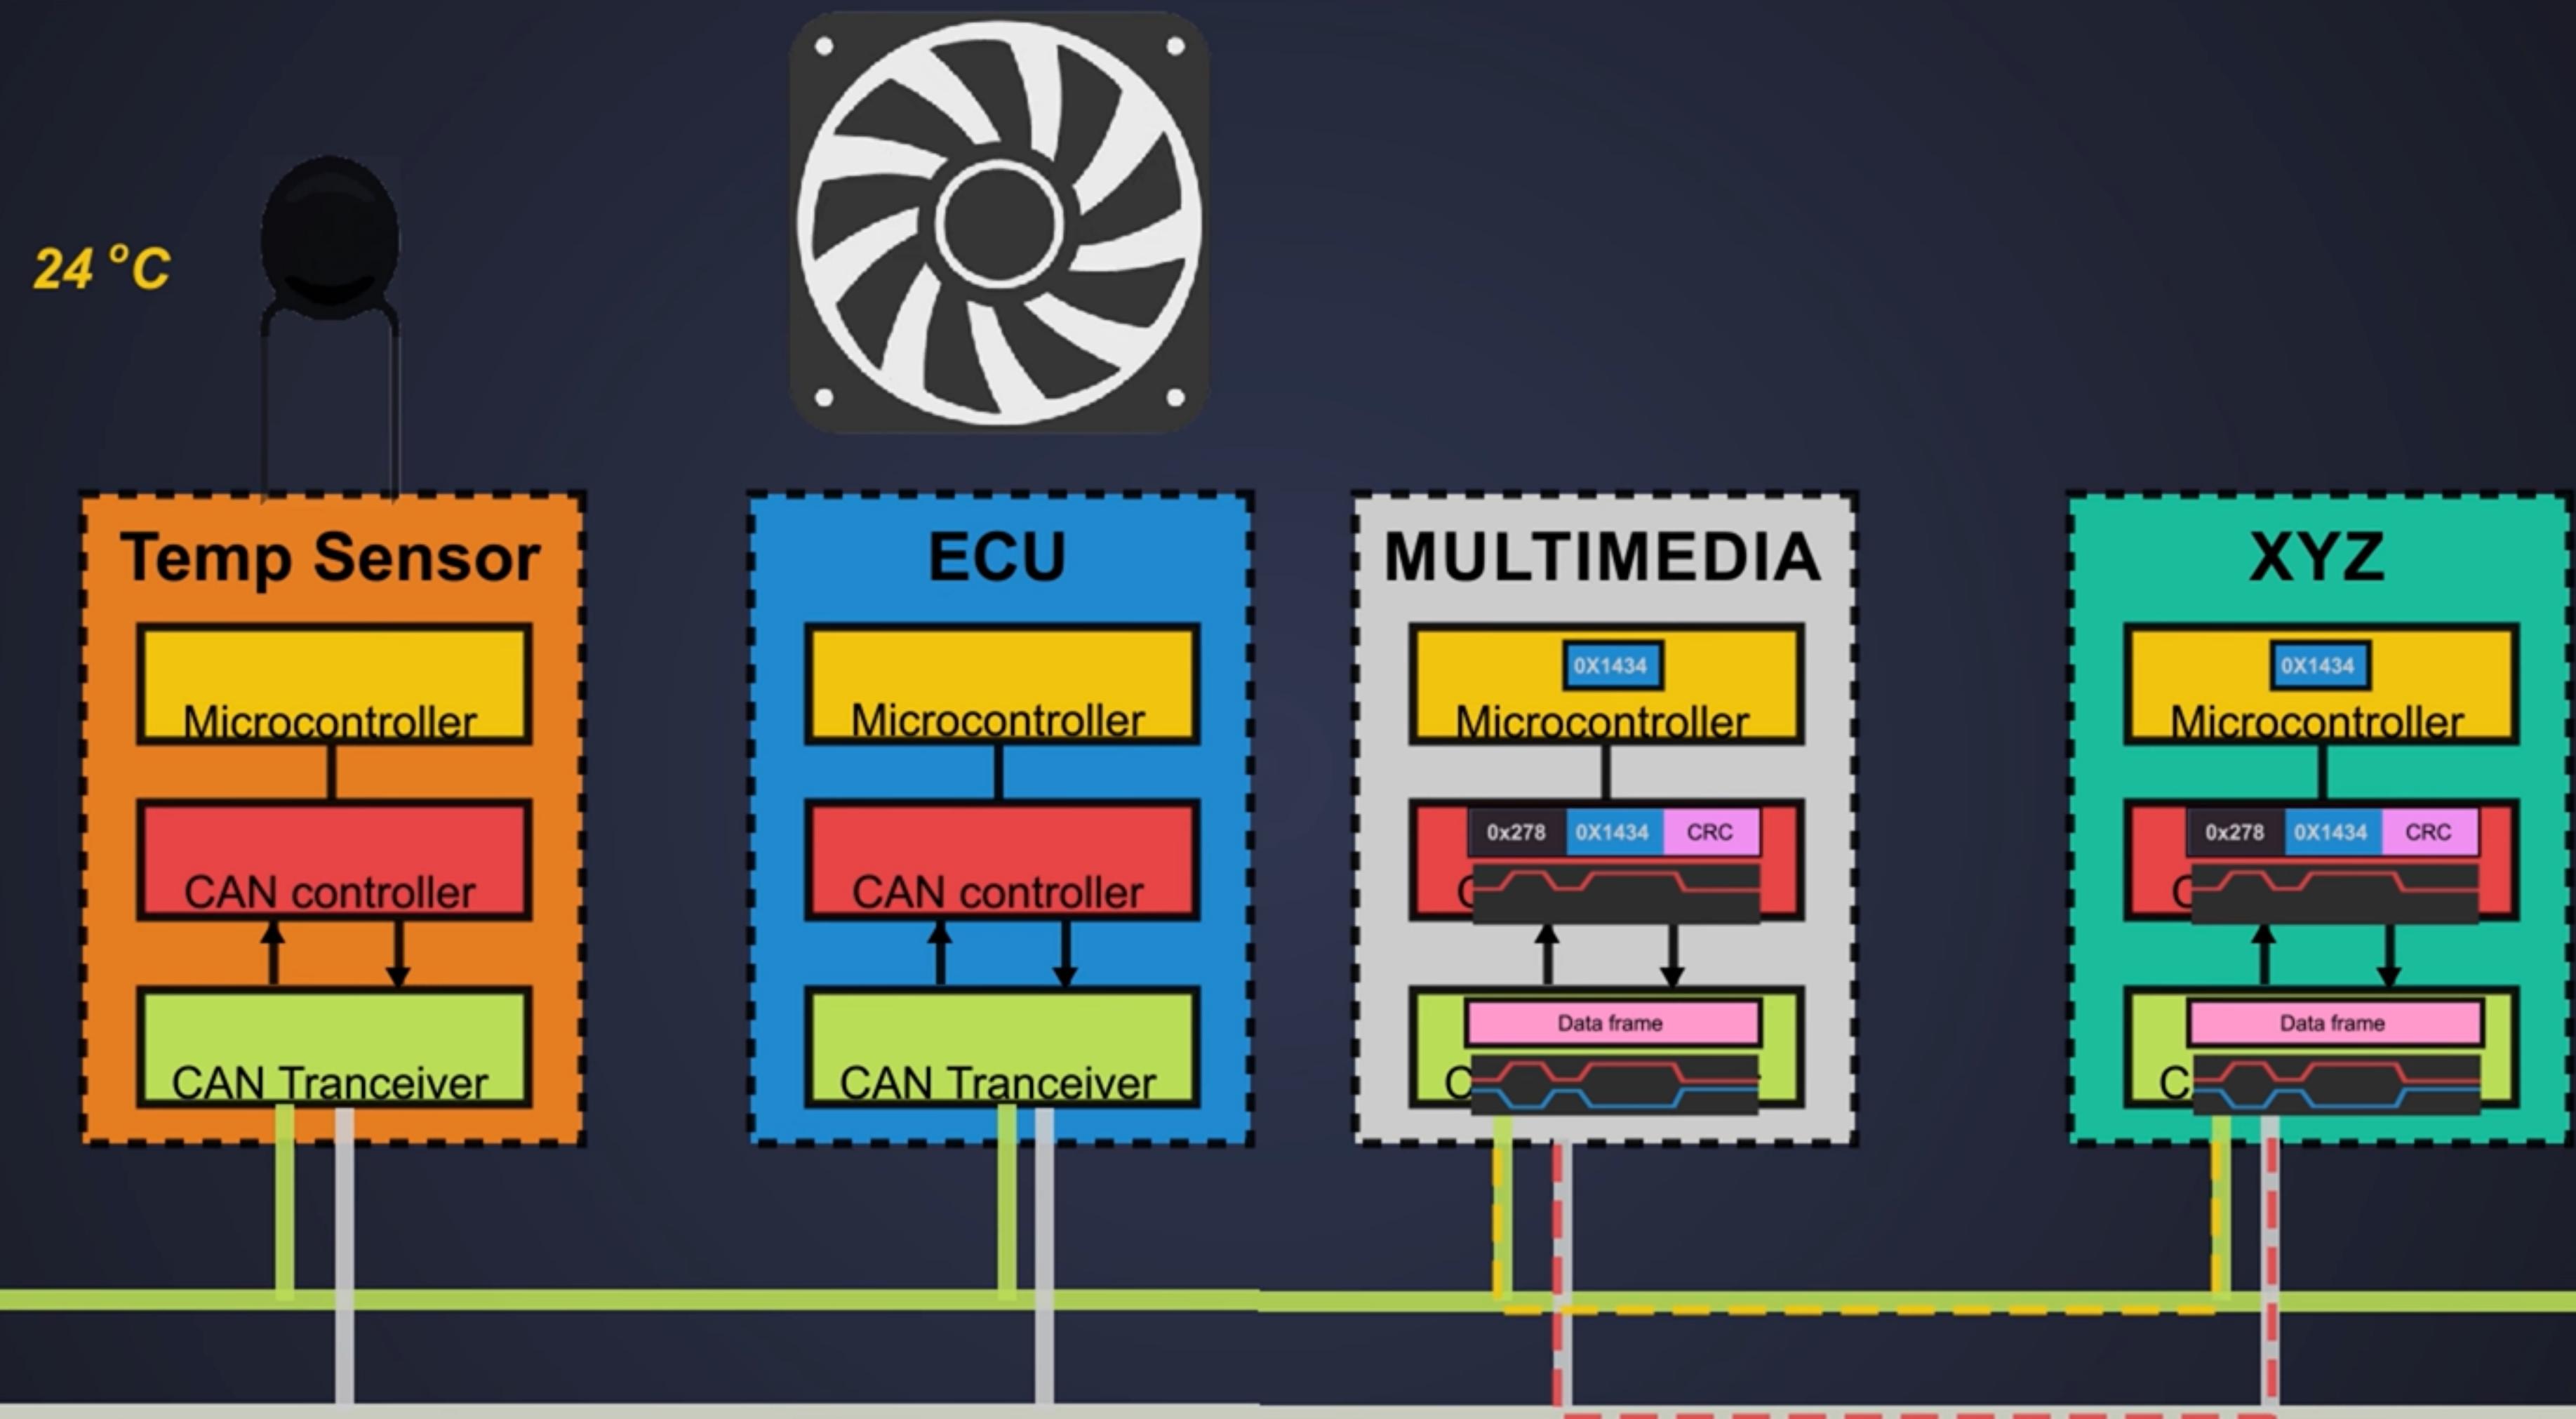

Activate Windows  
Go to Settings to activate Windows.



Thank you