


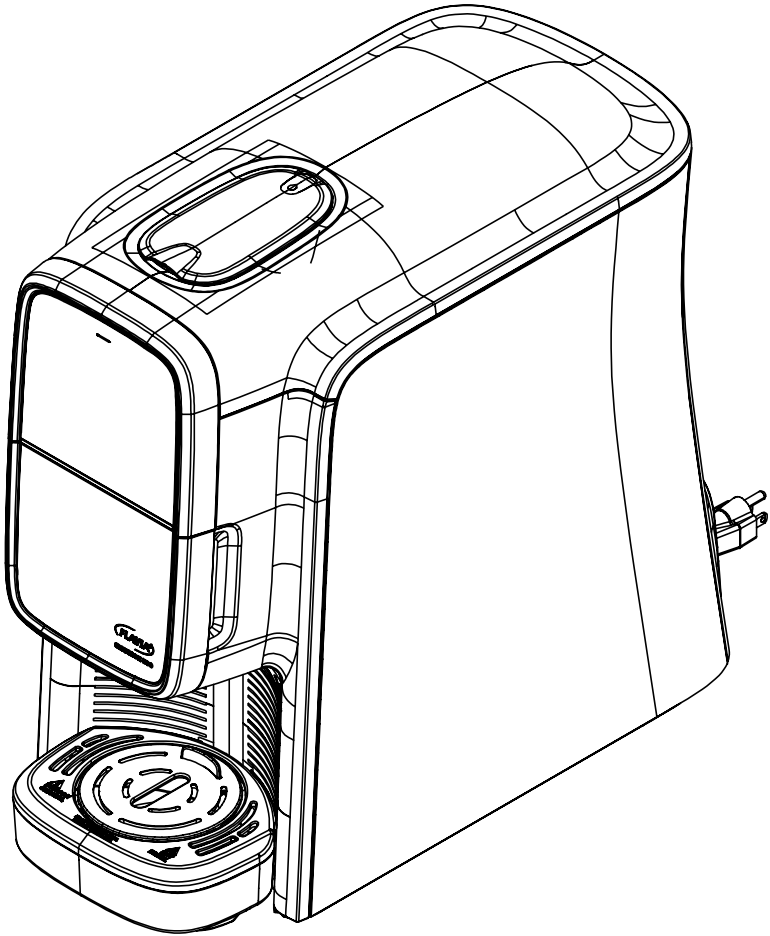

1	PRODUCTION RELEASE ON ECN LP-00053	HW	13/07/2023
A	FIRST ISSUE FOR COMMENTS	HW	20/06/2023
Iss	ECN No. / Modification summary	App	Date
Drawn	Harrison Woodall	Date	04/05/2023
		PO MATERIAL CODE	N/A
		Scale	N/A
Title			
C300 NA SPARES			
PLNo.	76-10-6767	Issue	1
		Sheet	1 of 37
			A3

Electrical Safety

- ✓ Do isolate the machine from the electrical supply before attempting any repair where there is any exposed connector at a potential of more than 42V AC or DC.
- ✓ Do verify that the machine is electrically safe by suitable testing after completion of a repair.
- X Do not under any circumstances, modify or bypass safety circuits.
- X Do not attempt to repair conductors in any heater element circuit. Replace the affected loom complete.
- X Do not leave unattended any machine that is switched ON with its external covers removed.

Earthing Installation

DANGER Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance without undertaking official training from Lavazza Professional.

**WARNING
Electric Shock Hazard**

Improper earthing can result in electric shock. This appliance must be earthed. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing a current path for the fault current. This appliance is fitted with an earthed plug and power cord. The plug must be plugged into an outlet that is earthed and has the correct Live Neutral polarity. Service engineers should consult a qualified electrician if any doubt exists as to whether the electrical supply outlet is correctly installed.

1. Lavazza Professional advises against the use of extension leads as they could present the risk of a trip or fire hazard.




General Safety

- X Do not work on a machine without the client's knowledge.
- X Do not obstruct passageways.
- ✓ Do clear up any water spillage as soon as they occur.
- ✓ Do familiarize yourself and comply with the client's own health and safety requirements.
- ✓ Do clear away any packaging, litter, etc, when the work is completed. Observe any recycling requirements in force.
- ✓ Do check for leaks after any repair

Hygiene

- X Do not allow water or food contact components to become soiled
- X Do not use proprietary cleaning agents on or near water or food contact components.
- X Do not smoke while in the vicinity of the machine.
- ✓ Do maintain the highest standards of personal hygiene.
- ✓ Do wash your hands thoroughly prior to any work on the machine.
- ✓ Do leave the machine clean when you have finished.
- ✓ Do use only Lavazza Professional genuine replacement components to prevent possible tainting of the drinks
- ✓ After replacement or maintenance of any water contact element complete the sanitization procedure. See Chill Refresh technical manual

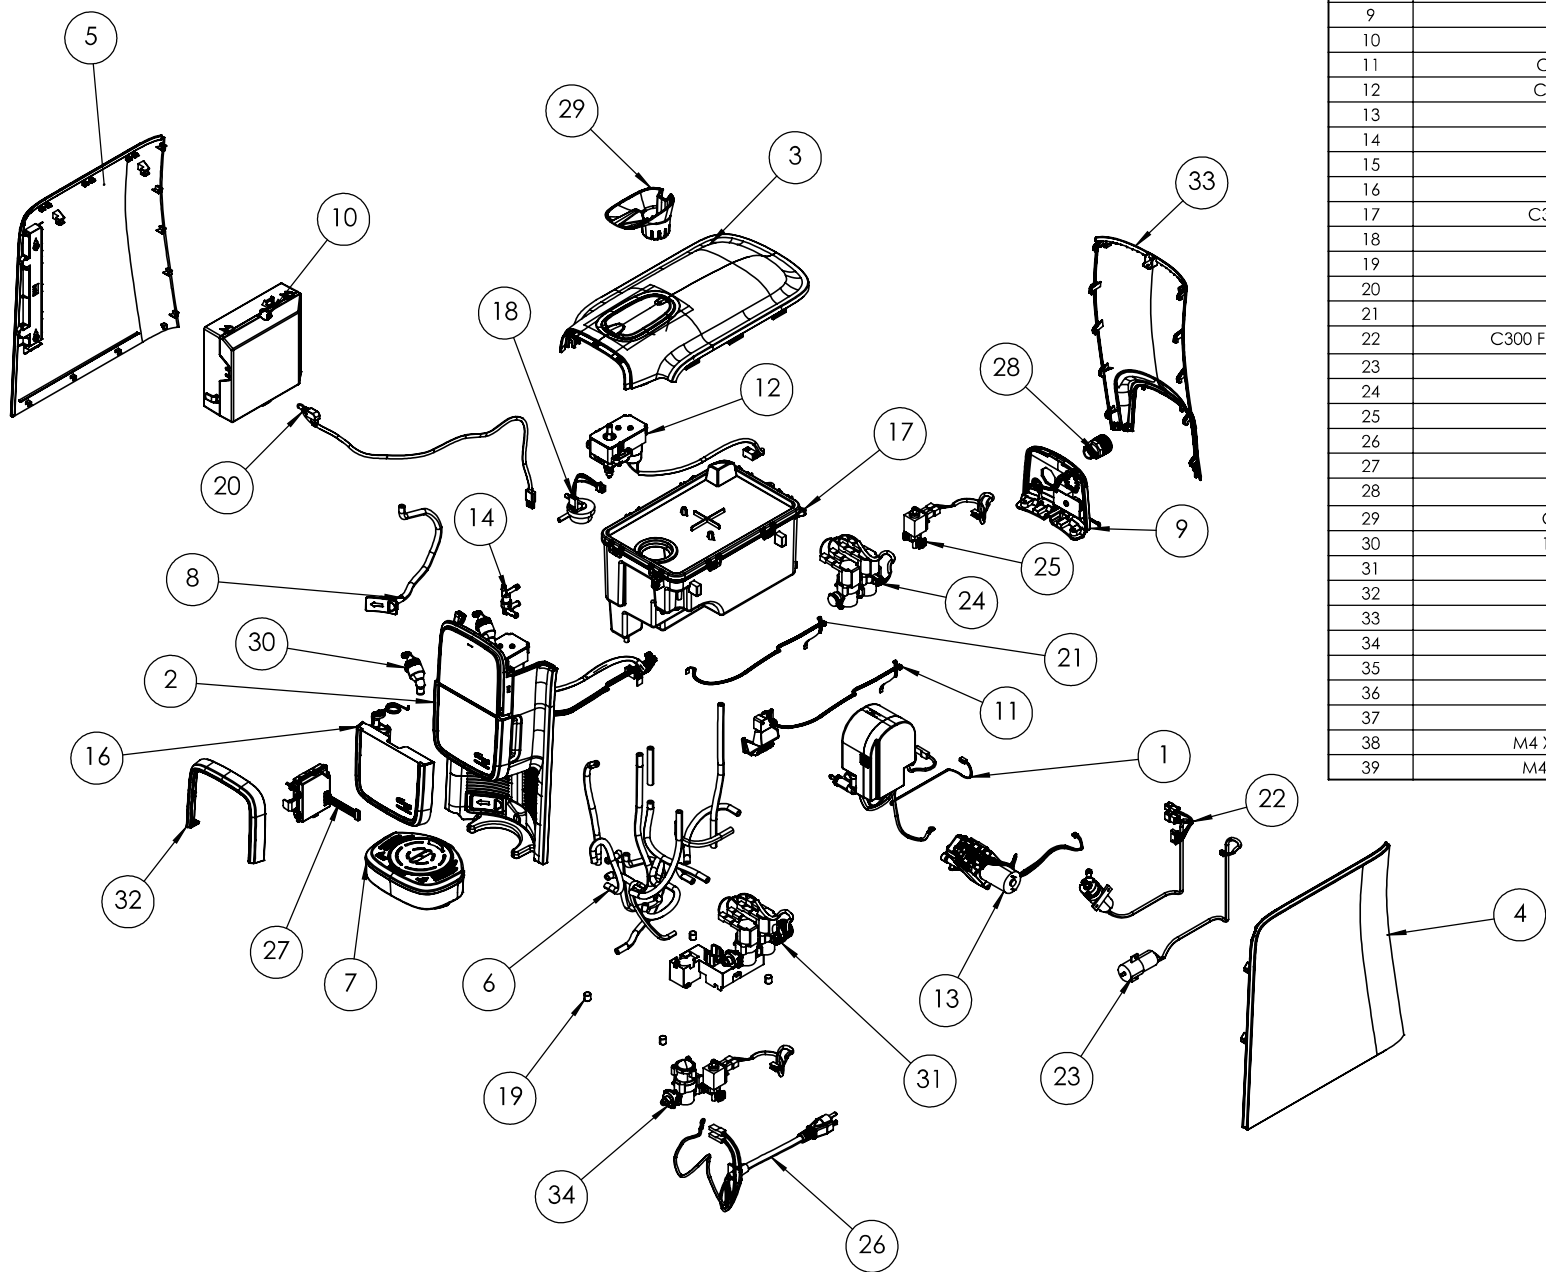



ITEM No.	DESCRIPTION	SPARES NO	PAGE REFERENCE
1	C300 THERMAL BLOCK SPARE ASYM	10077301	C300 - 01
2	C300 FRONT PANEL SPARE ASYM	10077302	C300 - 02
3	C300 TOP COVER SPARE GROUP	10077303	C300 - 03
4	C300 RIGHT SPARE ASYM	10077304	C300 - 04
5	C300 LEFT COVER SPARE ASYM	10077305	C300 - 05
6	C300 Tubing kit	10077308	C300 - 06
7	C300 DRIP TRAY ASYM	10077309	C300 - 07
8	C300 COLD TANK DRAIN CAP ASYM	10077310	C300 - 08
9	C300 BACK PANEL ASYM	10077311	C300 - 09
10	C300 FULL PCBA ASYM	10077312	C300 - 10
11	C300 SCANNER SPARE ASYM	10077313	C300 - 11
12	C300 INJECTION MECH ASYM	10077314	C300 - 12
13	C300 DIVERT VALVE ASYM	10077315	C300 - 13
14	6 PSI PRV ASYM	10077316	C300 - 14
15	22 PSI PRV ASYM	10072475	C300 - 15
16	C300 DOOR ASYM	10077318	C300 - 16
17	C300 COLD TANK SPARE ASYM	10077319	C300 - 17
18	C300 FLOWMETER ASYM	10077320	C300 - 18
19	C300 FOOT	10077321	C300 - 19
20	C300 LCD UPDATE LOOM	10077322	C300 - 20
21	C300 BCR-FFC LOOM	10077323	C300 - 21
22	C300 Flowmeter_WLevel_Wpump Loom	10077324	C300 - 22
23	C300 AIR PUMP LOOM	10077325	C300 - 23
24	C300 INLET VALVE LOOM	10077326	C300 - 24
25	C300 T- VALVE LOOM	10077327	C300 - 25
26	C300 POWERCORD	10077328	C300 - 26
27	C300 IOT Module	10077329	C300 - 27
28	IN G 3.4 Fitting	10077331	C300 - 28
29	C300 COLD TANK STRAINER	10077332	C300 - 29
30	15MM CHECK VALVE ASYM	10077402	C300 - 30
31	MAIN WATER ASYM	10077399	C300 - 31
32	LCD TRIM	10077709	C300 - 32
33	REAR PANEL	10077397	C300 - 33
34	AMBIENT WATER KIT	10076982	C300 - 34
35	M4 HEXAGON NUT PACK	10077306	N/A
36	CLIP IN CALE TIE	10077307	N/A
37	BAG OF 100 CABLE TIES	10072544	N/A
38	M4 X 12MM PLASTITE SCREW PACK	10072445	N/A
39	M4 X 12 MACHINE SCREW PACK	10077317	N/A

C300 THERMAL BLOCK SPARE ASYM - 10077301

NOTES:


CONNECTORS HAVE BEEN LABELLED WITH THE NAME OF THE SOCKET ON THE PCBA

THE WATER FITTINGS HAVE BEEN LABELLED WITH THE NAME OF THE COMPONENT THEY CONNECT TO

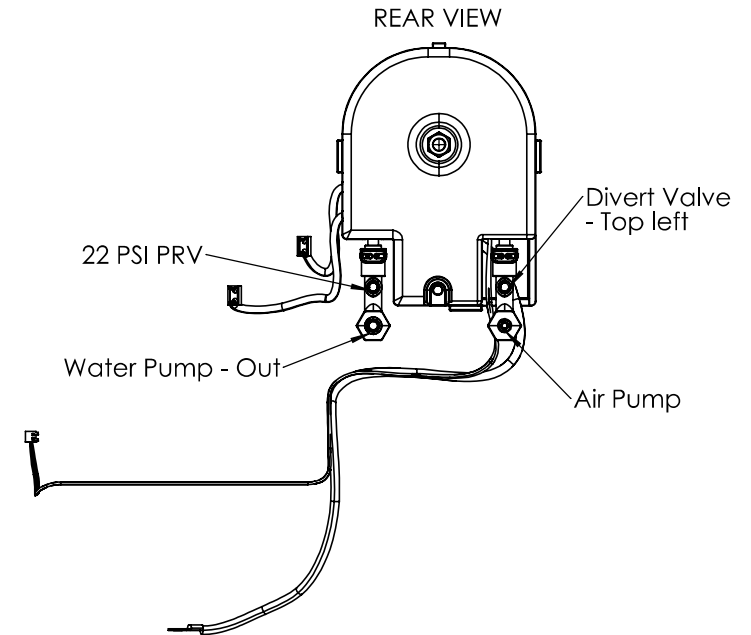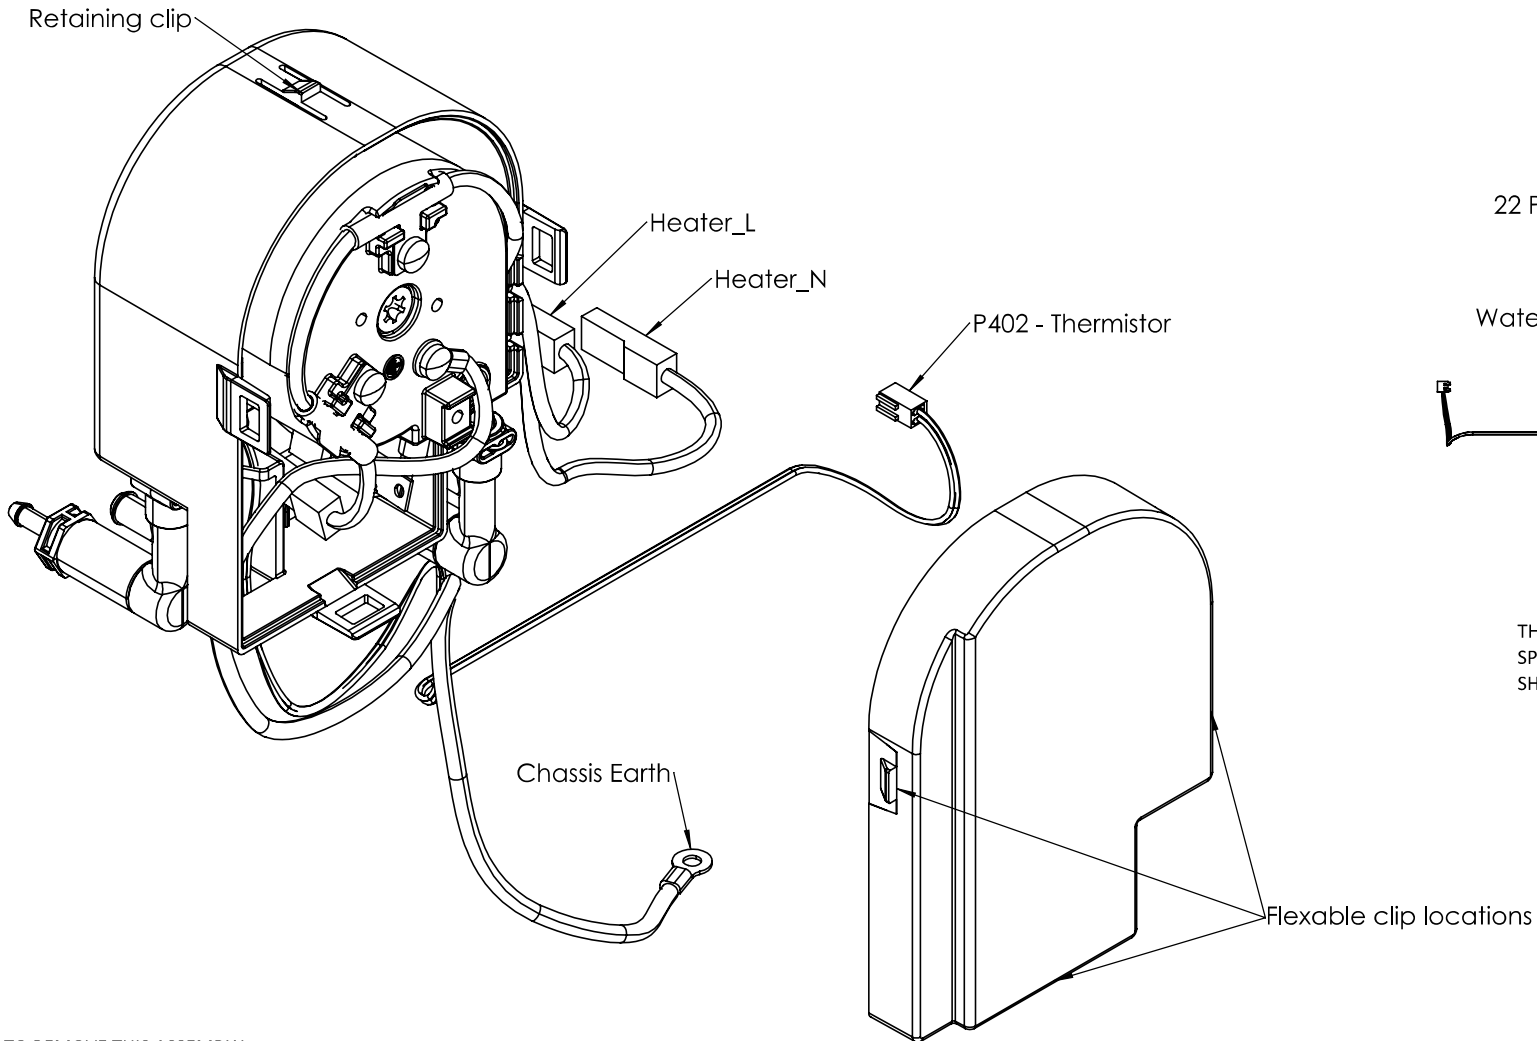

THE BELOW DRAWINGS ARE FOR REFERENCE ONLY

SPARES KIT TO INCLUDE 4 CABLE TIES AND 4 TUBES AT WITH THE DIMENSIONS SHOWN BELOW:



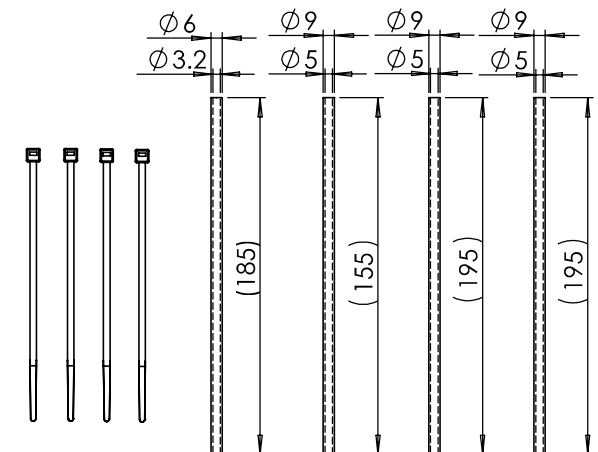


TO REMOVE THIS ASSEMBLY:


1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE THE LID OF THE THERMAL BLOCK - FLEXIBLE CLIP LOCATIONS HIGHLIGHTED
5. CUT APPROPRIATE CABLE TIES ON THE AIR PUMP, DIVERT VALVE, WATER PUMP AND PRV
6. REMOVE APPROPRIATE ELECTRICAL CONNECTIONS ON THE PCBA AND THE EARTH CONNECTION FROM THE CHASSIS - IT IS ADVISED TO REMOVE THE TORQUE SCREW FROM THE THERMAL BLOCK SPARE ASSEMBLY RETAINING THE CHASSIS AND MAINS POWER EARTH
7. REMOVE THE PHILIPS SCREW AT THE BOTTOM OF THE THERMAL BLOCK SPARE ASSEMBLY
8. WHILST COMPRESSING THE RETAINING CLIP AT THE TOP OF THE THERMAL BLOCK SPARE ASSEMBLY, SLIDE THE ASSEMBLY OUT OF THE CHASSIS

C300 FRONT PANEL SPARE ASYM - 10077302

NOTES:
CONNECTORS HAVE BEEN LABELLED WITH THE NAME OF THE SOCKET ON THE PCBA

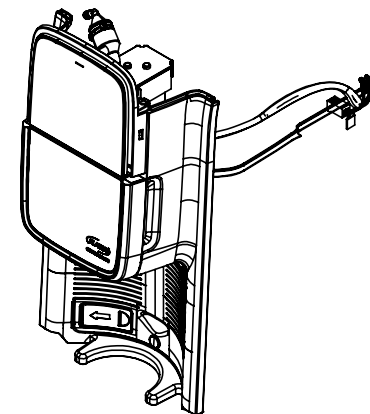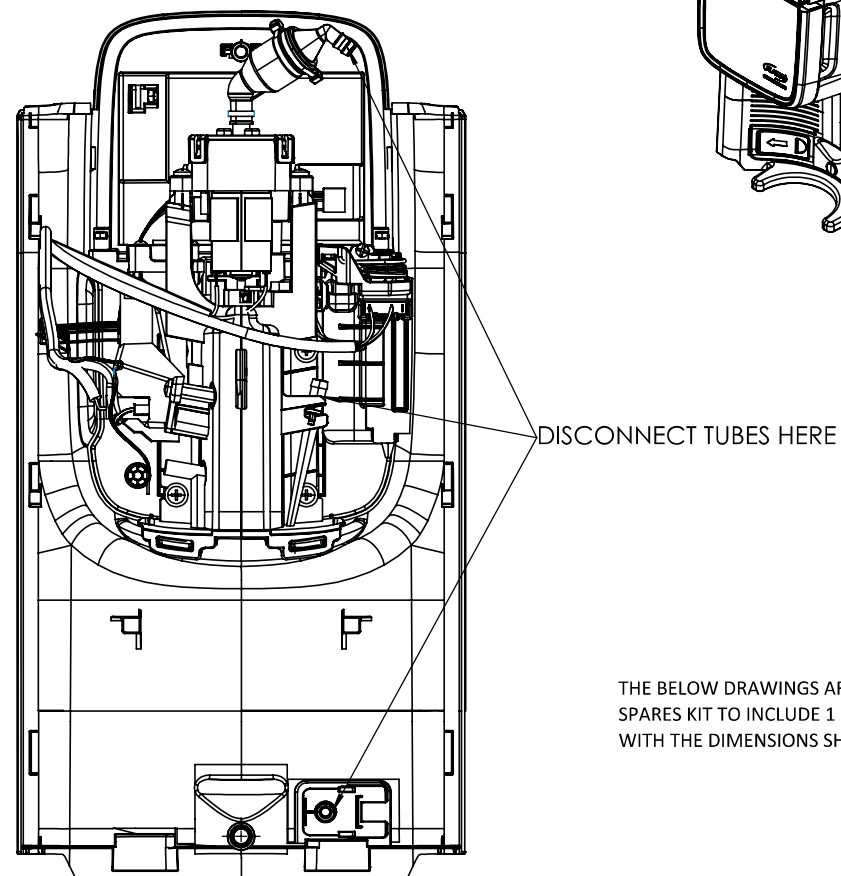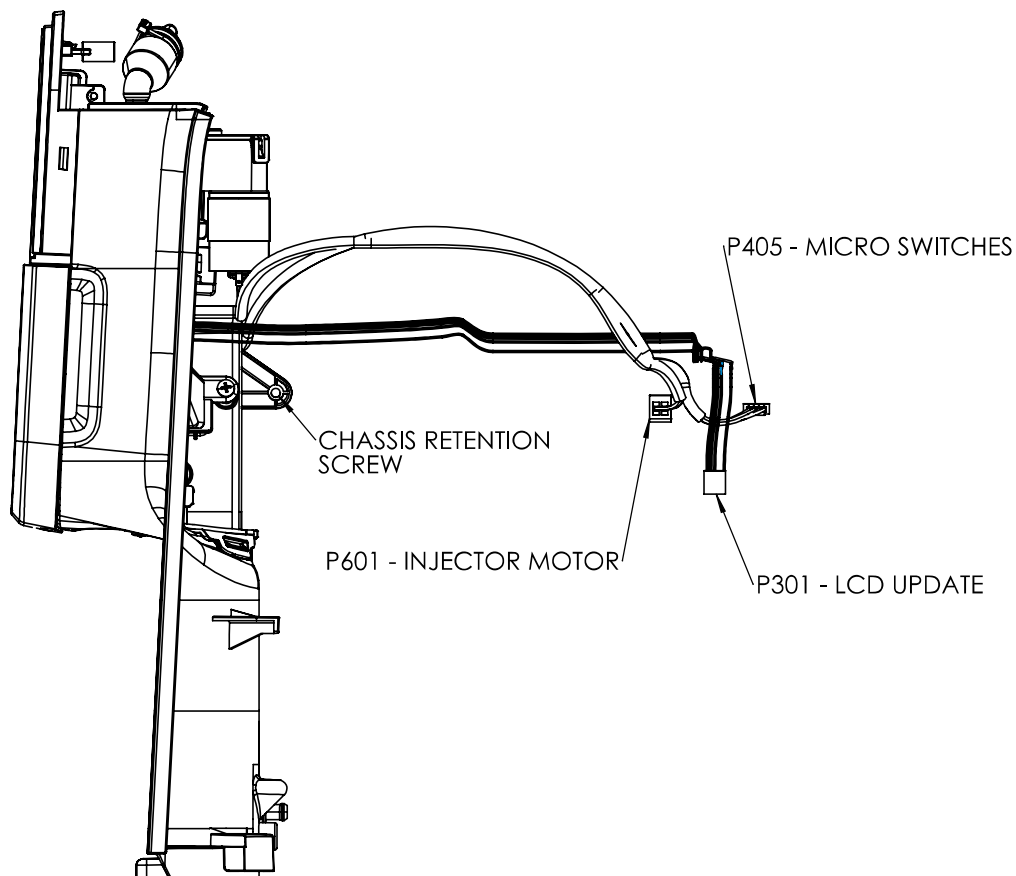



THE BELOW DRAWINGS ARE FOR REFERENCE ONLY
SPARES KIT TO INCLUDE 1 CABLE TIE AND 1 TUBE AT
WITH THE DIMENSIONS SHOWN BELOW:

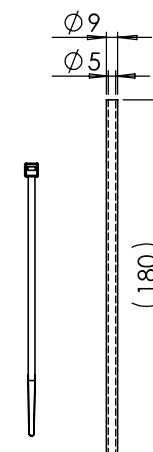


TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. DISCONNECT THE ITO MODULE FROM THE FRONT COVER
5. CUT THE CABLE TIE AND REMOVE THE TUBE ON THE 15MM CHECK VALVE CONNECTING TO THE 6 PSI PRV
6. CUT THE CABLE TIE AND REMOVE THE TUBE ON THE JET CONNECTING TO THE 6 PSI PRV
7. REMOVE THE CLIP IN CABLE TIES RETAINING THE NECESSARY LOOMS FROM THE CHASSIS - NOTE THESE CABLE TIES RETAIN OTHER LOOMS THAT ARE NOT IN THIS SPARES KIT SO THEY WILL NEED TO BE CUT AND REPLACED
8. REMOVE P601, P405 AND P301 FROM THE MAIN PCBA
9. REMOVE THE FRONT PANEL TO CHASSIS RETENTION SCREW - SCREW HIGHLIGHTED
10. LIFT THE FRONT PANEL UP SLIGHTLY AND THEN PULL FORWARD TO REMOVE

C300 TOP COVER SPARE ASYM - 10077303

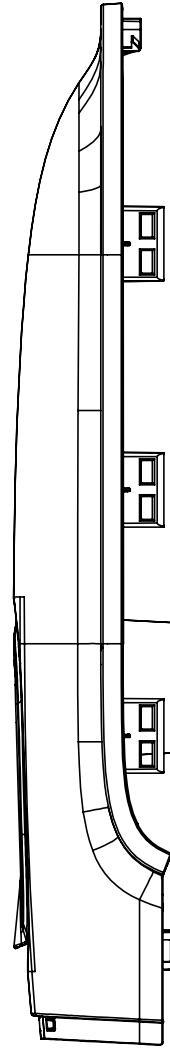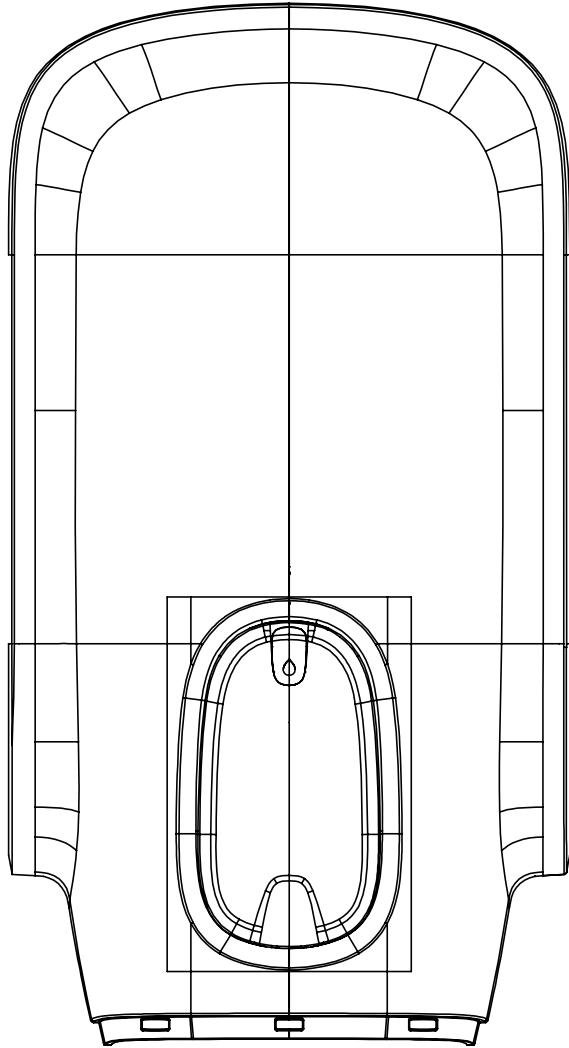




FRONT COVER TRIM RETENTION SCREWS

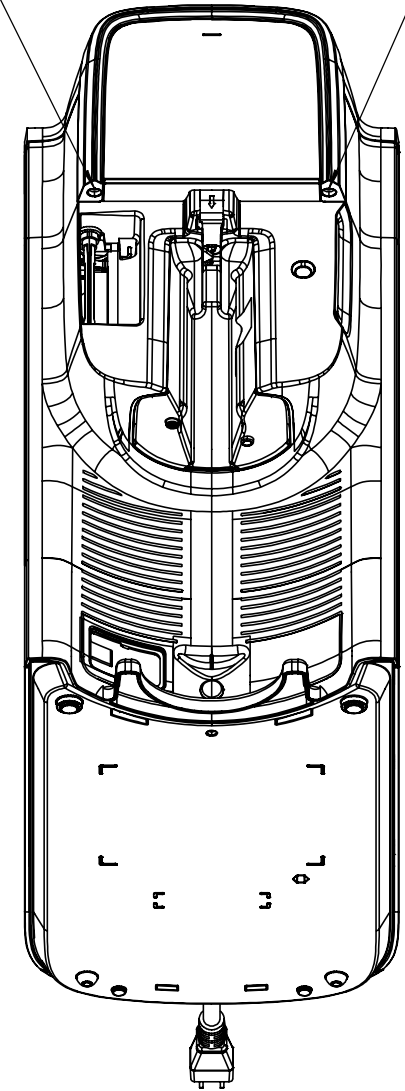

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS - SCREWS HIGHLIGHTED
3. FLEX THE FRONT COVER TRIM OFF THE FRONT COVER TO REMOVE
4. THE TOP COVER IS NOW POSSIBLE TO REMOVE BY PRYING THE TOP COVER UPWARDS




C300 RIGHT SPARE ASYM - 10077304

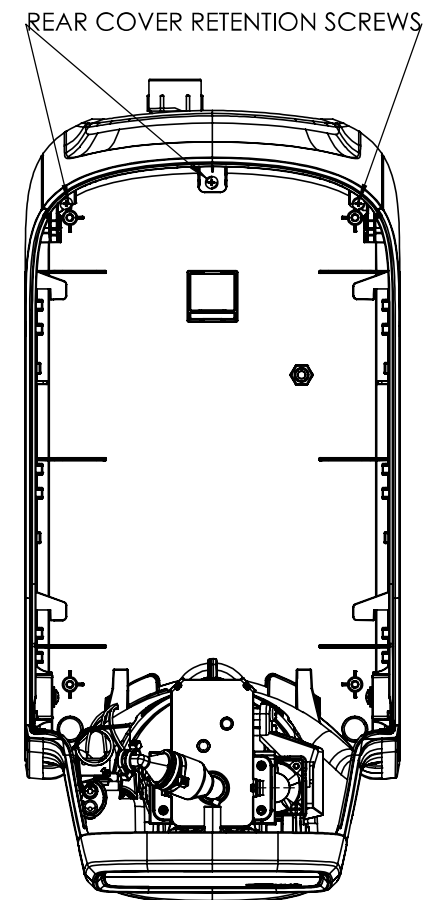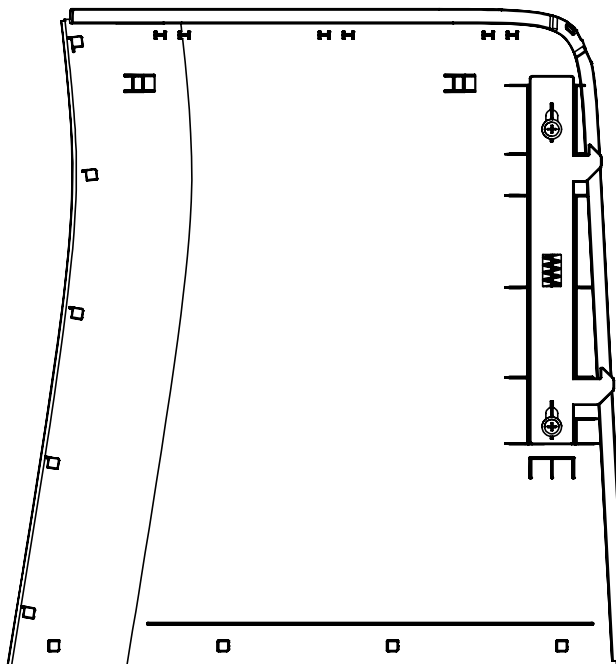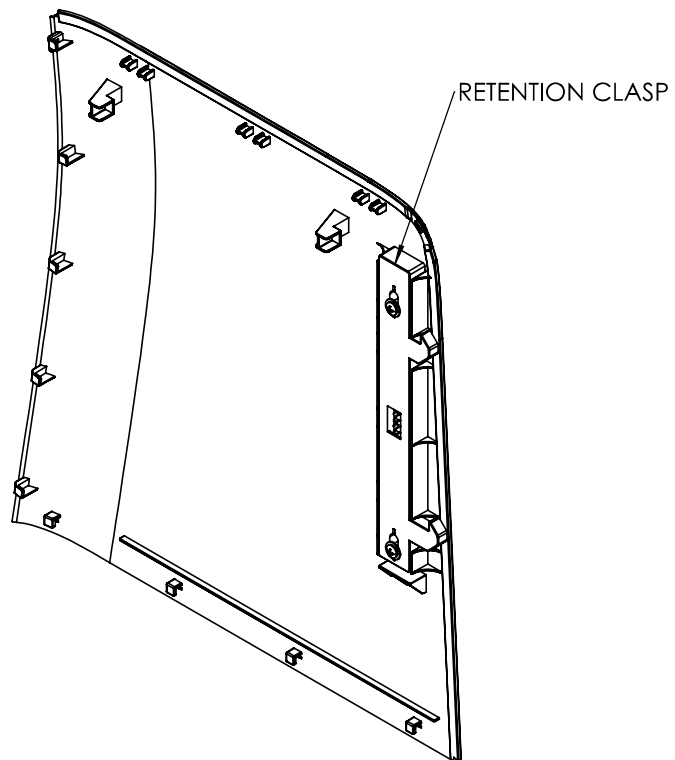

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS - SCREWS HIGHLIGHTED
3. REMOVE FRONT TRIM, TOP COVER AND REAR PANEL, MORE INFORMATION ON PAGES 03. 32, 33
4. REMOVE THE REAR COVER CENTRE RETENTION SCREW AND LOOSEN THE OUTER TWO SCREWS - SCREWS HIGHLIGHTED
5. SLIDE THE REAR COVER UP AND AWAY FROM THE CHASSIS TO REMOVE
6. PRESS AND HOLD THE RETENTION CLASP ON THE SIDE COVER DOWN WHILST SLIDING THE COVER TO THE REAR OF THE MACHINE TO REMOVE - CLASP HIGHLIGHTED




C300 LEFT COVER SPARE ASYM - 10077305

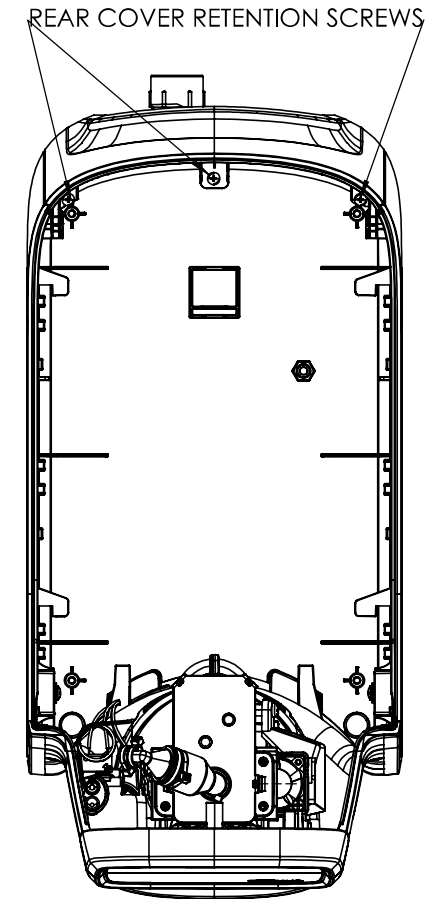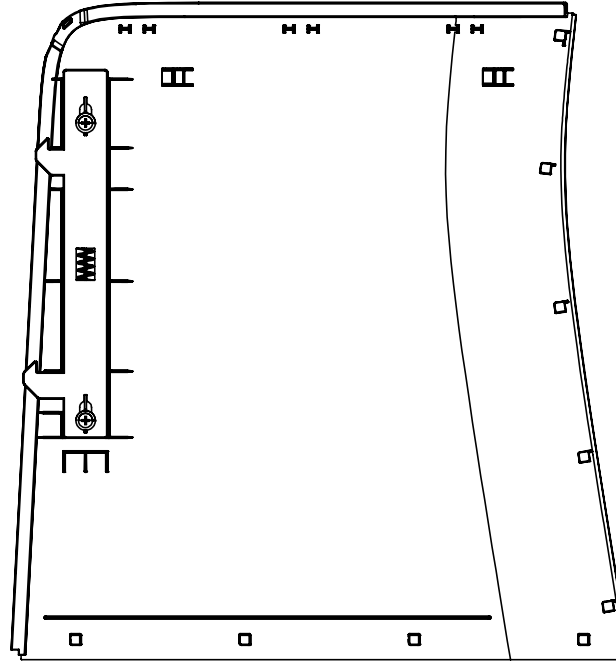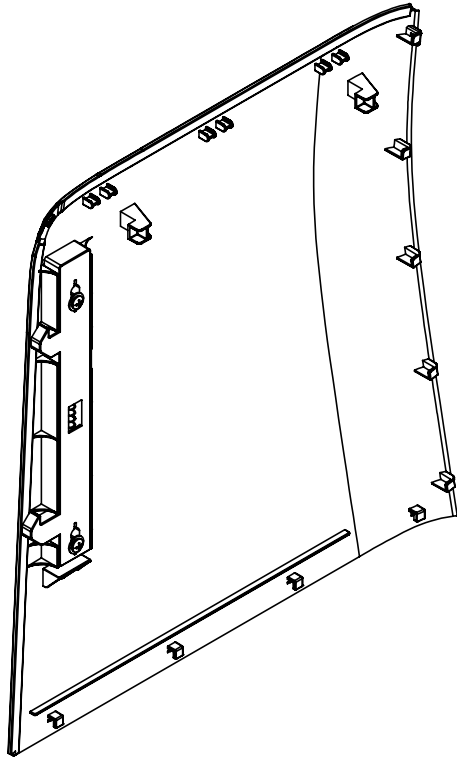

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS - SCREWS HIGHLIGHTED
3. REMOVE FRONT TRIM, TOP COVER AND REAR PANEL, MORE INFORMATION ON PAGES 03. 32, 33
4. REMOVE THE REAR COVER CENTRE RETENTION SCREW AND LOOSEN THE OUTER TWO SCREWS - SCREWS HIGHLIGHTED
5. SLIDE THE REAR COVER UP AND AWAY FROM THE CHASSIS TO REMOVE
6. PRESS AND HOLD THE RETENTION CLASP ON THE SIDE COVER DOWN WHILST SLIDING THE COVER TO THE REAR OF THE MACHINE TO REMOVE - CLASP HIGHLIGHTED

C300 TUBING KIT - 10077308

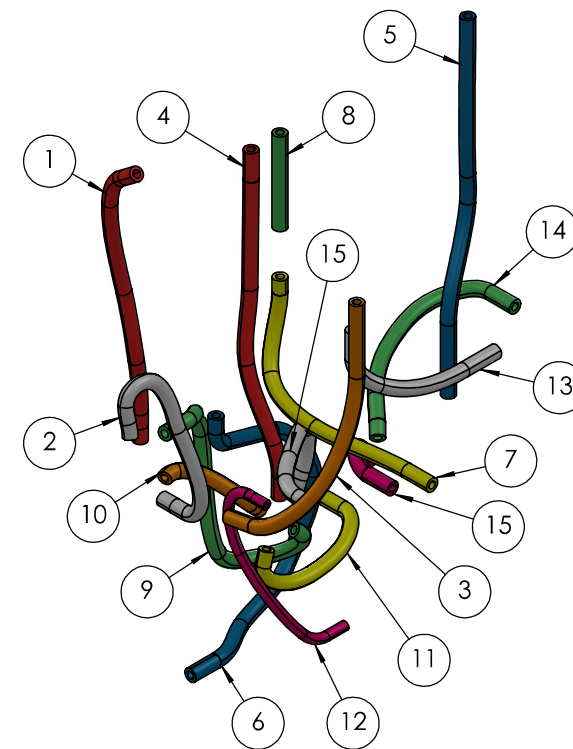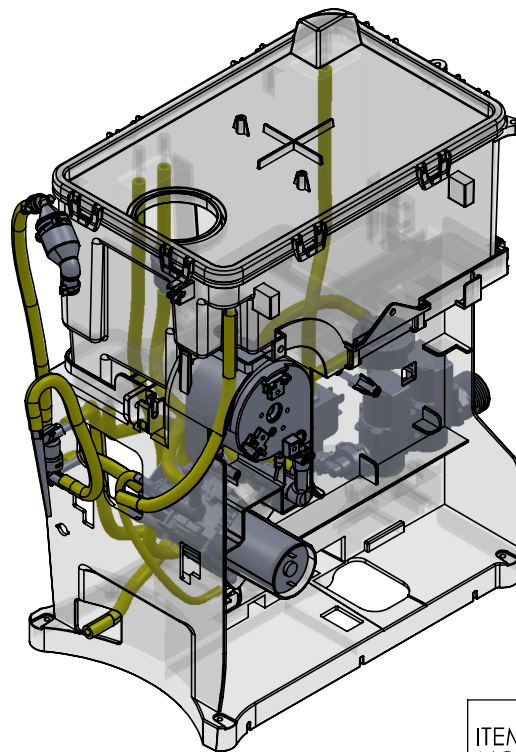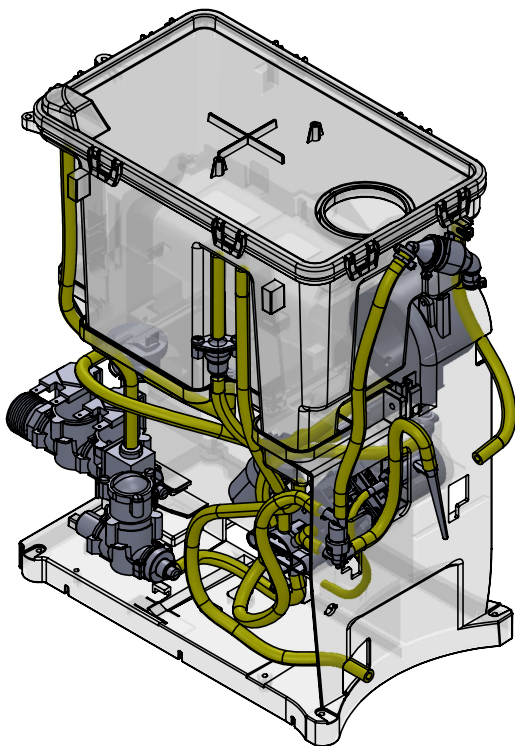


ITEM NO.	DESCRIPTION	COMPONENT CONNECTION	TUBE LENGTH (MM)
1	INJECTOR TUBE	FROM 6 PSI PRV TO 15MM CHECK VALVE	(228)
2	JET TUBE	FROM 6 PSI PRV TO JET	(181)
3	OVERFLOW	FROM COLD TANK TO FRONT PANEL	(187)
4	RETURN TO TANK	FROM DIVERT VALVE TO COLD TANK	(226)
5	RETURN TO TANK	FROM T-VALVE TO COLD TANK	(247)
6	COLD TANK DRAIN	FROM COLD TANK TO DRAIN CAP	(312)
7	OVER PRESSURE LINE	FROM THERMAL BLOCK TO 22 PSI PRV	(189)
8	RETURN TO TANK	FROM 22 PSI PRV TO COLD TANK	(65)
9	DIVERT TO JET	FROM DIVERT VALVE TO 6 PSI PRV	(233)
10	DIVERT TO INJECTOR	FROM DIVERT VALVE TO 6 PSI PRV	(70)
11	DIVERT COLD IN	FROM AMBIENT VALVE TO DIVERT VALVE	(123)
12	AIR IN	FROM AIR PUMP TO THERMAL BLOCK	(157)
13	COLD TANK OUT	FROM COLD TANK TO FLOW METER	(132)
14	FLOWMETER OUT	FROM FLOW METER TO WATER PUMP	(171)
15	HOT WATER TO DIVERT	FROM THERMAL BLOCK TO DIVERT VALVE	(154)
16	WATER PUMP OUT	FROM WATER PUMP TO THERMAL BLOCK	(62)

NOTES:
IT HAS BEEN ASSUMED IN THIS IMAGE THAT THE AMBIENT WATER KIT HAS BEEN FITTED
IT IS MOST LIKELY NOT NECESSARY TO REPLACE THE ENTIRETY OF THIS ASSEMBLY
PRINT THIS PAGE IN COLOUR FOR BETTER DETIAL

- TO REMOVE THIS ASSEMBLY:
1. ISOLATE MAINS POWER AND WATER
 2. DRAIN THE COLD TANK
 3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER, THE PCBA COVER AND THE FRONT PANEL - MORE INFORMATION ON PAGES 02, 03, 04, 05, 10, 32, 33
 4. REMOVE AND REPLACE THE NECESSARY TUBING


C300 DRIP TRAY ASYM - 10077309

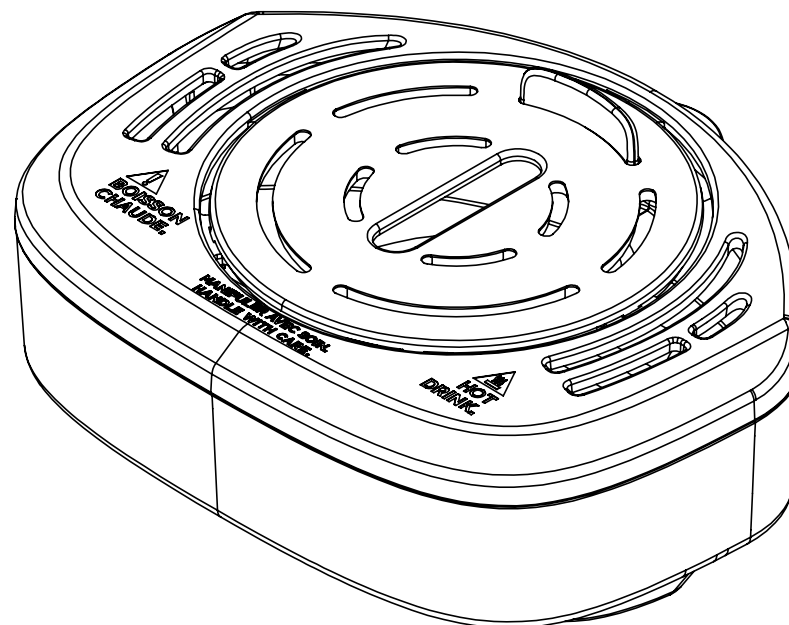

TO REMOVE THIS ASSEMBLY:

1. THERE ARE NO FIXINGS HOLDING THIS ASSEMBLY IN PLACE AND IT IS DESIGNED TO BE REMOVED AND CLEANED BY THE CUSTOMER



C300 COLD TANK DRAIN CAP ASYM - 10077310

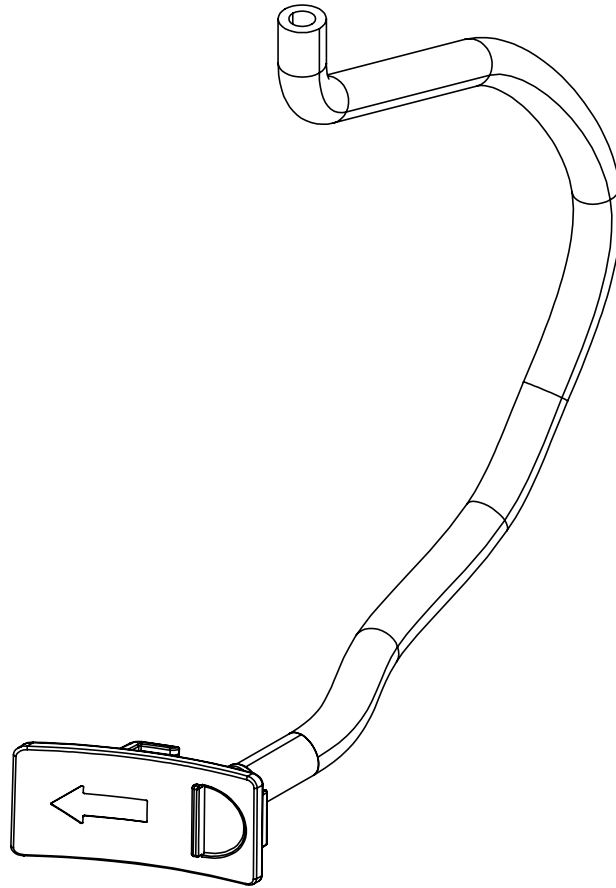

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, AND LEFT SIDE OVER - MORE INFORMATION ON PAGES 03, 05, 32, 33
4. CUT THE TWO CABLE TIES RETAINING THE TUBE ATTACHED FROM THE DRAIN CAP TO THE BOTTOM OF THE COLD TANK AND REMOVE THE TUBE FROM THE COLD TANK

C300 BACK PANEL ASYM - 10077311

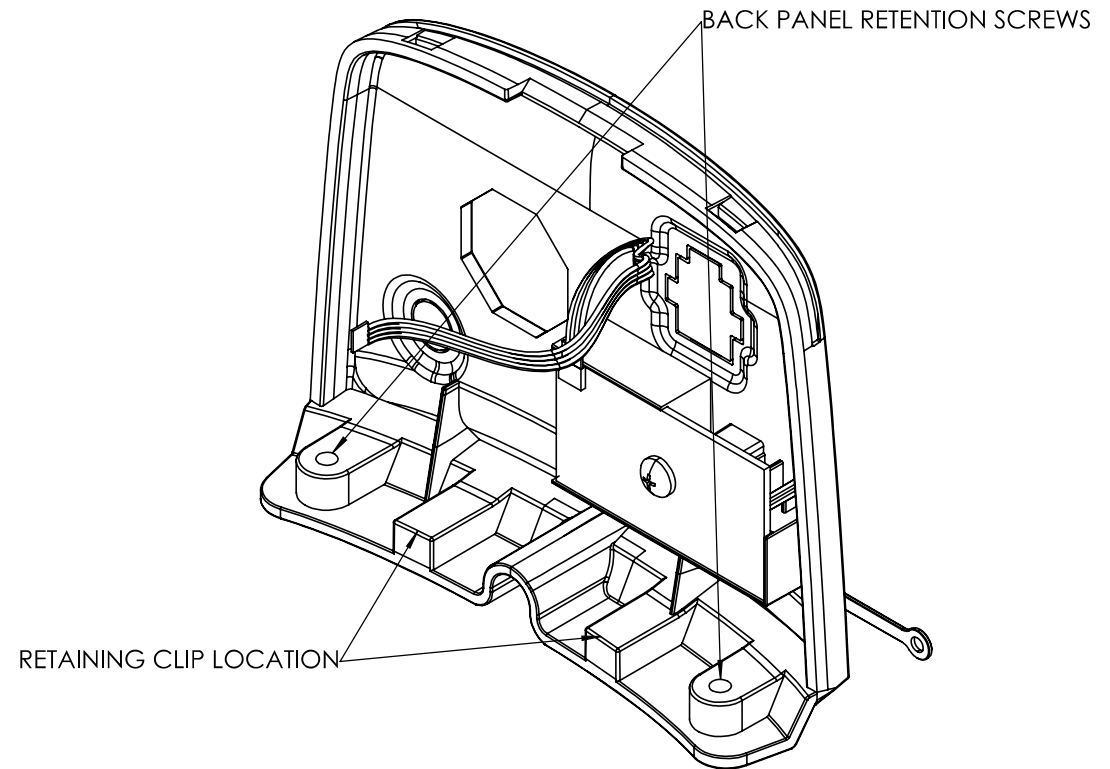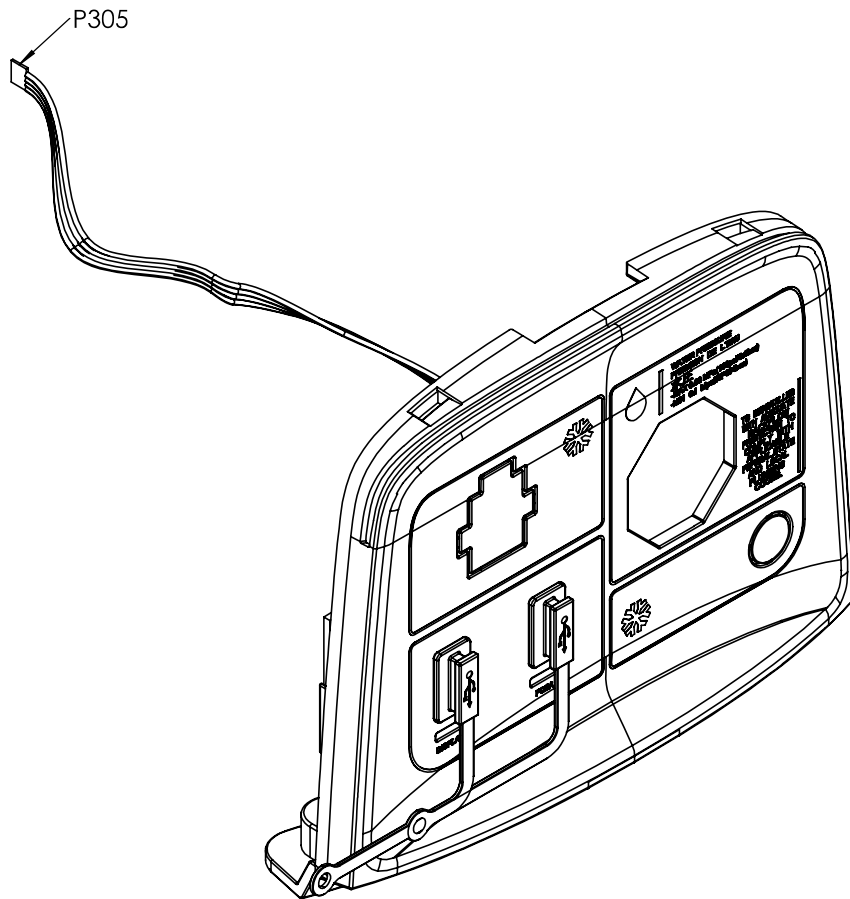


TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P305 FROM THE MAIN PCBA
5. REMOVE THE USB FROM THE BACK PANEL
6. REMOVE THE TWO PHILIPS SCREWS AT THE BASE OF THE BACK PANEL - SCREWS HIGHLIGHTED
7. IS NECESSARY REMOVE ANY FITTINGS ATTACHED TO THE MAINS WATER INLET
8. LIFT BACK PANEL AT A 45-DEGREE ANGLE PAYING ATTENTION TO THE TWO CLIPS RETAINING THE BACK PANEL - CLIP POSITIONS HIGHLIGHTED
9. IF IT IS NOT POSSIBLE TO REMOVE THE REAR PANEL AT THIS STAGE LOOSEN THE FOUR SCREWS HOLDING THE CHASSIS TO THE BASE PLATE - NOTE THIS SHOULD NOT BE NECESSARY

C300 FULL PCBA ASYM - 10077312


ONLY THE PCBA IS INCLUDED IN THIS ASSEMBLY

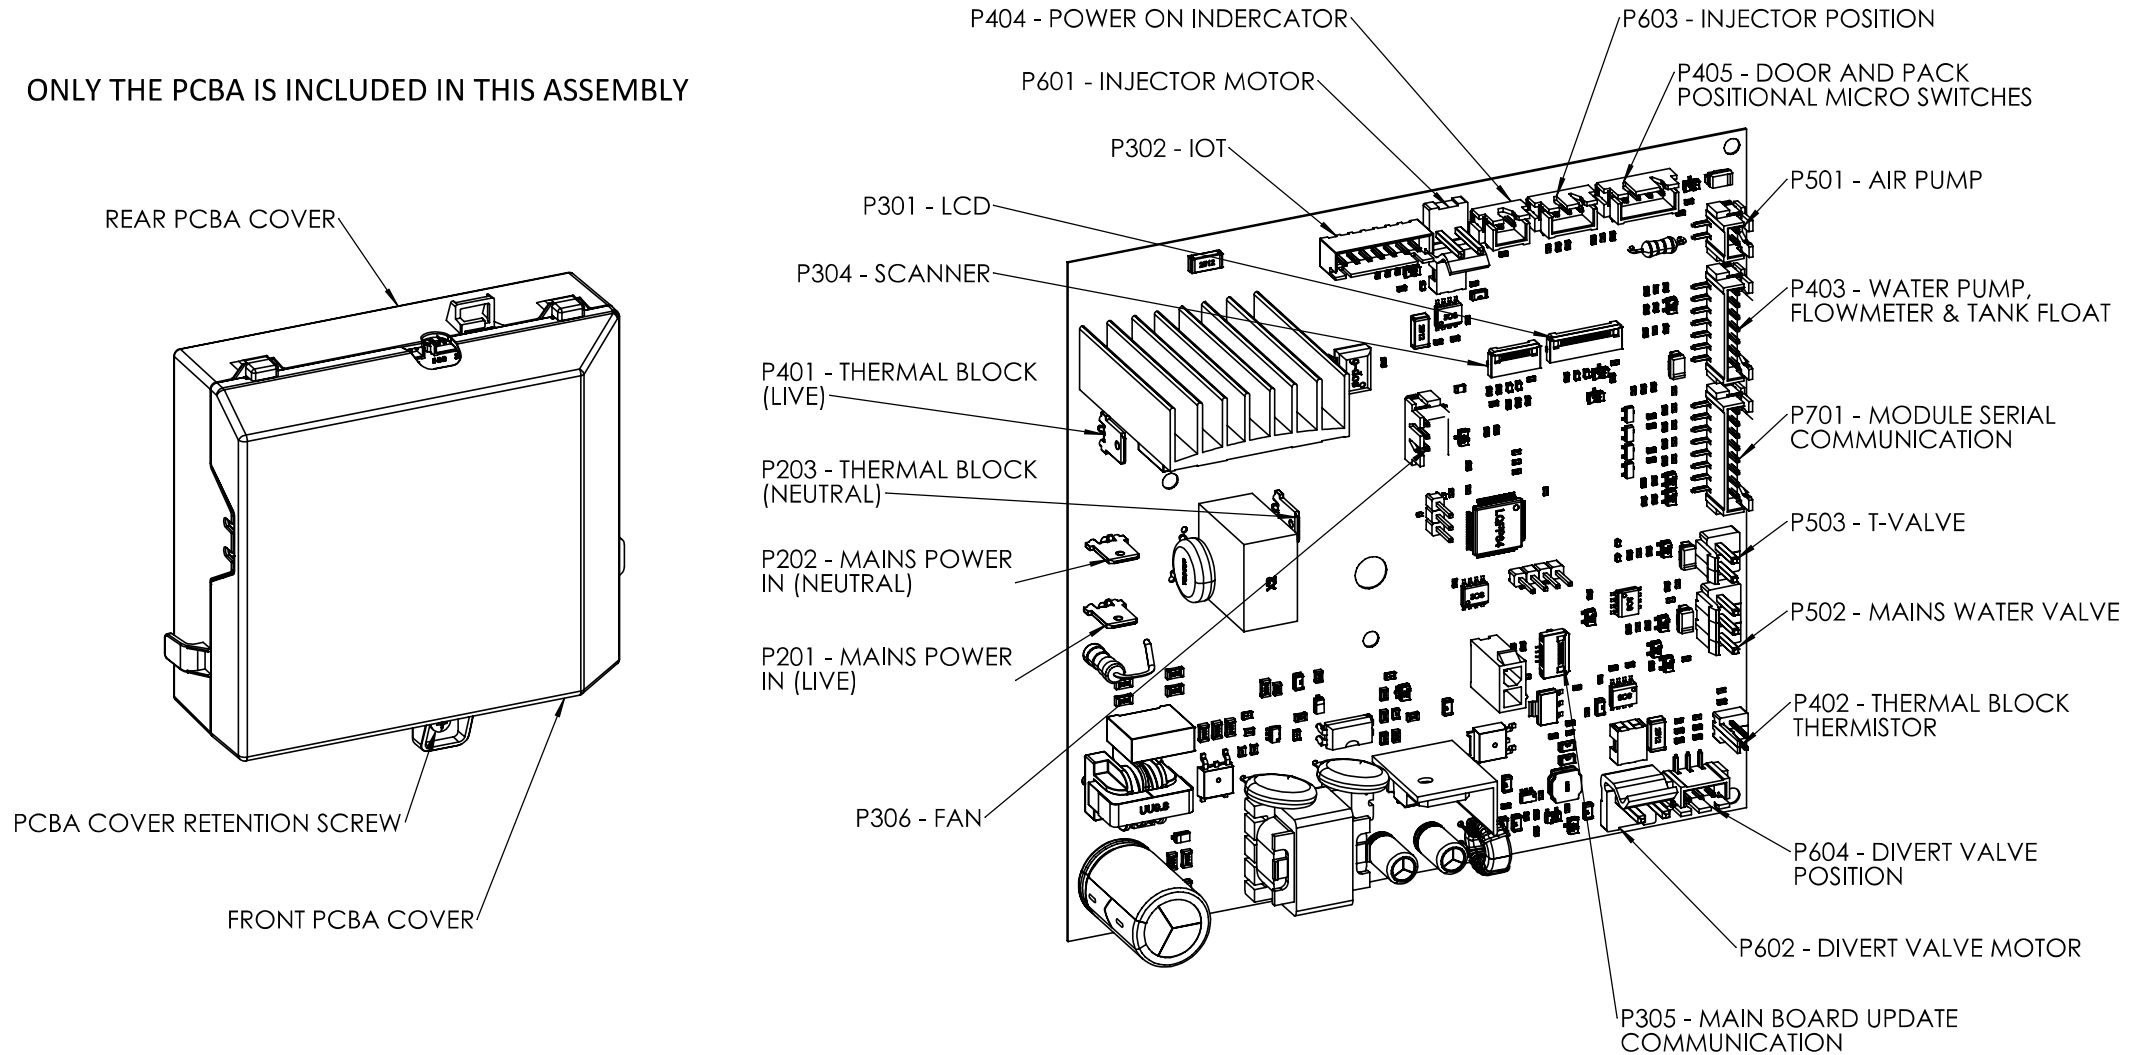

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL AND RIGHT SIDE COVER - MORE INFORMATION ON PAGES 03, 04, 32, 33
4. TO REMOVE THE MAIN FRONT PCBA COVER REMOVE THE PCBA COVER RETENTION SCREW
5. PULL THE COVER DOWN AND TOWARDS THE RIGHT HAND SIDE OF THE MACHINE TO REMOVE
6. REMOVE ALL THE CONNECTIONS TO THE MAIN PCBA
7. UNSCREW THE PCBA FROM THE REAR PCBA COVER
8. THE SCREWS RETAINING THE REAR PCBA COVER TO THE CHASSIS MOULDING WILL BE VISIBLE ONCE THE PCBA HAS BEEN REMOVED. REMOVE THESE SCREWS THEN THE ASSEMBLY CAN BE REPLACED


C300 SCANNER SPARE ASYM - 10077313

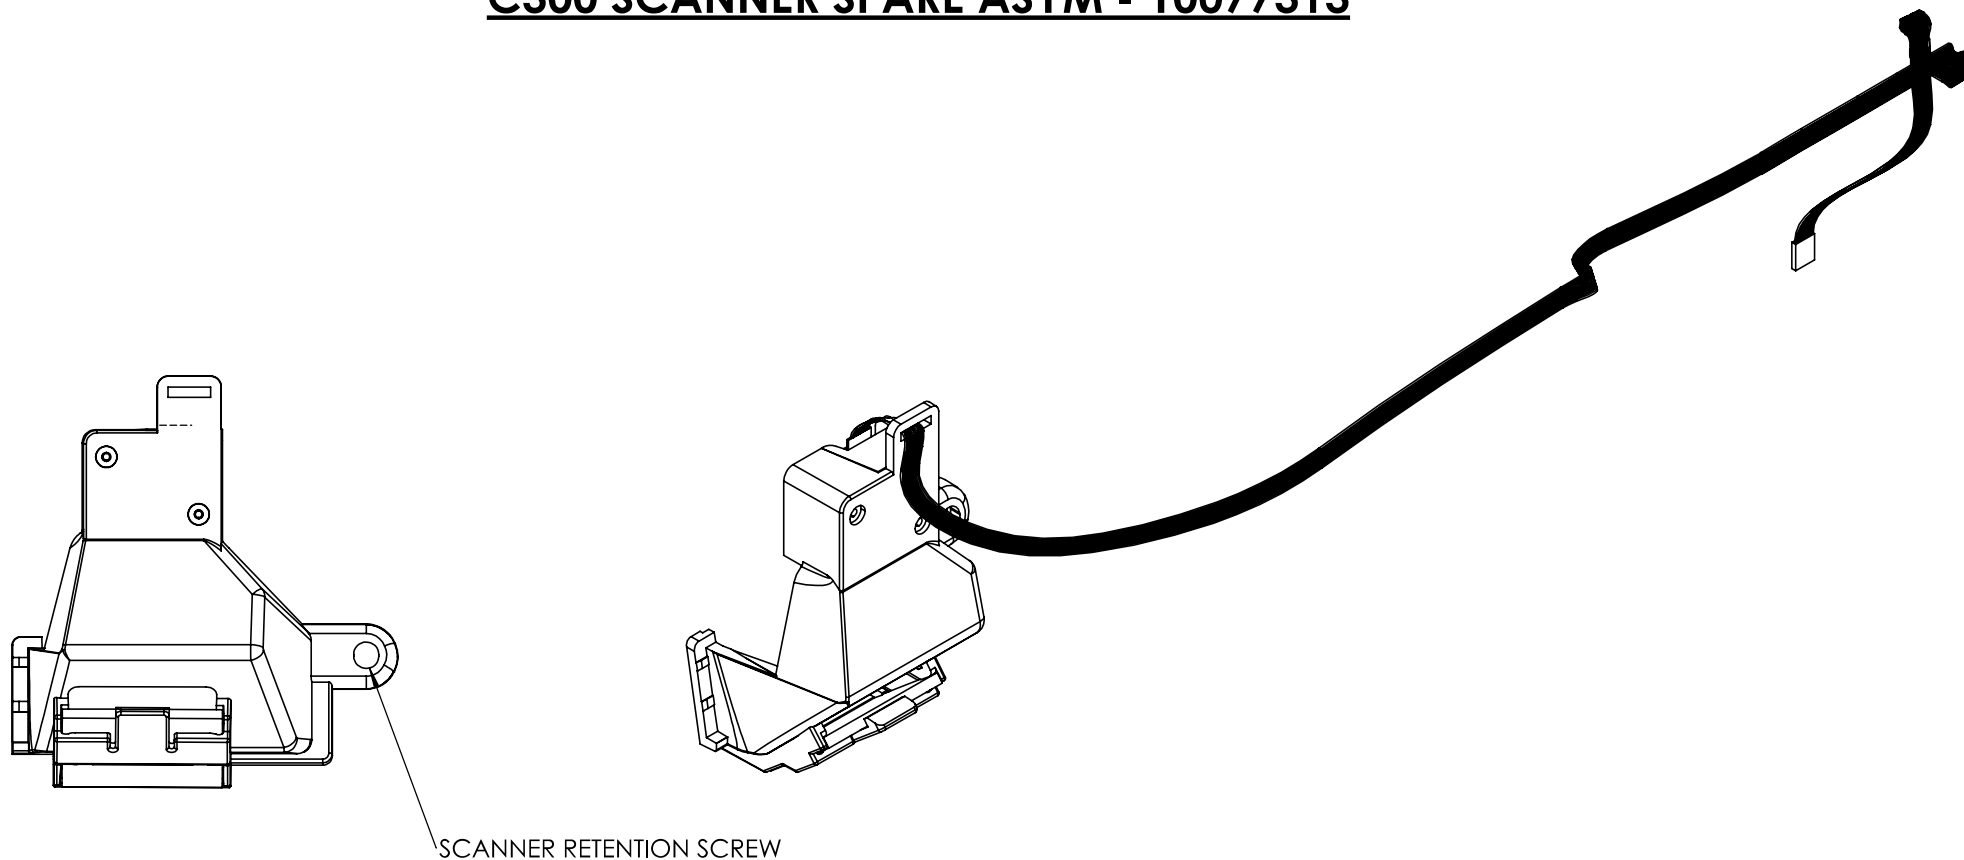

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER AND PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 10, 32, 33
4. REMOVE CONNECTION P304 FROM THE MAIN PCBA
5. REMOVE SCANNER RETENTION SCREW - SCREW HIGHLIGHTED
6. PULL SCANNER TOWARDS THE RIGHT HAND SIDE OF THE MACHINE TO REMOVE - NOTE WHEN REPLACING THE SCANNER IF YOU ARE FINDING IT DIFFICULT YOU CAN ALSO REMOVE THE FRONT COVER



C300 INJECTION MECH ASYM - 10077314

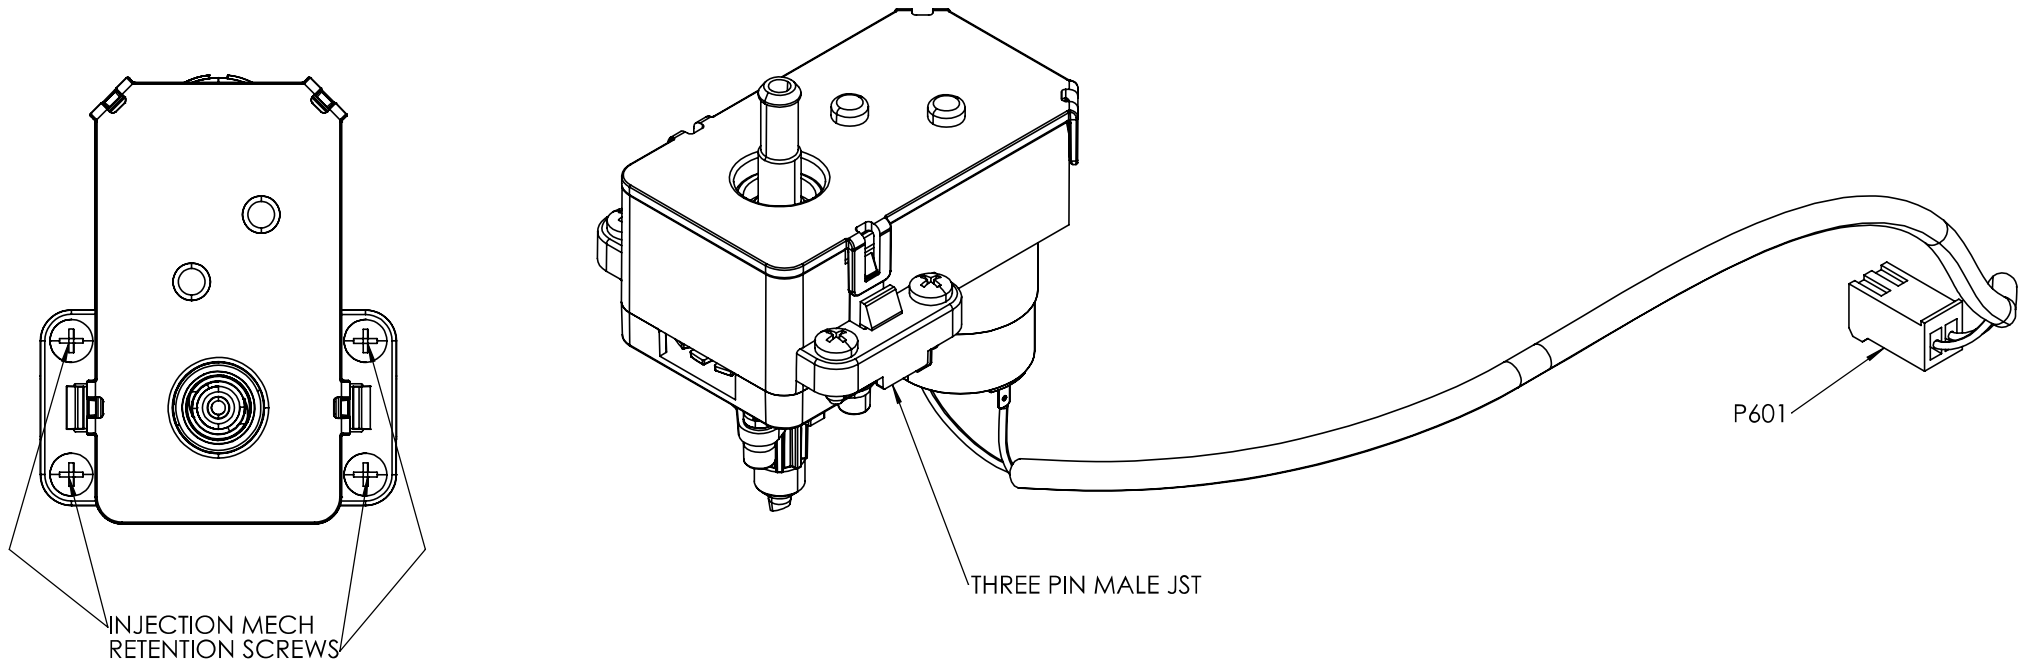

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER AND PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 10, 32, 33
4. CUT THE TWO CABLE TIES ON THE 15MM CHECK VALVE CONNECTION TO THE TOP OF THE INJECTION MECH
5. REMOVE CONNECTION P601 FROM THE MAIN PCBA
6. CUT THE CLIP IN CABLE TIES RETAINING THE MOTOR POWER LEAD CONNECTED TO P601
7. REMOVE THE THREE PIN JST MALE CONNECTOR FROM THE INJECTION MECH ASSEMBLY - CONNECTION POSITION HIGHLIGHTED
8. REMOVE THE FOUR RETAINING PHILIPS SCREWS FROM THE TOP OF THE INJECTION MECH ASSEMBLY
9. LIFT THE INJECTION MECH ASSEMBLY UPWARDS TO REMOVE



C300 DIVERT VALVE ASYM - 10077315

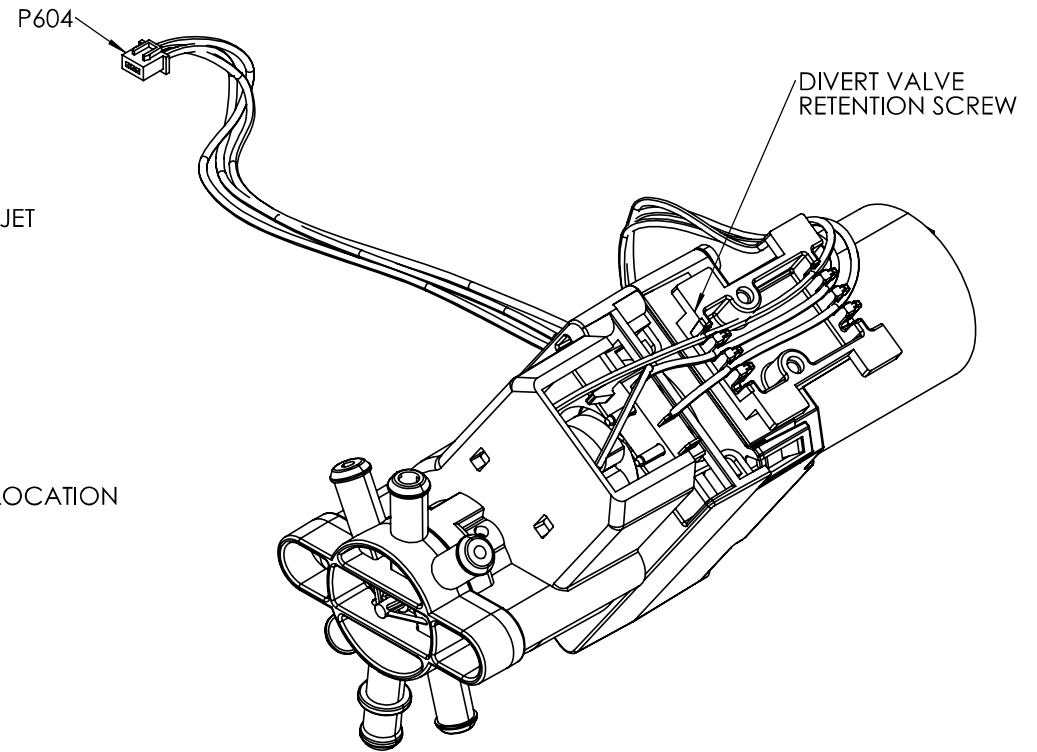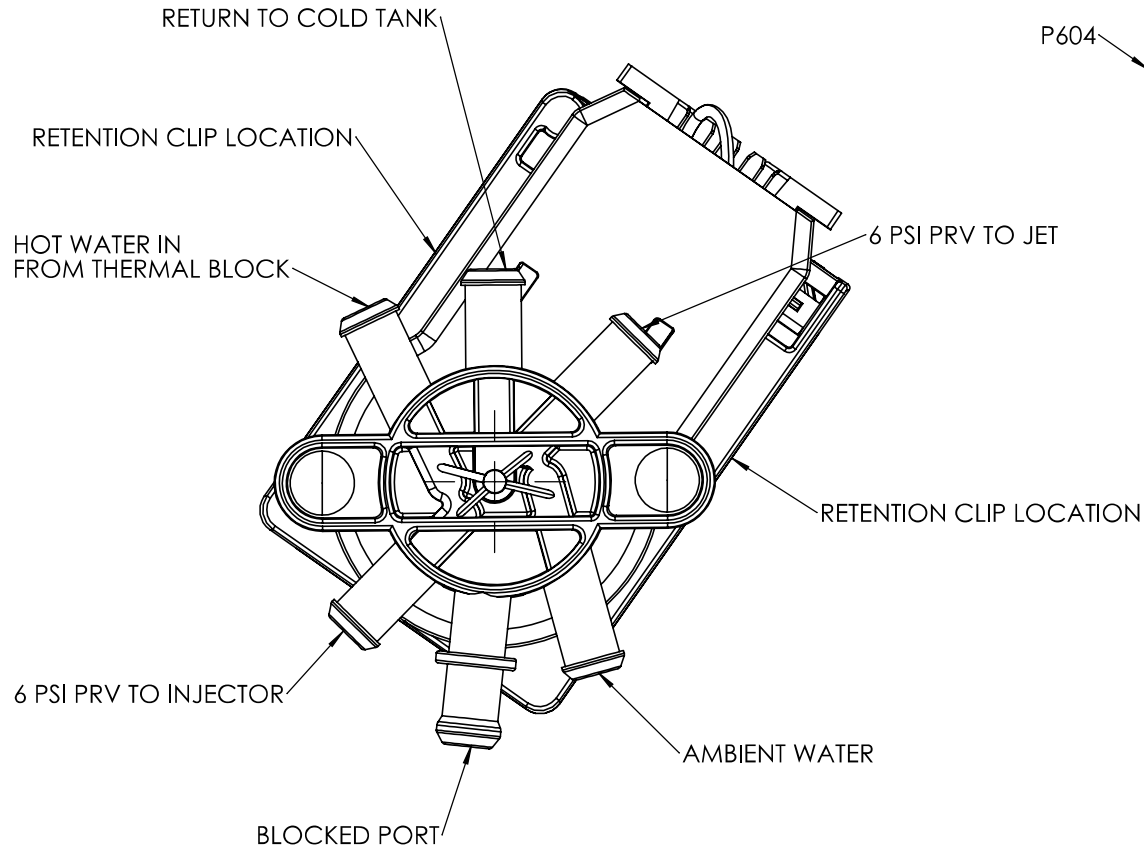

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE COVER, RIGHT SIDE COVER AND PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P602 AND P604 FROM THE MAIN PCBA
5. REMOVE DIVERT VALVE RETENTION SCREW - SCREW APPROXIMATE LOCATION HIGHLIGHTED
6. REMOVE ALL THE TUBE CONNECTIONS CUTTING THE CABLE TIES ATTACHED TO THE DIVERT VALVE
7. FLEX THE TWO RETENTION CLIPS AND PULL THE DIVERT VALVE ASSEMBLY TO THE LEFT-HAND SIDE OF THE MACHINE TO REMOVE - NOTE THESE RETENTION CLIPS ARE MOULDED TO THE CHASSIS AND ARE NOT REPLACEABLE IF BROKEN



6PSI PRV ASYM - 10077315

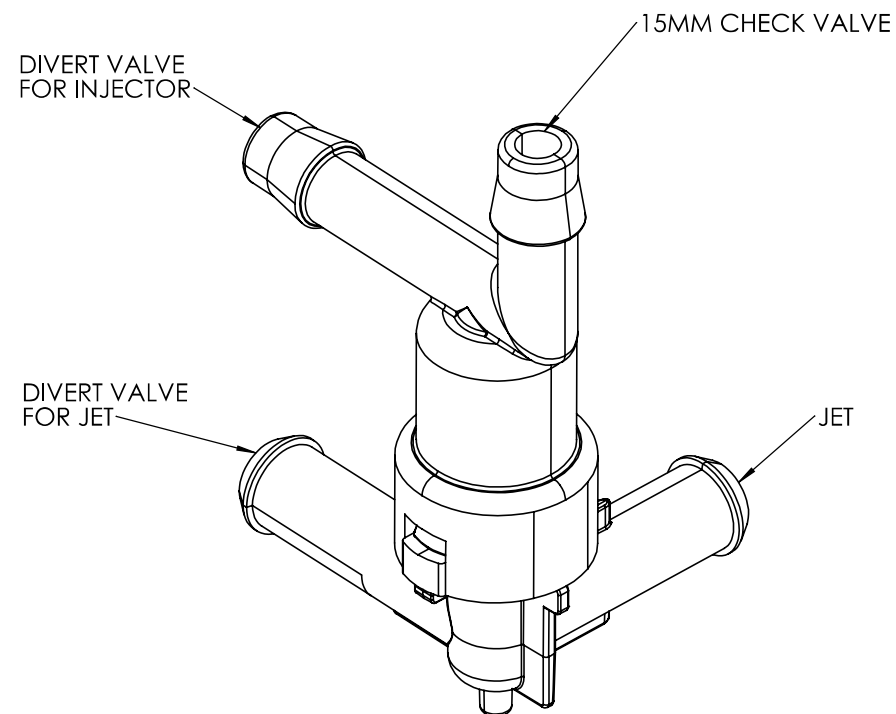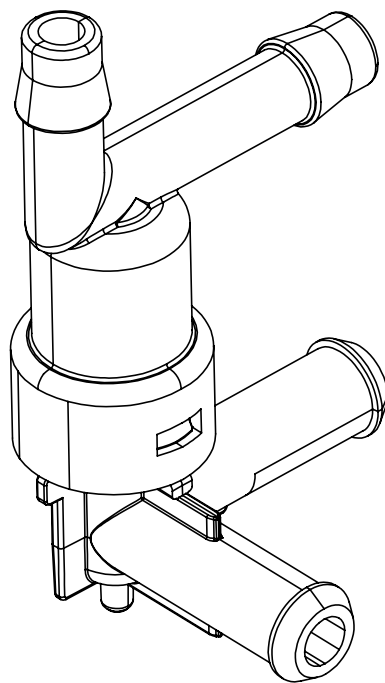

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE OVER - MORE INFORMATION ON PAGES 03, 05, 32, 33
4. THE FRONT PANEL DOES NOT NEED TO BE REMOVED BUT CAN PROVIDE MORE ACCESS TO THE PART IF NEEDED
5. CUT ALL THE CABLE TIES CONNECTING TO THE 6 PSI PRV VALVE AND REMOVE THE CONNECTED TUBES
6. THIS PART CAN NOW BE REMOVED AND REPLACED



22 PSI PRV ASYM - 10072475

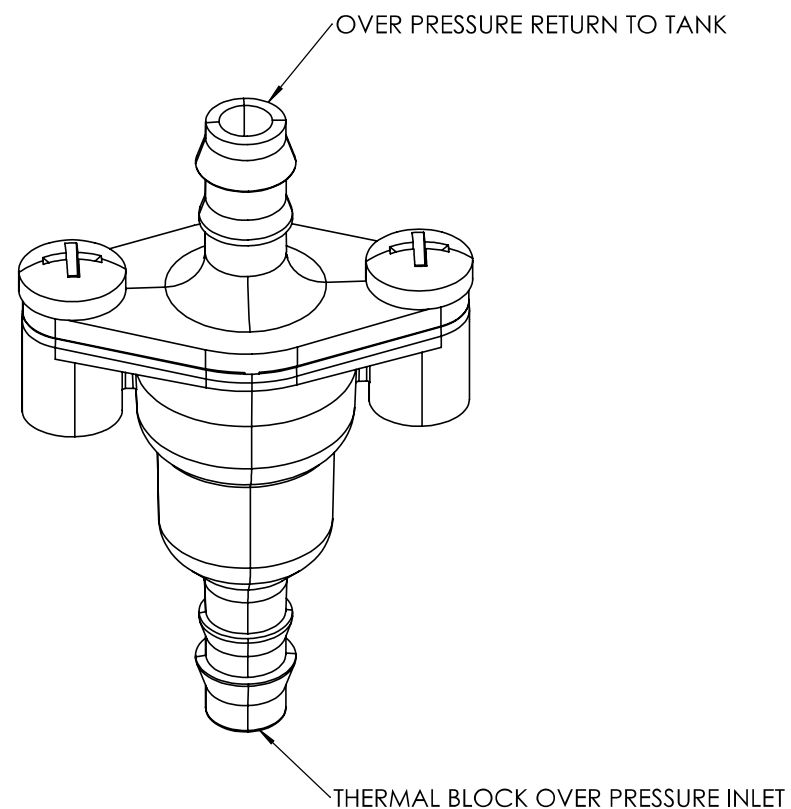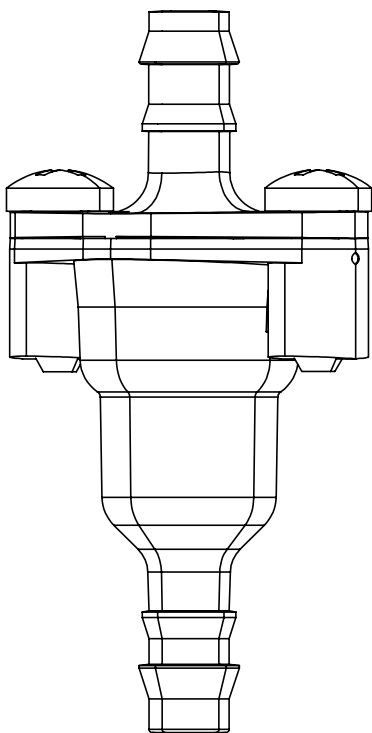

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE OVER - MORE INFORMATION ON PAGES 03, 05, 32, 33
4. THE FRONT PANEL DOES NOT NEED TO BE REMOVED BUT CAN PROVIDE MORE ACCESS TO THE PART IF NEEDED
5. CUT ALL THE CABLE TIES CONNECTING TO THE 22 PSI PRV VALVE AND REMOVE THE CONNECTED TUBES
6. THIS PART CAN NOW BE REMOVED AND REPLACED


C300 DOOR ASYM - 10077318

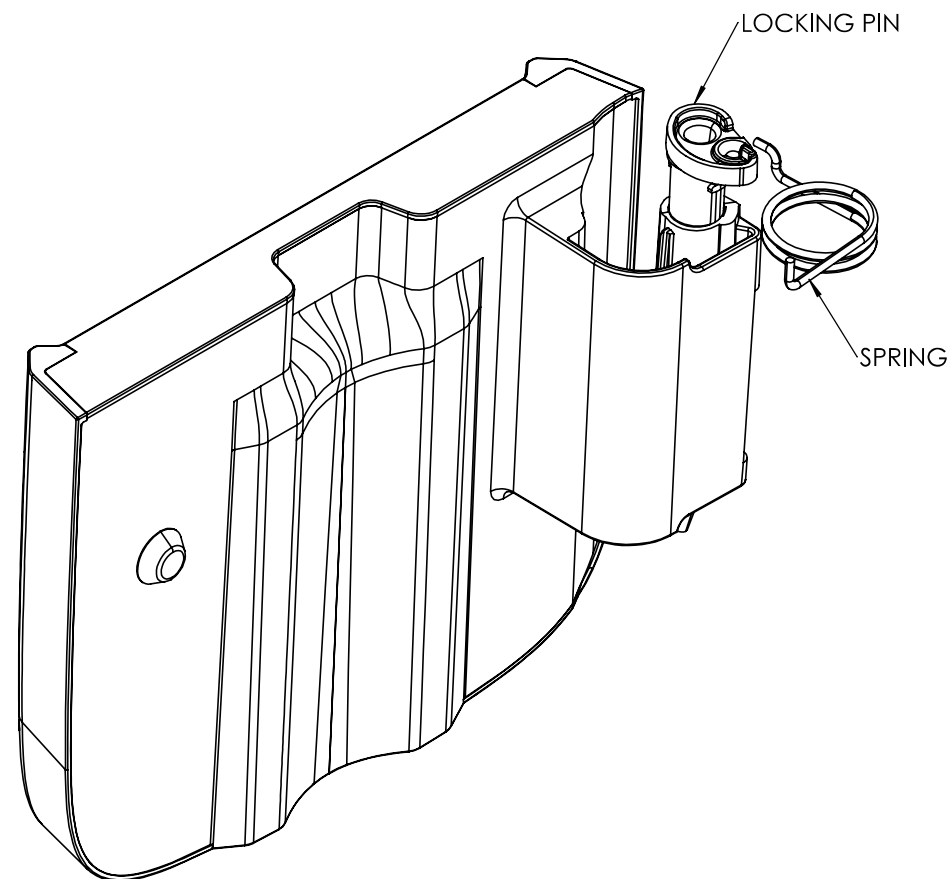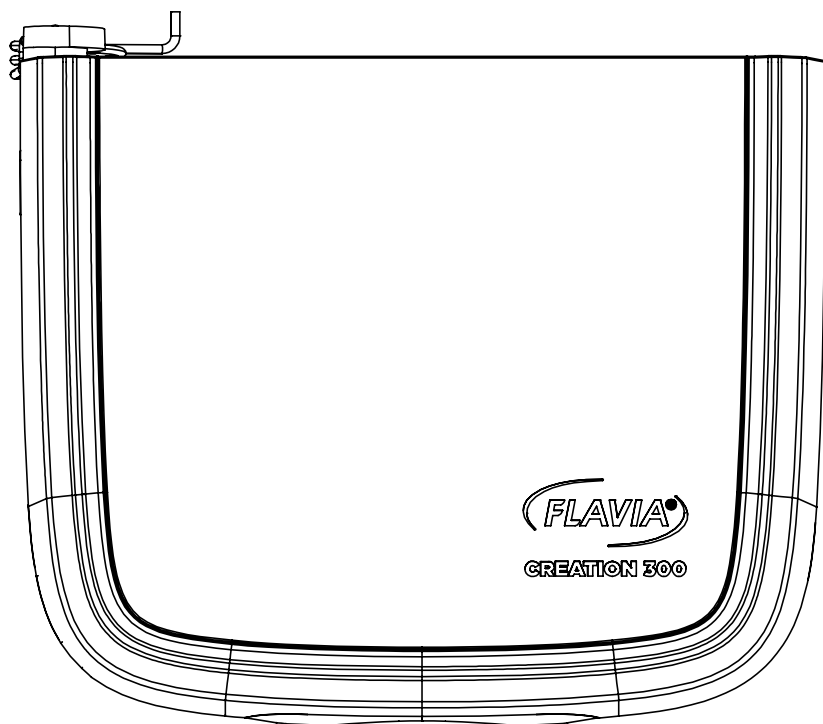

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER, FRONT COVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 02, 03, 04, 05, 10, 32, 33
4. REMOVE THE SPRING FROM THE LOCKING PIN AND THE FRONT COVER
5. REMOVE THE E-CLIP FROM THE BOTTOM OF THE LOCKING PIN
6. THE LOCKING PIN CAN NOW BE SLID OUT OF THE ASSEMBLY ENABLING THE DOOR TO BE REMOVED FROM THE FRONT COVER



C300 COLD TANK SPARE ASYM - 10077319

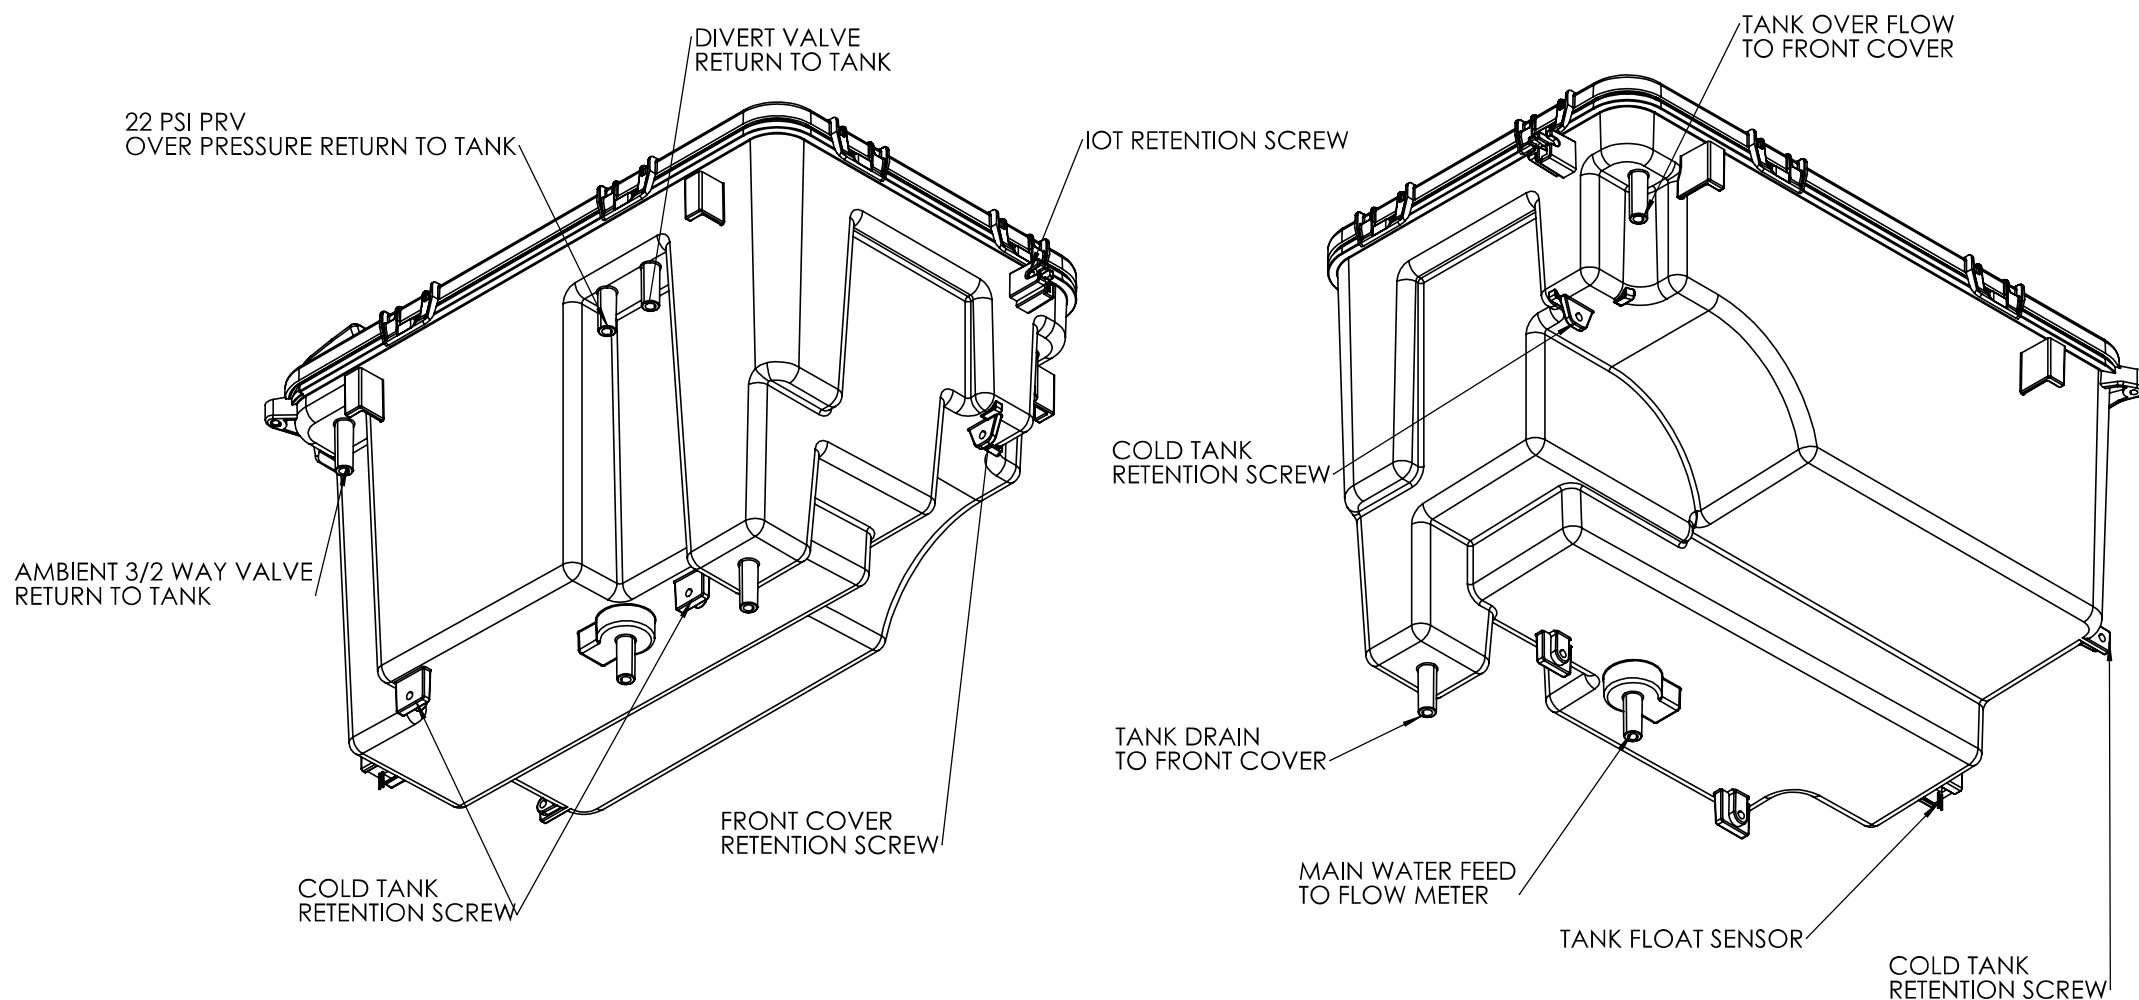

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER, FRONT COVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 02, 03, 04, 05, 10, 32, 33
4. LOOSEN THE FRONT COVER BY REMOVING THE FRONT COVER RETENTION SCREW
5. REMOVE THE IOT MODULE FROM THE COLD TANK
6. CUT THE CABLE TIES RETAINING THE TUBES TO THE COLD TANK AND REMOVE THE TUBES
7. UNSCREW THE TANK FLOAT SENSOR
8. REMOVE THE FOUR COLD TANK RETENTION SCREWS
9. THE COLD TANK CAN NOW BE REMOVED AND REPLACED BY LIFTING THE PART VERTICALLY OUT OF THE MACHINE



C300 FLOWMETER ASYM - 10077320

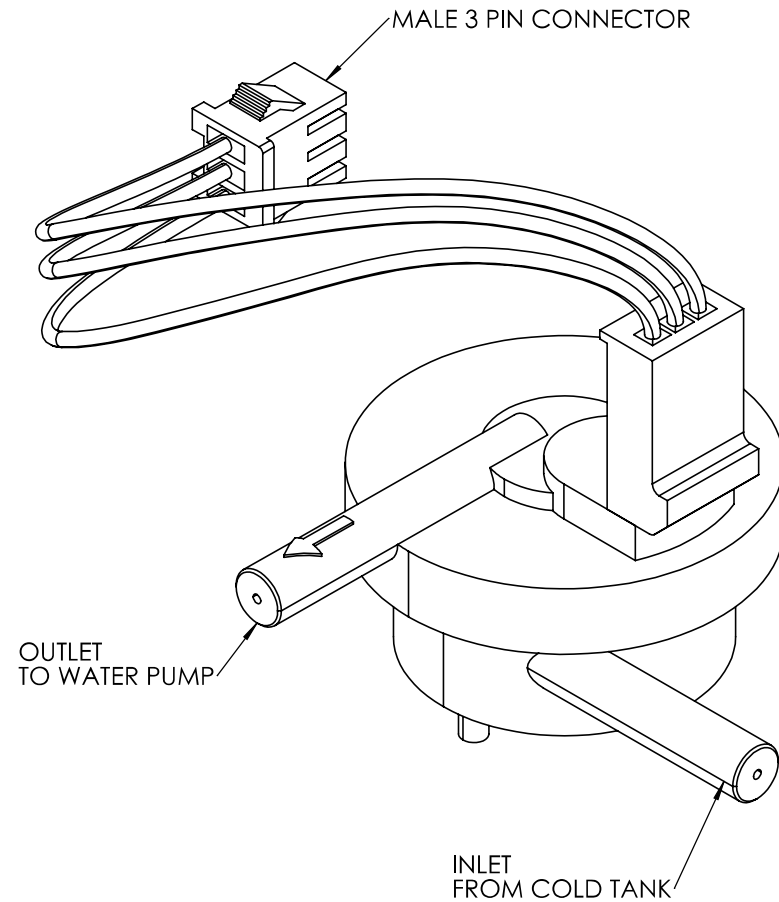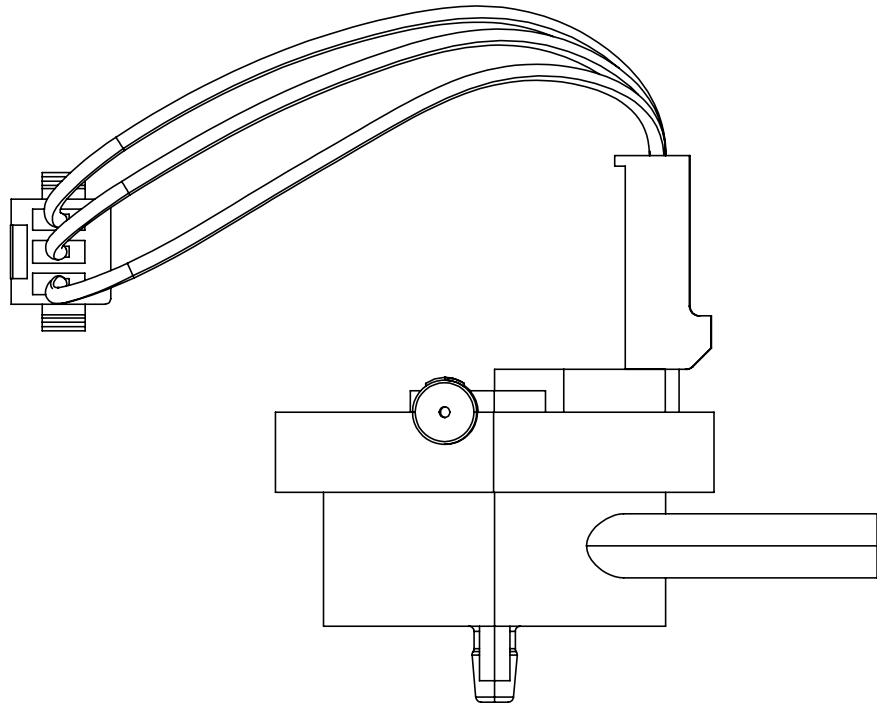

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE OVER - MORE INFORMATION ON PAGES 03, 04, 05, 32, 33
4. CUT ALL THE CABLE TIES CONNECTING TO THE FLOWMETER AND REMOVE THE CONNECTED TUBES
5. REMOVE THE MALE 3 PIN CONNECTOR
6. THIS PART CAN NOW BE REMOVED AND REPLACED


C300 FOOT - 10077321

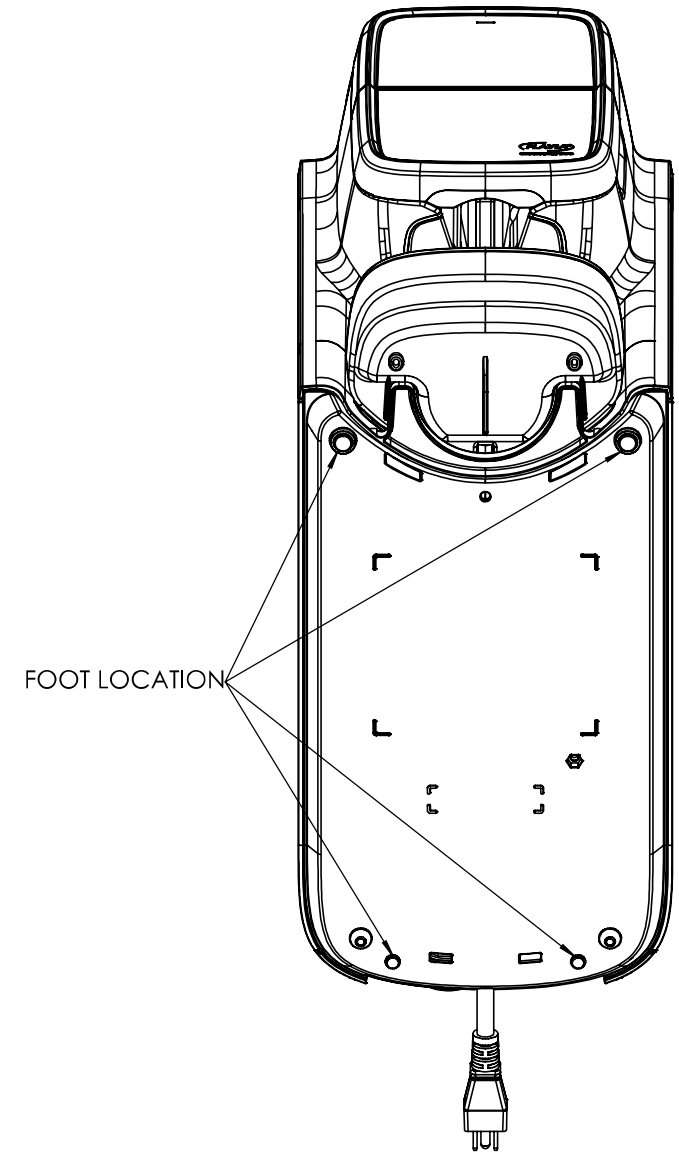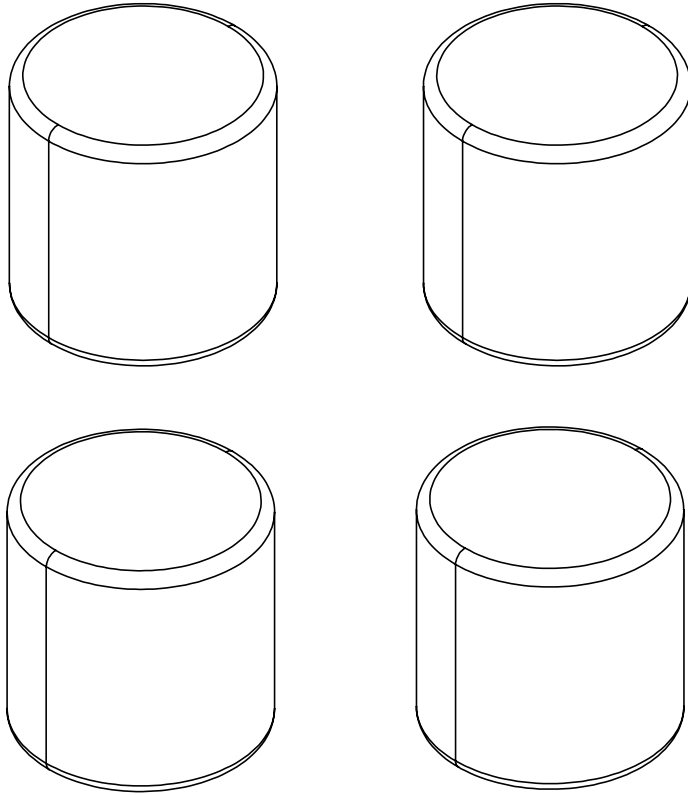

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. SLIDE THE FRONT OF THE MACHINE OFF THE WORK SURFACE, REMOVE AND REPLACE THE FRONT TWO FEET
3. ROTATE THE MACHINE AND SLIDE THE BACK OF THE MACHINE OFF THE WORK SURFACE, REMOVE AND REPLACE THE BACK TWO FEET


C300 LCD UPDATE LOOM - 10077322

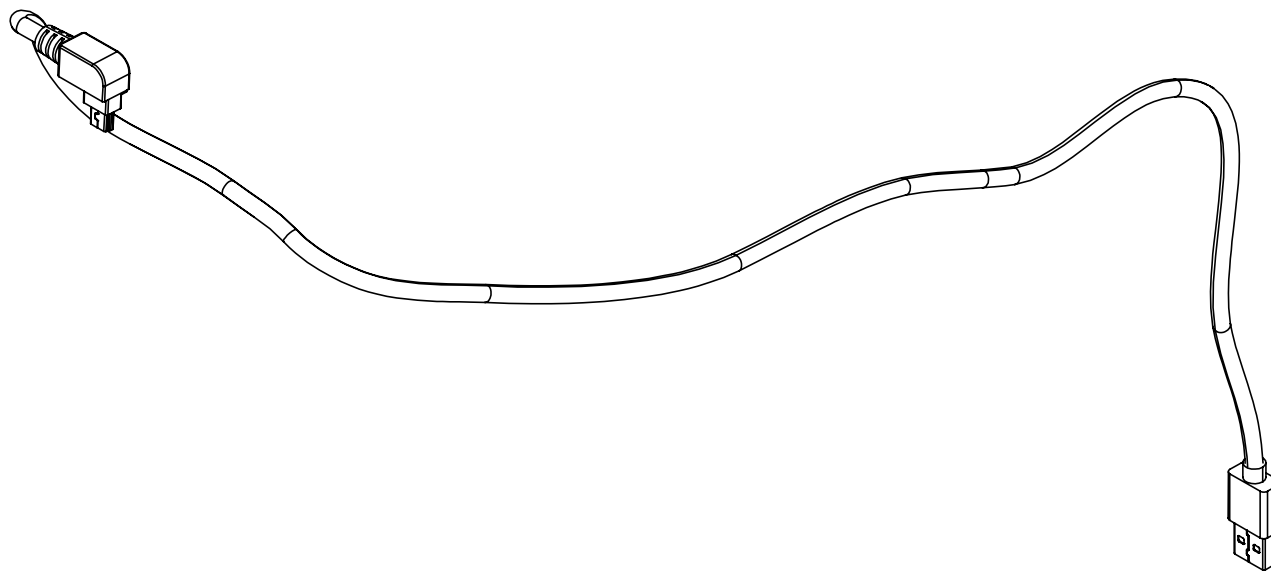

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE OVER - MORE INFORMATION ON PAGES 03, 04, 32, 33
4. CUT THE CABLE TIES RETAINING THE LCD UPDATE LOOM TO THE MAIN CHASSIS
5. THE LCD UPDATE LOOM CAN NOW BE REMOVED AND REPLACED


C300 BCR-FFC LOOM - 10077323

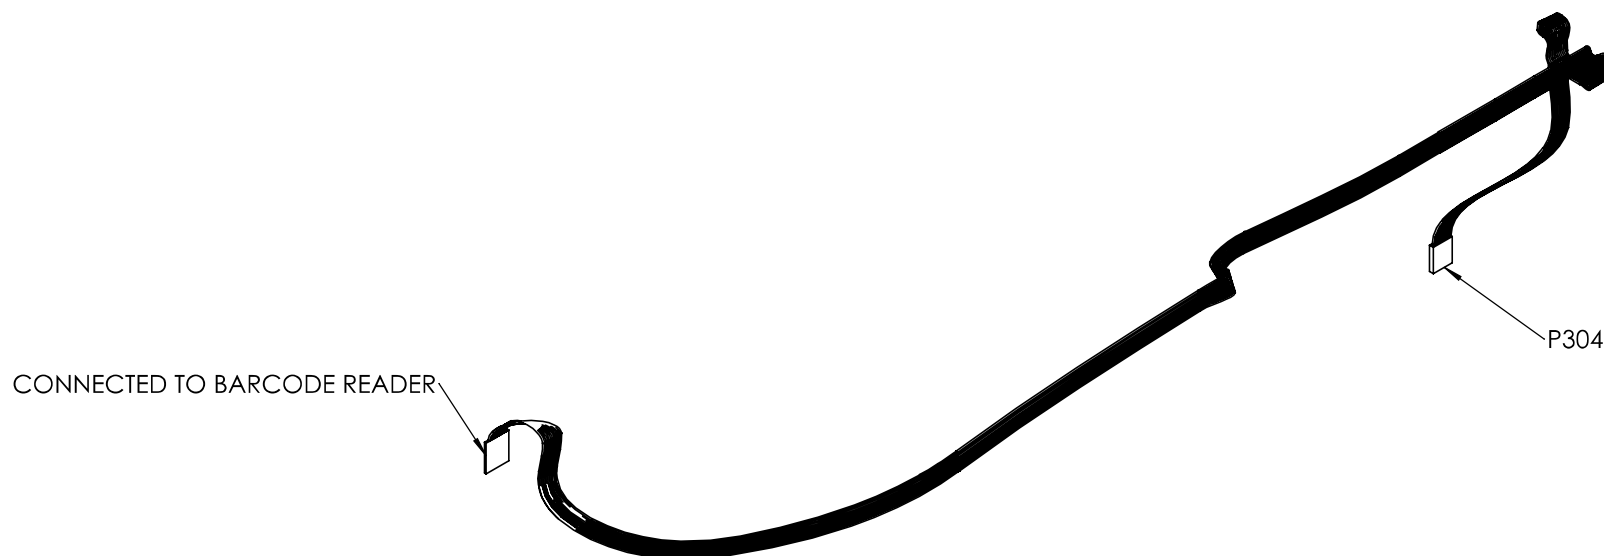

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE OVER - MORE INFORMATION ON PAGES 03, 04, 32, 33
4. REMOVE CONNECTION P304 FROM THE MAIN PCBA
5. REMOVE THE CONNECTION FROM THE BARCODE READER
6. THE BCR-FFC LOOM CAN NOW BE REMOVED FROM UNDER THE TAPE RETAINING THE LOOM TO THE CHASSIS



C300 FLOWMETER WLEVEL WPUMP LOOM - 10077324

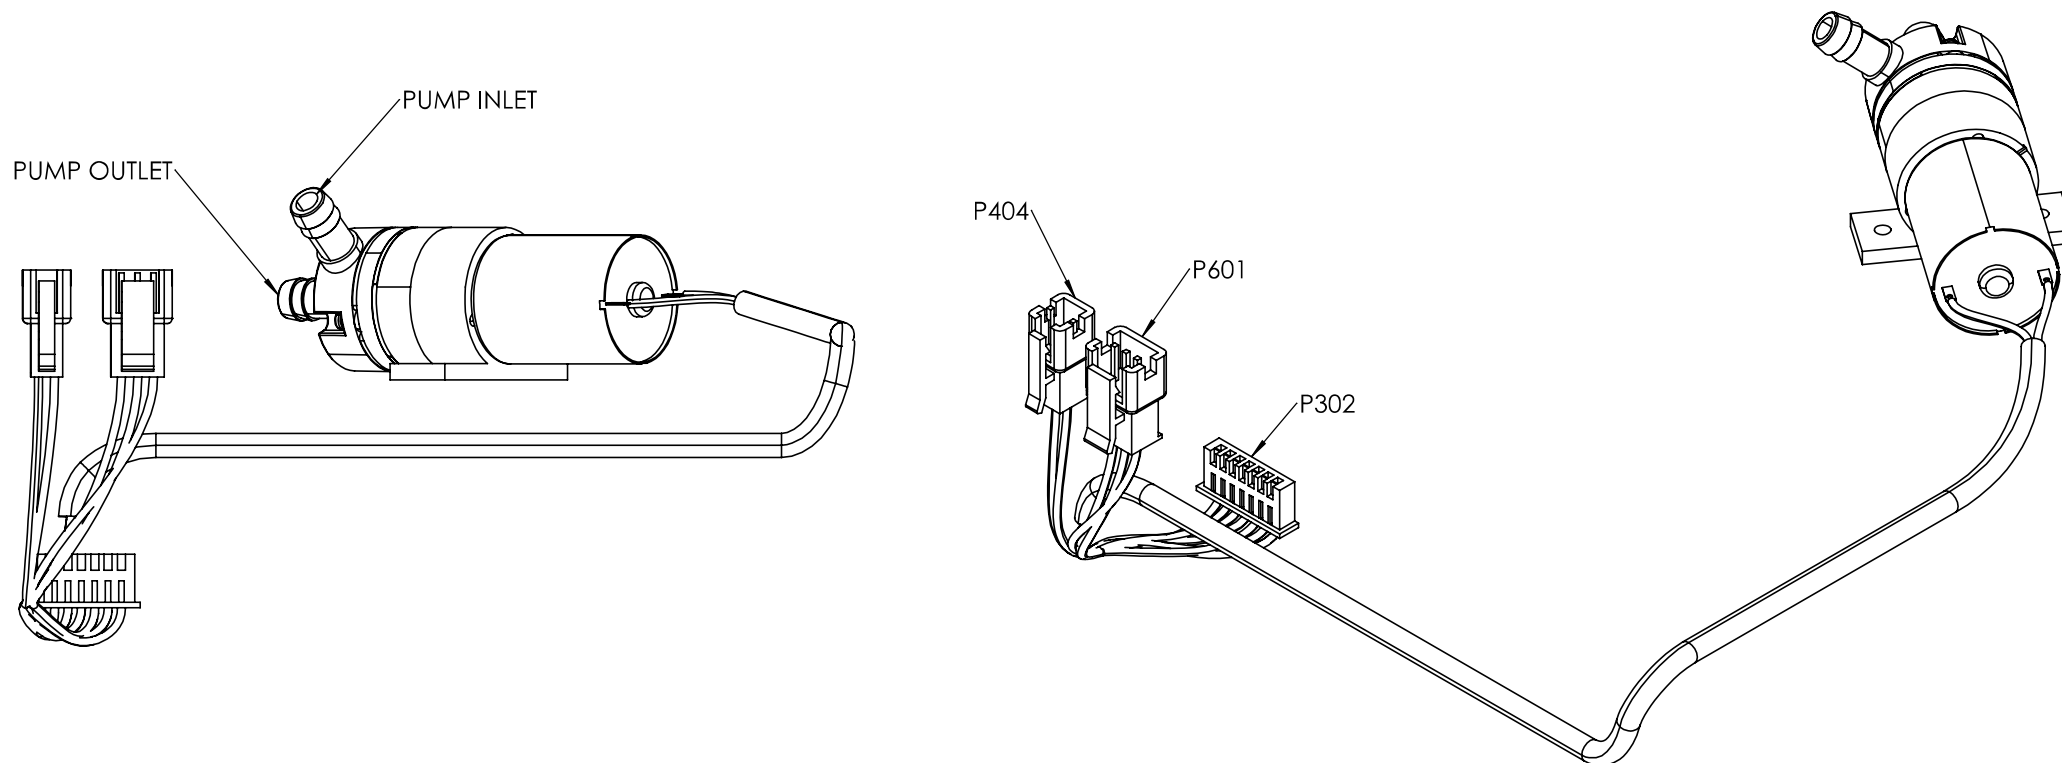

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P302, P404 AND P601 FROM THE MAIN PCBA
5. CUT ALL THE CABLE TIES CONNECTING TO THE WATER PUMP AND REMOVE THE CONNECTED TUBES
6. THE WATER PUMP CAN NOW BE SLID OUT OF ITS RETAINING MOUNT FROM THE MAIN CHASSIS



C300 AIR PUMP LOOM - 10077325

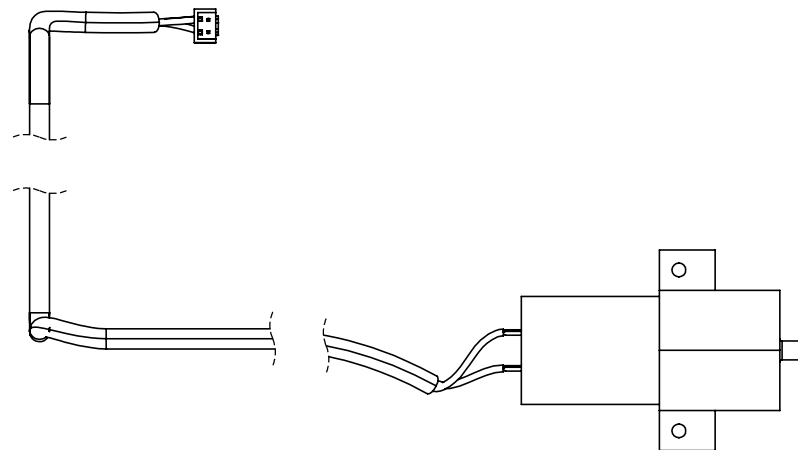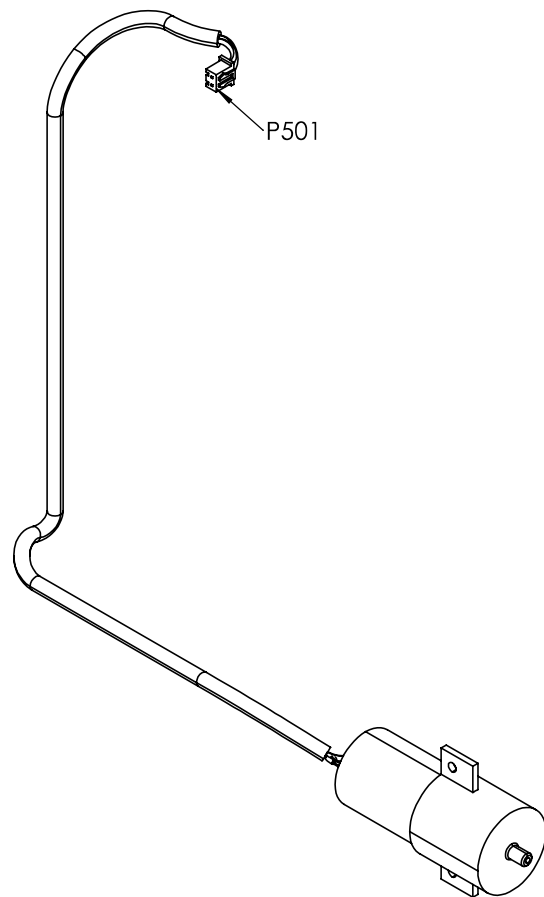

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P501 FROM THE MAIN PCBA
5. CUT ALL THE CABLE TIES CONNECTING TO THE AIR PUMP AND REMOVE THE CONNECTED TUBES
6. THE AIR PUMP CAN NOW BE SLID OUT OF ITS RETAINING MOUNT FROM THE MAIN CHASSIS

C300 INLET VALVE LOOM - 10077326

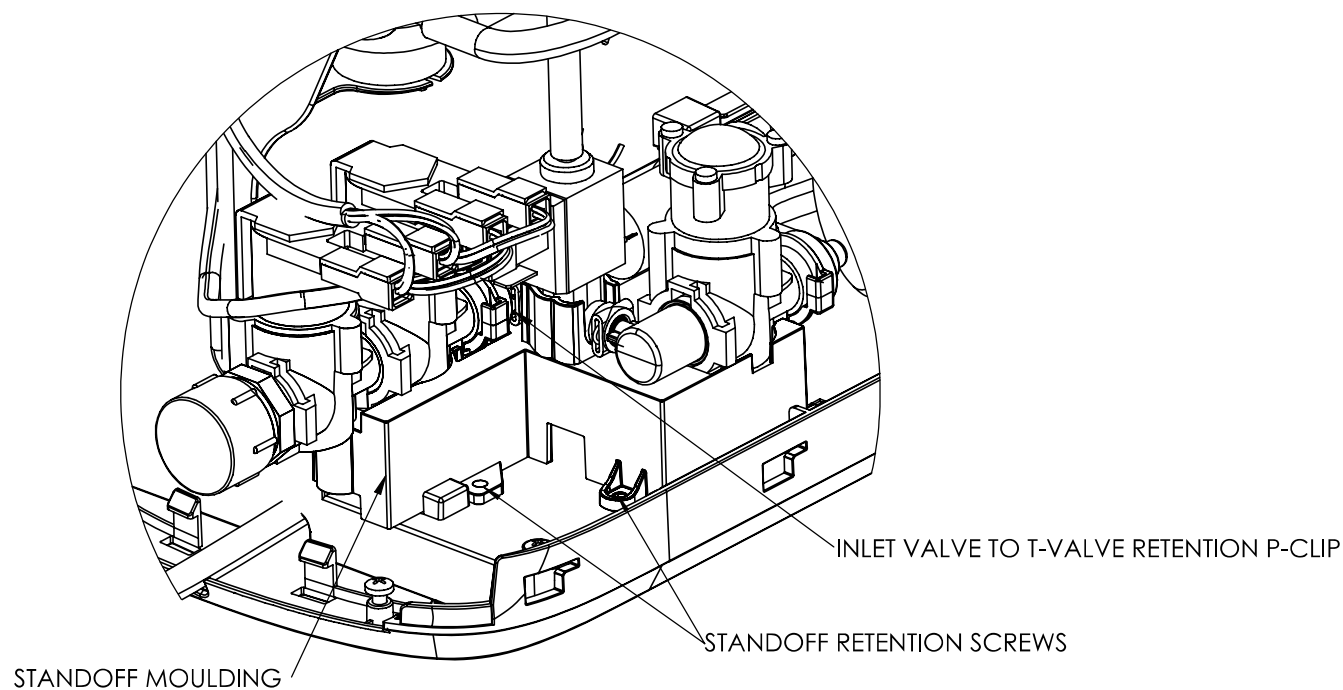
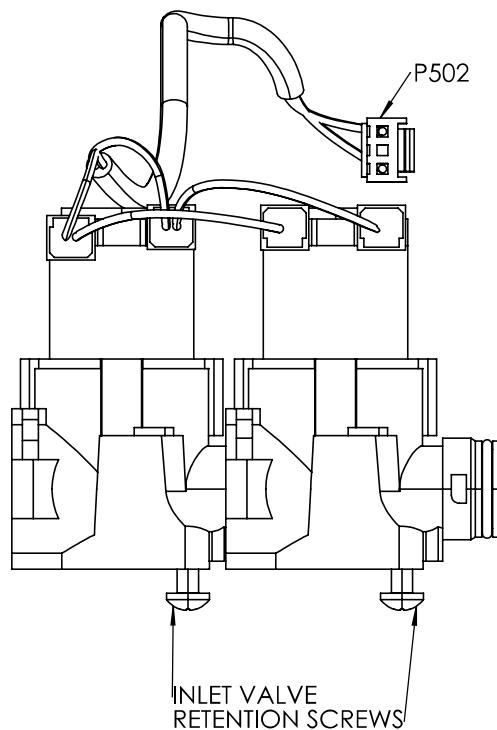


NOTE: IT IS ASSUMED THAT THERE IS AN AMBIENT KIT PRESENT FOR THIS ASSEMBLY.

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P502 FROM THE MAIN PCBA
5. REMOVE THE STANDOFF RETENTION SCREWS
6. IF NECESSARY, REMOVE THE HYDRAULIC AND ELECTRICAL CONNECTIONS FOR THE T-VALVE AND AMBIENT VALVE TO BE ABLE TO REMOVE THE INLET VALVE RETENTION SCREWS
7. REMOVE THE INLET VALVE TO T-VALVE RETENTION P-CLIP
8. THE INLET VALVE ASSEMBLY CAN NOW BE REMOVED AND REPLACED

C300 T-VALVE LOOM - 10077327

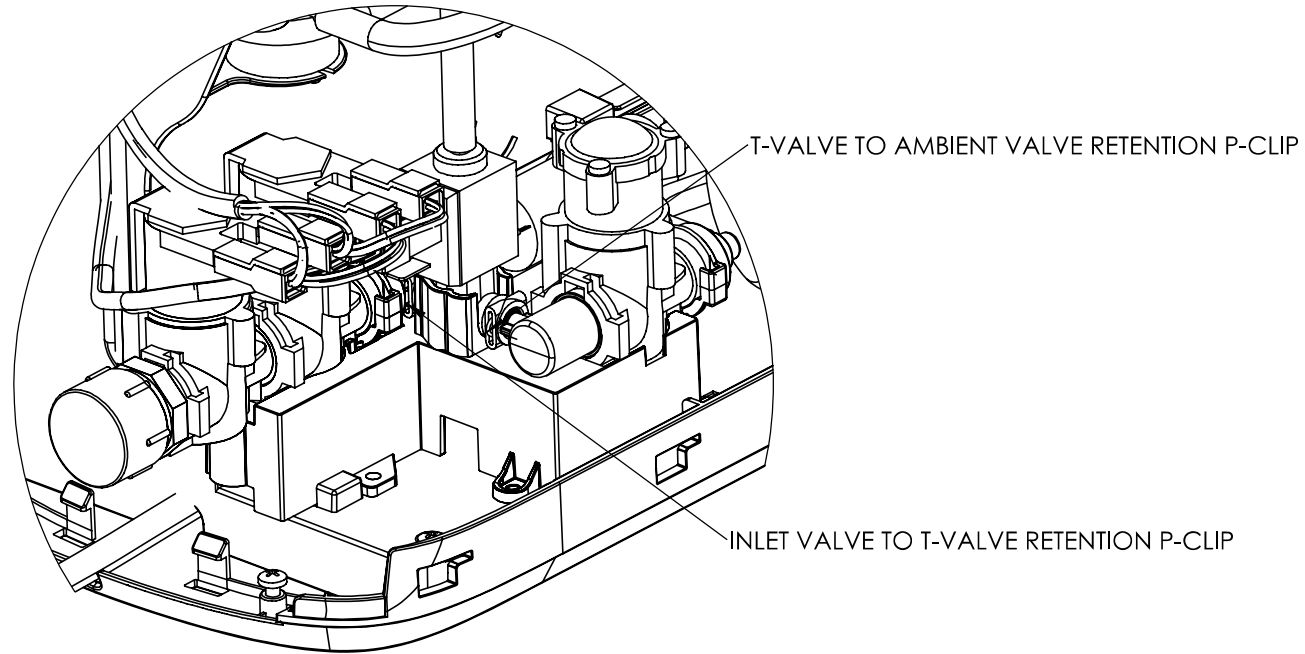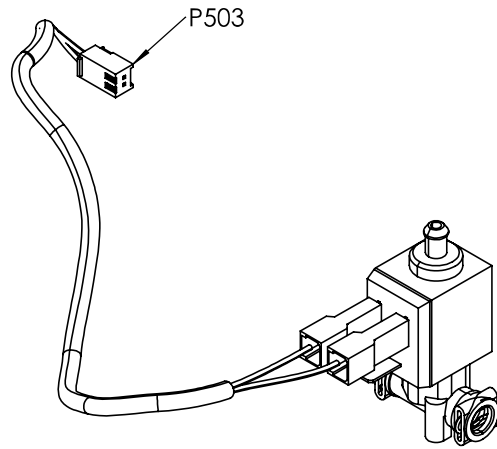


NOTE: IT IS ASSUMED THAT THERE IS AN AMBIENT KIT PRESENT FOR THIS ASSEMBLY.

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER AND THE PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 05, 10, 32, 33
4. REMOVE CONNECTION P503 FROM THE MAIN PCBA
5. CUT THE CABLE TIE AND REMOVE THE TUBE FROM THE TOP OF THE T-VALVE
6. REMOVE THE P-CLIP FROM THE T-VALVE TO AMBIENT VALVE
7. THIS PART CAN NOW BE REMOVED AND REPLACED



C300 POWERCORD - 10077328

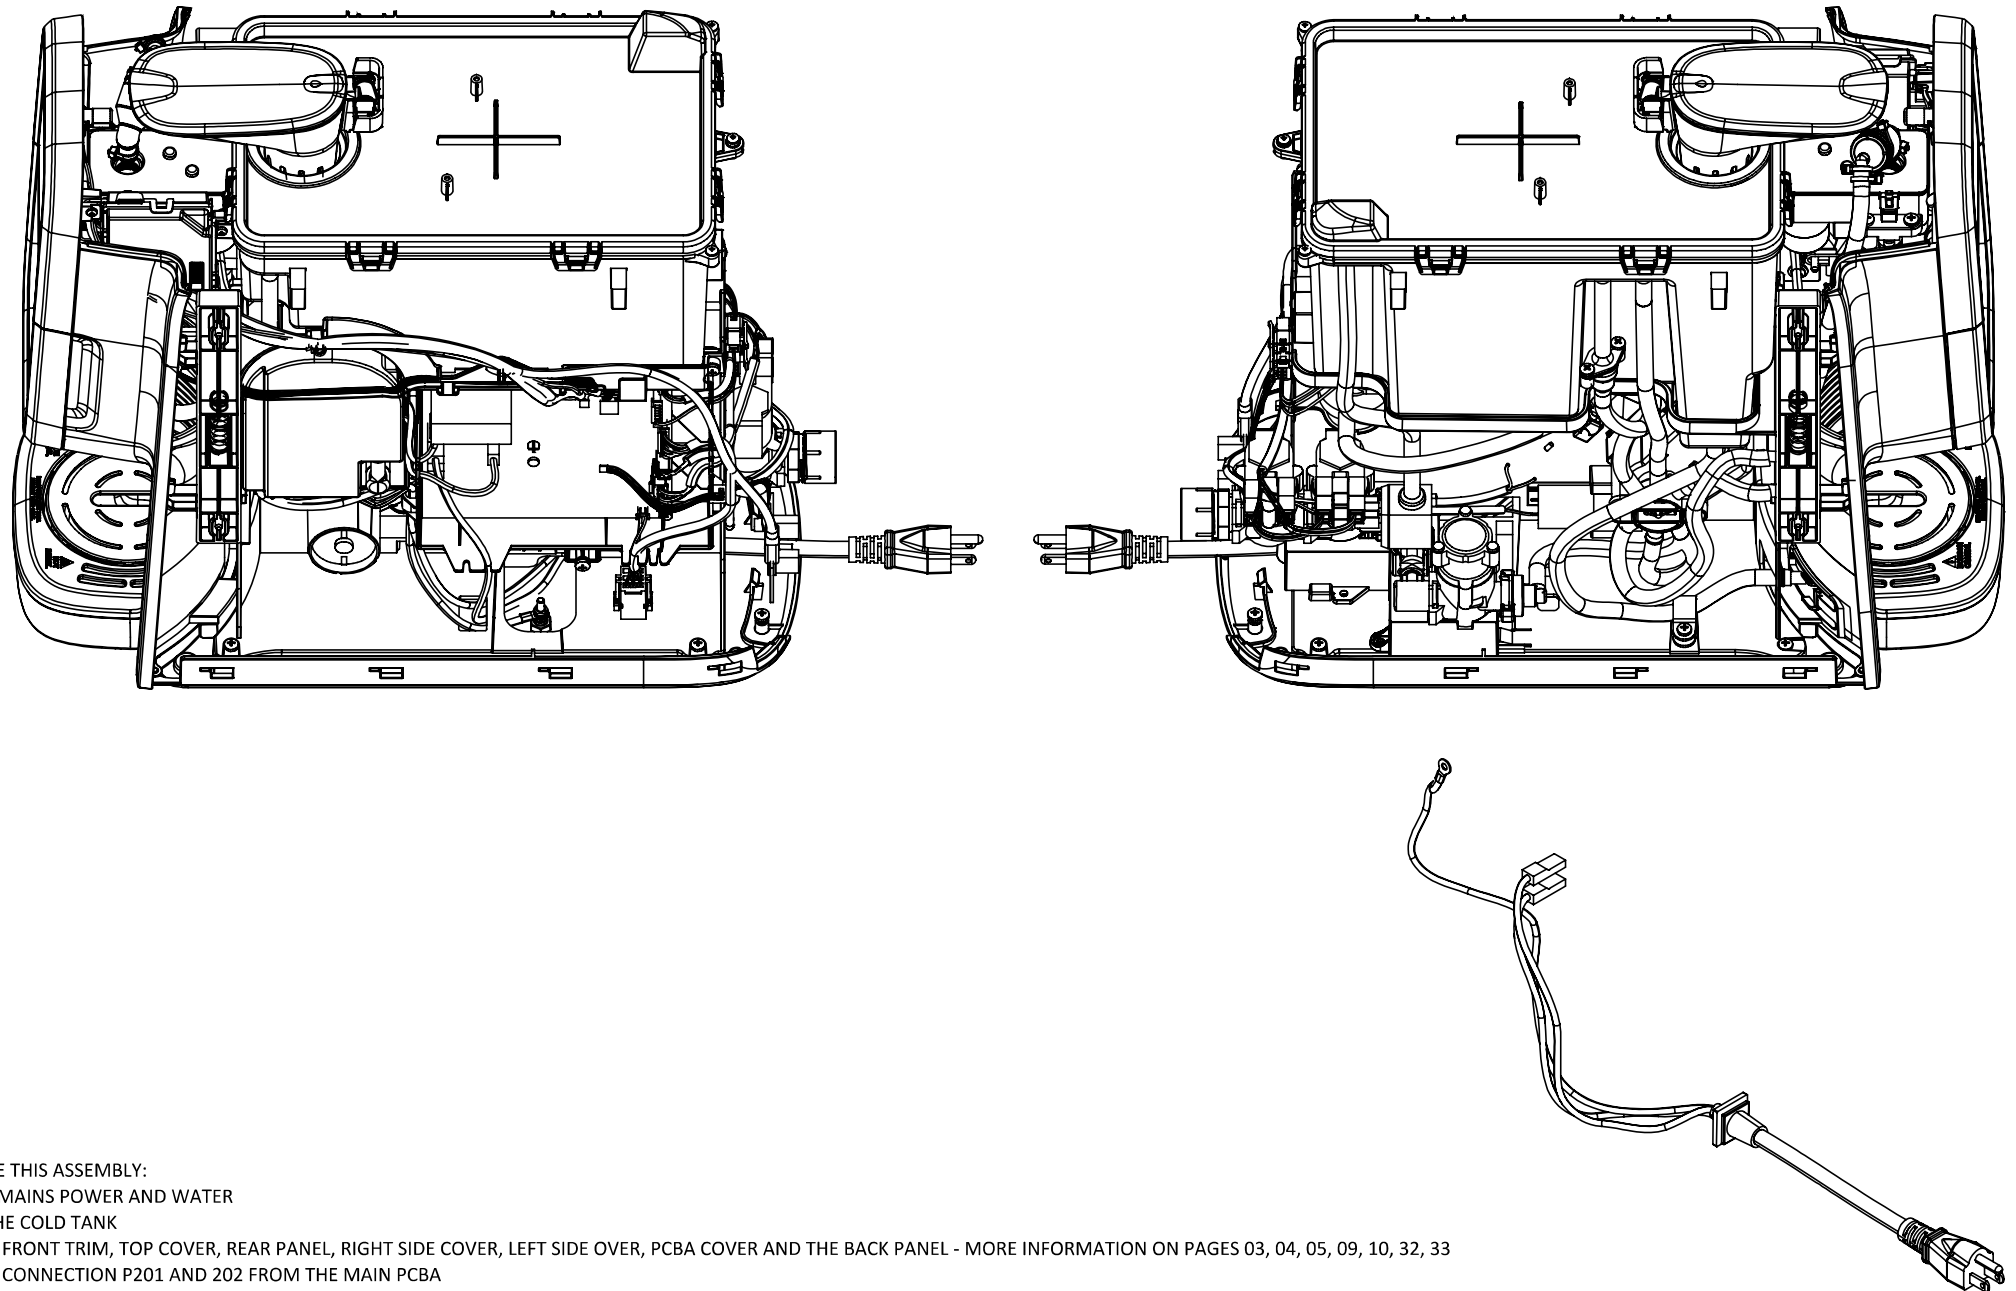

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, LEFT SIDE OVER, PCBA COVER AND THE BACK PANEL - MORE INFORMATION ON PAGES 03, 04, 05, 09, 10, 32, 33
4. REMOVE CONNECTION P201 AND 202 FROM THE MAIN PCBA
5. REMOVE THE THERMAL BLOCK COVER - MORE INFORMATION ON PAGE???
6. REMOVE THE EARTH CONNECTION TO THE THERMAL BLOCK
7. REMOVE THE WHOLE BASE OF THE MACHINE BY REMOVING THE FOUR BASE RETENTION SCREWS
8. RE-ROUTE THE POWERCORD, REMOVE AND REPLACE



C300 IOT MODULE - 10077329

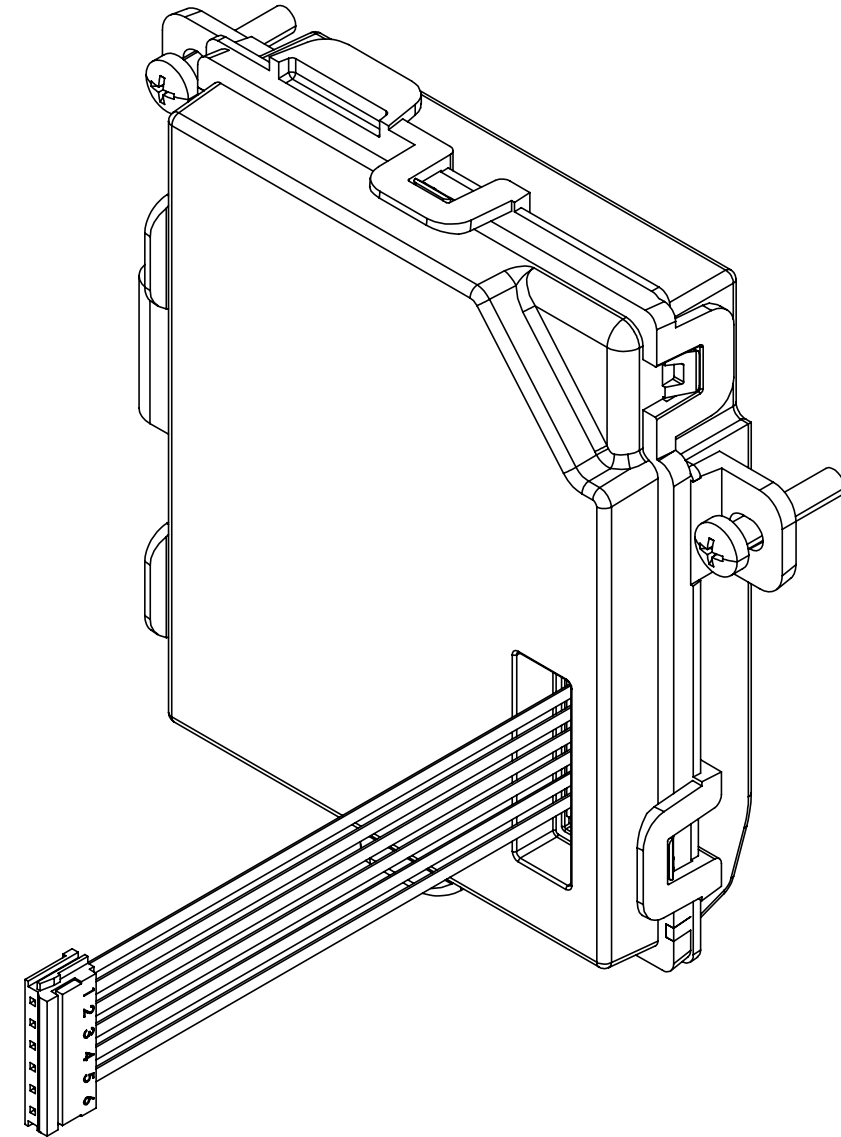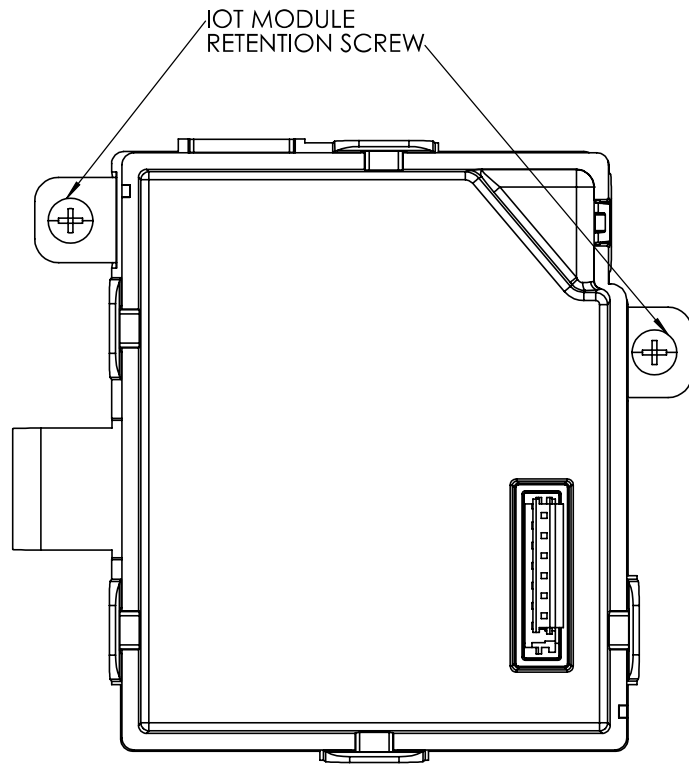

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, RIGHT SIDE COVER, PCBA COVER - MORE INFORMATION ON PAGES 03, 04, 10, 32, 33
4. REMOVE CONNECTION P301 FROM THE MAIN PCBA
5. REMOVE THE IOT MODULE RETENTION SCREWS
6. THIS ASSEMBLY CAN NOW BE REMOVED AND REPLACED



IN G 3.4 FITTING - 10077331

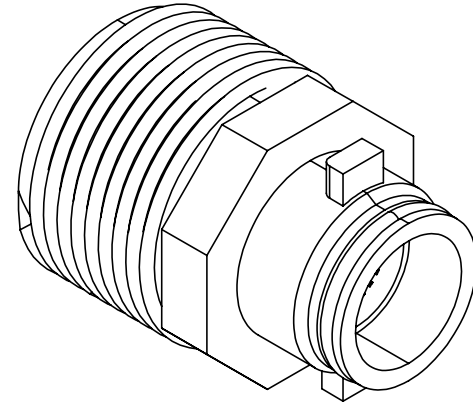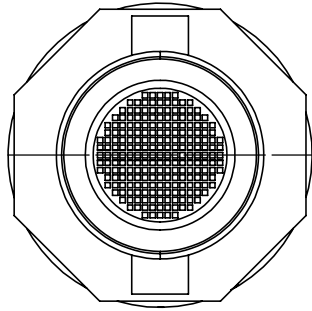

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE COVER, REAR PANEL AND THE BACK PANEL - MORE INFORMATION ON PAGES 03, 04, 05, 09, 32, 33
4. ONCE THESE COVERS HAVE BEEN REMOVED THE G 3.4 FITTING CAN BE UN-THREADED FROM THE INLET VALVE ASSEMBLY

C300 COLD TANK STRAINER - 10077332

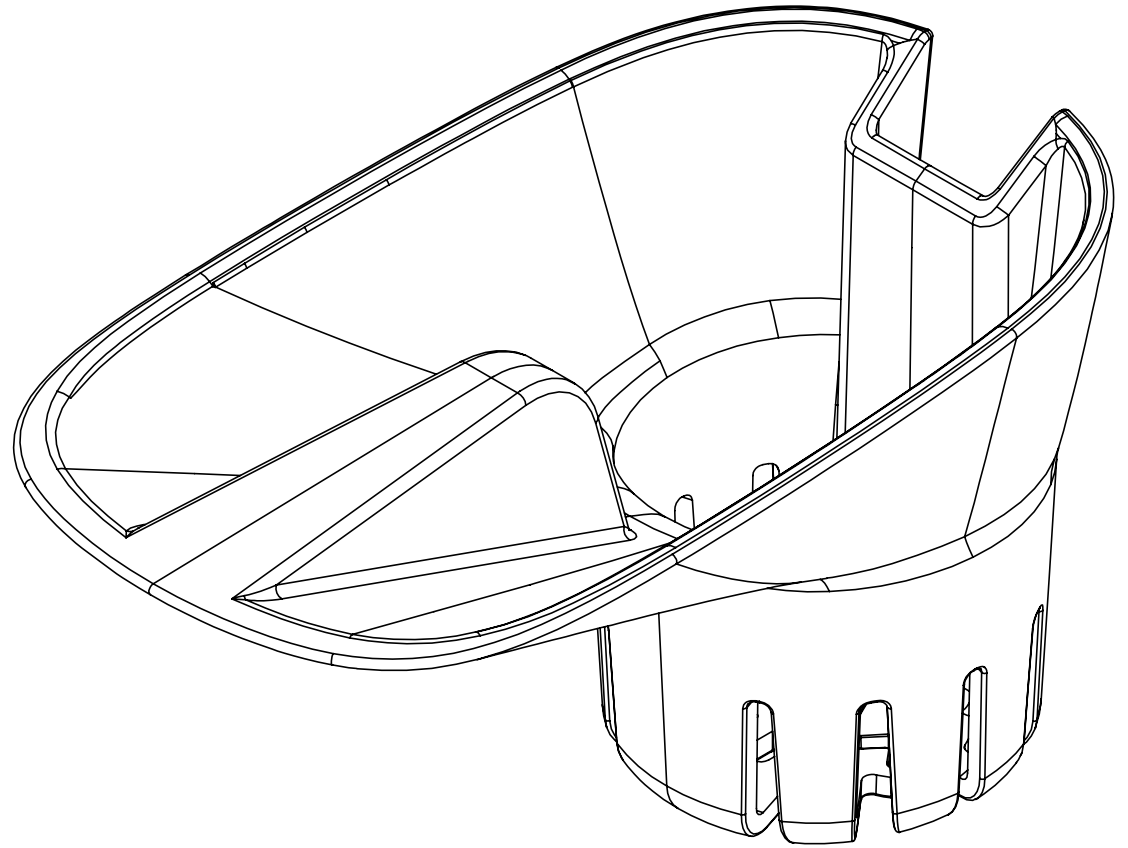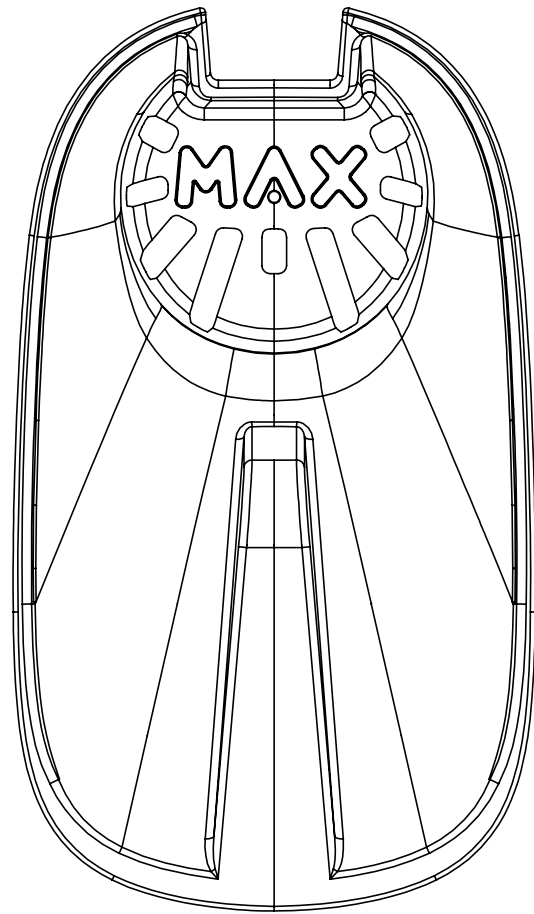


TO REMOVE THIS ASSEMBLY:


1. THIS PART CAN BE REMOVED AND REPLACED BY THE CONSUMER. LIFT THE TANK COVER FLAP UP AND PULL THE COLD TANK STRAINER OUT OF THE TOP COVER.

15MM CHECK VALVE ASYM - 10077402

CABLE TIE POSITION
TO BE REMOVED

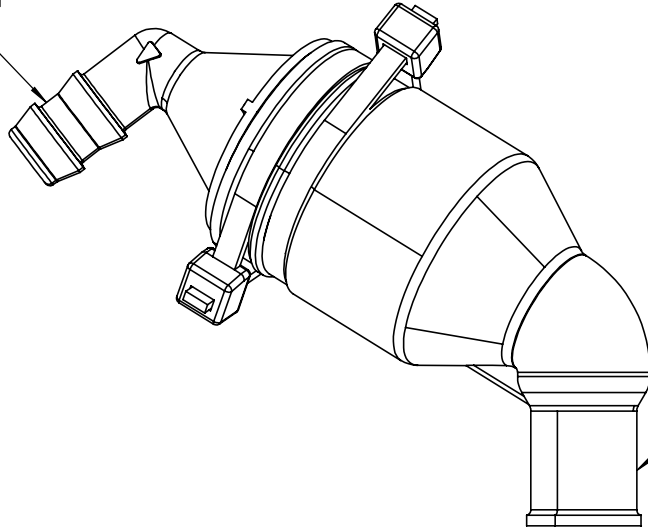



CABLE TIE POSITION
TO BE REMOVED

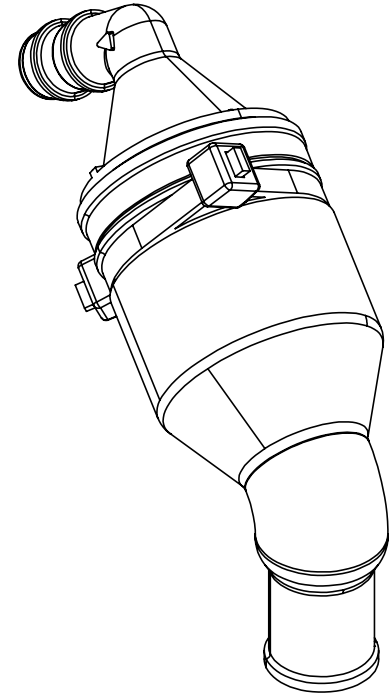

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM AND TOP COVER - MORE INFORMATION ON PAGES 03 AND 32
4. ONCE THESE COVERS HAVE BEEN REMOVED CUT THE APPROPRIATE HIGHLIGHTED CABLE TIES ON THE 15MM CHECK VALVE, REMOVE AND REPLACE


MAIN WATER ASYM - 10077399

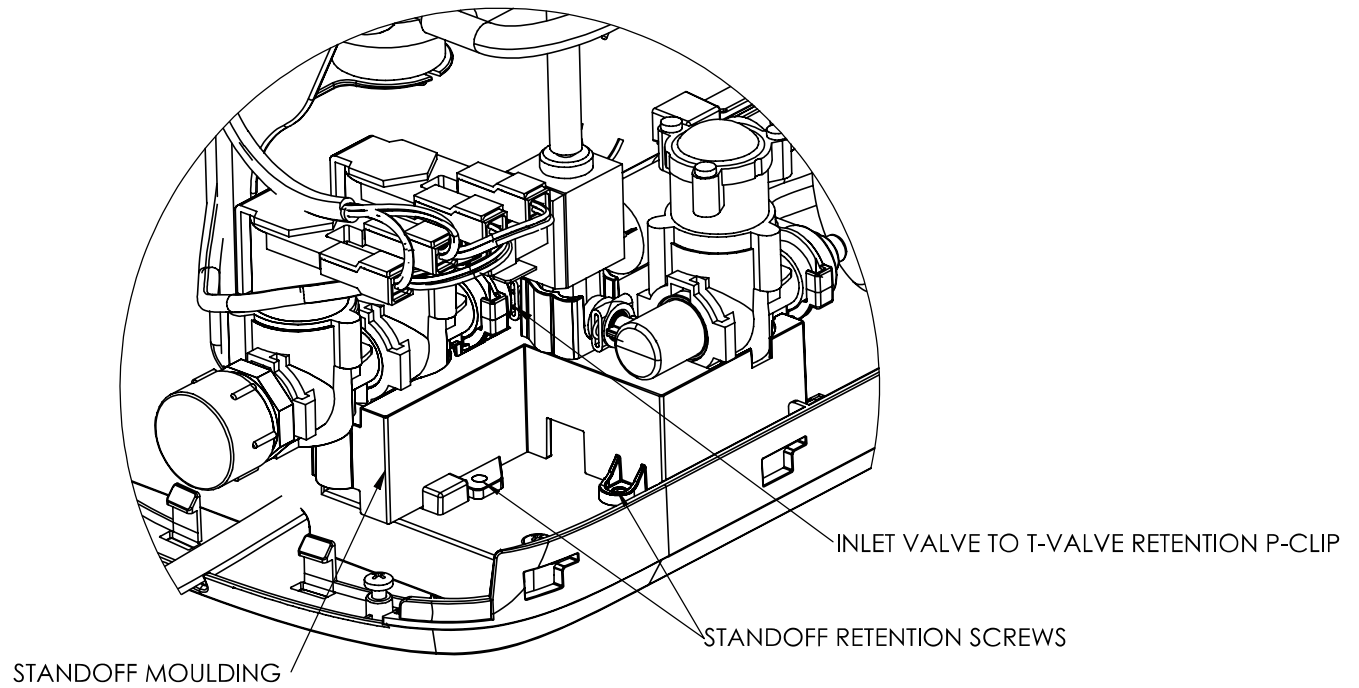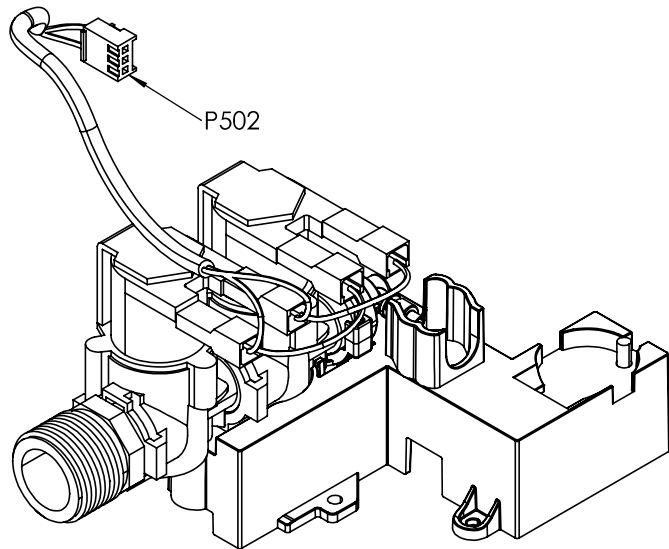


TO REMOVE THIS ASSEMBLY:

- 1. ISOLATE MAINS POWER AND WATER**
- 2. DRAIN THE COLD TANK**
- 3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE COVER, RIGHT SIDE COVER, PCBA COVER AND BACK PANEL - MORE INFORMATION ON PAGES 03, 04, 05, 09, 10, 32, 33**
- 4. REMOVE CONNECTION P502 FROM THE MAIN PCBA**
- 5. REMOVE THE STANDOFF RETENTION SCREWS**
- 6. REMOVE THE HYDRAULIC AND ELECTRICAL CONNECTIONS FOR THE AMBIENT KIT**
- 7. REMOVE THE INLET VALVE TO T-VALVE RETENTION P-CLIP**
- 8. THE MAIN WATER ASSEMBLY CAN NOW BE REMOVED AND REPLACED**

LCD TRIM - 10077709

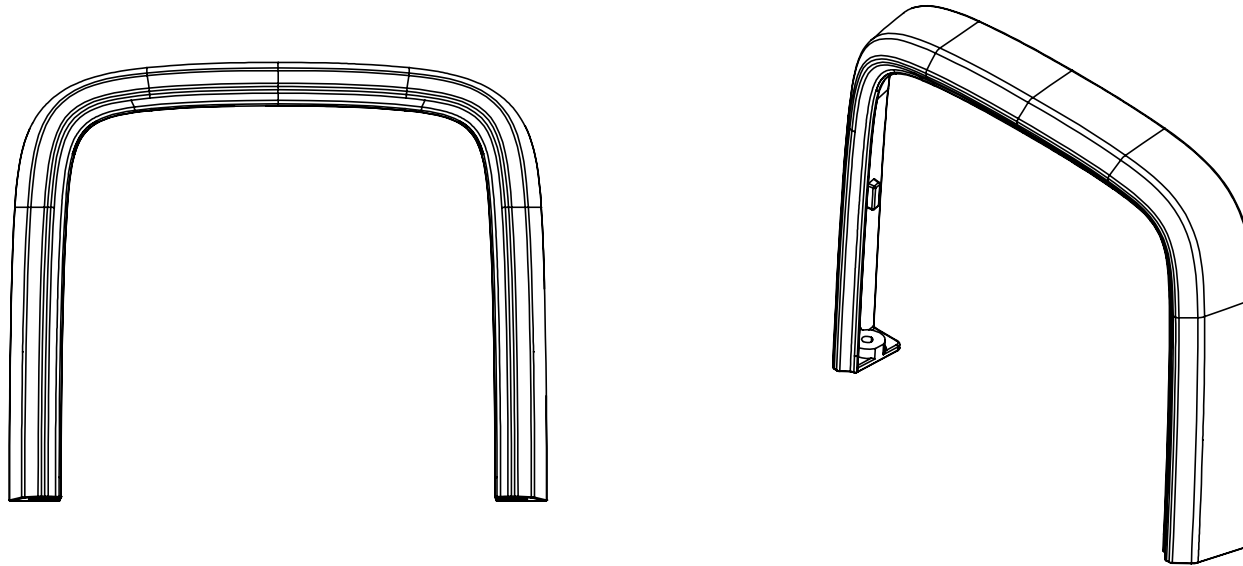



FRONT COVER TRIM RETENTION SCREWS

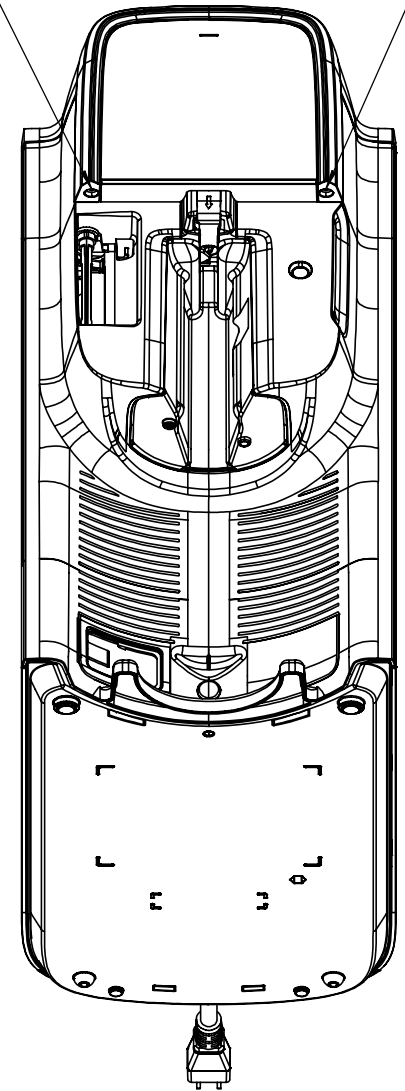

TO REMOVE THIS ASSEMBLY:

1. OPEN THE DOOR AND REMOVE THE TWO FRONT COVER TRIM RETENTION SCREWS - SCREWS HIGHLIGHTED
2. FLEX THE FRONT COVER TRIM OFF THE FRONT COVER TO REMOVE



REAR PANEL - 10077397

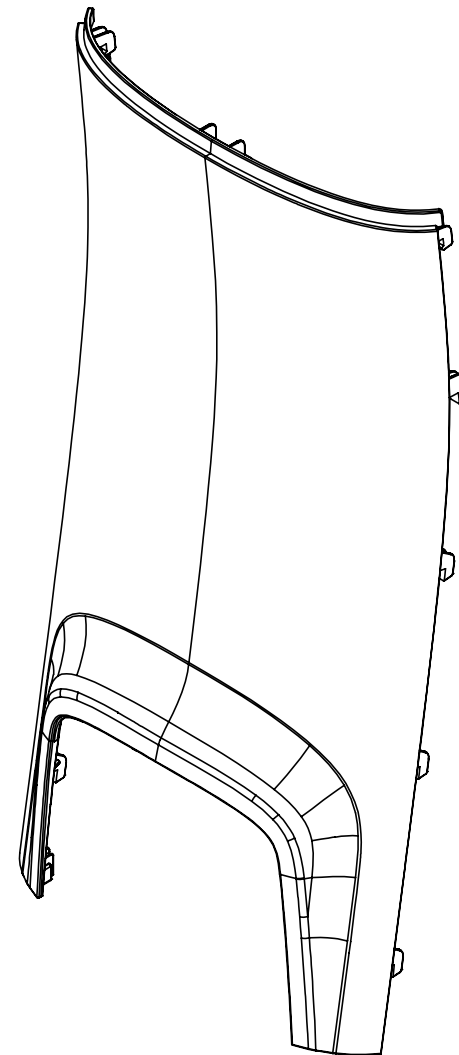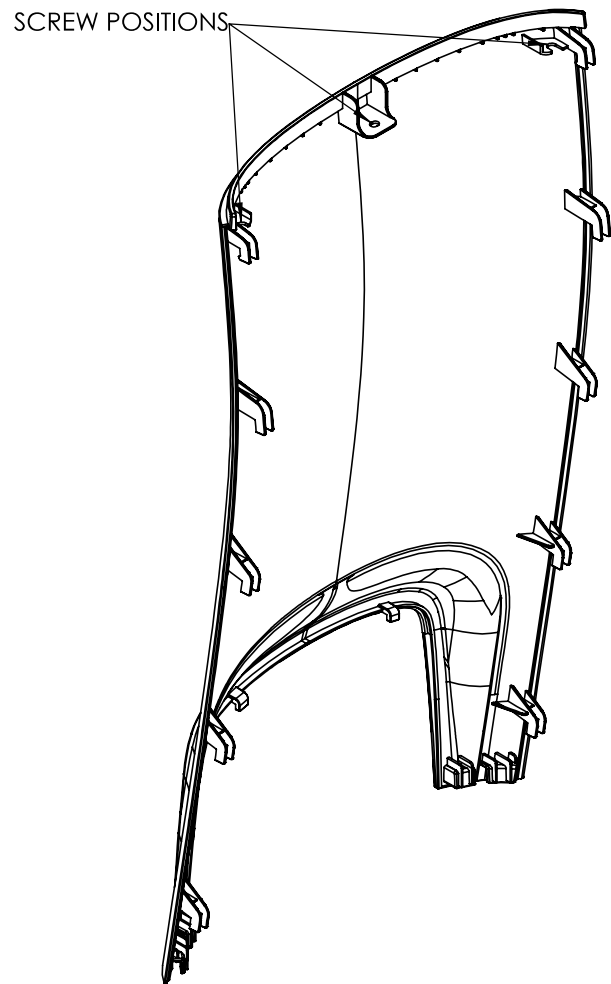

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM AND TOP COVER - MORE INFORMATION ON PAGES 03, 32
4. TO REMOVE THE REAR PANEL, LOOSEN THE OUTER TWO SCREWS AND FULLY REMOVE THE CENTRE SCREW - SCREW POSITIONS HIGHLIGHTED
5. THIS PART CAN NOW BE SLID VERTICALLY OUT FROM THE CHASSIS REMOVED AND REPLACED

AMBIENT WATER KIT - 10076982

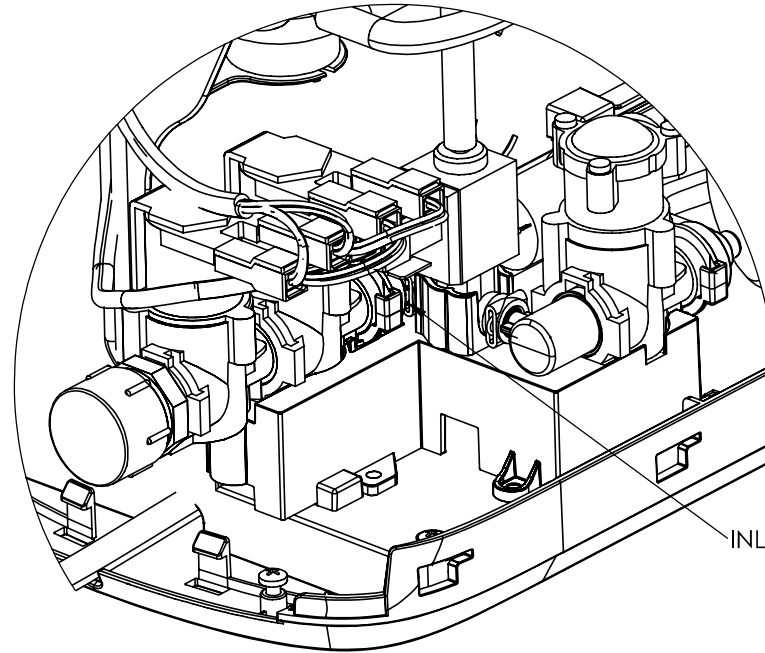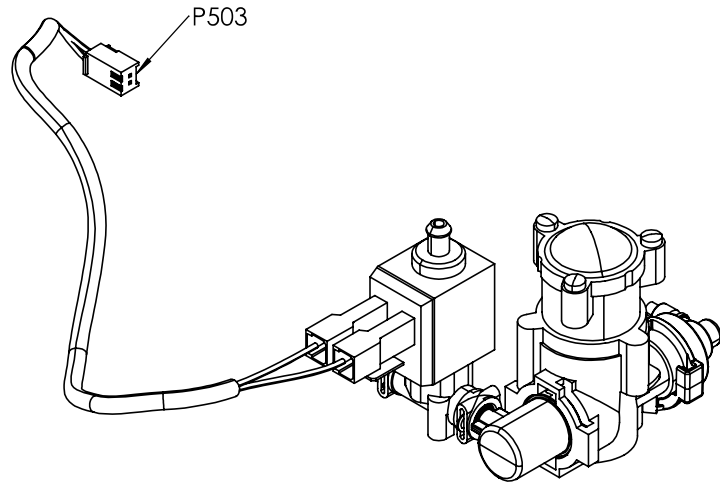

INLET VALVE TO T-VALVE RETENTION P-CLIP

TO REMOVE THIS ASSEMBLY:

1. ISOLATE MAINS POWER AND WATER
2. DRAIN THE COLD TANK
3. REMOVE FRONT TRIM, TOP COVER, REAR PANEL, LEFT SIDE COVER, RIGHT SIDE COVER, PCBA COVER AND BACK PANEL - MORE INFORMATION ON PAGES 03, 04, 05, 09, 10, 32, 33
4. REMOVE CONNECTION P503 FROM THE MAIN PCBA
5. CUT THE CABLE TIE AND REMOVE THE TUBE FROM THE TOP OF THE T-VALVE AND FROM THE AMBIENT VALVE TO THE DIVERT VALVE
6. THIS PART CAN NOW BE REMOVED AND REPLACED