
# **Sricam**<sup>®</sup>

# **Sricam CMS Manual**

**Configure and Watch live videos using Sricam CMS** 

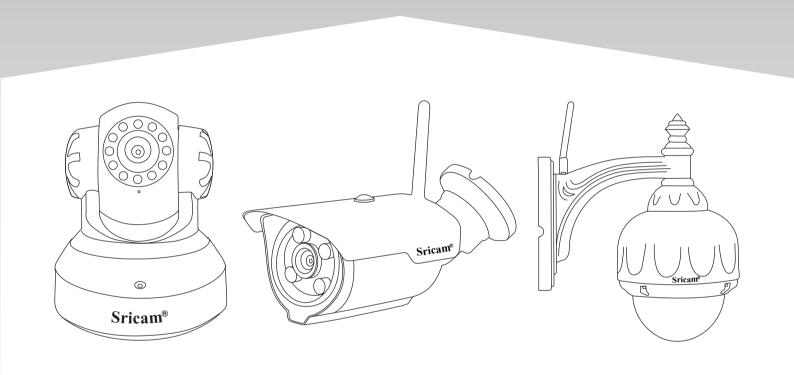

# **Customer Service**

Telephone: +86-755-29360806

E-Mail: Support@sricam.com

Skype ID: tech.sricam

Website: www.sricam.com

Copyright: 2019Sricam CMS 002

#### 1. What you can do with Sricam CMS

The Sricam CMS is the free software used on Microsoft Windows XP/7/8/10 PC. Via Sricam CMS, you can:

- Access the cameras via admin login (LAN) or mail/user login (WAN).
- Watch live video streams from more than one camera in the same time.
- Record and save live videos on your PC.
- Watch or transfer video files from Sricam's built-in micro SD card to your PC
- Convert files to MP4 format.

Note: Enter Sricam App on your smartphone to update camera's configuration.

This article includes the following sections.

#### 2. Requirements for using Sricam CMS

Make sure of the following requirements are met:

- Windows XP/7/8/10 is running on this PC.
- Your camera has successfully set up and is connecting to the Internet.
- The PC has the Internet access.

Note: When the PC and cameras are in the same LAN, Internet access is not mandatory.

• You have your camera ID and camera password.

Note: There are two ways to access your camera from a laptop or desktop PC: admin login (LAN) or mail/user login (WAN).

**Admin login (LAN):** When your camera and computer or laptop device is connected to the same network, login with default UserName "admin" and none password. If Sricam CMS doesn't detect camera, you can access camera via mail/user login (WAN).

*Mail/user login (WAN):* When the network outside of your home or business network (e.g., coffee shop, work computer, etc.) a free account is required to watch live video.

#### 3. Download and Install the Sricam CMS

Download Sricam CMS from: www.sricam.com/download Once installed, the following icon will be displayed on the PC's desktop:



Note: For Windows 10 systems, you need to install and run "Sricam CMS" as an administrator.

#### 4. Admin login (LAN)

Note: For Mail/user login (WAN), Please go to Section 8

Running Sricam CMS, click "admin login" to the window shown in Figure 1 with default UserName "admin" and none password bring ups the Sricam CMS main control window shown in Figure 3.

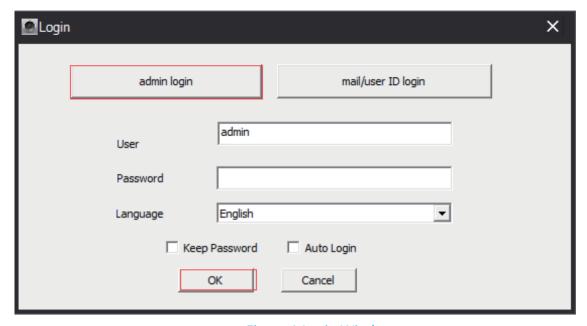


Figure 1 Login Window

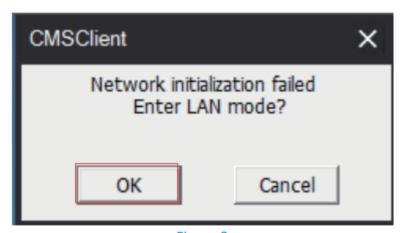


Figure 2

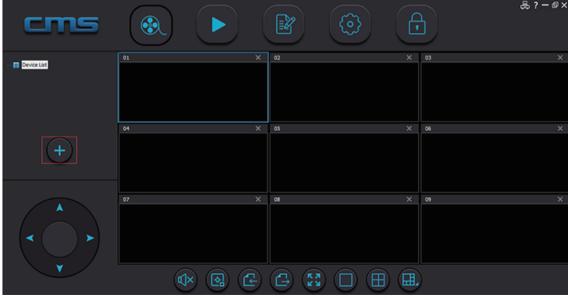


Figure 3 Sricam CMS Operation and Interface

Click the "add device" button. The window shown in Figure 4 will pop up. Follow the belowing steps to add devices: Note: If the devices can't be detected you can try to disable your PC's firewall.

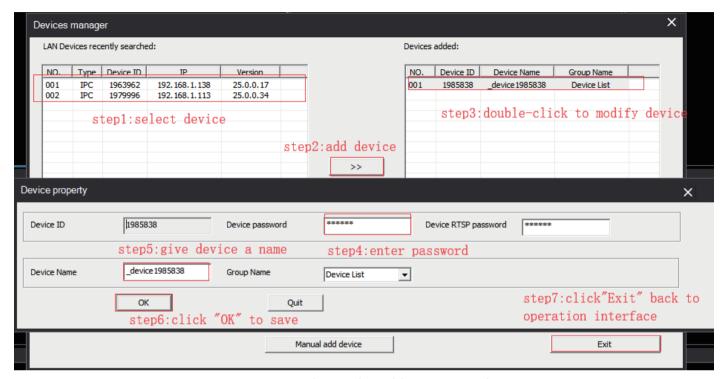


Figure 4 Completing the Add Device Window

The camera will be displayed in the device list in a window as shown in Figure 5. Double-click the camera icon to watch the live video



Figure 5 live video

### 5. Changing the image/video save folder

Click the setting (shown at the top right corner of the window in Figure 6). A confifiguration window will pop up as shown. Click the "Browse" button to browse and choose an alternate folder.

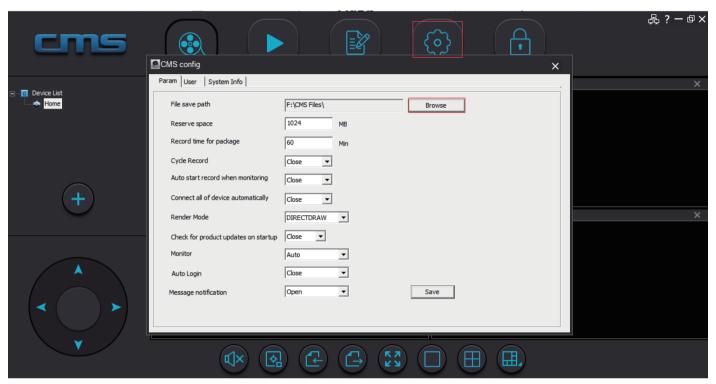


Figure 6 Path tab

## 6. Playback

The playback function allows files to be selected and played. The left side of the screen lists the source, type and names of files that can be played back. Click the files name to select the desired files.

Clicking the

"Playback" button allows the user to:

- Playback the camera's recorded video in a local PC.
- Play the recorded videos stored in the micro SD memory card.
- Download files recorded on the micro SD to the local PC.

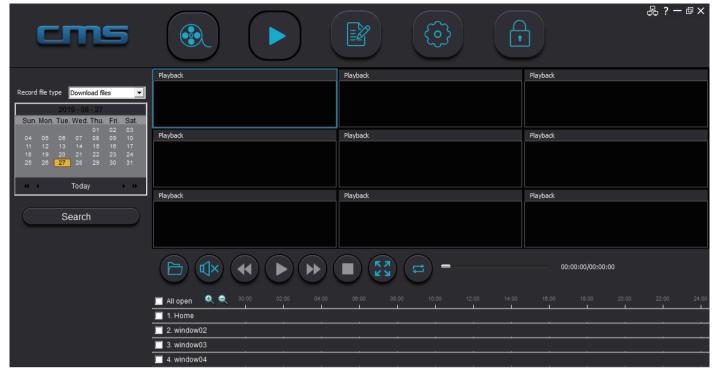


Figure 7 Playback

# 7. Configuring network and micro SD

To Configuring network and micro SD memory, right-click on the appropriate device list on the left-hand frame in Figure 8 to open a drop down menu. Then Right-click the "IPC Config".



Figure 8 Device Parameter Setting

The window shown in Figure 9 will pop up.

You can Configuring the camera's IP address, micro SD card record, password settings here.

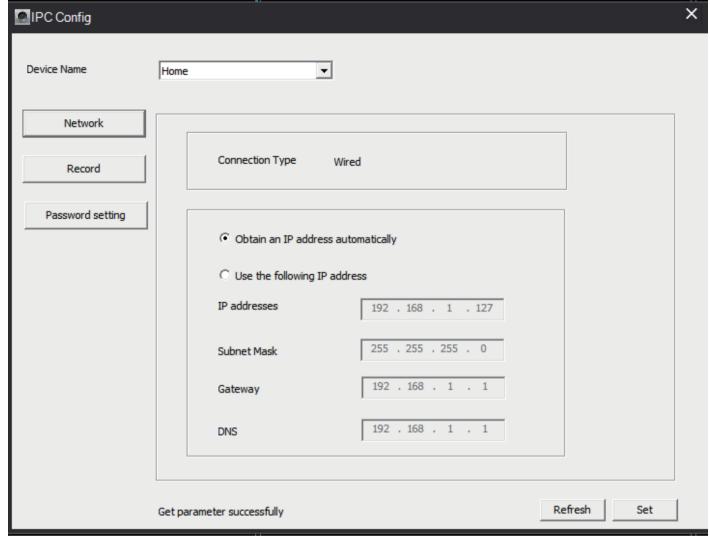


Figure 9 Device parameter setting Window

#### 8. Mail/user login (WAN)

When using a network outside of your home or business (e.g., coffee shop, work computer, etc.) to watch live video, a free registered account is required. A separate account is required for each Sricam CMS or smart phone application.

# **Register an APP User Account:**

Step 1: Open the link: http://videoipcamera.cn/view/reg.html on broswer.

Step 2: Enter a new password (twice) and click on "Next" as figure 10.

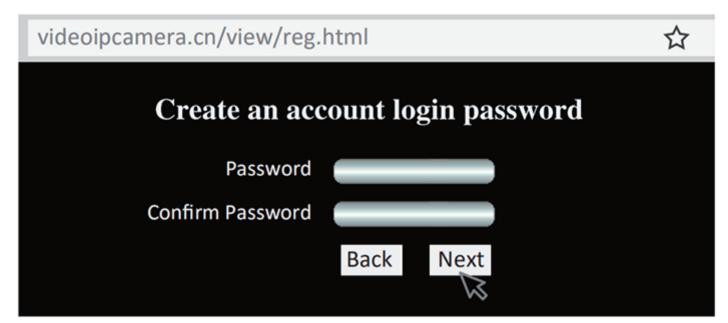


Figure 10 create password

Step 3: Enter your email ID and click "Next".

NOTE: Both Sricam CMS and Sricam Smart Phone App needs a separate App account, therefore, if the email ID is used for registered on your Smart Phone App before, then cannot be used.

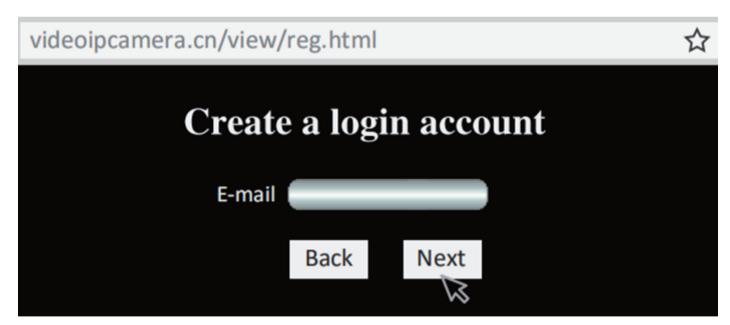


Figure 11 Account ID

Step 5: Enter your mail/user ID and password. Then click "Login".

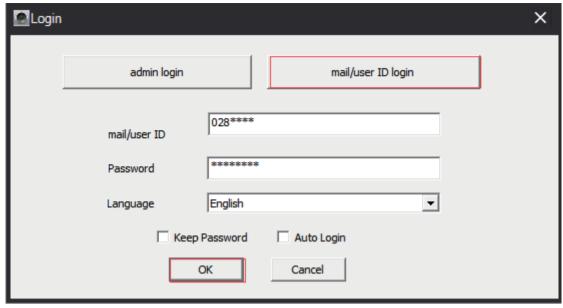


Figure 12 Login Window

#### Add the device on Sricam CMS:

Click, "Add Device" button as shown in Figure 13 and enter your device's setup information as following steps:

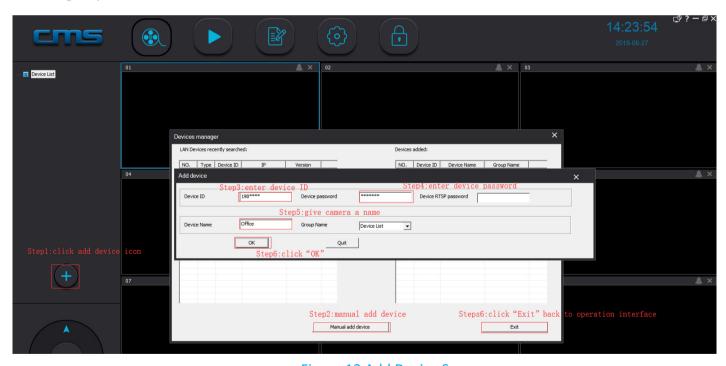


Figure 13 Add Device Screen

The camera will be displayed in the device list in a window as shown in Figure 14. Double-click the device icon to watch the live video.



Figure 14 live video