


Clearance Distribution and Safety Margin

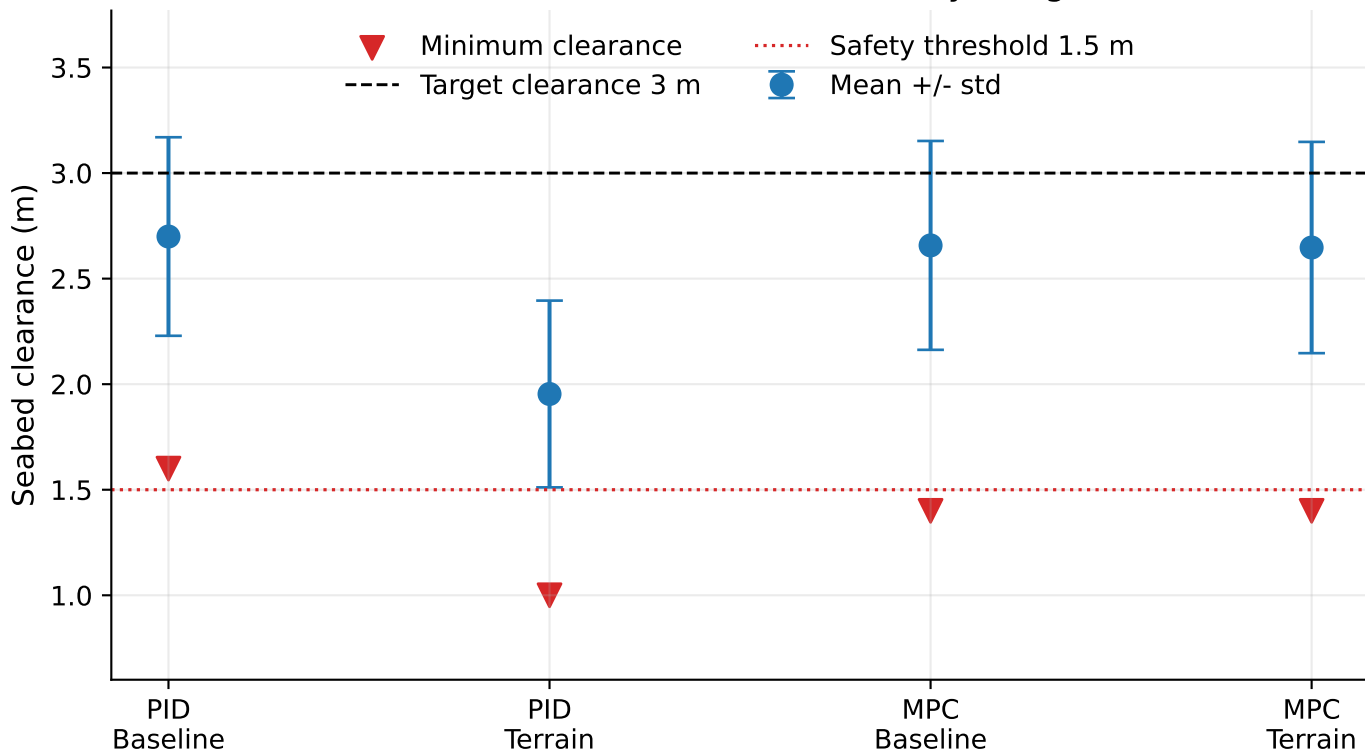

Clearance source: real DVL altitude; warm-up trimmed; truth = /auv/sensors/ground_truth