

Integration Manual

for S32 SPI Driver

Document Number: IM11SPIASR4.4 Rev0000R4.0.2 Rev. 1.0

1 Revision History	2
2 Introduction	3
2.1 Supported Derivatives	3
2.2 Overview	4
2.3 About This Manual	4
2.4 Acronyms and Definitions	5
2.5 Reference List	5
3 Building the driver	7
3.1 Build Options	7
3.1.1 GCC Compiler/Assembler/Linker Options	7
3.1.2 GHS Compiler/Assembler/Linker Options	10
3.1.3 DIAB Compiler/Assembler/Linker Options	12
3.2 Files required for compilation	14
3.3 Setting up the plugins	17
3.3.1 DMA configuration	18
4 Function calls to module	28
4.1 Function Calls during Start-up	28
4.2 Function Calls during Shutdown	28
4.3 Function Calls during Wake-up	28
5 Module requirements	29
5.1 Exclusive areas to be defined in BSW scheduler	29
5.2 Exclusive areas not available on this platform	36
5.3 Peripheral Hardware Requirements	36
5.4 ISR to configure within AutosarOS - dependencies	36
5.5 ISR Macro	37
5.5.1 Without an Operating System	37
5.5.2 With an Operating System	38
5.6 Other AUTOSAR modules - dependencies	38
5.7 Data Cache Restrictions	39
5.8 User Mode support	39
5.8.1 User Mode configuration in the module	39
5.8.2 User Mode configuration in AutosarOS	39
5.9 Multicore support	41
6 Main API Requirements	42
6.1 Main function calls within BSW scheduler	42
6.2 API Requirements	42
6.3 Calls to Notification Functions, Callbacks, Callouts	42

7 Memory allocation	43
7.1 Sections to be defined in Spi_MemMap.h	43
7.2 Linker command file	44
8 Integration Steps	45
9 External assumptions for driver	46



Chapter 1

Revision History

Revision	Date	Author	Description
1.0	30.06.2023	NXP RTD Team	S32 Real-Time Drivers AUTOSAR 4.4 Version 4.0.2 Release

Chapter 2

Introduction

- [Supported Derivatives](#)
- [Overview](#)
- [About This Manual](#)
- [Acronyms and Definitions](#)
- [Reference List](#)

This integration manual describes the integration requirements for SPI Driver for S32 microcontrollers.

2.1 Supported Derivatives

The software described in this document is intended to be used with the following microcontroller devices of NXP Semiconductors:

- s32g274a_bga525
- s32g254a_bga525
- s32g233a_bga525
- s32g234m_bga525
- s32g378a_bga525
- s32g379a_bga525
- s32g398a_bga525
- s32g399a_bga525
- s32g338m_bga525
- s32g339m_bga525
- s32g358a_bga525
- s32g359a_bga525
- s32r45_bga780

All of the above microcontroller devices are collectively named as S32.

2.2 Overview

AUTOSAR (AUTomotive Open System ARchitecture) is an industry partnership working to establish standards for software interfaces and software modules for automobile electronic control systems.

AUTOSAR:

- paves the way for innovative electronic systems that further improve performance, safety and environmental friendliness.
- is a strong global partnership that creates one common standard: "Cooperate on standards, compete on implementation".
- is a key enabling technology to manage the growing electrics/electronics complexity. It aims to be prepared for the upcoming technologies and to improve cost-efficiency without making any compromise with respect to quality.
- facilitates the exchange and update of software and hardware over the service life of the vehicle.

2.3 About This Manual

This Technical Reference employs the following typographical conventions:

- **Boldface** style: Used for important terms, notes and warnings.
- *Italic* style: Used for code snippets in the text. Note that C language modifiers such "const" or "volatile" are sometimes omitted to improve readability of the presented code.

Notes and warnings are shown as below:

Note

This is a note.

Warning

This is a warning

2.4 Acronyms and Definitions

Term	Definition
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSMI	Basic Software Make file Interface
CS	Chip Select
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DMA	Direct Memory Access
ECU	Electronic Control Unit
FIFO	First In First Out
LSB	Least Significant Bit
MCU	Micro Controller Unit
MIDE	Multi Integrated Development Environment
MSB	Most Significant Bit
N/A	Not Applicable
RAM	Random Access Memory
SIU	Systems Integration Unit
SWS	Software Specification
SPI	Serial Peripheral Interface
XML	Extensible Markup Language
BSW	Basic Software
ISR	Interrupt Service Routine
OS	Operating System
GUI	Graphical User Interface
PB Variant	Post Build Variant
PC Variant	Pre Compile Variant
LT Variant	Link Time Variant
RTD	Real Time Drivers

2.5 Reference List

#	Title	Version
1	Specification of SPI Driver	AUTOSAR Release 4.↔ 4.0
2	S32G2 Reference Manual	Rev 7, February 2023
3	S32R45 Reference Manual	Rev 3, 12/2021
4	S32G3 Reference Manual	Rev 3, Feb 2023
5	S32G2 Data Sheet	Rev 6, Dec 2022
6	S32R45 Data Sheet	Rev 3, RC - 11/2022
7	S32G3 Data Sheet	Rev 2, RC, Feb 2023
8	VR5510 Data Sheet	Rev 5, April 2022
9	S32G2 Mask Set Errata for Mask 0P77B	Rev 3.0

Introduction

#	Title	Version
10	S32G2 Mask Set Errata for Mask 1P77B	Rev 1.0
11	S32R45 Mask Set Errata for Mask P57D	Rev 2.0
12	S32G3 Mask Set Errata for Mask 1P72B	Rev 2.1

Chapter 3

Building the driver

- [Build Options](#)
- [Files required for compilation](#)
- [Setting up the plugins](#)

This section describes the source files and various compilers, linker options used for building the driver. It also explains the EB Tresos Studio plugin setup procedure.

3.1 Build Options

- [GCC Compiler/Assembler/Linker Options](#)
- [GHS Compiler/Assembler/Linker Options](#)
- [DIAB Compiler/Assembler/Linker Options](#)

The RTD driver files are compiled using:

- NXP GCC 9.2.0 20190812 (Build 1649 Revision gaf57174)
- Green Hills Multi 7.1.6d / Compiler 2020.1.4
- Wind River Diab Compiler 7.0.3

The compiler, assembler, and linker flags used for building the driver are explained below.

The TS_T40D11M40I2R0 part of the plugin name is composed as follows:

- T = Target_Id (e.g. T40 identifies Cortex-M architecture)
- D = Derivative_Id (e.g. D11 identifies S32 platform)
- M = SW_Version_Major and SW_Version_Minor
- I = SW_Version_Patch
- R = Reserved

3.1.1 GCC Compiler/Assembler/Linker Options

3.1.1.1 GCC Compiler Options

Compiler Option	Description
-mcpu=cortex-m7	Targeted ARM processor for which GCC should tune the performance of the code
-mthumb	Generates code that executes in Thumb state
-mlittle-endian	Generate code for a processor running in little-endian mode
-mfpv5-sp-d16	Specifies the floating-point hardware available on the target
-mfloat-abi=hard	Specifies the floating-point ABI to use. "hard" allows generation of floating-point instructions and uses FPU-specific calling conventions
-std=c99	Specifies the ISO C99 base standard
-Os	Optimize for size. Enables all -O2 optimizations except those that often increase code size
-ggdb3	Produce debugging information for use by GDB using the most expressive format available, including GDB extensions if at all possible. Level 3 includes extra information, such as all the macro definitions present in the program
-Wall	Enables all the warnings about constructions that some users consider questionable, and that are easy to avoid (or modify to prevent the warning), even in conjunction with macros
-Wextra	This enables some extra warning flags that are not enabled by -Wall
-pedantic	Issue all the warnings demanded by strict ISO C. Reject all programs that use forbidden extensions. Follows the version of the ISO C standard specified by the aforementioned -std option
-Wstrict-prototypes	Warn if a function is declared or defined without specifying the argument types
-Wundef	Warn if an undefined identifier is evaluated in an #if directive. Such identifiers are replaced with zero
-Wunused	Warn whenever a function, variable, label, value, macro is unused
-Werror=implicit-function-declaration	Make the specified warning into an error. This option throws an error when a function is used before being declared
-Wsign-compare	Warn when a comparison between signed and unsigned values could produce an incorrect result when the signed value is converted to unsigned.
-Wdouble-promotion	Give a warning when a value of type float is implicitly promoted to double
-fno-short-enums	Specifies that the size of an enumeration type is at least 32 bits regardless of the size of the enumerator values.
-funsigned-char	Let the type char be unsigned by default, when the declaration does not use either signed or unsigned
-funsigned-bitfields	Let a bit-field be unsigned by default, when the declaration does not use either signed or unsigned
-fomit-frame-pointer	Omit the frame pointer in functions that don't need one. This avoids the instructions to save, set up and restore the frame pointer; on many targets it also makes an extra register available.

Compiler Option	Description
-fno-common	Makes the compiler place uninitialized global variables in the BSS section of the object file. This inhibits the merging of tentative definitions by the linker so you get a multiple-definition error if the same variable is accidentally defined in more than one compilation unit
-fstack-usage	This option is only used to build test for generation Ram/↔ Stack size report. Makes the compiler output stack usage information for the program, on a per-function basis
-fdump-ipa-all	This option is only used to build test for generation Ram/↔ Stack size report. Enables all inter-procedural analysis dumps
-c	Stop after assembly and produce an object file for each source file
-DS32XX	Predefine S32XX as a macro, with definition 1
-DS32G2XX	Predefine S32G2XX as a macro, with definition 1
-DS32G3XX	Predefine S32G3XX as a macro, with definition 1
-DS32R45	Predefine S32R45 as a macro, with definition 1
-DGCC	Predefine GCC as a macro, with definition 1
-DUSE_SW_VECTOR_MODE	Predefine USE_SW_VECTOR_MODE as a macro, with definition 1. By default, the drivers are compiled to handle interrupts in Software Vector Mode
-DD_CACHE_ENABLE	Predefine D_CACHE_ENABLE as a macro, with definition 1. Enables data cache initialization in source file system.↔ c under the Platform driver
-DI_CACHE_ENABLE	Predefine I_CACHE_ENABLE as a macro, with definition 1. Enables instruction cache initialization in source file system.c under the Platform driver
-DENABLE_FPU	Predefine ENABLE_FPU as a macro, with definition 1. Enables FPU initialization in source file system.c under the Platform driver
-DMCAL_ENABLE_USER_MODE_SUPPORT	Predefine MCAL_ENABLE_USER_MODE_SUPPORT↔ RT as a macro, with definition 1. Allows drivers to be configured in user mode.

3.1.1.2 GCC Assembler Options

Assembler Option	Description
-X assembler-with-cpp	Specifies the language for the following input files (rather than letting the compiler choose a default based on the file name suffix)
-mcpu=cortexm7	Targeted ARM processor for which GCC should tune the performance of the code
-mfpu=fpv5-sp-d16	Specifies the floating-point hardware available on the target
-mfloat-abi=hard	Specifies the floating-point ABI to use. "hard" allows generation of floating-point instructions and uses FPU-specific calling conventions
-mthumb	Generates code that executes in Thumb state
-c	Stop after assembly and produce an object file for each source file

3.1.1.3 GCC Linker Options

Linker Option	Description
-Wl,-Map,filename	Produces a map file
-T linkerfile	Use linkerfile as the linker script. This script replaces the default linker script (rather than adding to it)
-entry=Reset_Handler	Specifies that the program entry point is Reset_Handler
-nostartfiles	Do not use the standard system startup files when linking
-mcpu=cortexm7	Targeted ARM processor for which GCC should tune the performance of the code
-mthumb	Generates code that executes in Thumb state
-mfpu=fpv5-sp-d16	Specifies the floating-point hardware available on the target
-mfloat-abi=hard	Specifies the floating-point ABI to use. "hard" allows generation of floating-point instructions and uses FPU-specific calling conventions
-mlittle-endian	Generate code for a processor running in little-endian mode
-ggdb3	Produce debugging information for use by GDB using the most expressive format available, including GDB extensions if at all possible. Level 3 includes extra information, such as all the macro definitions present in the program
-lc	Link with the C library
-lm	Link with the Math library
-lgcc	Link with the GCC library

3.1.2 GHS Compiler/Assembler/Linker Options

3.1.2.1 GHS Compiler Options

Compiler Option	Description
-cpu=cortexm7	Selects target processor: Arm Cortex M7
-thumb	Selects generating code that executes in Thumb state
-fpu=vfpv5_d16	Specifies hardware floating-point using the v5 version of the VFP instruction set, with 16 double-precision floating-point registers
-fsingle	Use hardware single-precision, software double-precision FP instructions
-C99	Use (strict ISO) C99 standard (without extensions)
-ghstd=last	Use the most recent version of Green Hills Standard mode (which enables warnings and errors that enforce a stricter coding standard than regular C and C++)
-Osize	Optimize for size
-gnu_asm	Enables GNU extended asm syntax support
-dual_debug	Generate DWARF 2.0 debug information
-G	Generate debug information
-keeptempfiles	Prevents the deletion of temporary files after they are used. If an assembly language file is created by the compiler, this option will place it in the current directory instead of the temporary directory

Compiler Option	Description
-Wimplicit-int	Produce warnings if functions are assumed to return int
-Wshadow	Produce warnings if variables are shadowed
-Wtrigraphs	Produce warnings if trigraphs are detected
-Wundef	Produce a warning if undefined identifiers are used in #if preprocessor statements
-unsigned_chars	Let the type char be unsigned, like unsigned char
-unsigned_fields	Bitfields declared with an integer type are unsigned
-no_commons	Allocates uninitialized global variables to a section and initializes them to zero at program startup
-no_exceptions	Disables C++ support for exception handling
-no_slash_comment	C++ style // comments are not accepted and generate errors
-prototype_errors	Controls the treatment of functions referenced or called when no prototype has been provided
-incorrect_pragma_warnings	Controls the treatment of valid #pragma directives that use the wrong syntax
-c	Stop after assembly and produce an object file for each source file
-DS32XX	Predefine S32XX as a macro, with definition 1
-DS32G2XX	Predefine S32G2XX as a macro, with definition 1
-DS32G3XX	Predefine S32G3XX as a macro, with definition 1
-DS32R45	Predefine S32R45 as a macro, with definition 1
-DGHS	Predefine GHS as a macro, with definition 1
-DUSE_SW_VECTOR_MODE	Predefine USE_SW_VECTOR_MODE as a macro, with definition 1. By default, the drivers are compiled to handle interrupts in Software Vector Mode
-DD_CACHE_ENABLE	Predefine D_CACHE_ENABLE as a macro, with definition 1. Enables data cache initialization in source file system.↵ c under the Platform driver
-DI_CACHE_ENABLE	Predefine I_CACHE_ENABLE as a macro, with definition 1. Enables instruction cache initialization in source file system.c under the Platform driver
-DENABLE_FPU	Predefine ENABLE_FPU as a macro, with definition 1. Enables FPU initialization in source file system.c under the Platform driver
-DMCAL_ENABLE_USER_MODE_SUPPORT	Predefine MCAL_ENABLE_USER_MODE_SUPPORT↵ RT as a macro, with definition 1. Allows drivers to be configured in user mode

3.1.2.2 GHS Assembler Options

Assembler Option	Description
-cpu=cortexm7	Selects target processor: Arm Cortex M7
-fpu=vfpv5_d16	Specifies hardware floating-point using the v5 version of the VFP instruction set, with 16 double-precision floating-point registers
-fsingle	Use hardware single-precision, software double-precision FP instructions
-preprocess_assembly_files	Controls whether assembly files with standard extensions such as .s and .asm are preprocessed

Assembler Option	Description
-list	Creates a listing by using the name and directory of the object file with the .lst extension
-c	Stop after assembly and produce an object file for each source file

3.1.2.3 GHS Linker Options

Linker Option	Description
-e Reset_Handler	Make the symbol Reset_Handler be treated as a root symbol and the start label of the application
-T linker_script_file.ld	Use linker_script_file.ld as the linker script. This script replaces the default linker script (rather than adding to it)
-map	Produce a map file
-keepmap	Controls the retention of the map file in the event of a link error
-Mn	Generates a listing of symbols sorted alphabetically/numerically by address
-delete	Instructs the linker to remove functions that are not referenced in the final executable. The linker iterates to find functions that do not have relocations pointing to them and eliminates them
-ignore_debug_references	Ignores relocations from DWARF debug sections when using -delete. DWARF debug information will contain references to deleted functions that may break some third-party debuggers
-Llibrary_path	Points to library_path (the libraries location) for thumb2 to be used for linking
-larch	Link architecture specific library
-lstartup	Link run-time environment startup routines. The source code for the modules in this library is provided in the src/libstartup directory
-lind_sd	Link language-independent library, containing support routines for features such as software floating point, run-time error checking, C99 complex numbers, and some general purpose routines of the ANSI C library
-v	Prints verbose information about the activities of the linker, including the libraries it searches to resolve undefined symbols
-nostartfiles	Controls the start files to be linked into the executable

3.1.3 DIAB Compiler/Assembler/Linker Options

3.1.3.1 DIAB Compiler Options

Compiler Option	Description
-tARMCORTEXM7MG:simple	Selects target processor (hardware single-precision, software double-precision floating-point)
-mthumb	Selects generating code that executes in Thumb state
-std=c99	Follows the C99 standard for C
-Oz	Like -O2 with further optimizations to reduce code size
-g	Generates DWARF 4.0 debug information
-fstandalone-debug	Emits full debug info for all types used by the program

Compiler Option	Description
-Wstrict-prototypes	Warn if a function is declared or defined without specifying the argument types
-Wsign-compare	Produce warnings when comparing signed type with unsigned type
-Wdouble-promotion	Give a warning when a value of type float is implicitly promoted to double
-Wunknown-pragmas	Issues a warning for unknown pragmas
-Wundef	Warns if an undefined identifier is evaluated in an #if directive. Such identifiers are replaced with zero
-Wextra	Enables some extra warning flags that are not enabled by '-Wall'
-Wall	Enables all of the most useful warnings (for historical reasons this option does not literally enable all warnings)
-pedantic	Emits a warning whenever the standard specified by the -std option requires a diagnostic
-Werror=implicit-function-declaration	Generates an error whenever a function is used before being declared
-fno-common	Compile common globals like normal definitions
-fno-signed-char	Char is unsigned
-fno-trigraphs	Do not process trigraph sequences
-V	Displays the current version number of the tool suite
-c	Stop after assembly and produce an object file for each source file
-DS32XX	Predefine S32XX as a macro, with definition 1
-DS32G2XX	Predefine S32G2XX as a macro, with definition 1
-DS32G3XX	Predefine S32G3XX as a macro, with definition 1
-DS32R45	Predefine S32R45 as a macro, with definition 1
-DDIAB	Predefine DIAB as a macro, with definition 1
-DUSE_SW_VECTOR_MODE	Predefine USE_SW_VECTOR_MODE as a macro, with definition 1. By default, the drivers are compiled to handle interrupts in Software Vector Mode
-DD_CACHE_ENABLE	Predefine D_CACHE_ENABLE as a macro, with definition 1. Enables data cache initialization in source file system.c under the Platform driver
-DI_CACHE_ENABLE	Predefine I_CACHE_ENABLE as a macro, with definition 1. Enables instruction cache initialization in source file system.c under the Platform driver
-DENABLE_FPU	Predefine ENABLE_FPU as a macro, with definition 1. Enables FPU initialization in source file system.c under the Platform driver
-DMCAL_ENABLE_USER_MODE_SUPPORT	Predefine MCAL_ENABLE_USER_MODE_SUPPORT as a macro, with definition 1. Allows drivers to be configured in user mode

3.1.3.2 DIAB Assembler Options

Assembler Option	Description
-mthumb	Selects generating code that executes in Thumb state
-Xpreprocess-assembly	Invokes C preprocessor on assembly files before running the assembler
-Xassembly-listing	Produces an .lst assembly listing file
-c	Stop after assembly and produce an object file for each source file

3.1.3.3 DIAB Linker Options

Linker Option	Description
-e Reset_Handler	Make the symbol Reset_Handler be treated as a root symbol and the start label of the application
linker_script_file.dld	Use linker_script_file.dld as the linker script. This script replaces the default linker script (rather than adding to it)
-m30	m2 + m4 + m8 + m16
-Xstack-usage	Gathers and display stack usage at link time
-Xpreprocess-lecl	Perform pre-processing on linker scripts
-Llibrary_path	Points to the libraries location for ARMV7EMMG to be used for linking
-lc	Links with the standard C library
-lm	Links with the math library

3.2 Files required for compilation

This section describes the include files required to compile, assemble and link the AUTOSAR Spi Driver for S32 microcontrollers.

To avoid integration of incompatible files, all the include files from other modules shall have the same AR_MAJOR_VERSION and AR_MINOR_VERSION, i.e. only files with the same AUTOSAR major and minor versions can be compiled.

Spi Driver Files:

- Spi_TS_T40D11M40I2R0\src\Spi_Ip.c
- Spi_TS_T40D11M40I2R0\src\Spi_Ip_Irq.c
- Spi_TS_T40D11M40I2R0\src\Lpspi_Ip.c
- Spi_TS_T40D11M40I2R0\src\Lpspi_Ip_Irq.c
- Spi_TS_T40D11M40I2R0\src\Spi.c
- Spi_TS_T40D11M40I2R0\src\Spi_IPW.c
- Spi_TS_T40D11M40I2R0\inc\Spi_Ip.h
- Spi_TS_T40D11M40I2R0\inc\Spi_Ip_Types.h
- Spi_TS_T40D11M40I2R0\inc\Lpspi_Ip.h

- Spi_TS_T40D11M40I2R0\inc\Lpspi_Ip_Types.h
- Spi_TS_T40D11M40I2R0\inc\Lpspi_Llce_Ip_Wrapper.h
- Spi_TS_T40D11M40I2R0\inc\Spi.h
- Spi_TS_T40D11M40I2R0\inc\Spi_IPW.h
- Spi_TS_T40D11M40I2R0\inc\Spi_IPW_Types.h

Spi Driver Generated Files (must be generated by the user using a configuration tool):

- Spi_Cfg.h - The file contains the definitions according to configuration.
- Spi_[VariantName]_PBcfg.h - The file contains externing definitions of configuration structures.
- Spi_[VariantName]_PBcfg.c (For PB Variant) - The file contains the definition of the initialization pointer for the respective variant.
- Spi_Ipw_Cfg.h - The file contains the definitions according to configuration.
- Spi_Ipw_[VariantName]_PBcfg.h - The file externing definitions of configuration structures.
- Spi_Ipw_[VariantName]_PBcfg.c - The file contains the definition of the initialization pointer for the respective variant.
- Spi_Ip_Cfg.h - The file contains the definitions according to configuration.
- Spi_Ip_[VariantName]_PBcfg.h - The file externing definitions of configuration structures.
- Spi_Ip_[VariantName]_PBcfg.c - The file contains the definition of the initialization pointer for the respective variant.
- Lpspi_Ip_Cfg.h - The file contains the definitions according to configuration.
- Lpspi_Ip_[VariantName]_PBcfg.h - The file externing definitions of configuration structures.
- Lpspi_Ip_[VariantName]_PBcfg.c - The file contains the definition of the initialization pointer for the respective variant.

Note

As a deviation from standard:

- Spi_[VariantName]_PBcfg.h, Spi_[VariantName]_PBcfg.c, Spi_Ipw_[VariantName]_PBcfg.h, Spi_Ipw_[VariantName]_PBcfg.c, Spi_Ip_[VariantName]_PBcfg.h, Spi_Ip_[VariantName]_PBcfg.c, Lpspi_Ip_[VariantName]_PBcfg.h, Lpspi_Ip_[VariantName]_PBcfg.c - This file will contain the definition for all parameters that are variant aware, independent of the configuration class that will be selected (PC, LT, PB).

Base Files:

- Base_TS_T40D11M40I2R0\include\Compiler.h
- Base_TS_T40D11M40I2R0\include\Compiler_Cfg.h
- Base_TS_T40D11M40I2R0\include\ComStack_Cfg.h

Building the driver

- Base_TS_T40D11M40I2R0\include\ComStack_Types.h
- Base_TS_T40D11M40I2R0\include\Mcal.h
- Base_TS_T40D11M40I2R0\include\Spi_MemMap.h
- Base_TS_T40D11M40I2R0\include\Platform_Types.h
- Base_TS_T40D11M40I2R0\include\Reg_eSys.h
- Base_TS_T40D11M40I2R0\include\RegLockMacros.h
- Base_TS_T40D11M40I2R0\include\Soc_Ips.h
- Base_TS_T40D11M40I2R0\include\StandardTypes.h
- Base_TS_T40D11M40I2R0\include\OsIf.h
- Base_TS_T40D11M40I2R0\include\Devassert.h
- Base_TS_T40D11M40I2R0\header\[PlatformName]_SPI.h
- Base_TS_T40D11M40I2R0\header\[PlatformName]_LLCE_LPSPi.h
- Base_TS_T40D11M40I2R0\header\[PlatformName]_LLCE_CORE_TO_CORE.h

DEM Files:

- Dem_TS_T40D11M40I2R0\include\Dem.h
- Dem_TS_T40D11M40I2R0\include\Dem_Types.h
- Dem_TS_T40D11M40I2R0\generate_PC\include\Dem_IntErrId.h
- Dem_TS_T40D11M40I2R0\src\Dem.c

DET Files:

- Det_TS_T40D11M40I2R0\include\Det.h
- Det_TS_T40D11M40I2R0\src\Det.c

MCL Files(Only when DMA is used):

- Mcl_TS_T40D11M40I2R0\include\CDD_Mcl.h
- Mcl_TS_T40D11M40I2R0\src\CDD_Mcl.c

RTE Files:

- Rte_TS_T40D11M40I2R0\include\SchM_Spi.h
- Rte_TS_T40D11M40I2R0\src\SchM_Spi.c

3.3 Setting up the plugins

The Spi Driver was designed to be configured by using the EB Tresos Studio (version 27.1.0 b200625-0900 or later)

Location of various files inside the SPI module folder:

- VSMD (Vendor Specific Module Definition) file in EB Tresos Studio XDM format:
 - Spi_TS_T40D11M40I2R0\config\Spi.xdm
- VSMD (Vendor Specific Module Definition) file(s) in AUTOSAR compliant EPD format:
 - Spi_TS_T40D11M40I2R0\autosar\Spi_<subderivative_name>.epd
- Code Generation Templates for variant aware parameters:
 - Spi_TS_T40D11M40I2R0\generate_PB\include\Spi_PBcfg.h
 - Spi_TS_T40D11M40I2R0\generate_PB\src\Spi_PBcfg.c
 - Spi_TS_T40D11M40I2R0\generate_PB\include\Spi_Ipw_PBcfg.h
 - Spi_TS_T40D11M40I2R0\generate_PB\src\Spi_Ipw_PBcfg.c
 - Spi_TS_T40D11M40I2R0\generate_PB\include\Spi_Ip_PBcfg.h
 - Spi_TS_T40D11M40I2R0\generate_PB\src\Spi_Ip_PBcfg.c
 - Spi_TS_T40D11M40I2R0\generate_PB\include\Lpspi_Ip_PBcfg.h
 - Spi_TS_T40D11M40I2R0\generate_PB\src\Lpspi_Ip_PBcfg.c
- Code Generation Templates for parameters without variation points:
 - Spi_TS_T40D11M40I2R0\generate_PC\include\Spi_Cfg.h
 - Spi_TS_T40D11M40I2R0\generate_PC\include\Spi_Ipw_Cfg.h
 - Spi_TS_T40D11M40I2R0\generate_PC\include\Spi_Ip_Cfg.h
 - Spi_TS_T40D11M40I2R0\generate_PC\include\Lpspi_Ip_Cfg.h

Steps to generate the configuration:

1. Copy the following module folders into the Tresos plugins folder:

- Base_TS_T40D11M40I2R0
- Dem_TS_T40D11M40I2R0
- Det_TS_T40D11M40I2R0
- EcuC_TS_T40D11M40I2R0
- Mcl_TS_T40D11M40I2R0
- Mcu_TS_T40D11M40I2R0
- Os_TS_T40D11M40I2R0
- Platform_TS_T40D11M40I2R0
- Port_TS_T40D11M40I2R0
- Resource_TS_T40D11M40I2R0
- Rte_TS_T40D11M40I2R0
- Spi_TS_T40D11M40I2R0

Building the driver

2. Set the desired Tresos Output location folder for the generated sources and header files.
3. Use the EB Tresos Studio GUI to modify ECU configuration parameters values.
4. Generate the configuration files

Dependencies:

- **DEM** is required for signalling the production error detection (hardware failure, etc).
- **DET** is required for signalling the development error detection (parameters out of range, null pointers, etc).
- **ECUC** is required for configuring the variant handling and partition in Tresos.
- **MCL** is required when DMA option is used or HW Unit is SPI over FLEXIO.
- **MCU** is required to generate baudrate according to Peripheral clock.
- **OS** is required for configuring the core selected in EB Tresos and the Get_coreID API has called in SPI driver.
- **PLATFORM** is required for configuring the Spi irq handler.
- **PORT** is required for configuring the Spi pins.
- **RESOURCE** is required to select processor derivative.

DMA configuration

3.3.1 DMA configuration This section applies only to SPI units configured for asynchronous transmission (SpiPhyUnitSync not checked) and which use DMA for serializing/deserializing data between the hardware unit and the TX/RX buffers (SpiPhyUnitAsyncUseDma = true).

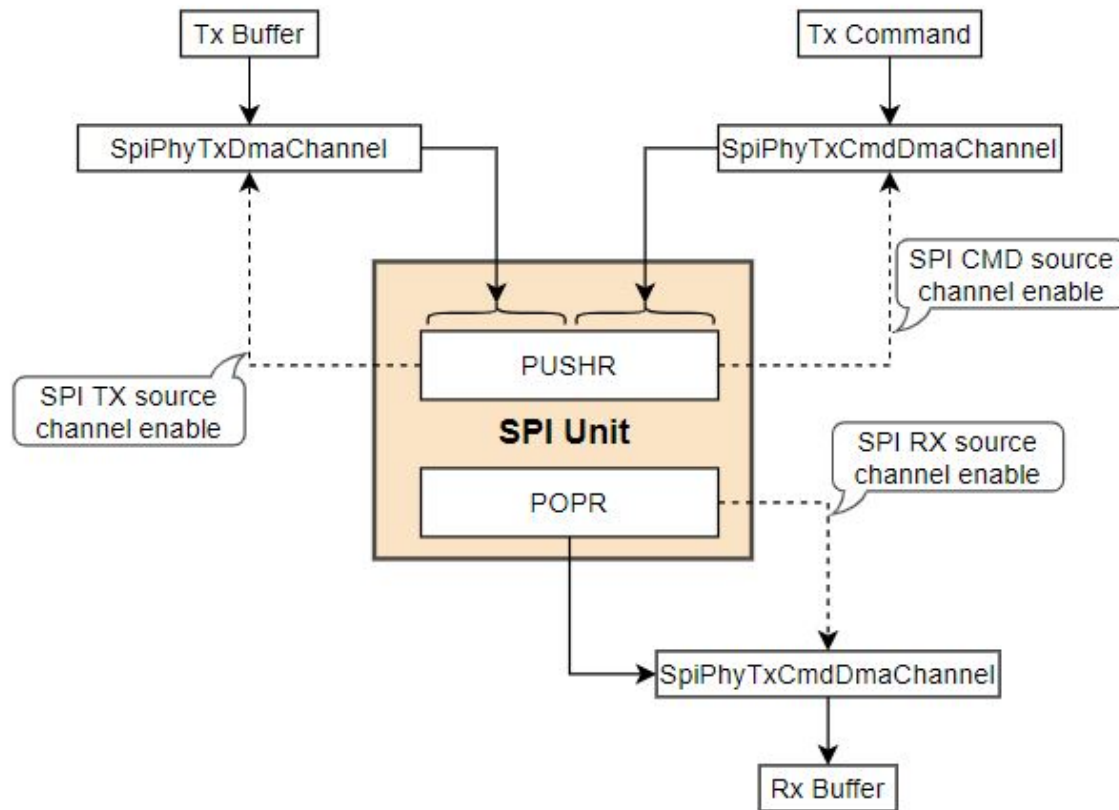


Figure 3.1 DMA transferring mode internal architecture

Each SPI unit configured in DMA mode requires 3 distinct DMA channels from the same DMA Mux:

- **SpiPhyTxDmaChannel:** The TX DMA channel used for filling TX FIFO with the data in TX Buffer. This channel is triggered by TX SPI unit event and must be “wired” to “SPI TX source” (configured inside the MCL module – "MclConfig/Dma Logic Channel" container).
- **SpiPhyTxCmdDmaChannel:** The TX CMD DMA channel used for filling CMD FIFO with the command data of current SPI Channel. This channel is triggered by CMD SPI unit event and must be “wired” to “SPI CMD source” (configured inside the MCL module – "MclConfig/Dma Logic Channel" container).
- **SpiPhyRxDmaChannel:** The RX DMA channel used for filling RX buffer with the deserialized data. This channel is triggered by RX SPI unit event and must be “wired” to “SPI RX source” (configured inside the MCL module – "MclConfig/Dma Logic Channel" container).

Note

- If DMA uses fixed priority arbitration, then the priority must be SpiPhyRxDmaChannel > SpiPhyTxCmdDmaChannel > SpiPhyTxDmaChannel.
- If DMA uses round robin arbitration, no priority constraints are applied on SpiPhyTxCmdDmaChannel, SpiPhyTxDmaChannel and SpiPhyRxDmaChannel priority.

Building the driver

- Enable Scatter/Gather should be enabled in the DMA channel which referring by SpiPhyTxCmdDmaChannel.

If the SPI driver is working in interrupt mode, the DMA Rx notification must be enabled for the specified Rx DMA channel. The name of the function to be used as a notification is Spi_Ip_SPI_X_IrqDmaHandler, where X is the number of SPI unit used.

Table 3.10 SPI DMA Notification

Physical Unit	SPI DMA Notification Name
SPI_0	Spi_Ip_SPI_0_IrqDmaHandler
SPI_1	Spi_Ip_SPI_1_IrqDmaHandler
SPI_2	Spi_Ip_SPI_2_IrqDmaHandler
SPI_3	Spi_Ip_SPI_3_IrqDmaHandler
SPI_4	Spi_Ip_SPI_4_IrqDmaHandler
SPI_5	Spi_Ip_SPI_5_IrqDmaHandler

Next figures show an example of DMA configuration for SPI unit.

SpiPhyUnit

Name  SpiPhyUnit_0

General

SPI Controller Instance

 SPI_2  

SpiPhyUnitMode

 SPI_MASTER  

SpiPhyUnitSync

 ☐  SpiModifiedTransferFormatEnable  ☐ 

SpiSamplePoint (0 -> 2)

 0

SpiPhyUnitAsyncUseDma

 ☒ 

 SpiPhyTxDmaChannel

 /Mcl/Mcl/MclConfig/SPI_2_TX

 SpiPhyTxCmdDmaChannel

 /Mcl/Mcl/MclConfig/SPI_2_TXCMD

 SpiPhyRxDmaChannel

 /Mcl/Mcl/MclConfig/SPI_2_RX

Figure 3.2 DMA Configuration sample for SPI Physical Unit - SPI module in EB Tresos

Logic Channel

Name  SPI_2_TX

Logic Channel Configuration

Global

Transfer

ScatterGather

Crc

Logic Channel Name

 DMA_LOGIC_CH_0 

Hardware Instance

 DMA_IP_HW_INST_0 

Hardware Channel

 DMA_IP_HW_CH_0 

Interrupt Callback

 NULL_PTR 

Error Interrupt Callback

 NULL_PTR 

Enable Global Config

 ☒ 

Enable Transfer Config

 ☐ 

Enable Scatter/Gather

 ☐ 

Enable CRC Config

 ☐ 

Figure 3.3 DMA TX General configuration - MCL module in EB Tresos

Logic Channel

Name  SPI_2_TX

Logic Channel Configuration

Global

Transfer

ScatterGather

Crc

▼ dmaLogicChannel_GlobalConfigType

Name  dmaLogicChannel_GlobalConfigType

▼ Control

Name  dmaLogicChannelConfig_GlobalControlType

Enable Master Id Replication  ☐ 

Enable Buffered Writes  ☐ 

▼ Request

Name  dmaLogicChannelConfig_GlobalRequestType

Enable DMAMUX Trigger  ☐ 

Enable DMAMUX Source  ☒ 

DMAMUX0 Source  DMA_IP_REQ_MUX0_DSPI2_TX 

Figure 3.4 DMA TX Global Configuration - MCL module in EB Tresos

22

S32 SPI Driver

NXP Semiconductors

Logic Channel

Name  SPI_2_TX

Logic Channel Configuration Global Transfer ScatterGather Crc

▼ dmaLogicChannel_GlobalConfigType

Name  dmaLogicChannel_GlobalConfigType

▼ Control

Name  dmaLogicChannelConfig_GlobalControlType

Enable Master Id Replication  ☐  Enable Buffered Writes  ☐ 

▼ Request

Name  dmaLogicChannelConfig_GlobalRequestType

Enable DMAMUX Trigger  ☐  Enable DMAMUX Source  ☒ 

DMAMUX0 Source*  DMA_IP_REQ_MUX0_DSPI2_TX 

DMAMUX1 Source  DMA_IP_REQ_MUX1_DISABLED 

DMAMUX2 Source  DMA_IP_REQ_MUX2_DISABLED 

DMAMUX3 Source  DMA_IP_REQ_MUX3_DISABLED 

Enable DMA Request  ☐ 

Figure 3.5 DMA CMD General Configuration - MCL module in EB Tresos

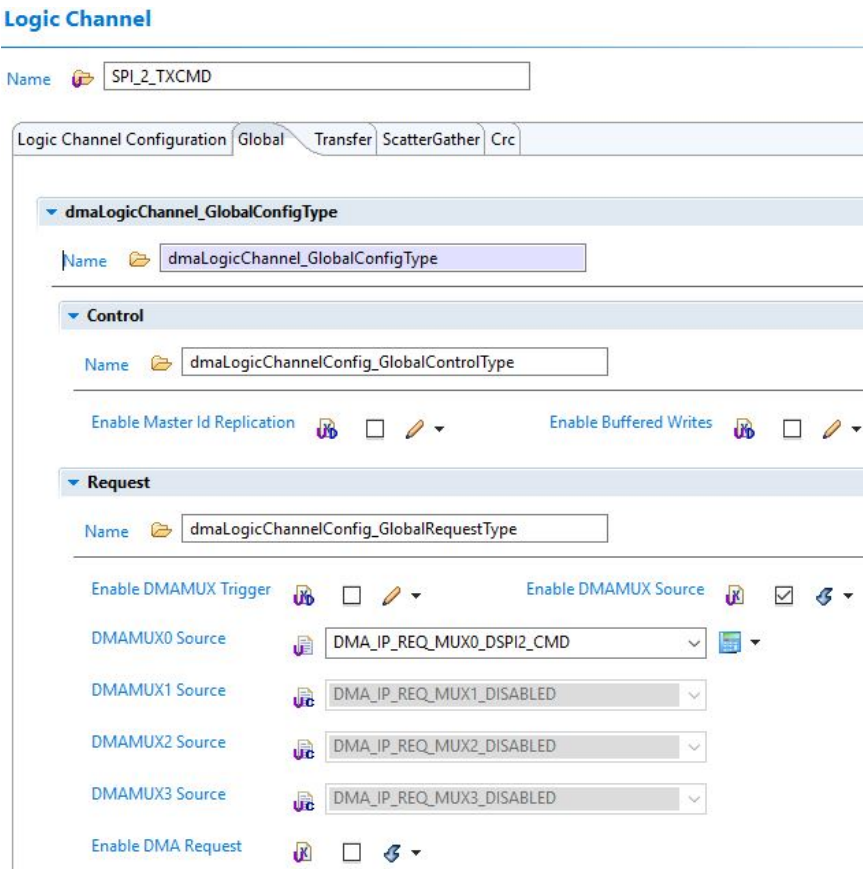


Figure 3.6 DMA CMD Global Configuration - MCL module in EB Tresos

Logic Channel



Figure 3.7 DMA CMD Scatter/Gather Configuration - MCL module in EB Tresos

ScatterGather Element

Name  TCD_SG0

General

▼ Element

Name  dmaLogicChannelConfig_ScatterGatherElementConfigTy

Element Name  DMA_LOGIC_CH_1_SGA_ELEMENT_0 

Last Element of the Link  ☐ 

 Element Link  /Mcl/Mcl/MclConfig/SPI_2_TXCMD/dmaLogicChannel_ConfigType/dmaLogicChannel_ScatterGatherConfigType/TCD_SG1

Enable Scatter/Gather Config  ☐ 

Figure 3.8 DMA CMD Scatter/Gather 0 Configuration - MCL module in EB Tresos

ScatterGather Element

Name  TCD_SG1

General

▼ Element

Name  dmaLogicChannelConfig_ScatterGatherElementConfigTy

Element Name  DMA_LOGIC_CH_1_SGA_ELEMENT_1 

Last Element of the Link  ☐ 

 Element Link  /Mcl/Mcl/MclConfig/SPI_1_TXCMD/dmaLogicChannel_ConfigType/dmaLogicChannel_ScatterGatherConfigType/TCD_SG0

Enable Scatter/Gather Config  ☐ 

Figure 3.9 DMA CMD Scatter/Gather 1 Configuration - MCL module in EB Tresos

Logic Channel

Name

 SPI_2_RX

Logic Channel Configuration

Global

Transfer

ScatterGather

Crc

Logic Channel Name

 DMA_LOGIC_CH_2 

Hardware Instance

 DMA_IP_HW_INST_0 

Hardware Channel

 DMA_IP_HW_CH_2 

Interrupt Callback

 Spi_Ip_SPI_2_IrqDmaHandler 

Error Interrupt Callback

 NULL_PTR 

Enable Global Config

 ☒ 

Enable Transfer Config

 ☐ 

Enable Scatter/Gather

 ☐ 

Enable CRC Config

 ☐ 

Figure 3.10 DMA RX General configuration - MCL module in EB Tresos

Logic Channel

Name  SPI_2_RX

Logic Channel Configuration Global Transfer ScatterGather Crc

▼ dmaLogicChannel_GlobalConfigType

Name  dmaLogicChannel_GlobalConfigType

▼ Control

Name  dmaLogicChannelConfig_GlobalControlType

Enable Master Id Replication  ☐  Enable Buffered Writes  ☐ 

▼ Request

Name  dmaLogicChannelConfig_GlobalRequestType

Enable DMAMUX Trigger  ☐  Enable DMAMUX Source  ☒ 

DMAMUX0 Source  DMA_IP_REQ_MUX0_DSPI2_RX 

DMAMUX1 Source  DMA_IP_REQ_MUX1_DISABLED 

DMAMUX2 Source  DMA_IP_REQ_MUX2_DISABLED 

DMAMUX3 Source  DMA_IP_REQ_MUX3_DISABLED 

Enable DMA Request  ☐ 

Figure 3.11 DMA RX Global Configuration - MCL module in EB Tresos

Chapter 4

Function calls to module

- [Function Calls during Start-up](#)
- [Function Calls during Shutdown](#)
- [Function Calls during Wake-up](#)

4.1 Function Calls during Start-up

SPI shall be initialized during STARTUP phase of EcuM initialization. The API to be called for this is `Spi_↔Init()`. The MCU module should be initialized before the SPI is initialized. The API to be called for this purpose is `Spi_Init()`. The PORT and MCL (if the DMA option is used) modules shall be initialized before SPI is initialized.

4.2 Function Calls during Shutdown

SPI can be silenced by calling `Spi_DeInit()`.

4.3 Function Calls during Wake-up

N/A

Chapter 5

Module requirements

- Exclusive areas to be defined in BSW scheduler
- Exclusive areas not available on this platform
- Peripheral Hardware Requirements
- ISR to configure within AutosarOS - dependencies
- ISR Macro
- Other AUTOSAR modules - dependencies
- Data Cache Restrictions
- User Mode support
- Multicore support

5.1 Exclusive areas to be defined in BSW scheduler

SPI_EXCLUSIVE_AREA_00 is used in function Spi_AsyncTransmit() to protect the schedule mechanism for the situation when a scheduling operation determined by a pending Spi_AsyncTransmit() call may be preempted by a job scheduling requested by an ISR event. It also protect concurrent Spi_AsyncTransmit() calls to schedule in the same time different jobs on the same SPI unit.

SPI_EXCLUSIVE_AREA_01 is used in function Spi_AsyncTransmit() to protect the schedule mechanism for the situation when a scheduling operation determined by a pending Spi_AsyncTransmit() call may be preempted by a job scheduling requested by an ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function Spi_Cancel to protect the status of the given Job result during Spi_Cancel called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function Spi_Ip_SPI_0_IRQHandler to protect the status of the given Job result during Spi_Cancel called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function Spi_Ip_SPI_1_IRQHandler to protect the status of the given Job result during Spi_Cancel called and ISR event.

Module requirements

SPI_EXCLUSIVE_AREA_02 is used in function `Spi_Ip_SPI_2_IRQHandler` to protect the status of the given Job result during `Spi_Cancel` called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function `Spi_Ip_SPI_3_IRQHandler` to protect the status of the given Job result during `Spi_Cancel` called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function `Spi_Ip_SPI_4_IRQHandler` to protect the status of the given Job result during `Spi_Cancel` called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function `Spi_Ip_SPI_5_IRQHandler` to protect the status of the given Job result during `Spi_Cancel` called and ISR event.

SPI_EXCLUSIVE_AREA_02 is used in function `Lpspi_Ip_Combined_IRQHandler` to protect the status of the given Job result during `Spi_Cancel` called and ISR event.

SPI_EXCLUSIVE_AREA_03 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of locking for the entire set of jobs belonging to an asynchronous sequence.

SPI_EXCLUSIVE_AREA_04 is used in function `Spi_WriteIB` to guarantee the atomicity of updating Channel's flags for transmission default data and all data in Channel's buffer if this function is called concurrent in ISR event.

SPI_EXCLUSIVE_AREA_05 is used in function `Spi_SetupEB` to guarantee the atomicity of updating Channel's flags for transmission default data, discard data and Channel's transmit/receive source pointers if this function is called concurrent in ISR event.

SPI_EXCLUSIVE_AREA_06 is used in function `Spi_SyncTransmit` to protect the status of SPI unit belong to the given sequence. Also it protects the global variable which contains the status of the `Spi_SyncTransmit` service. As stated by the Autosar, this service cannot be called when another sequence is during transmission, using this service.

SPI_EXCLUSIVE_AREA_07 is used in function `Spi_SyncTransmit` to to guarantee the atomicity of release SPI units for the given sequence. Also it protects the global variable which contains the status of the `Spi_↔SyncTransmit` service. As stated by the Autosar, this service cannot be called when another sequence is during transmission, using this service.

SPI_EXCLUSIVE_AREA_08 is used in function `Spi_SyncTransmit` to guarantee the atomicity of updating SPI unit status in `Spi_Ip_SyncTransmit` due to `Spi_Ip_AsyncTransmit`, `Spi_Ip_AsyncTransmitFast` or `Spi_Ip_↔Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_09 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating SPI unit status in `Spi_Ip_AsyncTransmit` due to `Spi_Ip_SyncTransmit`, `Spi_Ip_AsyncTransmitFast` or `Spi_Ip_↔Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_10 is used in function `Spi_Cancel` to guarantee the atomicity of updating of MCR register and updating SPI unit status in `Spi_Ip_Cancel` due to `Spi_Ip_SyncTransmit`, `Spi_Ip_AsyncTransmitFast` or `Spi_Ip_AsyncTransmit` may be called in ISR event.

SPI_EXCLUSIVE_AREA_11 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating of MCR register in `Spi_Ip_AsyncTransmit` due to `Spi_Ip_Cancel`, `Spi_Ip_TransferProcess` and `Spi_Ip_IrqDma↔Handler` may be called in ISR event.

SPI_EXCLUSIVE_AREA_12 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating of MCR register in `Spi_Ip_TransferProcess` due to `Spi_Ip_Cancel`, `Spi_Ip_AsyncTransmit` and `Spi_Ip_IrqDma↔Handler` may be called in ISR event.

SPI_EXCLUSIVE_AREA_13 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating of MCR register in `Spi_Ip_IrqDmaHandler` due to `Spi_Ip_Cancel`, `Spi_Ip_AsyncTransmit` and `Spi_Ip_TransferProcess` may be called in ISR event.

SPI_EXCLUSIVE_AREA_14 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating SPI unit status in `Spi_Ip_AsyncTransmitFast` due to `Spi_Ip_SyncTransmit`, `Spi_Ip_AsyncTransmit` or `Spi_Ip_Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_15 is used in function `Spi_SyncTransmit` to guarantee the atomicity of updating SPI unit status due to `Lpspi_Ip_AsyncTransmit` or `Lpspi_Ip_Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_15 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating SPI unit status due to `Lpspi_Ip_SyncTransmit` or `Lpspi_Ip_Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_16 is used in function `Spi_Cancel` to guarantee the atomicity of updating of CR register and updating SPI unit status due to `Lpspi_Ip_SyncTransmit`, `Lpspi_Ip_AsyncTransmit`, `Lpspi_TransmitTxInit` and `Lpspi_Ip_TransferProcess` may be called in ISR event.

SPI_EXCLUSIVE_AREA_17 is used in function `Spi_SyncTransmit` to guarantee the atomicity of updating of CR register in `Lpspi_TransmitTxInit` due to `Lpspi_Ip_Cancel` and `Lpspi_Ip_TransferProcess` may be called in ISR event.

SPI_EXCLUSIVE_AREA_17 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating of CR register in `Lpspi_TransmitTxInit` due to `Lpspi_Ip_Cancel` and `Lpspi_Ip_TransferProcess` may be called in ISR event.

SPI_EXCLUSIVE_AREA_18 is used in function `Spi_AsyncTransmit` to guarantee the atomicity of updating of CR register in `Lpspi_Ip_TransferProcess` due to `Lpspi_Ip_Cancel` `Lpspi_TransmitTxInit` may be called in ISR event.

Exclusive Areas implemented in Low level driver layer (IPL)

SPI_EXCLUSIVE_AREA_08 is used in function `Spi_Ip_SyncTransmit` to guarantee the atomicity of updating SPI unit status due to `Spi_Ip_AsyncTransmit`, `Spi_Ip_AsyncTransmitFast` or `Spi_Ip_Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_09 is used in function `Spi_Ip_AsyncTransmit` to guarantee the atomicity of updating SPI unit status due to `Spi_Ip_SyncTransmit`, `Spi_Ip_AsyncTransmitFast` or `Spi_Ip_Cancel` called in ISR event.

SPI_EXCLUSIVE_AREA_11 is used in function `Spi_Ip_AsyncTransmit` to guarantee the atomicity of updating of MCR register due to `Spi_Ip_Cancel`, `Spi_Ip_TransferProcess` and `Spi_Ip_IrqDmaHandler` may be called in ISR event.

SPI_EXCLUSIVE_AREA_12 is used in function `Spi_Ip_TransferProcess` to guarantee the atomicity of updating of MCR register due to `Spi_Ip_Cancel`, `Spi_Ip_AsyncTransmit` and `Spi_Ip_IrqDmaHandler` may be called in ISR event.

SPI_EXCLUSIVE_AREA_13 is used in function `Spi_Ip_IrqDmaHandler` to guarantee the atomicity of updating of MCR register due to `Spi_Ip_Cancel`, `Spi_Ip_AsyncTransmit` and `Spi_Ip_TransferProcess` may be called in ISR event.

SPI_EXCLUSIVE_AREA_14 is used in function `Spi_Ip_AsyncTransmitFast` to guarantee the atomicity of updating SPI unit status due to `Spi_Ip_SyncTransmit`, `Spi_Ip_AsyncTransmit` or `Spi_Ip_Cancel` called in ISR event.

Module requirements

SPI_EXCLUSIVE_AREA_15 is used in function Lpspi_Ip_SyncTransmit to guarantee the atomicity of updating SPI unit status due to Lpspi_Ip_AsyncTransmit or Lpspi_Ip_Cancel called in ISR event.

SPI_EXCLUSIVE_AREA_15 is used in function Lpspi_Ip_AsyncTransmit to guarantee the atomicity of updating SPI unit status due to Lpspi_Ip_SyncTransmit or Lpspi_Ip_Cancel called in ISR event.

SPI_EXCLUSIVE_AREA_16 is used in function Lpspi_Ip_Cancel to guarantee the atomicity of updating of CR register and updating SPI unit status due to Lpspi_Ip_SyncTransmit, Lpspi_Ip_AsyncTransmit, Lpspi_Ip_TransmitTxInit and Lpspi_Ip_TransferProcess may be called in ISR event.

SPI_EXCLUSIVE_AREA_17 is used in function Lpspi_Ip_SyncTransmit to guarantee the atomicity of updating of CR register in Lpspi_Ip_TransmitTxInit due to Lpspi_Ip_Cancel and Lpspi_Ip_TransferProcess may be called in ISR event.

SPI_EXCLUSIVE_AREA_17 is used in function Lpspi_Ip_AsyncTransmit to guarantee the atomicity of updating of CR register in Lpspi_Ip_TransmitTxInit due to Lpspi_Ip_Cancel and Lpspi_Ip_TransferProcess may be called in ISR event.

SPI_EXCLUSIVE_AREA_18 is used in function Lpspi_Ip_AsyncTransmit to guarantee the atomicity of updating of CR register in Lpspi_Ip_TransferProcess due to Lpspi_Ip_Cancel Lpspi_Ip_TransmitTxInit may be called in ISR event.

Critical Region Exclusive Matrix Below is the table depicting the exclusivity between different critical region IDs from the SPI driver. If there is an “X” in a table, it means that those 2 critical regions cannot interrupt each other.

The critical regions from interrupts are grouped in “ISRs Critical Regions (composed diagram)”. If an exclusive area is “exclusive” with the composed “ISRs Critical Regions (composed diagram)” group, it means that it is exclusive with each one of the ISR critical regions.

Table 5.1 Exclusive Areas

#	A← R← E← A← _← 00	A← R← E← A← _← 01	A← R← E← A← _← 02	A← R← E← A← _← 03	A← R← E← A← _← 04	A← R← E← A← _← 05	A← R← E← A← _← 06	A← R← E← A← _← 07	A← R← E← A← _← 08	A← R← E← A← _← 09	A← R← E← A← _← 10	A← R← E← A← _← 11	A← R← E← A← _← 12	A← R← E← A← _← 13	A← R← E← A← _← 14	A← R← E← A← _← 15	A← R← E← A← _← 16	A← R← E← A← _← 17	A← R← E← A← _← 18	I← S← R← s Critic- al Re- gions (com- posed di- a- gram)
A← R← E← A← _← 00	X	X																		X

#	A← R← E← A← _← 00	A← R← E← A← _← 01	A← R← E← A← _← 02	A← R← E← A← _← 03	A← R← E← A← _← 04	A← R← E← A← _← 05	A← R← E← A← _← 06	A← R← E← A← _← 07	A← R← E← A← _← 08	A← R← E← A← _← 09	A← R← E← A← _← 10	A← R← E← A← _← 11	A← R← E← A← _← 12	A← R← E← A← _← 13	A← R← E← A← _← 14	A← R← E← A← _← 15	A← R← E← A← _← 16	A← R← E← A← _← 17	A← R← E← A← _← 18	I← S← Rs Crit- i- cal Re- gions (com- posed di- a- gram)
A← R← E← A← _← 01	X	X																		X
A← R← E← A← _← 02			X																	X
A← R← E← A← _← 03				X																X
A← R← E← A← _← 04					X															X
A← R← E← A← _← 05						X														X
A← R← E← A← _← 06							X	X												X

Module requirements

#	A← R← E← A← _← 00	A← R← E← A← _← 01	A← R← E← A← _← 02	A← R← E← A← _← 03	A← R← E← A← _← 04	A← R← E← A← _← 05	A← R← E← A← _← 06	A← R← E← A← _← 07	A← R← E← A← _← 08	A← R← E← A← _← 09	A← R← E← A← _← 10	A← R← E← A← _← 11	A← R← E← A← _← 12	A← R← E← A← _← 13	A← R← E← A← _← 14	A← R← E← A← _← 15	A← R← E← A← _← 16	A← R← E← A← _← 17	A← R← E← A← _← 18	I← S← Rs Crit- i- cal Re- gions (com- posed di- a- gram)	
A← R← E← A← _← 07							X	X													X
A← R← E← A← _← 08									X	X	X				X						X
A← R← E← A← _← 09									X	X	X				X						X
A← R← E← A← _← 10									X	X	X	X	X	X	X						X
A← R← E← A← _← 11											X	X	X	X							X
A← R← E← A← _← 12											X	X	X	X							X

#	A← R← E← A← _← 00	A← R← E← A← _← 01	A← R← E← A← _← 02	A← R← E← A← _← 03	A← R← E← A← _← 04	A← R← E← A← _← 05	A← R← E← A← _← 06	A← R← E← A← _← 07	A← R← E← A← _← 08	A← R← E← A← _← 09	A← R← E← A← _← 10	A← R← E← A← _← 11	A← R← E← A← _← 12	A← R← E← A← _← 13	A← R← E← A← _← 14	A← R← E← A← _← 15	A← R← E← A← _← 16	A← R← E← A← _← 17	A← R← E← A← _← 18	I← S← Rs Crit- i- cal Re- gions (com- posed di- a- gram)	
A← R← E← A← _← 13											X	X	X	X							X
A← R← E← A← _← 14									X	X	X				X						X
A← R← E← A← _← 15																X	X				X
A← R← E← A← _← 16																X	X	X	X	X	X
A← R← E← A← _← 17																	X	X	X	X	X
A← R← E← A← _← 18																	X	X	X	X	X

Module requirements

#	A↔ R↔ E↔ A↔ ↔ 00	A↔ R↔ E↔ A↔ ↔ 01	A↔ R↔ E↔ A↔ ↔ 02	A↔ R↔ E↔ A↔ ↔ 03	A↔ R↔ E↔ A↔ ↔ 04	A↔ R↔ E↔ A↔ ↔ 05	A↔ R↔ E↔ A↔ ↔ 06	A↔ R↔ E↔ A↔ ↔ 07	A↔ R↔ E↔ A↔ ↔ 08	A↔ R↔ E↔ A↔ ↔ 09	A↔ R↔ E↔ A↔ ↔ 10	A↔ R↔ E↔ A↔ ↔ 11	A↔ R↔ E↔ A↔ ↔ 12	A↔ R↔ E↔ A↔ ↔ 13	A↔ R↔ E↔ A↔ ↔ 14	A↔ R↔ E↔ A↔ ↔ 15	A↔ R↔ E↔ A↔ ↔ 16	A↔ R↔ E↔ A↔ ↔ 17	A↔ R↔ E↔ A↔ ↔ 18	I↔ S↔ R↔ S↔ Crit- i- cal Re- gions (com- posed di- a- gram)	
I↔ S↔ R↔ S↔ Crit- i- cal Re- gions (com- posed di- a- gram)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X					

5.2 Exclusive areas not available on this platform

List of exclusive areas which are not available on this platform (or blank if they're all available).

5.3 Peripheral Hardware Requirements

None

5.4 ISR to configure within AutosarOS - dependencies

The following ISRs are used by the SPI driver and need to be assigned to a priority level. The interrupt vector numbers corresponding to INTERRUPT mode is as shown in Table below. The interrupt occurs each time the TCF bit in SR register arises. (Note: Unused interrupts shouldn't be configured in the OS.)

Table 5.2 SPI ISRs for DSPI

ISR Name	Cortex-M7 Vector	NVIC Interrupt ID	Cortex-A53 Vector	GIC Interrupt ID
Spi_Ip_SPI_0_I↔RQHandler	101	85	133	117
Spi_Ip_SPI_1_I↔RQHandler	102	86	134	118
Spi_Ip_SPI_2_I↔RQHandler	103	87	135	119
Spi_Ip_SPI_3_I↔RQHandler	104	88	136	120
Spi_Ip_SPI_4_I↔RQHandler	105	89	137	121
Spi_Ip_SPI_5_I↔RQHandler	106	90	138	122

Table 5.3 SPI ISRs LLCE0 INT1 IRQn

ISR Name	Cortex-M7 Vector	NVIC Interrupt ID	Cortex-A53 Vector	GIC Interrupt ID
Lpspi_Ip_LPSPI↔_0_IRQHandler	187	171	219	203
Lpspi_Ip_LPSPI↔_1_IRQHandler	187	171	219	203
Lpspi_Ip_LPSPI↔_2_IRQHandler	187	171	219	203
Lpspi_Ip_LPSPI↔_3_IRQHandler	187	171	219	203

Note

In case of AUTOSAR_OS_NOT_USED, the compiler option "-DUSE_SW_VECTOR_MODE" must be added to the list of compiler options to be used with interrupt controller configured to be in software vector mode.

5.5 ISR Macro

RTD drivers use the ISR macro to define the functions that will process hardware interrupts. Depending on whether the OS is used or not, this macro can have different definitions.

5.5.1 Without an Operating System The macro *USING_OS_AUTOSAROS* must not be defined.

5.5.1.1 Using Software Vector Mode

The macro *USE_SW_VECTOR_MODE* must be defined and the ISR macro is defined as:

```
#define ISR(IsrName) void IsrName(void)
```

In this case, the drivers' interrupt handlers are normal C functions and their prologue/epilogue will handle the context save and restore.

5.5.1.2 Using Hardware Vector Mode

The macro `USE_SW_VECTOR_MODE` must not be defined and the ISR macro is defined as:

```
#define ISR(IsrName) INTERRUPT_FUNC void IsrName(void)
```

In this case, the drivers' interrupt handlers must also handle the context save and restore.

5.5.2 With an Operating System Please refer to your OS documentation for description of the ISR macro.

5.6 Other AUTOSAR modules - dependencies

- **BASE**: The BASE module contains the common files/definitions needed by all RTD modules.
- **DEM** : The DEM module is used for enabling reporting of production relevant error status. The API function used is `Dem_SetEventStatus()`.
- **RESOURCE** :Resource module is used to select microcontroller's derivatives.
- **RTE** : The RTE module is needed for implementing data consistency of exclusive areas that are used by SPI module.
- **DET**: The DET module is used for enabling Default Error Tracer detection. The API function used is `Det_ReportError()`. The activation / deactivation of Default Error Tracer detection is configurable using the "SpiDevErrorDetect" configuration parameter.
- **ECUC**: The ECUC module is used for ECU configuration. RTD modules need ECUC to retrieve the variant information.
- **PORT** : The PORT module is used to configure the port pins with the needed modes, before they are used by the SPI module. For each SPI, the SCK, SOUT, SIN and CSx_y signals need to be configured. In the S32 Reference manual there is an example of the pin configuration. Please refer to the Reference List.
- **MCU**: The MCU driver provides services for basic microcontroller initialization, power down functionality, reset and microcontroller specific functions required by other RTD software modules. The clocks need to be initialized prior to using the SPI driver. The SPI reference clock is provided by MCU plugin. The clock frequency may affect the Baudrate, Timing between clock and chip select, Timing between chip select and clock, Timing between chip select assertions. The reference is specified by the parameter `SpiGeneral\SpiClockRef`:

`SpiClockRef`



`/Mcu/Mcu/McuModuleConfiguration_0/McuClockSettingConfig_0/SPI_CLK`

Figure 5.1 Spi reference clock provided by MCU plugin

- **MCL**: For each SPI in use, a transmit and a receive DMA channel need to be defined and routed through the DMA Multiplexer using MCL plugin. MCL should be initialized before SPI switch to DMA mode
- **OS**: Needed to define a mapping between EcuC partitions and EcuC core ids when multicore support is enabled.

5.7 Data Cache Restrictions

In the DMA transfer mode, DMA transfers may issue cache coherency problems. To avoid possible coherency issues when **D-CACHE** is enabled, the user shall ensure that the buffers used as TCD source and destination are allocated in the **NON-CACHEABLE** area (by means of Spi_Memmap). Otherwise, the SPI driver has some dependencies. User must to put all variables, which were used for transmitter and receiver, to the **NON CACHEABLE** memory section in the RAM zone by the definition **SPI_START_SEC_VAR_<INIT_POLICY>_<ALIGNMENT>_NO_CACHEABLE** and **SPI_STOP_SEC_VAR_<INIT_POLICY>_<ALIGNMENT>_NO_CACHEABLE**

5.8 User Mode support

- [User Mode configuration in the module](#)
- [User Mode configuration in AutosarOS](#)

The **Spi** can be run in user mode if the following steps are performed:

- Enable SpiEnableUserModeSupport from the configuration. Spi module will set the UAA bit in REG_PROT_GCR register for all SPI units. Note: Writing the UAA bit in REG_PROT_GCR for all SPI units will allow user mode access to all SPI registers.
- Call the following functions as trusted functions:
 - void Spi_Ip_SetUserAccess(uint32 instance) for setting the user access allowed for all SPI registers protected by REG_PROT.

5.8.1 User Mode configuration in the module

The Spi can be run in user mode if the following steps are performed:

- Enable **SpiEnableUserModeSupport** from the configuration
- Call the following functions as trusted functions:

Function syntax	Description	Available via
void Spi_Ip_SetUserAccess(uint8 Instance)	This function will enable writing all SPI registers under protection in User mode by configuring REG_PROT	Spi_Ip_TrustedFunctions.h

5.8.2 User Mode configuration in AutosarOS

When User mode is enabled, the driver may have the functions that need to be called as trusted functions in AutosarOS context. Those functions are already defined in driver and declared in the header <IpName>_Ip_TrustedFunctions.h. This header also included all headers files that contain all types definition used by parameters or return types of those functions. Refer the chapter [User Mode configuration in the module](#) for more

Module requirements

detail about those functions and the name of header files they are declared inside. Those functions will be called indirectly with the naming convention below in order to AutosarOS can call them as trusted functions.

```
Call_<Function_Name>_TRUSTED(parameter1,parameter2,...)
```

That is the result of macro expansion `OsIf_Trusted_Call` in driver code:

```
#define OsIf_Trusted_Call[1-6params](name,param1,...,param6) Call_##name##_TRUSTED(param1,...,param6)
```

So, the following steps need to be done in AutosarOS:

- Ensure `MCAL_ENABLE_USER_MODE_SUPPORT` macro is defined in the build system or somewhere global.
- Define and declare all functions that need to call as trusted functions follow the naming convention above in Integration/User code. They need to be visible in `Os.h` for the driver to call them. They will do the marshalling of the parameters and call `CallTrustedFunction()` in OS specific manner.
- `CallTrustedFunction()` will switch to privileged mode and call `TRUSTED_<Function_Name>()`.
- `TRUSTED_<Function_Name>()` function is also defined and declared in Integration/User code. It will un-marshalling of the parameters to call `<Function_Name>()` of driver. The `<Function_Name>()` functions are already defined in driver and declared in `<IpName>_Ip_TrustedFunctions.h`. This header should be included in OS for OS call and indexing these functions.

See the sequence chart below for an example calling `Linflexd_Uart_Ip_Init_Privileged()` as a trusted function.

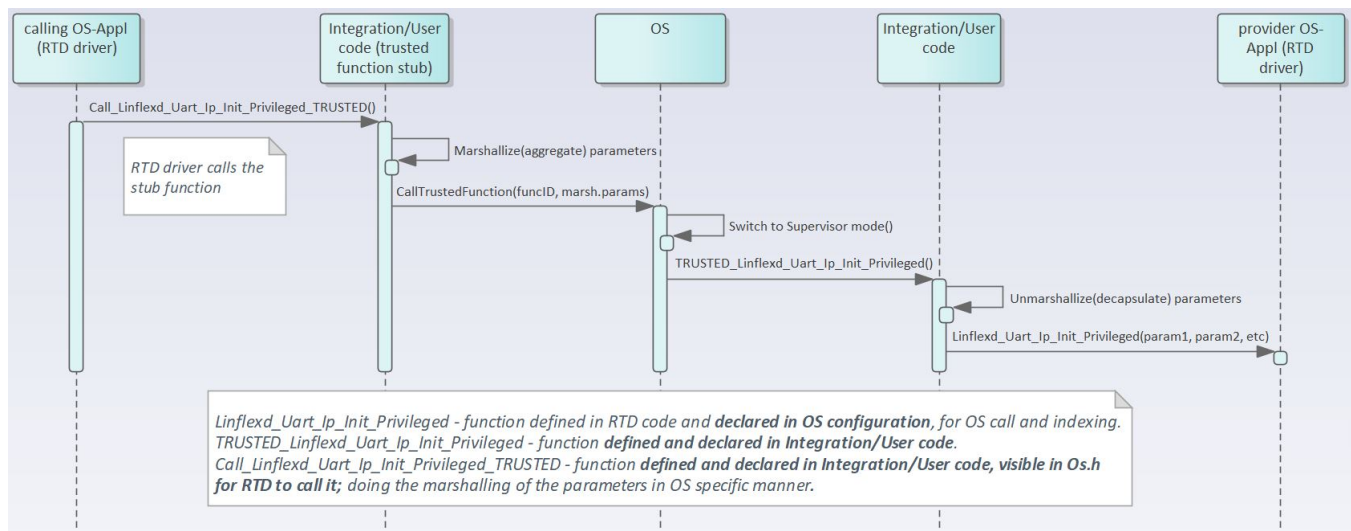


Figure 5.2 Example sequence chart for calling `Linflexd_Uart_Ip_Init_Privileged` as trusted function

5.9 Multicore support

- The SPI implements the "Autosar 4.4 MCAL Multicore Distribution" according to type II, in which the mappable element is set to HW Unit. For additional details, please refer to AUTOSAR_EXP_BSWDistribution↵ Guide.
- The SPI and the mappable elements can be allocated to one or several ECUC partitions , by means of "↵ SpiEcucPartionRef". If the SPI is mapped to zero ECUC partitions, the SPI behavior reverts to single-core implementation, similar to previous Autosar versions. If the SPI is mapped to one or more ECUC partitions, the SPI enforces the following multicore assumptions:
 - The SPI assumes there is a single EcucPartition allocated per core. Internally, the module will use the Core ID returned by GetCoreID API to reference the appropriate global data and configuration elements.
 - The SPI assumes the EcucCoreIDs are defined in a compact/consecutive order, starting from zero. The rationale is that the number of EcucPartitions is used for dimensioning the SPI internal variables and the EcucCoreIDs are used for indexing those variables. (AR-86601 Zero based and dense IDs for OS-Cores and OSApplications)
 - The SPI assumes that initialization is performed on each core, Spi_Init() is called separately for each core, using a different configuration structure. (Type II)
 - The SPI initialization expects the upper layer will pass the correct initialization pointer, specific to the partition in which the driver is to be used. For example: EcucPartition_1 is assigned to CoreID 1; SPI_Init function will be called with SPI_Config_EcucPartition_1 configuration structure, on Core 1.
 - The SPI will check upon each API call if the requested resource is configured to be available on the current core, if DET error reporting is enabled.
 - The SPI requires that all variables in NonCacheable MemMap sections be allocated accordingly, to avoid data corruption in multicore context.
 - The SPI assumes that RTE module implements the EXCLUSIVE AREAS to be core aware only. The rationale is that the module implementation ensures data integrity by separating the mappable elements for different cores already, thus implementing the EXCLUSIVE AREAS in a blocking manner (ex: spin-lock) on a multicore scope, might affect the performance of the drivers on the two cores, although they might access separate HW elements. For single-core scope, the EXCLUSIVE AREAS keep the same purpose as on previous AUTOSAR implementations. (* - to be updated per SPI usecase, to be detailed/removed if some modules require such kind of functionality for critical features which cannot be atomically shared among cores)
 - The SPI assumes that each interrupt is routed by the system only to the core on which is supposed to be serviced.
 - The configuration structure name shall be available in the caller scope of SPI_Init function by being declared with EXTERN, according to its generated name.

Chapter 6

Main API Requirements

- [Main function calls within BSW scheduler](#)
- [API Requirements](#)
- [Calls to Notification Functions, Callbacks, Callouts](#)

6.1 Main function calls within BSW scheduler

The function `Spi_MainFunction_Handling()` should be called periodically only if polling mode is enabled for `Spi->_AsyncTransmit()`.

6.2 API Requirements

None.

6.3 Calls to Notification Functions, Callbacks, Callouts

Call-back Notifications: None

User Notification: The SPI Handler & Driver provides notifications per job and sequence in asynchronous mode. The notifications can be configured as pointers to user defined functions. If notification is not desired, the appropriate `EndNotification` field shall be left blank. For asynchronous transmissions, job and sequences notifications are performed before the scheduling of the next job (contrary to the recommendation given by SWS_Spi_00088) . In this way, calls like `Spi_SetupIB()` or `Spi_WriteIB()` can be targeted on the next schedulable jobs, before the starting of the job transfer.

Chapter 7

Memory allocation

- [Sections to be defined in Spi_MemMap.h](#)
- [Linker command file](#)

7.1 Sections to be defined in Spi_MemMap.h

Section name	Type of section	Description
SPI_START_SEC_CONFIG_DATA_UNSPECIFIED	Configuration Data	Start of Memory Section for Config Data when the SIZE (alignment) does not fit the criteria of 8,16 or 32 bit.
SPI_STOP_SEC_CONFIG_DATA_UNSPECIFIED	Configuration Data	End of Memory Section for Config Data
SPI_START_SEC_CONST_32	Configuration Data	Start of Memory Section for constant data which have to be aligned to 32 bit.
SPI_STOP_SEC_CONST_32	Configuration Data	End of Memory Section for constant data.
SPI_START_SEC_CONST_UNSPECIFIED	Configuration Data	Start of Memory Section for constant data when the SIZE (alignment) does not fit the criteria of 8,16 or 32 bit.
SPI_STOP_SEC_CONST_UNSPECIFIED	Configuration Data	End of Memory Section for constant data.
SPI_START_SEC_CODE	Code	Start of memory Section for Code
SPI_STOP_SEC_CODE	Code	End of memory Section for Code
SPI_START_SEC_VAR_Cleared_32	Variables	Used for variables which have to be aligned to 32 bit. For instance used for variables of size 32 bit or used for composite data types: arrays, structures containing elements of maximum 32 bits. These variables are cleared to zero by start-up code.
SPI_STOP_SEC_VAR_Cleared_32	Variables End of above section.	End of above section.

Section name	Type of section	Description
SPI_START_SEC_VAR_CLEARED_32_NO_CACHEABLE	Variables	Used for variables which have to be aligned to 32 bit. For instance used for variables of size 32 bit or used for composite data types: arrays, structures containing elements of maximum 32 bits and that have to be stored in a non-cacheable memory section. These variables are cleared to zero by start-up code.
SPI_STOP_SEC_VAR_CLEARED_32_NO_CACHEABLE	Variables End of above section.	End of above section.
SPI_START_SEC_VAR_CLEARED_UNSPECIFIED	Variables	Used for variables, structures, arrays when the SIZE (alignment) does not fit the criteria of 8,16 or 32 bit. These variables are cleared to zero by start-up code.
SPI_STOP_SEC_VAR_CLEARED_UNSPECIFIED	Variables	End of above section.
SPI_START_SEC_VAR_CLEARED_UNSPECIFIED_NO_CACHEABLE	Variables	Used for variables, structures, arrays when the SIZE (alignment) does not fit the criteria of 8,16 or 32 bit, and that have to be stored in a non-cacheable memory section. These variables are cleared to zero by start-up code.
SPI_STOP_SEC_VAR_CLEARED_UNSPECIFIED_NO_CACHEABLE	Variables	End of above section.
SPI_START_SEC_VAR_INIT_UNSPECIFIED	Variables	Used for variables, structures, arrays when the SIZE (alignment) does not fit the criteria of 8,16 or 32 bit.
SPI_STOP_SEC_VAR_INIT_UNSPECIFIED	Variables	End of above section.

7.2 Linker command file

Memory shall be allocated for every section defined in the driver's "<Module>_MemMap.h.

Chapter 8

Integration Steps

This section gives a brief overview of the steps needed for integrating this module:

1. Generate the required module configuration(s). For more details refer to section [Files Required for Compilation](#)
2. Allocate the proper memory sections in the driver's memory map header file ("`<Module>_MemMap.h`") and linker command file. For more details refer to section [Sections to be defined in `<Module>\_MemMap.h`](#)
3. Compile & build the module with all the dependent modules. For more details refer to section [Building the Driver](#)

Chapter 9

External assumptions for driver

The section presents requirements that must be complied with when integrating the SPI driver into the application.

External Assumption Req ID	External Assumption Text
SWS_Spi_00244	The SPI Handler/Driver module does not take care of setting the registers which configure the clock, prescaler(s) and PLL in its init function. This has to be done by the MCU module [REF].
SWS_Spi_00052	For the IB Channels, the Handler/Driver shall provide the buffering but it is not able to take care of the consistency of the data in the buffer during transmission. The size of the Channel buffer is fixed.
SWS_Spi_00257	The SPI Handler/Driver is not able to prevent the overwriting of these "transmit" buffers by users during transmissions.
SWS_Spi_00053	For EB Channels the application shall provide the buffering and shall take care of the consistency of the data in the buffer during transmission.
SWS_Spi_00280	The buffer provided by the application for the SPI Handler Driver may have a different size. Note: This refers in the context of External Buffer
SWS_Spi_00084	If different Jobs (and consequently also Sequences) have common Channels, the SPI Handler/Driver' environment shall ensure that read and/or write functions are not called during transmission.
SWS_Spi_00121	The SPI Handler/Driver's environment shall configure the Spi↔InterruptibleSeqAllowed parameter (ON / OFF) in order to select which kind of Sequences the SPI Handler/Driver manages.
SWS_Spi_00080	When using Interruptible Sequences, the caller must be aware that if the multiple Sequences access the same Channels, the data for these Channels may be overwritten by the highest priority Job accessing each Channel. Note:
SWS_Spi_00298	The operation Spi_Init is Non Re-entrant.
SWS_Spi_00300	The operation Std_ReturnType Spi_DeInit() is Non Re-entrant.
SWS_Spi_00173	The SPI Handler/Driver's environment shall call the function Spi↔Transmit after a function call of Spi_SetupEB for EB Channels or a function call of Spi_WriteIB for IB Channels but before the function call Spi_Read↔IB.
SWS_Spi_00027	The SPI Handler/Driver's environment shall call the function Spi_ReadIB after a Transmit method call to have relevant data within IB Channel.
SWS_Spi_00037	The SPI Handler/Driver's environment shall call the Spi_SetupEB function once for each Channel with EB declared before the SPI Handler/Driver's environment calls a Transmit method on them.

External Assumption Req ID	External Assumption Text
SWS_Spi_00038	The SPI Handler/Driver's environment shall call the function Spi_GetJob↔Result to inquire whether the Job transmission has succeeded (SPI_JOB↔_OK) or failed (SPI_JOB_FAILED).
SWS_Spi_00042	The SPI Handler/Driver's environment shall call the function Spi_Get↔SequenceResult to inquire whether the full Sequence transmission has succeeded (SPI_SEQ_OK) or failed (SPI_SEQ_FAILED).
SWS_Spi_00287	The SPI Handler/Driver's environment shall call this function to inquire whether the specified SPI Hardware microcontroller peripheral is SPI_IDLE or SPI_BUSY. Note: This requirement refers to Spi_GetHWUnitStatus()
SWS_Spi_00335	The operation Spi_SetAsyncMode is Non Re-entrant.
SWS_Spi_00265	For implement the call back function other modules are required to provide the routines in the expected manner.
SWS_Spi_00048	The callback notifications Spi_JobEndNotification and Spi_SeqEnd↔Notification shall have no parameters and no return value.
SWS_Spi_00085	It is allowed to use the following API calls within the SPI callback notifications: Spi_ReadIBSpi_WriteIBSpi_SetupEBSpi_GetJob↔ResultSpi_GetSequenceResultSpi_GetHWUnitStatusSpi_CancelAll other SPI Handler/Driver API calls are not allowed.
SWS_Spi_00340	The operation SpiJobEndNotification is Re-entrant.
SWS_Spi_00341	The operation SpiSeqEndNotification is Re-entrant.
SWS_Spi_00077	To transmit a variable number of data, it is mandatory to call the Spi_↔SetupEB function to store new parameters within SPI Handler/Driver before each Spi_AsyncTransmit function call.
SWS_Spi_00078	To transmit a constant number of data, it is only mandatory to call the Spi_↔SetupEB function to store parameters within SPI Handler/Driver before the first Spi_AsyncTransmit function call.
SWS_Spi_00235	If not applicable, the SPI Handler/Driver module's environment shall pass a NULL pointer to the function Spi_Init.
EA_RTD_00071	If interrupts are locked, a centralized function pair to lock and unlock interrupts shall be used.
EA_RTD_00081	The integrator shall assure that <MSN>_Init() and <MSN>_DeInit() functions do not interrupt each other.
EA_RTD_00082	When caches are enabled and data buffers are allocated in cacheable memory regions the buffers involved in DMA transfer shall be aligned with both start and end to cache line size. Note: Rationale: This ensures that no other buffers/variables compete for the same cache lines.
EA_RTD_00092	The integrator shall allocate a single EcucPartition per core or the partition in which the Spi is allocated shall be exclusively mapped to a core. Note↔: Internally, the Spi will use the Core ID returned by GetCoreID API to reference the appropriate global data and configuration elements, that is why a core should reference only one configured partition.
EA_RTD_00093	The application shall define EcucCoreIDs in a compact/consecutive order, starting from zero.
EA_RTD_00094	When multicore support is enabled, the application shall call Spi_Init() for each core, using the dedicated configuration pointer for that core.
EA_RTD_00096	The application shall pass the correct initialization pointer, specific to the partition in which the driver is to be used.

External assumptions for driver

External Assumption Req ID	External Assumption Text
EA_RTD_00106	Standalone IP configuration and HL configuration of the same driver shall be done in the same project
EA_RTD_00107	The integrator shall use the IP interface only for hardware resources that were configured for standalone IP usage. Note: The integrator shall not directly use the IP interface for hardware resources that were allocated to be used in HL context.
EA_RTD_00108	The integrator shall use the IP interface to build a CDD, therefore the BSWMD will not contain reference to the IP interface
EA_RTD_00113	When RTD drivers are integrated with AutosarOS and User mode support is enabled, the integrator shall assure that the definition and declaration of all RTD functions needed to be called as trusted functions follow the naming convention <code>Call<Function_Name>TRUSTED(parameter1,parameter2,...)</code> in Integration/User code. They need to be visible in Os.h for the driver to call them. They will call RTD <code><Function_Name>()</code> as trusted functions in OS specific manner.
EA_RTD_00116	The application shall load a compatible LLCE firmware in order to use the SPI hardware instances from the LLCE subsystem.

How to Reach Us:

Home Page:

nxp.com

Web Support:

nxp.com/support

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document. NXP reserves the right to make changes without further notice to any products herein.

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: nxp.com/SalesTermsandConditions.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, COOLFLUX, EMBRACE, GREENCHIP, HITAG, I2C BUS, ICODE, JCOP, LIFE VIBES, MIFARE, MIFARE CLASSIC, MIFARE DESFire, MIFARE PLUS, MIFARE FLEX, MANTIS, MIFARE ULTRALIGHT, MIFARE4MOBILE, MIGLO, NTAG, ROADLINK, SMARTLX, SMARTMX, STARPLUG, TOPFET, TRENCHMOS, UCODE, Freescale, the Freescale logo, Altivec, C-5, CodeTEST, CodeWarrior, ColdFire, ColdFire+, C-Ware, the Energy Efficient Solutions logo, Kinetis, Layerscape, MagniV, mobileGT, PEG, PowerQUICC, Processor Expert, QorIQ, QorIQ Qonverge, Ready Play, SafeAssure, the SafeAssure logo, StarCore, Symphony, VortiQa, Vybrid, Airfast, BeeKit, BeeStack, CoreNet, Flexis, MXC, Platform in a Package, QUICC Engine, SMARTMOS, Tower, TurboLink, and UMEMS are trademarks of NXP B.V. All other product or service names are the property of their respective owners. ARM, AMBA, ARM Powered, Artisan, Cortex, Jazelle, Keil, SecurCore, Thumb, TrustZone, and Vision are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. ARM7, ARM9, ARM11, big.LITTLE, CoreLink, CoreSight, DesignStart, Mali, mbed, NEON, POP, Sensinode, Socrates, ULINK and Versatile are trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org.

© 2023 NXP B.V.

