⚠ IMPORTANT — Support Scope

3DPTronics supports the VirtuaTilt controller hardware only. This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

☑ Officially supported

Component	Coverage
🎮 **VirtuaTilt controller**	Wired and Wireless editions, all hardware components
💾 **Pinscape Pico firmware**	Updates, OTA flashing, recovery via Updater Tool
📋 **Bundled profiles**	All BT and USB profiles shipped in the redist
⚙ **GUIConfigTool**	Configuration, calibration, profile loading, output testing
🔧 **Wireless Kit**	Wireless hardware kit for existing VirtuaTilt owners
📦 **Accessories**	Anything shipped directly by 3DPTronics

❌ Not supported

Category	Examples	Where to get help
🎲 **VP Game engines**	VPX, Visual Pinball, Future Pinball, BAM	VPForums · VP Universe
🕹 **VP titles**	Pinball FX / FX2 / FX3 / VR / M, etc.	Zen Studios support
💥 **Feedback frameworks**	DOF (Direct Output Framework), DOFLinx	DOF on GitHub · DOFLinx wiki
🎨 **DMD / extras**	DMDExt, PinEvent V2, PuP-Packs / PUP-Stream	VP Universe
🚀 **Frontends**	PinUP Popper, Baller Installer, etc.	Popper forum
🎬 **Emulators / ROMs**	MAME, pinball ROMs	MAMEdev
💻 **System-level**	Windows, GPU/audio drivers, USB controllers	Microsoft / vendor support

🌐 Community help for software

Project	Community
Visual Pinball X	vpforums.org · vpuniverse.com
Future Pinball + BAM	VPU Future Pinball forum
Future Pinball + BAM AIO	VPU file 14807 — FP+BAM Essentials AIO
DOF	github.com/DirectOutput/DirectOutput
DOFLinx	doflinx.github.io/docs
Pinball FX family	Zen Studios Support
PinUP Popper	VPU PinUP Popper forum
MAME	mamedev.org


💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.


VIRTUATILT – Pinball VR Classic/Star Wars Pinball VR SETUP GUIDE

Following some basic instructions to set up your new VirtuaTilt for VR standalone games like Pinball VR Classic (old name: Pinball FX2 VR) and Star Wars Pinball VR.


Load Profile

Load **VTConfig-VRClassic-StarWarsVR_v1.X.json** profile in **Pinscape Pico Config Tool:**

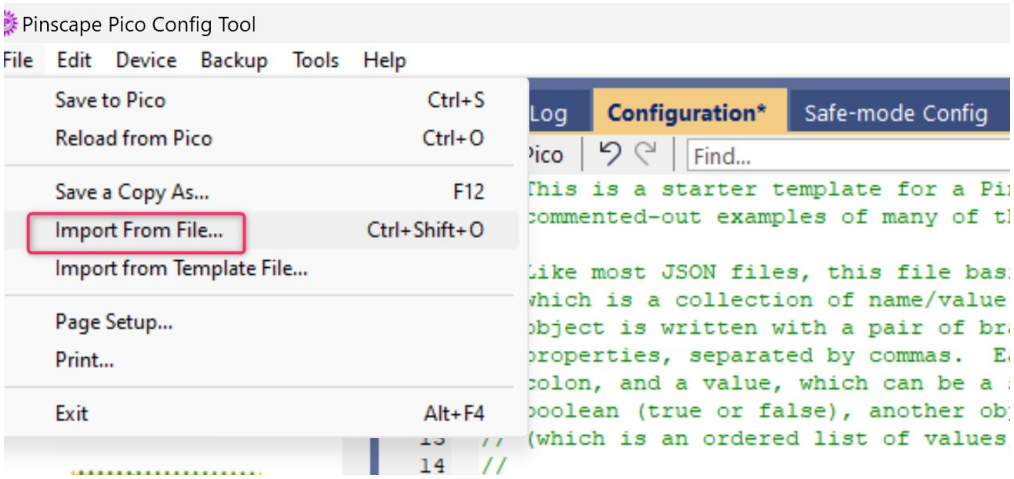


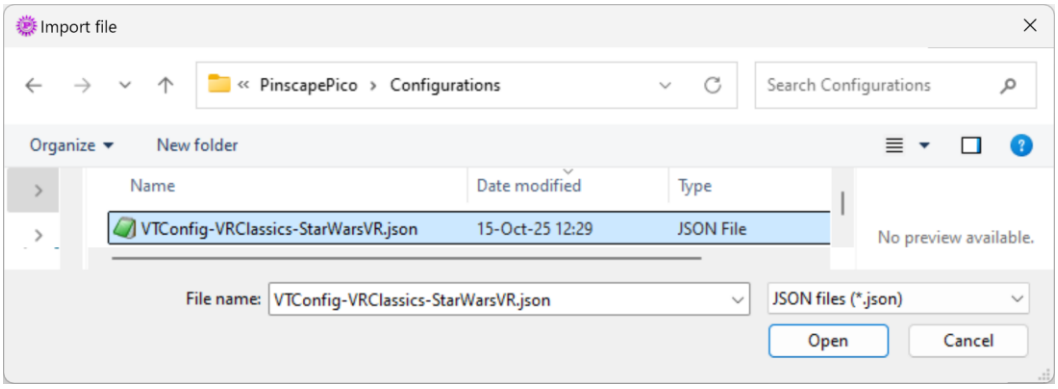


Click on "**Program Pico**" to save new configuration:

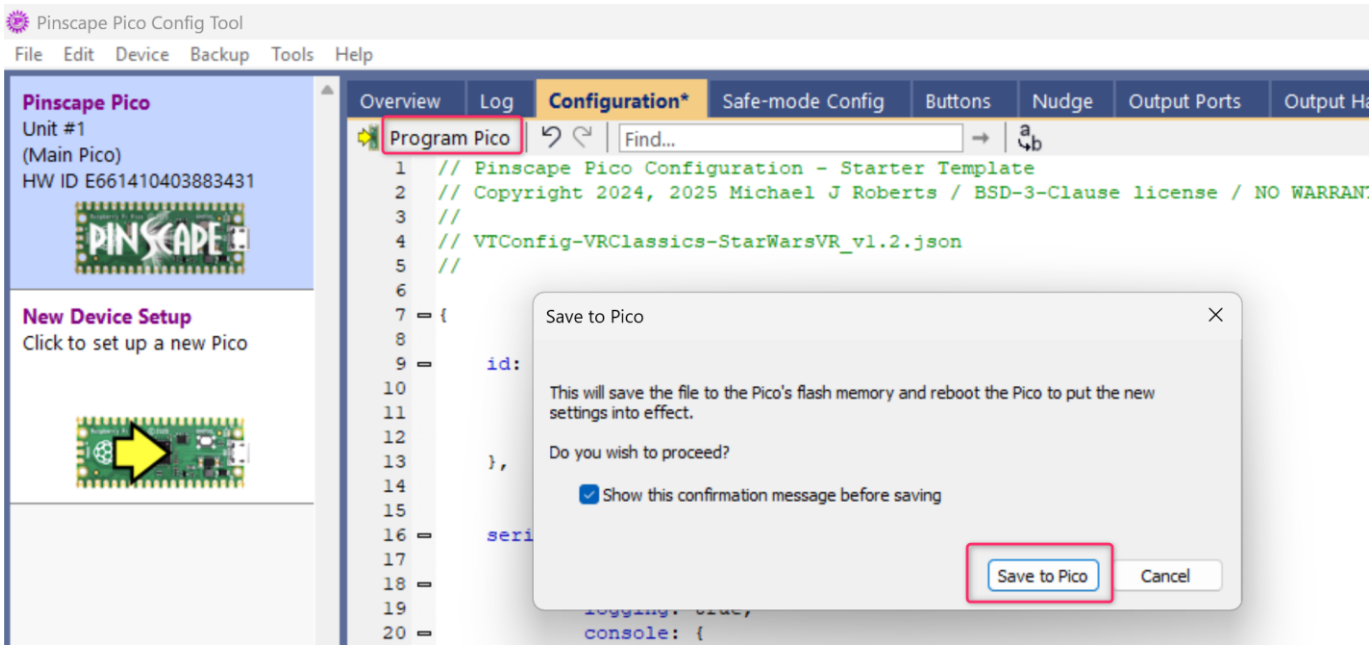

NOTE: <u>Once this profile is loaded, Pico will go offline because the Windows XInput device driver now is claiming exclusive access to the device, preventing anyone from seeing its other USB interfaces:</u>

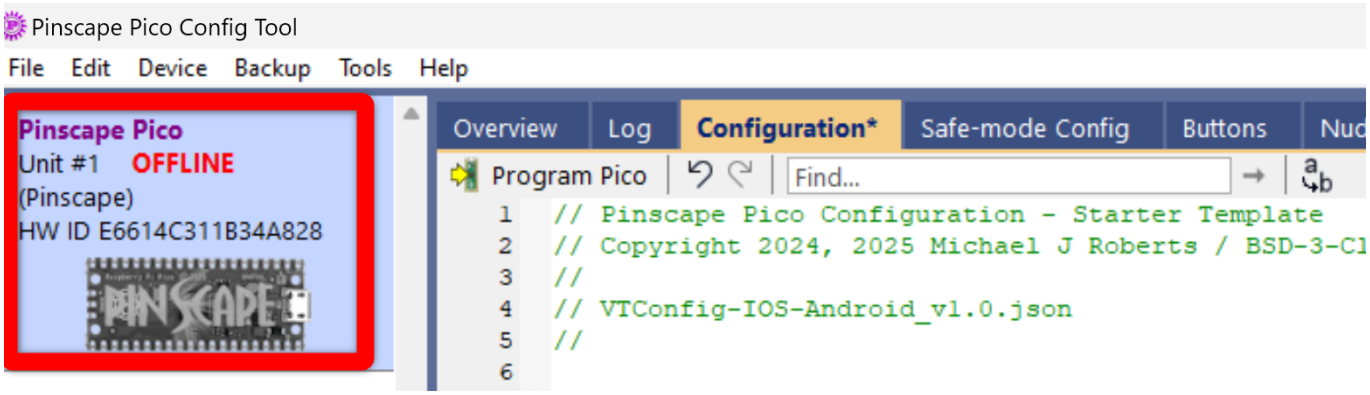

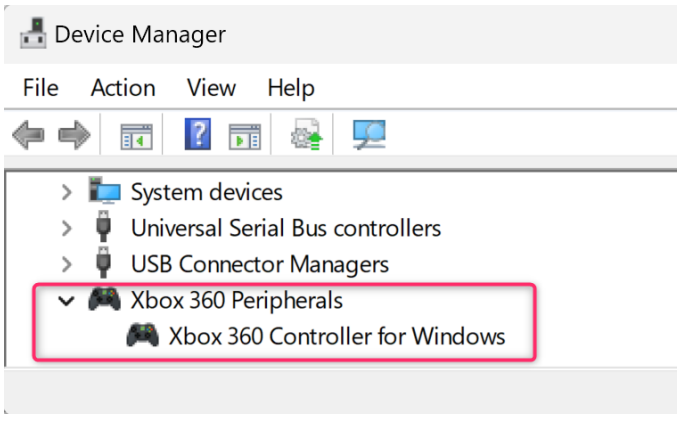

Activating the VirtuaTilt at Game Launch


When you launch Pinball VR Classic or Star Wars Pinball VR on the Meta Quest, the game starts by listening to the Meta Quest hand controllers — not your VirtuaTilt. You have to hand control over to the cabinet before any of its inputs are recognized by the game.

NOTE: After the game has loaded, at the game's main menu press the A button on the VirtuaTilt (not on the Meta Quest hand controllers). The game then recognizes the VirtuaTilt as the controller, and its flippers, buttons, plunger and nudge all respond. The same applies to both Pinball VR Classic and Star Wars Pinball VR.


Set the Meta Quest hand controllers aside once the game is running. This is simply how these games treat any external controller — it is not a VirtuaTilt fault or a connection problem. If you are not sure which cabinet button is "A", see the Default Buttons Mapping section below.

Restore Profile


To load/restore a different profile keep **VirtuaTilt's Reset button** pressed for 2 seconds; device will reboot in **Factory mode**:

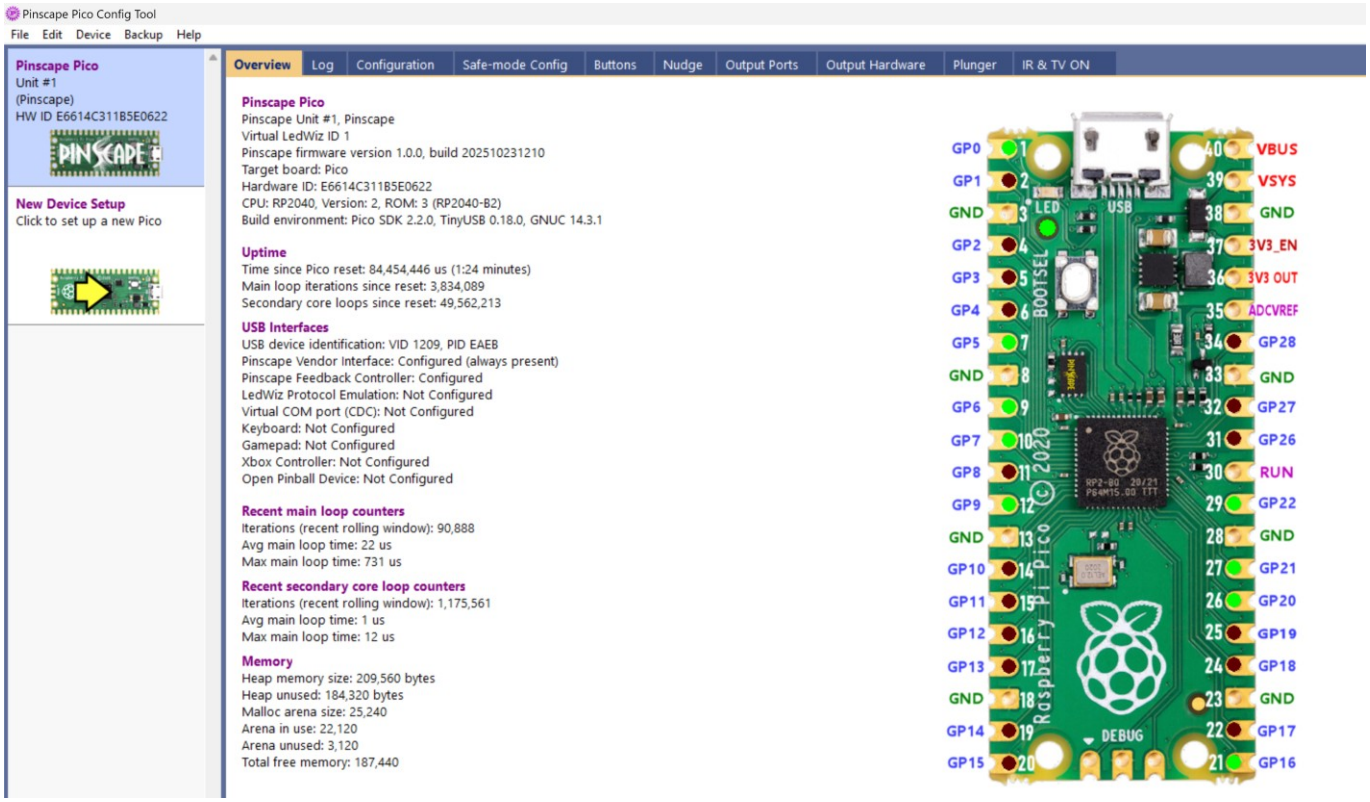


Go to **Configuration → File → Import From File** and choose the profile you need:

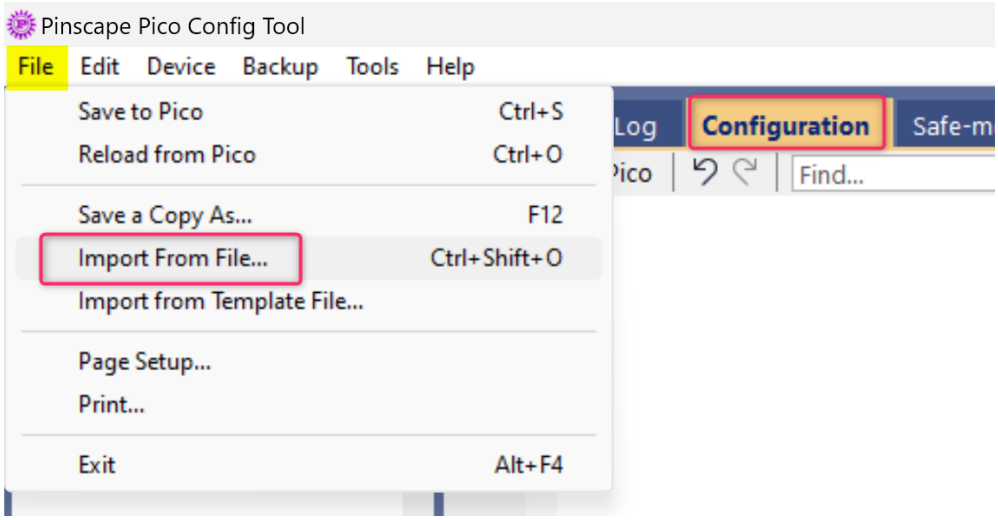

Click on “**Program Pico**” to save new configuration and you’re done:

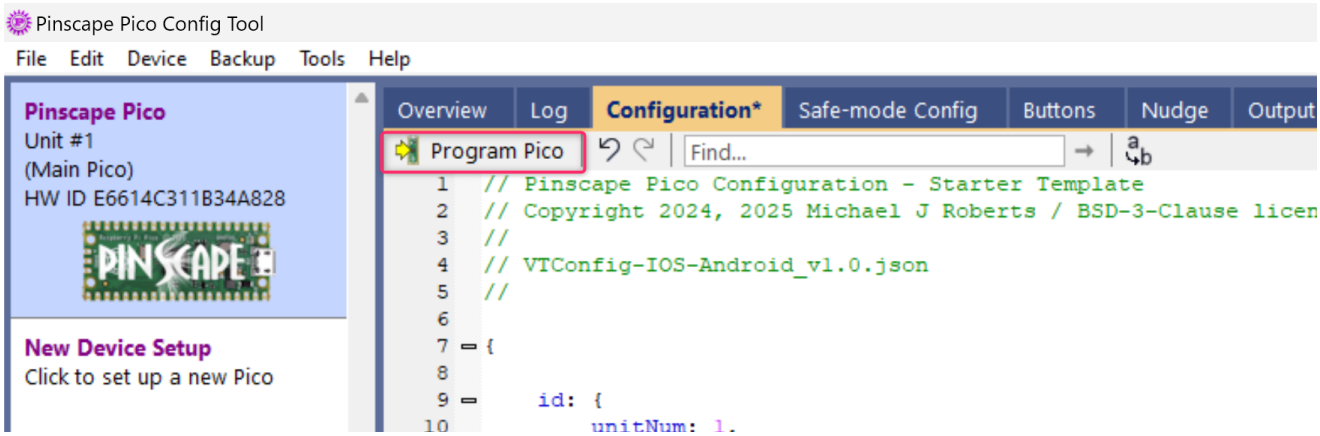

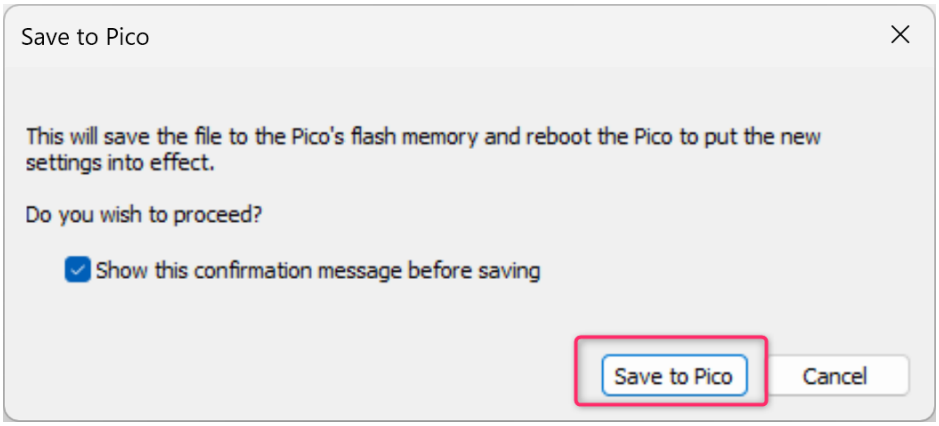

That’s it, enjoy!

Default Buttons Mapping

This is the default buttons mapping for Pinball VR Classic / Star Wars Pinball VR profile. You can of course change assignments in Pinscape Pico Config Tool.

