⚠ IMPORTANT — Support Scope

3DPTronics supports the VirtuaTilt controller hardware only. This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

☑ Officially supported

Component	Coverage
🎮 **VirtuaTilt controller**	Wired and Wireless editions, all hardware components
💾 **VirtuaTilt firmware**	Updates and recovery via GUIConfigTool
📋 **Bundled profiles**	All Wired profiles shipped in the redist
⚙ **GUIConfigTool**	Configuration, calibration, profile loading, output testing
🔧 **Wireless Kit**	Wireless hardware kit for existing VirtuaTilt owners
📦 **Accessories**	Anything shipped directly by 3DPTronics

❌ Not supported

Category	Examples	Where to get help
🎲 **VP Game engines**	VPX, Visual Pinball, Future Pinball, BAM	VPForums · VP Universe
🕹 **VP titles**	Pinball FX / FX2 / FX3 / VR / M, etc.	Zen Studios support
💥 **Feedback frameworks**	DOF (Direct Output Framework), DOFLinx	DOF on GitHub · DOFLinx wiki
🎨 **DMD / extras**	DMDExt, PinEvent V2, PuP-Packs / PUP-Stream	VP Universe
🚀 **Frontends**	PinUP Popper, Baller Installer, etc.	Popper forum
🎬 **Emulators / ROMs**	MAME, pinball ROMs	MAMEdev
💻 **System-level**	Windows, GPU/audio drivers, USB controllers	Microsoft / vendor support

🌐 Community help for software

Project	Community
Visual Pinball X	vpforums.org · vpuniverse.com
Future Pinball + BAM	VPU Future Pinball forum
Future Pinball + BAM AIO	VPU file 14807 — FP+BAM Essentials AIO
DOF	github.com/DirectOutput/DirectOutput
DOFLinx	doflinx.github.io/docs
Pinball FX family	Zen Studios Support
PinUP Popper	VPU PinUP Popper forum
MAME	mamedev.org

💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.

VirtuaTilt – Infected Mushroom Pinball Setup

Following some basic instructions to have your new VirtuaTilt up and running with Infected Mushroom Pinball and its DOFLinx support (full feedback with 3 solenoids and shaker motor!).

NOTE: The new upgraded VirtuaTilt allows you to enjoy feedback from flipper's solenoids and shaker motor even without DOFLinx configured! If you don't want to mess with DOFLinx configuration, go straight to section "Configure Infected Mushroom Pinball without DOFLinx"

Download **DOFLinx** latest package from here: Releases · DOFLinx/DOFLinx (github.com)

NOTE: Latest DOFLinx is required for Infected Mushroom Pinball.

Please always refer to official DOFLinx guides available at:


https://doflinx.github.io/docs/


https://doflinx.github.io/docs/getting-started/08_PinballM.html


DOFLinx Setup

PREREQUISITES:


- **B2S Server** already installed https://github.com/vpinball/b2s-backglass/releases
- **DirectOutput (DOF)** configured (have a look at **VirtuaTilt-RP2040-VPXSetup_v1.X.pdf**)
- **VTConfig-STEAM-XInput_v1.X.json** profile loaded in **Pinscape Pico Config Tool**:

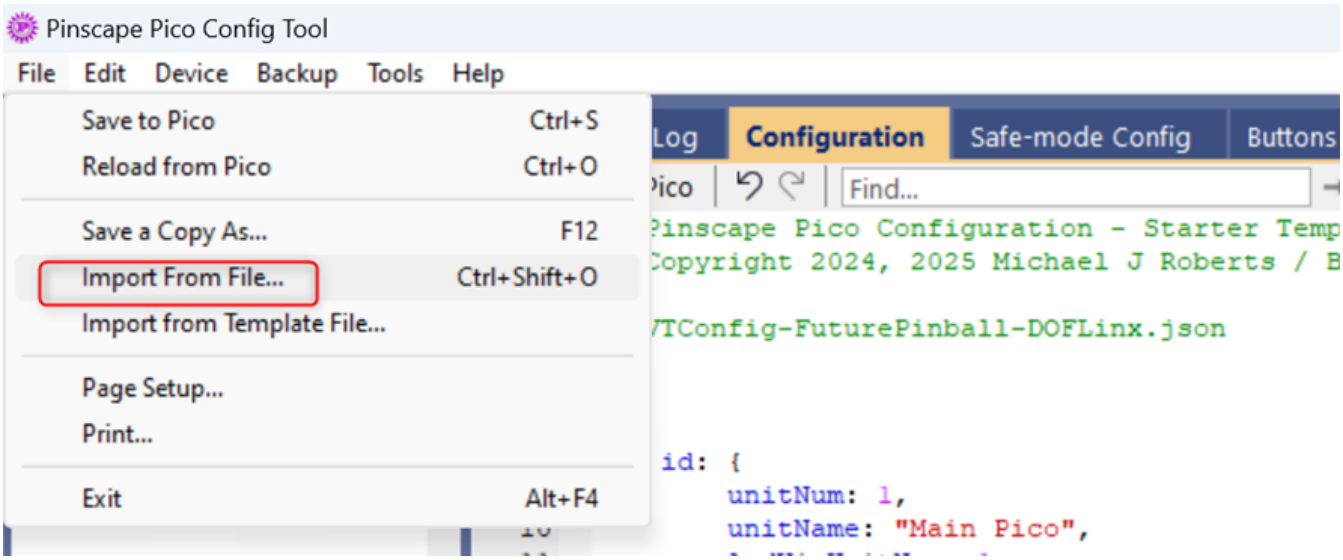

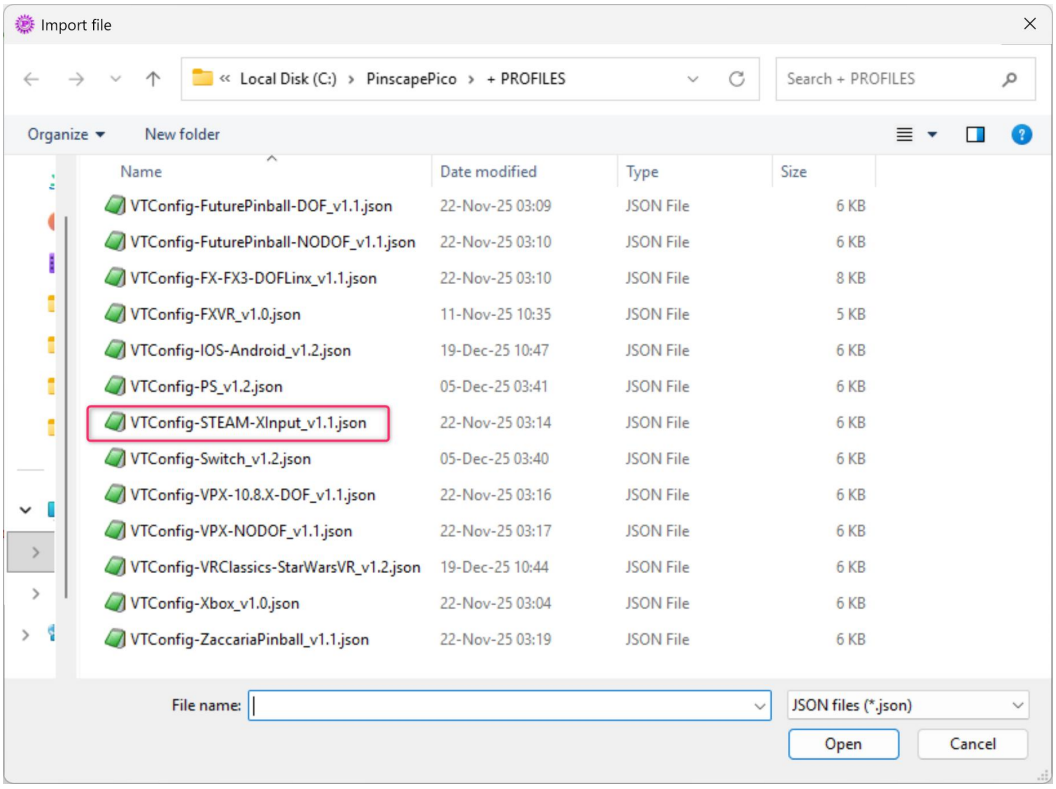

Import file
Local Disk (C:) › PinscapePico › + PROFILES
Search + PROFILES
Organize
New folder
Name
Date modified
Type
Size
VTConfig-FuturePinball-DOF_v1.1.json 22-Nov-25 03:09 JSON File 6 KB
VTConfig-FuturePinball-NODOF_v1.1.json 22-Nov-25 03:10 JSON File 6 KB
VTConfig-FX-FX3-DOFLinx_v1.1.json 22-Nov-25 03:10 JSON File 8 KB
VTConfig-FXVR_v1.0.json 11-Nov-25 10:35 JSON File 5 KB
VTConfig-IOS-Android_v1.2.json 19-Dec-25 10:47 JSON File 6 KB
VTConfig-PS_v1.2.json 05-Dec-25 03:41 JSON File 6 KB
VTConfig-STEAM-XInput_v1.1.json 22-Nov-25 03:14 JSON File 6 KB
VTConfig-Switch_v1.2.json 05-Dec-25 03:40 JSON File 6 KB
VTConfig-VPX-10.8.X-DOF_v1.1.json 22-Nov-25 03:16 JSON File 6 KB
VTConfig-VPX-NODOF_v1.1.json 22-Nov-25 03:17 JSON File 6 KB
VTConfig-VRClassics-StarWarsVR_v1.2.json 19-Dec-25 10:44 JSON File 6 KB
VTConfig-Xbox_v1.0.json 22-Nov-25 03:04 JSON File 6 KB
VTConfig-ZaccariaPinball_v1.1.json 22-Nov-25 03:19 JSON File 6 KB
File name:
JSON files (*.json)
Open
Cancel

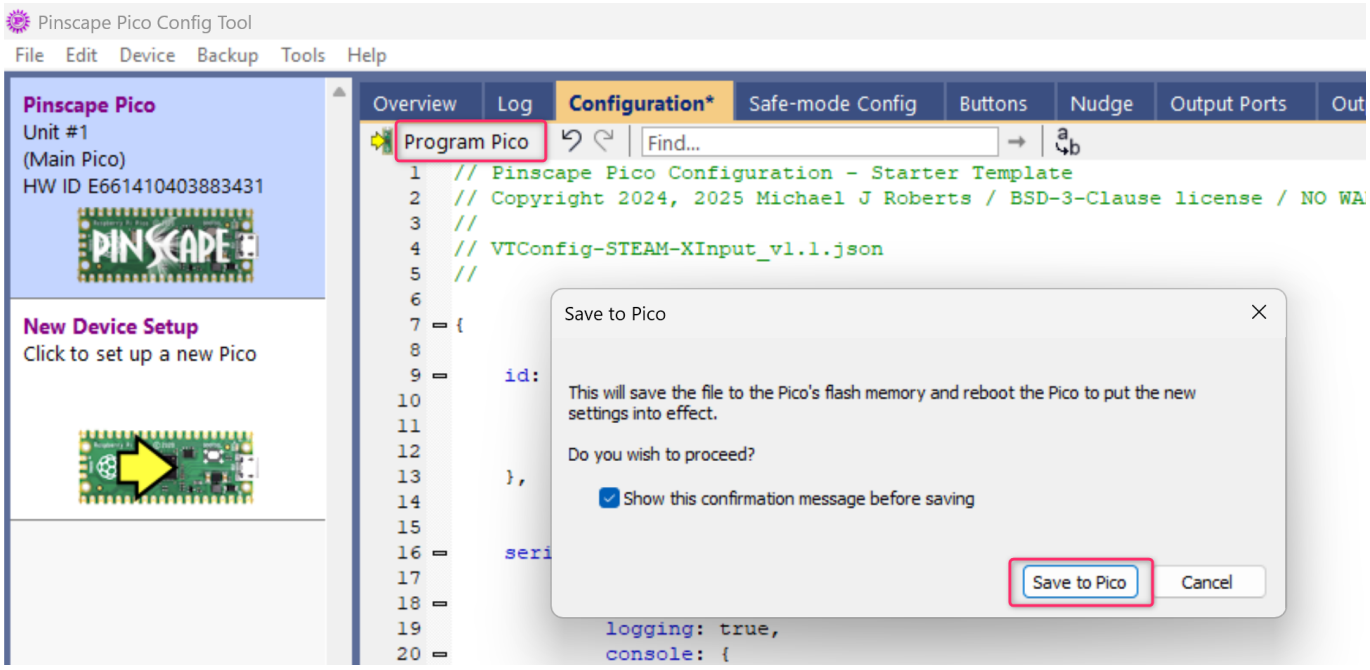

Pinscape Pico Config Tool
File Edit Device Backup Tools Help
Pinscape Pico
Unit #1
(Main Pico)
HW ID E661410403883431
New Device Setup
Click to set up a new Pico
Overview
Log
Configuration*
Safe-mode Config
Buttons
Nudge
Output Ports
Program Pico
Find...
// Pinscape Pico Configuration - Starter Template
// Copyright 2024, 2025 Michael J Roberts / BSD-3-Clause license / NO WA
// VTConfig-STEAM-XInput_v1.1.json
Save to Pico
This will save the file to the Pico's flash memory and reboot the Pico to put the new settings into effect.
Do you wish to proceed?
Show this confirmation message before saving
Save to Pico
Cancel
logging: true,
console: {

Create a folder **C:\DOFLinx** and uncompress the above zip package (remember to unblock it):

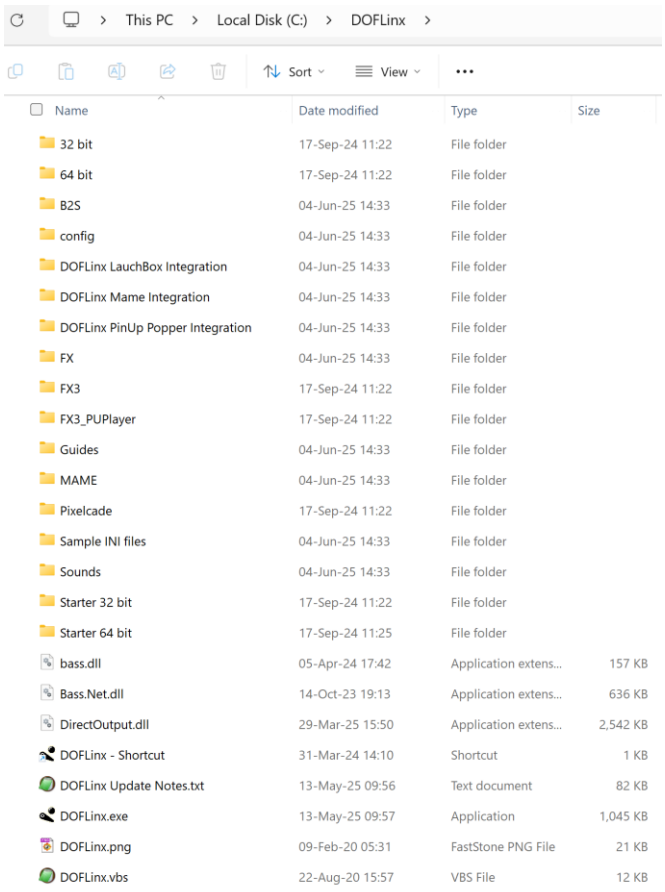


Run **DOFLinxConfig.exe** file in **DOFLinx** folder as administrator:

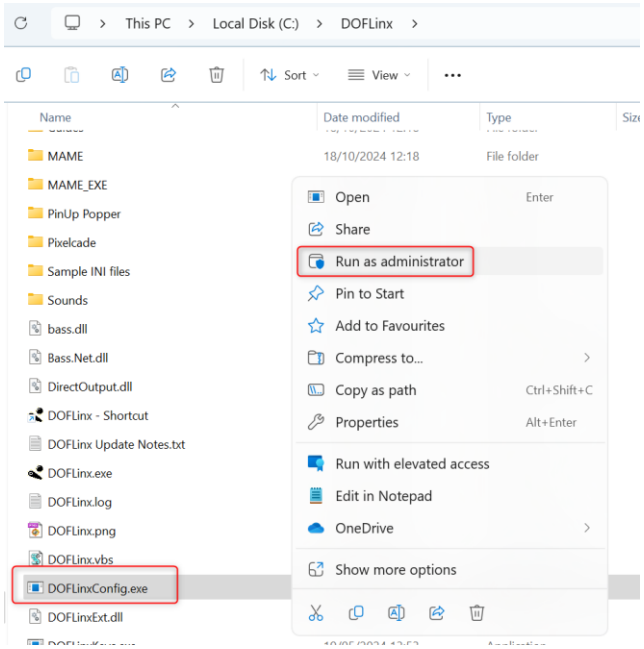


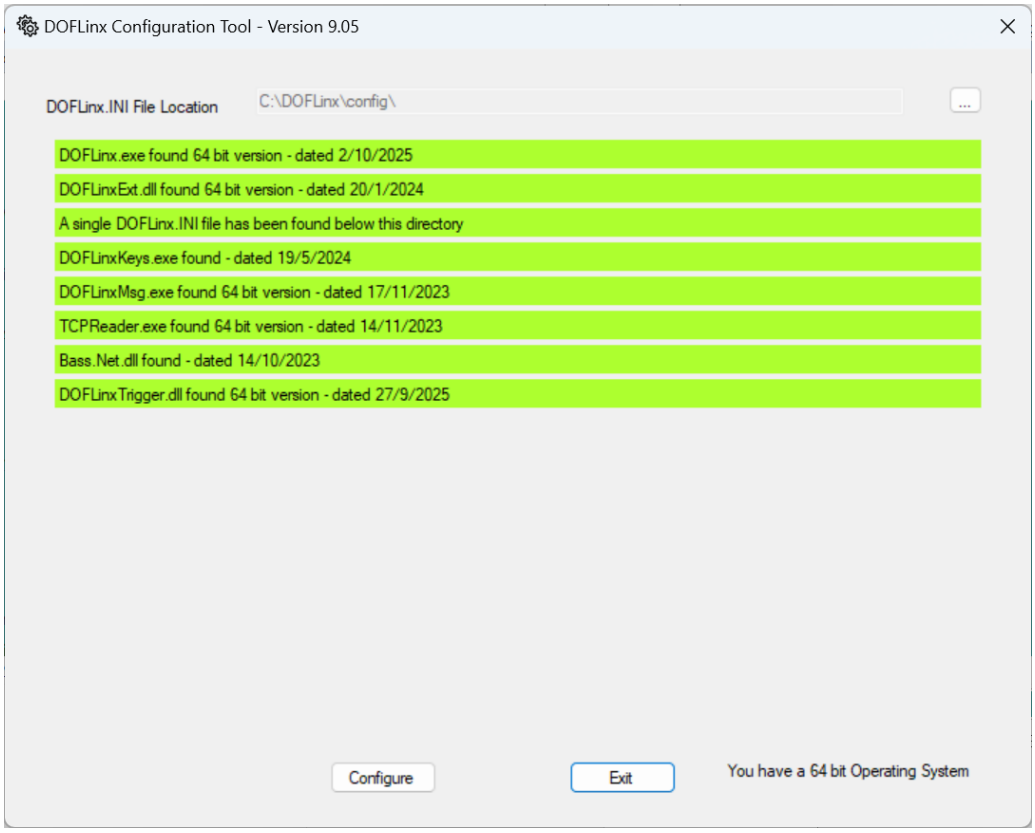



Turn on your VirtuaTilt power switch and click on **Configure** button and **<u>work through all settings</u>:**

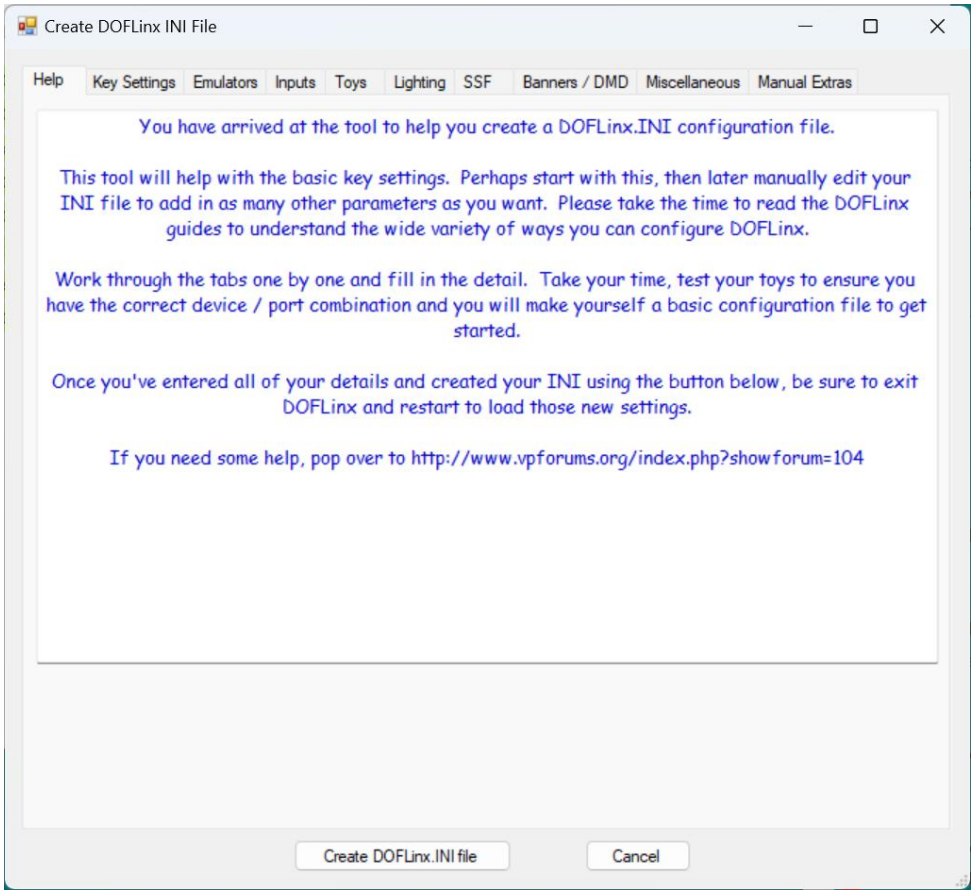


You need to configure **Key Settings**, **Emulators**, **Inputs** and **Toys** tabs:

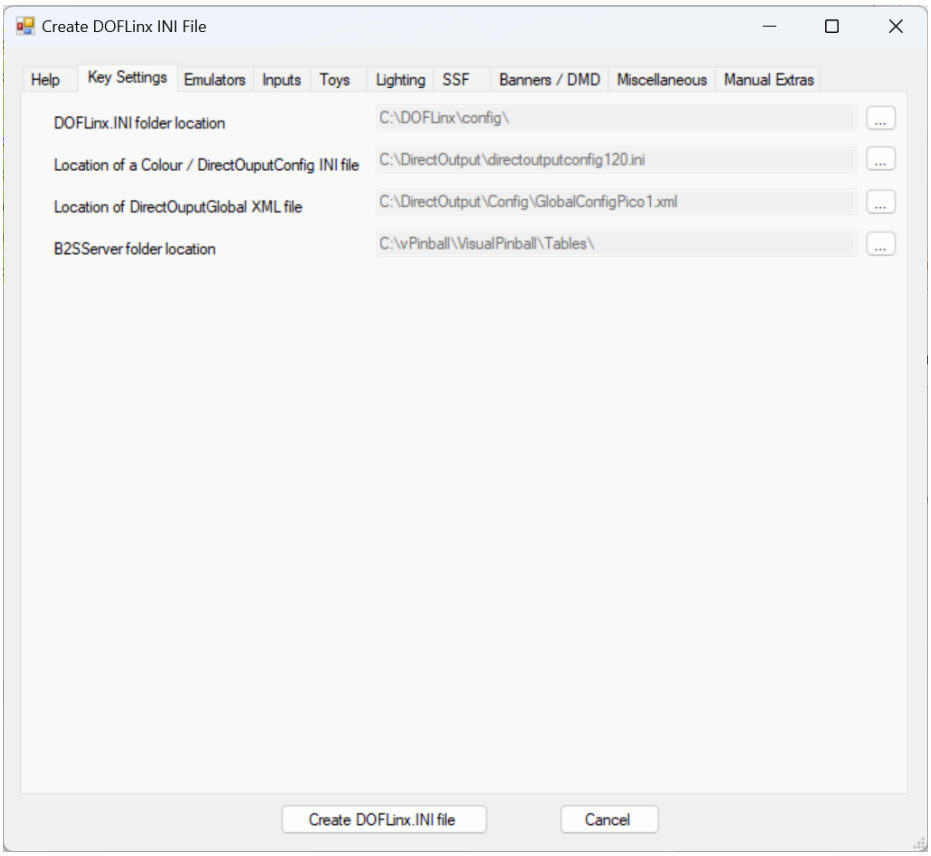


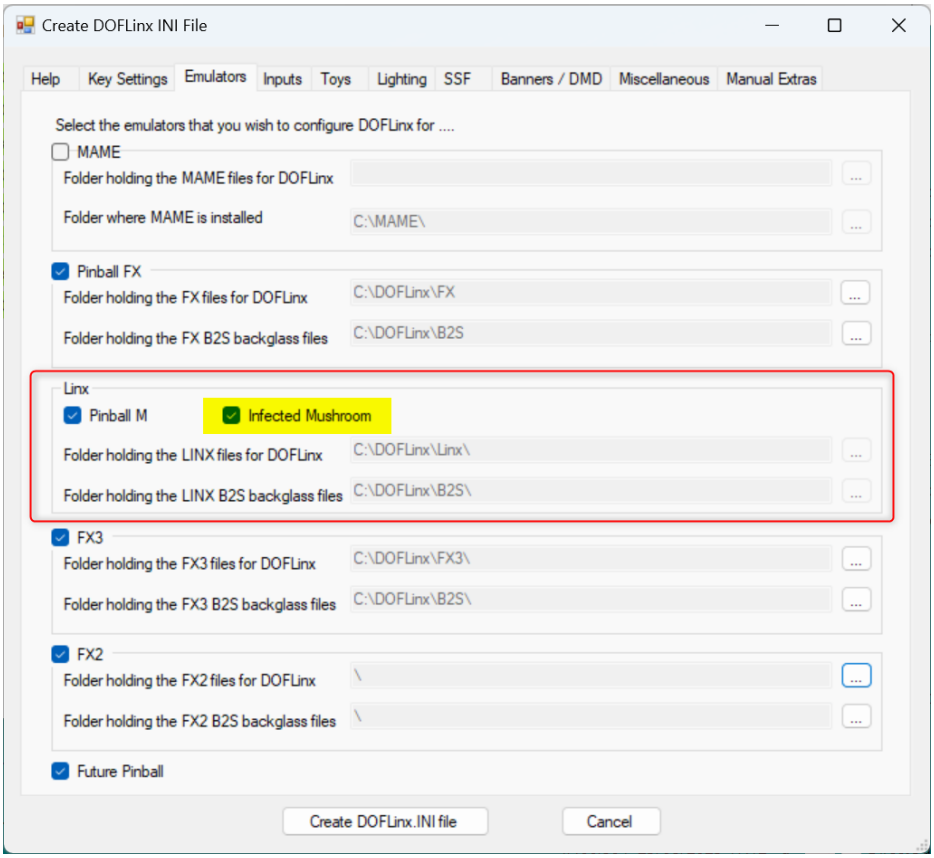

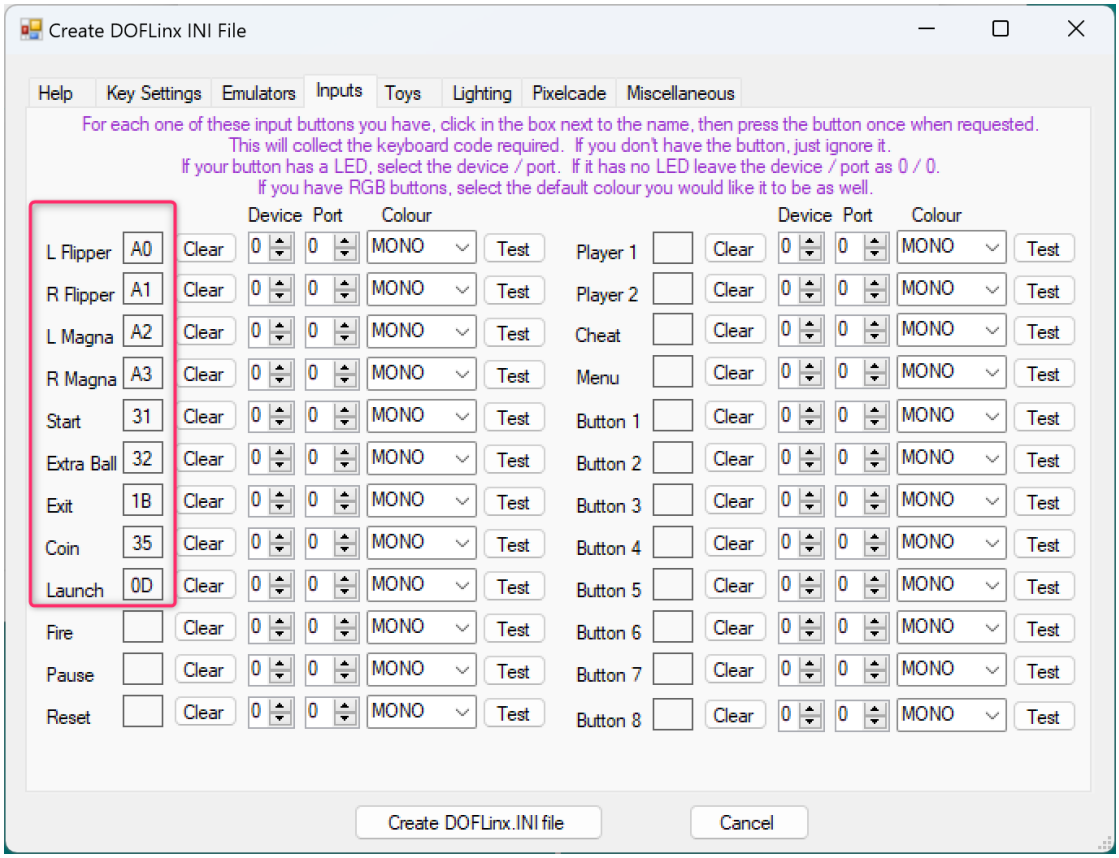

Create DOFLinx INI File
Help
Key Settings
Emulators
Inputs
Toys
Lighting
Pixelcade
Miscellaneous
For each one of these input buttons you have, click in the box next to the name, then press the button once when requested.
This will collect the keyboard code required. If you don't have the button, just ignore it.
If your button has a LED, select the device / port. If it has no LED leave the device / port as 0 / 0.
If you have RGB buttons, select the default colour you would like it to be as well.
Device Port Colour
L Flipper A0
R Flipper A1
L Magna A2
R Magna A3
Start 31
Extra Ball 32
Exit 1B
Coin 35
Launch 0D
Fire
Pause
Reset
Player 1
Player 2
Cheat
Menu
Button 1
Button 2
Button 3
Button 4
Button 5
Button 6
Button 7
Button 8
Clear
Test
MONO
Create DOFLinx.INI file
Cancel

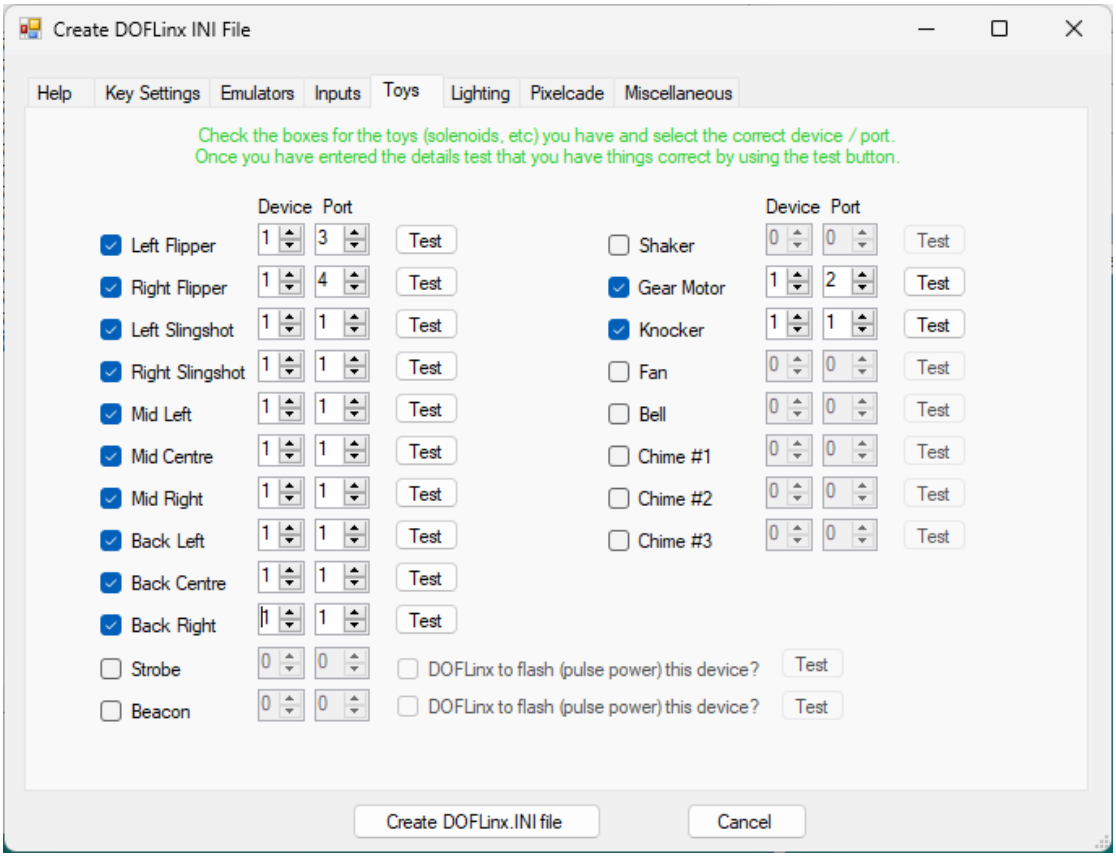

Create DOFLinx INI File
Help
Key Settings
Emulators
Inputs
Toys
Lighting
Pixelcade
Miscellaneous
Check the boxes for the toys (solenoids, etc) you have and select the correct device / port.
Once you have entered the details test that you have things correct by using the test button.
Device Port
Left Flipper
Right Flipper
Left Slingshot
Right Slingshot
Mid Left
Mid Centre
Mid Right
Back Left
Back Centre
Back Right
Strobe
Beacon
Shaker
Gear Motor
Knocker
Fan
Bell
Chime #1
Chime #2
Chime #3
DOFLinx to flash (pulse power) this device?
Test
Create DOFLinx.INI file
Cancel

Click on "**Create DOFLinx .INI File**" when you're done:

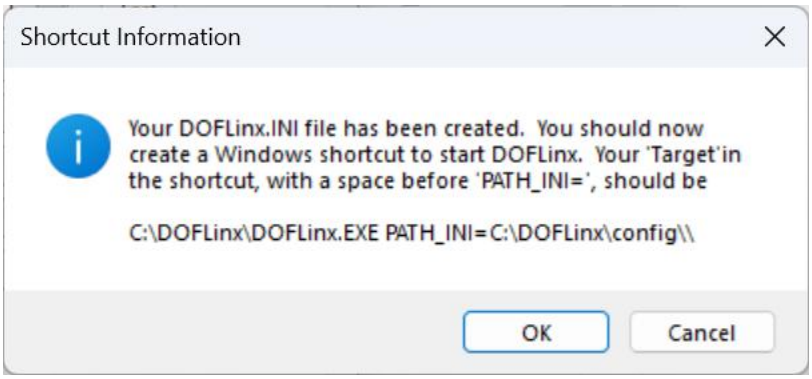



Edit properties of **DOFLinx – Shortcut.lnk** file and add the above string in Target field:

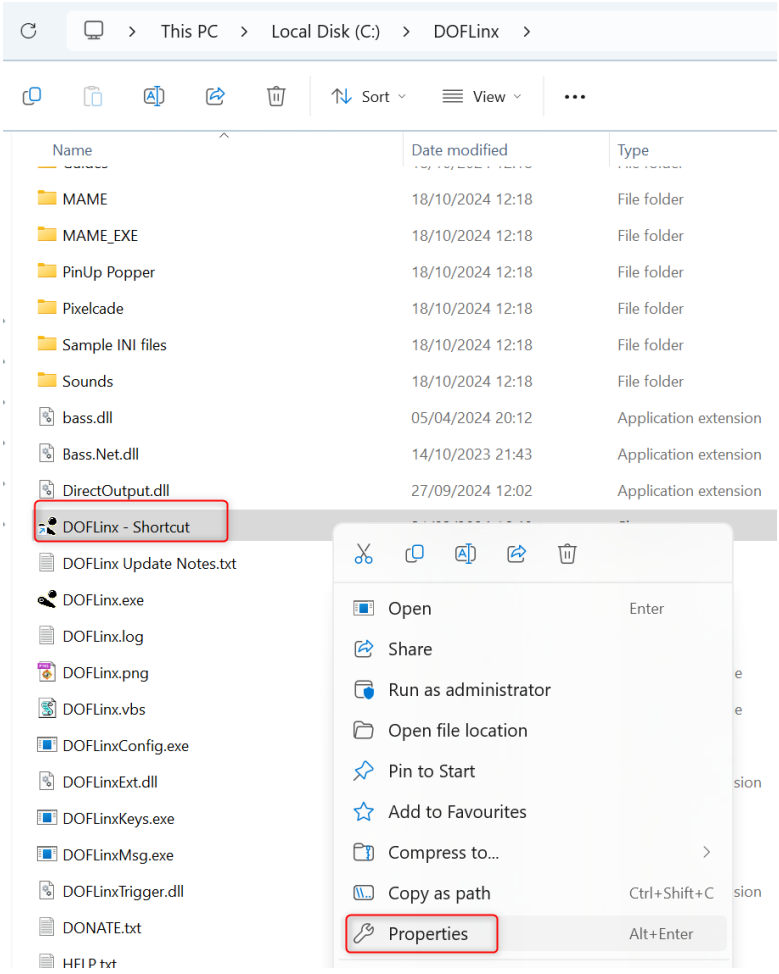

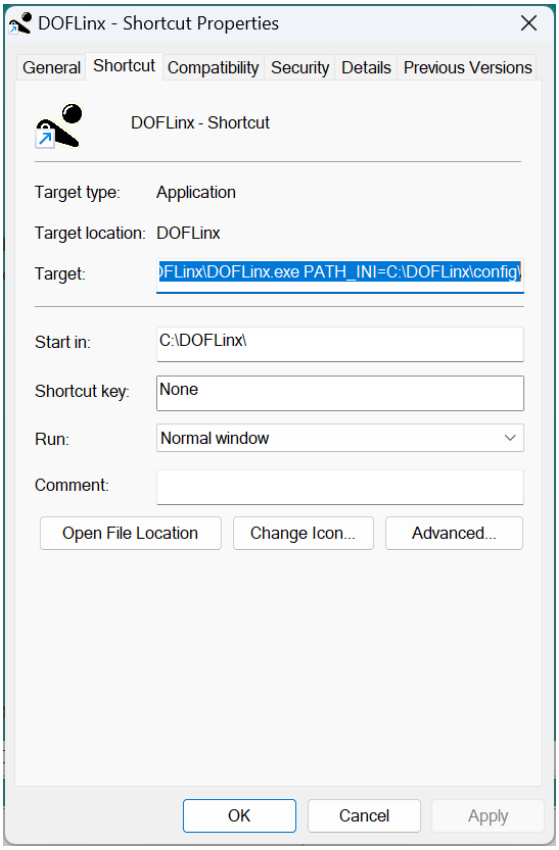


For automatic startup at every boot, put the shortcut in Startup folder:

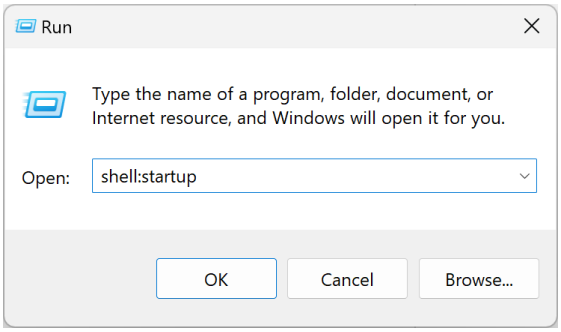

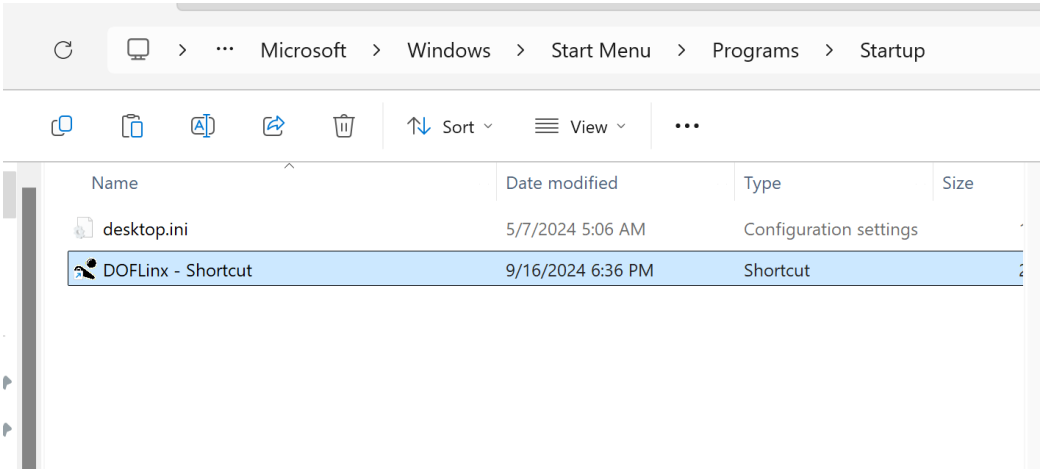


Reboot the machine. If your DOFLinx.ini is configured correctly you should not have any error in debug logs (launch DOFLinx - Shortcut to check):

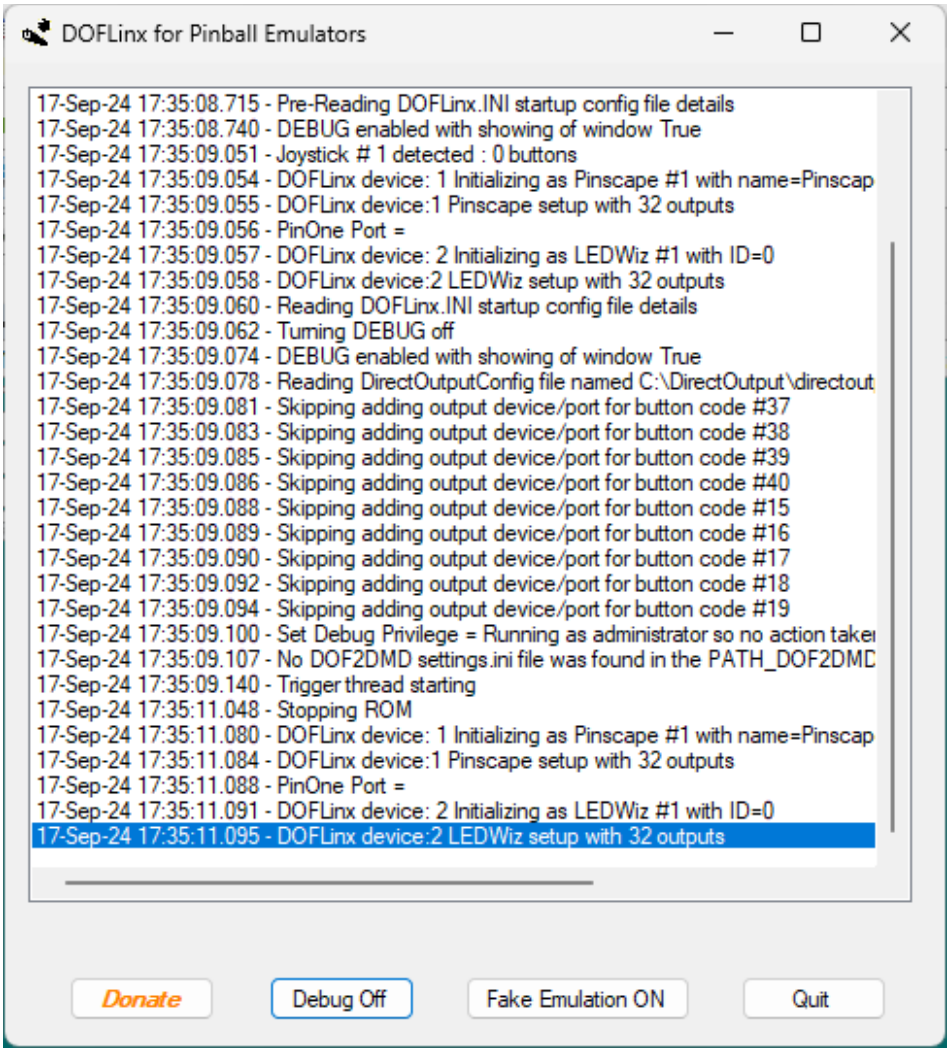


Configure Infected Mushroom Pinball with DOFLinx

Copy **DOFLinxTrigger.dll** from where you unzipped the DOFLinx download to the same folder as Pinball-Win64-Shipping.exe **(C:\Program Files (x86)\Steam\steamapps\common\Infected Mushroom Pinball\Pinball\Binaries\Win64\)**

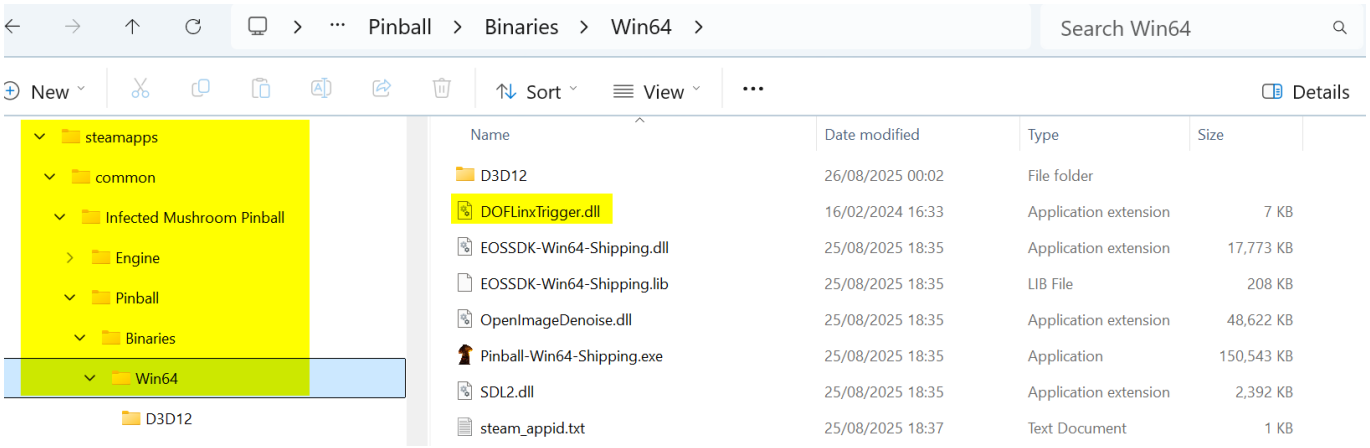

Make sure that you've got the LINX files from the \LINX folder in the DOFLinx download zip in a folder where you want them, ie **C:\DOFLinx\Linx**

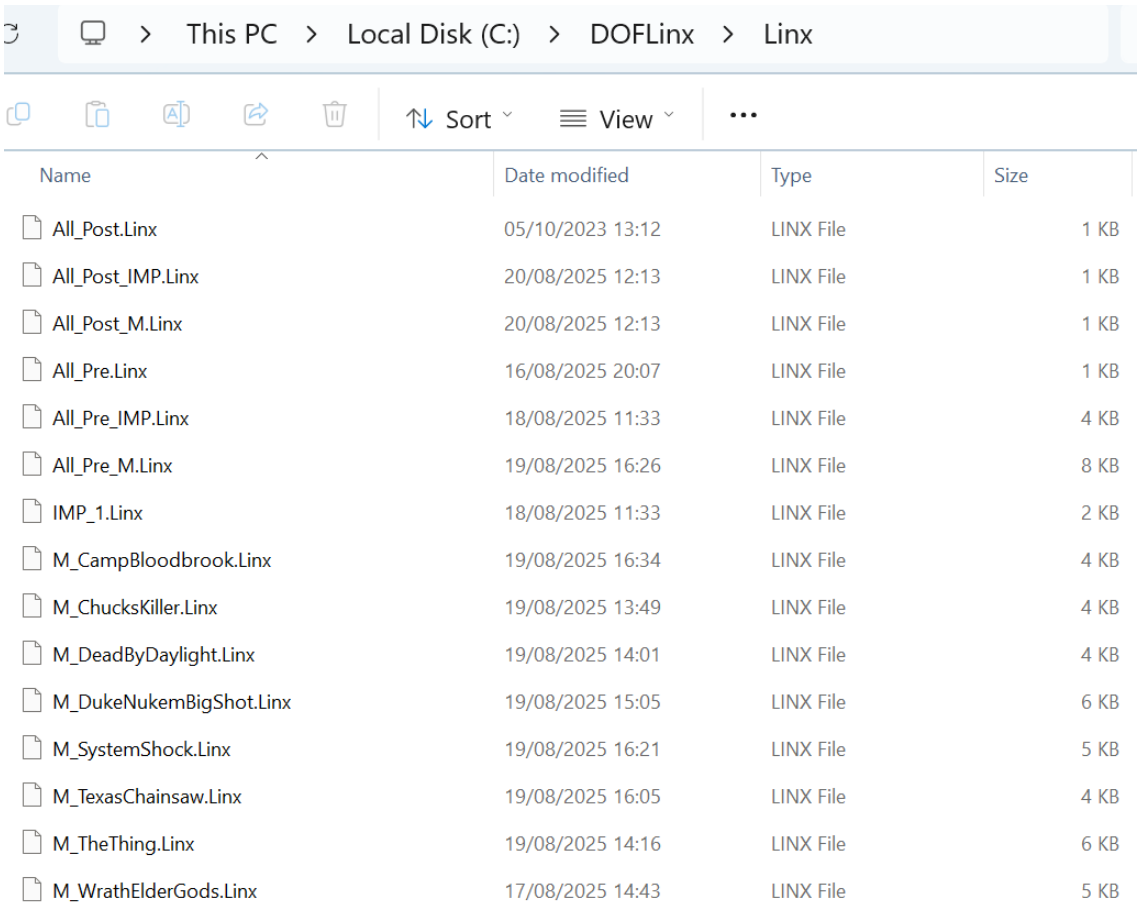


You can download latest VirtuaTilt **DOFLinx.INI** file from our GitHub here: https://github.com/3DPTronics/VirtuaTilt/tree/main/DOFLinx/Wired%20VirtuaTilt . **Copy it to your DOFLinx config folder and you're ready to go!**

Optionally, you can also edit manually your **DOFLinx.INI** to make Infected Mushroom Pinball activate DOFLinx by adding in the **PROCESSES=** line **Pinball-Win64-Shipping**, so if you want for example MAME and Infected Mushroom Pinball to activate DOFLinx you would have:

PROCESSES=Mame,Pinball-Win64-Shipping

Note: **Pinball-Win64-Shipping** is the process to monitor, but you still run **Pinball.exe** to start Infected Mushroom Pinball:




Be sure to have the **PATH_LINX=** and **PATH_LINX_B2S=** parameters pointing to the place you put the Infected Mushroom Pinball files.

Make sure you have a **** on the end of the path, so **C:\DOFLinx\Linx**


```
PATH_LINX=C:\DOFLinx\Linx\
PATH_LINX_B2S=C:\DOFLinx\B2S\

MAME_PROCESS=Mame
PROCESSES=PinballFX-Win64-Shipping,Pinball FX3,Pinball FX2,Future Pinball
PROCESSES_LINX=PinballM-Win64-Shipping,Pinball-Win64-Shipping
```


Reboot the machine and check that **DOFLinx process** is running:

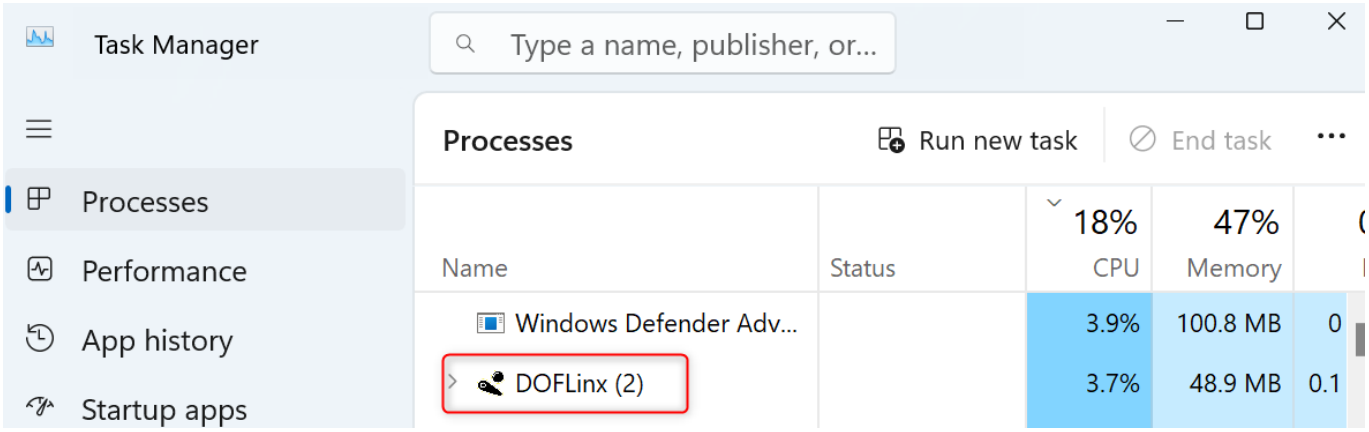


Go to **Steam Settings → Controller**

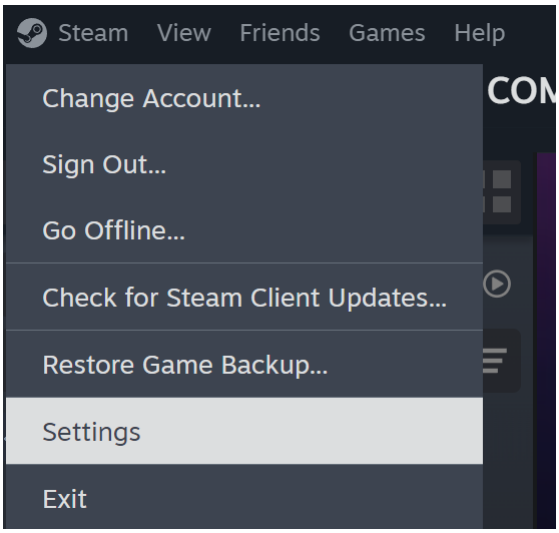



Disable everything under "External Gamepad Settings" with the except of "**Game Rumble**" and "**Enable Steam Input for generic controllers**":

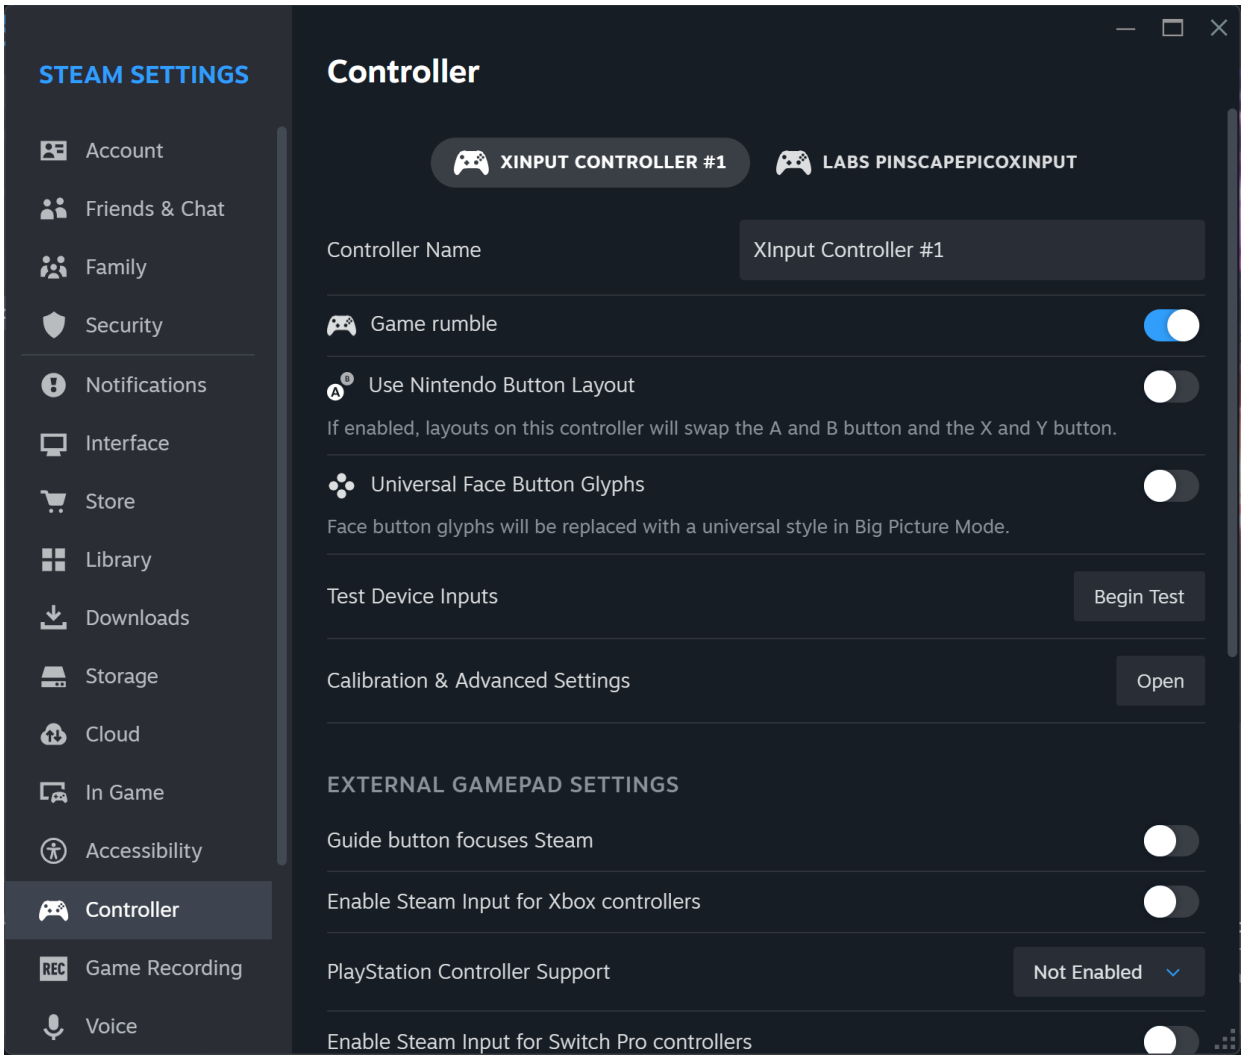

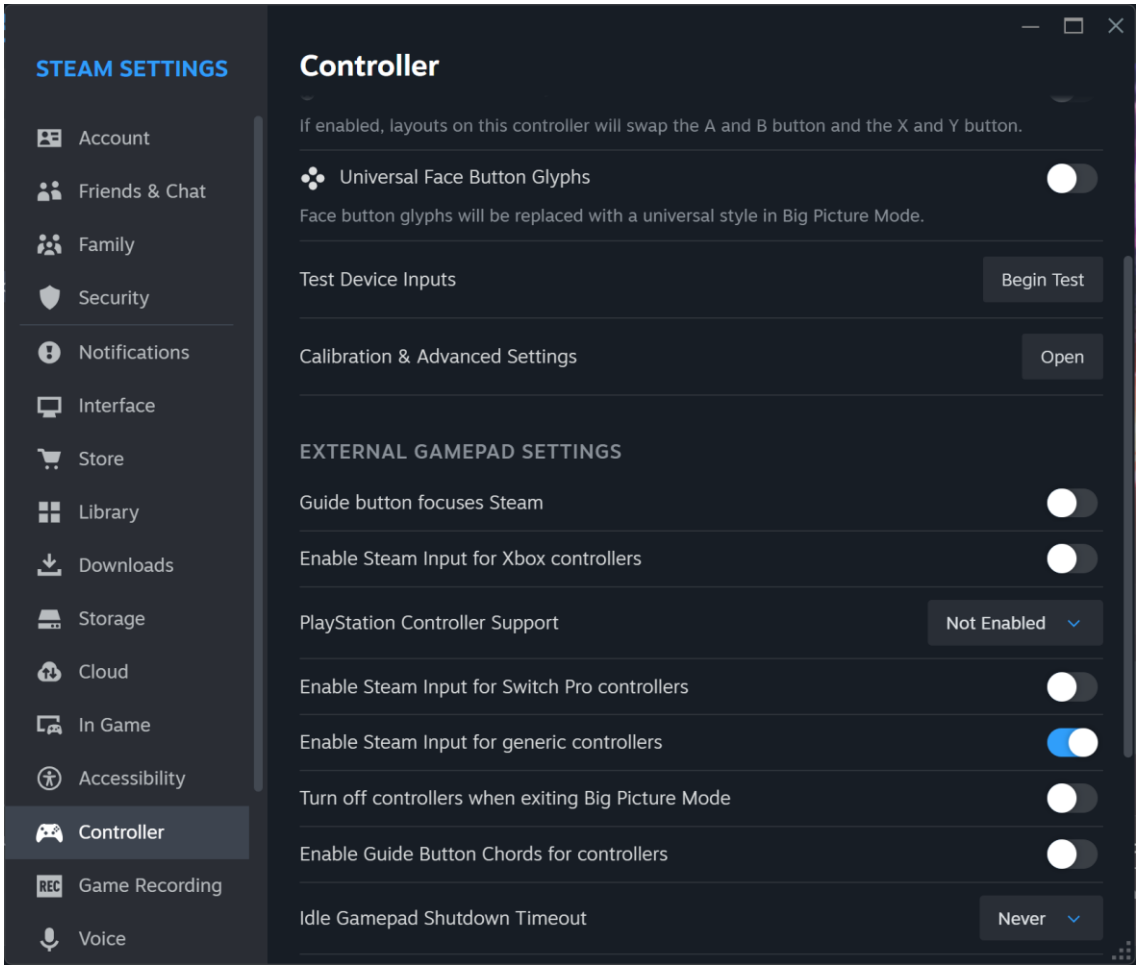

Start Infected Mushroom Pinball in **VPIN CABINET** mode, go to Input Settings **and ensure that Pinscape PicoXInput appears in controller name:**

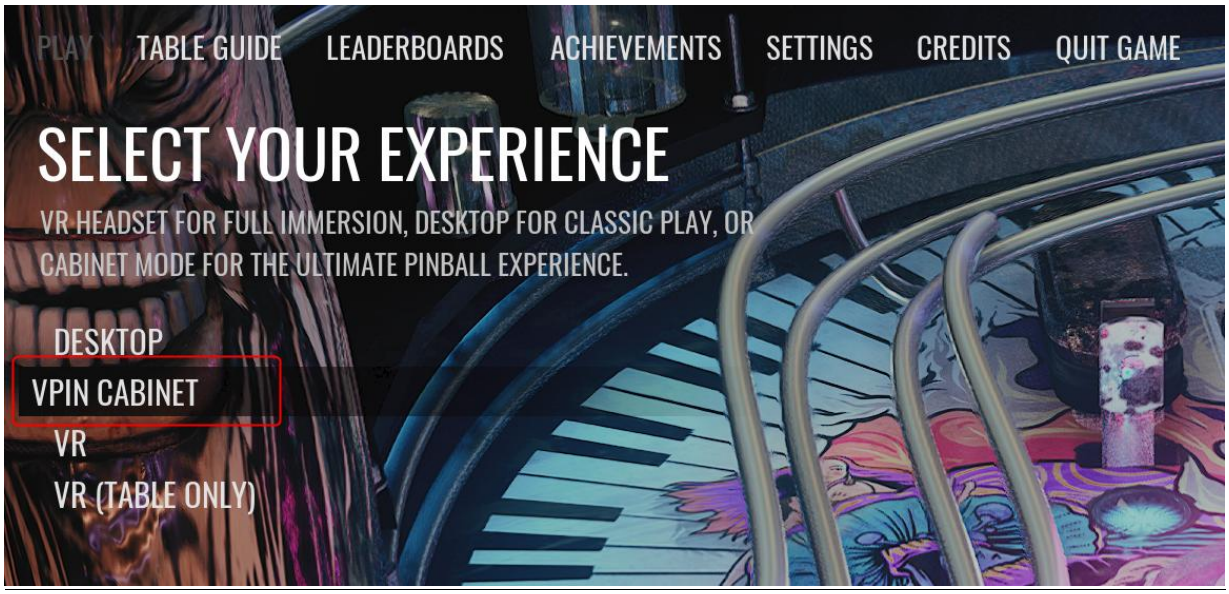

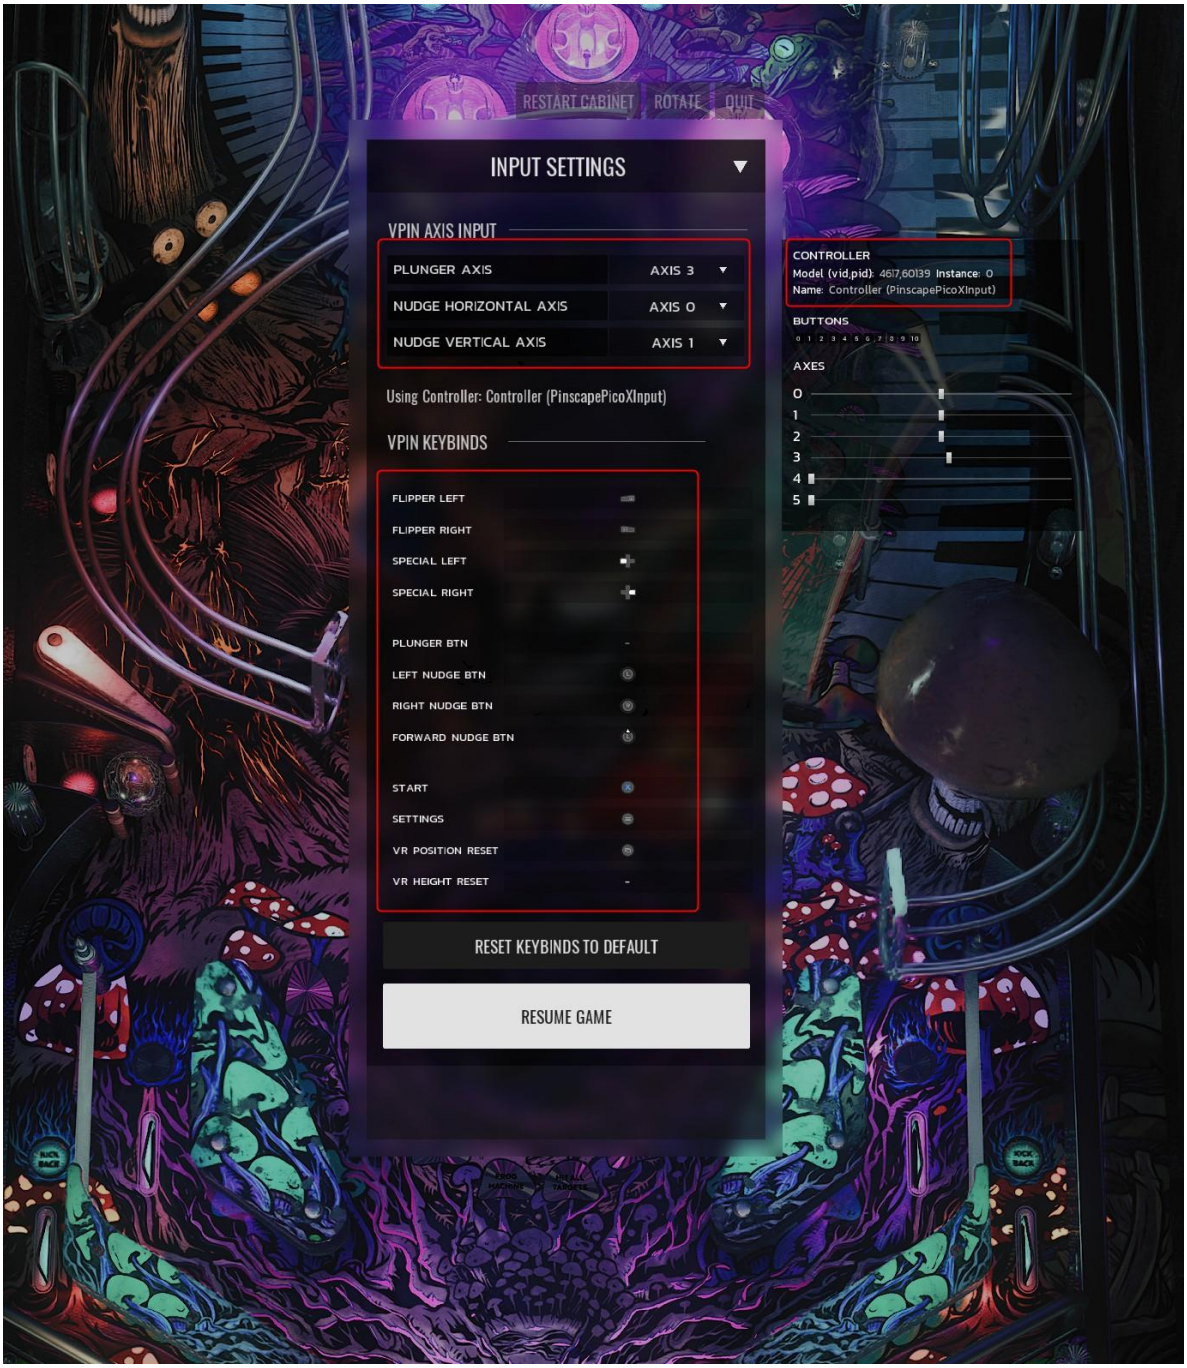

Select Axis3 for Plunger (check if axis is correct by pulling plunger), Axis0 for Nudge Horizontal and Axis1 for Nudge Vertical.

Map Keybinds as you like.


You can check if your DOFLinx configuration is working correctly by selecting **DOF TRIGGERS** from menu and passing your mouse onto triggers. Slingshots/Bumpers solenoid and shaker motor should trigger:





Have fun with DOFLinx full feedback with Infected Mushroom Pinball!

Configure Infected Mushroom Pinball without DOFLinx


- Load **VTConfig-STEAM-XInput_v1.X.json** profile in **Pinscape Pico Config Tool**:

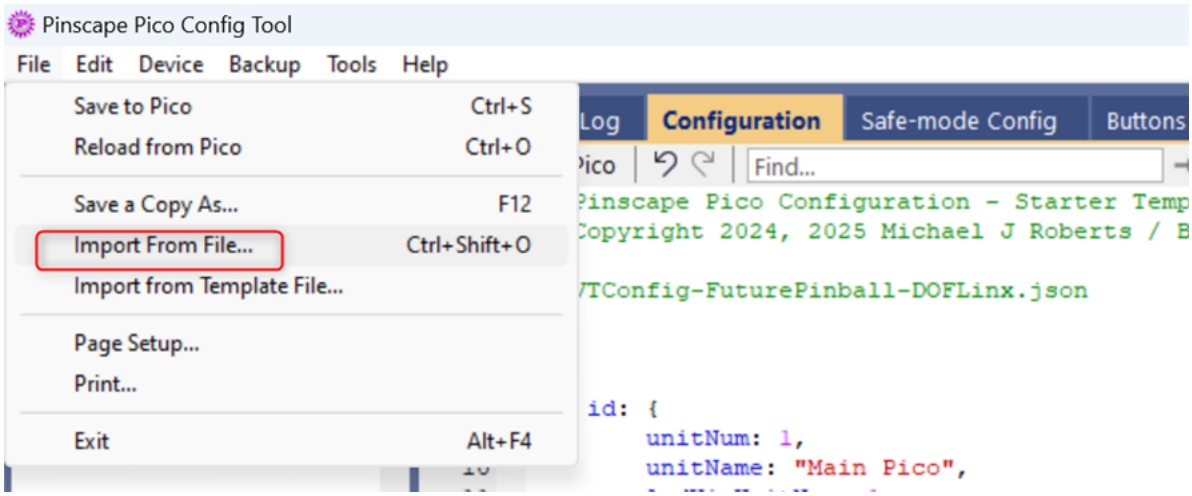

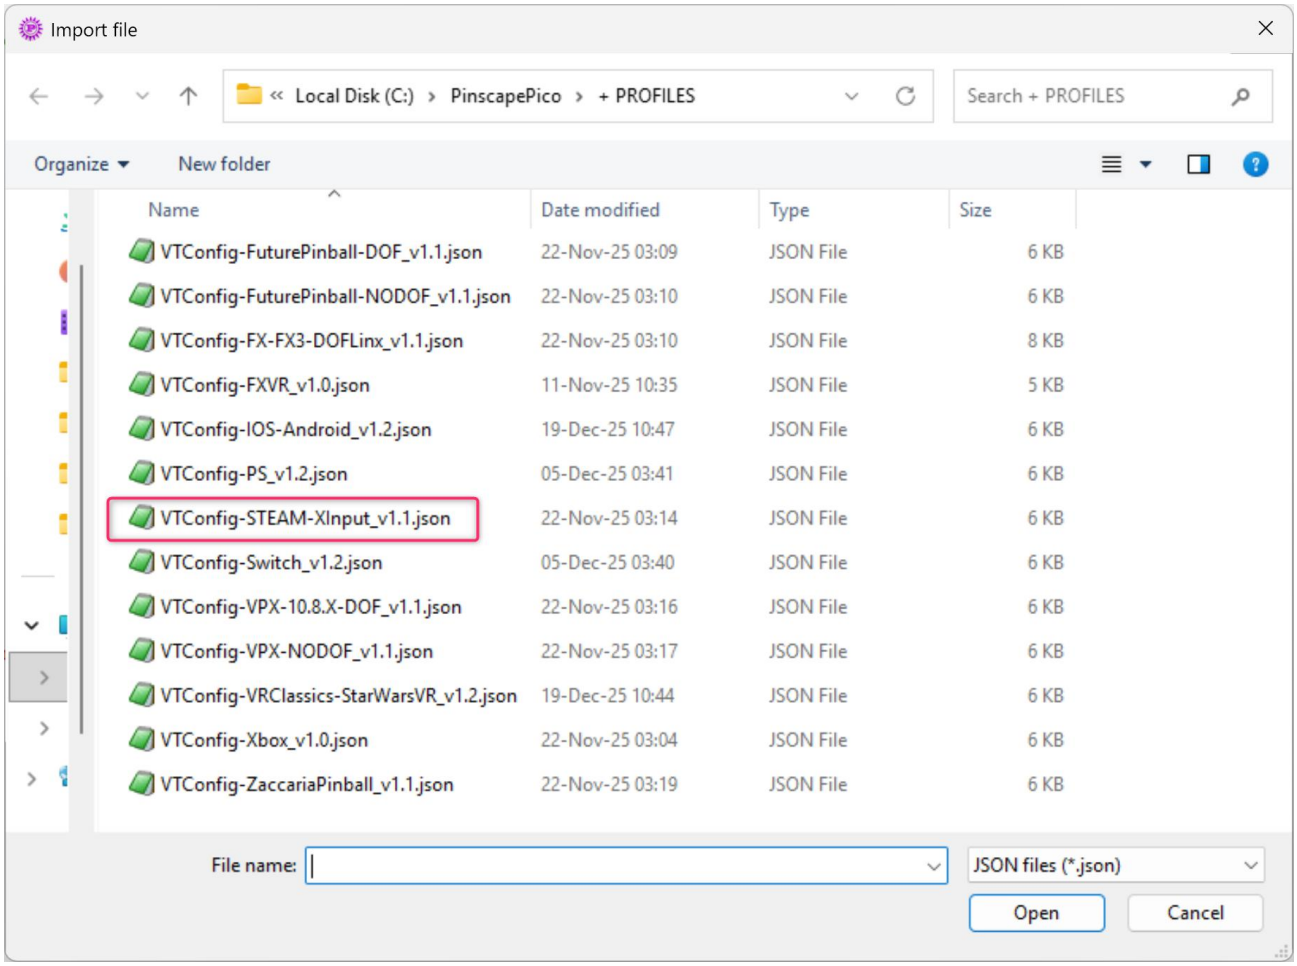


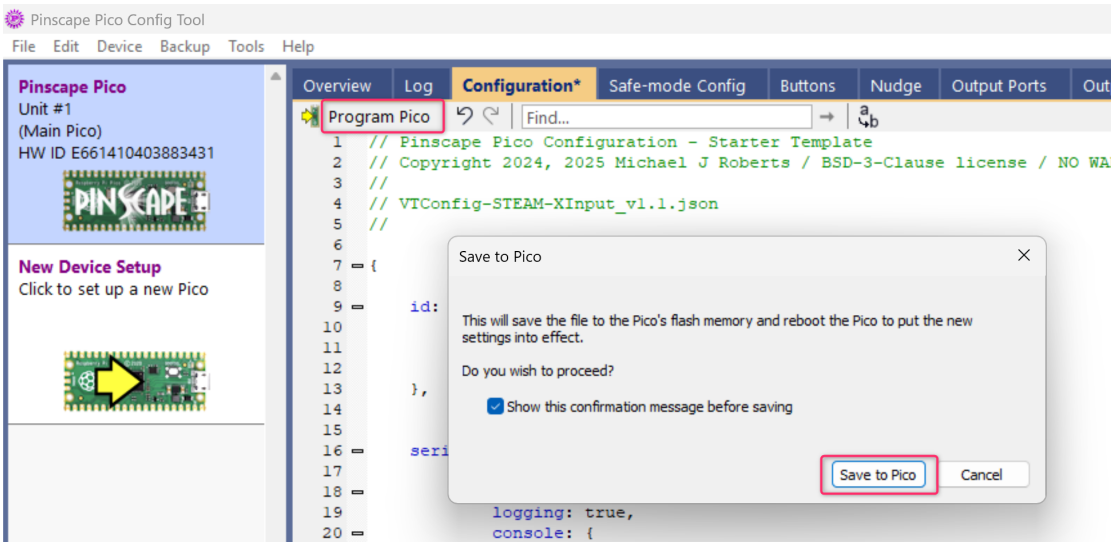


Go to **Steam Settings → Controller**

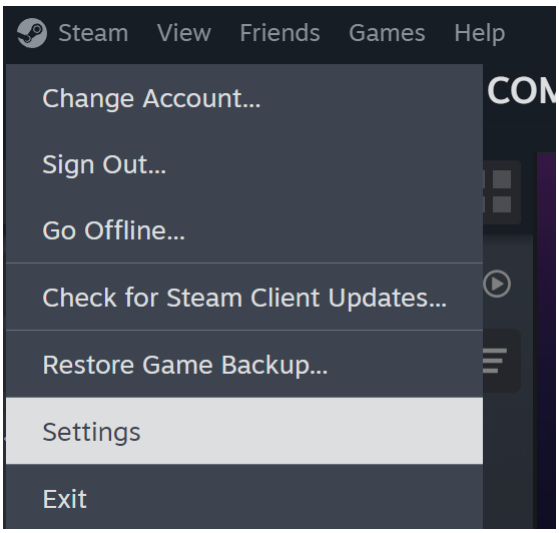


Disable everything under "External Gamepad Settings" with the except of "**Game Rumble**" and "**Enable Steam Input for generic controllers**":

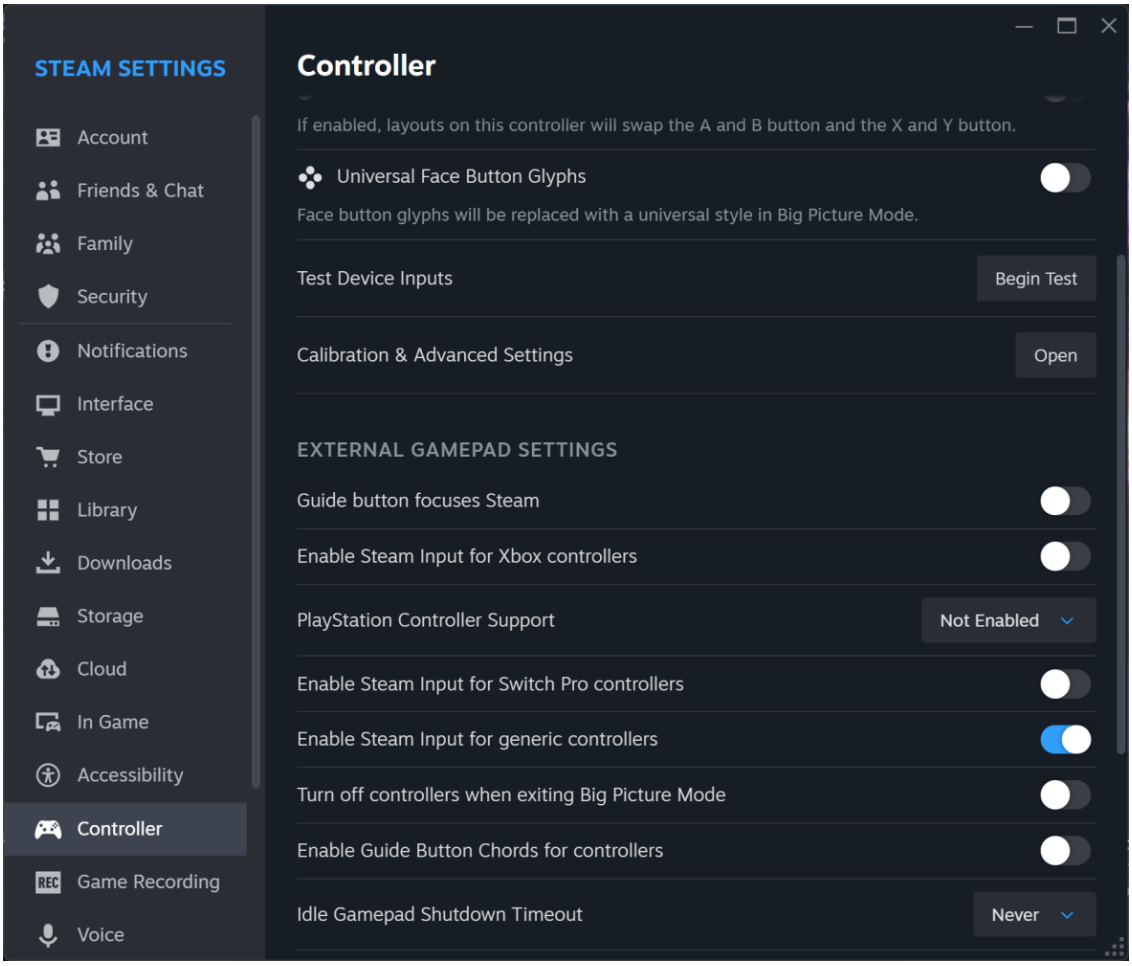

Start Infected Mushroom Pinball in **VPIN CABINET** mode, go to Input Settings **and ensure that Pinscape PicoXInput appears in controller name:**

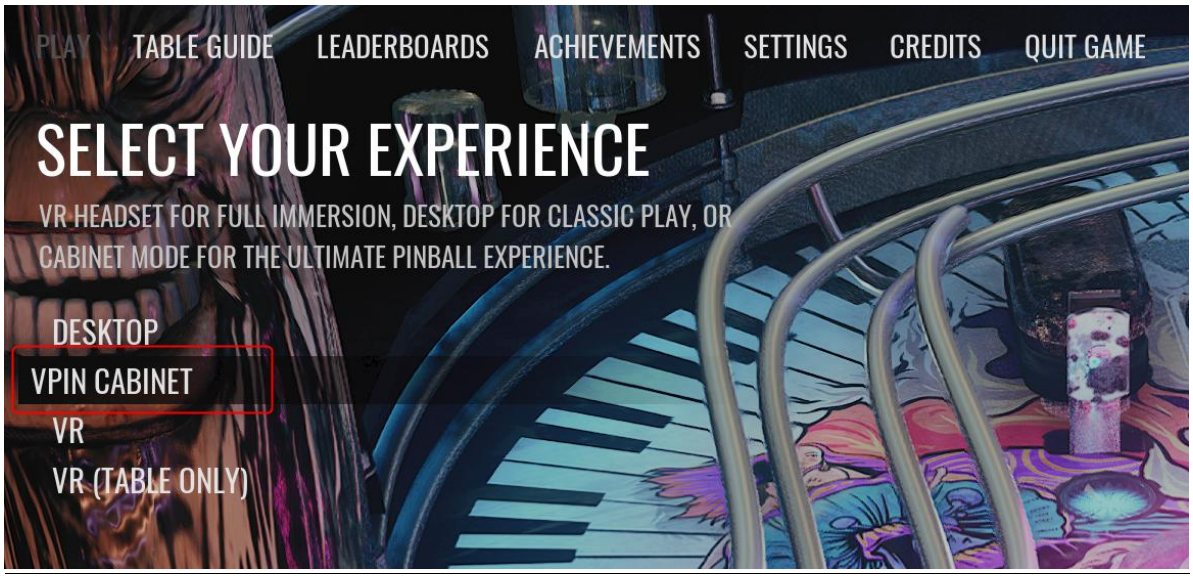

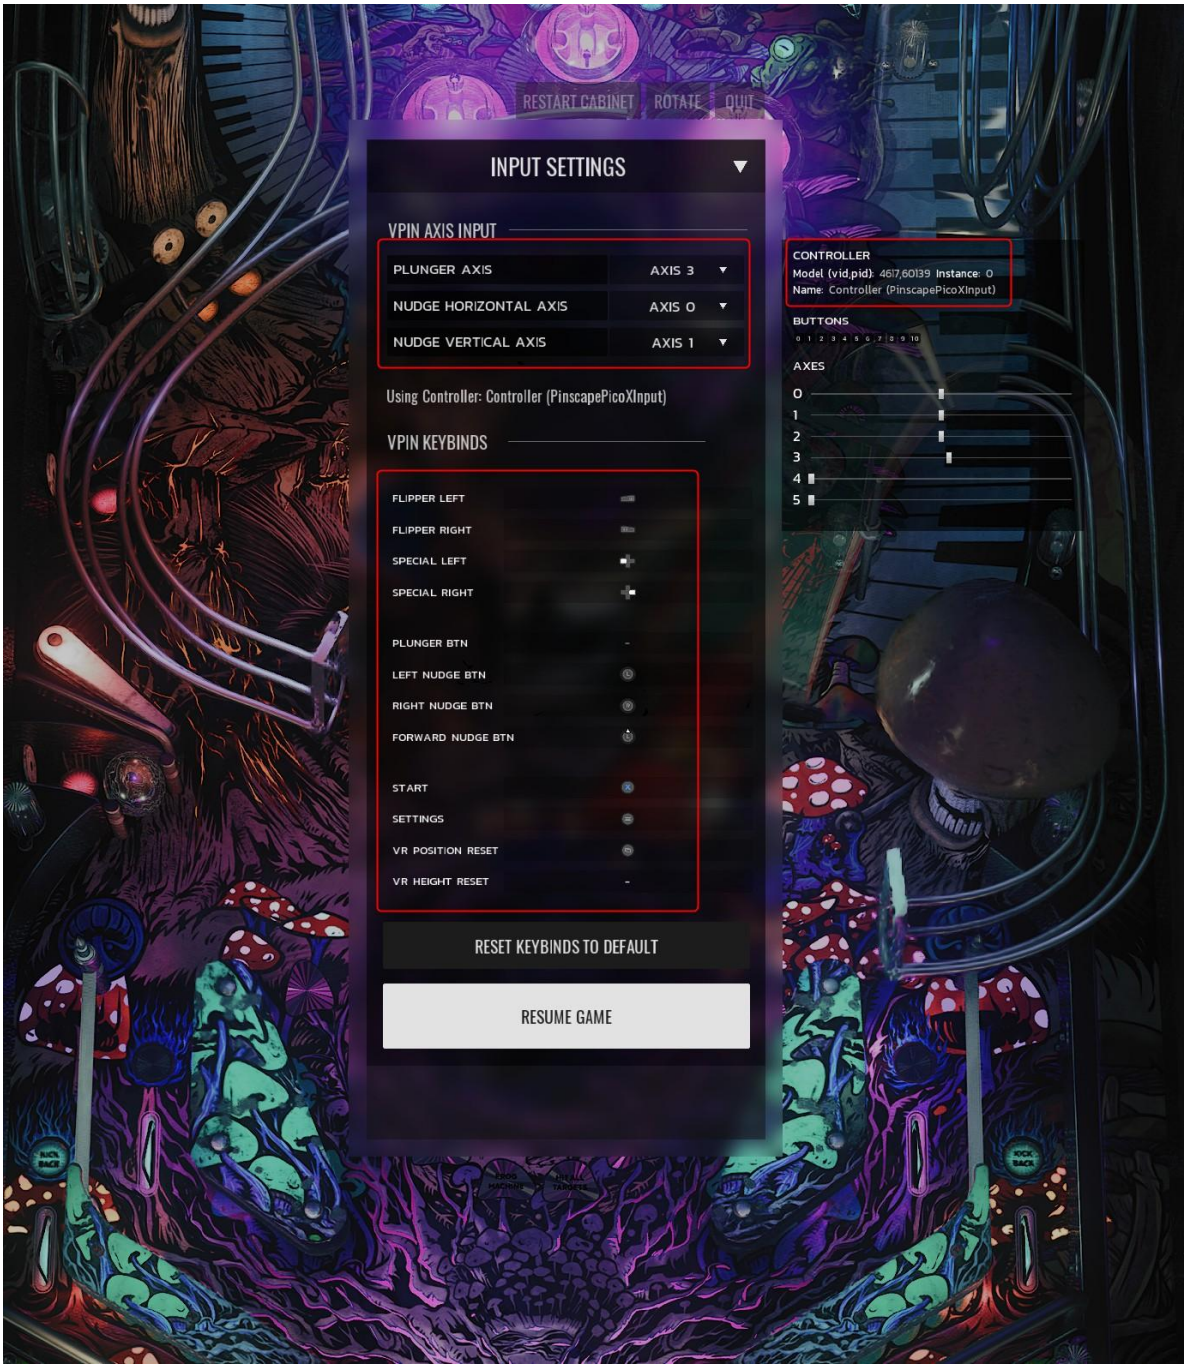

Select Axis3 for Plunger (check if axis is correct by pulling plunger), Axis0 for Nudge Horizontal and Axis1 for Nudge Vertical.

Map Keybinds as you like and enjoy!

DOFLinx.INI file for VirtuaTilt

You can have a look at the following **DOFLinx.ini** file as a reference for your VirtuaTilt. Be sure to correctly configure all paths:

```
######
# DOFLinx Configuration Tool generated DOFLinx.INI file
######
DEBUG=0

COLOUR_FILE=C:\DirectOutput\directoutputconfig120.ini
DIRECTOUTPUTGLOBAL=C:\DirectOutput\Config\GlobalConfigPico1.xml
PATH_B2S_SERVER=C:\vPinball\VisualPinball\Tables\

PATH_FX2=C:\DOFLinx\FX2
PATH_FX2_B2S=C:\DOFLinx\B2S
PATH_FX3=C:\DOFLinx\FX3
PATH_FX3_B2S=C:\DOFLinx\B2S
PATH_FX=C:\DOFLinx\FX
PATH_FX_B2S=C:\DOFLinx\B2S
PATH_MAME=C:\DOFLinx\MAME
PATH_LINX=C:\DOFLinx\Linx
PATH_LINX_B2S=C:\DOFLinx\B2S
FP_ATTEMPT_LINK=1
MAME_FOLDER=C:\MAME
PATH_PIXELCADE=C:\Pixelcade
PATH_HI2TXT=C:\HI2TXT\

PROCESSES=Pinball FX2,Pinball FX3,PinballFX-Win64-Shipping,Mame,Future Pinball
MAME_PROCESS=Mame
PROCESSES_LINX=PinballM-Win64-Shipping,IMPinball,IMPinball-Win64-Shipping

L_FLIPPER_KEY=A0
R_FLIPPER_KEY=A1

LINK_BUT_LF=0000,MONO,A0
LINK_BUT_RF=0000,MONO,A1
LINK_BUT_ML=0000,MONO,A2
LINK_BUT_MR=0000,MONO,A3
LINK_BUT_ST=0000,MONO,31
LINK_BUT_EB=0000,MONO,32
LINK_BUT_EX=0000,MONO,1B
LINK_BUT_CN=0000,MONO,35
LINK_BUT_LB=0000,MONO,0D

L_FLIPPER_OUTPUT=1003
R_FLIPPER_OUTPUT=1004
LINK_LF=1003,100,10000,255
LINK_RF=1004,100,10000,255
LINK_LS=1001,100,500,255
LINK_RS=1001,100,500,255
LINK_ML=1001,100,500,255
```

```
LINK_MC=1001,100,500,255
LINK_MR=1001,100,500,255
LINK_BL=1001,100,500,255
LINK_BC=1001,100,500,255
LINK_BR=1001,100,500,255
LINK_GR=1002,1000,10000,255
LINK_KN=1001,100,500,255

#!!!!!!!!!!!!!!!!!!!!!!!!!
```