⚠ IMPORTANT — Support Scope

3DPTronics supports the VirtuaTilt controller hardware only. This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

☑ Officially supported

Component	Coverage
🎮 **VirtuaTilt controller**	Wired and Wireless editions, all hardware components
💾 **VirtuaTilt firmware**	Updates and recovery via GUIConfigTool
📋 **Bundled profiles**	All Wired profiles shipped in the redist
⚙ **GUIConfigTool**	Configuration, calibration, profile loading, output testing
🔧 **Wireless Kit**	Wireless hardware kit for existing VirtuaTilt owners
📦 **Accessories**	Anything shipped directly by 3DPTronics

❌ Not supported

Category	Examples	Where to get help
🎲 **VP Game engines**	VPX, Visual Pinball, Future Pinball, BAM	VPForums · VP Universe
🕹 **VP titles**	Pinball FX / FX2 / FX Classic / VR / M, etc.	Zen Studios support
💥 **Feedback frameworks**	DOF (Direct Output Framework), DOFLinx	DOF on GitHub · DOFLinx wiki
🎨 **DMD / extras**	DMDExt, PinEvent V2, PuP-Packs / PUP-Stream	VP Universe
🚀 **Frontends**	PinUP Popper, Baller Installer, etc.	Popper forum
🎬 **Emulators / ROMs**	MAME, pinball ROMs	MAMEdev
💻 **System-level**	Windows, GPU/audio drivers, USB controllers	Microsoft / vendor support

🌐 Community help for software

Project	Community
Visual Pinball X	vpforums.org · vpuniverse.com
Future Pinball + BAM	VPU Future Pinball forum
Future Pinball + BAM AIO	VPU file 14807 — FP+BAM Essentials AIO
DOF	github.com/DirectOutput/DirectOutput
DOFLinx	doflinx.github.io/docs
Pinball FX family	Zen Studios Support
PinUP Popper	VPU PinUP Popper forum
MAME	mamedev.org

💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.

VIRTUATILT MAIN CONFIGURATION AND SETUP GUIDE

Following some basic instructions to have your new VirtuaTilt up and running quickly.

VirtuaTilt controller is powered by RP2040 with **VirtuaTilt** firmware (based on Pinscape Pico) already installed.

Please always refer to official Pinscape Pico repository: **https://github.com/mjrgh/PinscapePico**

RP2040 Software Setup

VirtuaTilt comes with a RP2040 "microcontroller", which is basically a tiny computer. **VirtuaTilt firmware is already installed (latest version available at shipping time)**. That serves as both the operating system and the application software. It controls all the virtual pinball functions of the RP2040, including the sensors, buttons, and feedback devices, and it handles communications with Windows and other devices.

In addition to the VirtuaTilt firmware that runs on the RP2040, there's a separate program that runs on your Windows PC, called **GUIConfigTool**. This provides an interactive interface for setting up the device, configuring it, and testing it. You don't need to leave the GUIConfigTool running all the time; it's only needed to set up and test the device. You can also run it again at any time to change options, update the firmware, or troubleshoot problems (it includes some testing features that can help debug the hardware setup).


For additional information about Config Tool and how to use it please refer to official documentation:


http://mjrnet.org/pinscape/PinscapePico/Help/ConfigTool.htm

The software installation process is all controlled from the PC. The Config Tool handles the RP2040 software setup, so the first step is to install the Config Tool on your PC. You can find it in the **VirtuaTilt Wired redist**, available in our Gdrive share folder.

IMPORTANT NOTE: Do not use GUIConfigTool from official Pinscape Pico releases: it doesn't support all VirtuaTilt features.


To install, download the redist ZIP file, unblock it (**very important!**) and unpack it into a folder on your hard disk. Use any location that's convenient. Open the tools\GUIConfigTool folder and double-click the "**GUIConfigTool.exe**" application:

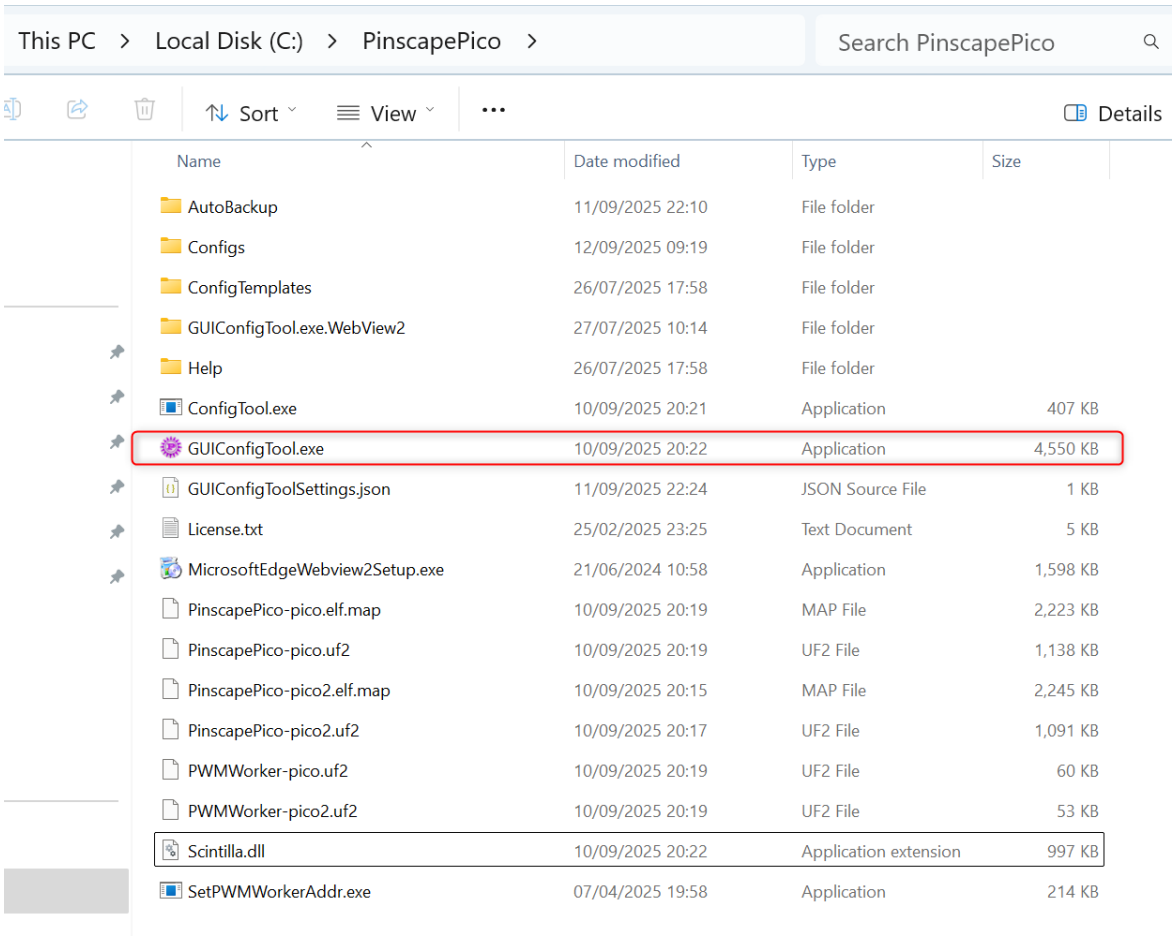

This PC > Local Disk (C:) > PinscapePico >
Search PinscapePico
Sort
View
Details
Name
Date modified
Type
Size
AutoBackup 11/09/2025 22:10 File folder
Configs 12/09/2025 09:19 File folder
ConfigTemplates 26/07/2025 17:58 File folder
GUIConfigTool.exe.WebView2 27/07/2025 10:14 File folder
Help 26/07/2025 17:58 File folder
ConfigTool.exe 10/09/2025 20:21 Application 407 KB
GUIConfigTool.exe 10/09/2025 20:22 Application 4,550 KB
GUIConfigToolSettings.json 11/09/2025 22:24 JSON Source File 1 KB
License.txt 25/02/2025 23:25 Text Document 5 KB
MicrosoftEdgeWebview2Setup.exe 21/06/2024 10:58 Application 1,598 KB
PinscapePico-pico.elf.map 10/09/2025 20:19 MAP File 2,223 KB
PinscapePico-pico.uf2 10/09/2025 20:19 UF2 File 1,138 KB
PinscapePico-pico2.elf.map 10/09/2025 20:15 MAP File 2,245 KB
PinscapePico-pico2.uf2 10/09/2025 20:17 UF2 File 1,091 KB
PWMWorker-pico.uf2 10/09/2025 20:19 UF2 File 60 KB
PWMWorker-pico2.uf2 10/09/2025 20:19 UF2 File 53 KB
Scintilla.dll 10/09/2025 20:22 Application extension 997 KB
SetPWMWorkerAddr.exe 07/04/2025 19:58 Application 214 KB

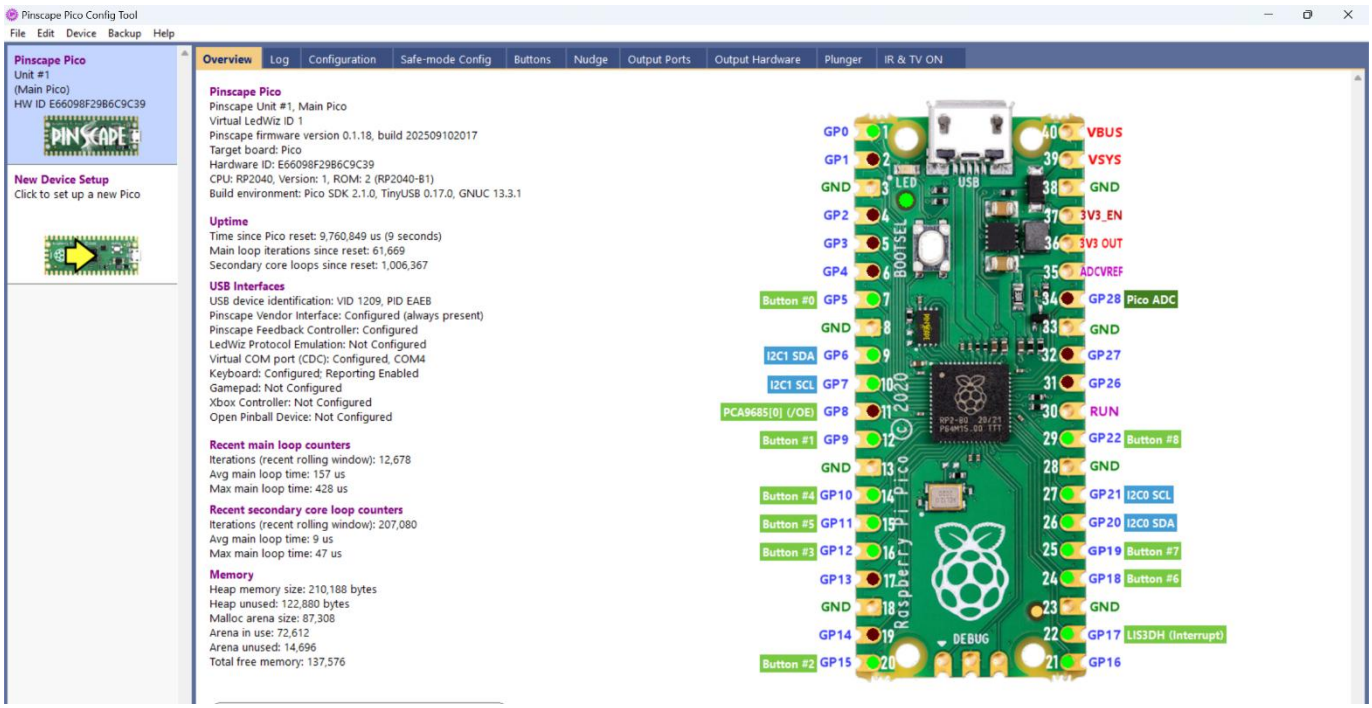
Pinscape Pico Config Tool
File Edit Device Backup Help
Pinscape Pico
Unit #1
(Main Pico)
HW ID E66098F29B6C9C39
New Device Setup
Click to set up a new Pico
Overview Log Configuration Safe-mode Config Buttons Nudge Output Ports Output Hardware Plunger IR & TV ON
Pinscape Pico
Pinscape Unit #1, Main Pico
Virtual LedWiz ID 1
Pinscape firmware version 0.1.18, build 202509102017
Target board: Pico
Hardware ID: E66098F29B6C9C39
CPU: RP2040, Version: 1, ROM: 2 (RP2040-B1)
Build environment: Pico SDK 2.1.0, TinyUSB 0.17.0, GNUC 13.3.1
Uptime
Time since Pico reset: 9,760,849 us (9 seconds)
Main loop iterations since reset: 61,669
Secondary core loops since reset: 1,006,367
USB Interfaces
USB device identification: VID 1209, PID EAEB
Pinscape Vendor Interface: Configured (always present)
Pinscape Feedback Controller: Configured
LedWiz Protocol Emulation: Not Configured
Virtual COM port (CDC): Configured, COM4
Keyboard: Configured; Reporting Enabled
Gamepad: Not Configured
Xbox Controller: Not Configured
Open Pinball Device: Not Configured
Recent main loop counters
Iterations (recent rolling window): 12,678
Avg main loop time: 157 us
Max main loop time: 428 us
Recent secondary core loop counters
Iterations (recent rolling window): 207,080
Avg main loop time: 9 us
Max main loop time: 47 us
Memory
Heap memory size: 210,188 bytes
Heap unused: 122,880 bytes
Malloc arena size: 87,308
Arena in use: 72,612
Arena unused: 14,696
Total free memory: 137,576
GP0 GP1 GND GP2 GP3 GP4 Button #0 GP5 GND I2C1 SDA GP6 I2C1 SCL GP7 PCA9685[0] (/OE) GP8 Button #1 GP9 GND Button #4 GP10 Button #5 GP11 Button #3 GP12 GP13 GND GP14 Button #2 GP15
VBUS VSYS GND 3V3_EN 3V3 OUT ADCVREF GP28 Pico ADC GND GP27 GP26 RUN GP22 Button #8 GND GP21 I2C0 SCL GP20 I2C0 SDA GP19 Button #7 GP18 Button #6 GND GP17 LIS3DH (Interrupt) GP16
LED
USB
BOOTSEL
DEBUG

VirtuaTilt Default Config

VirtuaTilt comes preconfigured with a **standard PC profile for Visual Pinball X**. We recommend using it at the beginning for testing buttons, potentiometer, feedback devices, etc. You can obviously change/unload it afterwards (see Appendix D). We also recommend saving it, in case you need to revert to the original configuration:

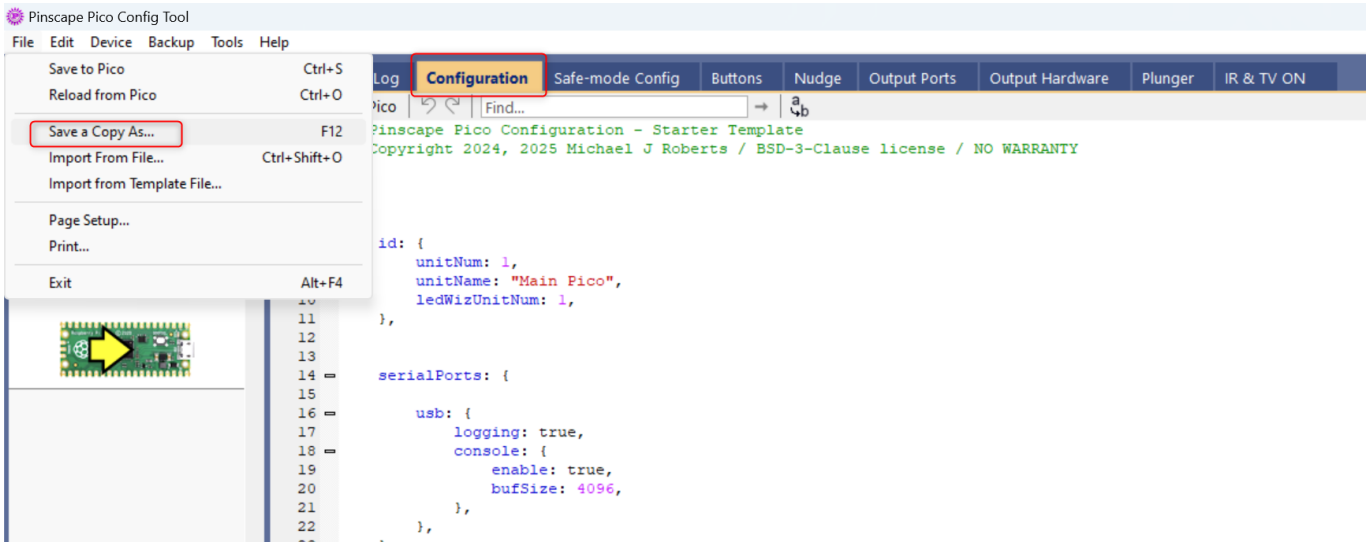


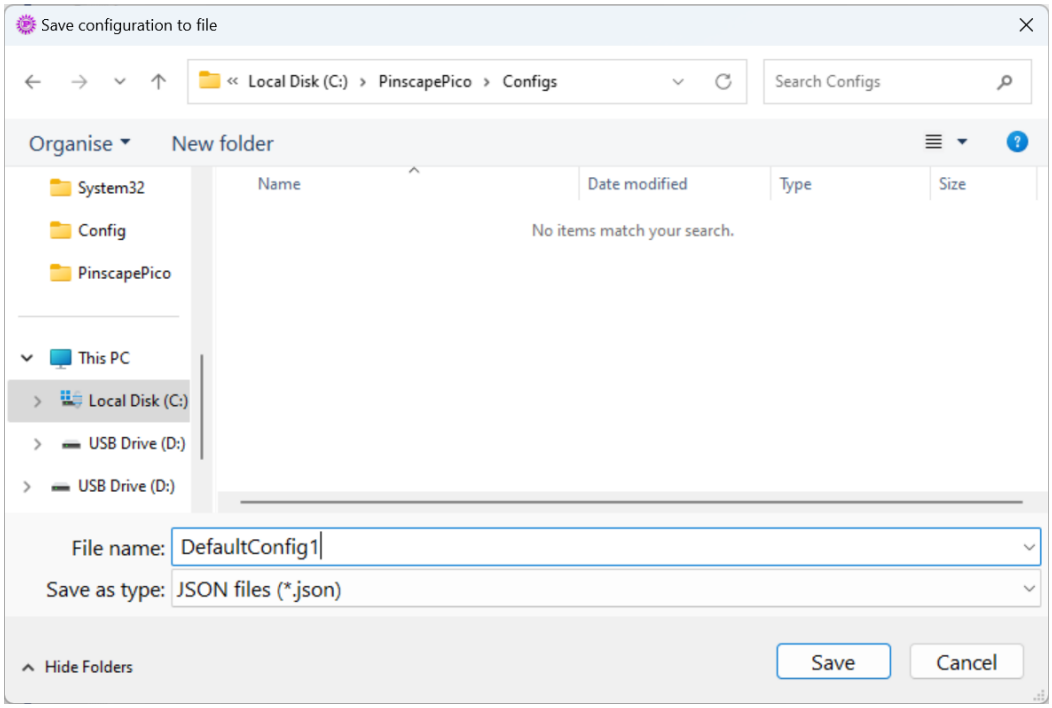


Default Buttons Mapping

VPX / Future Pinball


Default Control	Keyboard Config	Button Color
Left Flipper	Shift (Left) Left Flipper	
Left MagnaSave	Ctrl (Left) Left MagnaSave	
Right Flipper	Shift (Right) Right Flipper	
Right MagnaSave	Ctrl (Right) Right MagnaSave	
Start	! 1 Start Game	
Coin In	% 5 Coin In	
Exit/Cancel	Esc Exit to menu	
Launch Ball	Enter Plunger/Launch Ball	
Extra Ball	@ 2 Extra Ball (Buy-In)	
Fire!	To be assigned on Visual Pinball	

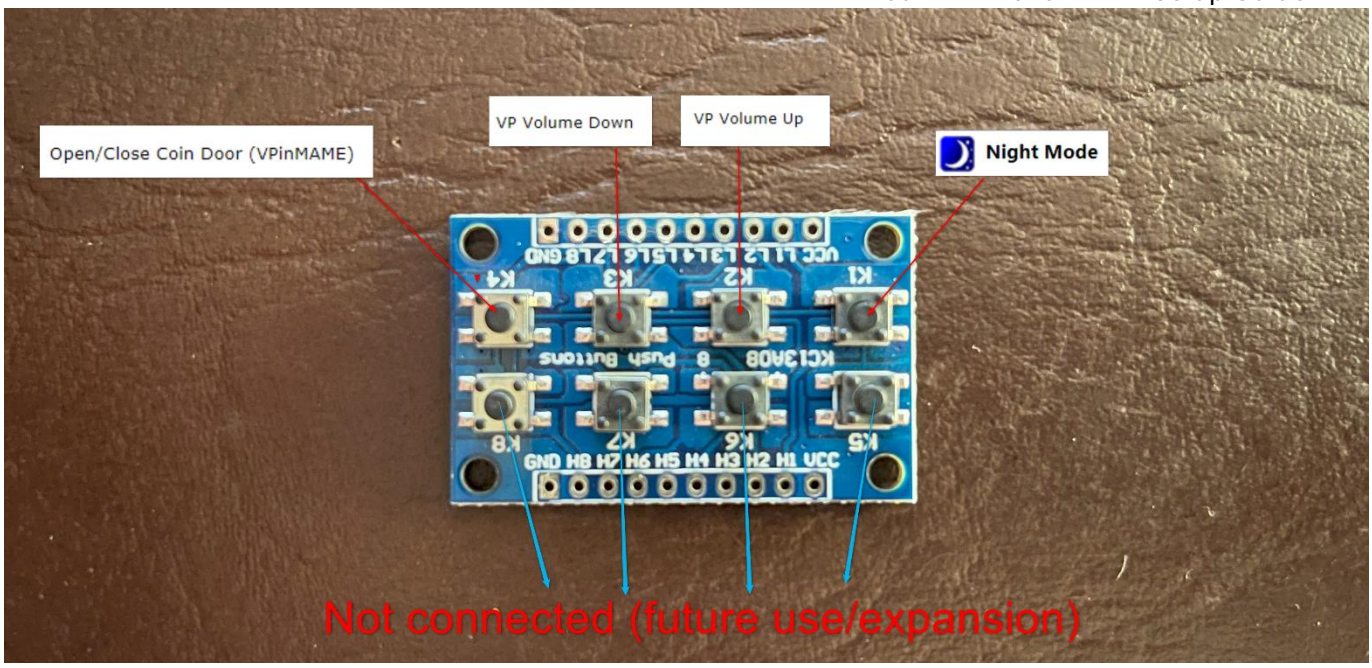


NOTE: **Nightmode on VirtuaTilt is enabled for all feedback devices when Nightmode button is pressed.**

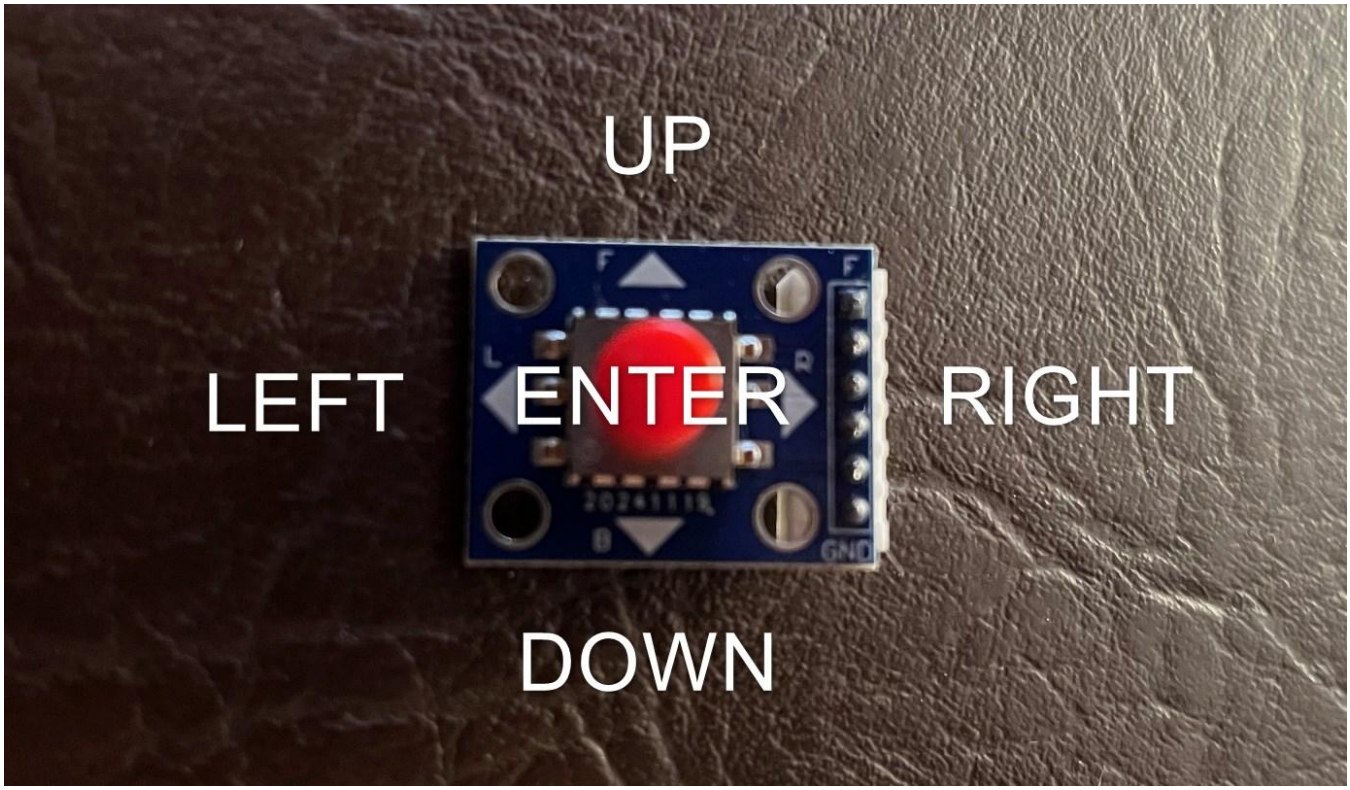



STEAM (X-Input): PinballFX / FX Classic / Pinball M / Infected Mushroom Pinball / Pinball VR Classic / Star Wars Pinball VR / IOS/Android /etc.

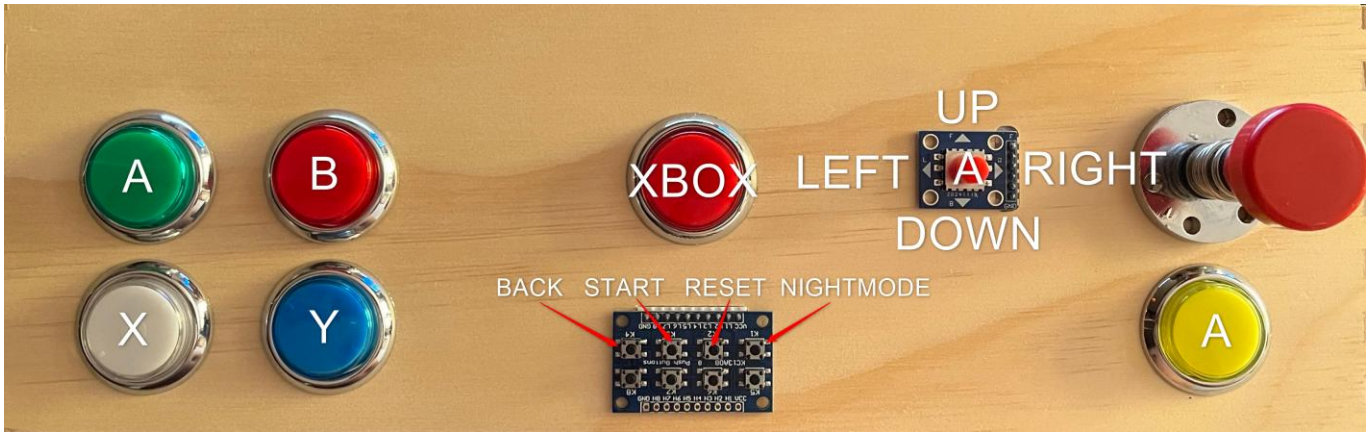

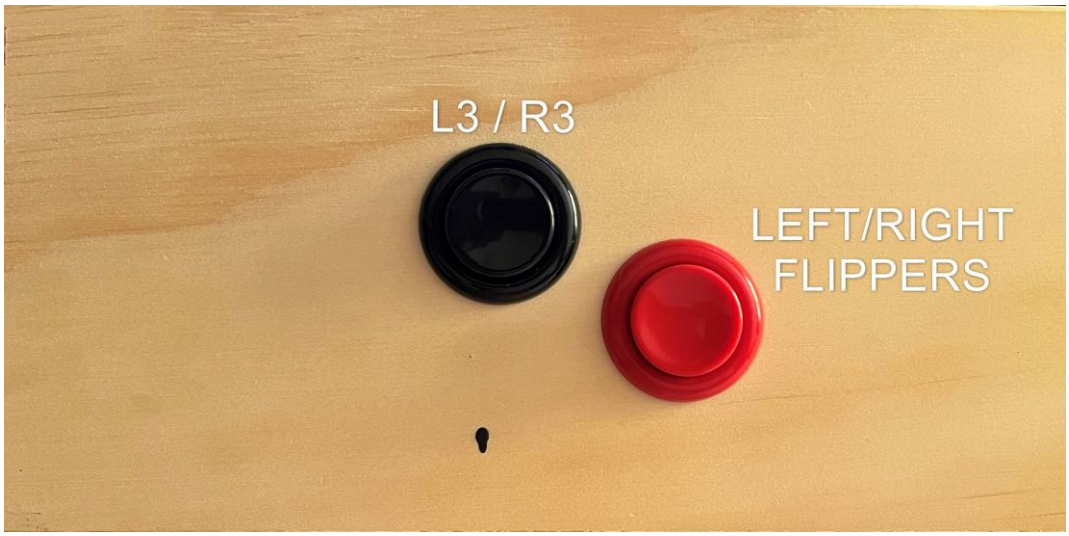

PinballFX VR

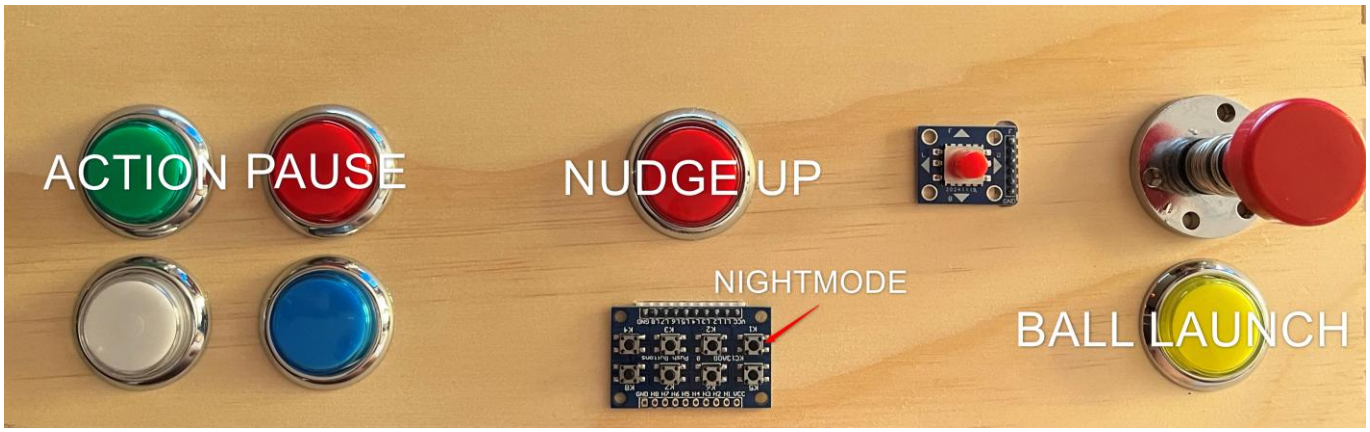


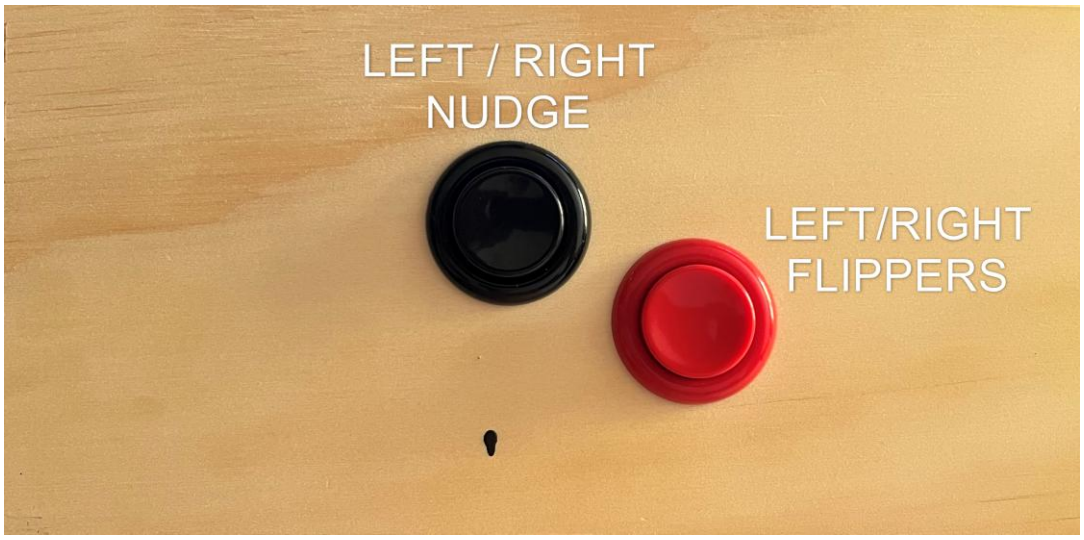

NOTE: **<u>ACTION button is not used anymore</u>** with VTConfig-FXVR_XAM_v1.14 profile (PinballFX VR 1.10 update): each flipper button now moves both lower and upper flippers.

Buttons Testing

You can use the Pinscape Pico **Buttons** tab to check if your VirtuaTilt's buttons are working as expected:

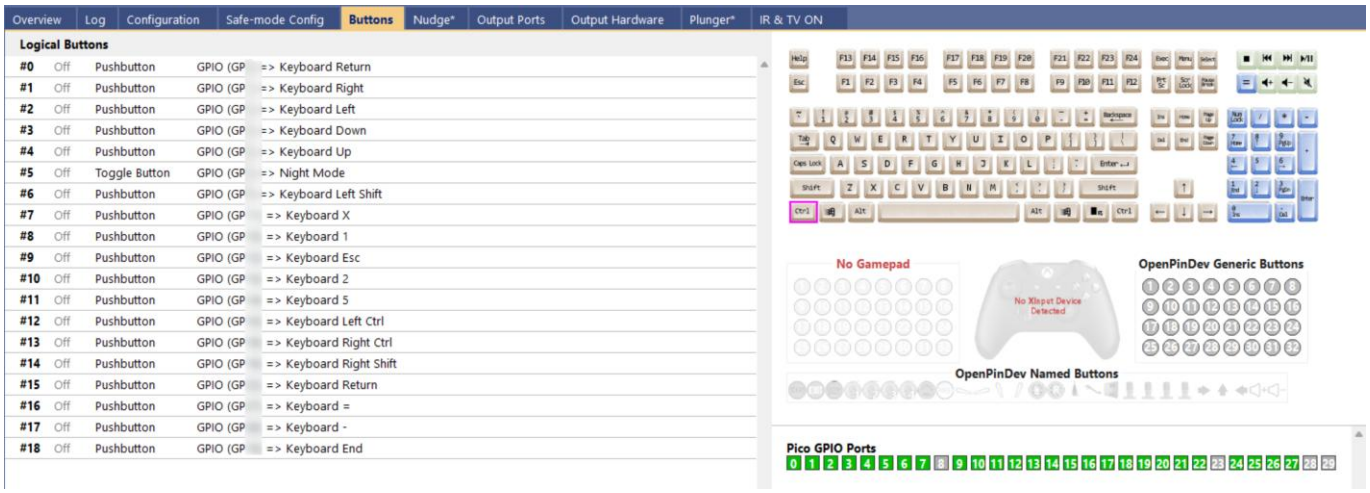

For additional information about the Pinscape Pico button tester, please refer to official reference:


http://mjrnet.org/pinscape/PinscapePico/Help/ButtonTester.htm


Pinscape Pico Profiles

For a smooth experience, we created many configuration profiles for Pinscape Pico and different Virtual Pinball emulators. **Look at configuration guides for the various VP emulators to know which profile to use or go to Appendix D**.


What you need to do is import the profile for the game you're going to play and save the configuration.


Very easy!

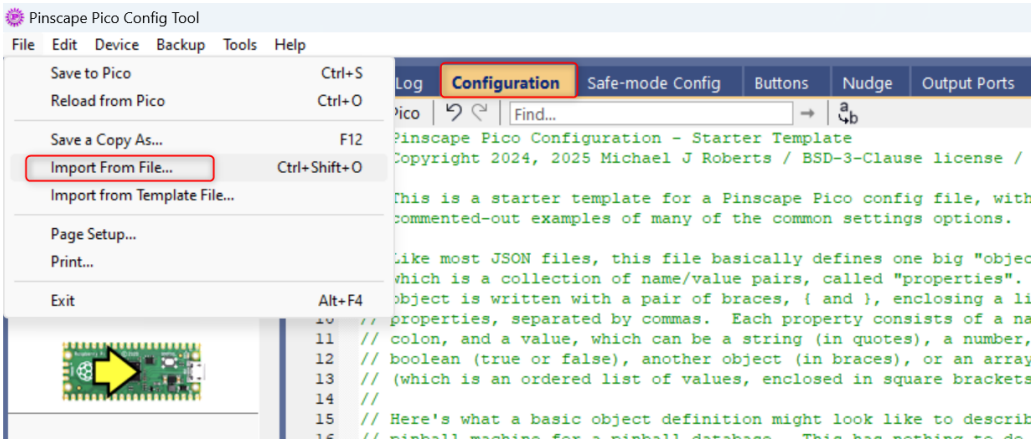

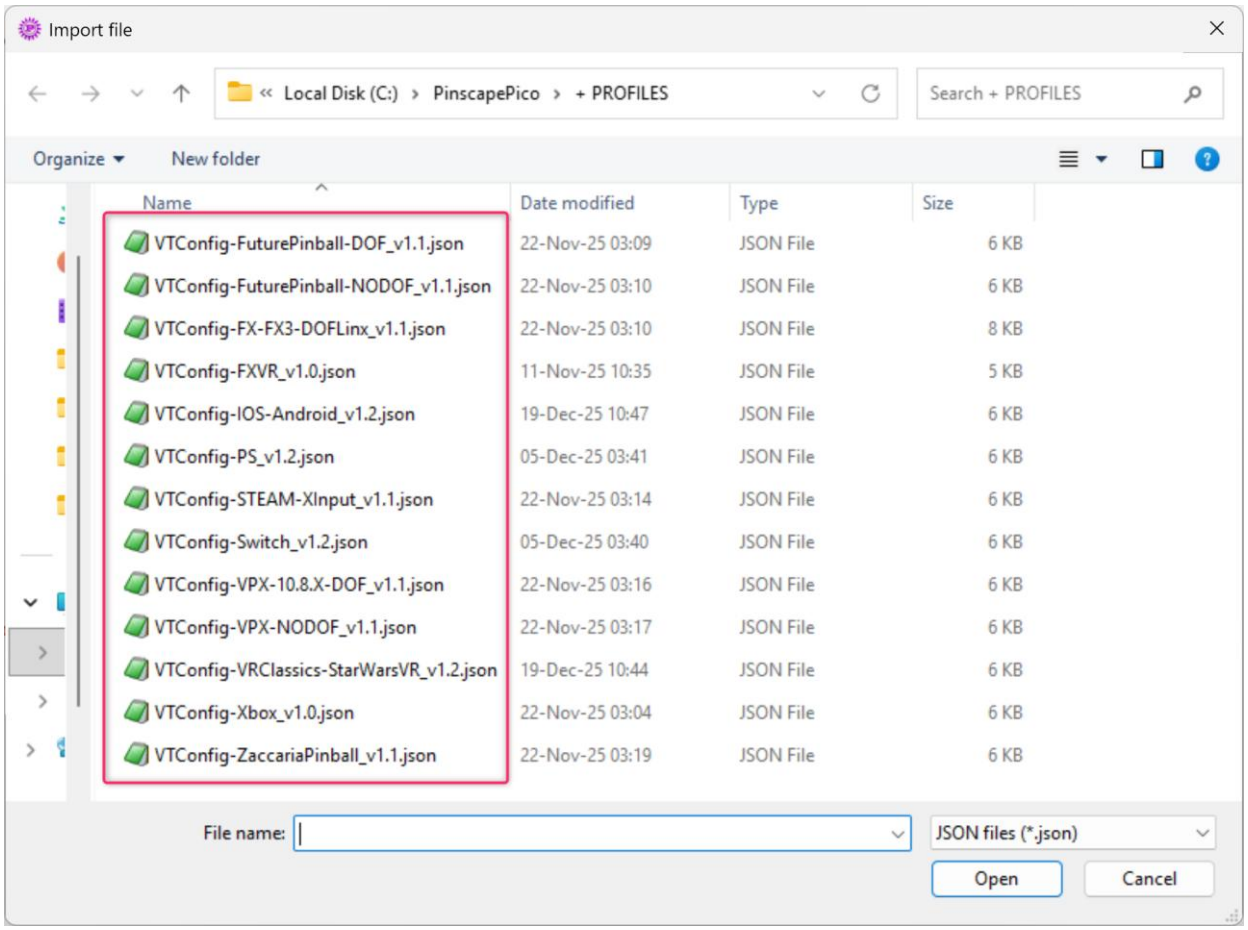

Now click on '**Program Pico**' and confirm saving:

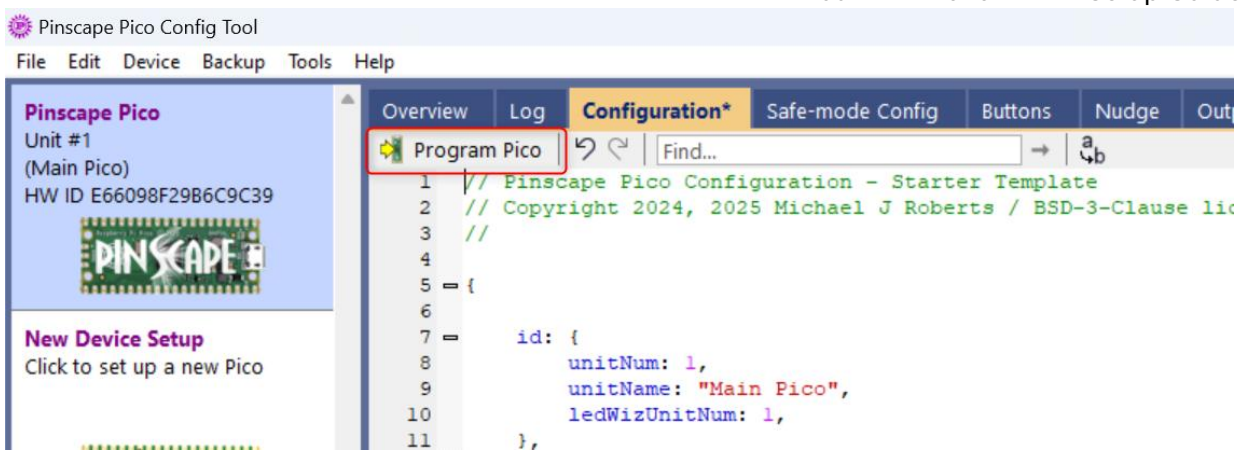

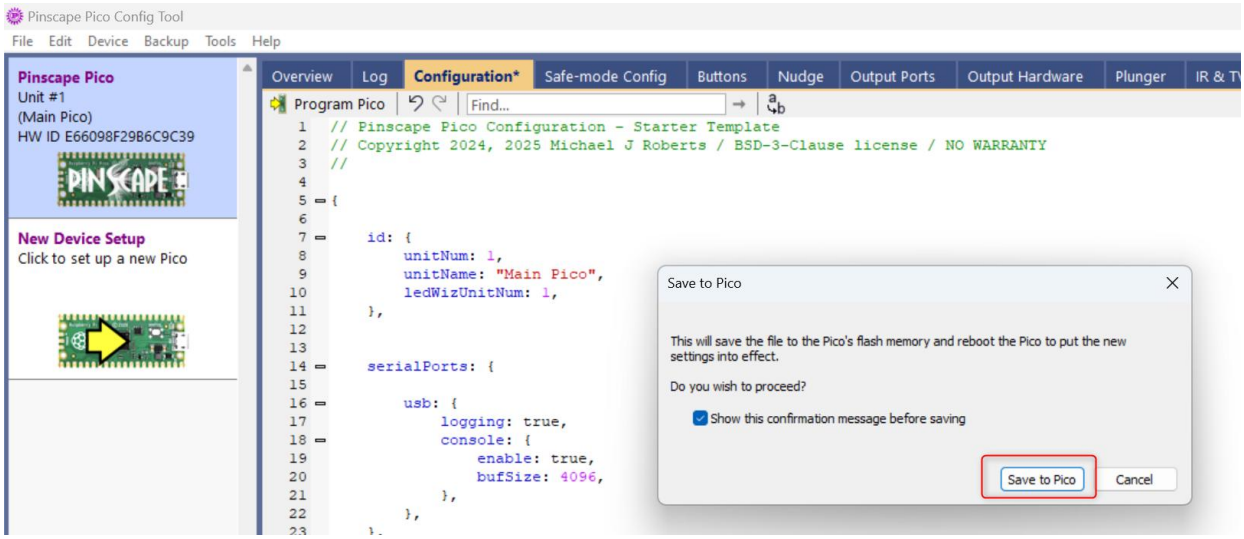

Pico will now reboot and you're ready to go!

IMPORTANT NOTE: Use only Wired profiles (**profiles-Wired** folder of the redist). Wireless VirtuaTilt profiles (VTConfig-USB-... and VTConfig-BT-...) are not compatible with Wired VirtuaTilt.


NOTE: For additional info on how to modify configuration profiles, always refer to official reference:

http://mjrnet.org/pinscape/PinscapePico/Help/JSONConfigRef.htm

Change Solenoids Strength

One of the new features of VirtuaTilt is the option to adjust strength for left and right flippers solenoids!

In the **Configuration** tab jump to **outputs** section and modify following values (**suggested range is 200 as min and 255 as max**):

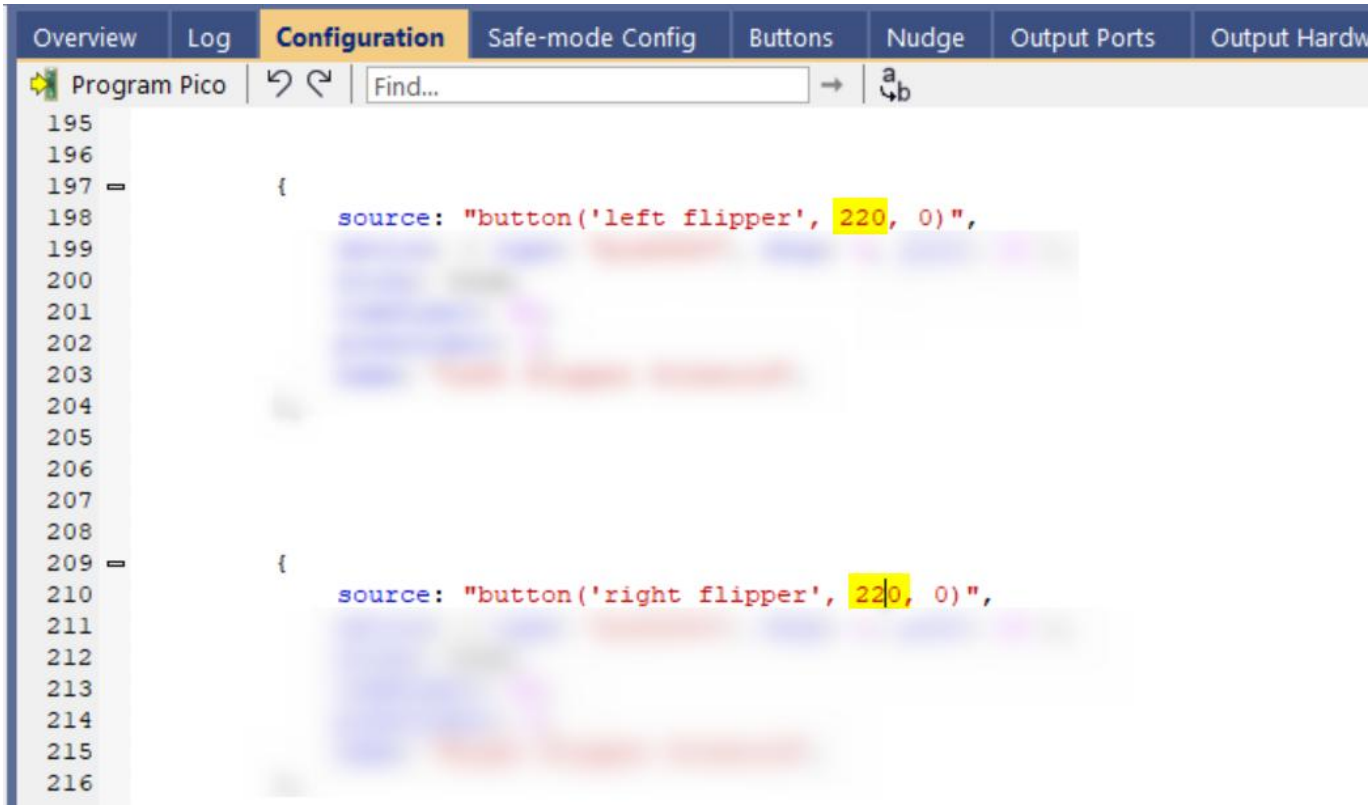

After modifications click on '**Program Pico**' and confirm saving.

NOTE: **It's perfectly safe to modify values outside the suggested range** (**0** is the min value and **255** is the max value). You won't go into any issue and you won't blow any fuse because protection timers come in and avoid overheating of devices, but below 200 it's almost useless to have a solenoid (you don't feel the kick anymore). If you need to mute all feedback devices, use **Nightmode** button instead.


Accelerometer Noise Calibration


Accelerometer readings always have some random fluctuations in the readings, even when the device is perfect still and you're not doing jumping jacks next to it. Accelerometer noise comes from a combination of ambient vibrations that the accelerometer picks up from its environment and internal imperfections as the device converts the vibrations it senses into an electronic signal. There's a certain baseline amount of noise endemic to any given device that you can't get rid of, no matter how much foam cushioning you pack around the chip.

Some devices are inherently noisier than others, which is what the noise calibration feature is all about. The Pinscape Pico firmware tries to determine when the cabinet is motionless, to determine if it's a good time to auto-center the readings, by watching for periods with a small amount of jiggle in the readings. The problem is that some devices have more random jiggles when at rest than others, so it's hard to come up with a one-size-fits-all threshold for what constitutes a period of motionless readings.

The **Calibrate** button runs a calibration to get a baseline noise level for your specific device. This customizes the threshold that the auto-centering mechanism uses according to the observed characteristics of your accelerometer.


Clicking the Calibrate button starts the calibration process on the device, which runs for about 15 seconds. During the calibration, Pinscape Pico collects statistics on the incoming raw readings. At the end of the period, it uses the statistics collected over the calibration period to set the new "quiet" thresholds, based on the standard deviation of the readings collected on each axis over the calibration period.

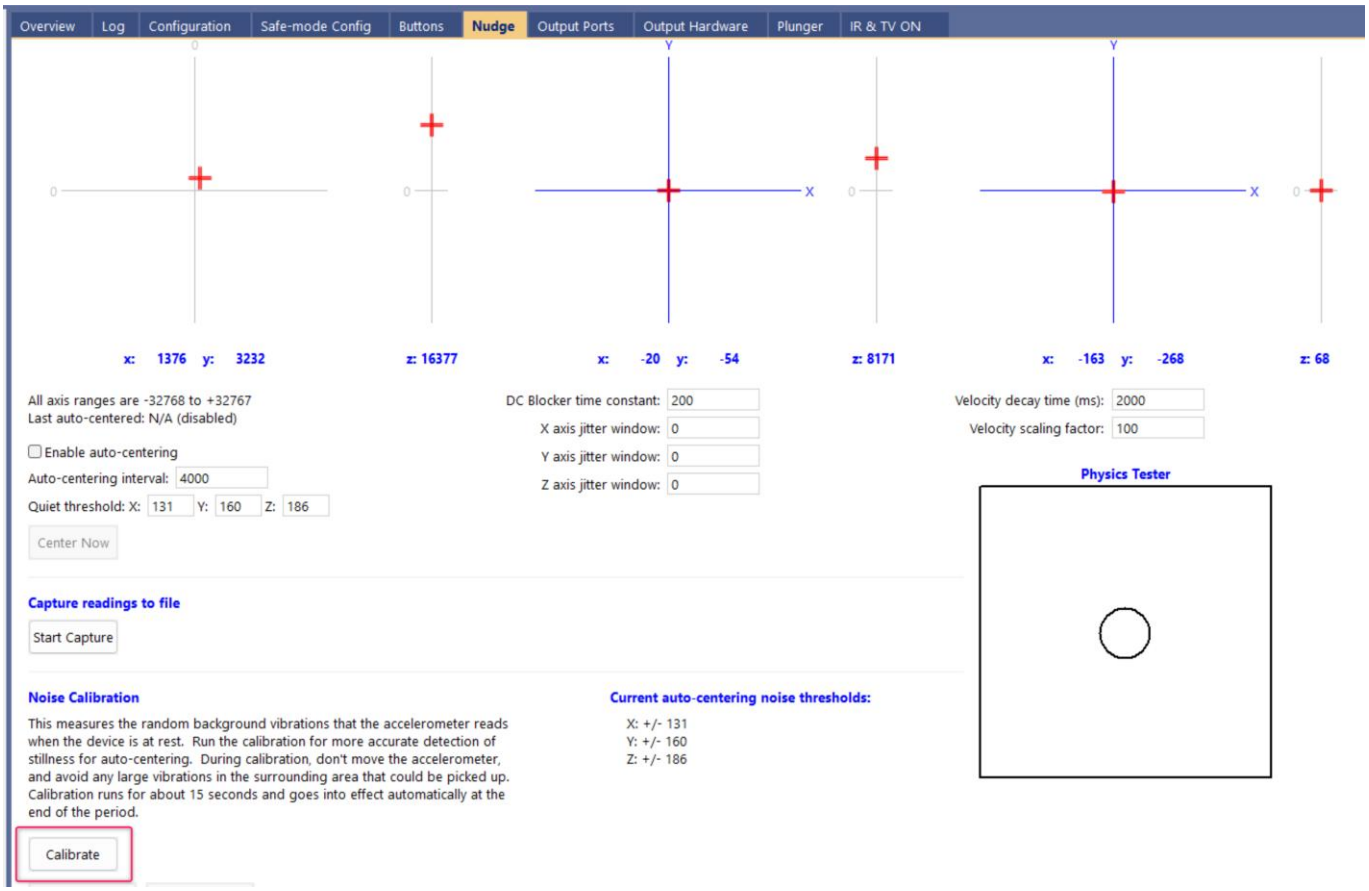

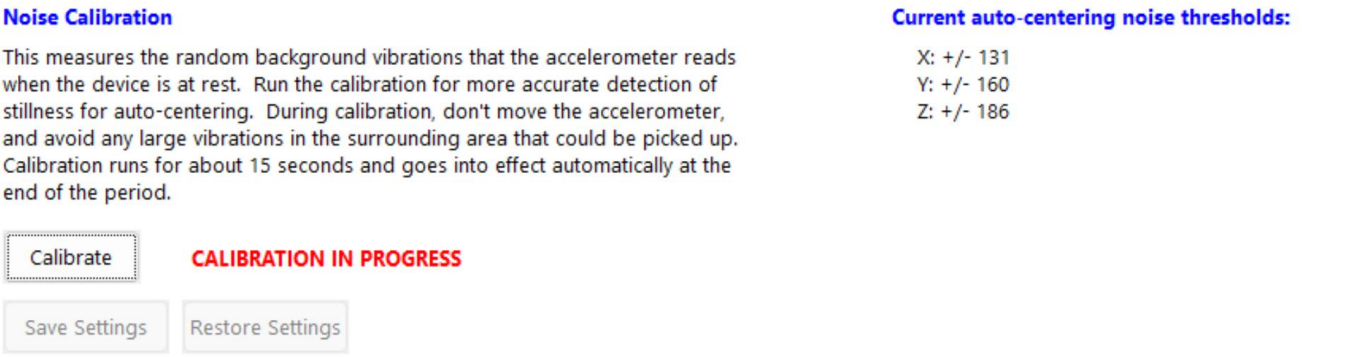


There's nothing special you have to do during the calibration process, other than leaving the accelerometer undisturbed. Don't move the device or cause any major vibrations nearby. The point is to gather statistics on the normal background vibration level that the device picks up when you're not actively trying to jiggle the VirtuaTilt. Note that you shouldn't do anything special to make it extra-quiet during calibration; just let the device measure the normal background level that would be in effect during normal use.

Click on **Save Settings** when done:

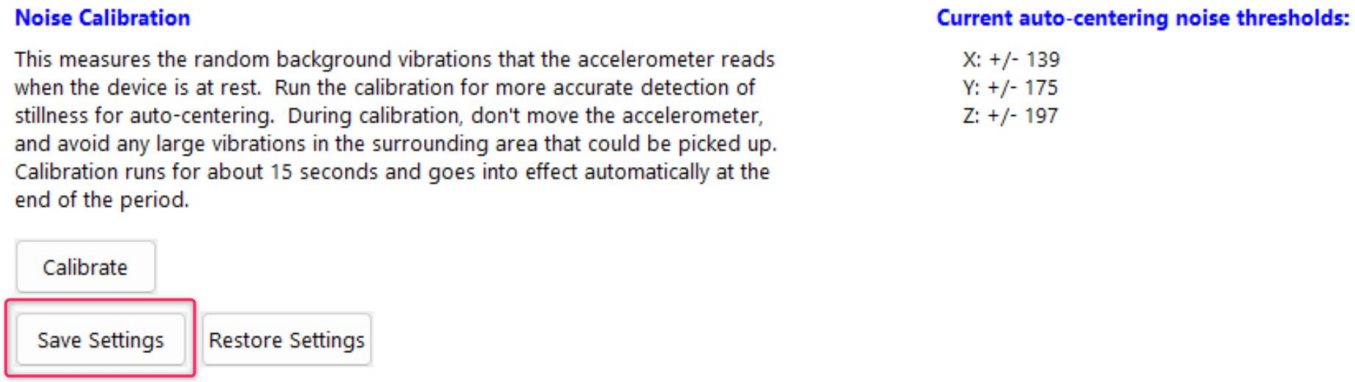


Accelerometer Tuning

VERY IMPORTANT NOTE: You need to find your right settings (according to your personal preferences) for nudging. You can adjust both Pinscape Pico accelerometer settings and your VP game settings until you find your perfect spot:

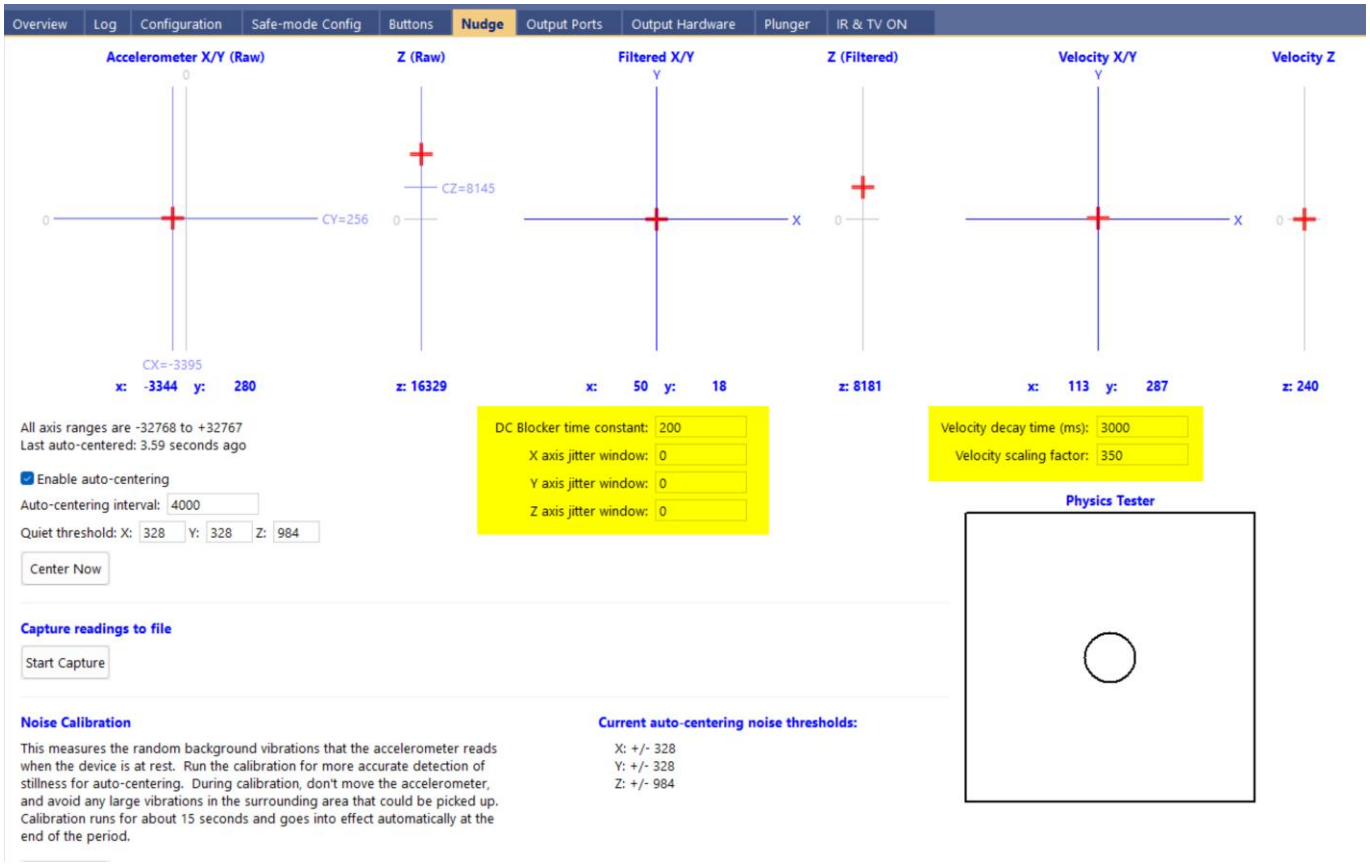


You can also increase accelerometer sensitivity by changing **gRange** value to **2** in any profile:

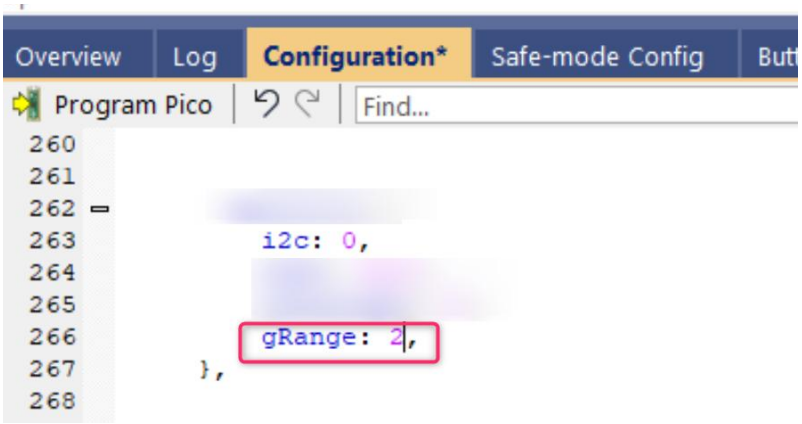


Please refer to the official Pinscape Pico reference for additional information about accelerometer parameters: http://mjrnet.org/pinscape/PinscapePico/Help/NudgeWin.htm

Plunger Calibration

VirtuaTilt's plunger comes already calibrated, but if you need/want to calibrate it again just go to Plunger tab, press **Calibrate** button and follow the instructions:

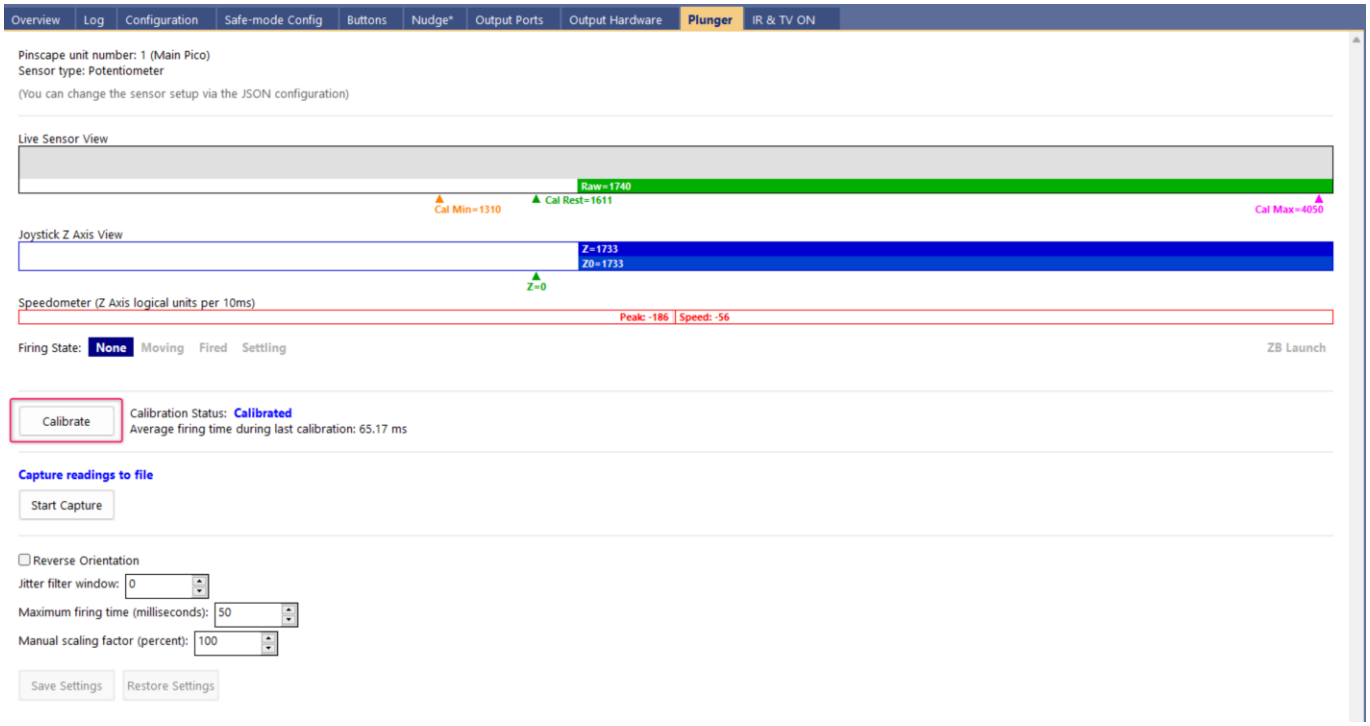

After the procedure is completed, click on **Save Settings**:

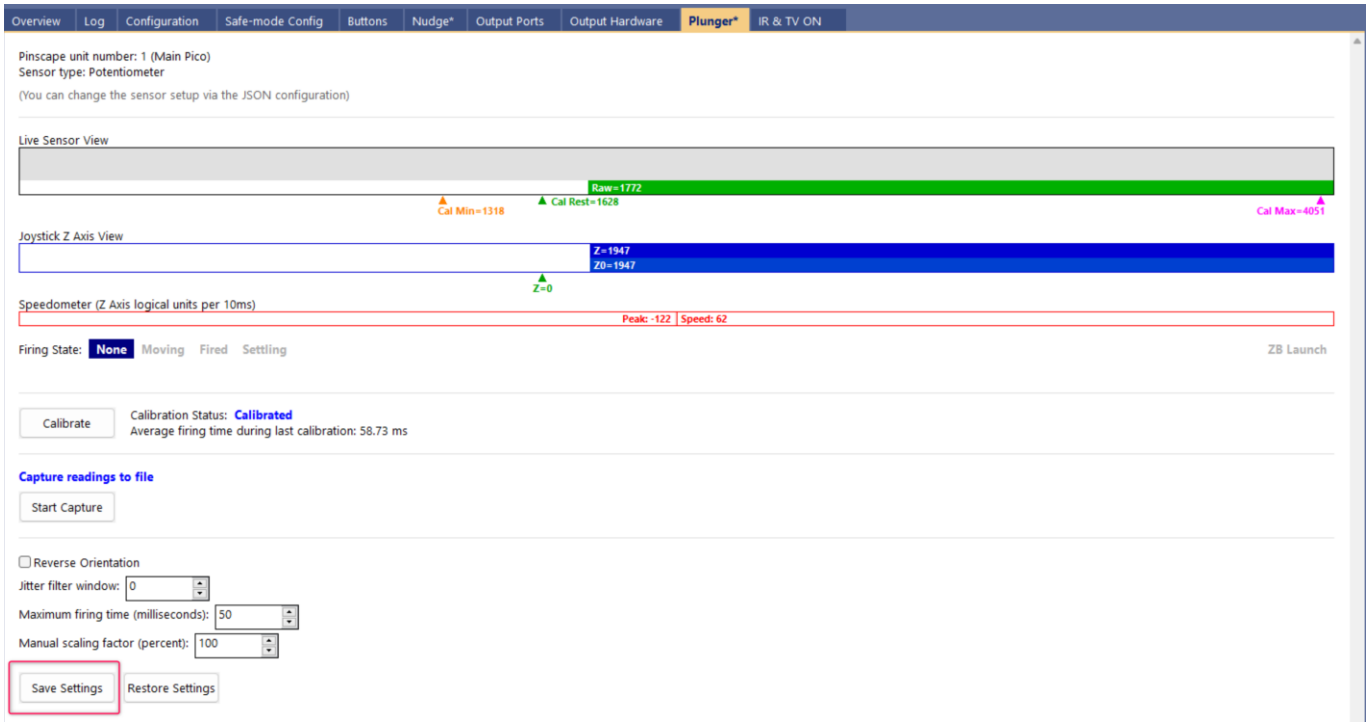


For additional information about Pinscape Pico plunger setup, please refer to official reference:

http://mjrnet.org/pinscape/PinscapePico/Help/PlungerCal.htm


Output Ports Testers

- **Output Port Tester:** this tool lets you exercise the DOF output ports, to help troubleshoot any devices that aren't working.

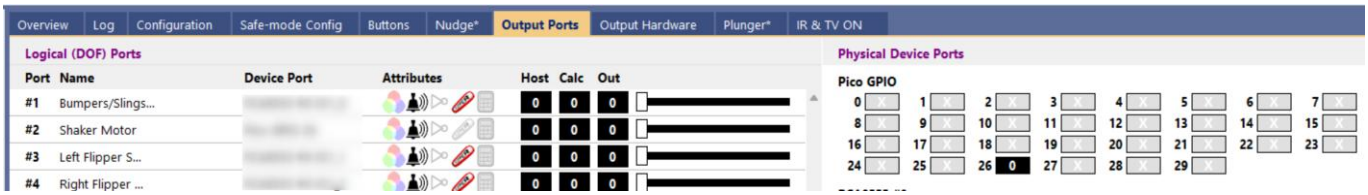

- **Output Hardware Tester:** this is a lower-level output tester tool that accesses the physical output ports directly, bypassing the DOF port assignments and going directly to the GPIO ports and external peripheral chips.

WARNING! Flipper Logic timers are disabled when this view is active. Exercise caution with solenoids, because they could overheat if activated for long intervals, since the normal protective timers can't intervene in this mode. When you activate a device port in this mode, it will remain activated until you manually turn it back off. We're not responsible if you blow some fuses or damage feedback devices.

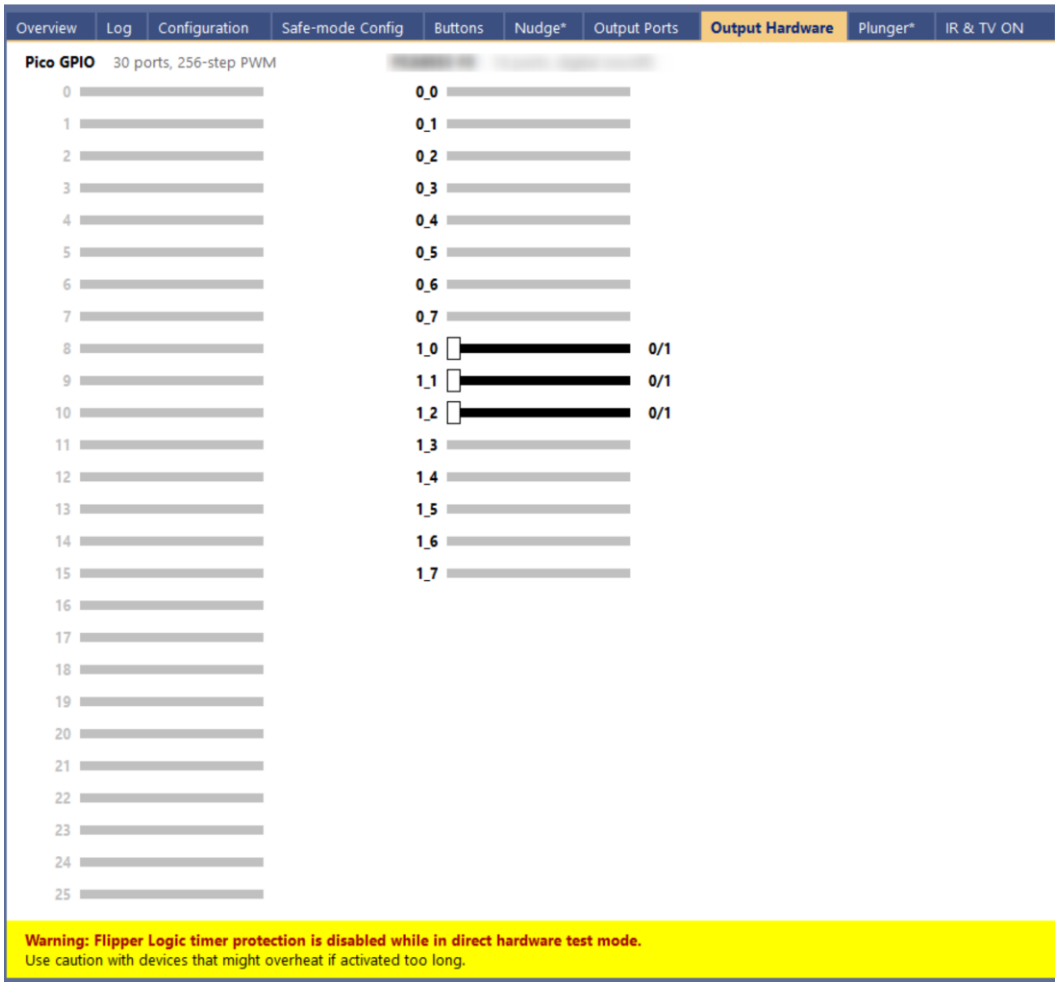


Xbox Drivers Installation

From VirtuaTilt firmware **v8.0.20**, **Xbox drivers manual installation is not required anymore**: Windows automatically recognizes VirtuaTilt as **Xbox 360 Controller for Windows**. You just need to:

- Load/Import the **X-Input profile** in Configuration Tool (**VTConfig-STEAM-XInput_v1.X.json**)
- Save the new configuration to the Pico (**Configuration→Program Pico**) so that it reboots with the new settings in effect

Check now in Config Tool-->**Buttons** tab that Xbox controller is now active (not greyed-out):

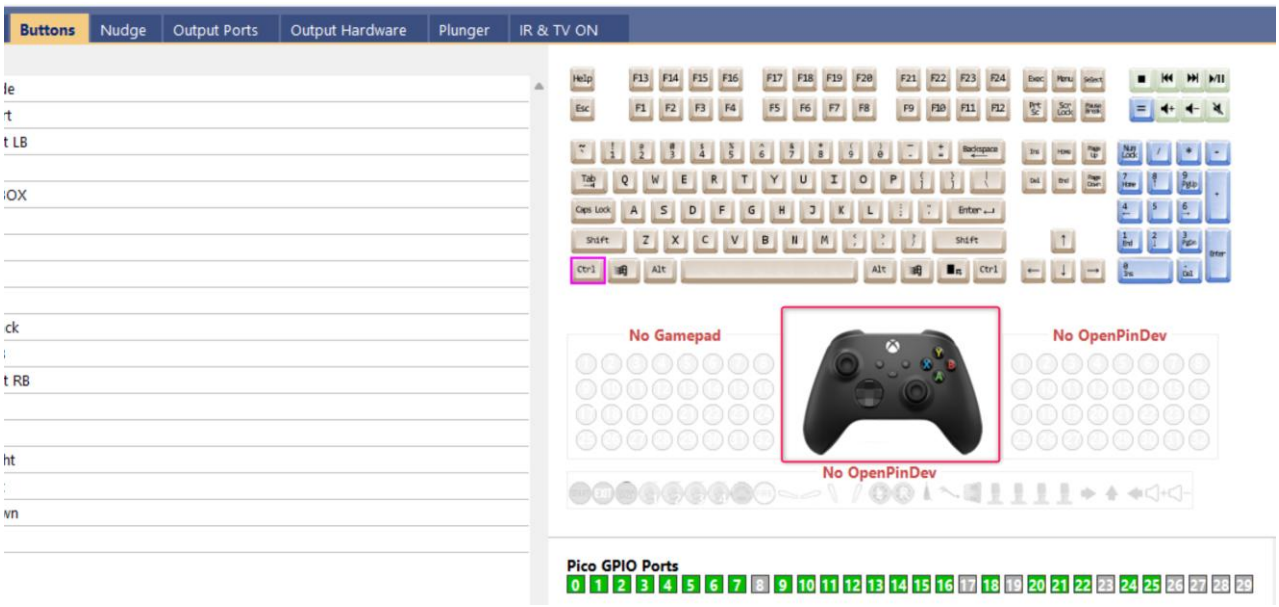

If Xbox controller is still greyed-out, make sure that VirtuaTilt firmware **v8.0.20** (or later) is installed (see **Appendix A**), then unplug and plug again the USB cable.

NOTE: **if you already installed Xbox drivers manually with an older firmware, you don't need to do anything**.


Troubleshooting Tips

- If you experience USB 3.0 ports disconnecting and reconnecting, **change to an USB 2.0 port directly connected to your PC motherboard (rear ports)**, instead of using front PC ports (connected to motherboard via cable).


Appendix A: Firmware Update

Your VirtuaTilt comes with latest **VirtuaTilt** firmware already installed. To update firmware, download latest **VirtuaTilt Wired redist** from our Gdrive share folder, then unblock .zip file and extract it to a new folder.

Open **GUIConfigTool** from **tools\GUIConfigTool** folder, drag and drop **PinscapePico.uf2** from **firmware** folder onto the Update Firmware area. **Actual configuration profile will not be affected by the update.**

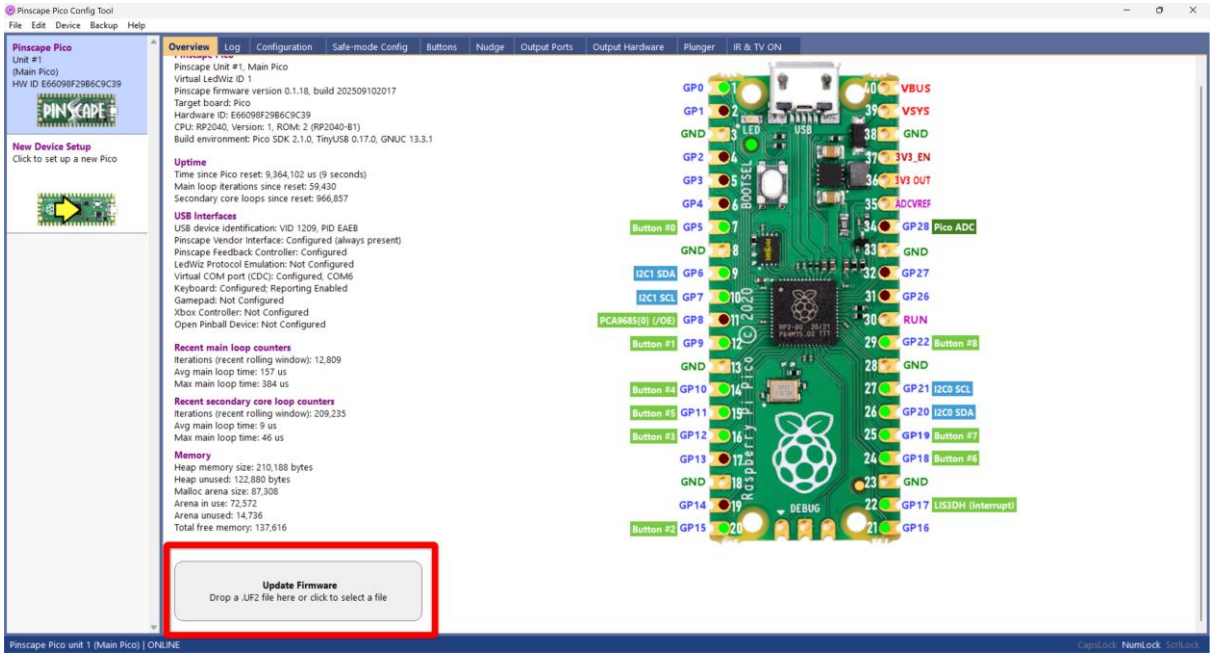



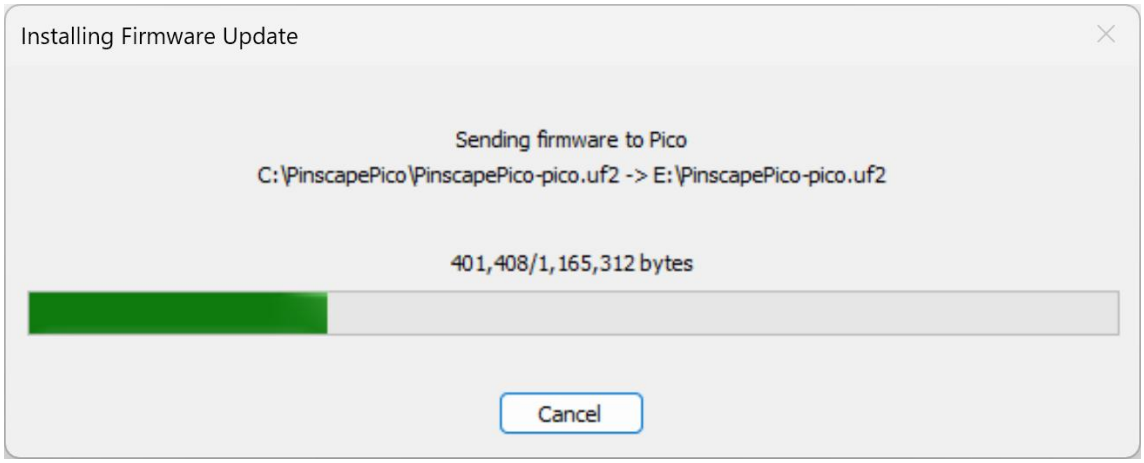


IMPORTANT NOTE: Do not install official Pinscape Pico firmware releases: they don't include VirtuaTilt features. After the update, **Overview** tab shows **Firmware status: up to date**.


Appendix B: Use VirtuaTilt without DOF/DOFLinx


One of the main features of the new VirtuaTilt is the possibility to use it without going into DOF/DOFLinx configurations and benefit of feedback from solenoids and shaker motor, as well as analog plunger and accelerometer nudging. Just Plug&Play !

The **XInput mode** is used in Pinscape Pico firmware to achieve that.


What you need to do is load **VTConfig-STEAM-XInput_v1.X.json** profile in **Pinscape Pico Config Tool** :

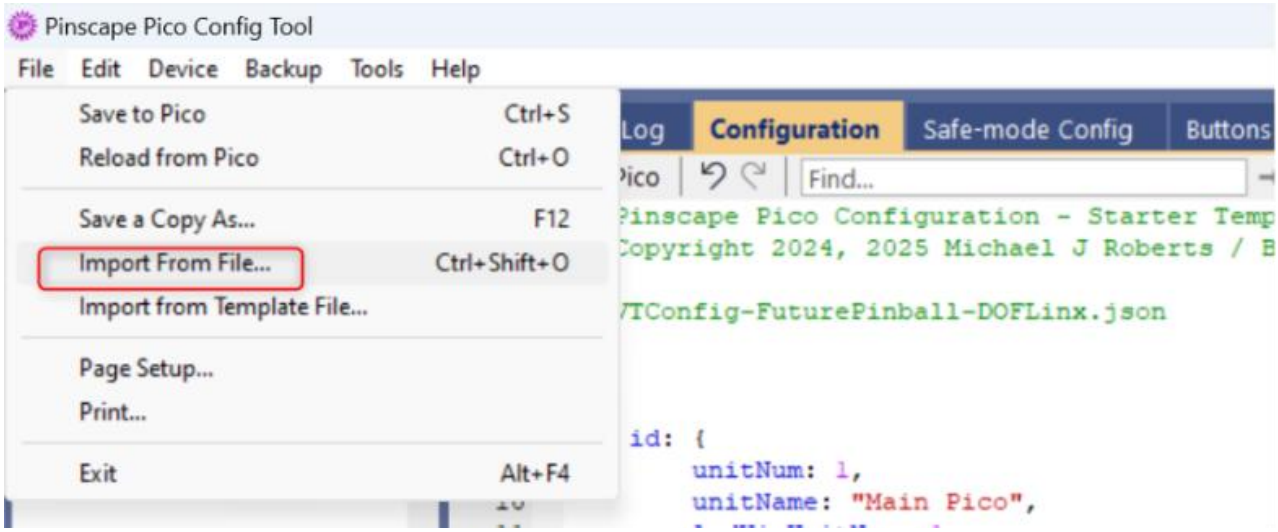

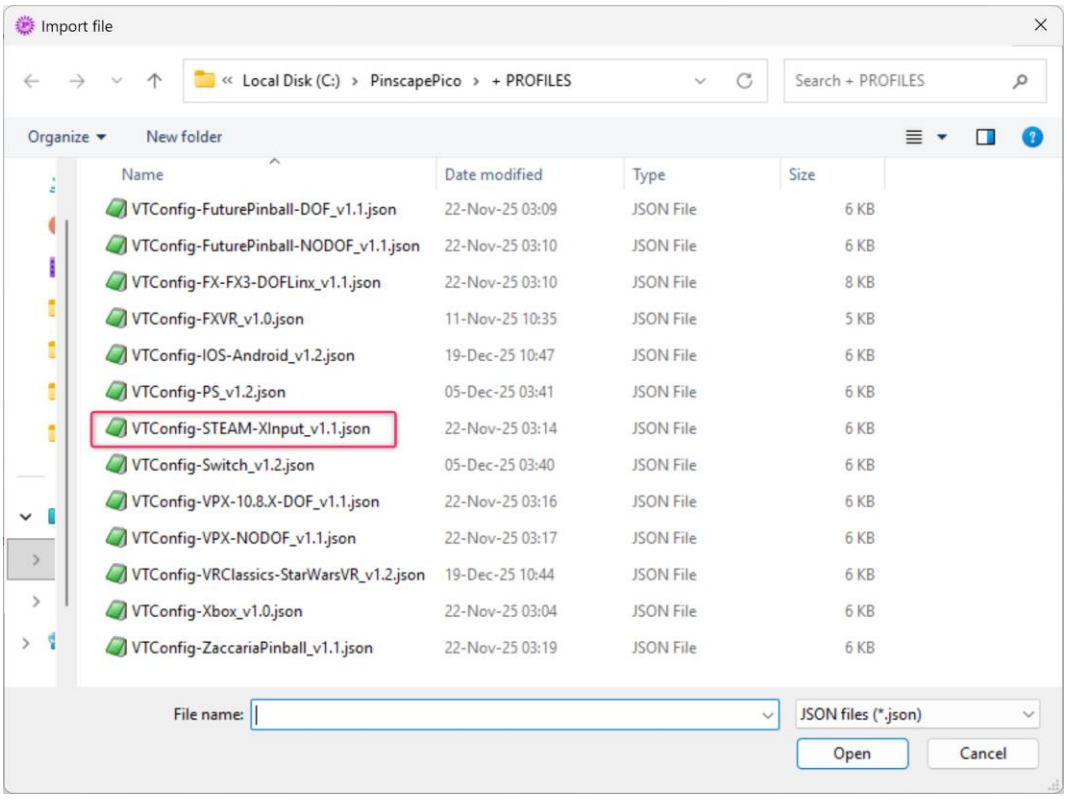


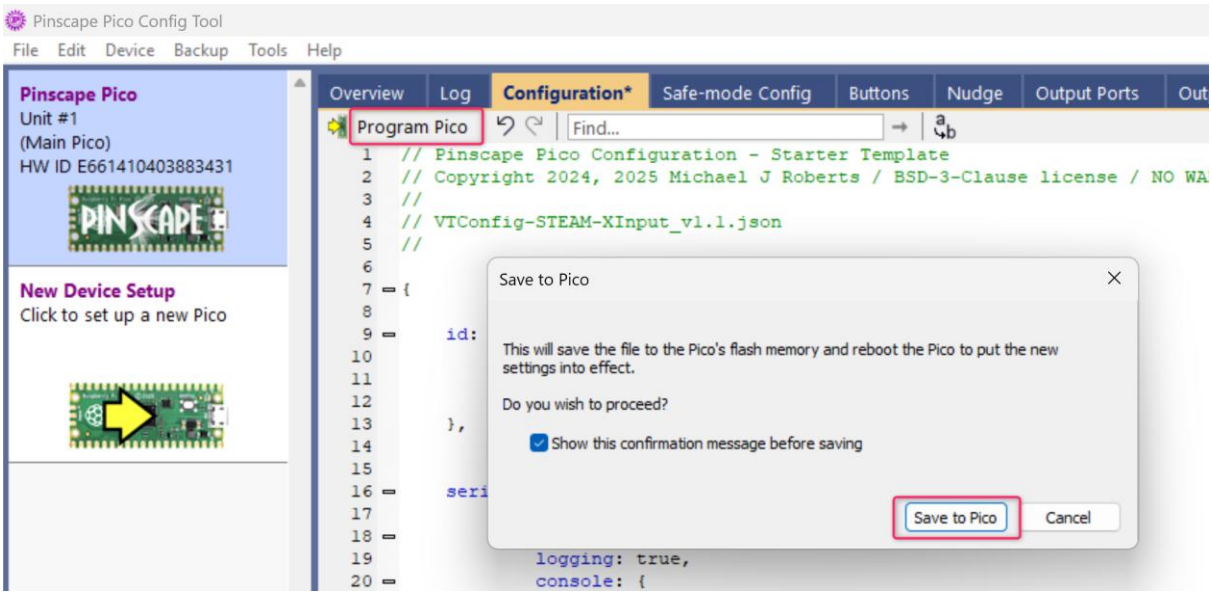

Start **Steam** and go to **Settings → Controller**

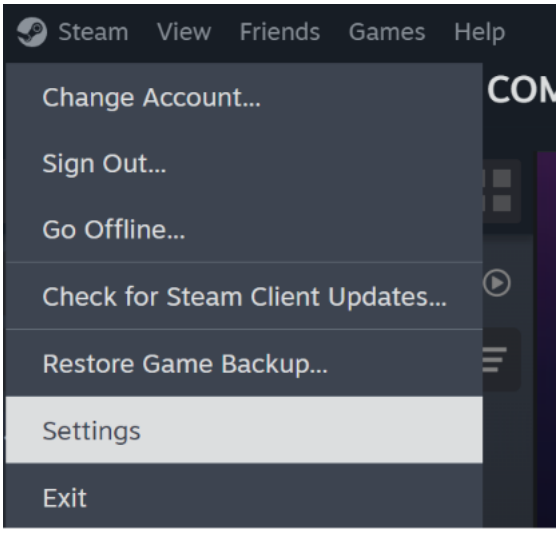

Disable everything under "External Gamepad Settings" with the except of "**Enable Steam Input for Xbox controllers**" and "**Game rumble**":

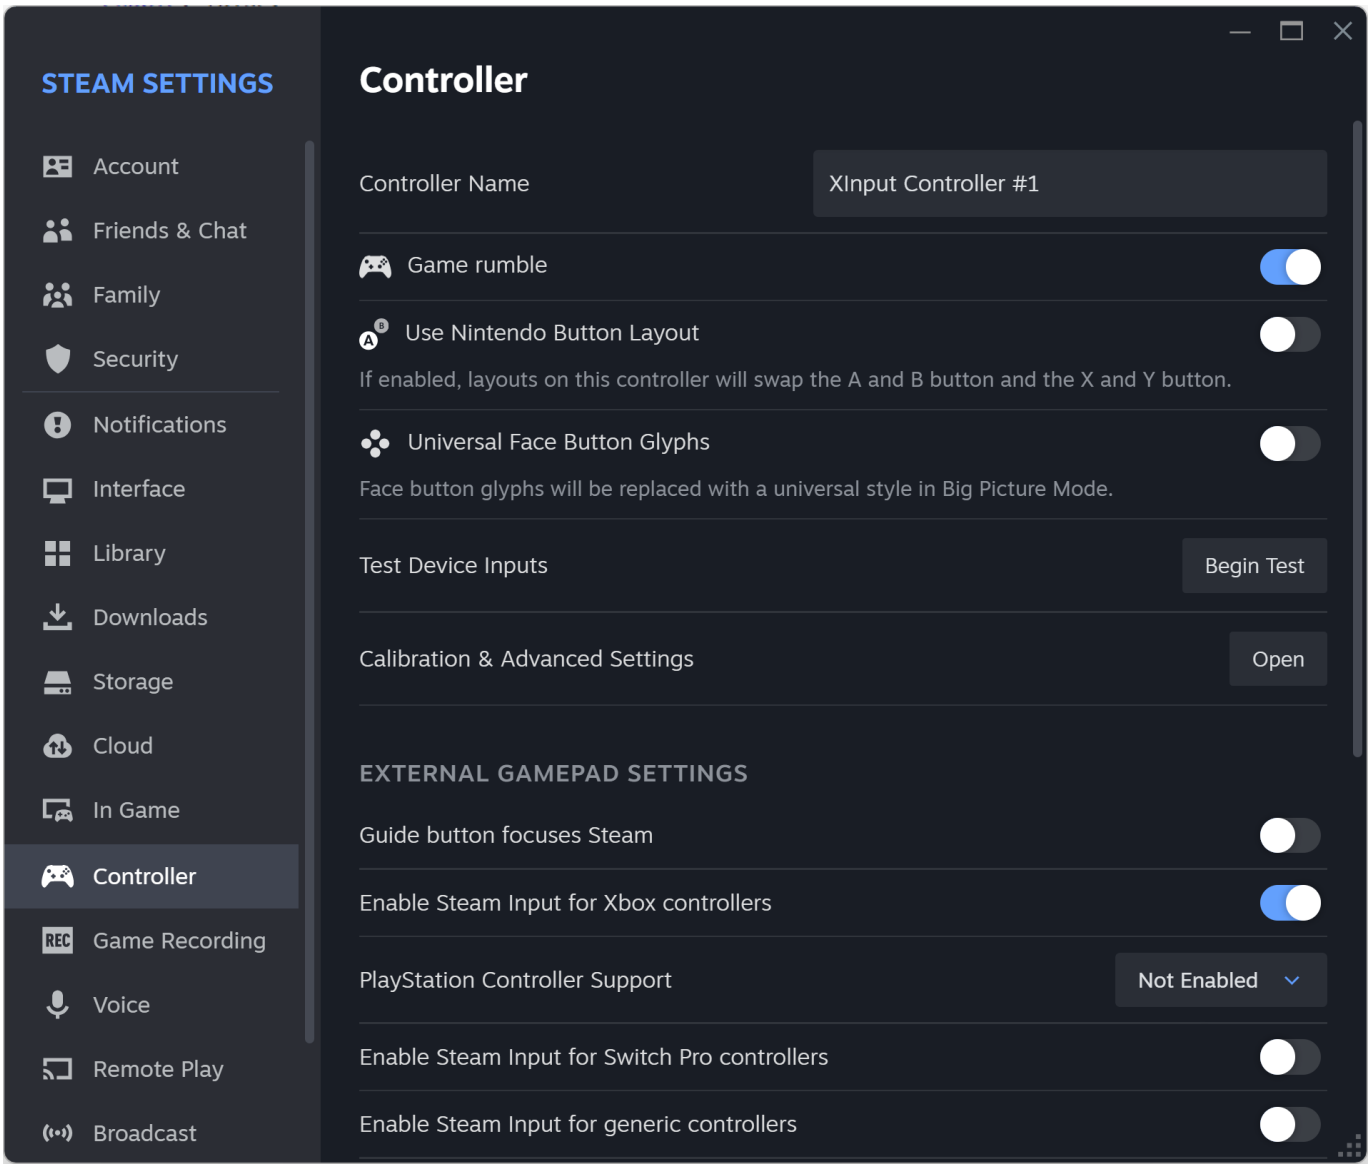

That's it! Launch your favorite Virtual Pinball game and have fun.

NOTE: Xbox drivers installation is not required anymore with VirtuaTilt firmware v8.0.20 (see Xbox Drivers Installation chapter).

Appendix C: VirtuaTilt Compatibility Matrix

VP EMULATOR / GAME	DOF/DOFLINX	X-INPUT	FEEDBACKS	NUDGE	PLUNGER
Visual Pinball X (PC)	YES	YES	YES	YES	YES
Future Pinball (PC)	YES	YES	YES	YES	YES
Pinball FX (PC - Steam)	YES	YES	YES	YES	YES
Pinball FX Classic (PC - Steam)	YES	YES	YES	YES	YES
Pinball M (PC - Steam)	YES	YES	YES	YES	YES
Zaccaria Pinball (PC - Steam)	N/A	YES	YES	With Buttons	YES
The Pinball Arcade (PC - Steam)	N/A	YES	YES	YES	YES
Infected Mushroom (PC -Steam)	YES	YES	YES	YES	YES
Pinball FX VR (Meta Quest)	N/A	N/A	YES	YES	YES
Pinball VR Classic (Meta Quest)	N/A	YES	YES	YES	YES
Star Wars Pinball VR (Meta Quest)	N/A	YES	YES	YES	YES
Visual Pinball X (IOS/Android)	N/A	YES	YES	YES	YES

Appendix D: Profiles to load into Pinscape Pico Config Tool


VP EMULATOR / GAME	PROFILE
Visual Pinball X (PC)	VTConfig-VPX-10.8.X-DOF_v1.x.json or VTConfig-VPX-NODOF_v1.x.json
Future Pinball (PC)	VTConfig-FuturePinball-DOF_v1.x.json or VTConfig-FuturePinball-NODOF_v1.x.json
Pinball FX (PC - Steam)	VTConfig-FX-FXClassic-IMPinball-PinballM-DOFLinx_v1.x.json or VTConfig-STEAM-XInput_v1.x.json
Pinball FX Classic (PC - Steam)	VTConfig-FX-FXClassic-IMPinball-PinballM-DOFLinx_v1.x.json or VTConfig-STEAM-XInput_v1.x.json
Pinball M (PC - Steam)	VTConfig-FX-FXClassic-IMPinball-PinballM-DOFLinx_v1.x.json or VTConfig-STEAM-XInput_v1.x.json
The Pinball Arcade (PC - Steam)	VTConfig-STEAM-XInput_v1.x.json
Zaccaria Pinball (PC - Steam)	VTConfig-ZaccariaPinball_v1.x.json
Infected Mushroom (PC - Steam)	VTConfig-FX-FXClassic-IMPinball-PinballM-DOFLinx_v1.x.json or VTConfig-STEAM-XInput_v1.x.json
Pinball FX VR (Meta Quest)	VTConfig-FXVR_XAM_v1.x.json
Pinball VR Classic (Meta Quest)	VTConfig-VRClassics-StarWarsVR_v1.x.json
Star Wars Pinball VR (Meta Quest)	VTConfig-VRClassics-StarWarsVR_v1.x.json
Visual Pinball X (IOS/Android)	VTConfig-IOS-Android_v1.x.json
Xbox (USB dongle)	VTConfig-Xbox_v1.x.json
PlayStation (USB dongle)	VTConfig-PS_v1.x.json
Nintendo Switch (USB dongle)	VTConfig-Switch_v1.x.json
Nintendo Switch 2 / Switch (direct USB)	VTConfig-Switch2_v1.x.json

Appendix E: How to open the VirtuaTilt box

Remove side profiles screws (left and right):



Slide-out plastic profiles (left and right):

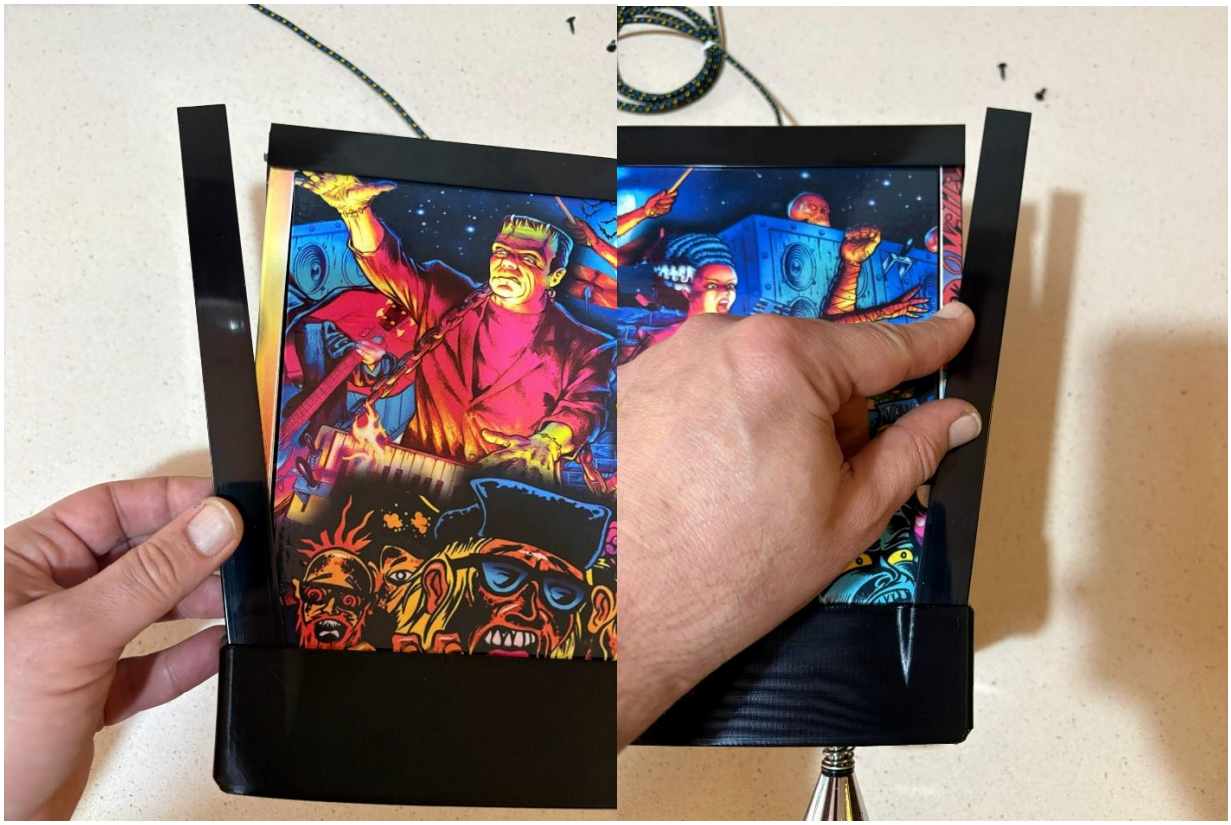


Remove wood panels screws (left and right):




Lift-up carefully the lockbar; top-plate is attached to it:



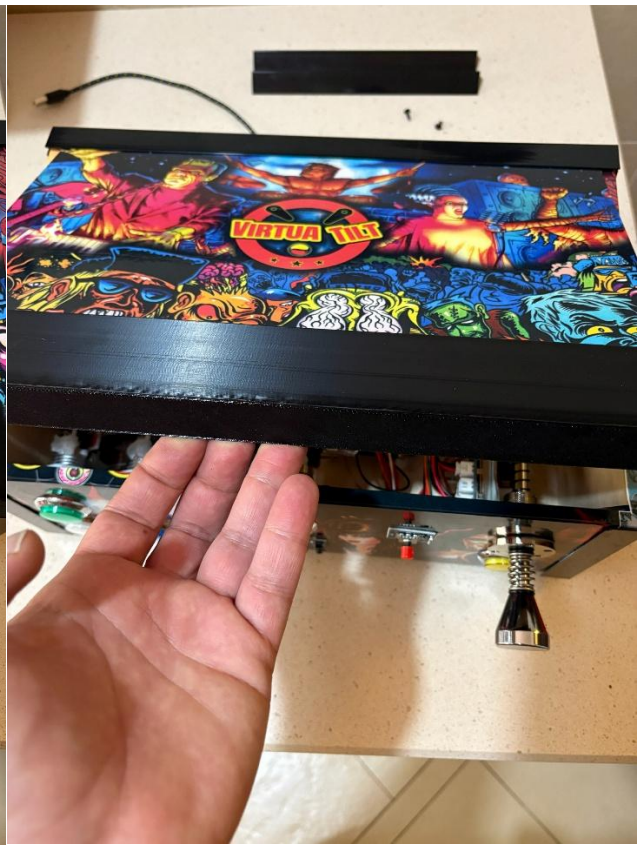

That’s it. Enjoy!