⚠ IMPORTANT — Support Scope

3DPTronics supports the VirtuaTilt controller hardware only. This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

☑ Officially supported

Component	Coverage
🎮 **VirtuaTilt controller**	Wired and Wireless editions, all hardware components
💾 **VirtuaTilt firmware**	Updates and recovery via GUIConfigTool
📋 **Bundled profiles**	All Wired profiles shipped in the redist
⚙ **GUIConfigTool**	Configuration, calibration, profile loading, output testing
🔧 **Wireless Kit**	Wireless hardware kit for existing VirtuaTilt owners
📦 **Accessories**	Anything shipped directly by 3DPTronics

❌ Not supported

Category	Examples	Where to get help
🎲 **VP Game engines**	VPX, Visual Pinball, Future Pinball, BAM	VPForums · VP Universe
🕹 **VP titles**	Pinball FX / FX2 / FX Classic / VR / M, etc.	Zen Studios support
💥 **Feedback frameworks**	DOF (Direct Output Framework), DOFLinx	DOF on GitHub · DOFLinx wiki
🎨 **DMD / extras**	DMDExt, PinEvent V2, PuP-Packs / PUP-Stream	VP Universe
🚀 **Frontends**	PinUP Popper, Baller Installer, etc.	Popper forum
🎬 **Emulators / ROMs**	MAME, pinball ROMs	MAMEdev
💻 **System-level**	Windows, GPU/audio drivers, USB controllers	Microsoft / vendor support

🌐 Community help for software

Project	Community
Visual Pinball X	vpforums.org · vpuniverse.com
Future Pinball + BAM	VPU Future Pinball forum
Future Pinball + BAM AIO	VPU file 14807 — FP+BAM Essentials AIO
DOF	github.com/DirectOutput/DirectOutput
DOFLinx	doflinx.github.io/docs
Pinball FX family	Zen Studios Support
PinUP Popper	VPU PinUP Popper forum
MAME	mamedev.org

💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.

VIRTUATILT – Switch SETUP GUIDE


Following some basic instructions to set up your new VirtuaTilt for Switch systems.


IMPORTANT NOTE: You need a proper USB dongle (not provided and not supported) to make VirtuaTilt compatible with above devices. If you connect directly, it won't be recognized as a controller.

NOTE: To connect VirtuaTilt directly to Switch 2 / Switch (without dongle), use VTConfig-Switch2_v1.X.json profile (see **Direct USB Connection** chapter).


Load Profile

Load **VTConfig-Switch_v1.X.json** profile in **Pinscape Pico Config Tool:**

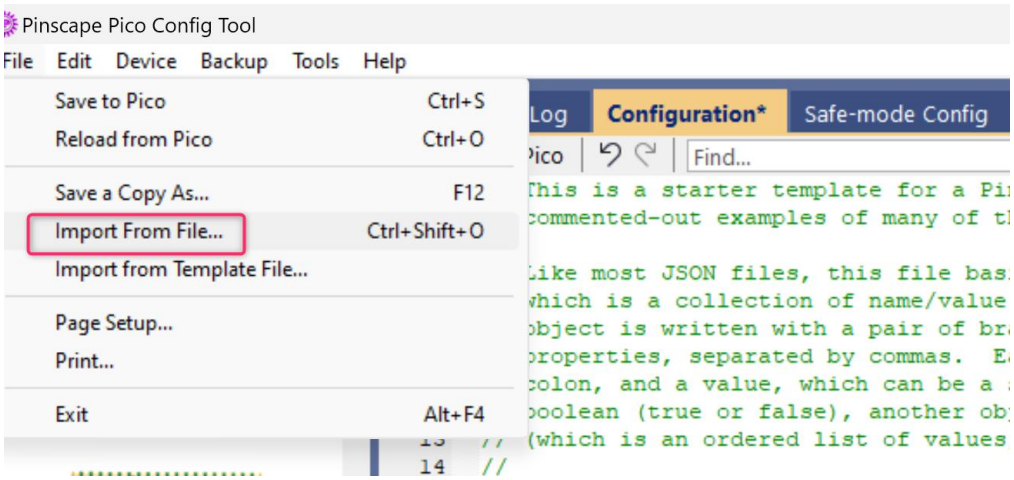


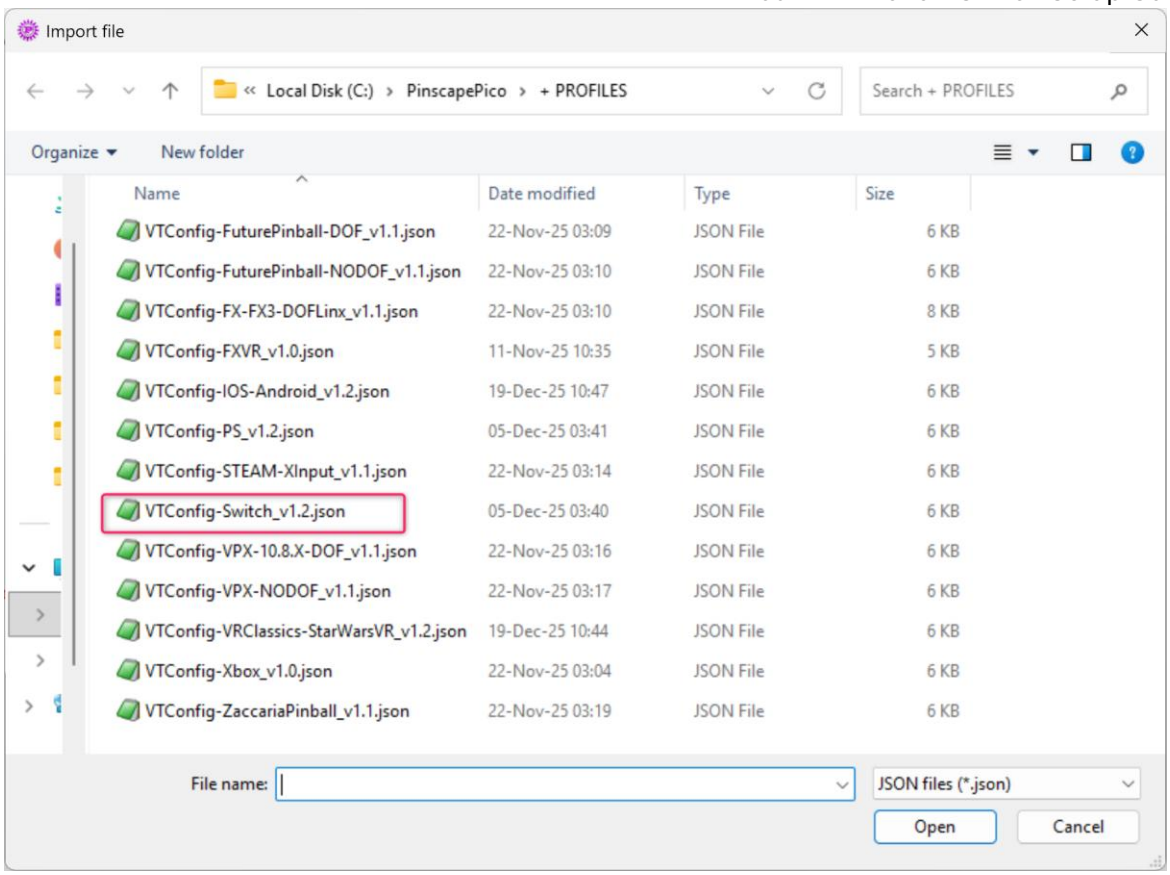


Click on "**Program Pico**" to save new configuration:

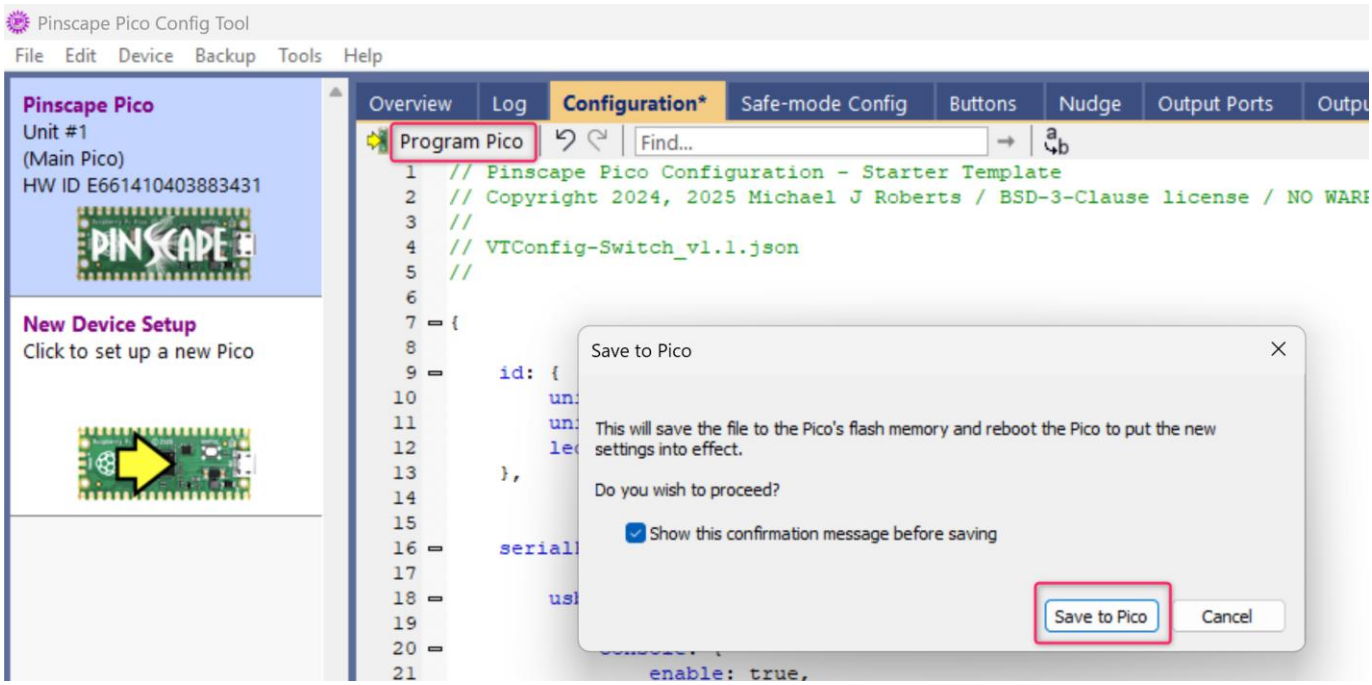


NOTE: Once this profile is loaded, Pico will go offline because the Windows X-Input device driver now is claiming exclusive access to the device, preventing anyone from seeing its other USB interfaces:

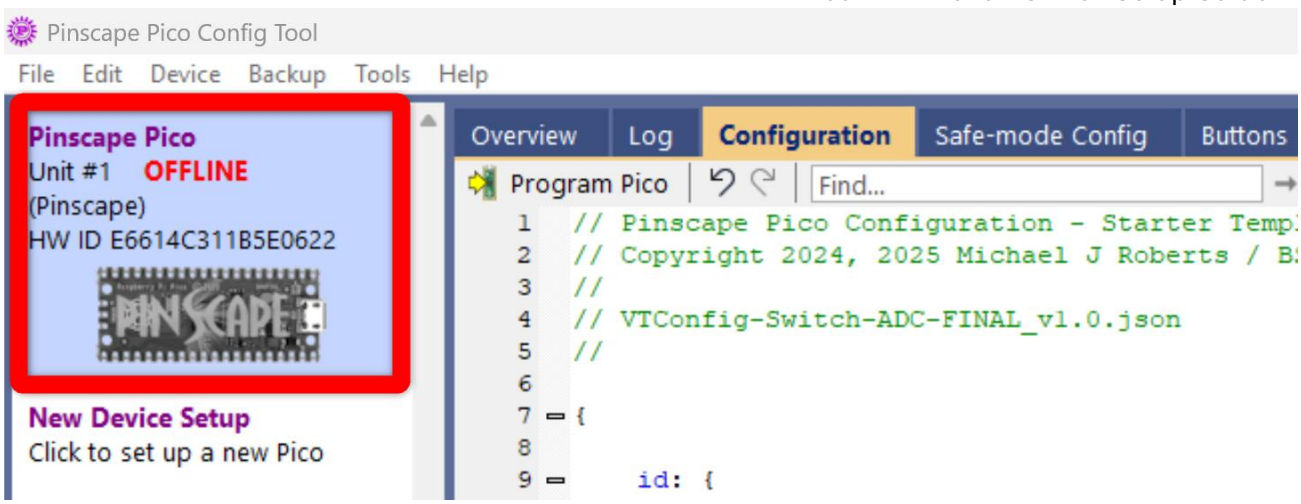
Pinscape Pico Config Tool
File Edit Device Backup Tools Help
Pinscape Pico
Unit #1 OFFLINE
(Pinscape)
HW ID E6614C311B5E0622
New Device Setup
Click to set up a new Pico
Overview Log Configuration Safe-mode Config Buttons
Program Pico
Find...
// Pinscape Pico Configuration - Starter Temp
// Copyright 2024, 2025 Michael J Roberts / B
//
// VTConfig-Switch-ADC-FINAL_v1.0.json
//
{
id: {

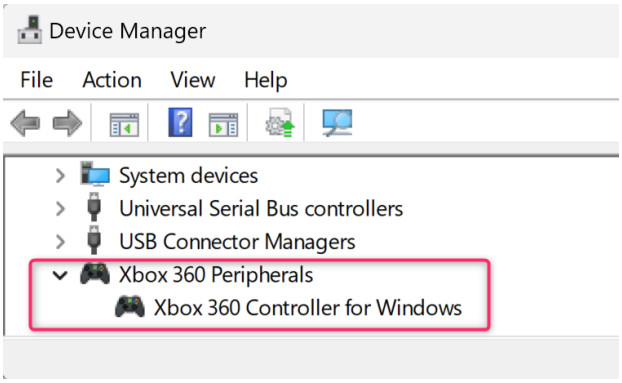

Device Manager
File Action View Help
System devices
Universal Serial Bus controllers
USB Connector Managers
Xbox 360 Peripherals
Xbox 360 Controller for Windows

System/Games Settings

Select the following option in **System Settings → Controllers & Accessories**:

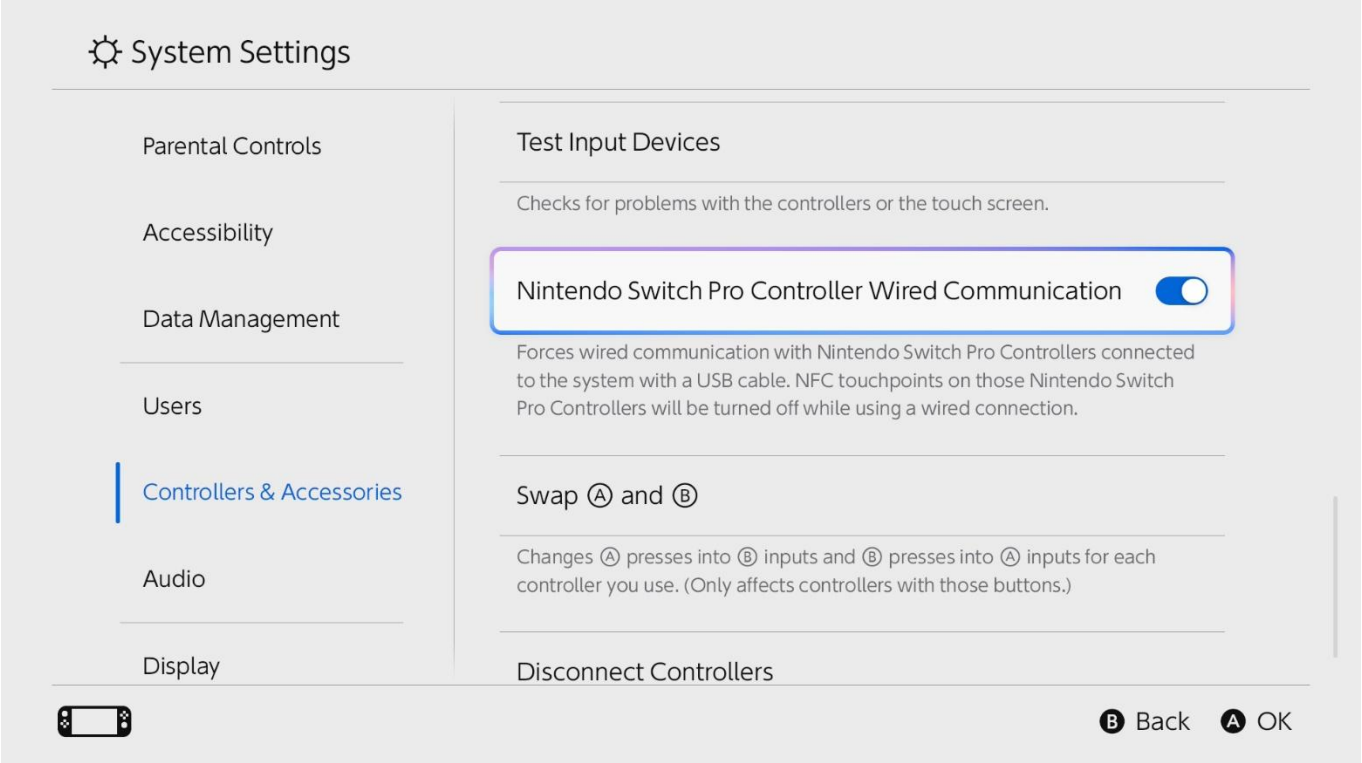


PinballFX 3 settings:

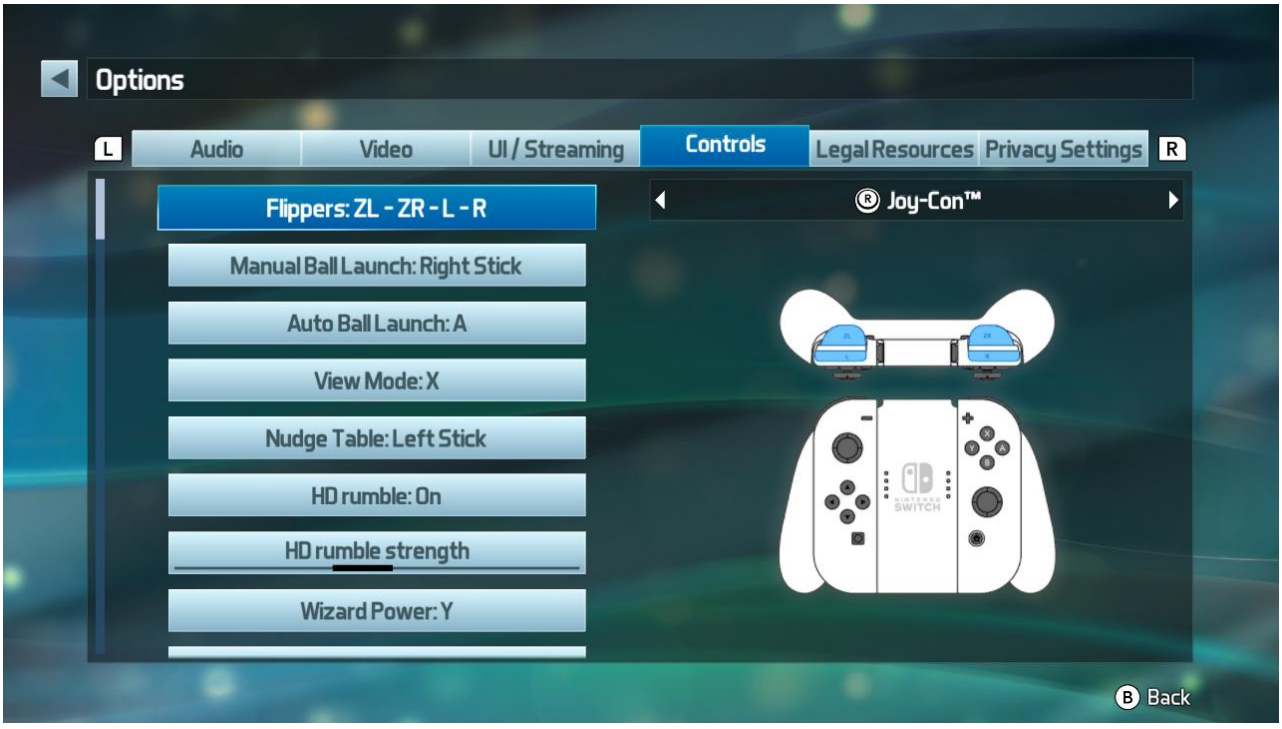


PinballFX settings:



Pinball M settings:

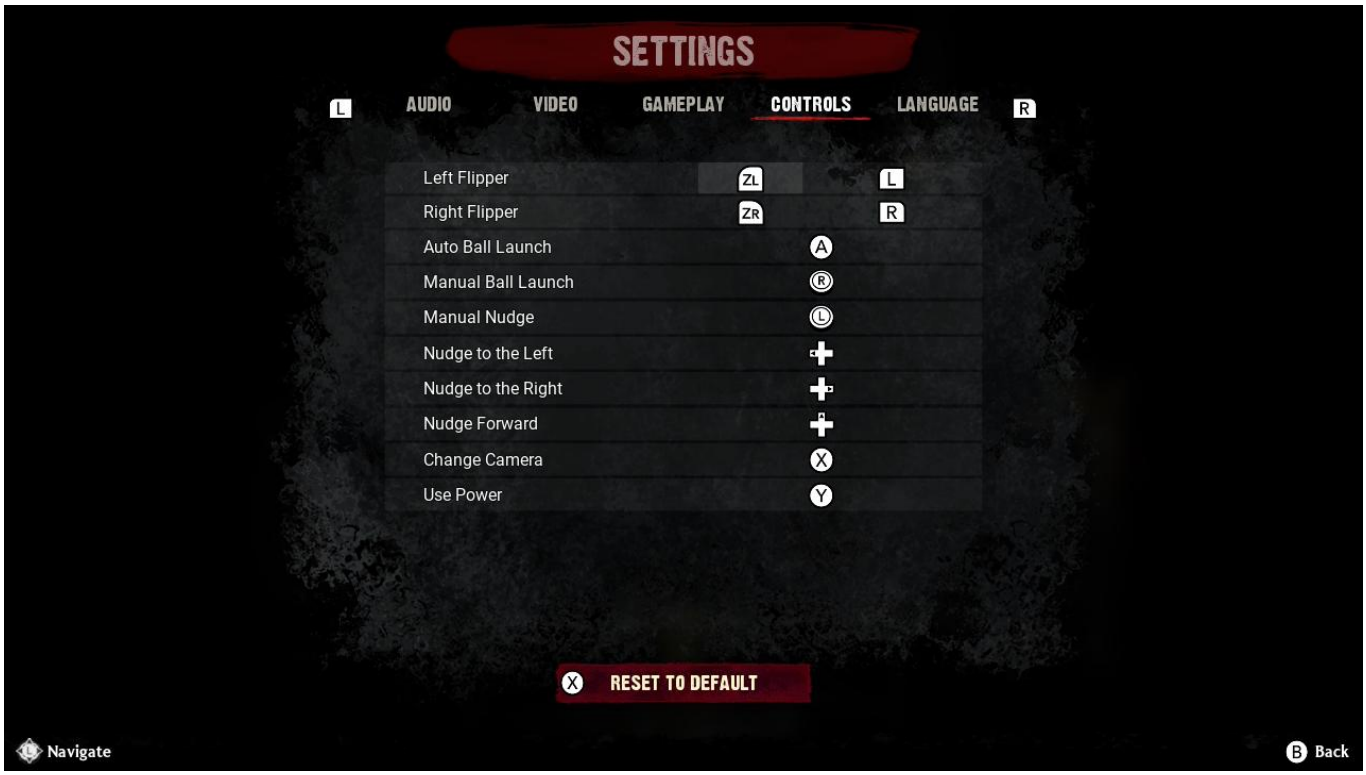


The Pinball Arcade settings:

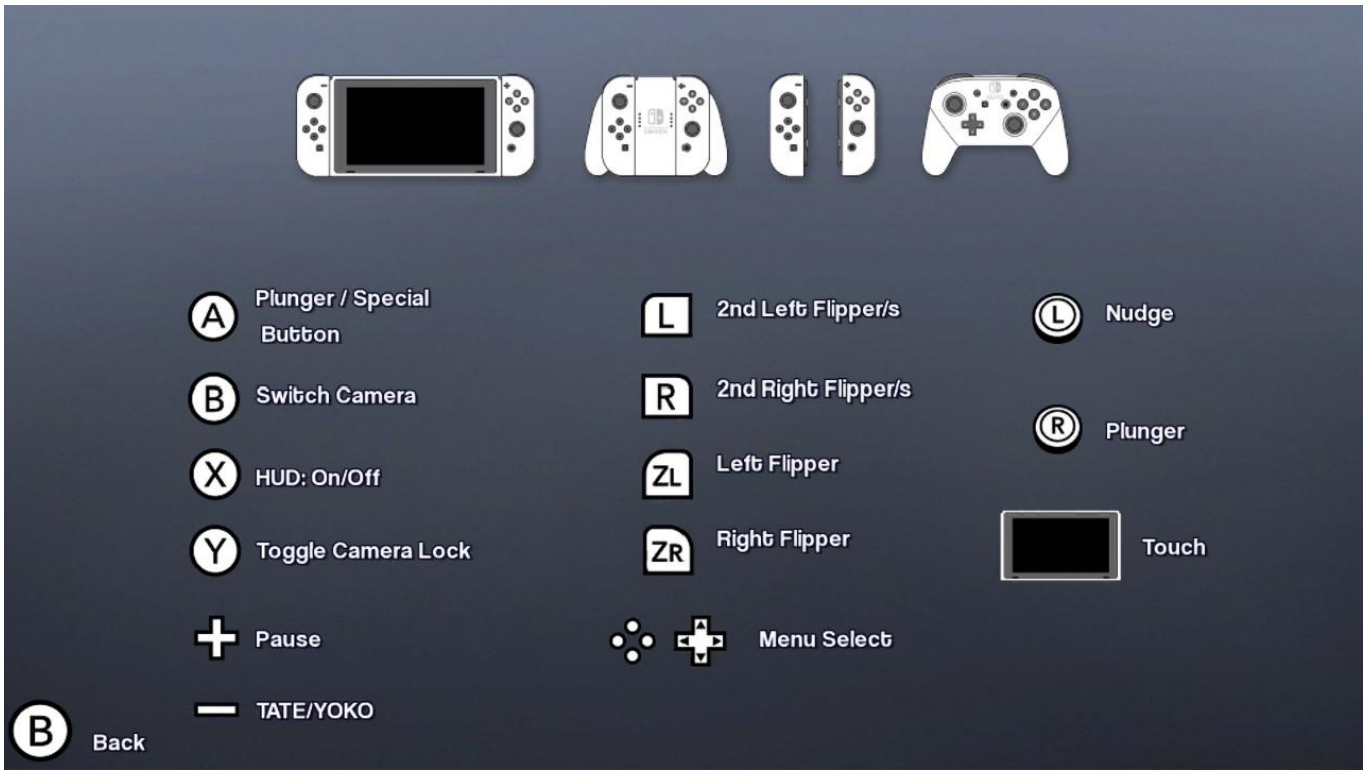


Restore Profile


To load/restore a different profile keep **VirtuaTilt's Reset button** pressed for 2 seconds; device will reboot in **Factory mode**:

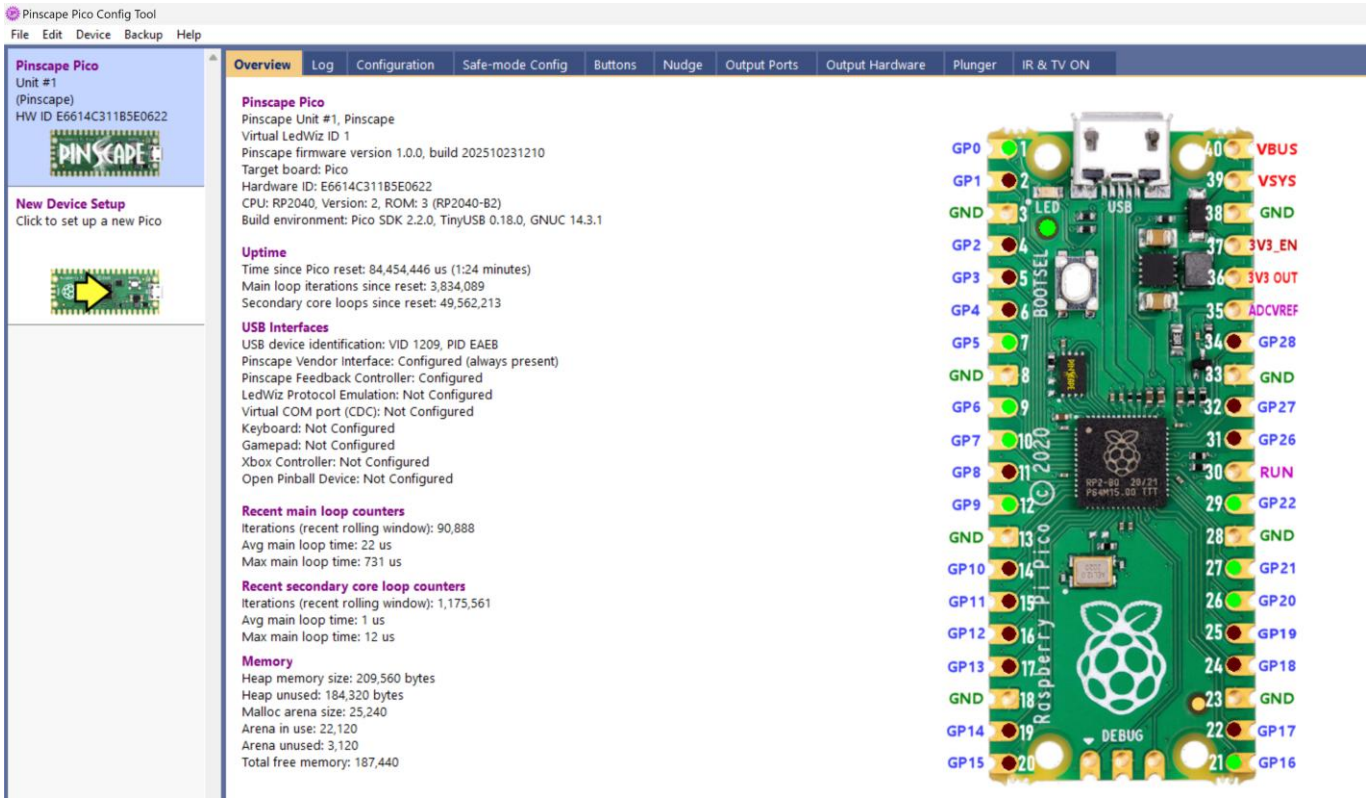


Go to **Configuration → File → Import From File** and choose the profile you need:

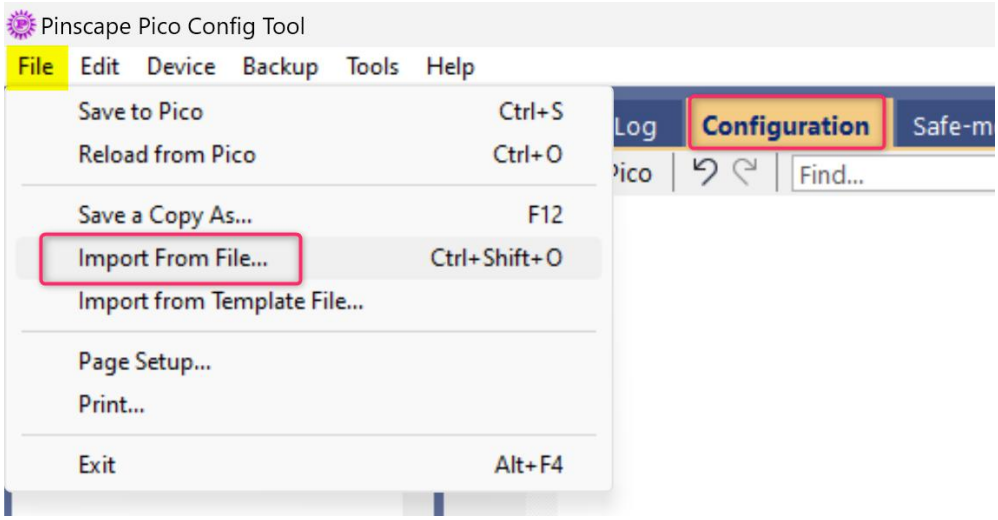

Click on "**Program Pico**" to save new configuration and you're done:

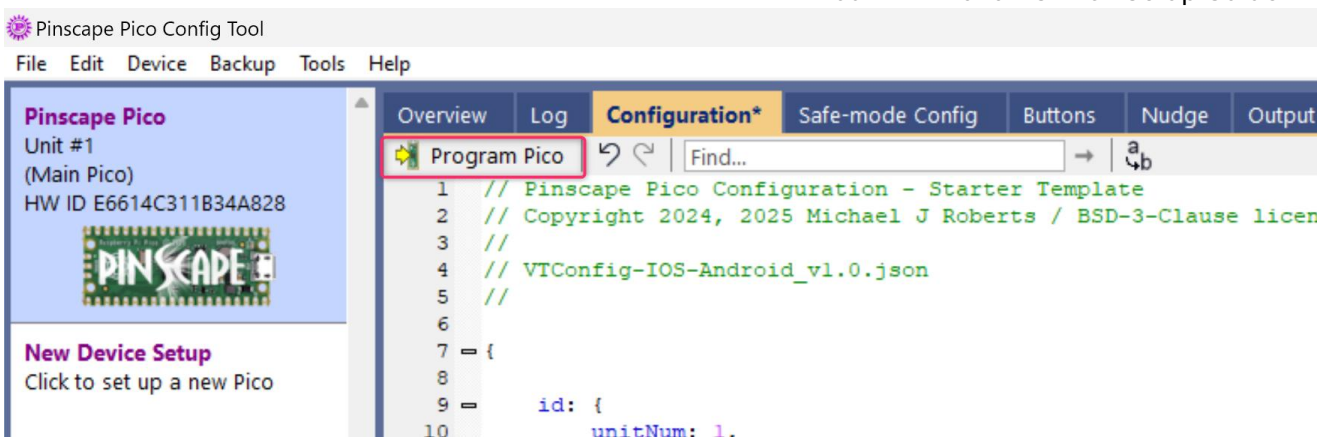

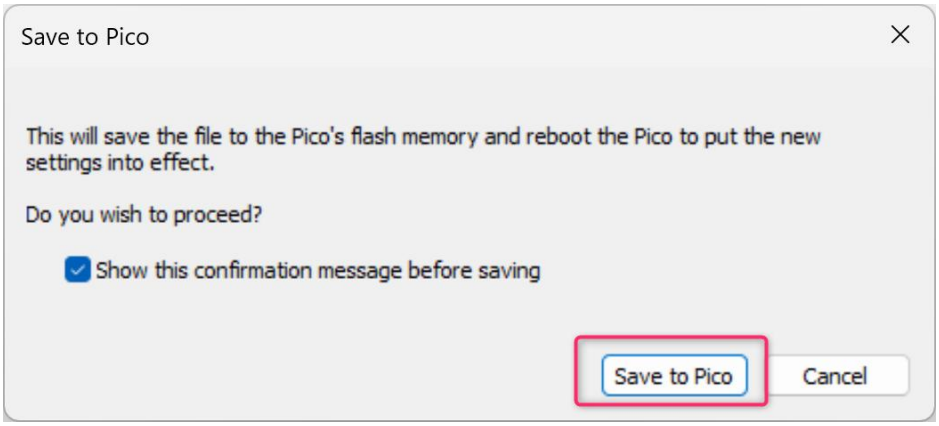


That's it, enjoy!

Default Buttons Mapping

This is the default buttons mapping for Switch profile. You can of course change assignments in Pinscape Pico Config Tool.



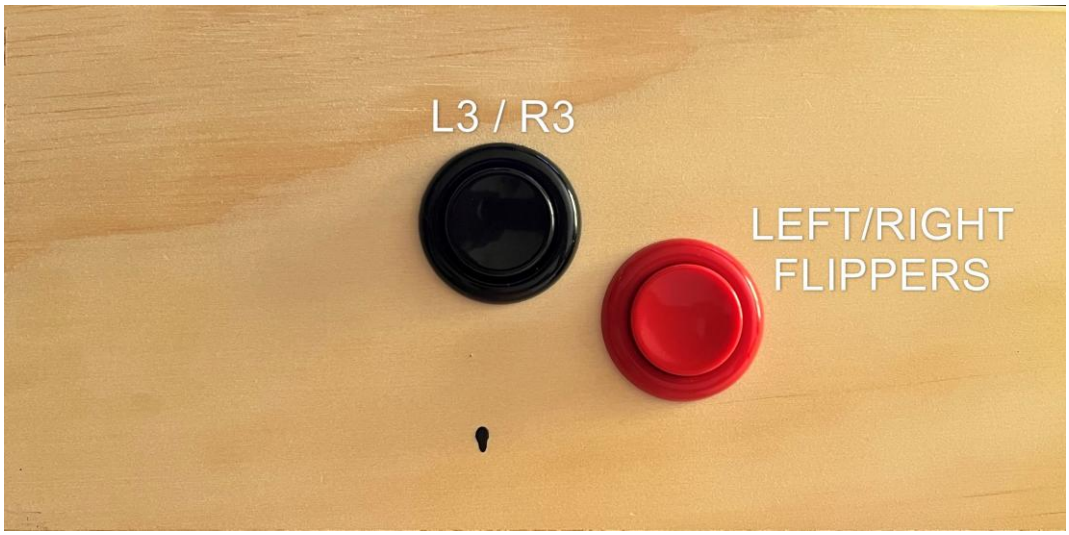

Direct USB Connection (Switch 2 / Switch)

With **VTConfig-Switch2_v1.X.json** profile VirtuaTilt is recognized as a **Nintendo Pro Controller**: no dongle needed! Just connect it to your Switch 2 (or Switch) dock with the USB cable.

VirtuaTilt firmware v8.0.20 (or later) is required (see **MAIN SETUP GUIDE – APPENDIX A**).

Load **VTConfig-Switch2_v1.X.json** profile in **Pinscape Pico Config Tool** and click on "**Program Pico**" (see **Load Profile** chapter).

NOTE: Once this profile is loaded, Pico will go offline. To load a different profile, keep VirtuaTilt's Reset button pressed for 2 seconds (see **Restore Profile** chapter).

NOTE: **Shaker motor is disabled in this profile**: its electrical noise can disconnect VirtuaTilt from the console. Flipper solenoids work as usual.

This is the default buttons mapping for Switch2 profile. You can of course change assignments in Pinscape Pico Config Tool.

VirtuaTilt	Switch 2 / Switch
Left / Right flippers	L / R (and ZL / ZR)
Red button (Exit)	A
Yellow button (Launch Ball)	A
Joystick press	A
Green button (Start)	B
Blue button (Extra Ball)	X
White button (Coin In)	Y
Center button (Fire)	HOME
Left / Right black buttons (MagnaSave)	Minus / Plus
Inside BACK / START buttons	Minus / Plus
Joystick	D-pad
Nudge	Left stick
Plunger	Right stick
Inside RESET button (2 seconds)	Factory mode
Inside NIGHTMODE button	Nightmode