## ⚠ IMPORTANT — Support Scope

**3DPTronics supports the VirtuaTilt controller hardware only.** This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

## ☑ Officially supported

| Component | Coverage |
|---|---|
| 🎮 **VirtuaTilt controller** | Wired and Wireless editions, all hardware components |
| 💾 **VirtuaTilt firmware** | Updates and recovery via GUIConfigTool |
| 📋 **Bundled profiles** | All Wired profiles shipped in the redist |
| ⚙ **GUIConfigTool** | Configuration, calibration, profile loading, output testing |
| 🔧 **Wireless Kit** | Wireless hardware kit for existing VirtuaTilt owners |
| 📦 **Accessories** | Anything shipped directly by 3DPTronics |

## ❌ Not supported

| Category | Examples | Where to get help |
|---|---|---|
| 🎲 **VP Game engines** | VPX, Visual Pinball, Future Pinball, BAM | VPForums · VP Universe |
| 🕹 **VP titles** | Pinball FX / FX2 / FX Classic / VR / M, etc. | Zen Studios support |
| 💥 **Feedback frameworks** | DOF (Direct Output Framework), DOFLinx | DOF on GitHub · DOFLinx wiki |
| 🎨 **DMD / extras** | DMDExt, PinEvent V2, PuP-Packs / PUP-Stream | VP Universe |
| 🚀 **Frontends** | PinUP Popper, Baller Installer, etc. | Popper forum |
| 🎬 **Emulators / ROMs** | MAME, pinball ROMs | MAMEdev |
| 💻 **System-level** | Windows, GPU/audio drivers, USB controllers | Microsoft / vendor support |

## 🌐 Community help for software

| Project | Community |
|---|---|
| **Visual Pinball X** | vpforums.org · vpuniverse.com |
| **Future Pinball + BAM** | VPU Future Pinball forum |
| **Future Pinball + BAM AIO** | VPU file 14807 — FP+BAM Essentials AIO |
| **DOF** | github.com/DirectOutput/DirectOutput |
| **DOFLinx** | doflinx.github.io/docs |
| **Pinball FX family** | Zen Studios Support |
| **PinUP Popper** | VPU PinUP Popper forum |
| **MAME** | mamedev.org |

💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.


# VIRTUATILT – Xbox SETUP GUIDE


Following some basic instructions to set up your new VirtuaTilt for Xbox systems.

**IMPORTANT NOTE: You need a proper USB dongle (not provided and not supported) to make VirtuaTilt compatible with above devices. If you connect directly, it won't be recognized as a controller.**


## Load Profile

Load **VTConfig-Xbox_v1.X.json** profile in **Pinscape Pico Config Tool:**

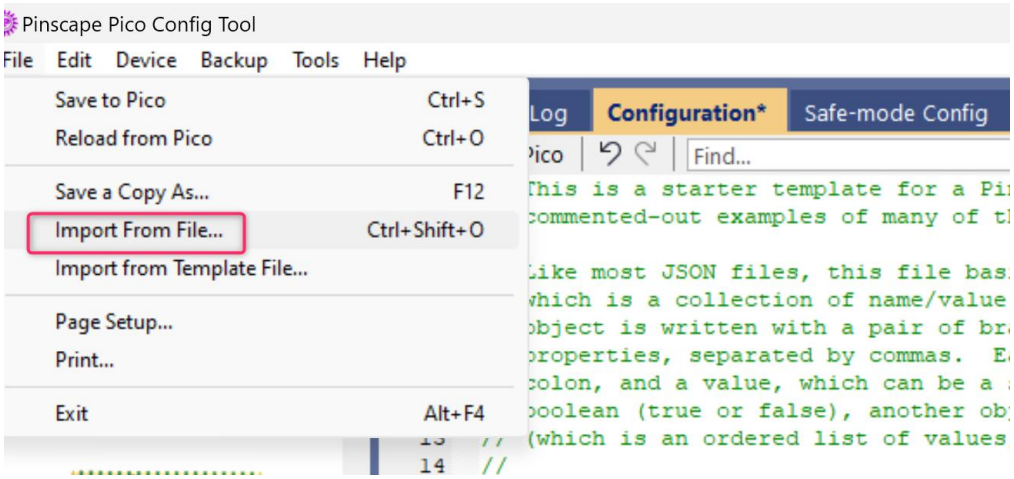

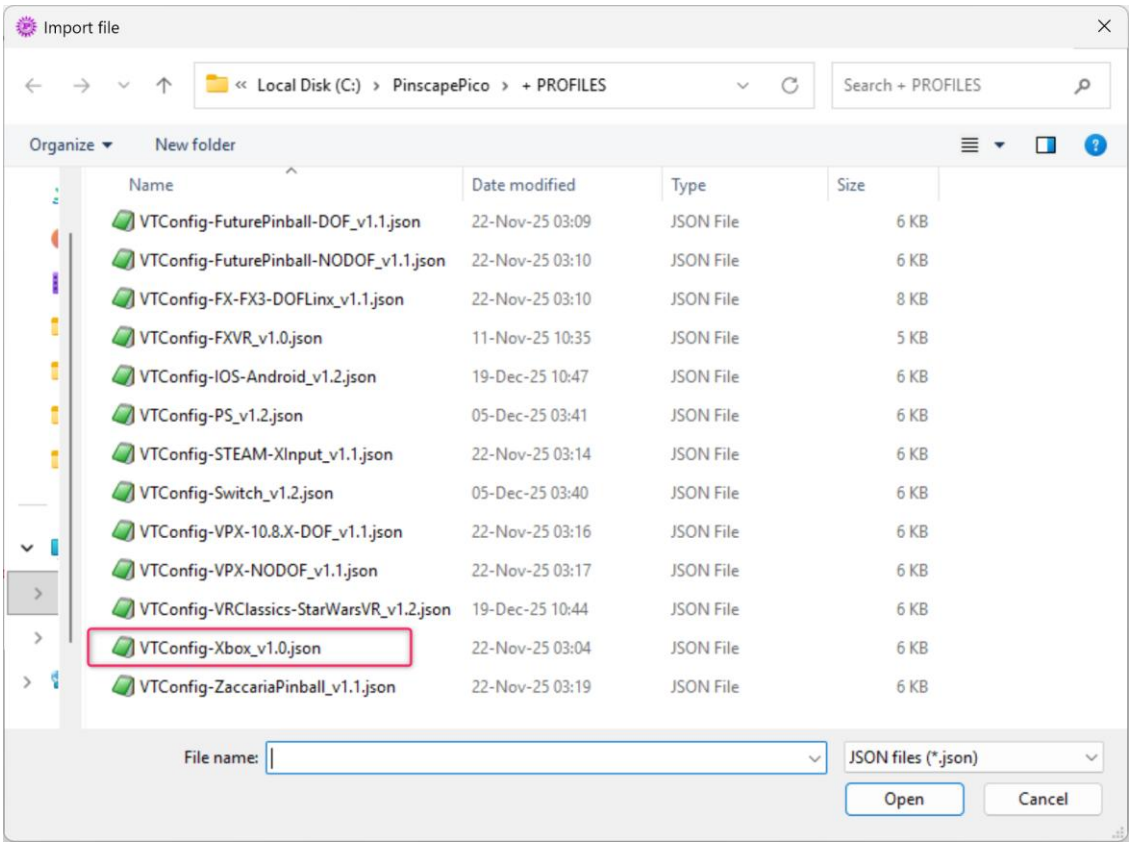Click on “**Program Pico**” to save new configuration:

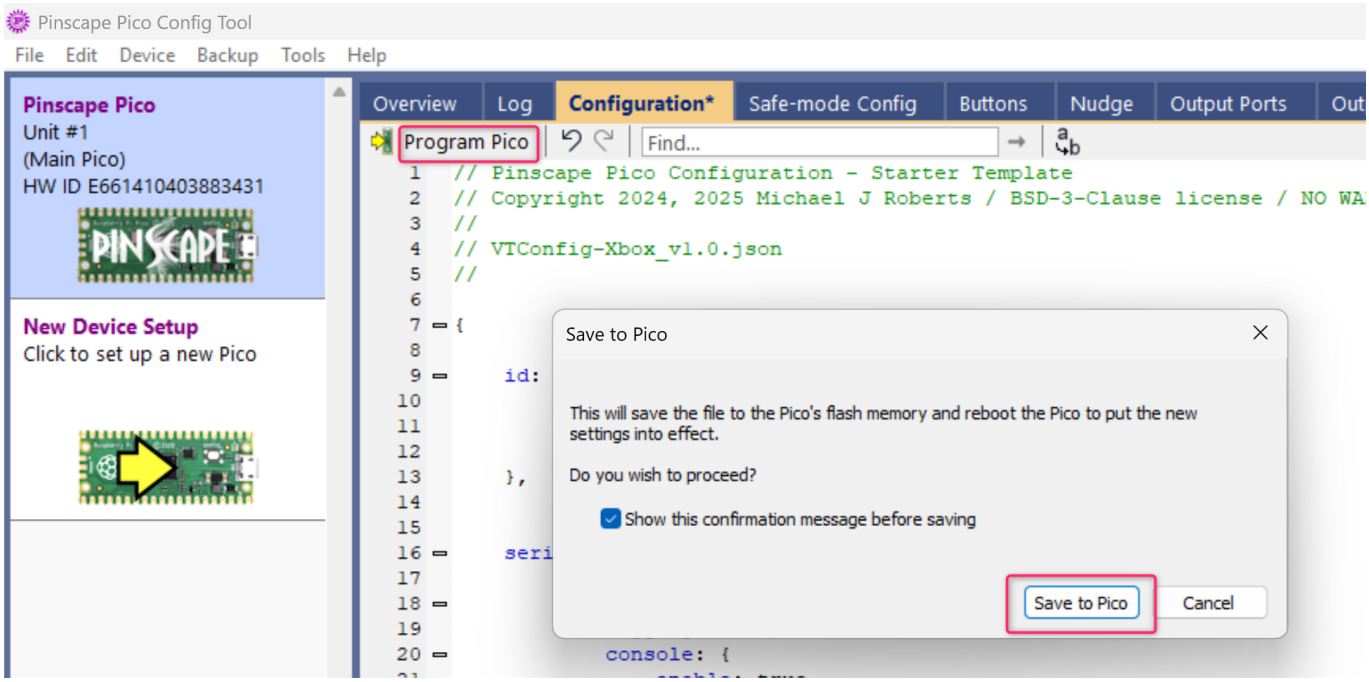


That’s it, enjoy!

# Default Buttons Mapping

This is the default buttons mapping for Xbox profile. You can of course change assignments in Pinscape Pico Config Tool.

