## ⚠ IMPORTANT — Support Scope

**3DPTronics supports the VirtuaTilt controller hardware only.** This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

## ☑ Officially supported

| Component | Coverage |
|---|---|
| 🎮 **VirtuaTilt controller** | Wired and Wireless editions, all hardware components |
| 💾 **Pinscape Pico firmware** | Updates, OTA flashing, recovery via Updater Tool |
| 📋 **Bundled profiles** | All BT and USB profiles shipped in the redist |
| ⚙ **GUIConfigTool** | Configuration, calibration, profile loading, output testing |
| 🔧 **Wireless Kit** | Wireless hardware kit for existing VirtuaTilt owners |
| 📦 **Accessories** | Anything shipped directly by 3DPTronics |

## ❌ Not supported

| Category | Examples | Where to get help |
|---|---|---|
| 🎲 **VP Game engines** | VPX, Visual Pinball, Future Pinball, BAM | VPForums · VP Universe |
| 🕹 **VP titles** | Pinball FX / FX2 / FX3 / VR / M, etc. | Zen Studios support |
| 💥 **Feedback frameworks** | DOF (Direct Output Framework), DOFLinx | DOF on GitHub · DOFLinx wiki |
| 🎨 **DMD / extras** | DMDExt, PinEvent V2, PuP-Packs / PUP-Stream | VP Universe |
| 🚀 **Frontends** | PinUP Popper, Baller Installer, etc. | Popper forum |
| 🎬 **Emulators / ROMs** | MAME, pinball ROMs | MAMEdev |
| 💻 **System-level** | Windows, GPU/audio drivers, USB controllers | Microsoft / vendor support |

## 🌐 Community help for software

| Project | Community |
|---|---|
| **Visual Pinball X** | vpforums.org · vpuniverse.com |
| **Future Pinball + BAM** | VPU Future Pinball forum |
| **Future Pinball + BAM AIO** | VPU file 14807 — FP+BAM Essentials AIO |
| **DOF** | github.com/DirectOutput/DirectOutput |
| **DOFLinx** | doflinx.github.io/docs |
| **Pinball FX family** | Zen Studios Support |
| **PinUP Popper** | VPU PinUP Popper forum |
| **MAME** | mamedev.org |


💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.


# VIRTUATILT – Pinball VR Classic/Star Wars Pinball VR SETUP GUIDE

Following some basic instructions to set up your new VirtuaTilt for VR standalone games like Pinball VR Classic (old name: Pinball FX2 VR) and Star Wars Pinball VR.


## Load Profile

Load **VTConfig-VRClassic-StarWarsVR_v1.X.json** profile in **Pinscape Pico Config Tool:**

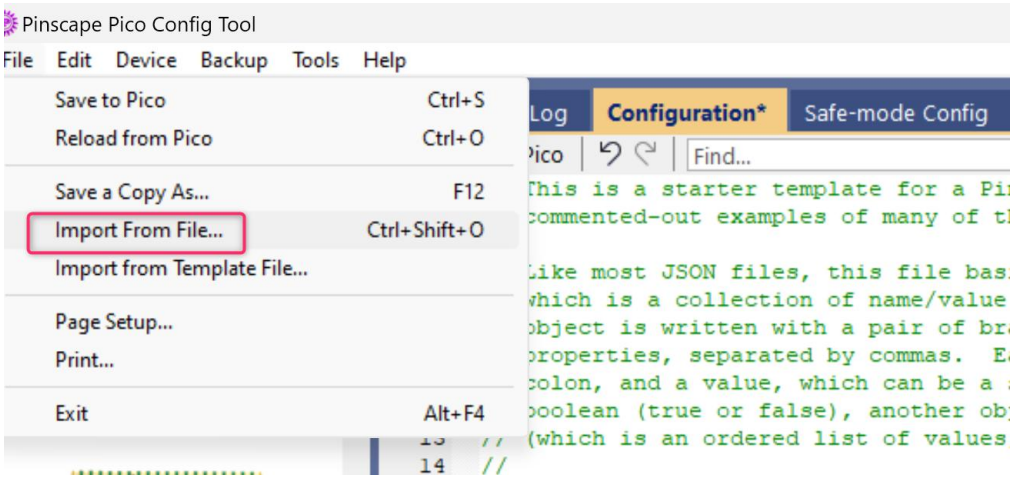


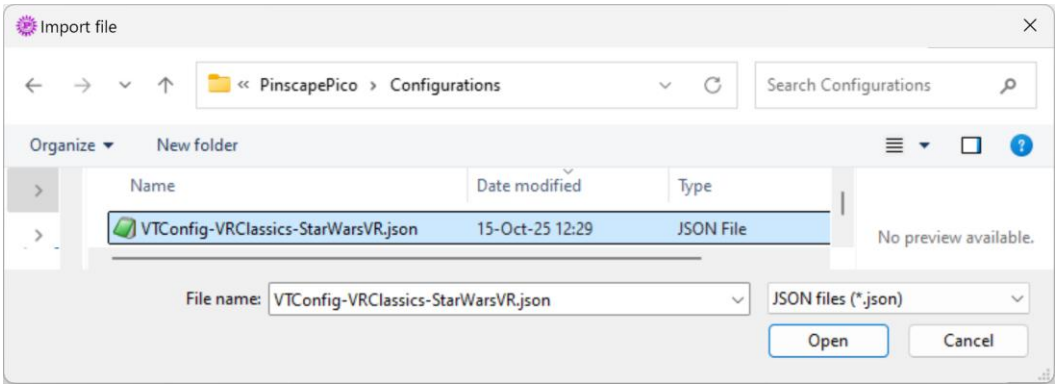



Click on "**Program Pico**" to save new configuration:

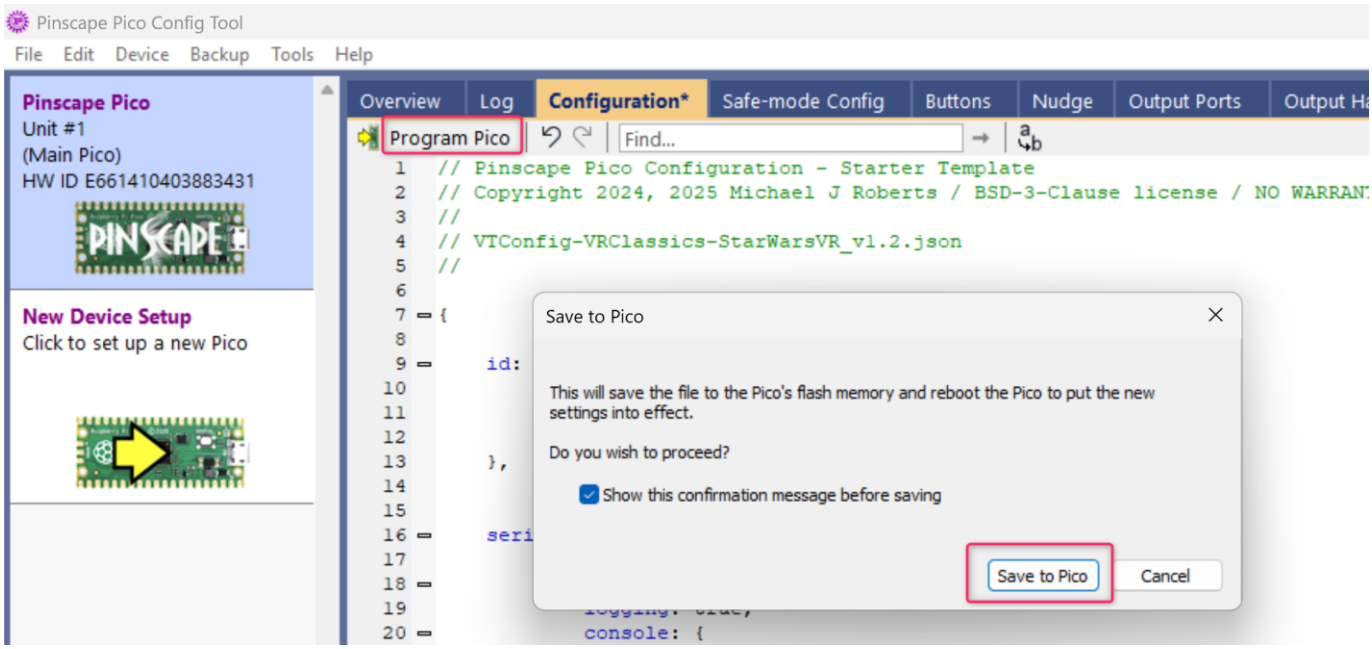



**NOTE: <u>Once this profile is loaded, Pico will go offline because the Windows XInput device driver now is claiming exclusive access to the device, preventing anyone from seeing its other USB interfaces:</u>**

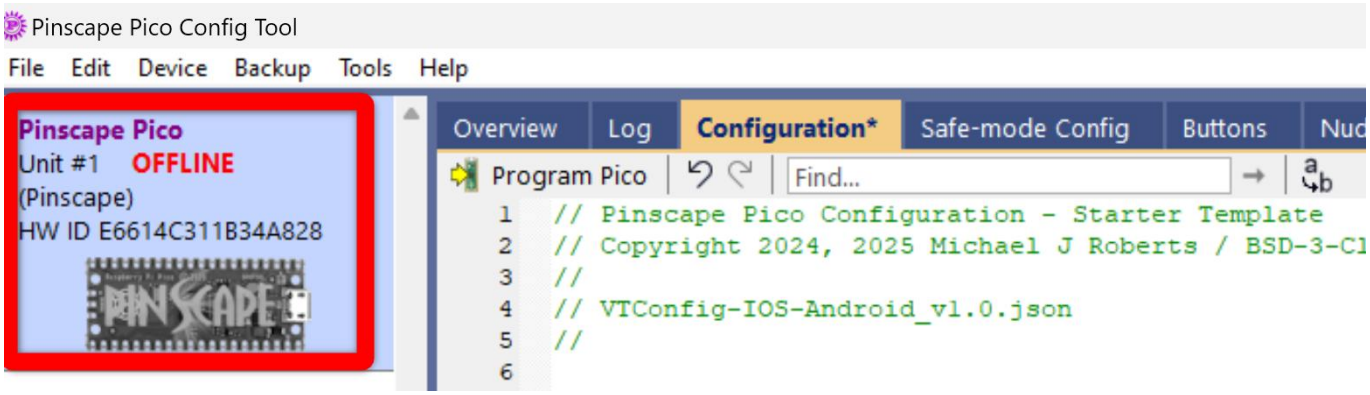

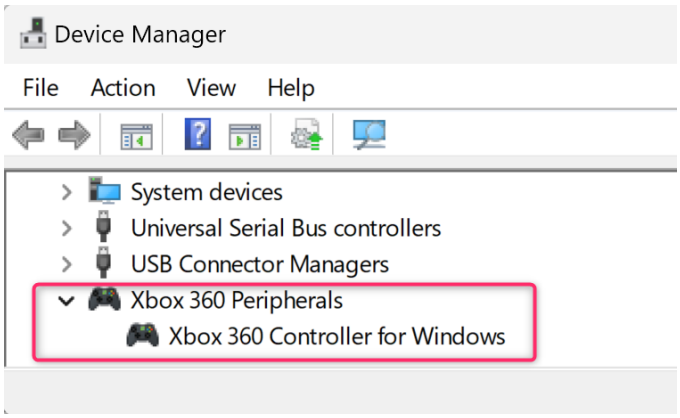



# Restore Profile


To load/restore a different profile keep **VirtuaTilt's Reset button** pressed for 2 seconds; device will reboot in **Factory mode**:

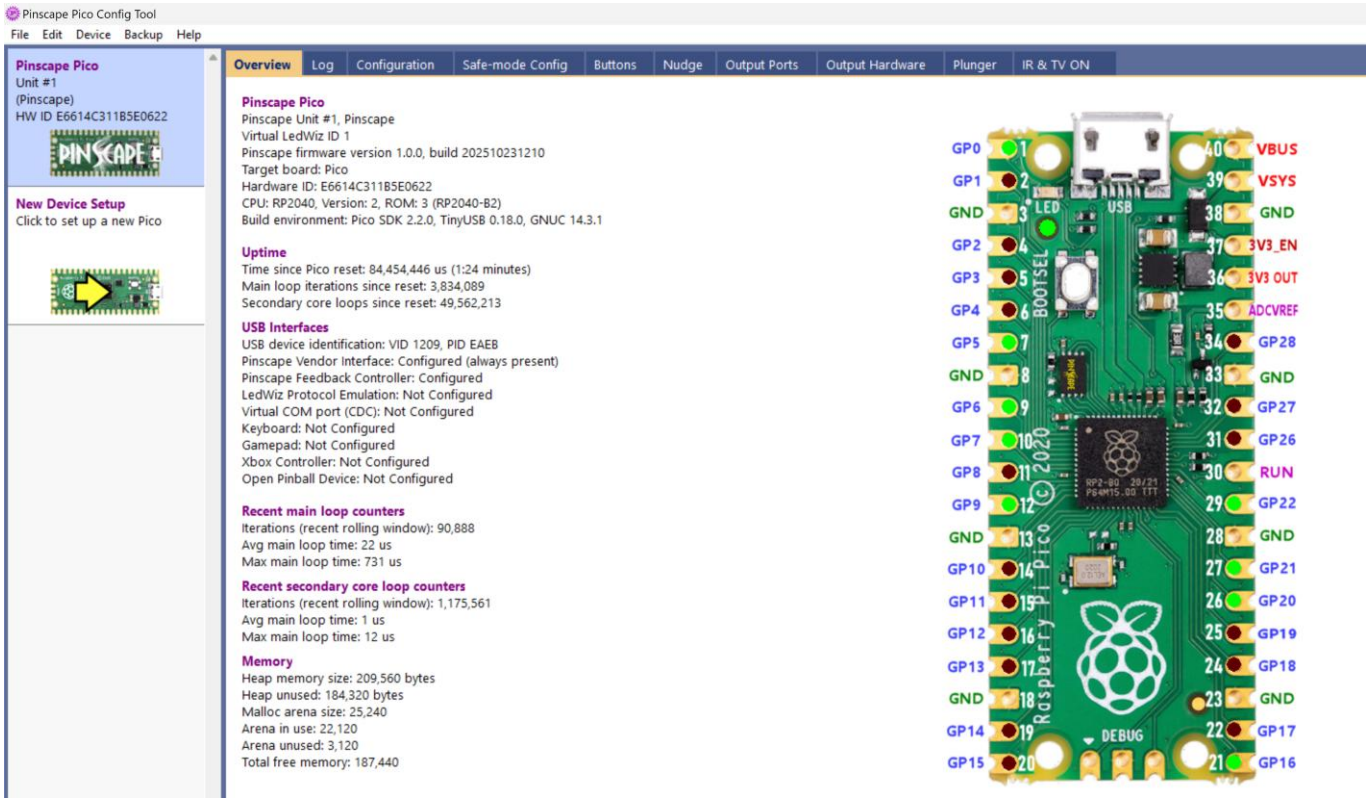



Go to **Configuration → File → Import From File** and choose the profile you need:

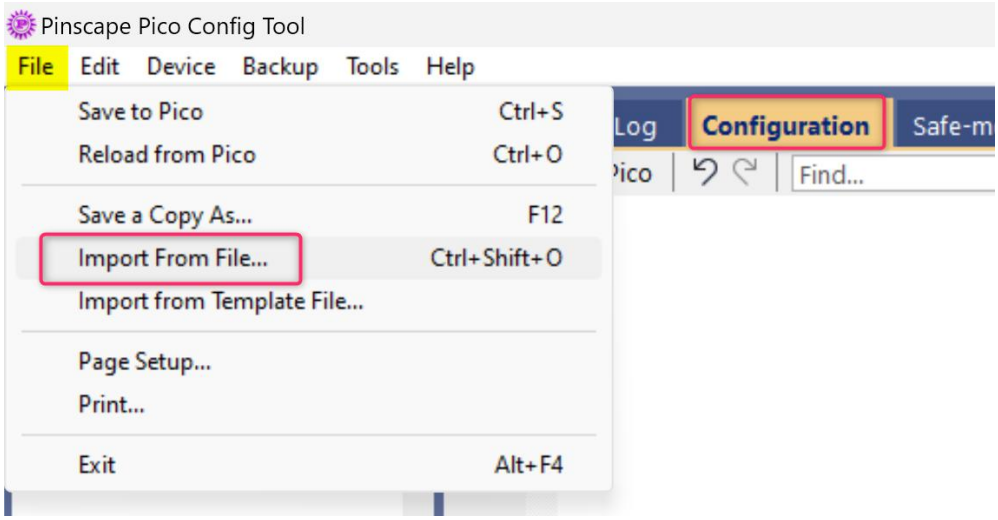

Click on “**Program Pico**” to save new configuration and you’re done:

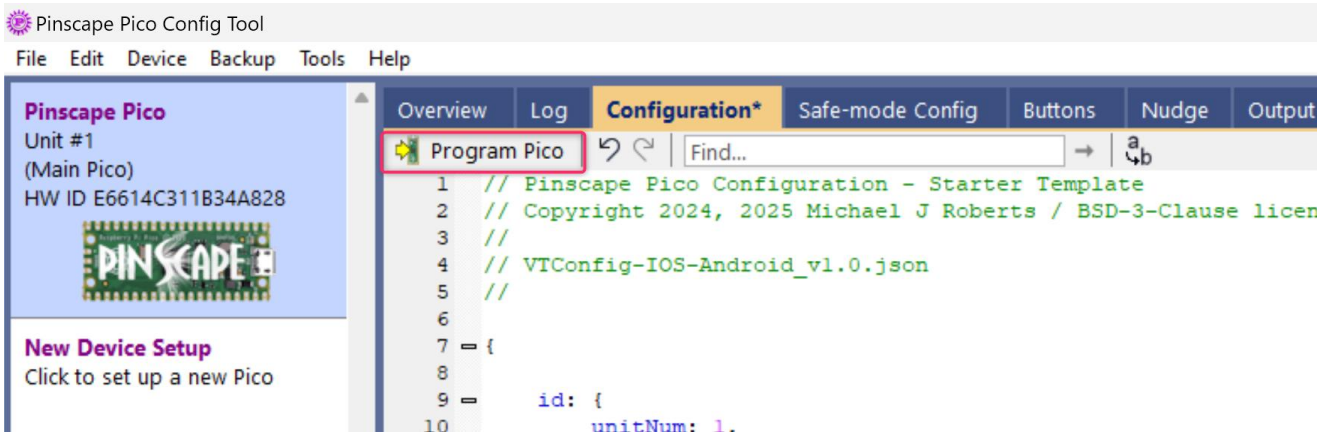

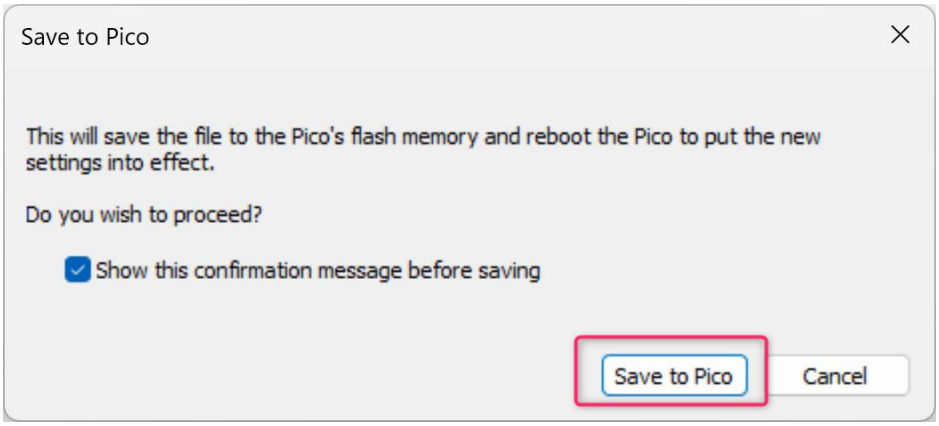
That’s it, enjoy!

# Default Buttons Mapping

This is the default buttons mapping for Pinball VR Classic / Star Wars Pinball VR profile. You can of course change assignments in Pinscape Pico Config Tool.

