⚠ IMPORTANT — Support Scope

3DPTronics supports the VirtuaTilt controller hardware only. This guide is a *compendium* to help you connect your VirtuaTilt to third-party pinball software (VPX, Future Pinball + BAM, DOF/DOFLinx, PinEvent, PinUP Popper, etc.). We provide them as a courtesy to save you the hunt across multiple sites. **The information is best-effort** and kept reasonably current, but is **not** official documentation of those projects. **We do not provide official support for any third-party software referenced here** — for software-specific issues, refer to each project's own docs and community channels.

☑ Officially supported

Component	Coverage
🎮 **VirtuaTilt controller**	Wired and Wireless editions, all hardware components
💾 **Pinscape Pico firmware**	Updates, OTA flashing, recovery via Updater Tool
📋 **Bundled profiles**	All BT and USB profiles shipped in the redist
⚙ **GUIConfigTool**	Configuration, calibration, profile loading, output testing
🔧 **Wireless Kit**	Wireless hardware kit for existing VirtuaTilt owners
📦 **Accessories**	Anything shipped directly by 3DPTronics

❌ Not supported

Category	Examples	Where to get help
🎲 **VP Game engines**	VPX, Visual Pinball, Future Pinball, BAM	VPForums · VP Universe
🕹 **VP titles**	Pinball FX / FX2 / FX3 / VR / M, etc.	Zen Studios support
💥 **Feedback frameworks**	DOF (Direct Output Framework), DOFLinx	DOF on GitHub · DOFLinx wiki
🎨 **DMD / extras**	DMDExt, PinEvent V2, PuP-Packs / PUP-Stream	VP Universe
🚀 **Frontends**	PinUP Popper, Baller Installer, etc.	Popper forum
🎬 **Emulators / ROMs**	MAME, pinball ROMs	MAMEdev
💻 **System-level**	Windows, GPU/audio drivers, USB controllers	Microsoft / vendor support

🌐 Community help for software

Project	Community
Visual Pinball X	vpforums.org · vpuniverse.com
Future Pinball + BAM	VPU Future Pinball forum
Future Pinball + BAM AIO	VPU file 14807 — FP+BAM Essentials AIO
DOF	github.com/DirectOutput/DirectOutput
DOFLinx	doflinx.github.io/docs
Pinball FX family	Zen Studios Support
PinUP Popper	VPU PinUP Popper forum
MAME	mamedev.org

💡 **Why this matters:** Our team is small and our expertise is the VirtuaTilt hardware — we can't debug VPX scripts, flaky BAM installs, or broken DOF chains. Those communities have their own experts. The **AI chatbot on the wiki** can help connect VirtuaTilt with most of the software above; for deeper or vendor-specific issues, reach out to the appropriate community first.


VIRTUATILT – Switch SETUP GUIDE


Following some basic instructions to set up your new VirtuaTilt for Switch systems.

IMPORTANT NOTE: You need a proper USB dongle (not provided and not supported) to make VirtuaTilt compatible with above devices. If you connect directly, it won't be recognized as a controller.


Load Profile

Load **VTConfig-Switch_v1.X.json** profile in **Pinscape Pico Config Tool:**

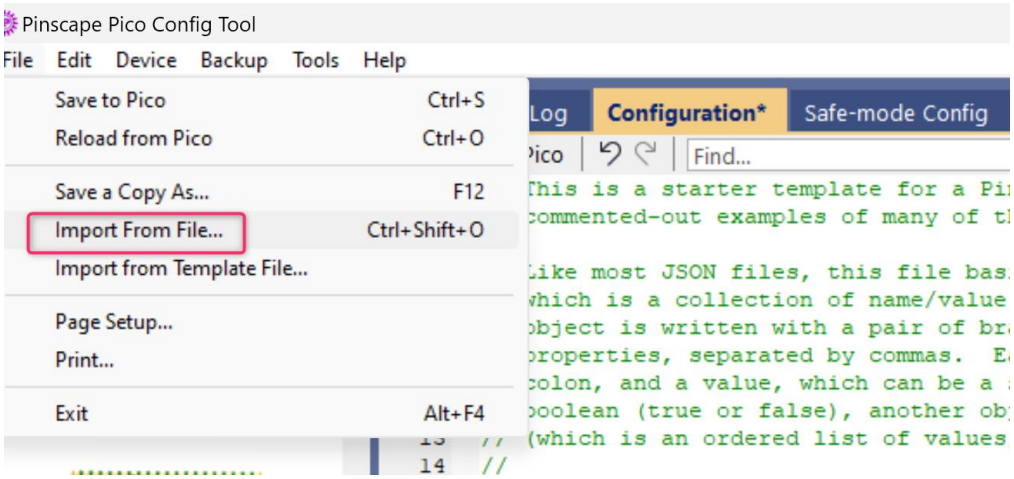


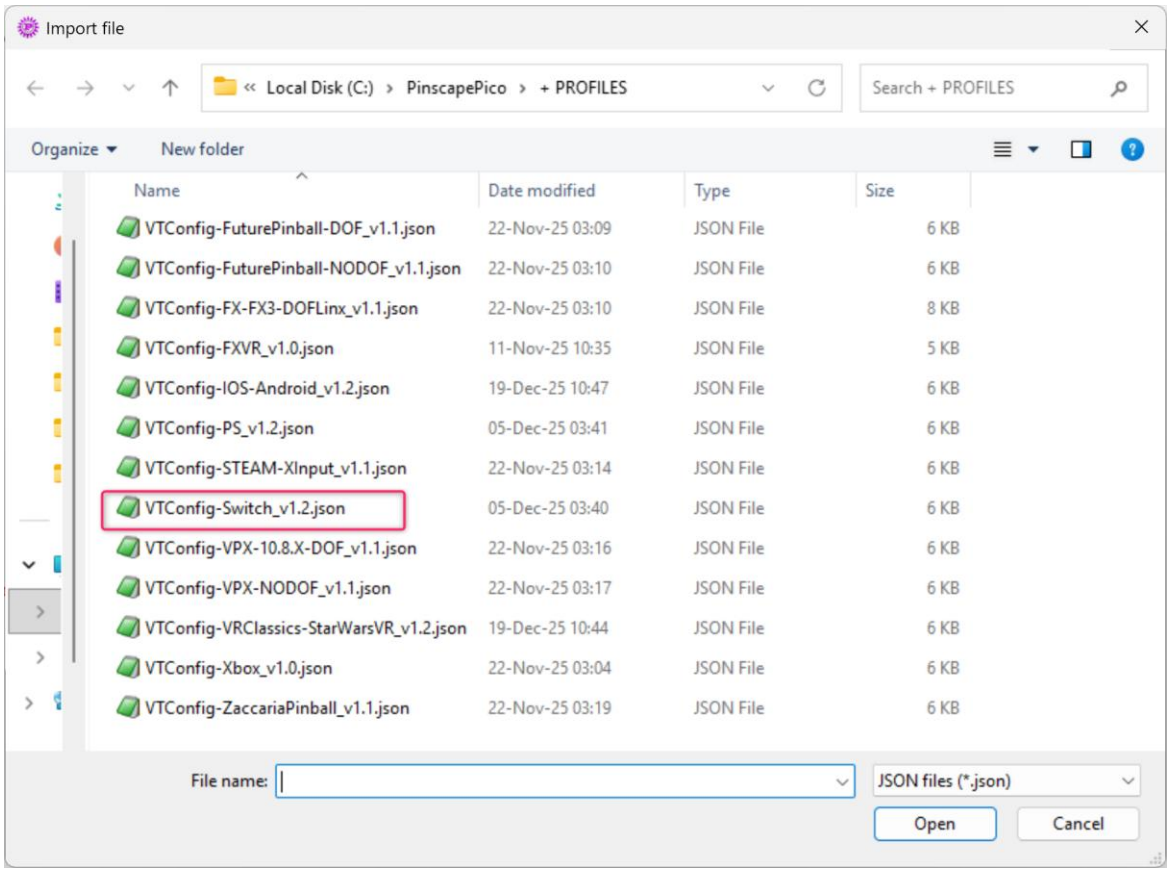


Click on "**Program Pico**" to save new configuration:

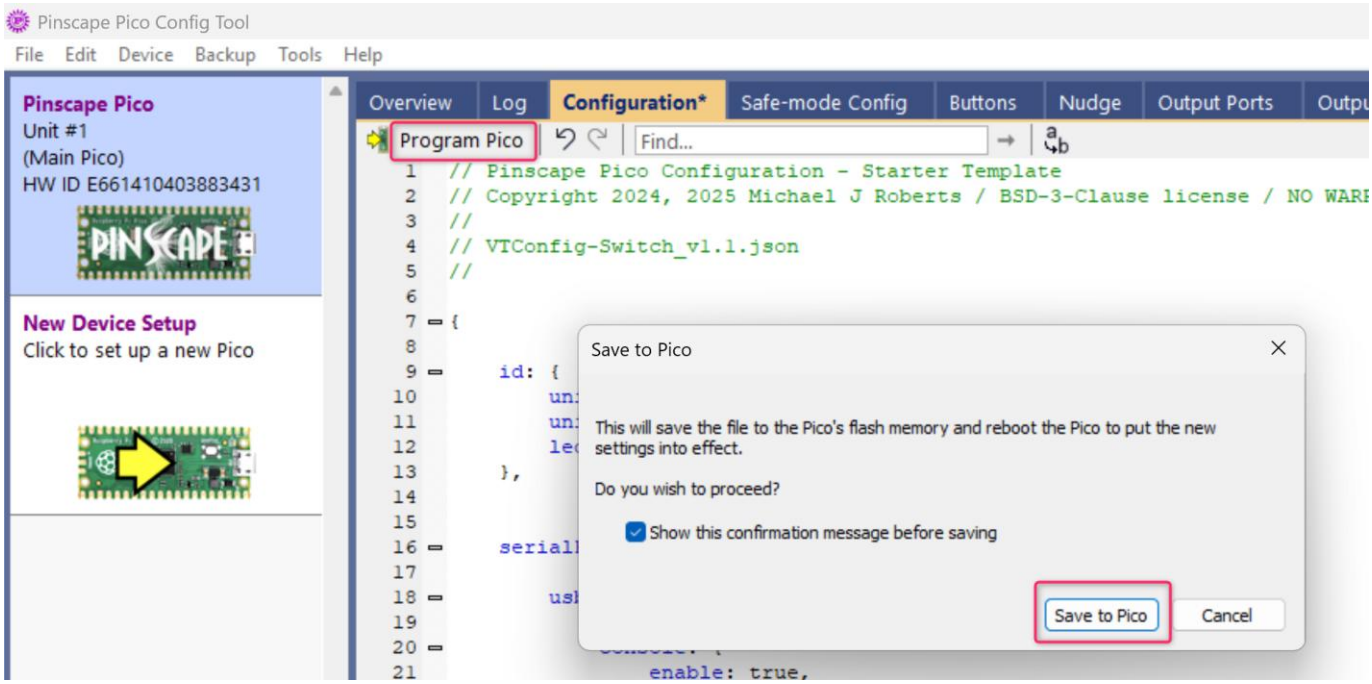


NOTE: Once this profile is loaded, Pico will go offline because the Windows X-Input device driver now is claiming exclusive access to the device, preventing anyone from seeing its other USB interfaces:

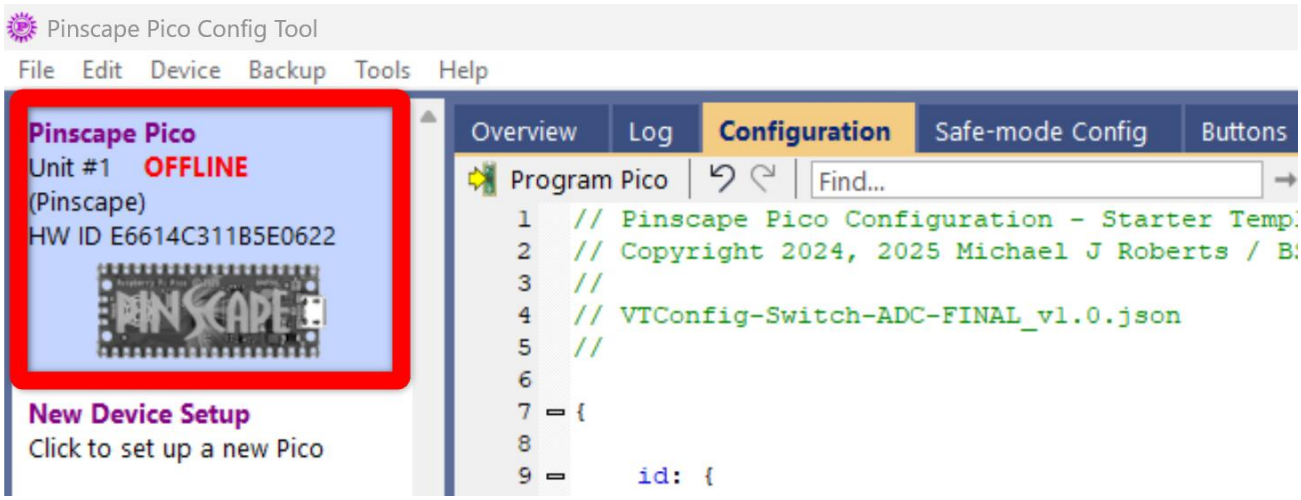

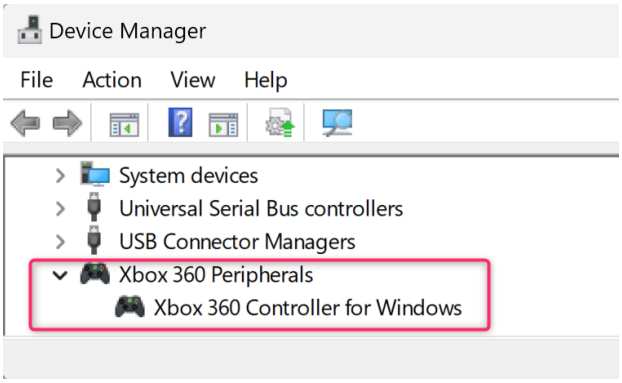


System/Games Settings

Select the following option in **System Settings → Controllers & Accessories**:

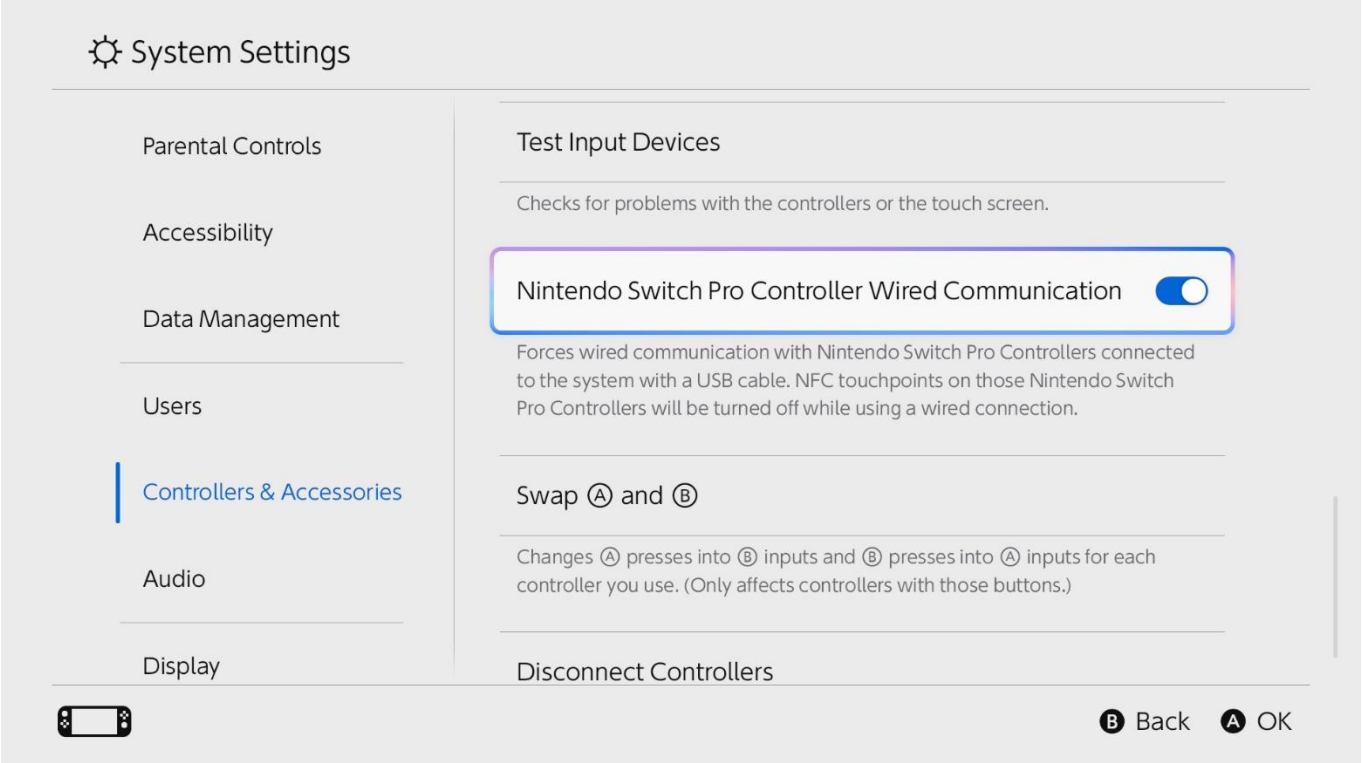


PinballFX 3 settings:

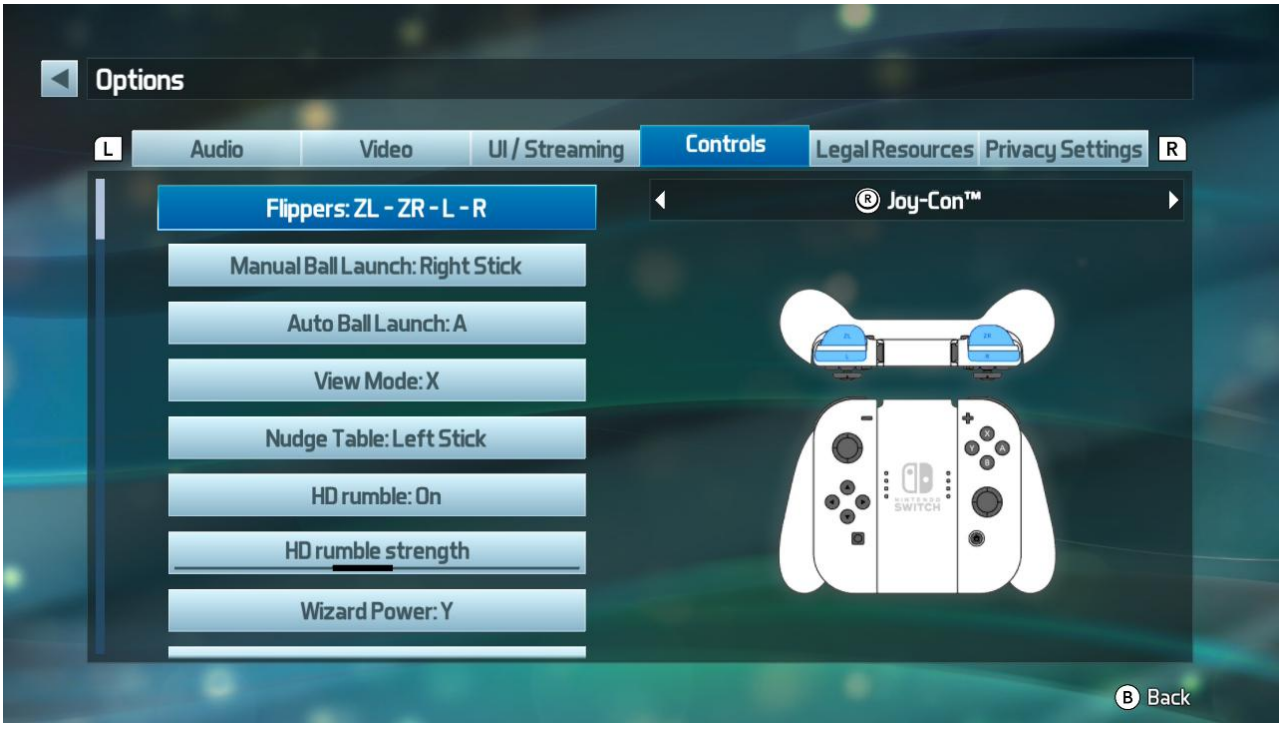


PinballFX settings:



Pinball M settings:

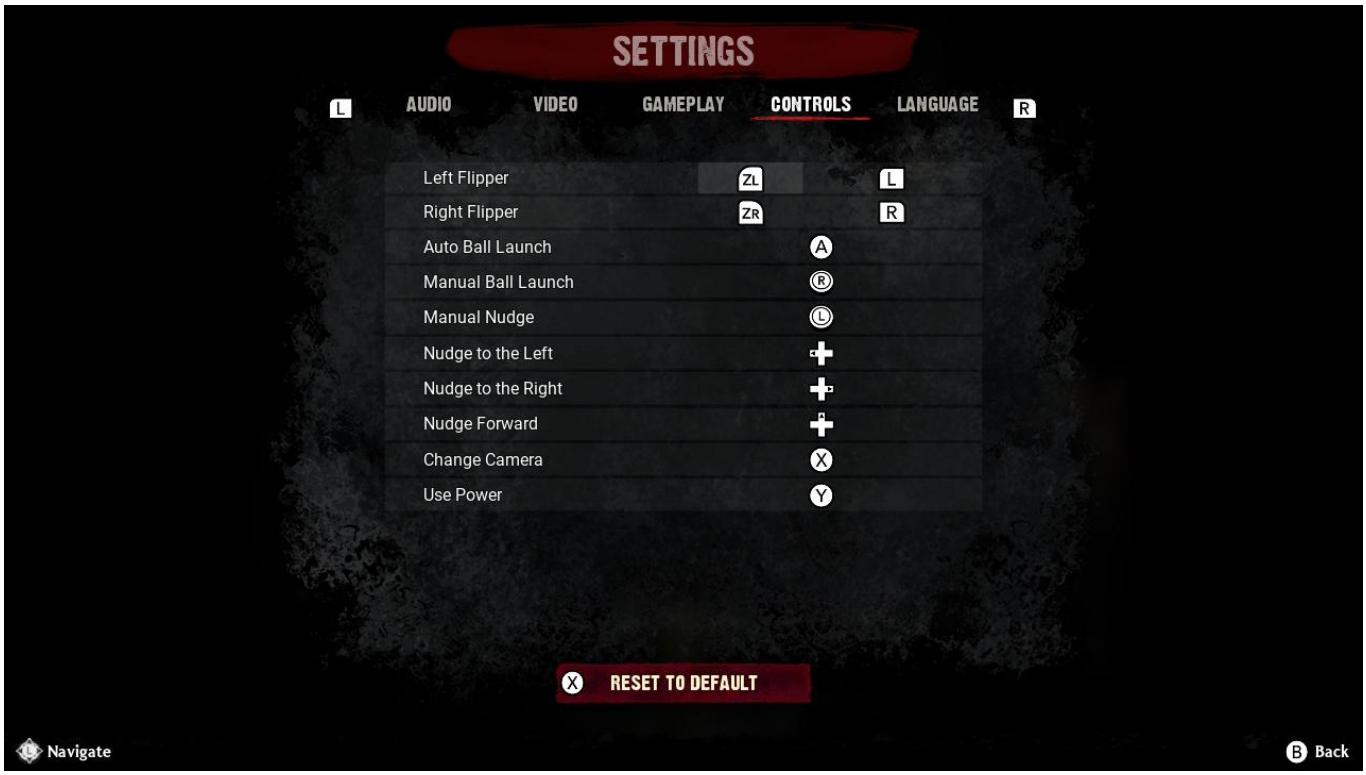


The Pinball Arcade settings:

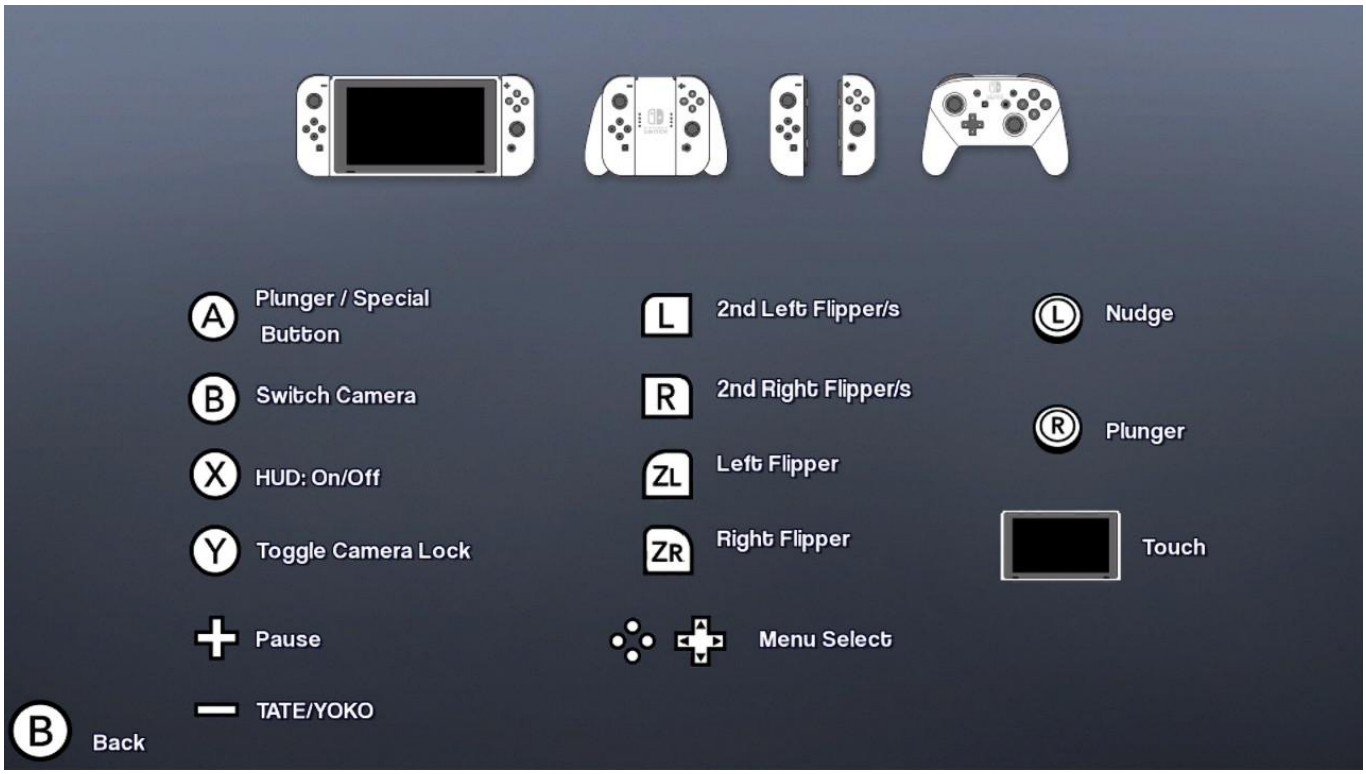


Restore Profile


To load/restore a different profile keep **VirtuaTilt's Reset button** pressed for 2 seconds; device will reboot in **Factory mode**:

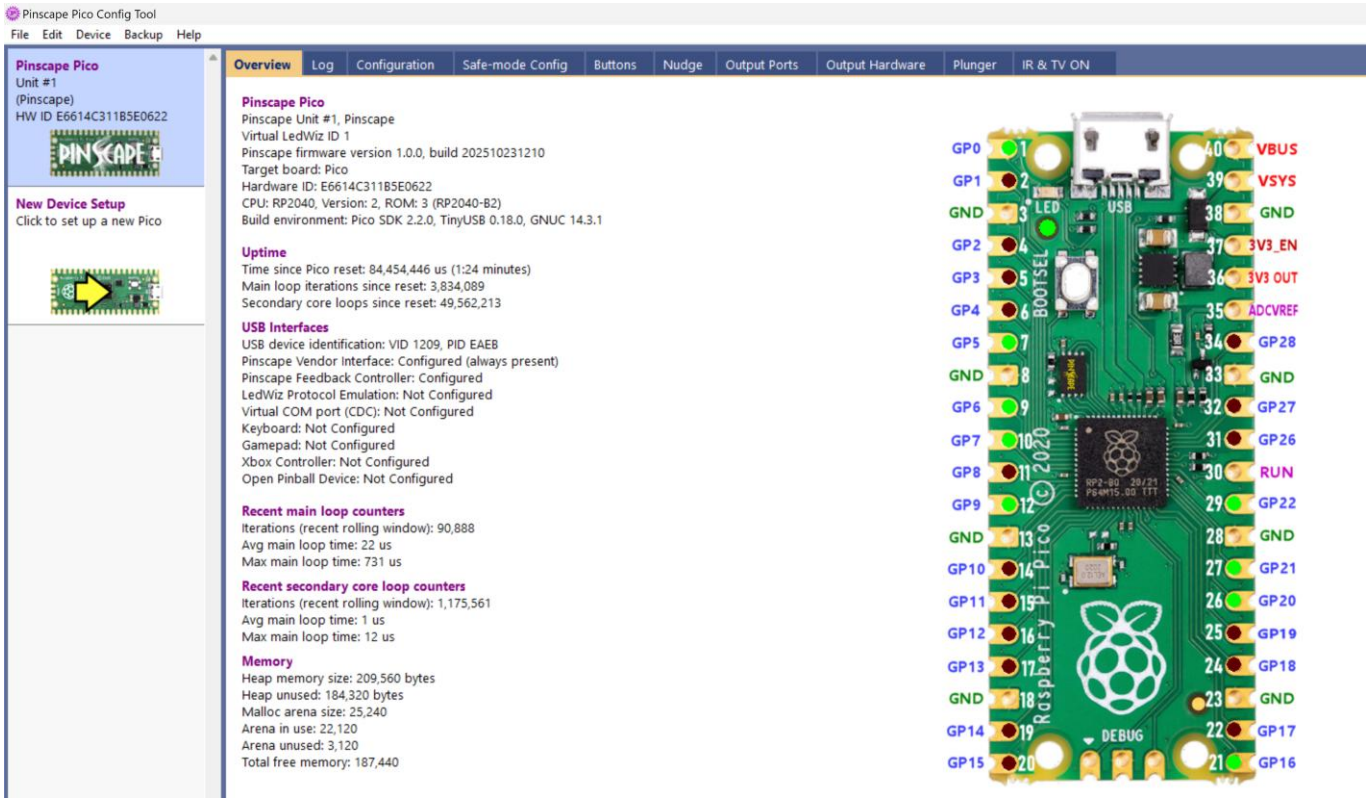


Go to **Configuration → File → Import From File** and choose the profile you need:

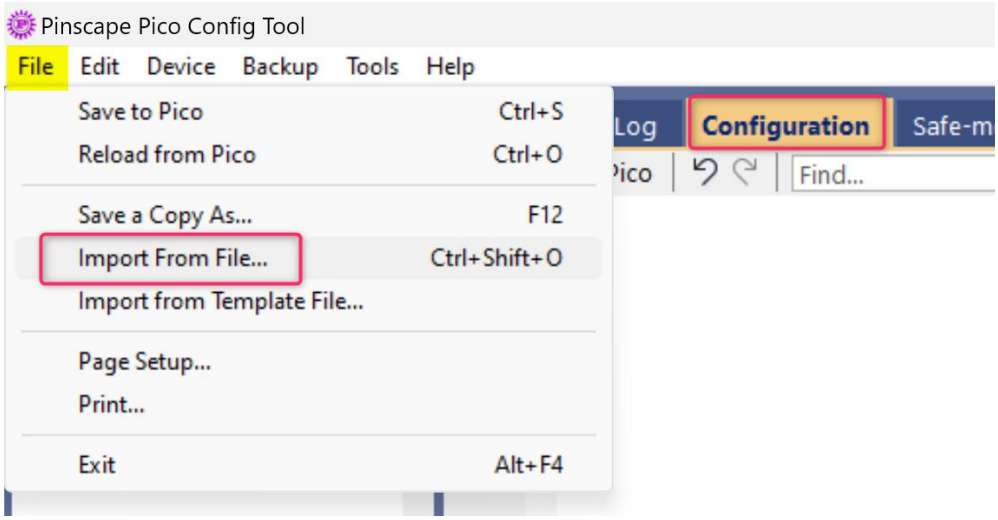

Click on "**Program Pico**" to save new configuration and you're done:

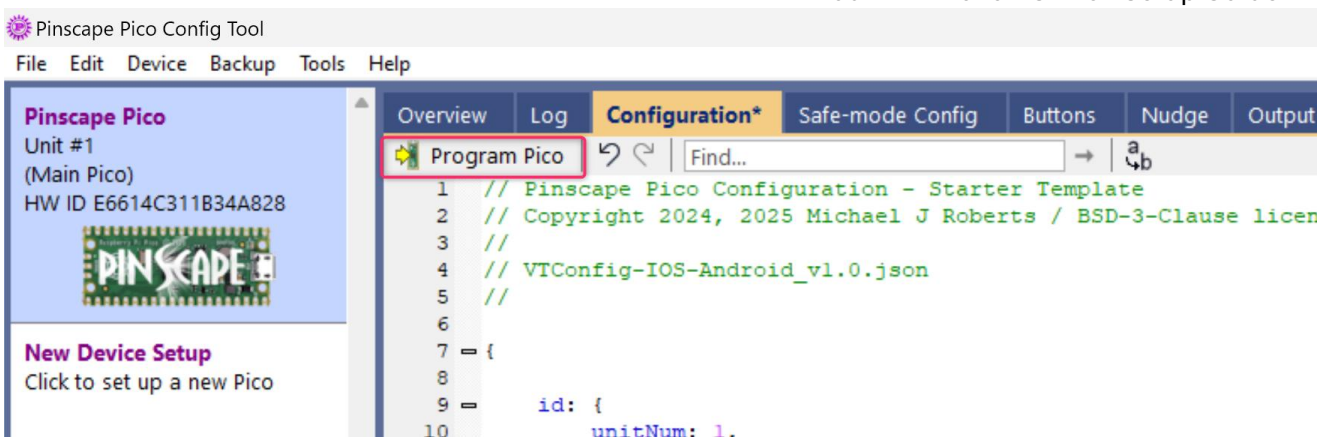

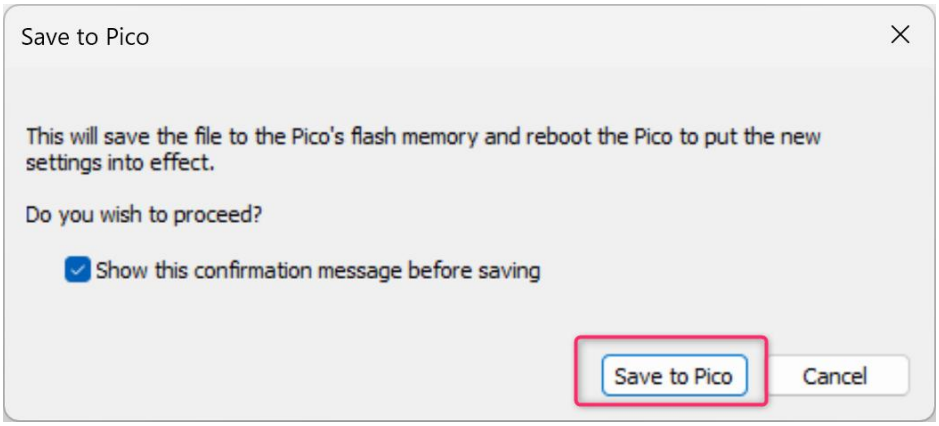

That's it, enjoy!

Default Buttons Mapping

This is the default buttons mapping for Switch profile. You can of course change assignments in Pinscape Pico Config Tool.



