

Heatbed Leveling


This SOP describes the procedure for correcting an uneven heatbed on the FibreSeeker 3 3D printer.

1. Tools:

A4 paper, H2 hex wrench

2. Precautions:


The heatbed is to be heated and will reach high temperatures. Take care to avoid burns.

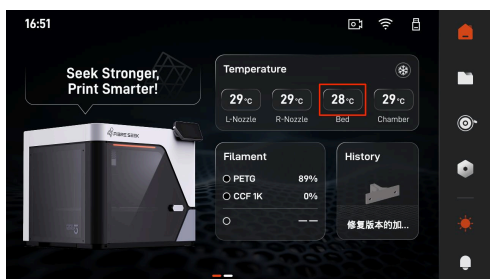


Steps

Preparation


1. Preheat the heatbed to normal printing temperature (PLA: 55 °C, PETG: 75 °C). Since the bed expands with heat, leveling it cold will be inaccurate.

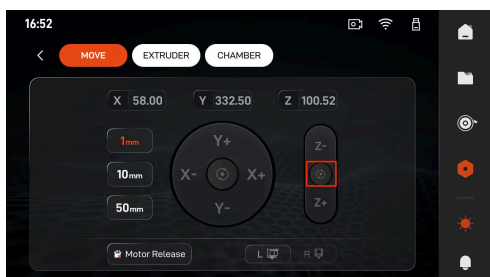


2. Clean the heatbed: remove residual filament, tape bumps, and dust to ensure a flat, even contact area.
3. Click the button circled in a red box (as shown in the picture) to move the nozzle to the home position.

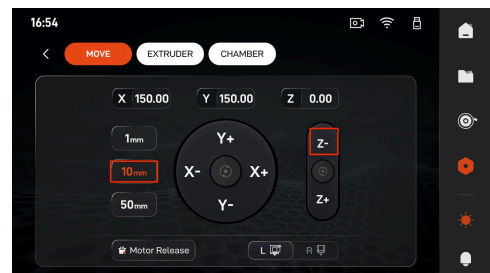


4. Select 10mm and click Z-.

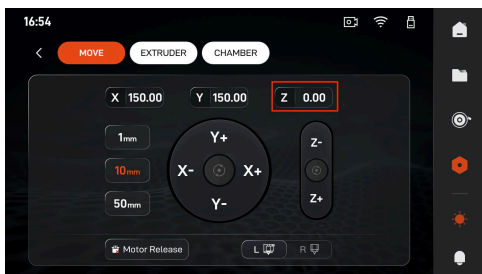


5. The Z axis will show 0.

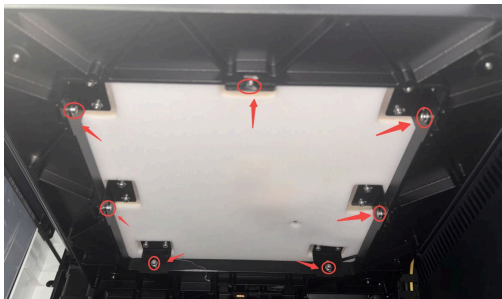

6. Slightly loosen the seven retaining screws on the underside of the heatbed. Do not remove them.

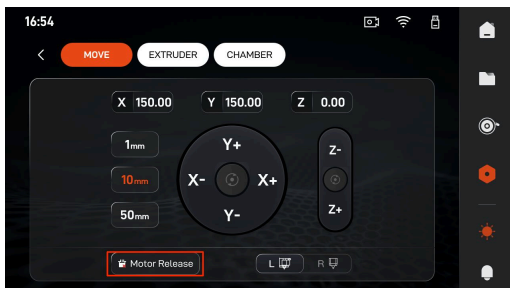


7. Tap Motor Release.

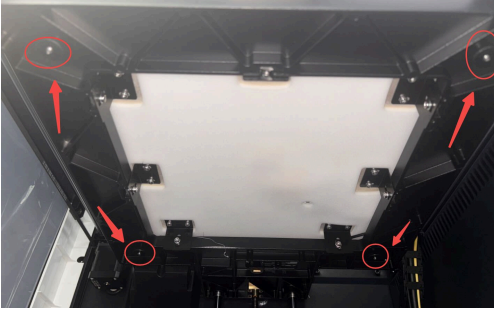

8. Move the printhead to each corner of the heatbed, and adjust the corresponding leveling screw at that corner.



9. Insert a sheet of A4 paper between the left nozzle and the heatbed. Slide it back and forth. You should feel a light, even drag, not too tight and not too loose. Repeat this check 2–3 times at each corner.

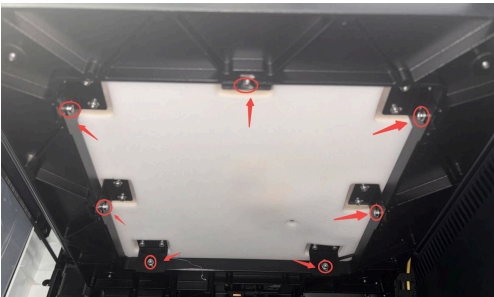

10. Firmly tighten the seven retaining screws after sliding.

Single-point adjustment method

1. Move the nozzle to one corner and place the paper between the nozzle and the heatbed.
2. Turn the screw underneath that corner:
 - Turn down (tighten) → heatbed rises, nozzle moves closer, paper drags more.
 - Turn up (loosen) → heatbed lowers, gap increases, paper slides out easily.
3. Feeling: when sliding the paper, you should sense a light, even resistance. Neither tight nor loose.