

Disassemble/Reassemble :

Collision Block


1. Tools :

New collision block, H2.5 hex key.

2. Precautions :


Always power off before operation. Beware of high temperature. Avoid pulling or straining cables to prevent loose connections.

1

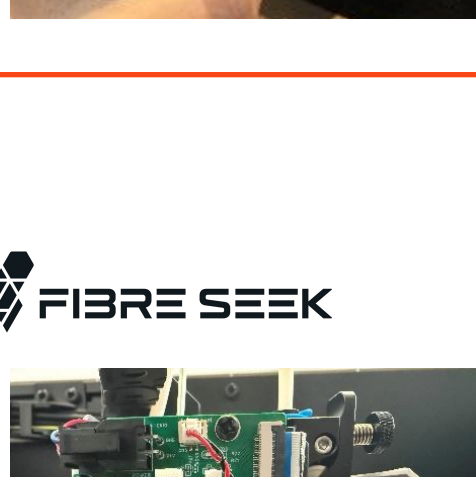


Step 1. Power Off

1. Flip the red switch on the rear of the machine to "O".

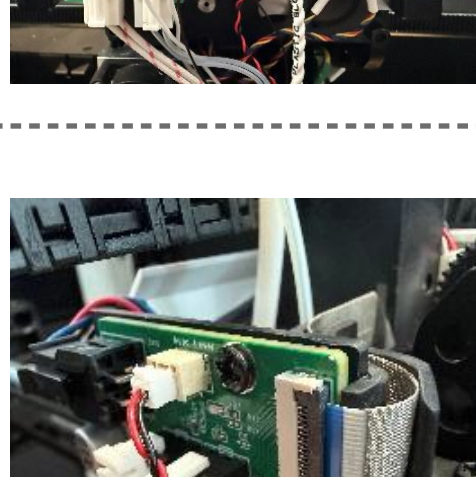


2. Pinch the lower left side of the front cover to release the latch.

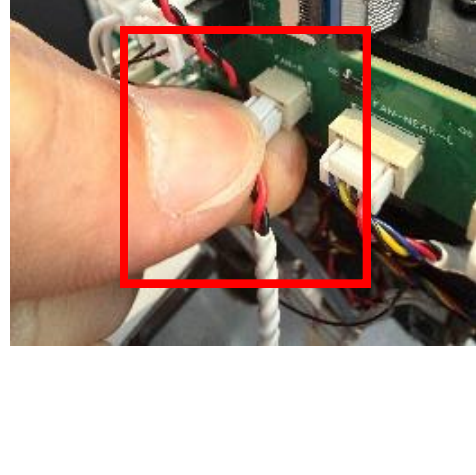


3. Pull the toolhead front cover forward to remove it.

1

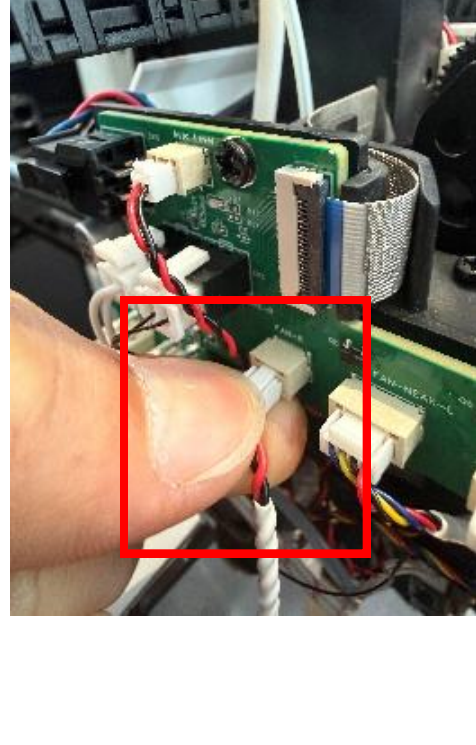


Step 2. Remove the Toolhead Front Cover

1. Pinch the latch on the fan plug at the "FAN-R" position on the mainboard.

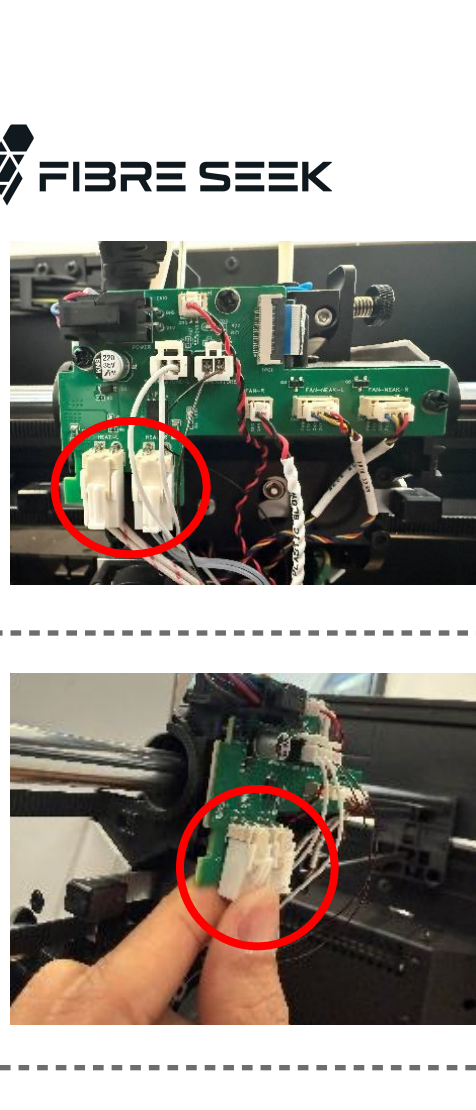

2. Unplug the fan connector to remove the front cover.

2

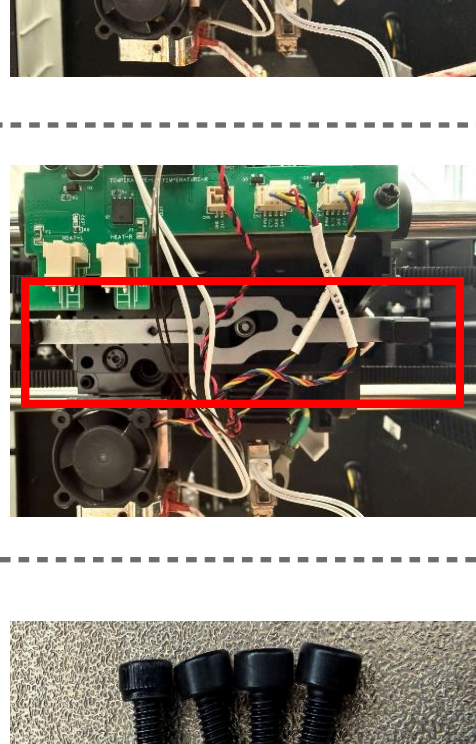

Step 3. Loosen the Cable Connectors

1. Pinch the latch on the heater plug at the "HRAT-L" position on the mainboard.
2. Pinch the latch on the heater plug at the "HRAT-R" position on the mainboard.




3. Unplug the heater.

3




Step 4. Remove the Collision Block Cover Fixing Screws

1. Use the H2.5 hex key.
2. Remove the four screws securing the collision block cover.

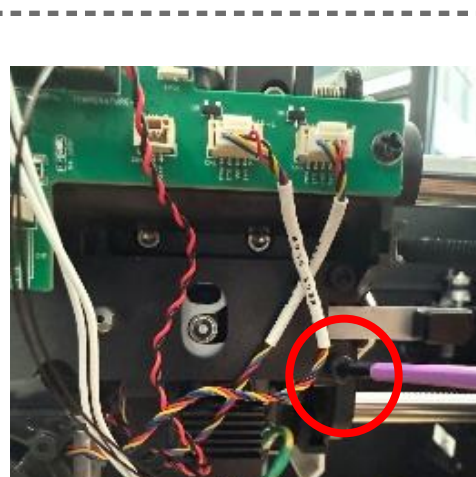


3. The top-left screw is longer than the other three.

4

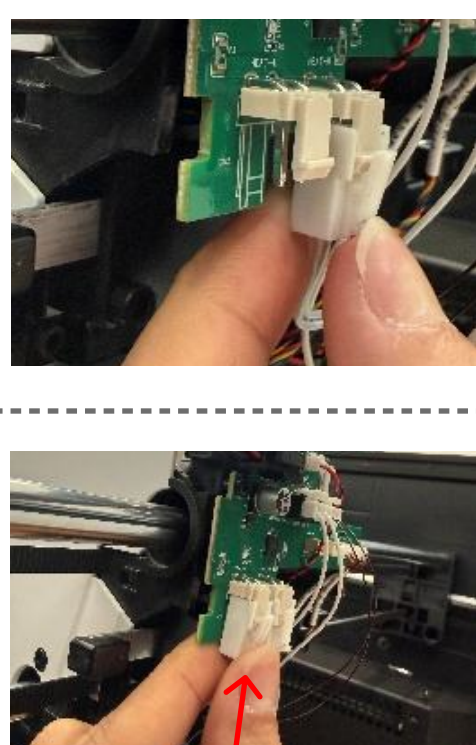


Step 5. Remove the Collision Block

1. Pull the cover outward.
2. Grasp both ends of the collision block and pull it straight out horizontally.

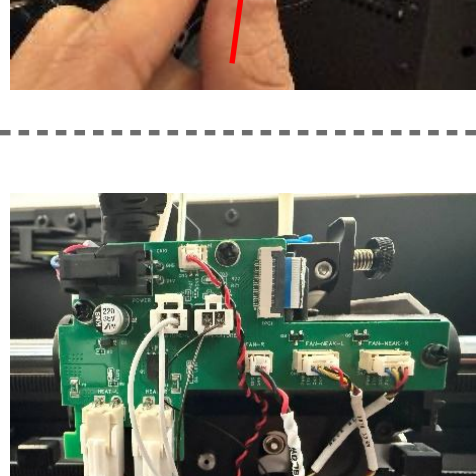


5

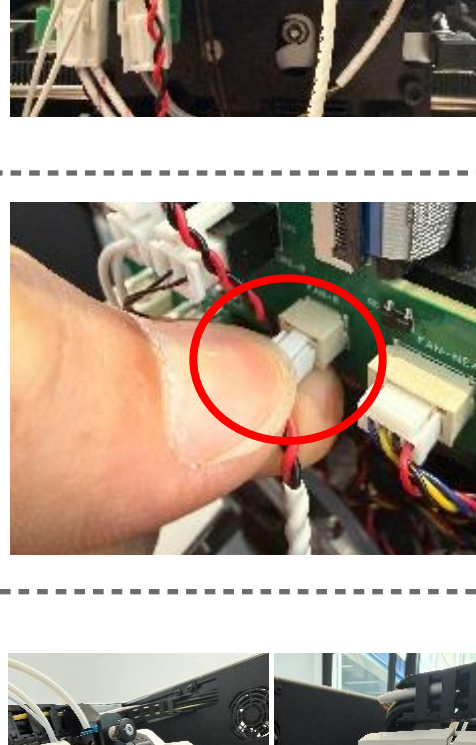


Step 6. Install the New Collision Block

1. Fit the new collision block, making sure the bearing engages correctly into the block's slide groove. Replace the cover.

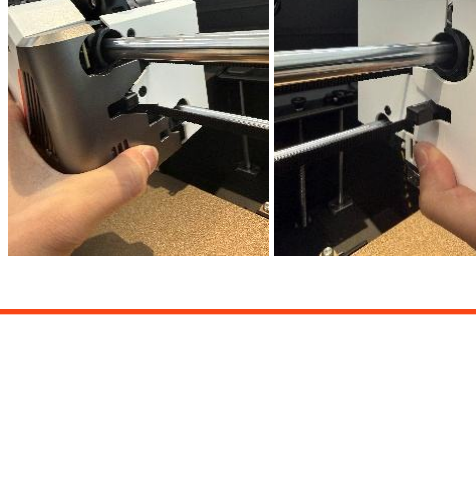


2. Use the H2.5 hex key to screw back the four screws (again, the top-left screw is the longer one). Slide the collision block to verify smooth movement.

6

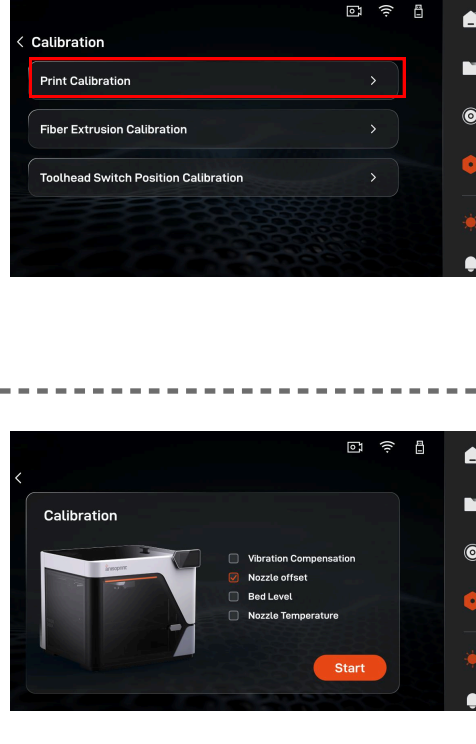


Step 7. Reconnect Cables

1. Ensure the latch side of the heater cartridge connector faces the operator.
2. Plug it back into the mainboard.

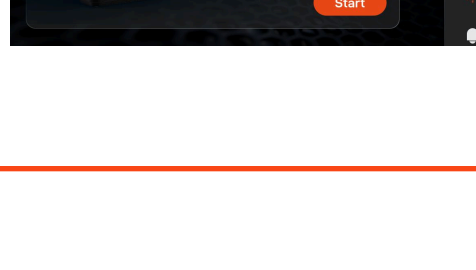

7

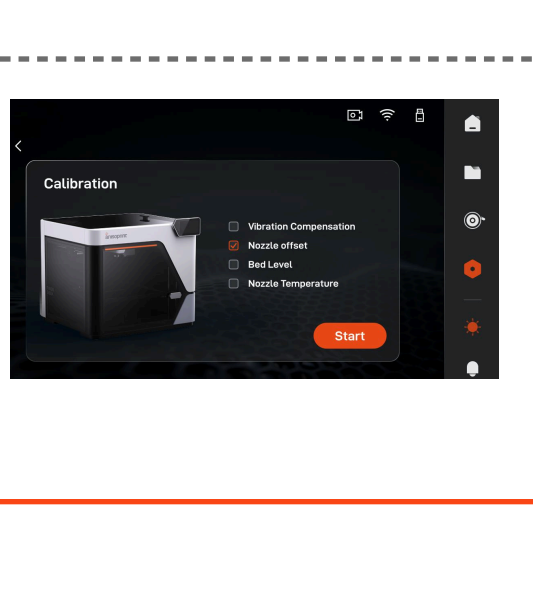


Step 8. Reinstall the Front Cover

1. Reinsert the fan plug into the corresponding port on the mainboard with the latch side facing up.
2. Pinch the lower part of the front cover, align the latch with the hole on the rear cover, and push the cover backward onto the toolhead.

3. When it clicks into place, the replacement is complete.

8

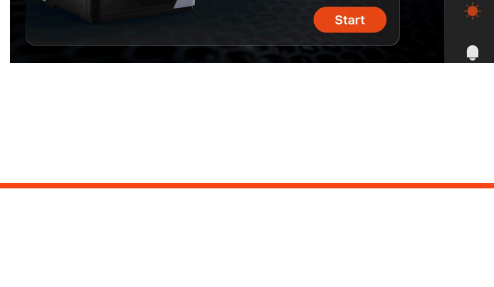

Step 9. Perform XYZ Offset

1. Power on and wait for boot. Tap the settings icon on the right side of the toolbar, and select "Calibration" → "Print Calibration".

2. Select only "Nozzle offset". Click "Start" and wait for the process to finish. The printer is ready for use.

3. Skipping this step may cause issues during printing.

9