


Composite Plastic Hotend Unclogging

This SOP describes how to clear clogs in the composite plastic hotend of FibreSeeker 3. Its purpose is to safely and effectively resolve nozzle clogging issues.

1. Tools


H3, H2.5, and H1.5 hex keys, an unclogging pin tool, and heat-resistant gloves.

2. Precautions:

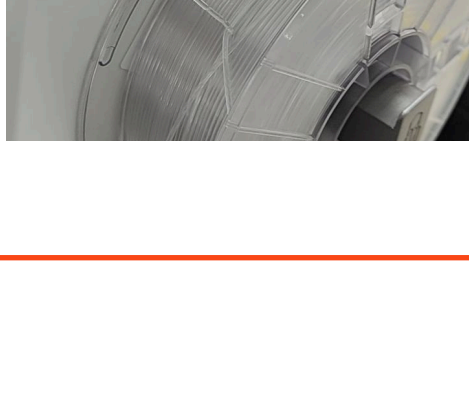

The troubleshooting process requires heating. Wear heat-resistant gloves when working near the print hotend to prevent burns.


1

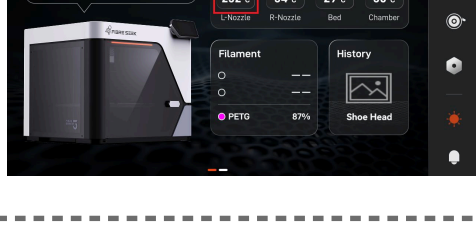

Step 1

Heat the Left Nozzle

Heat the left nozzle to the material's printing temperature (lower temperatures may block extrusion).

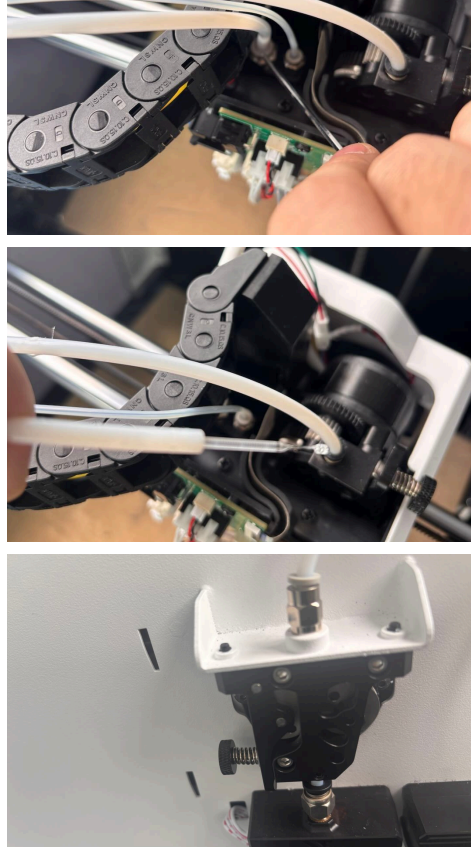


Step 2

Disconnect Tube and Check

Disconnect the PTFE tube. Take another piece of filament and firmly push it into the hotend. If filament comes out of the nozzle, the path is clear, and you should check the extruder for faults. A faulty extruder typically makes loud, abnormal noises during operation. If this occurs, replace the extruder immediately.

2

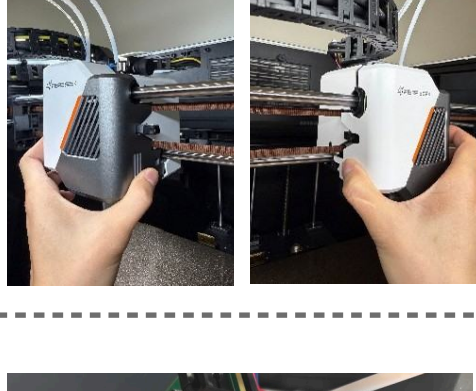


Step 3

Remove the Toolhead Front Cover

Step 3.1


Power off the printer. Press the bottom clips on both sides of the front cover simultaneously, then pull the cover forward to remove it.

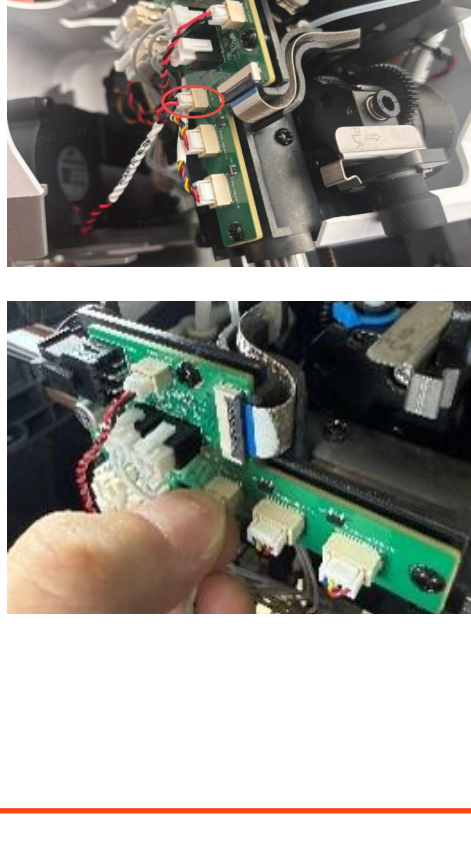

Step 3.2

Pinch the latch on the fan at the "FAN-R" position on the mainboard and unplug it to remove the front cover of the toolhead.

3

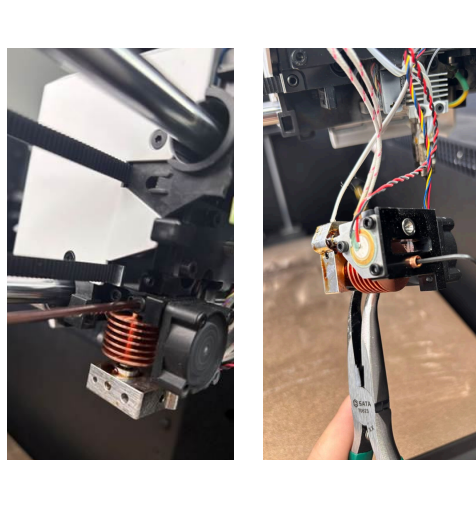

Step 4

Remove and Clear the Composite Hotend

If the nozzle is partially clogged, use an H2.5 hex key to remove the two fixing screws and remove the composite hotend assembly. Then, use a slender hex key or a similar tool to force through the nozzle to clear the blockage. Once filament can exit the nozzle, reassemble the hotend and extrude several times to flush out remaining debris. If the clog cannot be cleared, replace the composite hotend assembly with a new one.




Step 5

Reinstall the Composite Hotend

Install a new hotend or reinstall the composite hotend assembly.




4

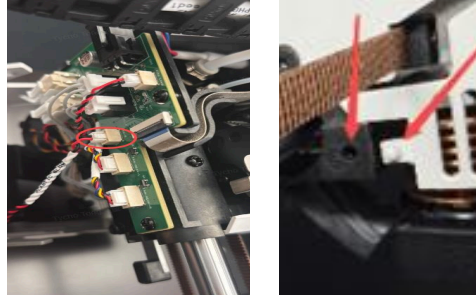


Step 6

Reinstall the Toolhead Front Cover

Plug the fan cable of the front cover back into the corresponding port on the mainboard. Make sure the two bottom clips align with their holes and snap into place.

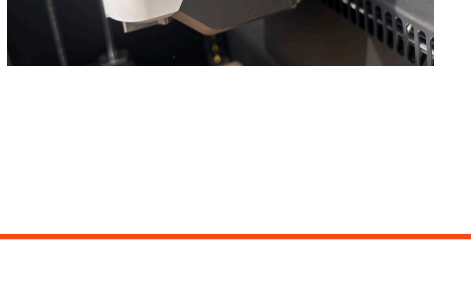



5

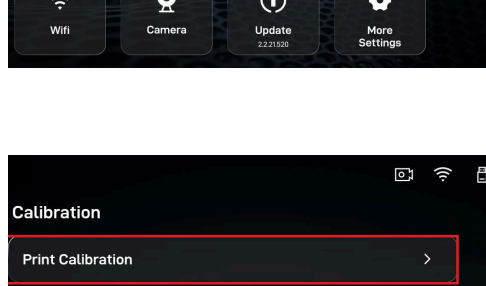

Step 7

Calibrate

After installation, manually calibrate the nozzle offset. Select "Nozzle offset" only.

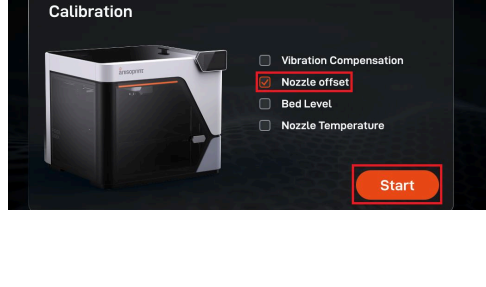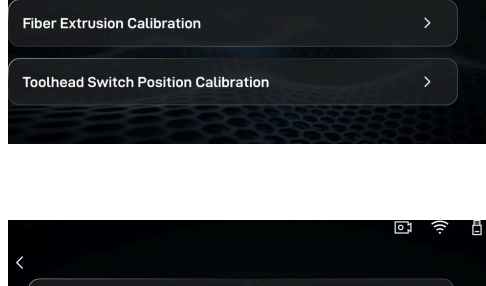

6