

# Fiber Extruder Rubber Roller Replacement

This SOP describes how to replace the rubber rollers on the fiber extruder of FibreSeeker 3 safely and effectively.


## 1. Tools:

H2.5 and H3 hex keys

## 2. Precautions:

None

1

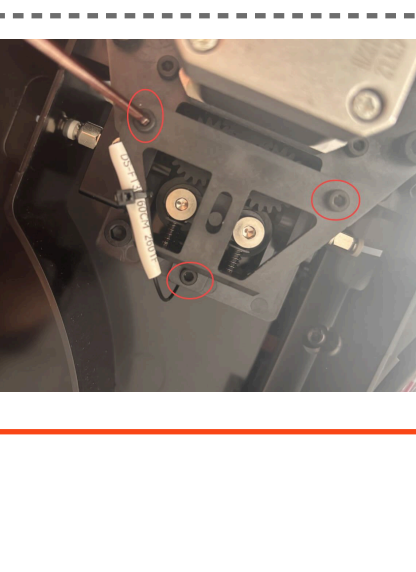

### Step 1

Click the third icon in the right toolbar as shown in the picture. On the page that opens, select “Fiber” > “Unload” to retract the fiber from the PTFE tube.

### Step 2 Remove the Side Panel of the Extruder

Use an H3 hex key to remove the two screws connecting the back panel to the side panel, and the four top fixing screws. Then take off the side panel.

### Step 3 Disassemble

Use an H2.5 hex key to loosen the 3 fixing screws and remove the extruder.

2



### Step 4

Press the driven pulley to remove the planetary gear.

### Step 5

Use an H3 hex key to remove the adjustment screws.

### Step 6

Push out the bearing and remove the rubber covering. Replace the rubber coverings on the four rubber wheels. At the same time, check whether the rubber covering and the bearing are installed on the same horizontal plane.


### Step 7

Simply remove the bearing and connecting rod to replace the rubber on the driving wheel.

### Step 8


Install the rubber wheel, and use the H3 hex key to tighten the adjustment screw slightly.

4

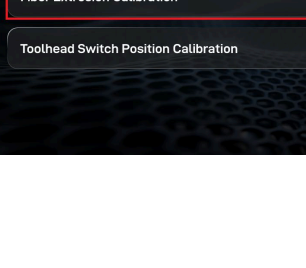

### Step 9

Press the driven pulley, reinstall the planetary gear, and manually rotate the gear to check if the rubber rollers wobble. Slight wobble is acceptable.

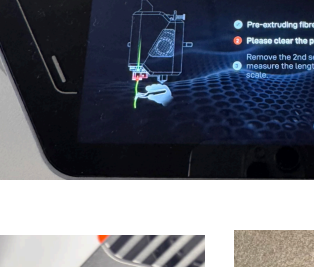


### Step 10

First check if the rubber roller is not fully seated. After adjusting, check that the driven pulley adjustment screw is tightened.



### Step 11 Reinstall the Extruder

5

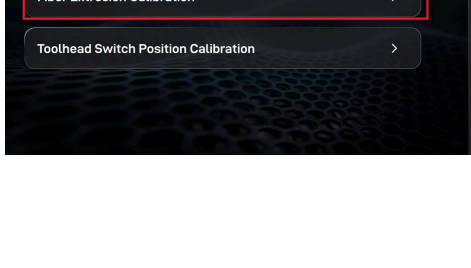


### Step 12

Test fiber extrusion.




### Step 13.1

Click the settings icon on the right side of the toolbar, then select “Calibration” > “Fiber Extrusion Calibration”.

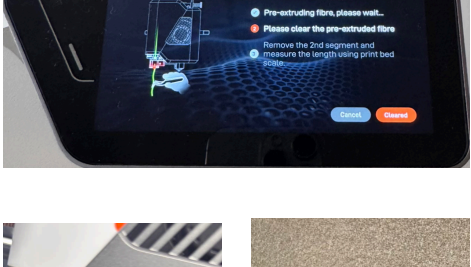


6

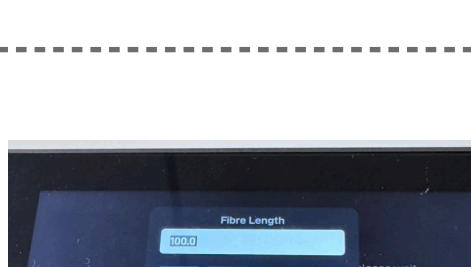


### Step 13.2

Follow the on-screen instructions. Measure the length of the second segment, which should be 100 mm ± 0.5 mm. (Do not measure the first segment, which is inaccurate.)

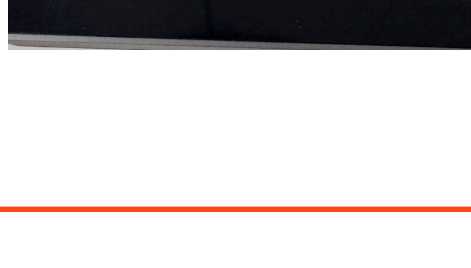

### Step 13.3

Enter the measured length in the Fiber Length field.

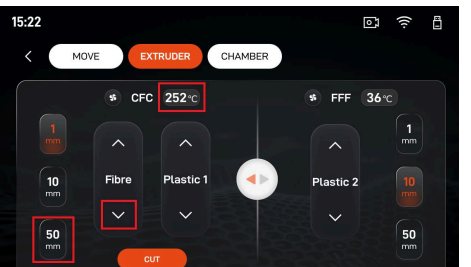

### Step 13.4

Repeat Step 13.1-13.3 twice, ensuring the length from the second extrusion is within 100 mm ± 0.5 mm each time. You may also compare two 100 mm extrusions (the nozzle must be heated above 180°C). If the lengths differ significantly, go back and check Step 9-10.



### Step 14 Install the Side and Back Panels

Install the 4 fixing screws on top of the side panel. Do not install the two screws that secure the side panel to the back panel yet.

8