

Disassemble/Reassemble : Fiber Hotend Temperature Sensor

1. Tools :

Fiber hotend temperature sensor, H1.5 hex key, H2.5 hex key, diagonal pliers, thermal grease.

2. Precautions :

Always power off before operation. Beware of high temperature. Avoid pulling or straining cables to prevent loose connections.


1




Step 1.

Power Off

1. Flip the red switch on the rear of the machine to "O".

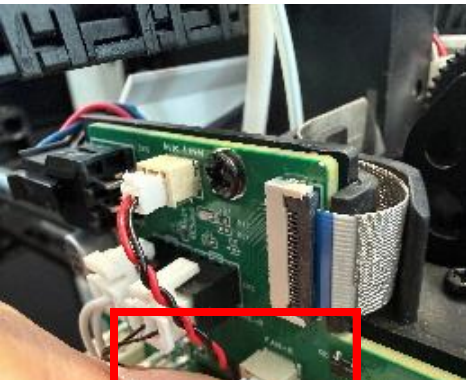


2. Pinch the lower left side of the front cover to release the latch.

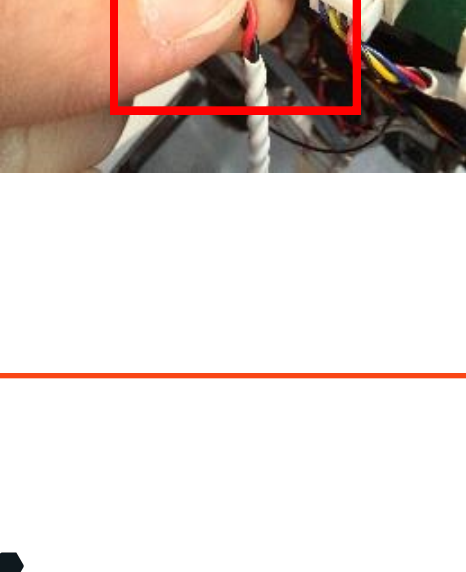

3. Pull the toolhead front cover forward to remove it.


2

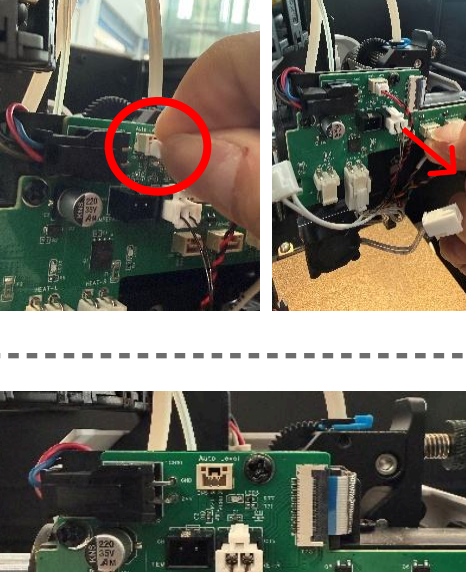

Step 2.

Remove the Toolhead Front Cover

1. Pinch the latch on the fan plug at the "FAN-R" position on the mainboard.

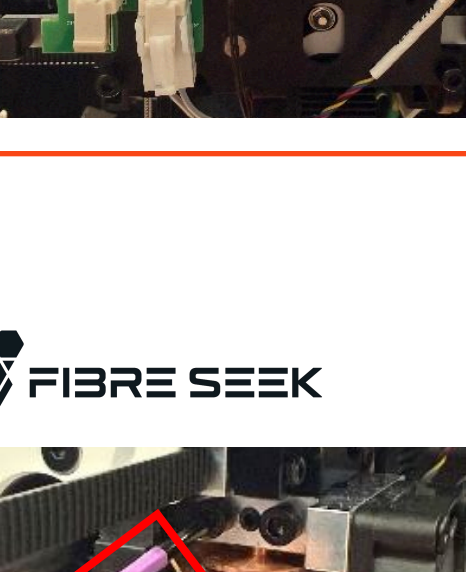

2. Unplug the fan connector to remove the front cover.

3



Step 3.

Loosen Cable Connectors


1. Pinch the latch on the ceramic heater plug at the "HRAT-L" position to unplug the heater.



2. Pinch the latch on temperature sensor plug at the "TEMPERATURE-L" position to unplug the sensor.




3. Press the latch on the heat sink fan connector at the "FAN-NEAK-L" position to unplug the fan.

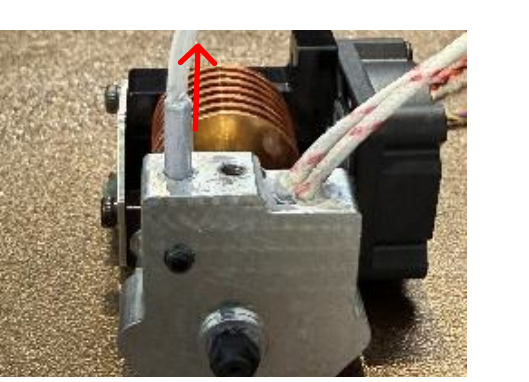

4. Press the latch on the auto-leveling sensor connector at the "Auto Level" position to unplug the sensor.


4

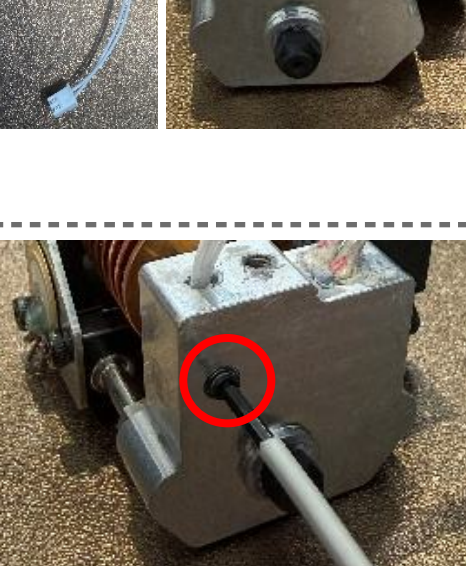

Step 4.

Remove the Fixing Screws

1. Use an H2.5 hex key.

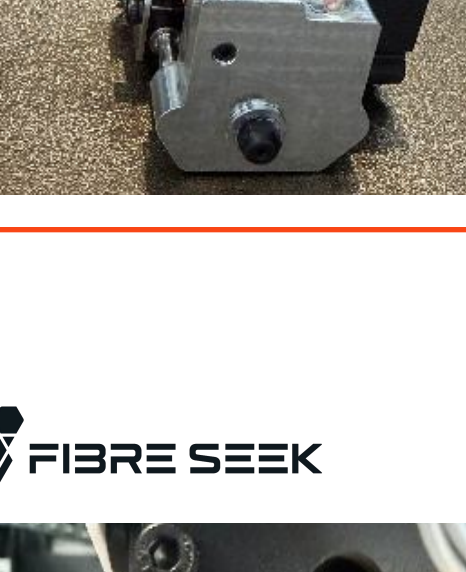


2. Remove two screws securing the left composite head hotend.



3. Remove the entire hotend assembly.


5

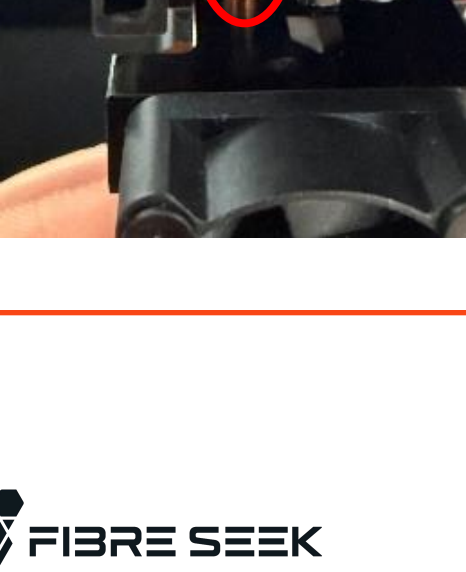


Step 5.

Remove the Old Temperature Sensor

1. Use the H1.0 hex key to turn the set screw counterclockwise for 3-4 rotations from the bottom.

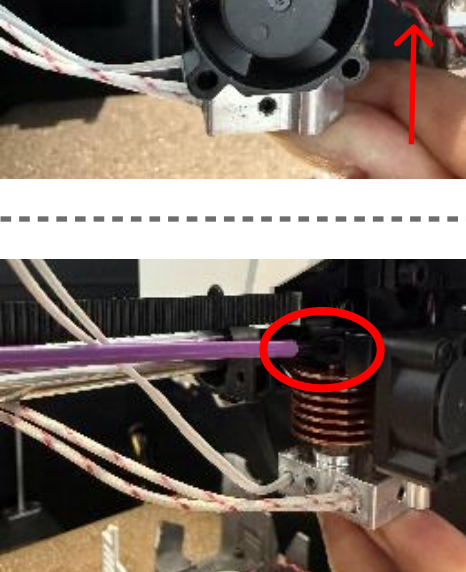


2. Loosen the fiber hotend temperature sensor, grasp the cable from above, and slowly pull up the sensor.

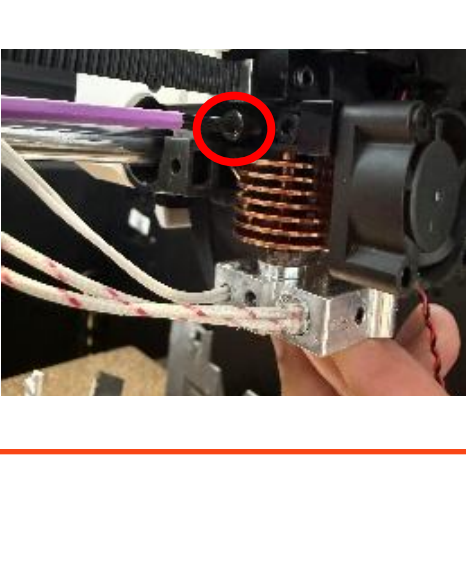

3. You can remove the sensor.


6

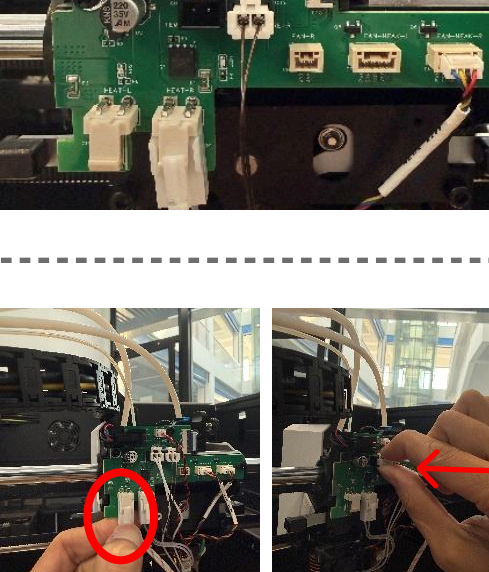


Step 6.

Install a New Temperature Sensor

1. Apply a thin layer of thermal grease to the probe housing of the new fiber hotend temperature sensor. Insert the sensor vertically downward to the full depth (the entire heated section must be fully embedded in the hole).

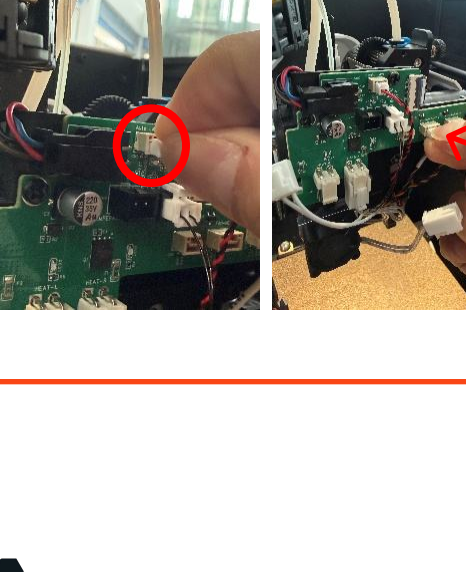


2. Use the H1.0 hex key to tighten the set screw clockwise to secure the sensor.

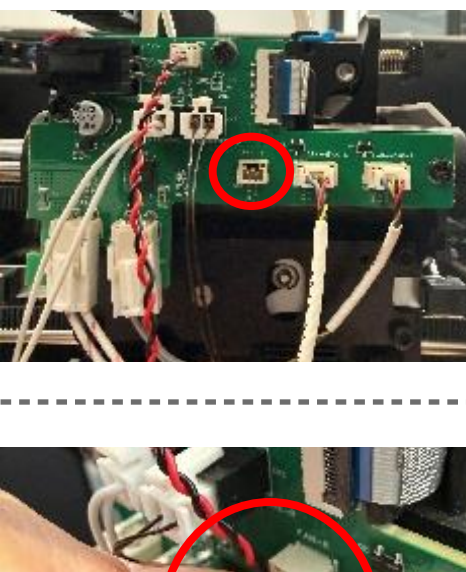

3. Do not overtighten. Excessive force will compress the probe housing and damage internal components.


7

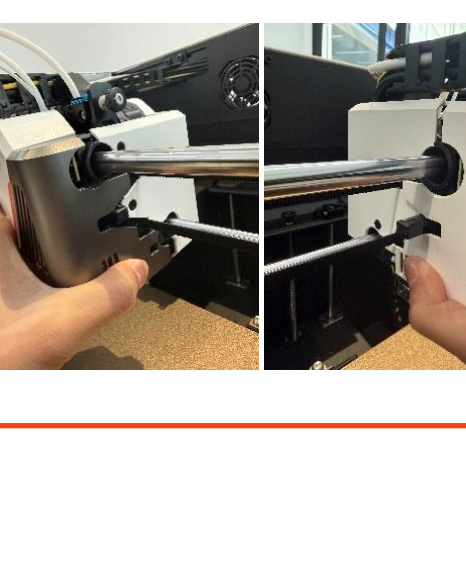

Step 7.


Trim the Filament Inlet

1. Use side cutters to trim off about half of the excess plastic from the fiber hotend inlet. This prevents residual material in the throat tube from blocking full insertion.

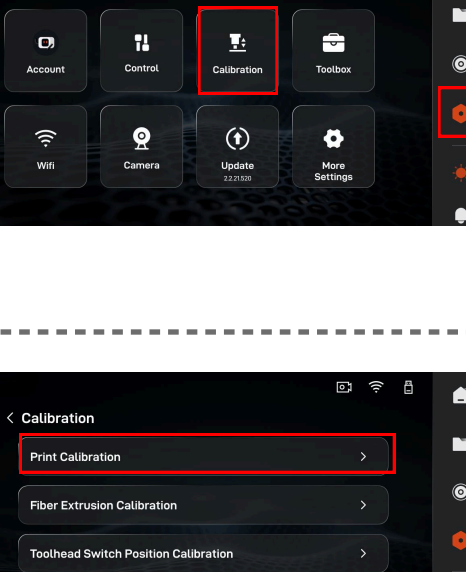

2. Align the copper tube of the assembled fiber hotend with the filament path.

8

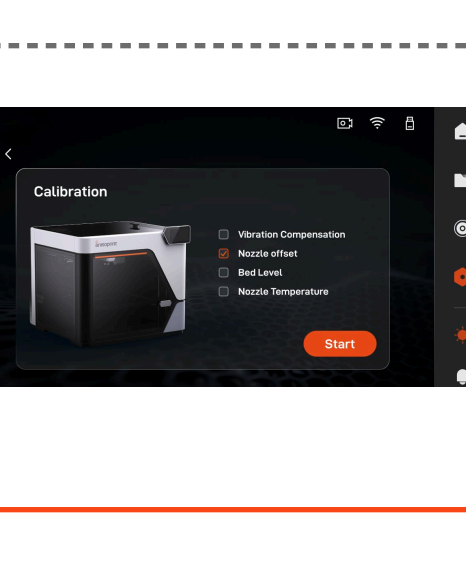

Step 8.

Reinstall the Hotend Assembly

1. Push the hotend upward from the bottom.

2. Tighten the two fixing screws for the fiber hotend after ensuring no gaps between the two planes.

3. Keep pushing upward by hand to prevent the hotend from moving downward.

9

Step 9.

Reconnect Cables

1. Pinch the latch on the ceramic heater plug at the "HRAT-L" position to replug the heater.

2. Pinch the latch on temperature sensor plug at the "TEMPERATURE-L" position to replug the sensor.

3. Press the latch on the heat sink fan connector at the "FAN-NEAK-L" position to replug the fan.

4. Press the latch on the auto-leveling sensor connector at the "Auto Level" position to replug the sensor.

10

Step 10.

Reinstall the Front Cover

1. Reinsert the fan plug into the corresponding port on the mainboard with the latch side facing up.

2. Pinch the lower part of the front cover, align the latch with the hole on the rear cover, and push the cover backward onto the toolhead.

3. When it clicks into place, the replacement is complete.

11

Step 11.

Perform XYZ Offset

1. Power on and wait for boot. Tap the settings icon on the right side of the toolbar, and select "Calibration" → "Print Calibration".

2. Select only "Nozzle offset". Click "Start" and wait for the process to finish. The printer is ready for use.

3. Skipping this step may cause issues during printing.

12