

Disassemble/Reassemble :

Plastic Hotend Ceramic Heater


1. Tools :

Plastic hotend assembly, H1.5 & H2.5 hex keys, thermal grease.

2. Precautions :

Always power off before operation. Beware of high temperature. Avoid pulling or straining cables to prevent loose connections.


1

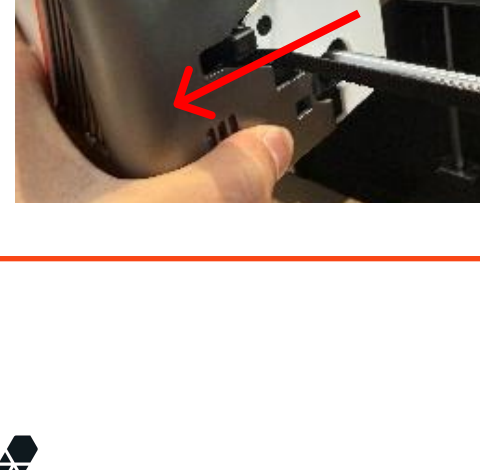FIBRE SEEK


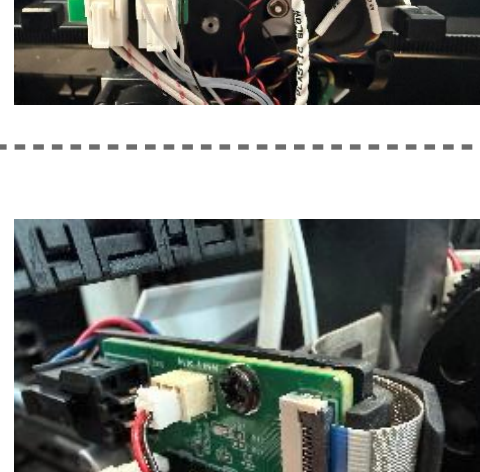
Step 1.

Power Off

1. Flip the red switch on the rear of the machine to "O".

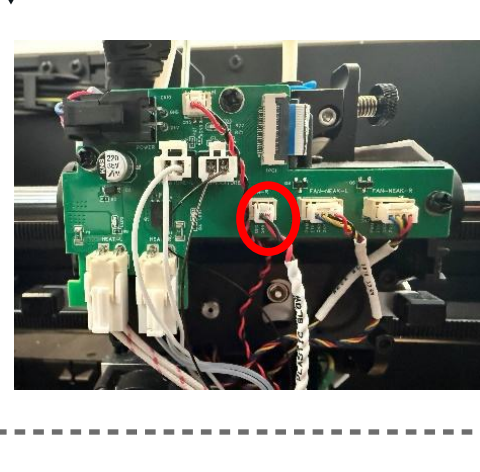


2. Pinch the lower left side of the front cover to release the latch.



3. Pull the toolhead front cover forward to remove it.

2

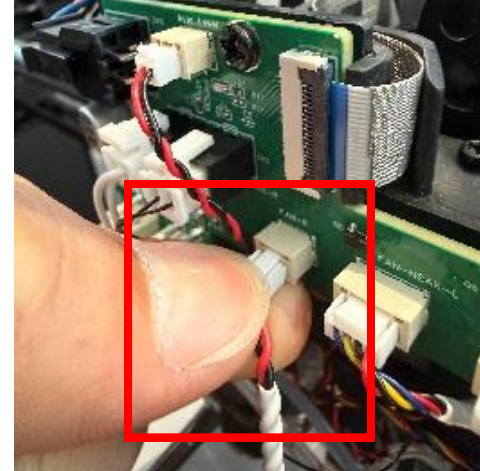FIBRE SEEK


Step 2.


Remove the Toolhead Front Cover

1. Pinch the latch on the fan plug at the "FAN-R" position on the mainboard.



2. Unplug the fan connector to remove the front cover.


3

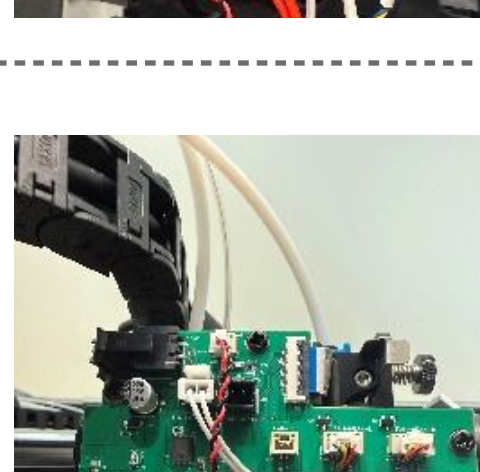FIBRE SEEK


Step 3.


Loosen the Cable Connectors

1. Disconnect the two cables connected to the plastic hotend.

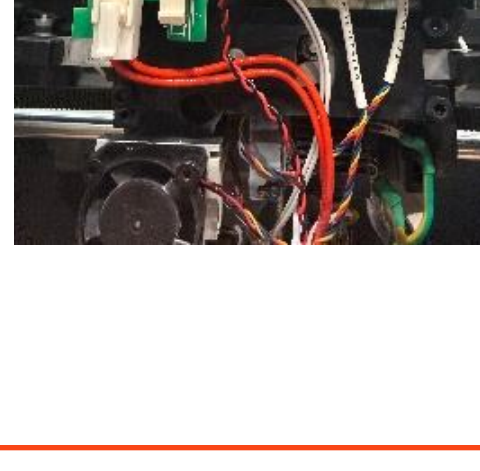

2. Pinch the latch on the ceramic heater plug at the "HRAT-R" position on the mainboard and unplug it. Pinch the latch on the temperature sensor plug at the "TEMPERATURE-R" position on the mainboard.


4

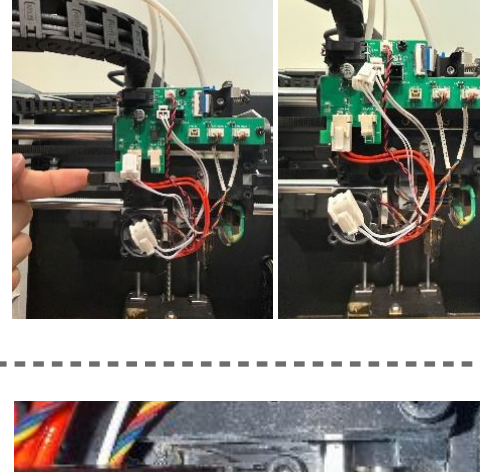FIBRE SEEK


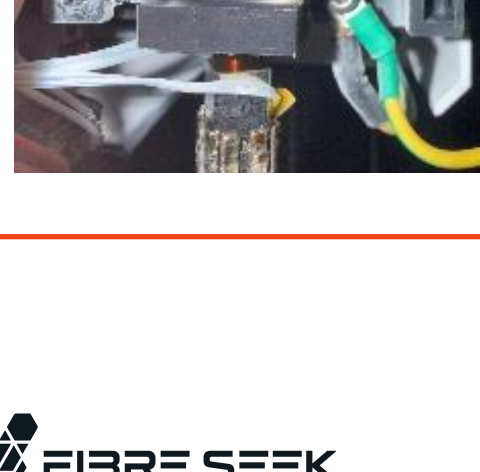
Step 4.

Remove the Hotend Fixing Screws

1. Press the collision block from the left side to switch the print head to plastic mode.

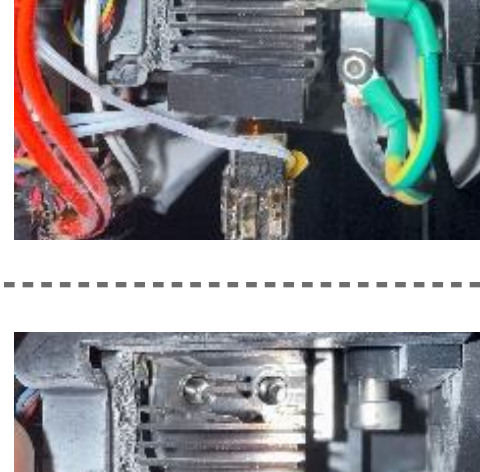


2. Remove the two front screws securing the plastic hotend with the H2.5 mm hex key.



3. Take out the entire plastic hotend assembly.


5

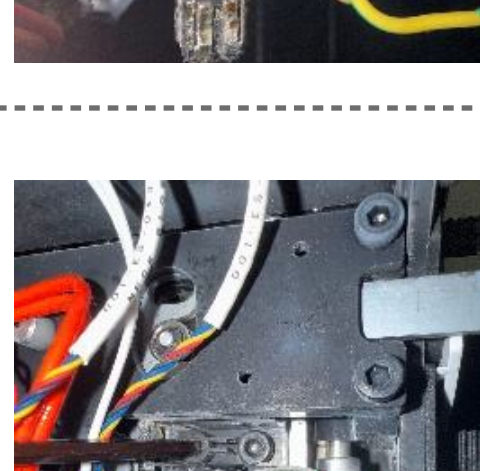FIBRE SEEK


Step 5.


Reassemble the New Hotend

1. Prepare the new hotend assembly. Push it upward from the bottom.

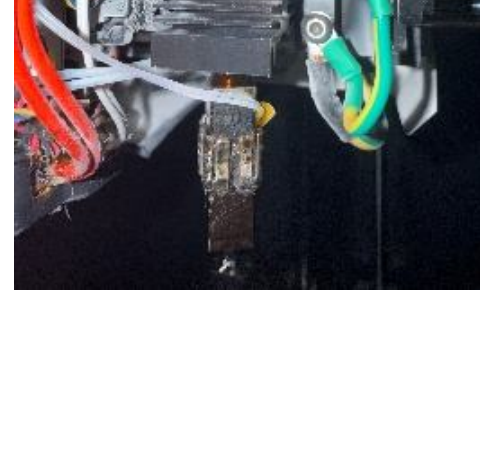

2. Tighten the 2 fixing screws of the plastic hotend after ensuring no gaps between the two planes (keep pushing upward by hand to prevent the hotend from moving downward).


6

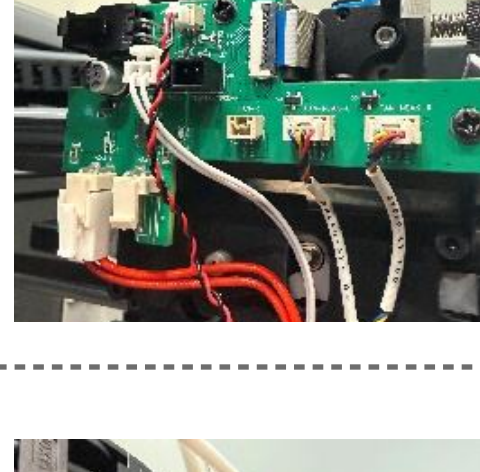FIBRE SEEK


Step 6.

Reconnect the Cable Connectors

1. Reconnect all component cables of the plastic hotend assembly.

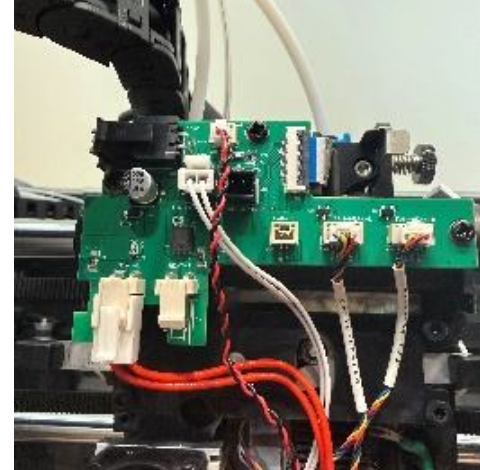

2. Insert the ceramic heater plug and the temperature sensor plug into the ports labeled "HRAT-R" and "TEMPERATURE-R" on the mainboard respectively.


7

FIBRE SEEK



Step 7.

Reinstall the Front Cover

1. Reinsert the fan plug into the corresponding port on the mainboard with the latch side facing up.

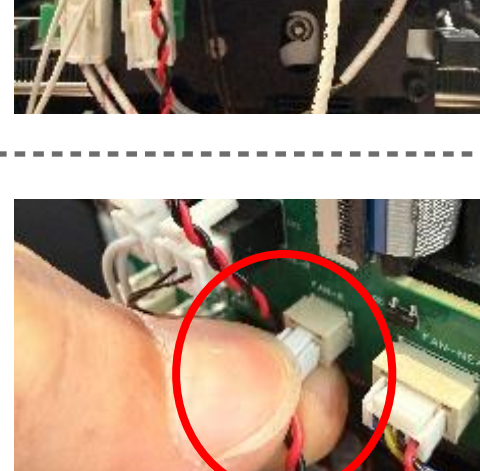


2. Pinch the lower part of the front cover, align the latch with the hole on the rear cover, and push the cover backward onto the toolhead.

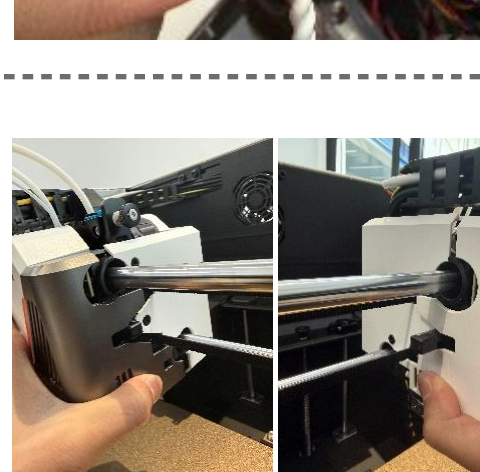

3. When it clicks into place, the replacement is complete.


8

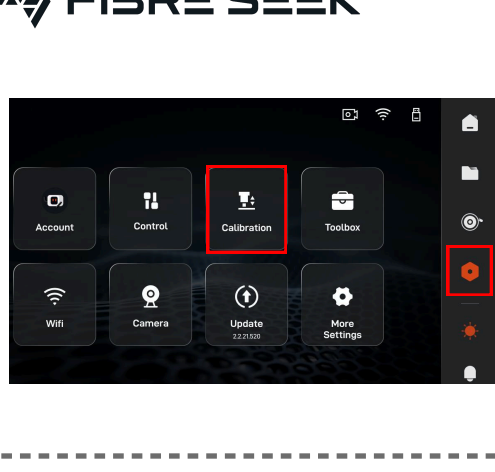FIBRE SEEK


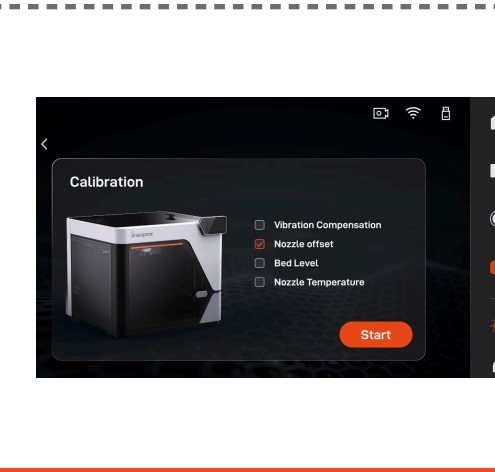
Step 8.

Perform XYZ Offset

1. Power on and wait for boot. Tap the settings icon on the right side of the toolbar, and select "Calibration" → "Print Calibration".

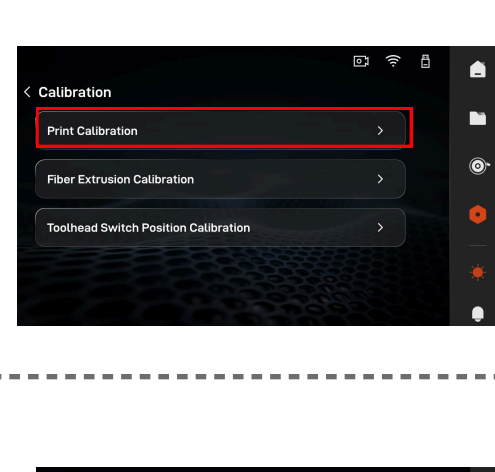

2. Select only "Nozzle offset". Click "Start" and wait for the process to finish. The printer is ready for use.



3. Skipping this step may cause issues during printing.

9