

Disassemble/Reassemble :

Toolhead Fan (Fiber Nozzle)

1. Tools :

New fan, Phillips screwdriver, H1.5 hex key

2. Precautions :

Always power off before operation. Beware of high temperature. Avoid pulling or straining cables to prevent loose connections.

1




Step 1. Power Off and Remove the Fixing Screws

1. Power Off.



2. Use an H2 hex key.

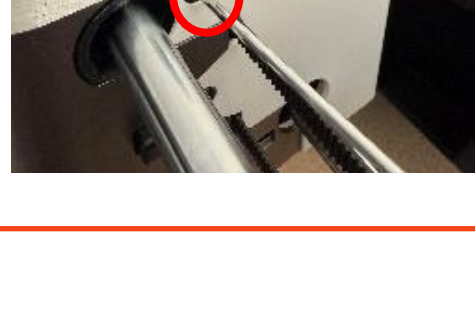

3. Remove the four fixing screws on the rear cover (two on the left, two on the right).

1



Step 2. Loosen the Cable Connectors to Remove the Rear Cover

1. Slide the toolhead rear cover horizontally backward to detach it.



2. Press the white latch on the fan connector.




3. Remove the rear cover.

2



Step 3. Remove the Old Air Guide

1. Use a Phillips screwdriver.

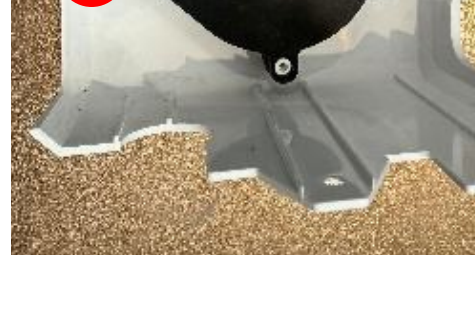


2. Remove the screw securing the fiber air guide.

3




Step 4. Install the New Air Guide

1. Remove the air guide and pull the old fan upward.

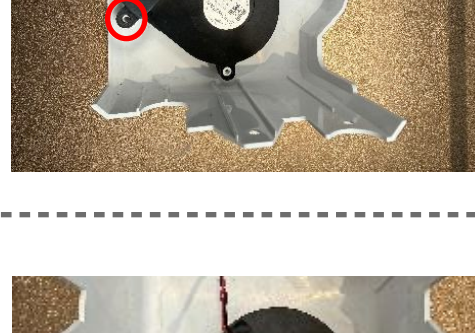

2. Take the new fan and install it in the original position.

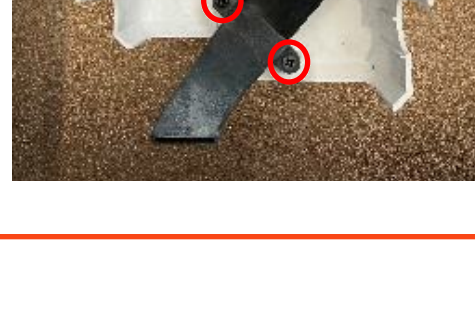

3. Tighten the screw on the air guide. The air inlet of the air guide should completely wrap around the fan's air outlet.

4



Step 5. Reconnect Cables

1. Ensure the latch side of the fan connector faces upward.



2. Plug the fan connector back into the corresponding port on the rear mainboard.



3. Ensure the direction and reinstall the rear cover.

5



Step 6. Reinstall the Rear Cover

1. Tighten the four fixing screws.



2. Tighten two screws on the left and two on the right.

6