

Disassemble/Reassemble:

Toolhead Fan (Plastic Nozzle)

1. Tools :

New Fan, Phillips Screwdriver, H3 Hex Key.

2. Precautions :

Always power off before operation. Beware of high temperature. Avoid pulling or straining cables to prevent loose connections.

1



Step 1.

Power Off

1. Flip the red switch on the rear of the machine to "O".




2. Pinch the lower left side of the front cover to release the latch.



3. Pull the toolhead front cover forward to remove it.


1

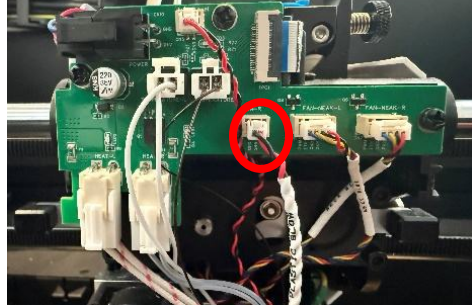

Step 2.

Remove the Toolhead Front Cover

1. Pinch the latch on the fan plug at the "FAN-R" position on the mainboard.

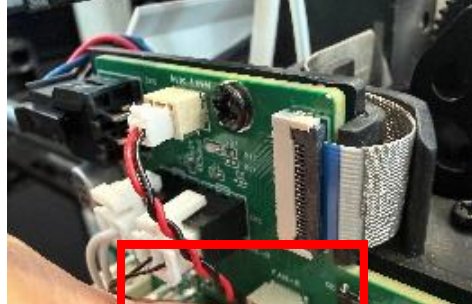

2. Unplug the fan connector to remove the front cover.

2




Step 3.

Remove the Old Air Guide

1. Use the Phillips screwdriver to remove the screw securing the plastic air guide.



2. Use the H3 hex key.

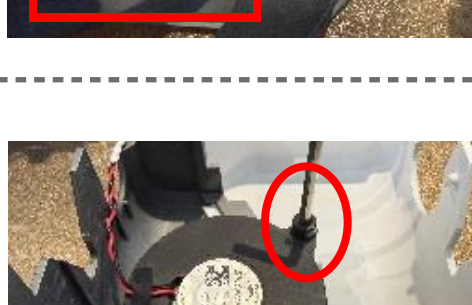

3. Remove the two screws holding the fan.


3




Step 4.

Install the new air guide

1. Align the screw holes of the new air guide with the original fixing positions, then tighten the Phillips screw.

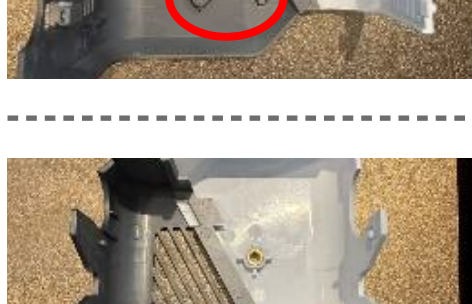


2. Insert the fan outlet into the groove of the air guide.

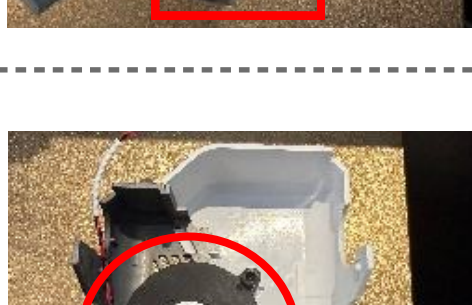

3. Tighten the two fan screws. Assembly is now complete.


4

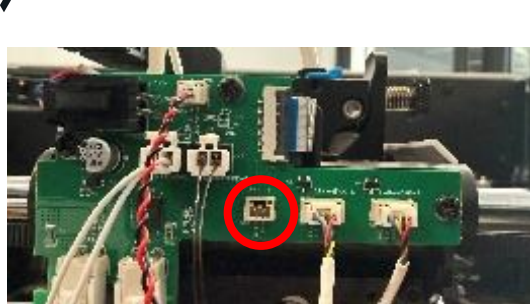


Step 5.

Reinstall the Front Cover

1. Reinsert the fan plug into the corresponding port on the mainboard with the latch side facing up.

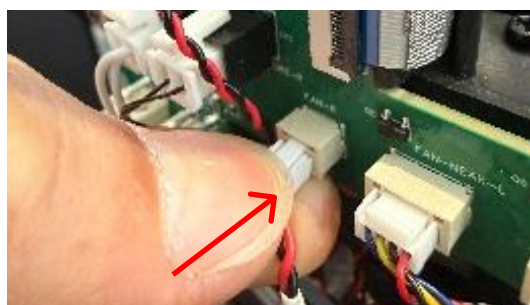

2. Pinch the lower part of the front cover, align the latch with the hole on the rear cover, and push the cover backward onto the toolhead.

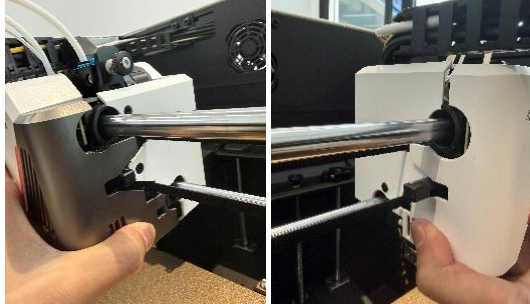

3. When it clicks into place, the replacement is complete.

5