

Heatbed Leveling

This SOP describes the procedure for correcting an uneven heatbed on the FibreSeeker 3 3D printer.


1. Tools:

A4 paper, H2 hex wrench

2. Precautions:


The heatbed is to be heated and will reach high temperatures. Take care to avoid burns.

1

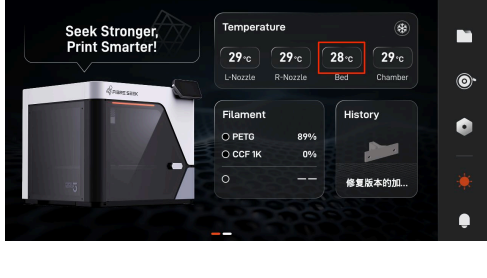


Steps Preparation

1. Preheat the heatbed to normal printing temperature (PLA: 55 °C, PETG: 75 °C). Since the bed expands with heat, leveling it cold will be inaccurate.

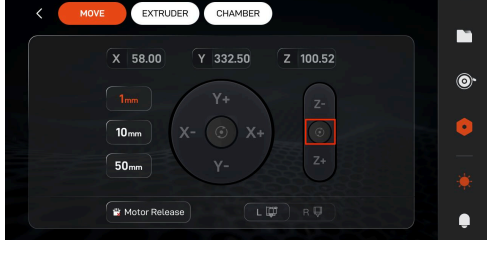


2. Clean the heatbed: remove residual filament, tape bumps, and dust to ensure a flat, even contact area.

3. Click the button circled in a red box (as shown in the picture) to move the nozzle to the home position.

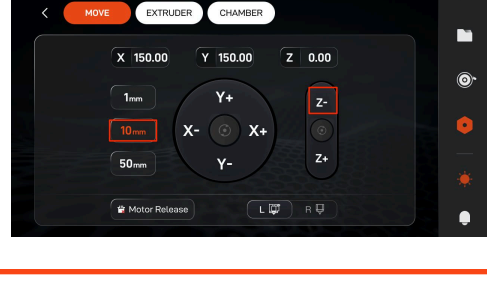


4. Select 10mm and click Z-.


2

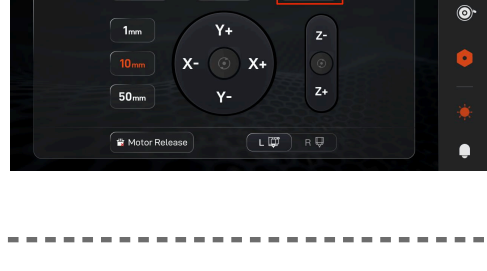

5. The Z axis will show 0.

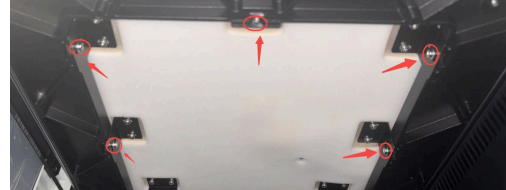


6. Slightly loosen the seven retaining screws on the underside of the heatbed. Do not remove them.

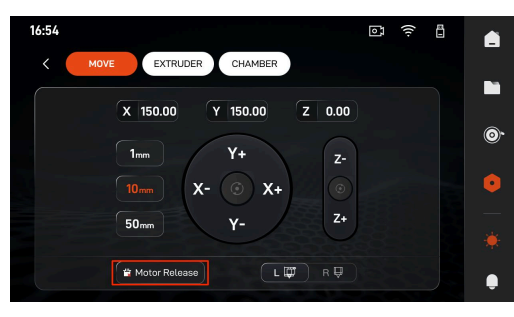

7. Tap Motor Release.


3

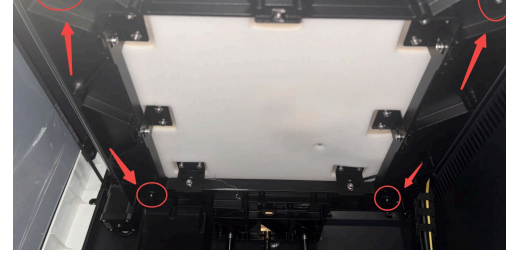

8. Move the printhead to each corner of the heatbed, and adjust the corresponding leveling screw at that corner.



9. Insert a sheet of A4 paper between the left nozzle and the heatbed. Slide it back and forth. You should feel a light, even drag, not too tight and not too loose. Repeat this check 2–3 times at each corner.

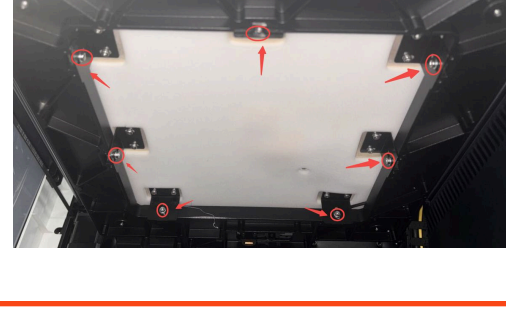

10. Firmly tighten the seven retaining screws after sliding.

4

Single-point adjustment method

1. Move the nozzle to one corner and place the paper between the nozzle and the heatbed.

2. Turn the screw underneath that corner:

- Turn down (tighten) → heatbed rises, nozzle moves closer, paper drags more.
- Turn up (loosen) → heatbed lowers, gap increases, paper slides out easily.

3. Feeling: when sliding the paper, you should sense a light, even resistance. Neither tight nor loose.

5