


2231 X2 - Exploded view

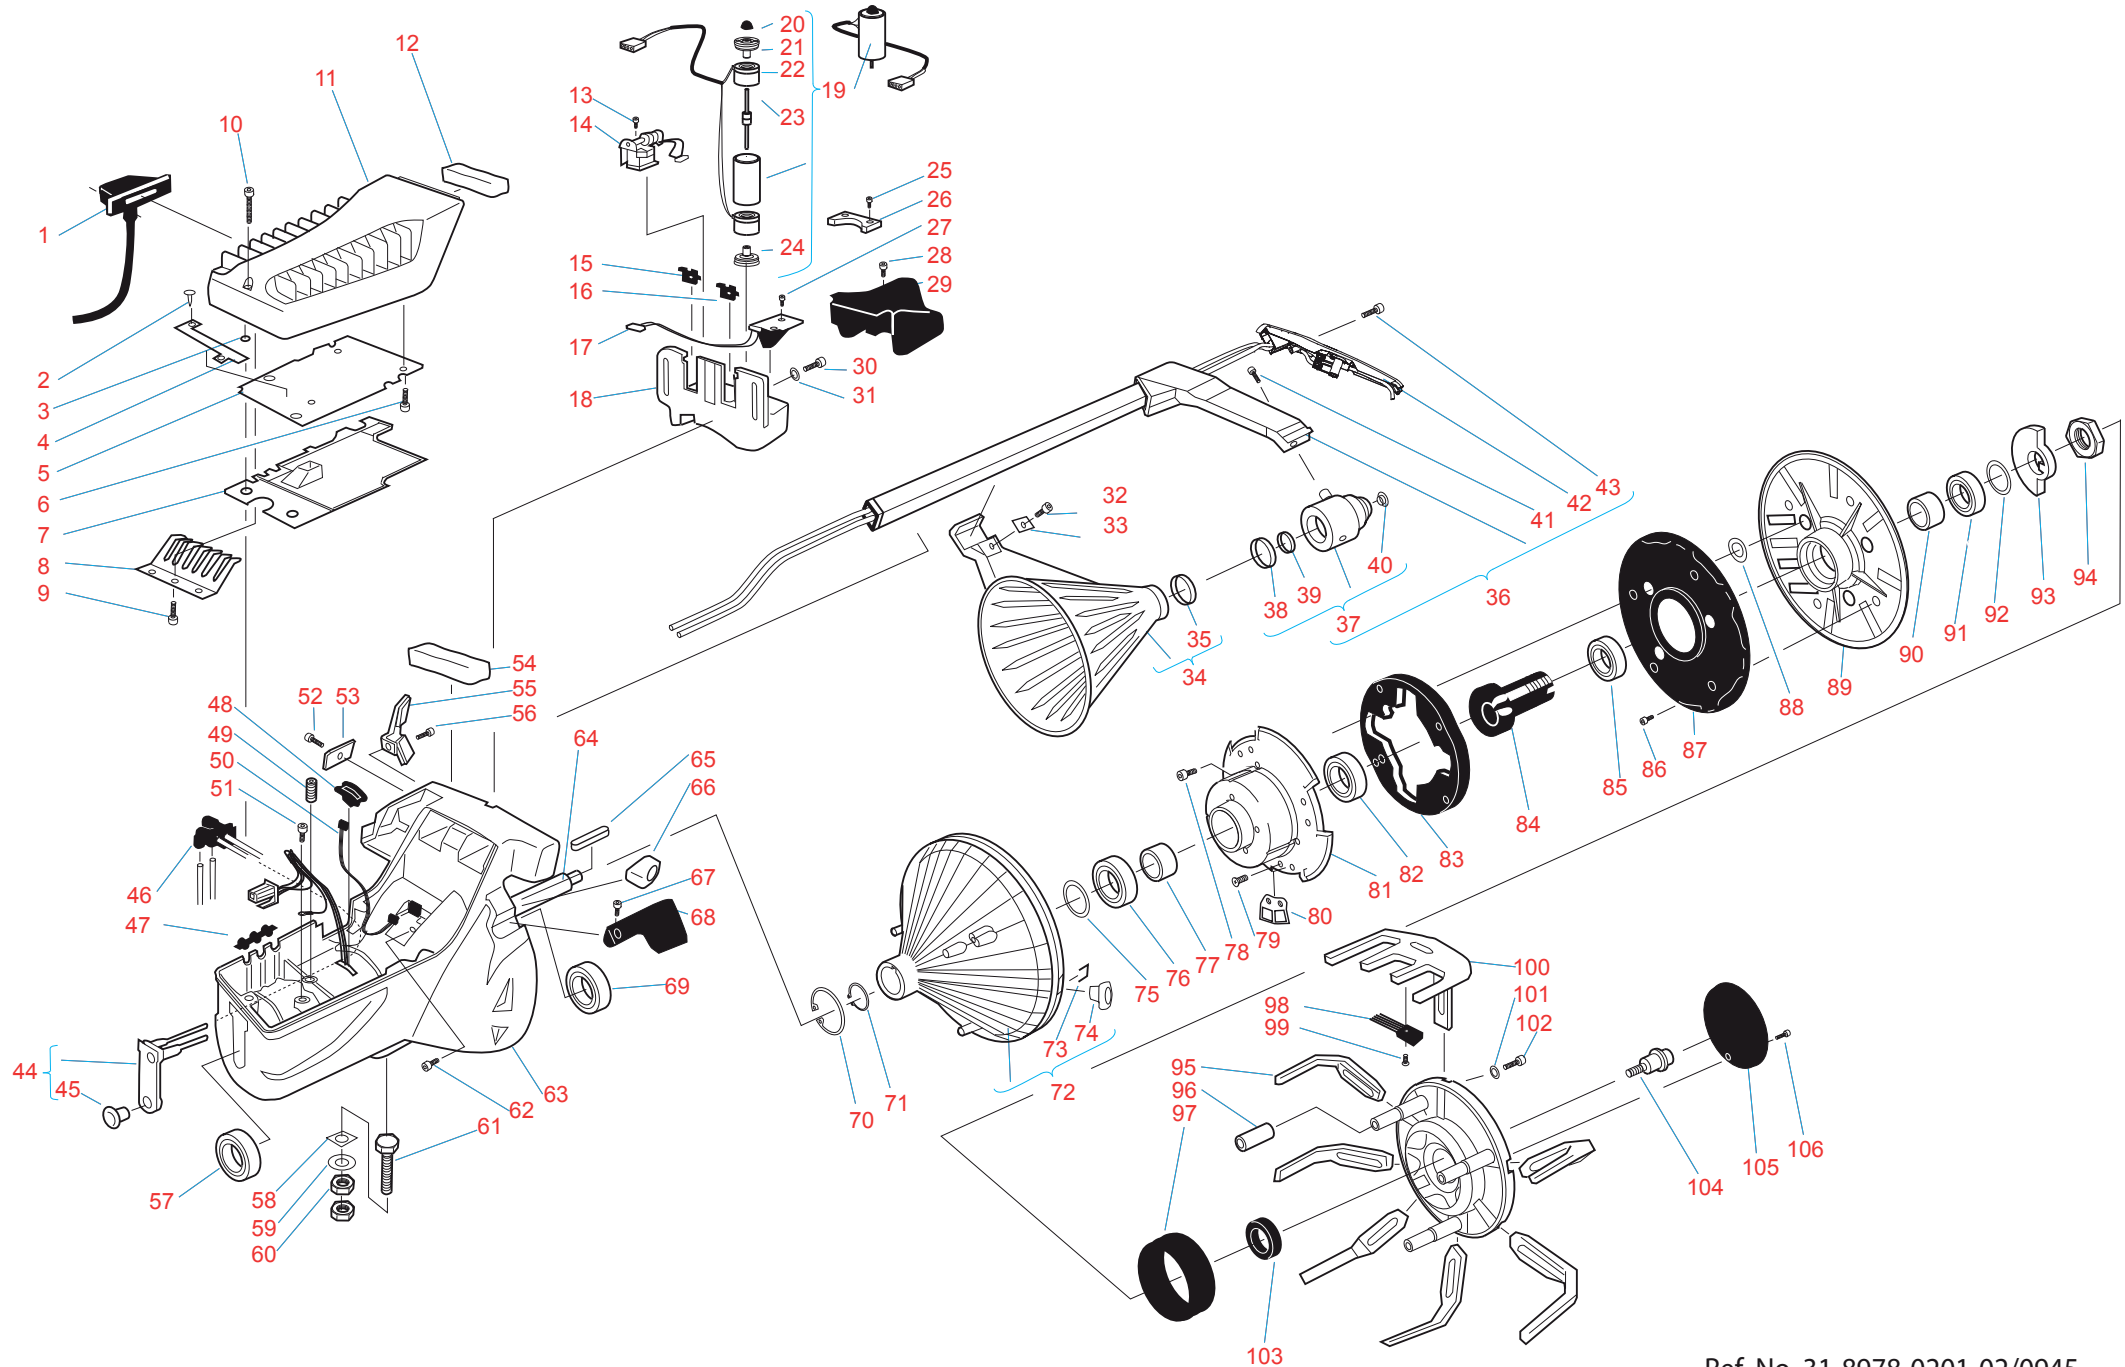


PAGE 1 (2)	Spare parts list for Iro IWF 2231F.24.X.	REF. NO. 31-8978-0201- 02/0945	
---------------	--	--------------------------------------	---

POS	PART NO	DESCRIPTION	REMARKS
1	27.0676.1200	CABLE 1,2 m	
2	900.9390	PLASTIC PLUG	
3	900.9355	O-RING	
4	31.1290	GAP PAD	
5	31.9130.000	CIRCUIT BOARD	
6	900.0117	SCREW	
7	31.1291	SAFETY COVER	
8	31.1253	RADIATOR SHEET	
9	900.0117	SCREW	
10	900.0447	SCREW	
11	31.1256.001M	CIRCUIT BOARD COVER COMPL.	
12	31.1293	SEALING	
13	900.0087	SCREW	
14	31.1236	RESERVE SENSOR	
15	31.1011	SEAL (for magnet cable)	
16	31.1010	SEAL (for band cable)	
17	31.1068	SENSOR CIRCUIT	
18	31.1058	STOPPER HOUSING	
19	31.0964.005	STOPPER MAGNET COMPL.	
20	31.1096	COVER	
21	31.1034.001	FRONT	
22	31.1038.001	COILS	
23	31.1037.002	PLUNGER	
24	31.1034.001	FRONT	
25	900.0075	SCREW	
26	31.1022	MAGNET HOLDER	
27	900.0087	SCREW	
28	900.0117	SCREW	
29	31.1046	COVER	
30	900.0260	SCREW	
31	900.2091	WASHER	
32	900.0114	SCREW	
33	31.1220	CLAMP BALLOON CONE	
34	31.1221	BALLOON CONE	
35	900.6144	EYELET	
36	31.1223.003	PFT BAR COMPL.	
37	31.1218.002	NOZZLE COMPL.	
38	900.6144	EYELET	
39	31.1198	EYELET NOZZLE INSERT	
40	31.1199	EYELET NOZZLE OUTLET	
41	900.0081	SCREW	
42	31.1209.001	ARM COVER COMPL.	
43	900.0117	SCREW	
44	31.1210.001	VALVE COMPL.	
45	900.6101	EYELET	
46	31.1307	AIR CONNECTOR	
47	31.1294	PLUG MOTOR HOUSING	
48	31.1093	GROMMET	
49	900.0532	SCREW	
50	31.1312	HALL SENSOR	
51	900.0117	SCREW	
52	900.0114	SCREW	
53	31.1185	CLAMP PFT BAR	
54	31.1293	SEAL	
55	31.0218	MAGNET HOLDER COMPL.	
56	900.0218.000	SCREW	
57	900.4061	BEARING	
58	31.0265	SQUARE WASHER	
59	900.2072	WASHER	
60	900.1043	NUT	
61	900.0555	SCREW	

PAGE 2 (2)	Spare parts list for Iro IWF 2231F.24.X.	REF. NO. 31-8978-0201- 02/0945	
---------------	--	--------------------------------------	---

POS	PART NO	DESCRIPTION	REMARKS
62	900.0179	SCREW	
63	31.1308.0017	MOTOR COMPL.	
64	31.1295	ROTOR	
65	900.9314	KEY	
66	900.6165	EYELET	
67	900.0218	SCREW	
68	31.1262	YARN GUIDE	
69	900.4064	BEARING	
70	900.9014	CIRCLIP	
71	900.9017	CIRCLIP	
72	31.1285	WINDING DISC COMPL.	
73	25.0081	EYELET HOLDER	
74	25.0078	EYELET	
75	900.2071	WASHER	
76	900.4063	BEARING	
77	31.1257	SPACER	
78	900.0218	SCREW	
79	900.0572	SCREW	
80	31.0219	MAGNET HOLDER COMPL.	
81	31.1273	MAGNET RING COMPL.	
82	900.4063	BEARING	
83	31.1289	SEAL MAGNET RING	
84	31.1298	INCLINED HUB	
85	900.4063	BEARING	
86	900.0426	SCREW	
87	31.1276	FILLING DISC	
88	31.0904	GROMMET	
89	31.1280	OSCILLATING DISC COMPL.	
90	31.1257	SPACER	
91	900.4063	BEARING	
92	31.1315	WASHER	
93	31.1282	COUNTERWEIGHT	
94	20.0042	NUT	
95	31.0893	FINGER	
96	31.0463	SLEEVES	
97	31.1300	SEAL SPOOLBODY	
98	31.1174	BRUSH	
99	900.0506	SCREW	
100	31.0402.001	MAGNET FINGER COMPL.	
101	900.2091	WASHER	
102	900.0218	SCREW	
103	25.0459	WASHER COMPL.	
104	31.0555	SCREW	
105	31.1281	FRONT COVER	
106	900.0117	SCREW	

1131 X2 - Exploded view

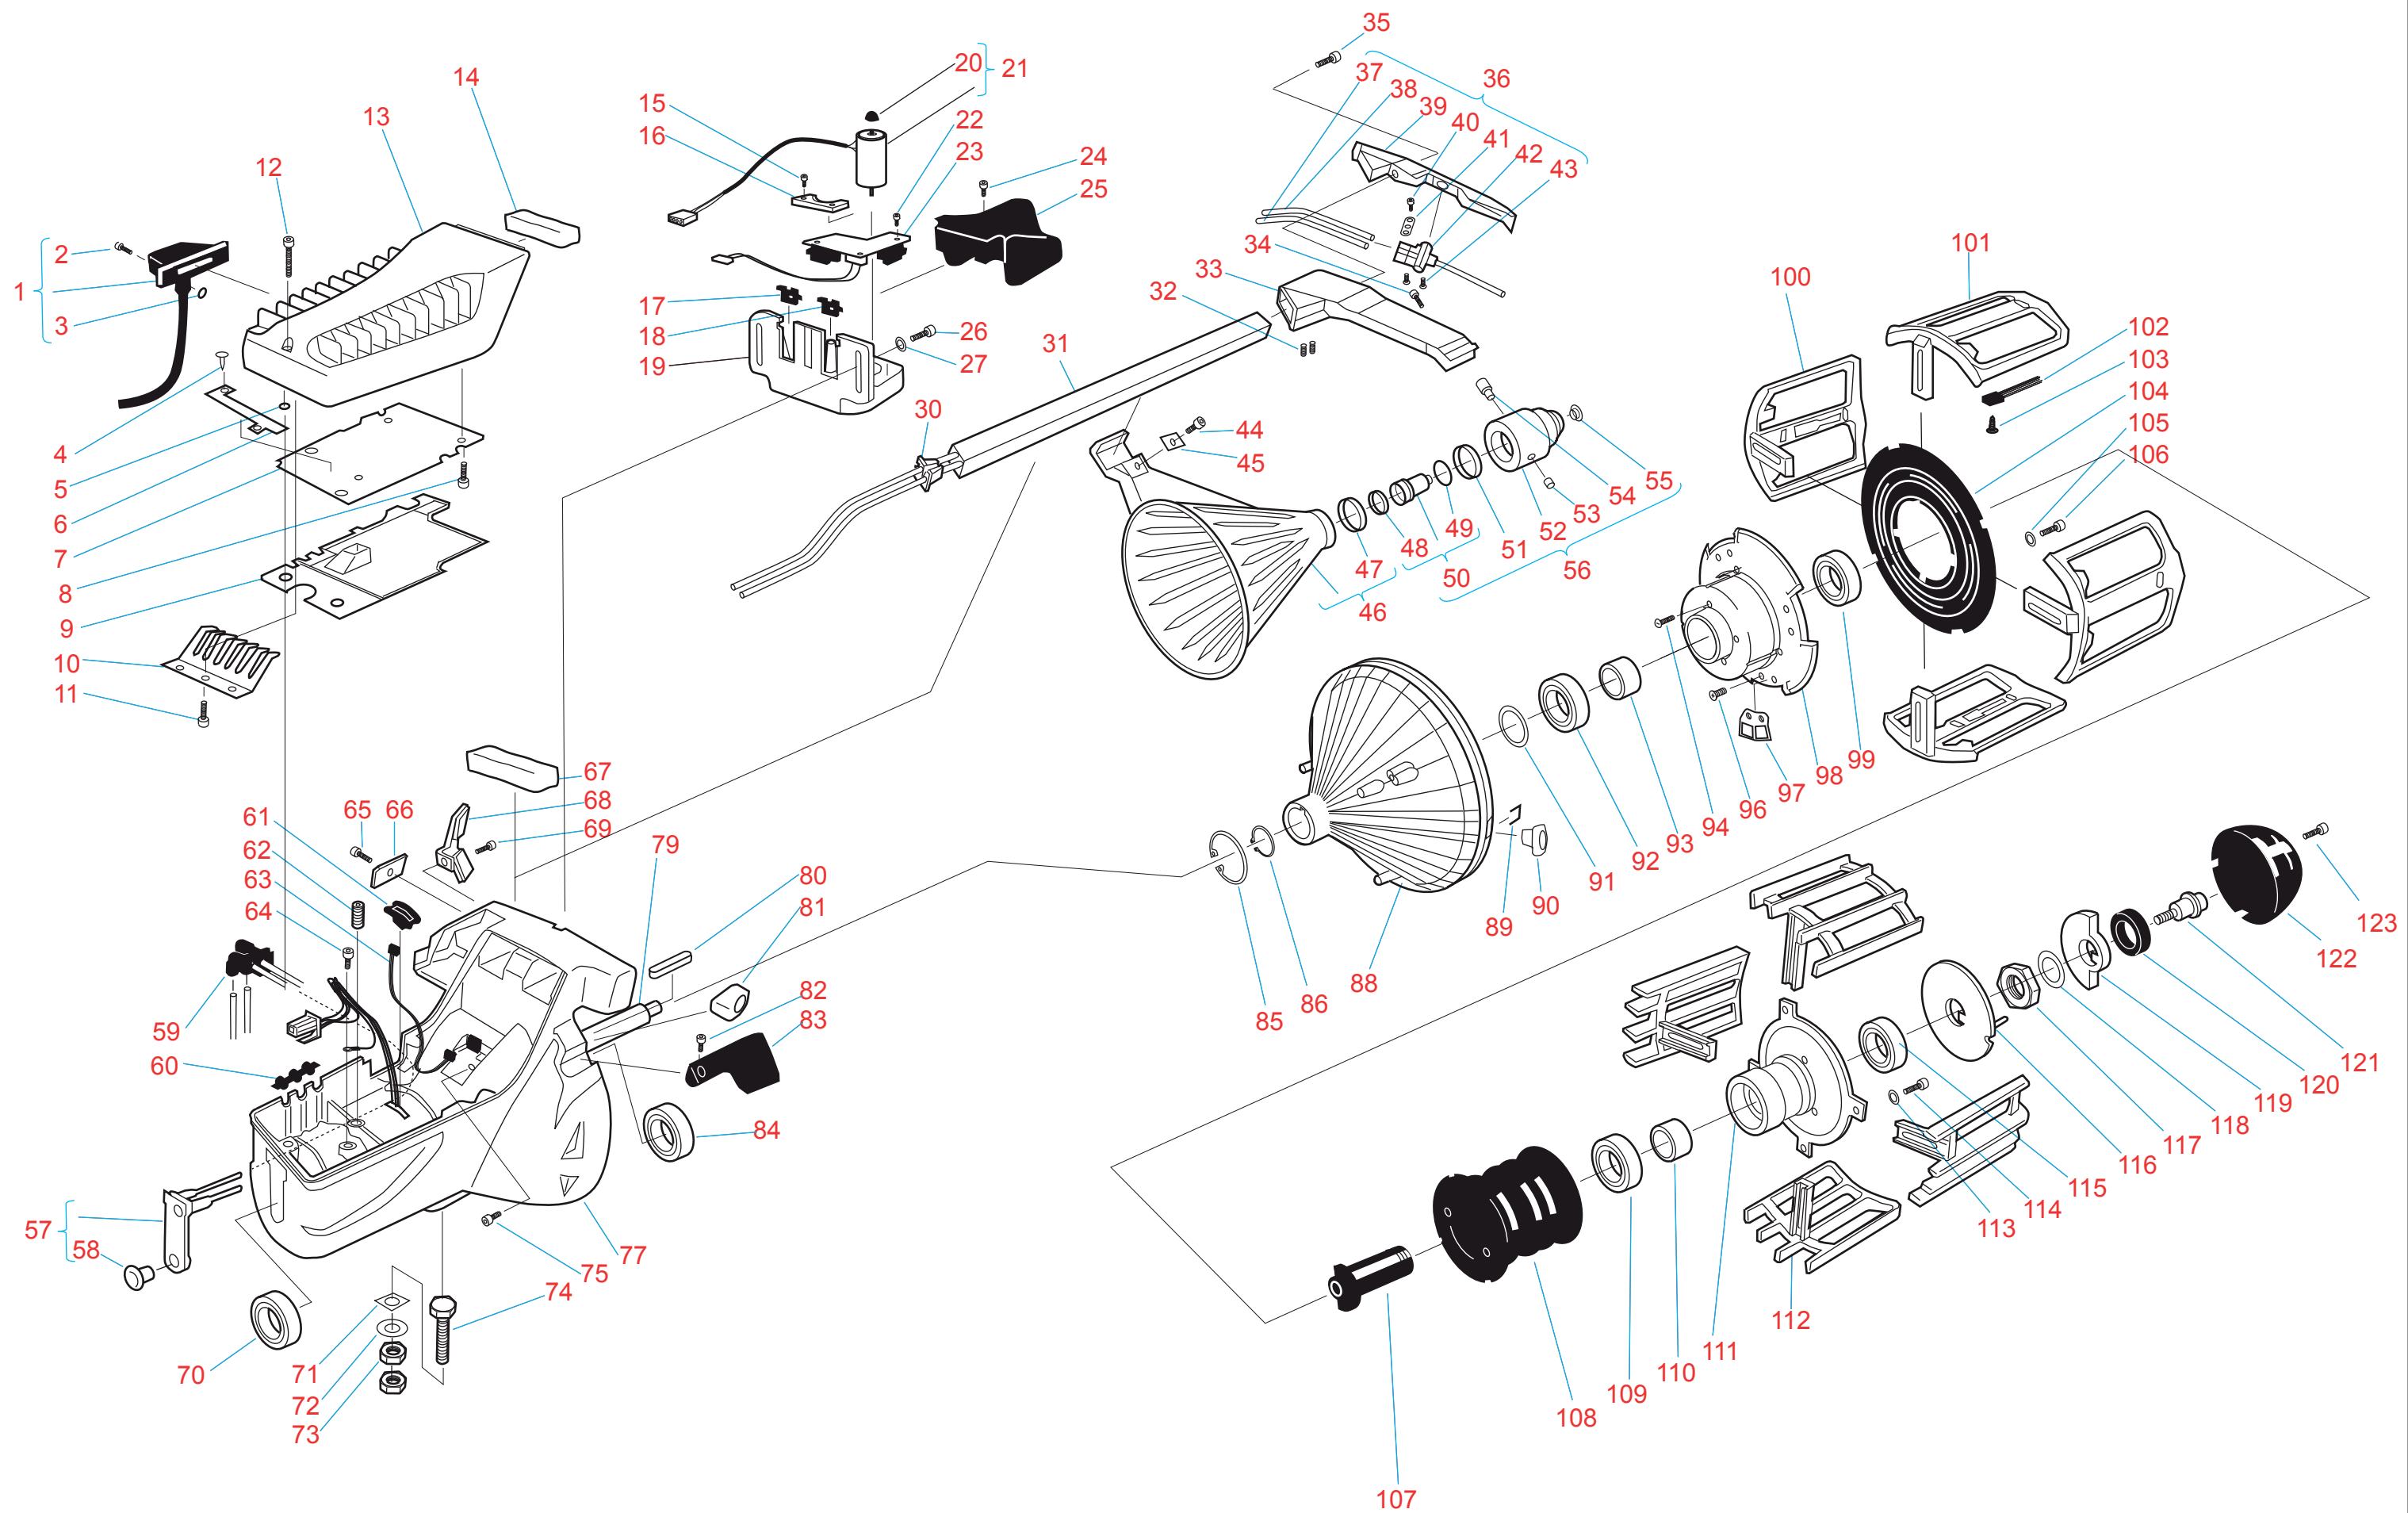

PAGE 1 (3)	Spare parts list for Iro IWF 1131F.24.X. The position numbers correspond to ref. no. 31-8919-0201-01/0727 exploded view.	REF. NO. 31-8929-0201-01/0727	
---------------	---	----------------------------------	--

POS	PART NO	DESCRIPTION	REMARKS
1	27.0676.1200	CABLE 1,2 m	
2	900.0081	SCREW	
3	900.9064	O-RING	
4	900.9390	PLASTIC PLUG	
5	900.9355	O-RING	
6	31.1290	GAP PAD	
7	31.9130.000	CIRCUIT BOARD	
8	900.0117	SCREW	
9	31.1291	SAFETY COVER	
10	31.1253	RADIATOR SHEET	
11	900.0117	SCREW	
12	900.0447	SCREW	
13	31.1256.001M	CIRCUIT BOARD COVER COMPL.	
14	31.1293	SEALING	
15	900.0075	SCREW	
16	31.1022	MAGNET HOLDER	
17	31.1011	SEAL (for magnet cable)	
18	31.1010	SEAL (for band cable)	
19	31.1042	MAGNET CHASSIS	
20	31.1096	COVER	
21	31.0964.005	MAGNET Compl.	
22	900.0087	SCREW	
23	31.1067	SENSOR CIRCUIT BOARD	
24	900.0117	SCREW	
25	31.1047	COVER COMPL.	
26	900.0260	SCREW	
27	900.2091	WASHER	
30	31.1187	PLUG CONE BAR	
31	31.1181	BAR	
32	900.0130	SCREW	
33	31.1192.0007	ARM FOR PFT	
34	900.0081	SCREW	
35	900.0117	SCREW	
36	31.1209	ARM COVER COMPL.	
37	31.1208.001	HOSE	
38	31.1207.002	HOSE	
39	31.1193	ARM COVER	
40	900.0542	SCREW	
41	31.1213	CLAMP AIR TUB	
42	31.1200.001	VALVE COMPL.	
43	900.0509	SCREW	
44	900.0114	SCREW	
45	31.1220	CLAMP BALLOON CONE	
46	31.1221	BALLOON CONE	
47	900.6144	EYELET	
48	31.1198	EYELET NOZZLE INSERT	
49	900.9409	O-RING	
50	31.1219	NOZZLE INSERT COMPL.	
51	900.6144	EYELET	
52	31.1183	NOZZLE	
53	900.0130	SCREW	
54	900.9349	AIR CONNECTOR	
55	31.1199	EYELET NOZZLE OUTLET	
56	31.1218.002	NOZZLE COMPL.	
57	31.1210.001	VALVE COMPL.	

IRO AB RESERVE THE RIGHT TO CHANGE THE CONTENTS WITHOUT PRIOR NOTIFICATION.

IRO AB HAT DAS RECHT, DEN INHALT OHNE VORHERIGE ANKÜNDIGUNG ZU ÄNDERN.


PAGE 2 (3)	Spare parts list for Iro IWF 1131F.24.X. The position numbers correspond to ref. no. 31-8919-0201- 01/0727 exploded view.	REF. NO. 31-8929-0201- 01/0727	
---------------	---	--------------------------------------	--

POS	PART NO	DESCRIPTION	REMARKS
58	900.6101	EYELET	
59	31.1307	AIR CONNECTOR	
60	31.1294	PLUG MOTOR HOUSING	
61	31.1093	GROMMET	
62	900.0532	SCREW	
63	31.1312	HALL SENSOR	
64	900.0117	SCREW	
65	900.0114	SCREW	
66	31.1185	CLAMP PFT BAR	
67	31.1293	SEAL	
68	31.0218	MAGNET HOLDER COMPL.	
69	900.0218.000	SCREW	
70	900.4061	BEARING	
71	31.0265	SQUARE WASHER	
72	900.2072	WASHER	
73	900.1043	NUT	
74	900.0555	SCREW	
75	900.0179	SCREW	
77	31.1309.0017	MOTOR COMPL.	
79	31.1296	ROTOR	
80	900.9314	KEY	
81	900.6165	EYELET	
82	900.0218	SCREW	
83	31.1262	YARN GUIDE	
84	900.4064	BEARING	
85	900.9014	CIRCLIP	
86	900.9017	CIRCLIP	
88	31.0737.002	WINDING DISC COMPL.	
89	25.0081	EYELET HOLDER	
90	25.0078	EYELET	
91	900.2071	WASHER	
92	900.4063	BEARING	
93	31.1257	SPACER	
94	900.0153	SCREW	
96	900.0406	SCREW	
97	31.0219	MAGNET HOLDER COMPL.	
98	31.1273	MAGNET RING COMPL.	
99	900.4063	BEARING	
100	31.0779.001	FIXED FINGER	
101	31.1040	MAGNET FINGER COMPL.	
102	31.1174	BRUSH	
103	900.0506	SCREW	
104	31.1259.001	FINGER DISC	
105	900.2091	WASHER	
106	900.0260	SCREW	
107	31.0573	INCLINED HUB	
108	31.1303	BELLOW	
109	900.4063	BEARING	
110	31.0574	SPACER	
111	31.1304	FRONT SPOOL BODY HUB COMPL.	
112	31.0835	TUMBLING FINGER	
113	900.2091	WASHER	
114	900.0218	SCREW	
115	900.4063	BEARING	
116	31.1305	ADJUSTING WASHER	
117	20.0042	NUT	

IRO AB RESERVE THE RIGHT TO CHANGE THE CONTENTS WITHOUT PRIOR NOTIFICATION.

IRO AB HAT DAS RECHT, DEN INHALT OHNE VORHERIGE ANKÜNDIGUNG ZU ÄNDERN.

Blue22 - Exploded view

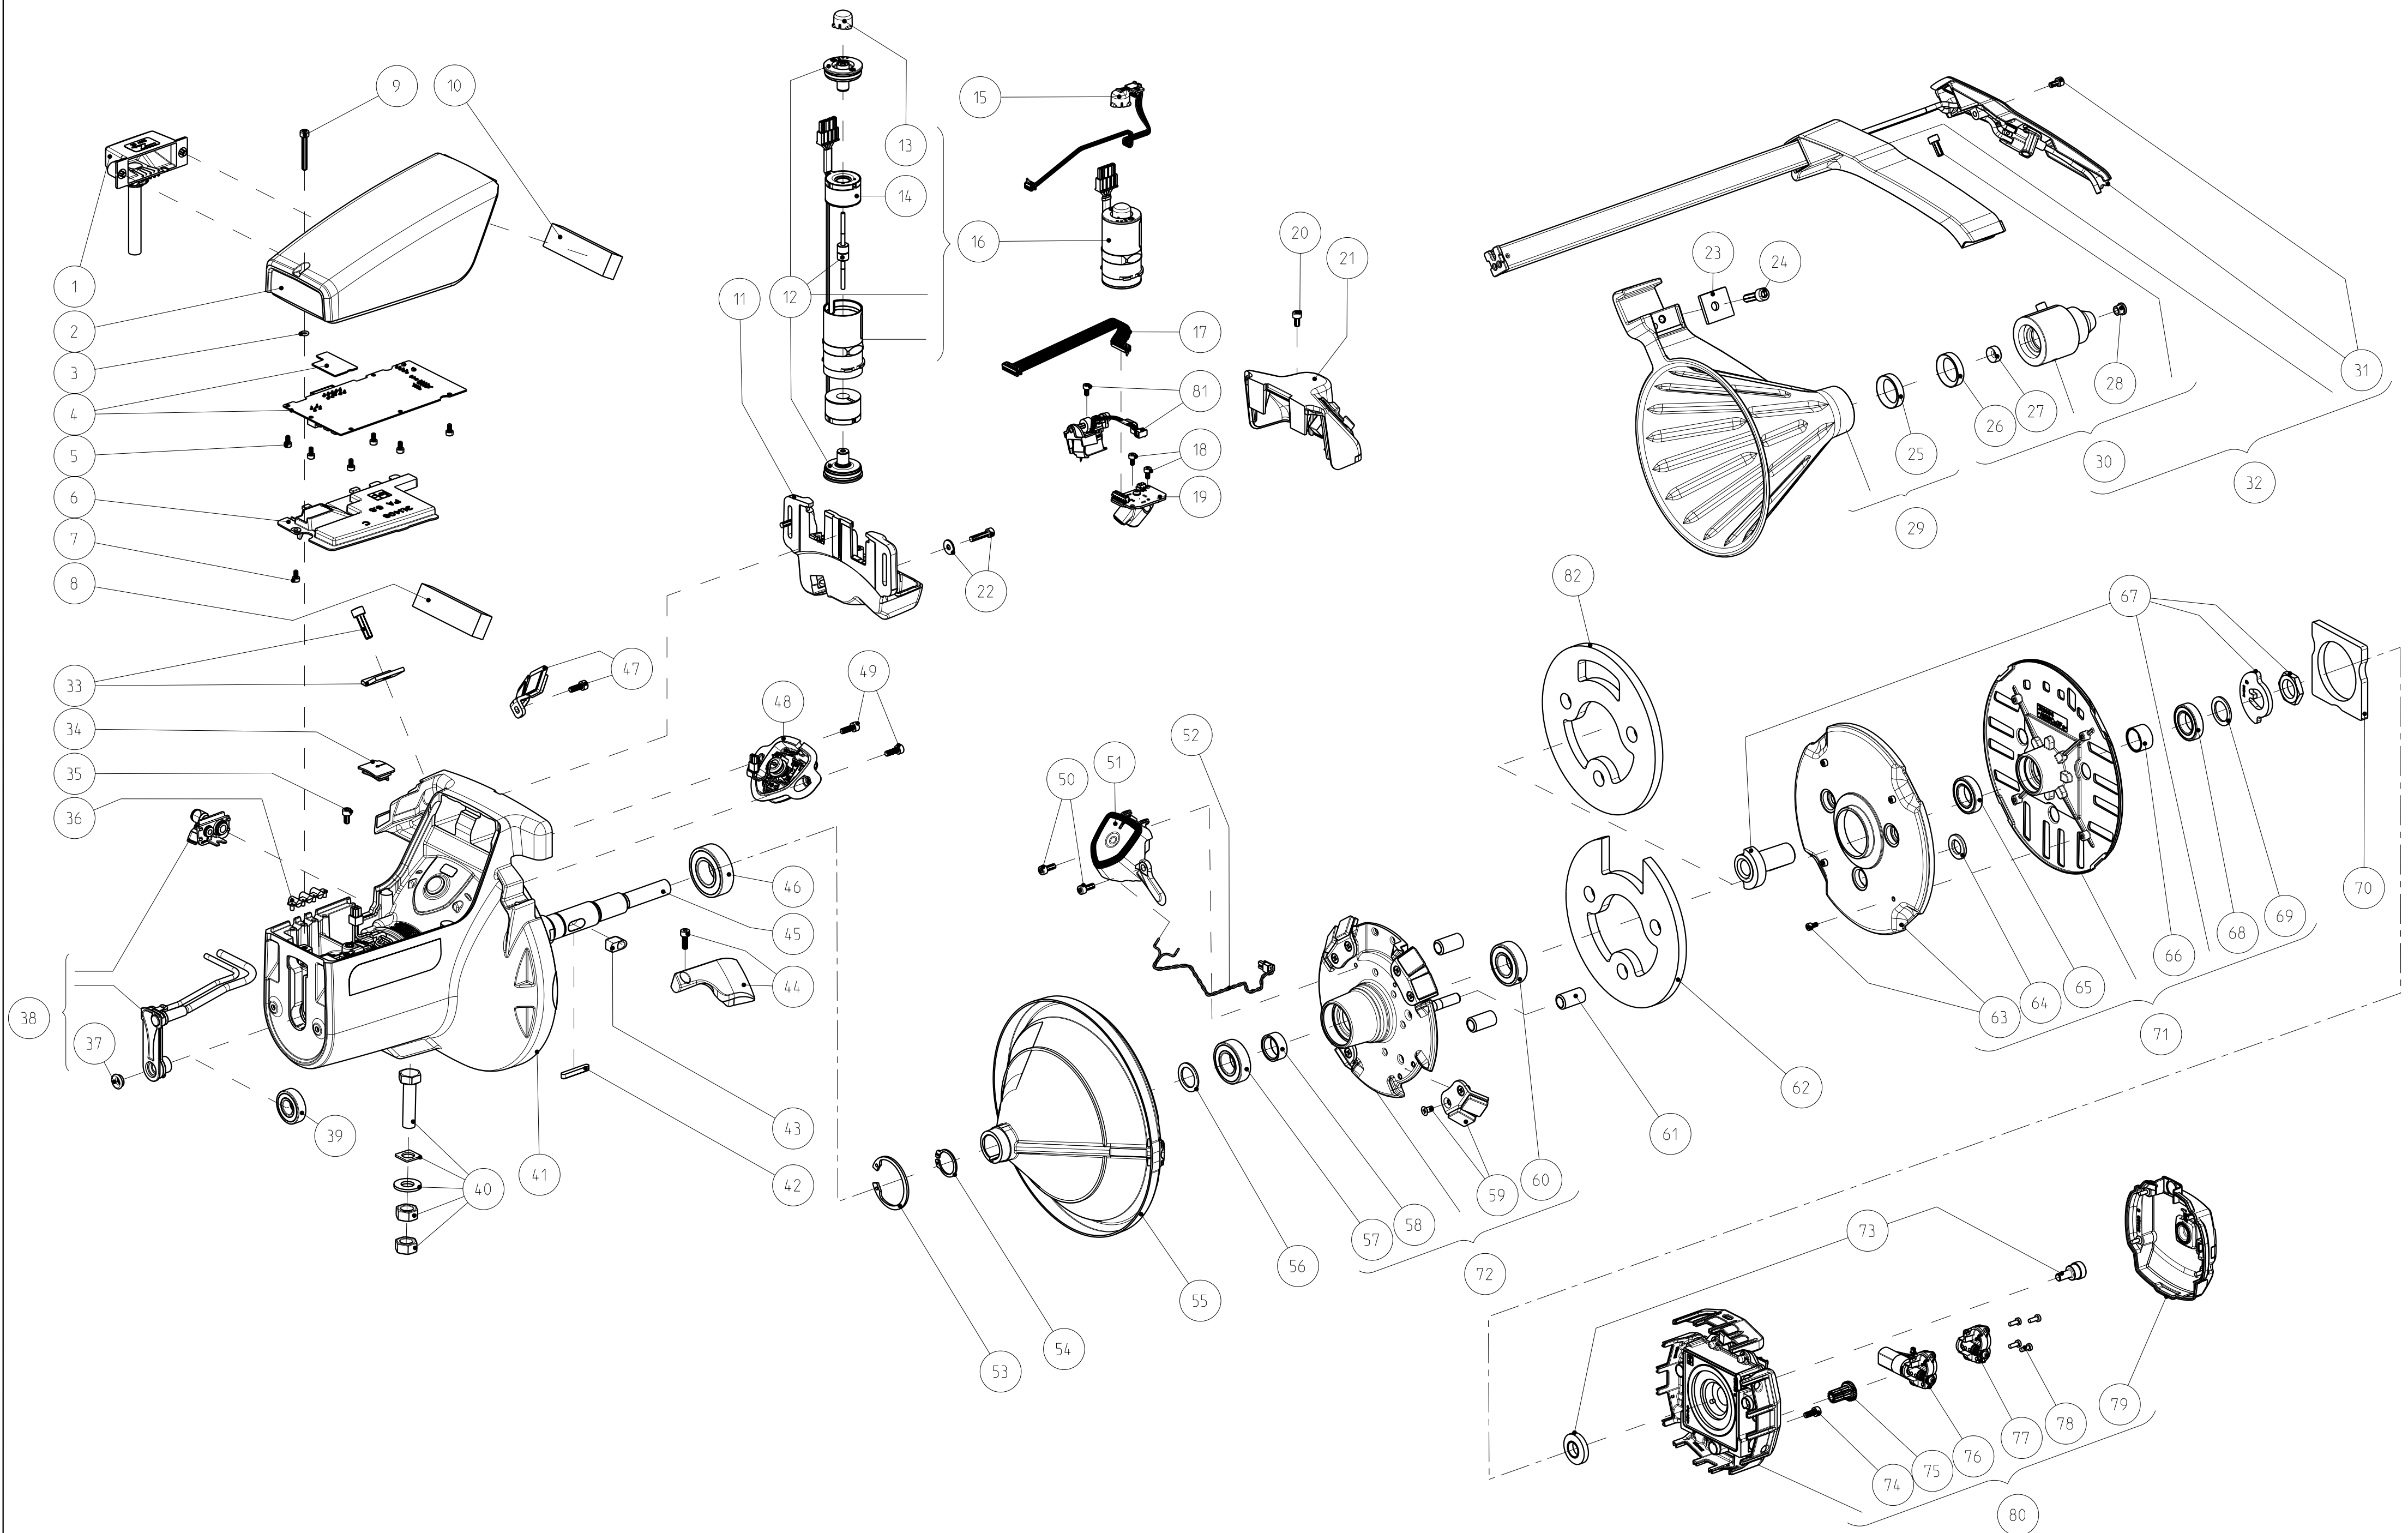

PAGE 1 (2)	Spare parts list for Iro IWF BLUE22G.24.X.	REF. NO. 31-897B-0201-02/1446	
---------------	--	----------------------------------	--

POS	PART NO	DESCRIPTION	REMARKS
1	27.0676.1200	CONNECTION CABLE	
2	31.1397	CIRCUIT BOARD COVER	
3	900.9355	O-RING	
4	31.1542	CIRCUIT BOARD , INCL GAP PAD	
5	900.0426	SCREW	
6	31.1408	PROTECTION COVER	
7	900.0426	SCREW	
8	31.1293	SEALING MOTOR HOUSING	
9	900.0447	SCREW	
10	31.1293	SEALING MOTOR HOUSING	
11	31.1510	STOPPER HOUSING	
12	31.1393.002	PLUNGER WITH FRONTS	
13	31.1096	COVER, STOPPERMAGNET	For 31.0964.005
14	31.1038	COILS	
15	31.1527	MAGNET SENSOR CPL.	For 31.0964.006
16	31.0964.005	STOPPERMAGNET CPL.	Without sensor
16	31.0964.006	STOPPERMAGNET CPL.	With sensor
17	31.1474	SENSORCABLE CPL.	
18	900.0426	SCREW	
19	31.1469	WINDING SENSORS	
20	900.0117	SCREW	
21	31.1355.001	COVER, STOPPERHOUSING CPL	
22	31.1385	SCREW WITH WASHER	
23	31.1220	CLAMP	
24	900.0114	SCREW	
25	900.6144	EYELET	
26	900.6144	EYELET	
27	31.1198	EYELET NOZZLE INSERT	
28	31.1199	EYELET NOZZLE OUTLET	
29	31.1221	BALLOON CONE	
30	31.1375	PFT NOZZLE CPL. WITH SCREW	
31	31.1373.001	ARM COVER WITH SCREW	
32	31.1223.003	PFT BAR CPL.	
33	31.1370	CLAMP KIT FOR CONE	
34	27.0727	PLUG	
35	900.0117	SCREW	
36	31.1294	PLUG, MOTOR HOUSING	
37	900.6101	EYELET	
38	31.1371	VALVE WITH AIR CONNECTION HOLDER	
39	900.4061	BEARING	
40	31.1541	FASTENER KIT	
41	31.1472.0017	MOTOR CPL. (EASYSET)	Pos. 48, 49 included
41	31.1472.0027	MOTOR CPL.	

PAGE 2 (2)	Spare parts list for Iro IWF BLUE22G.24.X.	REF. NO. 31-897B-0201-02/1446	
---------------	--	----------------------------------	--

POS	PART NO	DESCRIPTION	REMARKS
42	900.9314	KEY	
43	900.6165	CERAMIC EYLET	
44	31.1377	YARN GUIDE INCL SCREW	
45	31.1457	ROTOR CPL.	
46	900.4064	BEARING	
47	31.1379	MAGNET HOLDER WITH SCREW	
48	31.1414	COIL CPL., MOTOR HOUSING, (EASYSET)	
49	900.0218	SCREW, (EASYSET)	
50	900.0075	SCREW, (EASYSET)	
51	31.1416	COIL CPL., SPOOL BODY, (EASYSET)	
52	31.1507	PCB POWER WIRE, (EASYSET)	
53	900.9014	CIRCLIP	
54	900.9017	CIRCLIP	
55	31.1488	WINDING DISC CPL.	
56	900.2071	WASHER	
57	900.4063	BEARING	
58	31.1257	SPACER	
59	31.1384	MAGNET HOLDER WITH SCREW	
60	900.4063	BEARING	
61	31.0463	SLEEVES	
62	31.1551	SEAL, MAGNET RING	
63	31.1544	COVER WOBBLING DISC WITH SCREW	
64	31.0904	GROMMET	
65	900.4090	BEARING	
66	31.1420	SPACER	
67	31.1543	INCLINED HUB , COUNTER WEIGHT AND NUT	
68	900.4090	BEARING	
69	900.2071	WASHER	
70	31.1487	SEAL, SPOOL BODY	
71	31.1476	OSSILATION DISC CPL.	
72	31.1515	MAGNET RING CPL.	Pos 50, 51, 52 not included
73	31.1381	SPRING WASHER WITH SCREW	
74	900.0075	SCREW	
75	31.1554	DRIVE COG WHEEL	
76	31.1493.001	DRIVE SUSPENSION CPL. (EASYSET)	
77	31.1493.002	DRIVE SUSPENSION CPL.	
78	900.0535	SCREW	
79	31.1516.001	FRONT COVER CPL. (EASYSET)	
79	31.1516.002	FRONT COVER CPL.	
80	31.1540.001	SPOOL BODY CPL. (EASYSET)	
80	31.1540.002	SPOOL BODY CPL.	
81	31.1378	RESERVE SENSOR WITH SCREW	
82	31.1552	SEAL, MAGNET RING	