
# COLORADO 3

# **User Manual**

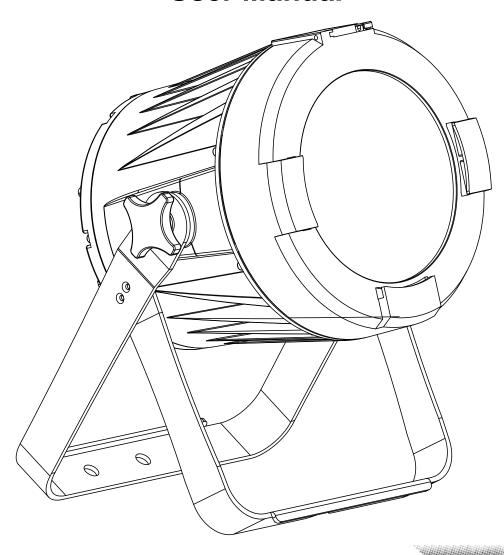





## **TABLE OF CONTENTS**

1. Edition Notes	•••	1
Trademarks		1
Copyright Notice		1
Manual Use		1
Document Printing		1
Intended Audience		1
Disclaimer		1
Document Revision		1
2. Before You Begin		2
What Is Included		2
Claims		2
Manual Conventions		2
Symbols		2
Safety Notes		
Personal Safety		3
Mounting and Rigging		3
Power and Wiring		33333
Operation		3
Expected LED Lifespan		3
3. Introduction	•••	4
Description		4
Features		4
Product Overview		5
Product Dimensions		6
4. Setup		7
AC Power		7
AC Plug		7
Power Linking		7
DMX Linking		7
DMX Personalities		7
Remote Device Management (RDM)		8
Master/Slave Connectivity		8
Mounting		8
Orientation		8
Rigging		8
Procedure		8
5. Operation		10
Control Panel Operation		10
Control Options		10
Programming		10
Control Panel Lock		10
Passcode		10
Menu Map		11
Configuration (DMX)	···· ′	13
DMX Personalities		13
DMX Control		13
Loss Of Signal SettingTOUR Notes		13 14
DMX Values		15
STD.Y		15
= : = · · · · · · · · · · · · · · · · ·		. •

# TABLE OF CONTENTS



TR16	. 16
Tour	. 18
HSIC	. 19
SSP	. 19
Configuration (Standalone)	. 21
Auto Programs	. 21
Edit Custom Programs	. 21
Master/Slave	. 21
Color Settings	
Dimmer Profiles	
Program Upload	
Reset	
Whites Setting	
White Calibration	. 23
Color Temperature Settings	. 23
Zoom Mode	
LED Frequency	
Software Information	
RDM	
6. Technical Information	. 25
Product Maintenance	. 25
7. Technical Specifications	. 26
8. Returns	
9 Contact Us	28



## 1. Edition Notes

The Colorado 3 Solo User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Colorado 3 Solo as of the release date of this edition.

#### **Trademarks**

CHAUVET, the Chauvet logo and Colorado 3 Solo are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

## **Copyright Notice**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

#### © Copyright 2018 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

#### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

## **Document Printing**

For best results, print this document in color, on letter size paper  $(8.5 \times 11 \text{ in})$ , double-sided. If using A4 paper  $(210 \times 297 \text{ mm})$ , configure the printer to scale the content accordingly.

#### Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

#### **Disclaimer**

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>

#### **Document Revision**

This Colorado 3 Solo User Manual is the 4th edition of this document. Go to <a href="www.chauvetprofessional.com">www.chauvetprofessional.com</a> for the latest version.



## 2. BEFORE YOU BEGIN

## What Is Included

- Colorado 3 Solo
- Seetronic Powerkon IP65 power cord
- · Warranty Card
- · Quick Reference Guide

## **Claims**

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

## **Manual Conventions**

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
<set></set>	A button on the product's control panel
Settings	A product function or a menu option

## **Symbols**

Symbol	Meaning
4	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
<u>^</u>	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
<b>(i)</b>	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



## **Safety Notes**

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

## **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

## **Mounting and Rigging**

- Do not submerge this product (IP65). Temporary outdoor operation is fine.
- When using this product in an outdoor environment, use IP65 (or higher) rated power and data cables. Secure unused power and data ports with attached IP65 covers.
- CAUTION: When transferring product from extreme temperature environments, (e.g., cold truck to warm, humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Not for permanent outdoor installation in locations with extreme environmental conditions. This includes, but is not limited to:
  - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
  - Locations where the normal high or low temperatures exceed the temperature ranges in this manual.
  - Locations that are prone to flooding or being buried in snow.
  - Areas where the product will be subjected to extreme radiation or caustic substances.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to the product when operating.
- When hanging this product, always secure to a fastening device using a safety cable.

#### **Power and Wiring**

- Always make sure you are connecting the product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- Never connect the product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

## **Operation**

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- In the event of a serious operation problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.

## **Expected LED Lifespan**

LEDs gradually decline in brightness over time, primarily because of heat. LEDs that are arranged in clusters experience higher operating temperatures than single LEDs. For this reason, operating clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan is 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product, thus reducing the ambient temperature. In addition, limiting the overall projection intensity may extend the LEDs' lifespan.



## 3. Introduction

## **Description**


The Colorado 3 Solo grows the industry standard COLORado line of fixtures with all-environment performance and advanced optics pioneered with the COLORado 1 Solo. Three 60W RGBW engines project an intense, even, and fully homogenized beam through fast and smooth zooming optics, making it the brightest PAR style fixture in the series. Utilizing new IP rated power and data connectors and full convection cooling allows this fixture to perform anywhere from a silent main stage theater to an outdoor summer music festival.

## **Features**


- 9, 12 or 17-channel quad-color LED wash product
- Operating modes:
  - 9-channel: H/S/CCT control, dimmer, strobe, zoom, zoom reset, dimmer speed
  - 9-channel: R/G/B/W, dimmer, strobe, zoom, zoom reset, dimmer speed
  - 12-channel: R/G/B/W, dimmer, strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
  - 17-channel: 16-bit R/G/B/W and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
  - 17-channel: 16-bit R/G/B/W and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
- Zooming RGBW LED wash for touring, rental and production indoors or out
- Completely homogenized wash with superior color mixing and zoom
- 8° to 45° smooth and fast zoom
- All environment operation with IP rated power and DMX connections
- Color temperature presets, from 3200 K to 10000 K
- · Selectable, smooth dimming curves for programming versatility
- OLED display with password protection



## **Product Overview**

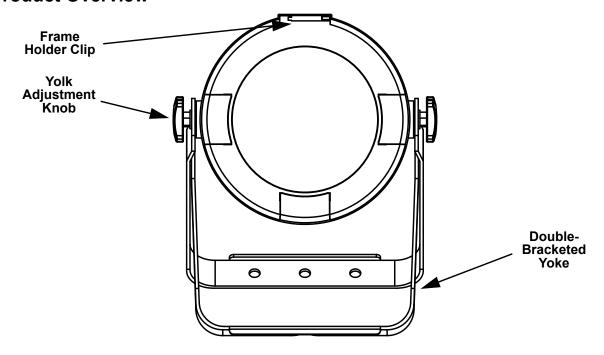


**Front View** 

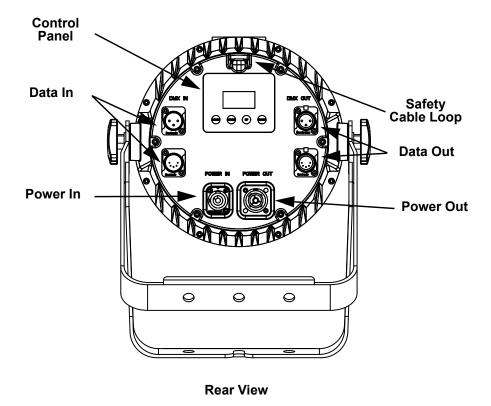


Page 5 of 28



## **Product Dimensions**

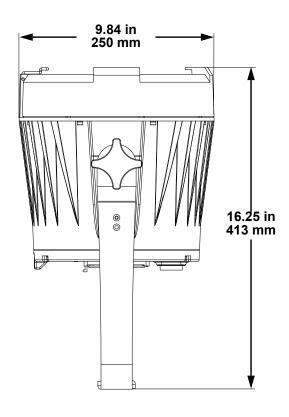

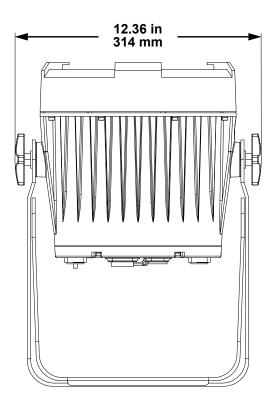



## 4. SETUP

## **AC Power**

Each Colorado 3 Solo has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Colorado 3 Solo, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

 Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.

 To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

## **AC Plug**

The Colorado 3 Solo comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need the change the plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

## **Power Linking**

The product supports power linking. You can power link up to 24 products at 120 V; up to 40 at 208 V; or up to 45 at 230 V.

This product comes with a power input cord. Power linking cables are available from Chauvet for purchase.



- To preserve the IP65 rating and the warranty of this product Seetronic Powerkon cables must be used.
- Insert the attached IP65 rated plugs into the corresponding power/data connections when not in use.

## **DMX Linking**

You can link the Colorado 3 Solo to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, you can control each individually with a single DMX controller.

#### **DMX Personalities**

The Colorado 3 Solo uses a 5-pin DMX data connection for the 9-, 12- and 17-channel DMX personalities.

- Refer to the Introduction for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the Colorado 3 Solo to work in these personalities.
- The DMX Values section provides detailed information regarding the DMX personalities.



- If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.
- For optimum control of the 16-bit dimming channels in the TR16 and STD.Y
  personalities, be sure that both dimming curves in SETTING > DIMMER are
  set to OFF.



## Remote Device Management (RDM)

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Colorado 3 Solo supports RDM protocol that allows feedback to make changes to menu map options.

## **Master/Slave Connectivity**

The Master/Slave mode allows a Colorado 3 Solo (the master) to control one or more Colorado 3 Solo products (the slaves) without a DMX controller. One Colorado 3 Solo becomes the master when running an auto or custom program, or by being in a Static mode.

You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The <u>Operation</u> section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with or need more information about DMX standards, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.



- To preserve the IP65 rating and the warranty of this product, IP65 data cables must be used.
- Insert the attached IP65 rated plugs into the corresponding power/data connections when not in use.

## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <a href="http://trusst.com/products/">http://trusst.com/products/</a>.

#### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

#### Rigging

Chauvet recommends using the following general guidelines when mounting this product.


- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.


#### **Procedure**

The Colorado 3 Solo comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply the mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <a href="http://www.trusst.com/products.">http://www.trusst.com/products.</a>



## **Mounting Diagram**

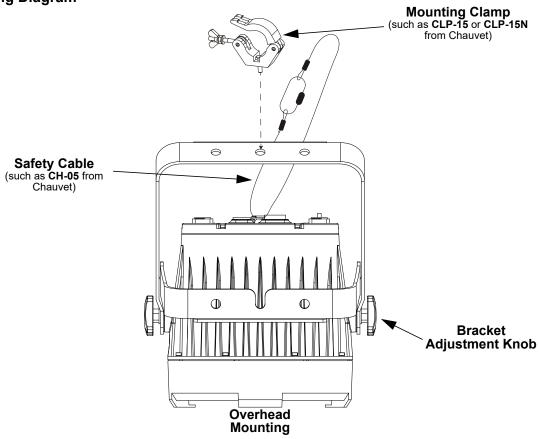

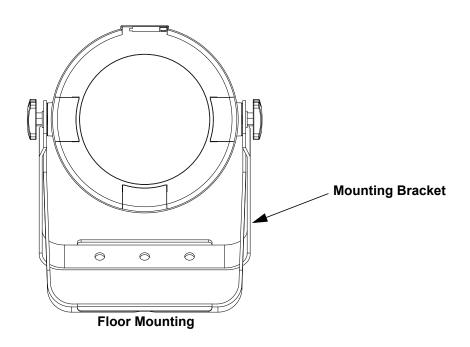



## 5. OPERATION

## **Control Panel Operation**

Button	Function
<menu></menu>	Exits from the current menu or function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function

## **Control Options**

Set the Colorado 3 Solo starting address in the 001-512 DMX range. This enables control of up to 46 products in the 11-channel 11CH personality.

## **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until
  the option shows on the display. Press <ENTER> to select. In this case, if there is another
  programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

## **Control Panel Lock**

This setting enables you to activate or disable the control panel lock, which keeps unauthorized users from changing the product's settings.

- 1. Go to the **Key** main level
- 2. Select ON or OFF



When the control panel lock is activated, in order to access the products main programming level, the product will prompt for the passcode. Enter the passcode as described below.

#### **Passcode**

After being prompted to enter the passcode:

Press <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>



# Menu Map

Main Level	Programming Levels			Description	
STATIC	RED GREEN BLUE WHITE		0-25	E	Combines red, green, blue, and white to make a custom color (0–100%)
	ZOOM			0 200	Changes the beam angle (zoom)
	STROBE				Selects the strobe frequency (0–25 Hz)
ADDRESS		001-512			Sets the DMX starting address
AUTO	AUTO 1-10		SPEED	0-255	Selects automatic programs and auto program speed
PROGRAM	PR	OGRAM 1	-10		Selects customizable programs
RUN MODE		DMX			Receives DMX signals from the DMX controller
		SLAVE			Receives DMX signals from the master
700M MODE	ZC	OM MODE	<b>1</b>		Normal operation
ZOOM MODE	ZO	OM MODE	2		Recommended for use Below 40 °F
		HSIC	9-channel: H/S/CCT control, dimmer, strobe, zoom, zoom reset, dimmer speed		
		SSP	9-channel: R/G/B/W, dimmer, strobe, zoom, zoom reset, dimmer speed		
PERSONALITY		TOUR	12-channel: R/G/B/W, dimmer, strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset		
		TR16	17-channel: 16-bit RGBW and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset		
		STD.Y			17-channel: 16-bit RGBW and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
EDIT			RED GREEN BLUE WHITE		Combines red, green, blue, and white to make a custom color (0-100%)
	PROGRAM	SCENE	ZOOM	0-255	Changes the beam angle (zoom)
	1-10	-01-30	STROBE		Selects the strobe frequency (0–20 Hz)
			TIME		Defines the step duration (slow to fast)
			FADE		Defines the fade duration (slow to fast)



Main Level	Programming Levels					Description
		UPL	OAD	**** (Enter Passcode)	SEND	Uploads custom programs to other Colorado 3 Solo s
		RE	SET	**** (Enter Pas	scode)	Resets the fixture to factory defaults
				OFF		
					1	Selects dimming profiles
		DIM	MER	DIM		from fast (DIM1) to slow
				DIM	-	(DIM4) or OFF
				DIM	4	
		DMX E	ERROR	SAV	E	Continues with last command upon loss of DMX control
SETTING	****			BLAC		Blacks out fixture upon loss of DMX
SETTING	Passcode)	(Enter Passcode)		600H		
	,			1200HZ		
					ΗZ	Selects the PWM output
		PV	VM	24001		frequency
				60001		, ,
				18000		
			25000HZ			
				Warm White Neutral White		Sets the color temperature
			POWER	Cool Wh		when all color faders are set
		C	СТ	Cool Wh		to 100%
				NORM		Manual color temperature
				HID		Shows and hides XY settings
		XY OI	FFSET	SHO		in PWM menu option.
VEV			OFF			Sets to key lock
KEY		ON			(Passcode mode)	
	****		WHITE	X FINE	+/-	Modifies the color macros
CALIB.C	(Enter Passcode)	WHITE	01-13	Y FINE	200	used in the TOUR,STD.Y, and TR16 personalities
	VERS	ION		V		Shows installed software version
INFO		U	ID		=	Shows product UID
	RDM	LABEL		COLORADO 3 SOLO		Shows product name



## Configuration (DMX)

Use DMX configurations to operate the product with a DMX controller.

#### **DMX Personalities**

This setting allows you to choose a particular DMX personality.

- 1. Go to the **PERSONALITY** main level
- 2. Select the desired personality (TOUR, TR16, STD.Y, HSIC, or SSP).



- See the <u>DMX Values</u> section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

#### **DMX Control**

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the running mode:
  - a. Go to the RUN MODE main level
  - b. Select the **DMX** programming level
- 3. Set the starting address:
  - a. Go to DMX Address main level
  - b. Select the starting address (001–512)

The highest recommended starting address for each DMX mode is as follows:

DMX Personality	DMX Address	DMX Personality	DMX Address
TOUR	501	TR16	496
STD.Y	496	HSIC	504
SSP	504		

## **Loss Of Signal Setting**

This setting controls how the product will respond when the DMX signal is lost.

- 1. Go to the **SETTING** main level
- 2. Enter the master access passcode as described in Passcode
- 3. Select **DMX ERROR** 
  - a. Select **SAVE** to make the product use the last command used when the signal is lost
  - b. Select **BLACK** to turn off the all the LEDs when the signal is lost



#### **TOUR Notes**

These notes clarify the way the **TOUR** DMX personality works.

#### **Master Dimmer**

- Channel 1 controls the intensity of the currently projected color.
- When the slider is at the highest position (100%), the intensity of the output is at maximum.

#### Red, Green, Blue, and White Color Selection

- Channels 2 through 5 control the intensity ratio of each of the red, green, blue, and white LEDs.
- When these channels are at the highest position (100%), the intensity of each color is at maximum if SETTING > COLOR is OFF.
- You can combine channels 2 through 5 to create over one trillion colors.

#### **Color Macros**

- Channel 6 selects the required color macro.
- Channel 6 has priority over channels 2 through 6.
- Channel 1 controls the intensity of the color macro.

#### **Strobe**

- Channel 7 controls the strobe frequency (not the intensity) of channels 2 through 6.
- Channel 7 can strobe channels 2 through 5 when not running macros, allowing the individual faders (**R**, **G**, **B**, and **W**), as well as channel 1 (**D**), to control the output intensity.
- Channel 7 can strobe channel 6 when running macros, allowing channel 6 to select the macro and channel 1 to control the output intensity

#### Auto/Custom

- Channel 8 selects the preset auto programs **AUTO01–10** or the custom programs **PROGRAM1-10**.
- When activating the custom auto programs **PROGRAM1-10**, you can control the step time and fade time using channels 2 and 3, respectively.
- Channel 8 has priority over channels 2 through 7.
- Channel 9 controls the speed at which each auto program plays.

#### Zoom

- Channel 10 controls Zoom adjustment. This provides options to adjust the beam angle from 8 to 55
  degrees.
- Channel 11 resets the zoom lens to the home position.

#### **Dimmer Speed**

- Channel 12 selects the Dimmer mode and speed. Dimmer mode provides four different options to simulate the dimming curve of an incandescent lighting product.
- When dimmer is set to **OFF**, the changes in the RGBW and master dimmer faders are linear.
- When dimmer is set to **DIM1–DIM4**, **DIM1** is the fastest dimmer curve and **DIM4** is the slowest.



# DMX Values STD.Y

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Dimmer Fine	000 ⇔ 255	11-10 in Cm. 13 is active)
3	Red	000 ⇔ 255	0-100% (Fade Duration if <b>Custom 1-10</b> in <b>CH. 13</b> is active)
4	Red Fine	000 ⇔ 255	Fine control (16-bit)
5	Green	000 ⇔ 255	0-100%
6	Green Fine	000 ⇔ 255	Fine control (16-bit)
7	Blue	000 ⇔ 255	0-100%
8	Blue Fine		Fine control (16-bit)
9	White	000 ⇔ 255	
10	White Fine		Fine control (16-bit)
11	Color Macro	011 ⇔ 030 031 ⇔ 050 051 ⇔ 070 071 ⇔ 090 091 ⇔ 110 111 ⇔ 130 131 ⇔ 150 151 ⇔ 170 171 ⇔ 195 196 ⇔ 200 201 ⇔ 205 206 ⇔ 210 211 ⇔ 215 216 ⇔ 220 221 ⇔ 225 226 ⇔ 230 231 ⇔ 235 236 ⇔ 240 241 ⇔ 245 246 ⇔ 250 251 ⇔ 255	R:100%-0 G: 100% B: 0 R:0 G: 100% B: 0-100% R:0 G: 100%-0 B: 100% R:0-100% G: 0 B: 100%-0 R:100% G: 0 B: 100%-0 R:100% G: 0-100% B: 0-100% R:100%-0 G: 100%-0 B: 100% RGBW: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11 White 12
12	Strobe	010 ⇔ 099 100 ⇔ 109 110 ⇔ 179	No function Slow to fast No function Lighting effect, slow to fast No function Random



Channel	Function	Value	Percent/Setting
13	Programs	051 ⇔ 060 061 ⇔ 070 071 ⇔ 080 081 ⇔ 090 091 ⇔ 100 101 ⇔ 110 111 ⇔ 120 121 ⇔ 130 131 ⇔ 140 141 ⇔ 150 151 ⇔ 160 161 ⇔ 170 171 ⇔ 180 181 ⇔ 190 191 ⇔ 200 201 ⇔ 210 211 ⇔ 220 221 ⇔ 230	Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Custom 1 Custom 2 Custom 3 Custom 4 Custom 5 Custom 6 Custom 7 Custom 8
14	Auto Speed	000 ⇔ 255	0-100%
15	Zoom	000 ⇔ 255	0-100%
16	Zoom Control	201 ⇔ 220	No function Zoom reset No function
17	Dimmer Speed	010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)

## TR16

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	
2	Dimmer Fine		Fine control (16-bit) (Step Duration if <b>Custom 1-10</b> in <b>CH. 13</b> is active)
3	Red	000 ⇔ 255	0-100% (Fade Duration if <b>Custom 1-10</b> in <b>CH. 13</b> is active)
4	Red Fine	000 ⇔ 255	Fine control (16-bit)
5	Green	000 ⇔ 255	0-100%
6	Green Fine	000 ⇔ 255	Fine control (16-bit)
7	Blue	000 ⇔ 255	0-100%
8	Blue Fine	000 ⇔ 255	Fine control (16-bit)
9	White	000 ⇔ 255	0-100%
10	White Fine	000 ⇔ 255	Fine control (16-bit)



Channel	Function	Value	Percent/Setting
11	Color Macro	011 ⇔ 030 031 ⇔ 050 051 ⇔ 070 071 ⇔ 090 091 ⇔ 110 111 ⇔ 130 131 ⇔ 150 151 ⇔ 170 171 ⇔ 195 196 ⇔ 200 201 ⇔ 205 206 ⇔ 210 211 ⇔ 215 216 ⇔ 220 221 ⇔ 225 226 ⇔ 230 231 ⇔ 235 236 ⇔ 240 241 ⇔ 245 246 ⇔ 250 251 ⇔ 255	R:100%-0 G: 100% B: 0 R:0 G: 100% B: 0-100% R:0 G: 100%-0 B: 100% R:0-100% G: 0 B: 100% R:100% G: 0 B: 100%-0 R:100% G: 0-100% B: 0-100% R:100%-0 G: 100%-0 B: 100% RGBW: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11 White 12
12	Strobe	010 ⇔ 099 100 ⇔ 109 110 ⇔ 179 180 ⇔ 189 190 ⇔ 255	
13	Programs	041 \$\iff 050\$ 051 \$\iff 060\$ 061 \$\iff 070\$ 071 \$\iff 080\$ 081 \$\iff 090\$ 091 \$\iff 100\$ 101 \$\iff 110\$ 111 \$\iff 120\$ 121 \$\iff 130\$ 131 \$\iff 140\$	Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Custom 1 Custom 2 Custom 3 Custom 4 Custom 5 Custom 6 Custom 7 Custom 8 Custom 9
14	Auto Speed	000 ⇔ 255	
15	Zoom	000 ⇔ 255	
16	Zoom Control	201 ⇔ 220 221 ⇔ 255	No function Zoom reset No function
17	Dimmer Speed	010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)



## Tour

1   Dimmer   000 % 255   0-100%   Fade Duration if Custom 1-10 in CH. 13 is active)	Channel	Function	Value	Percent/Setting
3 Green   000	1	Dimmer	000 ⇔ 255	0-100%
S	2	Red	000 ⇔ 255	0-100% (Fade Duration if <b>Custom 1-10</b> in <b>CH. 13</b> is active)
S	3	Green	000 ⇔ 255	0-100%
000	4	Blue	000 ⇔ 255	0-100%
011	5	White	000 ⇔ 255	0-100%
7 Strobe    010 ⇔ 099   Slow to fast   100 ⇔ 109   No function   110 ⇔ 179   Lighting effect, slow to fast   180 ⇔ 189   No function   190 ⇔ 255   Random   190 ⇔ 255	6	Color Macro	011 \$\iff 030\$ 031 \$\iff 050\$ 051 \$\iff 070\$ 071 \$\iff 090\$ 091 \$\iff 110\$ 111 \$\iff 130\$ 131 \$\iff 150\$ 151 \$\iff 170\$ 171 \$\iff 195\$ 196 \$\iff 200\$ 201 \$\iff 205\$ 206 \$\iff 210\$ 211 \$\iff 215\$ 216 \$\iff 220\$ 221 \$\iff 225\$ 226 \$\iff 230\$ 231 \$\iff 235\$ 236 \$\iff 240\$ 241 \$\iff 245\$ 246 \$\iff 250\$	R:100% G: 0-100% B: 0 R:100%-0 G: 100% B: 0 R:0 G: 100%-0 B: 100% R:0 G: 100%-0 B: 100% R:0-100% G: 0 B: 100%-0 R:100% G: 0 B: 100%-0 R:100% G: 0-100% B: 0-100% R:100%-0 G: 100%-0 B: 100% RGBW: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 10
8 Programs  Programs  Auto 1  041 ⇔ 050   051 ⇔ 060   061 ⇔ 070   071 ⇔ 080   081 ⇔ 090   091 ⇔ 100   092   093   094   094   095   096   097   098   098   099   090	7	Strobe	010 ⇔ 099 100 ⇔ 109 110 ⇔ 179 180 ⇔ 189	Slow to fast No function Lighting effect, slow to fast No function
·	8	Programs	041 \$\iff 050\$ 051 \$\iff 060\$ 061 \$\iff 070\$ 071 \$\iff 080\$ 081 \$\iff 090\$ 091 \$\iff 100\$ 101 \$\iff 110\$ 111 \$\iff 120\$ 121 \$\iff 130\$ 131 \$\iff 140\$ 141 \$\iff 150\$ 151 \$\iff 160\$ 161 \$\iff 170\$ 171 \$\iff 180\$ 181 \$\iff 190\$ 191 \$\iff 200\$ 201 \$\iff 210\$ 221 \$\iff 230\$	Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Custom 1 Custom 2 Custom 3 Custom 4 Custom 5 Custom 5 Custom 6 Custom 7 Custom 8 Custom 9
<b>10 Zoom</b> 000 ⇔ 255 0-100%	9	Auto Speed	000 ⇔ 255	0-100%
	10	Zoom	000 ⇔ 255	0-100%



Channel	Function	Value	Percent/Setting
11	Zoom Control	201 ⇔ 220	No function Zoom reset No function
12	Dimmer Speed	010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)

## **HSIC**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Hue	000 ⇔ 255	0-100%
3	Hue Fine	000 ⇔ 255	0-100%
4	Saturation	000 ⇔ 255	0-100%
5	White Balance	011 ⇔ 030 031 ⇔ 050 051 ⇔ 070 071 ⇔ 090 091 ⇔ 110 111 ⇔ 130 131 ⇔ 150 151 ⇔ 170	White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
6	Strobe	010 ⇔ 099 100 ⇔ 109 110 ⇔ 179	No function Slow to fast No function Lighting effect, slow to fast No function Random
7	Zoom	000 ⇔ 255	0-100%
8	Zoom Control	201 ⇔ 220 221 ⇔ 255	No function
9	Dimmer Speed	010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)

## SSP

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Red	000 ⇔ 255	0-100%
3	Green	000 ⇔ 255	0-100%
4	Blue	000 ⇔ 255	0-100%
5	White	000 ⇔ 255	0-100%





Channel	Function	Value	Percent/Setting
6	Strobe	010 ⇔ 099 100 ⇔ 109 110 ⇔ 179	No function Slow to fast No function Lighting effect, slow to fast No function Random
7	Zoom	000 ⇔ 255	0-100%
8	Zoom Control	201 ⇔ 220	No function Zoom reset No function
9	Dimmer Speed	010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)



## **Configuration (Standalone)**

Use standalone configuration to operate the product without a DMX controller.

## **Auto Programs**

Auto programs allow for dynamic RGBA color mixing without a DMX controller.

- 1. Go to the Auto Program main level
- 2. Select the desired auto (AUTO1-10) and (Speed 000-255) or custom program (PROGRAM1-10)



You cannot edit any of the auto programs (AUTO1-10); however, you can edit the custom programs (PROGRAM1-10). See Edit Custom Programs for details.

## **Edit Custom Programs**

This setting allows the programming of up to 30 scenes for each of the 10 customizable programs, including colors and effects.

- 1. Go to the **EDIT** main level
- 2. Select the desired auto program (**PROGRAM01-10**)
- 3. Select the desired scene (**SCENE 01–30**)
- 4. Select the desired color or effect (RED, GREEN, BLUE, WHITE, STROBE, TIME, or FADE)
- 5. Select the color or effect value (**000–255**)
- 6. Repeat for the other colors or effects
- 7. Return to the scene (SCENE 01-30) level
- 8. Repeat the settings of colors and effects for the other scenes

#### Master/Slave

The Master/Slave mode allows a group of Colorado 3 Solo products (the slaves) to simultaneously duplicate the output of another Colorado 3 Solo (the master) without a DMX controller.

To set each of the slaves:

- 1. Go to the RUN MODE main level
- Select SLAVE

To set the master:

- 1. Set the running mode to DMX as explained in DMX Control
- Select an auto program as explained in Auto Programs, or a static mix of colors



- The master is the one that runs a program whether in Auto, or Static Color mode.
- Do not connect a DMX controller to the products configured for Master/ Slave operation. The DMX controller may interfere with signals from the master
- The master should be the first product in the daisy chain.



#### **Dimmer Profiles**

This setting determines how fast the output of the Colorado 3 Solo changes when you modify the values of the red, green, blue, white, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **SETTING** main level
- 2. Enter the master access passcode as described in Passcode
- 3. Select **DIMMER**
- 4. Select a dimmer curve (**OFF**, **DIM1**, **DIM2**, **DIM3**, or **DIM4**)



- **OFF:** The output is proportional (linear) to the dimmer and RGBW channel values.
- **DIM1-4:** The output follows the dimmer and RGBW channel values based on the corresponding dimmer curve, DIM1 being the fastest and DIM4 the slowest.



For optimum control of the 16-bit dimming channels in the TR16 and STD.Y personalities, be sure that both dimming curves in SETTING > DIMMER are set to OFF



When the control panel lock is active, the product will prompt you to enter the passcode after 30 seconds of control panel inactivity or after turning on the product. See Passcode.

## **Program Upload**

This option allows you to copy the custom programs of one Colorado 3 Solo onto other Colorado 3 Solos by using the Master/Slave mode.

- 1. Configure and connect the products in a Master/Slave arrangement, where the master has the custom programs you want to transfer to the slaves
- 2. From the master, go to the **SETTING** main level
- 3. Enter the master access passcode as shown in Passcode
- Select UPLOAD
- 5. Enter the master access passcode as shown in Passcode
- 6. When **SEND** shows, press **<ENTER>** to start the upload.
- Wait for the upload process to finish (the display will show END before continuing or turning the products off

The master and slaves will provide the status of the process by lighting up as follows:



- Yellow indicates that the upload process is running.
- Green indicates that the upload process completed successfully.
- Red indicates that the upload process failed due to an error. Recheck all cable connections and restart the process. If the issue persists, contact Chauvet Technical Support.



DO NOT upload the data from a Colorado 3 Solo to a different product. The other product may become inoperative.

#### Reset

This setting allows you to reset the COLORado 1 Solo to the default values, including the custom programs.

- 1. Go to the **SETTING** main level
- 2. Enter the master access passcode as shown in Passcode
- Select RESET
- 4. Enter the master access passcode as shown in Passcode
- Wait for the reset process to finish



#### Whites Setting

This setting allows you to select and edit the temperature of the white colors used in channel 6 (Macros) when in the **TOUR** mode, channel 11 when in the **TR16** and **STD.Y** mode, or channel 5 when in the **HSIC** mode.

- 1. Go to the CALIB.C main level.
- 2. Enter the master access passcode as shown in Passcode
- 3. Select a white color (WH.01–13)
- 4. Select an adjustment (X FINE or X FINE)
- 5. Select a color value (+/- 200)
- Repeat for the other colors

## **Color Temperature Settings**

This setting controls the color temperature with preset white output options when all color faders are set to 100%.

- 1. Go to the **SETTING** main level
- 2. Enter the master access passcode as shown in Passcode
- 3. Select FULL POWER CCT
- 4. Choose a white output color temperature. (WARM WHITE, NEUTRAL WHITE, COOL WHITE#1, COOL WHITE#2, or NORMAL)

#### **Zoom Mode**

These settings are to be changed when operating in environmental temperatures lower than 40 °F. The default setting for normal operating temperatures above 40 °F is **ZOOM MODE 1**.

- 1. Go to the **ZOOM MODE** main level
- 2. Select **ZOOM MODE 1** for use in normal operating temperature environments or **ZOOM MODE 2** environmental temperatures lower than 40 °F.

#### **LED Frequency**

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Colorado 3 Solo.

- 1. Go to the **SETTING** main level
- Enter the master access passcode as shown in Passcode
- 3. Select PWM
- 4. Choose an output frequency. (600Hz, 1200Hz, 2000Hz, 2400Hz, 6000Hz, 18000Hz, or 25000Hz)

#### **Software Information**

This option shows what version of software the Colorado 3 Solo is running.

- 1. Go to the **INFO** main level
- 2. Select **VERSION** and the version number will show on the screen

#### **RDM**

This option shows the product's UID # and the product name.

- 1. Go to the RDM main level
- 2. Select **UID** and the version number will show on the screen
- 3. Select **LABEL** and the product name will show on the screen



## 6. TECHNICAL INFORMATION

## **Product Maintenance**

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



# 7. TECHNICAL SPECIFICATIONS

## **Dimensions and Weight**

Length	Width	Height	Weight
9.84 in (250 mm)	12.36 in (314 mm)	16.25 in (413 mm)	19.8 lb (9 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

#### **Power**

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging
Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	187 W	175 W
Operating Current	1.58 A	0.869 A
Power linking current (products)	13.6 A (8 products)	13.6 A (15 products)
Power I/O	U.S./Worldwide	UK/Europe
Power input connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power output connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power Cord plug	Edison (U.S.)	Local Plug

## **Light Source**

•		
Туре	Power	Lifespan
LED	60 W	50,000 hours
Color	Quantity	Current
Quad-color RGBW	3	4.4 A

## **Photometrics**

Parameter	Narrow Zoom	Wide Zoom
Beam Angle	4°	34°
Field Angle	8°	45°
Illuminance @ 5 m	15,280 lux	313

## **Thermal**

Maximum External Temperature	Cooling System
113 °F (45 °C)	Convection

## **DMX**

I/O Connector	Channel Range
3- and 5-pin XLR	9,12, or 17

## **Ordering**

Product Name	Item Code	UPC Number
Colorado 3 Solo	01031233	781462215811







## **RETURNS**

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# **CONTACT US**

General Information	Technical Support	
Chauvet World Headquarters		
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575	
Sunrise, FL 33351	Fax: (954) 756-8015	
Voice: (954) 577-4455	Email: chauvetcs@chauvetlighting.com	
Fax: (954) 929-5560		
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com	
Chauvet Europe Ltd		
Address: Unit 1C	Email: <u>UKtech@chauvetlighting.eu</u>	
Brookhill Road Industrial Estate		
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu	
NG16 6NT		
Voice: +44 (0) 1773 511115		
Fax: +44 (0) 1773 511110		
Chauvet Europe BVBA		
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu	
9770 Kruishoutem		
Belgium	Website: www.chauvetprofessional.eu	
Voice: +32 9 388 93 97		
Chauvet France		
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr	
France	Website: www.chauvetprofessional.eu	
Voice: +33 1 78 85 33 59		
Chauvet Germany		
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>	
Germany	Website: www.chauvetprofessional.eu	
Voice: +49 421 62 60 20		
Chauvet Mexico		
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: servicio@chauvet.com.mx	
Zona Industrial Lerma	Website: www.chauvetprofessional.mx	
Lerma, Edo. de México, CP 52000		
Voice: +52 (728) 690-2010		

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., United Kingdom, Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.