


Ezcad3 Multihead Marking

Multihead marking is mean one PC control few control boards and then make marking; every board could mark same or different file. The multihead program recognize board by board SN, the board SN could be check by open Ezcad3 program, markcfg0-7, every board should have different SN, so it could be recognized by program.

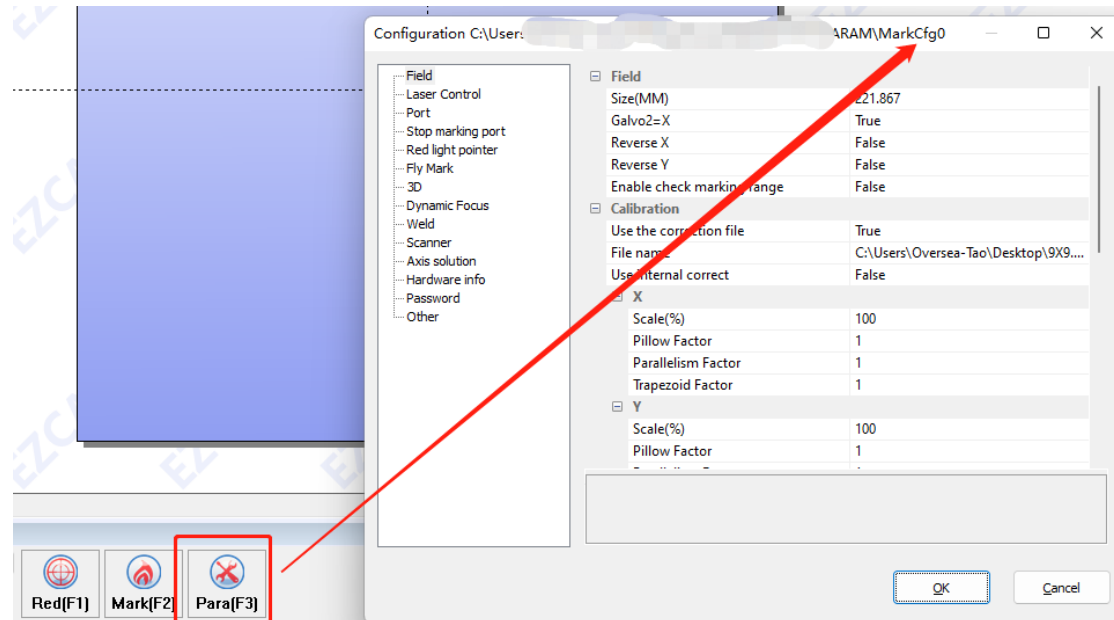

Before connect, the board SN have to be change, please check next step change board SN. (USB connect, just request different SN, Ethernet connect, the SN and IP have to make different)

- 1), Control board connect to PC by USB cable, make sure good connect.
- 2), Open DLC1pANDSN.exe, and then select PCIE type. (If it is DLC2-3.2V, it has to select USB)



DLC Type:

Current IP:

Set IP:

SN:

DLC Type:

Current IP:


Set IP:

SN:

3), Change SN for board, 0-16, and then click “Set IP and”, all setting is done.

4), power off the board and power on again.


Notice: The SN program have to be under Ezcad3 main folder!

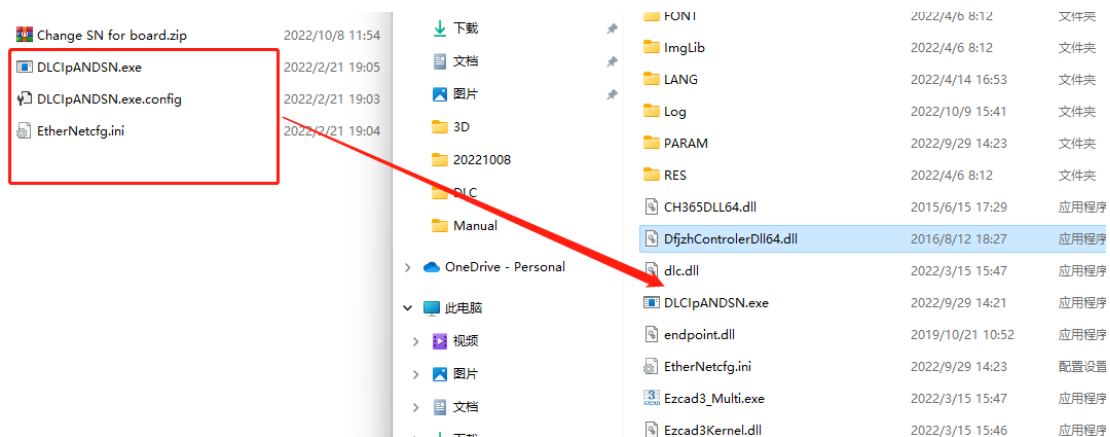


1, Connection

There have two different ports for connect to PC, USB and Ethernet, and the connect setting will be different also.

1) USB port.

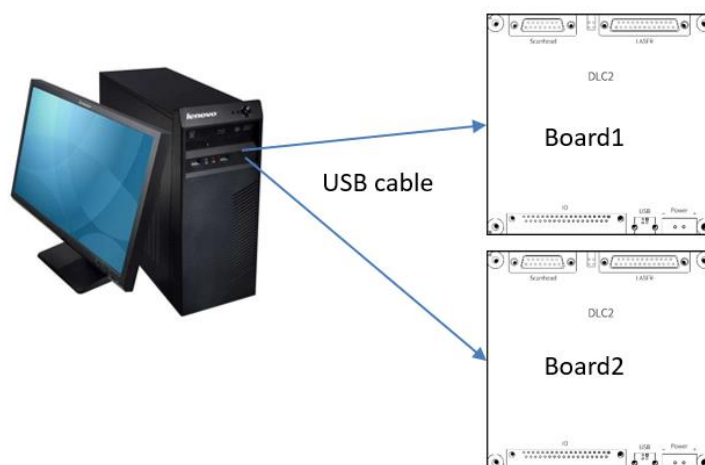


2) Ethernet port

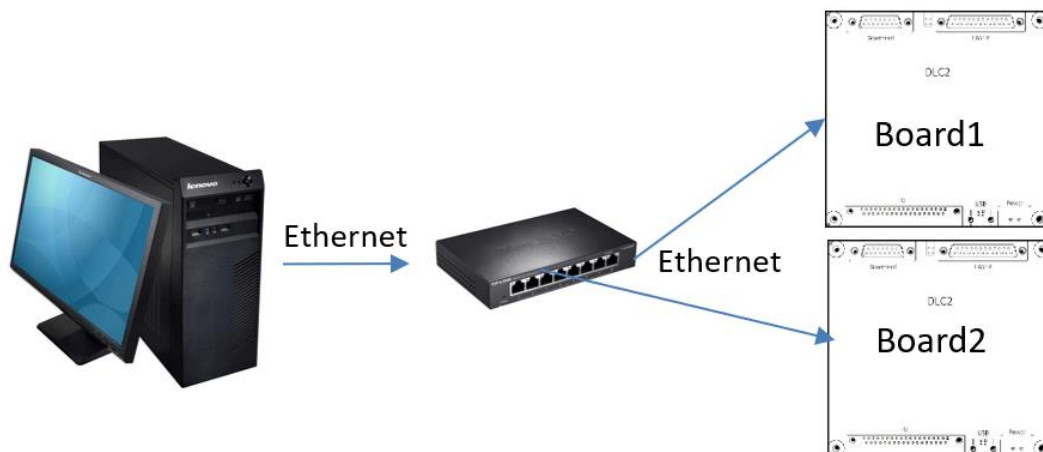

Notice: there have to be right setting on 'EtherNetcfg.ini' (This setting only for Ethernet connect)




The SN have to be 0-7, all 8 different SN must be here, and with right IP, for example, there have two board, SN=4 IP=192.168.0.21, SN=6, IP=192.168.0.45, so the right setting has to be

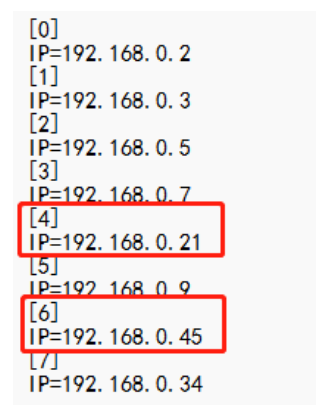


2, Ezcad3-Multi

After make right connect, and then open Ezcad3-Multi, all the board will show on program, and the program could set for every board.

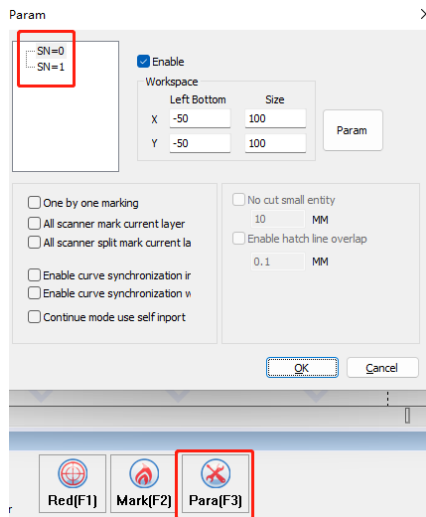

And then click Param button for setting every board parameter. Every board have calibrated file and laser setting.

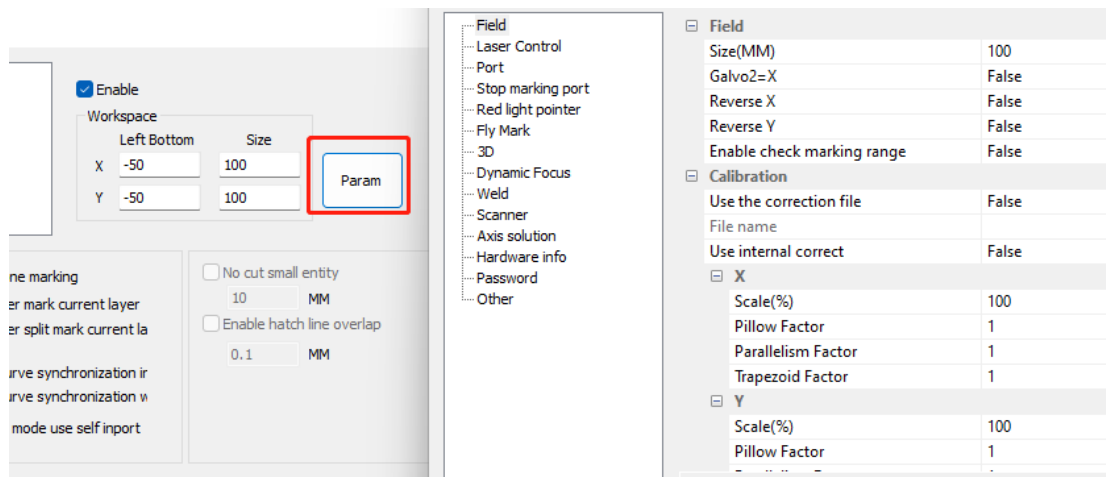

3 Set mark area for galvo:


- 1) Enable 'All scanner mark current layer'

This is mean all galvo will marking same layer, which layer do you select on main workspace, so all galvo will mark all file on select layer.




- 2) Enable 'All scanner split mark current layer'


This is mean, every galvo has own work area, and put file on right area, so the galvo will mark correct one.

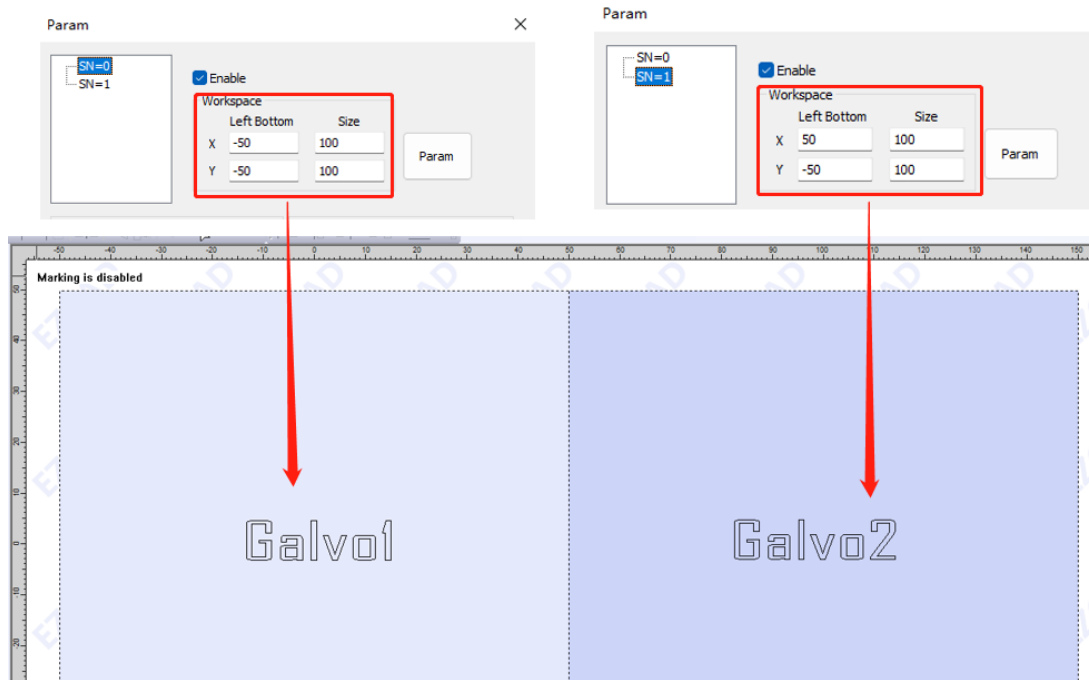


For Example: If you put a TEXT like the next picture, so galvo1 will mark 'TE' , and galvo2 will mark 'XT' .

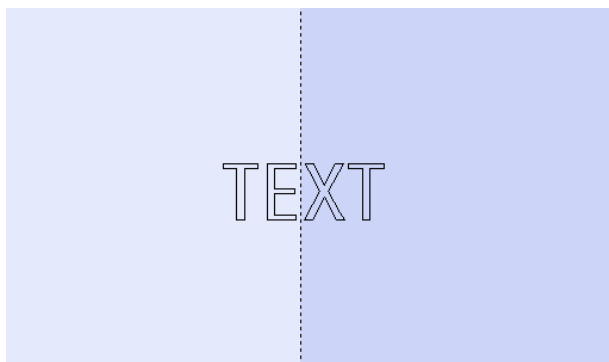

And Enable **'No cut small entity'** , and input size, like this circle, diameter less than 10mm, so the galvo1 will mark rectangle and circle, the galvo2 will mark TEXT, the circle not be split. (If want to split, unenable this function)

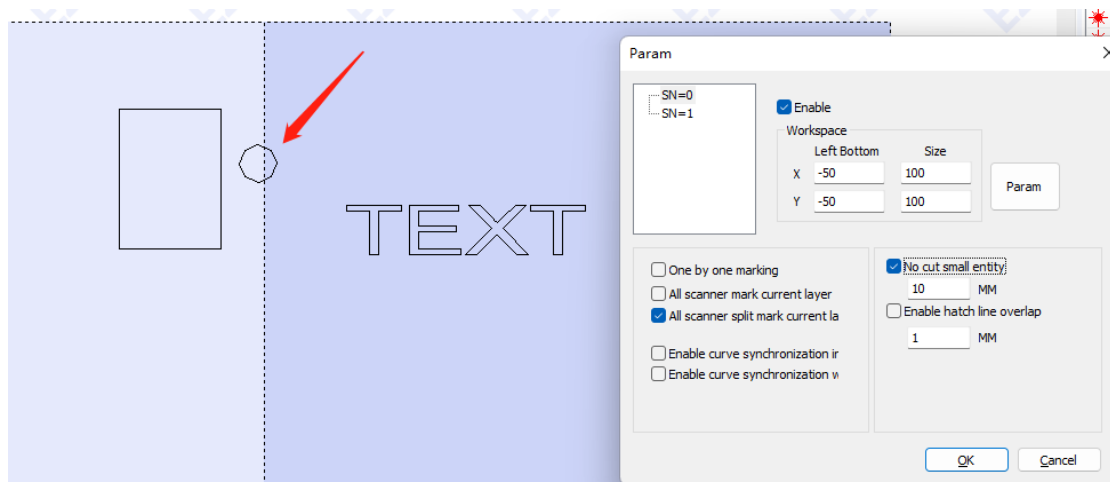


The '**Enable hatch line overlap**', this is mean, there have hatch with project, and split by two galvos, then the program could adjust overlap hatch line, this is for adjust marking result, make sure get good split result.

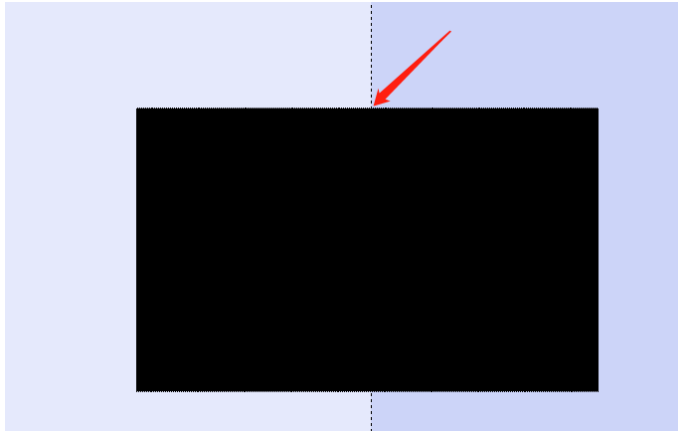

Notice: for Input and output IO, only main board works, the MIN SN is main board.

And one more, if SN program cannot change board SN, please check your board, there have a switch, this switch is for SN.

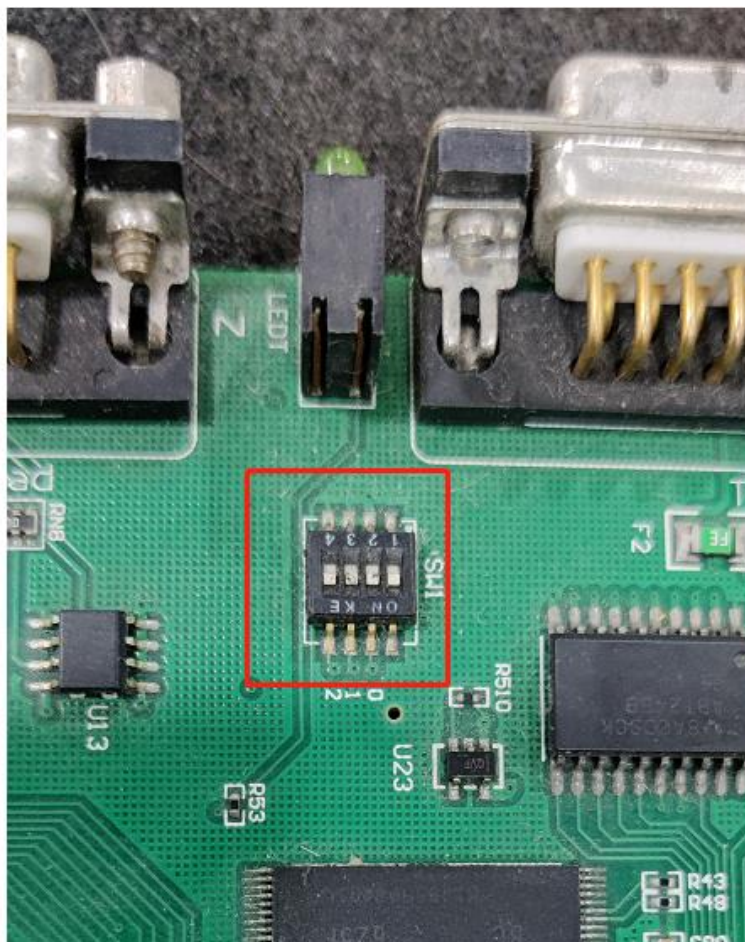

Problem:

1, open Ezcad3-Multi, but just one board.

--Please confirm all board connect well.

--Open Ezcad3 for check every board have different SN.

--Contact JCZ for license.