

EnOcean Device Service Specification

Draft

29 Pages

Text in Red is here to help you. Delete it when you have followed the instructions.

The <RFC Title> and <Company> can be set from the File>Properties:User Defined menu. To update it onscreen, press F9. To update all of the fields in the document Select All (CTRL-A), then hit F9. Set the release level by selecting one from: Draft, Final Draft, Release. The date is set automagically when the document is saved. Note that FINAL DRAFT and RELEASE documents should only be released as PDF, NOT AS ODF DOCUMENTS

Abstract

This specification defines the Java API to **discover** and **control** EnOcean devices on the OSGi platform and according to OSGi service design patterns. This API maps the representation of EnOcean entities defined by **EnOcean Equipment Profiles standard** into Java classes. OSGi service design patterns are used on the one hand for dynamic discovery, control and eventing of local and networked devices and on the other hand for **dynamic network advertising and control of local OSGi services**.

This text should not extend beyond this front page. If it does, revise the abstract.

Copyright © France Telecom Orange 2013

This contribution is made to the OSGi Alliance as MEMBER LICENSED MATERIALS pursuant to the terms of the OSGi Member Agreement and specifically the license rights and warranty disclaimers as set forth in Sections 3.2 and 12.1, respectively.

All company, brand and product names contained within this document may be trademarks that are the sole property of the respective owners.

The above notice must be included on all copies of this document that are made.



0 Document Information

Table of Contents

0 Document Information	
Table of Contents	
Terminology and Document Conventions	. 3
Revision History	3
1 Introduction	7
2 Application Domain	
System Architecture	
EnOcean Stack	
EnOcean Equipment Profiles (EEP)	10
3 Problem Description	10
4 Requirements	11
5 Technical Solution	12
6 Initial Spec Chapter	
Essentials	13
Entities	
Operation Summary	15
EnOcean Base Driver	15
EnOcean Host	16
EnOcean Device	16
EnOcean Message	17
EnOcean Channel	17
EnOcean Channel Description	. 18
EnOcean Scaled Channel Description	. 19
EnOcean Enumerated Channel Description	. 19
EnOcean Remote Management	20
EnOcean RPC	20
EnOcean RPC Handler	21
Working With an EnOcean Device	. 21
Event API	
EnOcean Exceptions	22
EnOcean Networking	



Draft July	[,] 31, 2013
Implementing an EnOcean Endpoint	23
Security	24
Java Interface Specification : org.osgi.service.enocean	. 24
Considered Alternatives	24
7 Security Considerations	25
8 Document Support	26
References	26
Author's Address	26
Acronyms and Abbreviations	
End of Document	27

Terminology and Document Conventions

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "NOT RECOMMENDED", "MAY" and "OPTIONAL" in this document are to be interpreted as described in .

Source code is shown in this typeface.

Revision History

The last named individual in this history is currently responsible for this document.

Revision	Date	Comments
Initial	February, 26 th , 2013	Maïlys Robin, France Telecom Orange, mrobin.ext@orange.com
		Victor Perron, France Telecom Orange, victor.perron@orange.fr
First draft	April 4 th , 2013	A.Bottaro, France Telecom Orange,
		M.Robin, France Telecom Orange,
		V.Perron, France Telecom Orange
Revision 1	April 18 th , 2013	V.Perron, France Telecom Orange
		Rename EO* concepts into EnOcean*
		 Use a .learnedDevices property instead of getLearnedDevices()
		Add a link between "Client Bundle" and "EnOceanDevice"



Revision	Date	Comments	
Revision 2	May 14 th , 2013	V.Perron, France Telecom Orange	
		A.Bottaro, France Telecom Orange	
		 Addition of the EnOceanMessage, EnOceanChannel, EnOceanScaledChannel, EnOceanEnumChannel, EnOceanEnumChannelRange interfaces 	
		Rewrite of the EnOceanProfile, EnOceanRPC, EnOceanRMCC specification	
		Revision of the main and EnOceanDevice diagrams	
		Addition of the known EnOcean Exceptions	
		Addition of the EnOcean EventAdmin section	
		EnOcean networking explanations	
Revision 3	May 20 th , 2013	V. Perron, France Telecom Orange	
		A.Bottaro, France Telecom Orange	
		N. Portinaro, Telecom Italia	
		A. Kraft, Deutsche Telekom	
		 Take N. Portinaro's and A. Kraft's remarks about send() standardization and level of detail 	
		Remove EnOceanProfile notion in profit of EnOceanMessage.	
		Merged together RPC and RMCC notions.	
		The heavy changes to EnOceanMessage and EnOceanChannel types Introduced the EnOceanChannelDescription type that follows a more common design with UpnP and Zigbee device services.	
Revision 4	May 27 th , 2013	V. Perron, France Telecom Orange	
		A.Bottaro, France Telecom Orange	
		Add support for Security	
		Challenge Generic Profiles support	
		Convergence towards EnOcean Link notions of Channels	
		Improve EnOceanHost notion into EnOceanGatewayChip	
		EnOceanDevice EXPORT situation should work.	



Revision	Date	Comments
Revision 5	June 2 nd , 2013	V. Perron, France Telecom Orange
		A.Bottaro, France Telecom Orange
		N. Portinaro, Telecom Italia
		 Discussion is ongoing within OSGi members about the use of EnOceanHost as a low-level notion or bundled inside of the base driver; for now, only chip configuration is available, not send methods.
		 Use protected getters and setters instead of plain properties for security objects.
		Add the repeater notion to EnOcean device.
		Move any non-filtering property to a method form.
		 Discussed setChannels() and getChannels() methods that would allow for a generic implementation of a Message, finally not integrated.
Revision 6	June 8 th , 2013	V. Perron, France Telecom Orange
		A.Bottaro, France Telecom Orange
		 Remove the Repeater notion from EnOcean Device and keep it only at the EnOceanHost level.
		Add the sendSecureTeachIn() method
		Some overall cleanup; question to reintegrate SmartAck.



Revision	Date	Comments
Revision 7	June 19 th , 2013	V. Perron, France Telecom Orange
		A. Bottaro, France Telecom Orange
		N. Portinaro, Telecom Italia
		Overall cleeanups: the RFC's style has been rewritten in order to have less inclusions of Java-like text and be more descriptive. The Java specification, generated from the Javadocs, has been move to the end of the document, as what has been done with other service specifications.
		 EnOceanDevice: sendTeachIn, sendSecureTeachIn are removed in favor of a send(TeachInMessage). Provide setters for the dynamic, implementation-independent properties, like the senderId, security features, etc.
		• EnOceanMessage: the STATUS field is no more a filtering property, it carries not enough information and changes too often to be used as such. A getSubMessageCount() method has been added to help serializers in the case of multiple-frame messages. Those should be supported by the implementation transparently.
		 EnOceanChannel: Add the rawValue property that stores the value of the channel in bytes. Add setRawValue() and setValue() methods to enable for dynamic rewrite of the values.
		EnOceanEnumChannelDescription / EnOceanScaledChannelDescription : define them as subinterfaces of the EnOceanChannelDescription interface. Make the serialization operations generic to the top-level EnOceanChannelDescription interface. Use doubles instead of floats in scaled channels.
		 Remove references to SmartAck and make it clearer that it will not be included for this iteration of the specification.
		 Still keep using only INTERFACES in this specification, but add methods to add/set properties. A bundle that would like to implement a "generic" Device/Message/etc class could then use those methods to do so.



Revision	Date	Comments
Revision 8	July 9 th , 2013	V. Perron, France Telecom Orange
		A. Bottaro, France Telecom Orange
		N. Portinaro, Telecom Italia
		A. Kraft, Deutsche Telekom
		E. Grigorov, Prosyst
		K. Hackbarth, Deutsche Telekom
		 Rename EnOceanTelegram into EnOceanMessage. Fits better to EnOcean idea of a high-level, multipart message.
		 Add dBm and redundancy information to EnOceanMessage object. Every EnOceanMessage is sent by burst of three; knowing how many have been actually received, and at which average power level, can help giving an idea of the link quality.
		 Narrow EnOceanHost's calpabilities to "what should be awaited from a Gateway device" more than "what can ESP do"; we should, as it's done with Zigbee and the ZCL, not stick to ESP for Gateways, since some hardware vendors would not follow it anyway.
		 Datafields have been renamed to Channels, to stick better to EnOcean notions. Enumerated channels have been split into Enumerated as before, and a Flag type that describes boolean channels.
Revision 9	July 31 st , 2013	V. Perron, France Telecom Orange
		A. Bottaro, France Telecom Orange
		M. Robin, France Telecom Orange
		 EXPORT scenario: BD chooses the appropriate dongle, associate service PID and sender ID propose an optional API to retrieve the sender ID or deassociate it.
		 EnOceanHost: remove ability to send messages (role of the BD) but add an API to retrieve the sender ID associated to a service PID, if allocated within that chip's ID pool.
		 Requirements: EnOceanDevice properties such as profile info, security info MUST be persisted to survive a framework reset; those properties can only be retrieved during an (often manual) teach-in procedure.
		 EnOceanDevice: for imported devices, there is a CHIP_ID property that is set by the BD. For exported devices, there is no such property, but an ENOCEAN_EXPORT property is there. In both cases, a SERVICE_PID property is present and unique.



July 31, 2013

1 Introduction

EnOcean is a standard wireless communication protocol designed for low-cost and low-power devices by EnOcean GmBh.

EnOcean is widely supported by various types of devices such as smart meters, lights and many kinds of sensors in the residential area. OSGi applications need to communicate with those EnOcean devices. This specification defines how OSGi bundles can be developed to discover and control EnOcean devices on one hand, and act as EnOcean devices and interoperate with EnOcean clients on the other hand. In particular, a Java mapping is provided for the standard representation of EnOcean devices called EnOcean Equipment Profile.

The specification also describes the external API of an EnOcean Base Driver according to Device Access specification, the example made by ZigBee Device Service specification and spread OSGi practices on residential market.

Introduce the RFC. Discuss the origins and status of the RFC and list any open items to do.



July 31, 2013

2 Application Domain

System Architecture

When installing a new EnOcean network into a residential network with an OSGi home gateway, there are 2 options :

- Add EnOcean communication capability to your home gateway, with an additional hardware such as a USB device called "dongle" and then add the necessary software (bundles) to interpret the EnOcean messages.
- Replace the current home gateway with one featuring EnOcean communication.

In both cases OSGi applications call the EnOcean driver API to communicate with the EnOcean devices as shown in Figure 1.

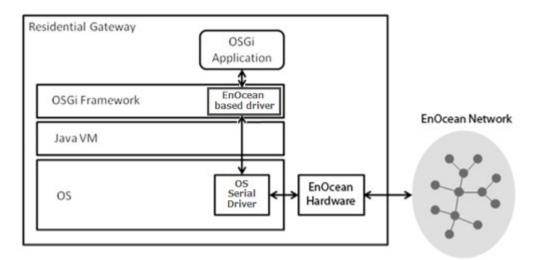


Figure 1: Communication with EnOcean devices through an EnOcean driver

The EnOcean specification defines two main types of devices: the transmitters and the receivers. Some receivers can be used as repeaters, and therefore are using bidirectional communication. The transmitters are using unidirectional communication only.

The very recent 'Smart Ack' specification now enables transmitters to stay active for a few milliseconds after a transmission in order to receive messages from a remote device. For this to be possible, "mailboxes" have to be enabled on line-powered devices.

July 31, 2013



Draft

The EnOcean network is mainly composed of those transmitters paired to receivers through a "teach-in" procedure. It is a many-to-many model with no particular hierarchy, the opposite of a star network like Zigbee where every device relies on a single coordinator.

In this respect, the EnOcean gateway's hardware is no more and no less than an universal EnOcean transceiver, for which the "teach-in" and control procedures have to be software-defined.

EnOcean Stack

The EnOcean stack is shown in Figure 2. The three bottom layers, the **PHYSICAL** layer (not shown in the figure), the **DATALINK** layer and the **NETWORK** layer are defined by the ISO/IEC14543-3-10 standard, which is a new standard for the wireless application with ultra-low power consumption.

The EnOcean standard defines the **Application** and **Security** layers; it also defines:

- The EnOcean Serial Protocol (ESP) for serial communication between a host and capable EnOcean modules;
- The EnOcean Radio Protocol (ERP) defines packeted radio communication between EnOcean nodes;
- Smart-Ack describes the use of "Mailboxes" on line-powered devices to send messages to energy-harvesting transmitters;
- The EnOcean Equipment Profiles (EEP), described in detail in the next section, defines standard device profiles to be used by EnOcean devices.

The ISO standard enabled the physical, data link and network layers to be available for all, while the EnOcean application layers are available by joining the EnOcean Alliance.

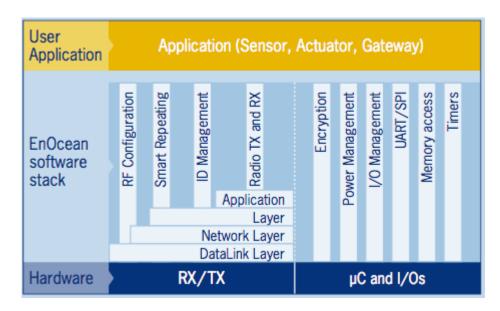


Figure 2: EnOcean Stack (source: EnOcean Website)

EnOcean Equipment Profiles (EEP)

The EnOcean Equipment Profiles enables interoperability between products developed by different vendors. For example, in a light control scenario, switches developed by a vendor can turn on and turn off lights developed by another vendor if both vendors are aware of each other's EEP Profiles. The EnOcean Alliance draws up the specifications for the applications based on the standard.

A device's EEP profile is fully defined by three combined elements:

- 1. Its EnOcean Radio Protocol radio message type (RORG, 8 bits)
- 2. Basic functionality of the data content (FUNC, 6 bits)
- 3. Type of device; it refines the main functionality given by FUNC (TYPE, 7 bits)

There are currently around 100 profiles defined.

When the existing profiles are not adequate, it is possible to create a new profile. Once developed, it should be submitted to the technical working group of the EnOcean Alliance.

3 Problem Description

With the increasing number of EnOcean vendors, the number of manufacturer-specific APIs is also raising, causing the following problems:

- Application developers cannot rely on standard EnOcean hardware interoperability within the target residential gateway's environment.
- An application that was developed for a given environment may not work in other environments without significant changes.

Those problems make it difficult for third parties to develop portable OSGi applications communicating with EnOcean devices.

The standard Java API requested in this RFC for the access of EnOcean devices would give developers a unified way of communicating with EnOcean devices, allowing developers to rely on a single, vendor-agnostic API.

July 31, 2013



4 Requirements

- R1: The solution MUST provide an API for controlling EnOcean devices.
- **R2**: The solution **MUST** provide a base driver interface as an OSGi service for the following operations: device and service discovery, network management, binding management, device management.
- **R3**: The solution **SHOULD** enable applications to trigger a re-scan of the network to refresh the registry with actual EnOcean device services.
- **R4**: The solution **MUST** provide a mechanism which notifies OSGi applications of events occurred in the EnOcean network and devices.
- **R5**: The solution **MUST** register a Device Service object representing each found EnOcean device into Service Registry and unregister the Device Service object when the EnOcean device is unavailable or has not sent updates since a very long time.
- **R6**: The solution **MUST** associate an EEP profile for each found EnOcean device and update the EEP if it is changing.
- **R7**: The solution **MUST** be able to add new profiles to the existing ones (in the case of a new profile is created by a member of the EnOcean Alliance).
- **R8**: The solution **MAY** define the driver provisioning process in accordance with the OSGi Device Access specification.
- **R9**: The solution **MUST** be independent from the physical interface used to control the EnOcean network. The solution **MUST** likewise work with network controllers based on EnOcean built-in chips, EnOcean USB dongles and high level protocols offered by EnOcean Gateway Devices compliant with the EnOcean Alliance specification.
- **R10**: The solution **MUST** include device access control based on user and application permissions compliant with the OSGi security model.

July 31, 2013

5 Technical Solution

First give an architectural overview of the solution so the reader is gently introduced in the solution (Javadoc is not considered gently). What are the different modules? How do the modules relate? How do they interact? Where do they come from? This section should contain a class diagram. Then describe the different modules in detail. This should contain descriptions, Java code, UML class diagrams, state diagrams and interaction diagrams. This section should be sufficient to implement the solution assuming a skilled person.

Strictly use the terminology a defined in the Problem Context.

On each level, list the limitations of the solutions and any rationales for design decisions. Almost every decision is a trade off so explain what those trade offs are and why a specific trade off is made.

Address what security mechanisms are implemented and how they should be used.

July 31, 2013

6 Initial Spec Chapter

Provide a link to where the Initial Spec Chapter can be found. The Initial Spec Chapter is typically written by someone other than the author(s) of this RFC and represents a rewrite of this document as close as possible to what will ultimately appear in the OSGi Specifications. It will be used by the Specification Editor as the basis for the ultimate specification chapter.

The spec template and writing guidelines can be found here:

https://www.osgi.org/members/svn/documents/trunk/templates/specification-template-oo.ott

https://www.osgi.org/members/svn/documents/trunk/templates/specwriting.pdf

Essentials

- Scope This specification is limited to general device discovery and control aspects of the standard EnOcean specifications. Aspects concerning the representation of specific or proprietary EnOcean profiles is not addressed.
- *Transparency* EnOcean devices discovered on the network and devices locally implemented on the platform are represented in the OSGi service registry with the same API.
- Lightweight implementation option The full description of EnOcean device services on the OSGi
 platform is optional. Some base driver implementations may implement all the classes including EnOcean
 device description classes while Implementations targeting constrained devices are able to implement
 only the part that is necessary for EnOcean device discovery and control.
- Network Selection It must be possible to restrict the use of the EnOcean protocols to a selection of the connected devices.
- Event handling Bundles are able to listen to EnOcean events.
- Discover and Control EnOcean Devices as OSGi services Available learnt (via an EnOcean teach-in procedure) EnOcean external endpoints are dynamically reified as OSGi services on the service registry upon discovery.
- OSGi services as exported EnOcean Devices OSGi services implementing the API defined here and
 explicitly set to be exported should be made available to networks with EnOcean-enabled endpoints in a
 transparent way.

July 31, 2013

Draft

Entities

- EnOcean Base Driver The bundle that implements the bridge between OSGi and EnOcean networks. It
 is responsible for accessing the various EnOcean gateway chips on the execution machine, and ensures
 reception and translation of EnOcean messages into proper objects. It is also used to send messages on
 the EnOcean network, using whatever chip it deems most appropriate.
- EnOcean Host The EnOceanHost object is a link between the software and the EnOcean network. It allows for the gateway calpabilities described in ESP3[9]. It is registered as an OSGi service.
- EnOcean Device An EnOcean device. This entity is represented by a **EnOceanDevice** interface and registered as a service within the framework. It carries the unique chip ID of the device, and may represent either an imported or exported device, which may be a pure transmitter or a transceiver.
 - It holds as well the available remote management commands, the profile identifiers and reference, and the latest received Message by this device.
- EnOcean Messages Every EnOcean equipment is supposed to follow a "profile", which is essentially the way the emitted data is encoded. In order to reflect this standard as it is defined in the EEP[5]., we chose to give the possibility to manufacturers to register "Messages", the essence of a profile, along with their associated payload (as Channels). See "EnOcean Channels" below for more information.
- EnOcean Channel EnOcean channels are available as an array inside EnOceanMessage objects. They are an useful way to define any kind of payload that would be put inside of an EnOcean Message.
 - EnOcean Messages and their associated Channels should be registered as description sets within the framework, by a standard or vendor-specific bundle.
 - The mechanism allows in particular a lightweight implementation of the EnOcean device service platform, by leaving the possibility to not implement the unncessary profiles, messages or channels.
- EnOcean RPC and RMCCs An interface that enables invocation of vendor-specific Remote Procedure
 Calls and Remote Management Commands. These are particular types of Messages and are not linked
 to any EnOcean Profile, so that they may be defined and registered in another way.
- EnOcean Response Handler Enables clients to easily and asynchronously get answers to their RPCs or RMCCs.
- EnOcean Client An application that is intended to control EnOcean device services.
- EnOceanException Delivers errors during EnOceanMessage serialization/deserialization or message outside transmission.



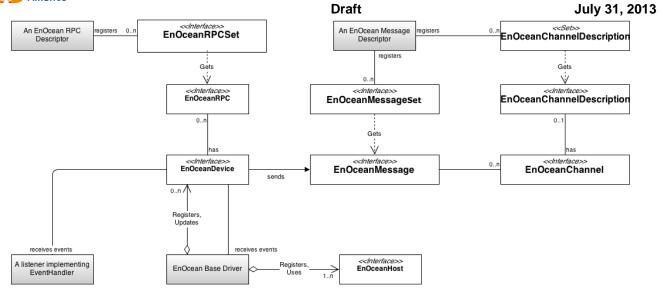


Figure 3: EnOcean Service Specification, Class Diagram

Operation Summary

To make an EnOcean device service available to EnOcean clients on a network, an OSGi service object must be registered under the **EnOceanDevice** interface within the Framework.

The EnOcean Base Driver is responsible for mapping external "transmitter" devices into **EnOceanDevice** objects, via the **EnOceanHost** "physical" interface and register them (importing), as soon as an external device performs a teach-in operation, thus broadcasting a teach-in message that is caught by the Gateway.

The EnOcean Base Driver is also able to create EnOceanDevice objects in order to import remote "receiving" devices from the EnOcean network.

Client bundles may also expose internal (local) EnOceanDevice instances, registered transparently within the framework.

A bundle that wants to control EnOcean devices, for example to implement an EnOcean client, should track **EnOceanDevice** services in the OSGi service registry and control them appropriately.

A bundle that wants to receive notifications about the EnOcean devices channel updates must use EventAdmin with or without appropriate filters to track them.

EnOcean Base Driver

Most of the functionality described in the operation summary is implemented in an EnOcean *base driver*. This bundle implements the EnOcean protocols and handles the interaction with bundles that use the EnOcean devices. An EnOcean base driver bundle is able to discover EnOcean devices on the network and map each discovered device into OSGi registered EnOceanDevice services.

It also is the receptor, through EventAdmin and ServiceRegistry, for all the events related to local devices and



July 31, 2013

enables bidirectional communication for RPC and Channel updates.

EnOcean Host

The EnOcean host notion enables the implementer to rely on common concepts accessible to any EnOcean gateway chip. Any EnOcean device service implementation should rely on at least one Gateway Chip in order to send and receive messages on the external EnOcean network.

The EnOceanHost interface will enable the developer to (but not limited to):

- Get or set gateway metadata (version, name, etc);
- · Reset the gateway chip device;
- Retrieve a Sender ID for the given Service PID of a device.

<u>Note:</u> The EnOcean Gateway Chip is an interface that enables specific, low-level control over an EnOcean compatible chip. The chip itself will also be registered as an EnOceanDevice by the BaseDriver under its own CHIP_ID.

EnOcean Device

A physical EnOcean device is reified as an **EnOceanDevice** object within the Framework; the case of exported EnOcean devices will be clarified later. Any **EnOceanHost** is also an EnOceanDevice, but the to concepts are not linked by any inheritance.

An EnOcean device holds most of the natural properties for an EnOcean object: its unique ID, the profile, a friendly name, its security information, and its available RMCC and RPCs – along with the associated getters (and setters when applicable). All those properties MUST be persisted by the base driver so that

It also has methods that reflect the natural actions a user may physically trigger on such a device: send a message, send a teach-in message, or switch to learning mode.

Every EnOcean Device bears a SERVICE_PID property that is assigned either by the base driver or by any service-exporting bundle. There is no restriction on the choice of a SERVICE_PID, but it MUST be unique on the framework.

The properties on which the EnOceanDevices can be filtered on are: the device's SERVICE_PID and CHIP_ID, its BASE_ID, the profile identifiers (RORG / FUNC / TYPE integers and PROFILE_NAME), its friendly NAME, and also its SECURITY_LEVEL_FORMAT. This latest is motivated by the need for some bundles to select only security-enabled devices easily. It is defined in the same way as in the EnOcean Security Draft[9].

The EnOceanDevice objects MUST as well implement methods for:

• Sending messages, using raw bytes or fully-qualified EnOceanMessage objects.



July 31, 2013

- Getting or setting the security features of a device in a protected way;
- Retrieving the currently paired devices in the case of a receiver, as a collection of device IDs;
- Get the currently available RPCs and RMCCs to the device.
- Optionally, the device may implement a method to retrieve the latest issued Message.

Note:

In IMPORT situations, the CHIP_ID is uniquely set by the Base Driver; a mechanism should also allow the SERVICE_PID (cf. Core Specification v4, section 5.2.6) in a repeatable way.

In EXPORT situations, the service registration authority should set the SERVICE_PID of the device by itself, in a unique manner; the CHIP_ID (this device's EnOcean source ID when it issues messages) has to be allocated by the Base Driver, which keeps a dictionary of the currently allocated sender IDs.

Optionally, the Base Driver could provide an API to retrieve the sender ID associated to a particular SERVICE_PID, or be instructed to erase such an association.

EnOcean Messages

EnOceanMessages are at the core of the EnOcean application layer as a whole and the EnOcean Equipment Profile specification in particular.

Every exchange of information within EnOcean networks is done in the form of a dedicated message.

The properties on which a client bundle could filter the registered EnOceanMessage objects are: the RORG (radio-message basic type) of a Message, the SENDER_ID of the message, and the enventual DESTINATION ID of this message.

The method available to the interface are:

- A serialize() and deserialize() methods to convert to and from plain byte arrays into proper Message objects;
- A method to get the current ordered list of Channels in the message, letting out any "blank" space of the payload;
- A getMessageCount() method that helps the implementer to know how many messages this Object actually embeds; this will usually remain set to 1.
- Some generic methods to get/set the message's status, friendly name, and such.
- Methods that give information about the current link quality for this Message; this includes the number of redundant telegrams received (out of three) and the average RSSI for those.



NOTE: This model applies to any kind of Message, adressed or not; it could be derived to generate RPC or MSC messages as well. In the case the DESTINATION_ID is set, then the message keeps the same RORG but will be encapsulated in an ADT Message upon serialization.

EnOcean Channel

The EnOceanChannel interface are an useful abstraction to generate or interpret both the metadata and values instead of raw bytes in a Message.

The **EnOceanChannel** interface only provides a way to separate the different fields in a message's payload, using the getOffset() offset and getSize() methods, of each.

Every channel also has properties to store its shortcut name as defined in the specification, and a symbolic friendly name that the implementer may choose.

A particular field may as well have an associated description, provided by the **EnOceanChannelDescription** interface; the getDescription() method may retrieve the associated description object.

The associated value can then be retrieved using the getValue() method. The actual type returned by getValue() is a generic java Object; only the description (or the implementer's knowledge) can help casting it to its actual type.


For instance, for a Temperature value channel, the getValue() call will return an Object that can be casted as a Double.

There is also a getRawValue() method, returning raw bytes, that enables client bundles to get the values of this channel independently of their description.

Finally, the setRawValue() and setValue() calls can be used to set the value of the channel; the setRawValue plainly uses raw bytes at the lowest level and does not require any kind of channel description or metadata. The setValue(Object obj) method MAY use the channel's description object to store the value from a complex object inside of the Channel.



July 31, 2013

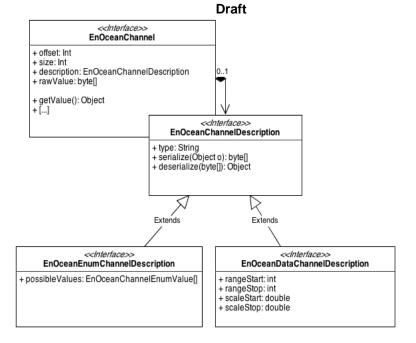

EnOcean Channel Description

Those description objects should be exported by a library bundle and registered within the framework. They describe a channel in the most complete way possible.

The **EnOceanChannelDescription** interface enables the description of all the various channels as specified in the EnOcean specification, or by 3^{rd} – party actors.

Among the available methods to the EnOceanChannelDescription interface, are the following:

- A getType() method that returns a String identifier of the actual Channel type.
- serialize() and deserialize() methods to parse to and from raw bytes into actual values.

Every EnOcean channel MUST belong to one of those 3 different types:

- DATAFIELD_TYPE_RAW: A collection of bytes. This type is used when the description is not provided, and is thus the default. For this type, the EnOceanChannel's getValue() call actually returns a byte[] collection. The encryption key or a device ID on 4 bytes are examples.
- DATAFIELD_TYPE_DATA: A scaled physical value. Used when the data can be mapped to a
 physical value; for instance, the 'WND Wind Speed' channel is a raw binary value, in a range
 from 0 to 255, that will be mapped as a wind speed between 0 and 70 m/s. For this type, the
 EnOceanChannel's getValue() call actually returns a **Double** value.
- DATAFIELD_TYPE_FLAG: A boolean value. Used when the Channel can be either 1 or 0. The
 "Teach-In" Channel is a well-known example; this 1-bit field may either be 0 or 1, depending whether
 the Message is a teach-in one or not. For this type, the EnOceanChannel's getValue() call actually
 returns an EnOceanChannelEnum object.



July 31, 2013

• DATAFIELD_TYPE_ENUM: An enumeration of possible values. Used when the Channel can only take a discrete number of values. More complicated than the Flag type, Enumerated types may have tresholds: for instance, the A5-30 "Digital Input- Input State (IPS)" channel is a 8-bit value which means "Contact closed" between 0 and 195, and "Contact open" from 196 to 255. For this type, the EnOceanChannel's getValue() call actually returns an EnOceanChannelEnum object.

According to the channel type,he actual description object should implement one of those specialized interfaces:

EnOcean Data Channel Description

The methods accessible to this sub-interface give access to the input (as an integer) range of the channel, and the output (as a double) range. The serialize() and deserialize() methods SHOULD be written in order to convert from one range to another, and vice versa.

There is also a method to retrieve the actual physical unit (as a String) of the physical field if needed, such as degrees Celsius. (°C)

Here is an example list of a few scaled channels that would implement this interface, from the EnOcean specification.

Short	Description	Possible implemented name	Range	Scale	Unit
TMP	Temperature (linear)	TemperatureScaledChannel_X	0255	-10°+30°	°C
HUM	Humidity (linear)	HumidityScaledChannel_X	0250	0100	%

EnOcean Flag & Enumerated Channel Description

The only specialized method accessible to this interface is <code>getPossibleValues()</code>, which returns an array of the available <code>EnOceanChannelEnumValue</code> object types accessible to this channel.

For instance a On/Off switch would have access to two **EnOceanChannelEnumValue** objects: ChannelEnum_False and ChannelEnum_True.

In the same fashion, the serialize() and deserialize() methods should be overridden in order to transform the input integer into a single EnOceanChannelEnum object, and the opposite.

There are a few examples of such objects below.

Device profile	EnOceanChannelEnumValue	Start	Stop	Meaning
Multisensor	OccupancyStatus_Pressed	0	0	Button pressed
	OccupancyStatus_Released	1	1	Button released
Humidity sensor	HumiditySensor_Available	0	0	No sensor available
	HumiditySensor_NotAvailable	1	1	Sensor available
Fan speed stage switch	FanStageSwitch_Stage3	0	144	Fan speed : Stage 3
	FanStageSwitch_Stage2	145	164	Fan speed : Stage 2
	FanStageSwitch_Stage1	165	189	Fan speed : Stage 1
	FanStageSwitch_Stage0	190	209	Fan speed : Stage 0
	FanStageSwitch_StageAuto	210	255	Stage Auto

EnOcean Remote Management.

Remote Management is a non mandatory feature, which allows EnOcean devices to be configured and maintained over the air or serial interface using radio or serial messages.

It defines two types of commands, that are not related to any EEP: the RMCCs(Remote Management ControlCommands) and the RPCs (Remote Procedure Calls).

RMCCs are mandatory in any device integrating the remote management feature (nine RMCCs are currently defined in the Remote Management Document [8]; RPCs may be custom and vendor-specific. 6 of them are defined in the EEP document[5] as of today.

Both of them (RPCs and RMCCs) are defined by a Manufacturer code (11 bits, 0x7FF for the EnOcean alliance) and a function code on 12 bits. The RMCC already occupy the function codes 0x000-0x008.

The structure and associated messages are identical, though.

EnOcean RPC

This interface enables the specification and registration of EnOceanRPCSet collections within the Framework.

A client bundle will be able to filter the available RPCs according to their integer-defined MANUFACTURER_CODE and FUNCTION_CODE, which are mandatory and unique identifiers from the EnOcean remote management [6]. specification or the vendor.

The RPCs also have methods to get or set a unique senderld, a destinationId (which is optional, many of the RPCs being broadcasted), get or set the inner payload as a byte[] collection, and invoke the RPC itself.

The invoke(EnOceanRPCHandler handler) method MAY accept a RPCHandler reference that will be used to retrieve the results of the RPC, if needed.

EnOcean RPC Handler

The RMCC or RPC answers are processed by the driver and sent back to the registered listeners. Those listeners should take care of understanding the raw response data according to the chip ID of the sending device.

The notifyAnswer(int senderId, int manufId, int functionId, byte[] data) and notifyAnswer(EnOceanRPC answer) are callback functions that may be called upon answer reception.

Note that answers to a RPC can be described structurally in the exact same way as an RPC request can; this is because they share the same message structure.

Working With an EnOcean Device

All discovered EnOcean devices in the local networks are registered under **EnOceanDevice** interface within the OSGi Framework. Every time an EnOcean endpoint appears or quits the network, the associated OSGi service is registered or unregistered in the OSGi service registry. Thanks to the EnOcean Base Driver, the OSGi service availability in the registry mirrors EnOcean device availability on EnOcean networks.

EnOcean events are sent using the whiteboard model; using ServiceTracker, DeclarativeServices or another model, a bundle can track the addition, modification or removal of an EnOceanDevice service.

Below stands an example showing how this can be done. The sample Controller class extends the ServiceTracker class so that it can track all EnOcean Endpoint services.

```
public Class Controller extends ServiceTracker {
     public Object addingService(ServiceReference arg0) {
           Object service = context.getService(arg0);
           if (service != null && service instanceof EnOceanDevice) {
                 eoDevice = (EnOceanDevice) service;
           Logger.debug(service.getClass().getName() + " service found.", null);
           return service;
     }
     public void modifiedService(ServiceReference arg0, Object arg1) {
           /* Unimplemented */
     public void removedService(ServiceReference arg0, Object service) {
           if (service instanceof EnOceanDevice) {
                 eoDevice = null:
                 Logger.debug("EnOceanDevice service was shut down.", null);
          }
     }
```

Event API

EnOcean events must be delivered asynchronously to the Event Admin service by the EnOcean implementation, if present. EnOcean events have the following topic:

org/osgi/service/enocean/EnOceanDeviceEvent

The properties propagated when an EnOcean device service event occurs may comprise:

- enocean.chipId (int) The identity as defined by EnOceanDevice.CHIP_ID of the device concerned by the event.
- enocean.rorg (int)
- enocean.func (int)
- enocean.type (int)



- enocean.isTeachIn (boolean)
- enocean.senderld (int)
- enocean.destinationId (int)
- enocean.device (EnOceanDevice) The associated EnOceanDevice object.
- enocean.message (EnOceanMessage) The EnOceanMessage object associated with this event, or null.
- enocean.messageBytes (byte[]) The serialized Message bytes in the case of the lightweight implementation option, or *null*.

In some cases, the EnOceanDevice event has no RORG, FUNC, nor TYPE yet. In that case the associated properties may be set to -1 or be absent.

EnOcean Exceptions

The **EnOceanException** can be thrown and holds information about the different EnOcean layers. Here below, ESP stands for "EnOcean Serial Protocol". The following errors are defined:

- FAILURE (0x01) Operation was not successful.
- ESP_RET_NOT_SUPPORTED (0x02) The ESP command was not supported by the driver.
- ESP RET WRONG PARAM (0x03) The ESP command was supplied wrong parameters.
- ESP_RET_OPERATION_DENIED (0x04) The ESP command was denied authorization.
- INVALID_TELEGRAM (0xF0) The message was invalid.

EnOcean Networking

EnOcean networking is a quite particular wireless network in the sense that there is no actual "topology". Every device emits messages on the same frequency band, which depends on the world region and local regulations.

In Europe, the 868 MHz frequency band is used; in Asia, the 315 MHz is adopted. The 902 MHz band is in the process of being used for North America. There is no notion of a "network identificator" in EnOcean.

The transmitting devices usually broadcasts all of their messages on this frequency, and most of the time do not wait for an answer. The transmitting devices being mostly energy-harvesting devices, they cannot easily wait for an answer.

The receiver modules listen to every message sent on the frequency band. They filter the messages of interest based on the Sender ID that is embedded within every message. They are supposed to listen only to Sender ID that have previously been "taught" to them, and discard the others.



July 31, 2013

The teach-in procedure is simple. The receiver module has to be manually (or remotely, but that is still very rare) switched to a "learning mode". It will wait for a very special kind of EnOcean messages, called "teach-in" messages. Those "teach-in" messages have to be sent by the emitting device you want to be learnt by the receiver; usually, it is possible to trigger the emission of such a message with a physical button or combination of buttons on the emitting device.

Once the receiver module has received this "teach-in" message, it should keep in non-volatile memory the sender ID of that message and such, be "appaired" with it.

Because of this process, EnOcean networks are N-to-N: you may pair N emitters to 1 receiver, 1 emitter with N receivers, or even N emitters to M receivers.

In this respect, the EnOcean gateway is somewhat special; it is a device able to both send and receive messages, is line-powered, and listens to every message in the frequency band.

Implementing an EnOcean Endpoint

OSGi services can also be exported as EnOcean devices to the physical EnOcean network. This allows developers to bridge legacy devices to EnOcean networks. A bundle only has to register an **EnOceanDevice** with the following properties to export an OSGi service as an EnOcean device:

ENOCEAN EXPORT – To indicate that the device is an exported device.

The exported EnOcean device's properties should be set as to reflect its expected features; in particular, setting an **unique** DEVICE ID is mandatory.

Security

The security in EnOcean is mean exists in a point-to-point fashion. The emitting device will be responsible of transmitting the optional Key and/or Rolling Authentication Code (RLC) to the receiver device during a dedicated "Security-Teach-In" phase.

The security configuration, Key and RLC are transmitted using a special message. The receiver device then associates the given key and RLC to that device internally, and uses them to decode any further message coming from it.

As a result, the Key and RLC parameters, as well as the current security configuration, are properties tied to a sending EnOceanDevice object; furthermore, an arbitrary number of security configurations, keys and RLCs may coexist within the same EnOcean network.

It will be the responsibility of the receiver object to fetch the current security properties of the sending object and use them to decode further messages.

Java Interface Specification : org.osgi.service.enocean

EnOcean Package Version 1.0.



Page 26 of 29



Draft

July 31, 2013

Bundles wishing to use this package must list the package in the Import-Package header of the bundle's manifest.

For example: Import-Package: org.osgi.service.enocean; version="[1.0, 2.0)"

Summary

Export the types discussed above.

Considered Alternatives

June 19, 2013:

The RFC's style has been changed to be more lightly descriptive on the actual Java types. The implementation efforts in parallel, on the opposite, are driving the actual interface specification that is now put and update in the "Java Interface Specification" paragraph above.

About the dynamic implementation of Messages, as proposed by N. Portinaro, it is decided to keep using interfaces only in the specification, and not define classes. Nevertheless, a sample of such a dynamic implementation using anonymous classes implementing those interfaces on-the-fly has been proposed as an example.

June 4, 2013:

It has been discussed whether or not to add a setChannels() or appendChannels() method to the EnOceanMessage interface. Unfortunately, trying to do so resulted in a cluttered and difficult to read interface for no clear benefits, so it has been decided not to add it yet.

The possibilty to send messages using the EnOceanHost interface has also been declined yet; this interface should be used for the configuration of the gateway chip only.

After an evaluation of the issues and rewards that would bring an implementation of the scarcely-used SmartAck protocol, it has been decided to set it aside for this iteration.

May 27, 2013:

The 'export' feature is not anymore set aside and should be challenged for consideration. The 'SmartAck' feature status is still under evaluation. The Security features of EnOcean have been integrated. Remote Management is integrated in a minimal fashion. Since there is no clear specification on the equivalent of the 'datatypes' for Remote Management, it has been decided yet (V.Perron) to set aside the development of abstractions for them and let the programmer implement extra methods above the specification when deemed useful.

April 03, 2013:

It has been decided (A.Bottaro, M.Robin, V.Perron) to set aside the 'export' feature of EnOcean device service for further reflexion, as well as 'SmartAck' feature from EnOcean, which will require extra effort. For this latter topic, one of the tracks worth exploring was the setup of Mailboxes at the EnOceanHost level (which sticks to the reality of the EnOcean



July 31, 2013

gateway chips) and recommanding a dedicated 'real-time' channel to be implemented, so that SmartAck message frames could be carried synchronously.

7 Security Considerations

Description of all known vulnerabilities this may either introduce or address as well as scenarios of how the weaknesses could be circumvented.

8 Document Support

References

- [1]. Bradner, S., Key words for use in RFCs to Indicate Requirement Levels, RFC2119, March 1997.
- [2]. Software Requirements & Specifications. Michael Jackson. ISBN 0-201-87712-0
- [3]. André Bottaro, Anne Gérodolle, Philippe Lalanda, "Pervasive Service Composition in the Home Network", 21st IEEE International Conference on Advanced Information Networking and Applications (AINA-07), Niagara Falls, Canada, May 2007
- [4]. Pavlin Dobrev, David Famolari, Christian Kurzke, Brent A. Miller, "Device and Service Discovery in Home Networks with OSGi", IEEE Communications magazine, Volume 40, Issue 8, pp. 86-92, August 2002ASHRAE 135-2004 standard, Data Communication Protocol for Building Automation and Control Networks
- [5]. EnOcean Equipment Profiles v2.5, EnOcean Alliance, March 04, 2013



- [6]. EnOcean System Specification Remote Management v1.7, EnOcean Alliance, December 16, 2010
- [7]. EnOcean System Specification Smart Acknowledgment v1.4, EnOcean Alliance, September 15, 2010
- [8]. EnOcean System Specification EnOcean Serial Protocol v1.17, EnOcean Alliance, August 2, 2011
- [9]. EnOcean System Specification Security of EnOcean Radio Networks v1.3, EnOcean Alliance, July 31, 2012

Add references simply by adding new items. You can then cross-refer to them by chosing <Insert><Cross Reference><Numbered Item> and then selecting the paragraph. STATIC
REFERENCES (I.E. BODGED) ARE NOT ACCEPTABLE, SOMEONE WILL HAVE TO UPDATE THEM
LATER, SO DO IT PROPERLY NOW.

Author's Address

Name	André Bottaro
Company	France Telecom Orange
Address	28 Chemin du Vieux Chêne, Meylan, France
Voice	+33 4 76 76 41 03
e-mail	andre.bottaro@orange.com

Name	Maïlys Robin
Company	Orange Labs Tokyo
Address	Keio Shinjuku <mark>Oiwake</mark> Bldg. 9F, 3-1-13 Shinjuku, Shinjuku-ku, Tokyo 160-0022
Voice	
e-mail	mrobin.ext@orange.com

Name	Victor Perron
Company	Orange Labs Tokyo
Address	230 rue La Fayette, 75010 PARIS
Voice	
e-mail	victor.perron@orange.fr

Acronyms and Abbreviations

End of Document