Important Usage Information

- Store the product in a dry environment. Do not use it in humid conditions.
- When connecting a 220 VAC input, always connect the input wires to the PWR module first, then plug the cable into the wall outlet.
- The TYPE-C port is for input only.
- The USB-A port is for output only.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not officially approved will void your warranty and your authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a **Class B digital device** pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To comply with FCC RF exposure requirements, maintain a minimum distance of **20 cm (8 inches)** between the transmitter and your body during installation and operation. Use only the antenna supplied with the device.

Technical Specifications

Wi-Fi Module	ESP8684-MINI-1-H4
Memory	RAM - 272KB, Flash - 4MB
Connectivity	2.4G Wi-Fi (IEEE 802.11 b/g/n)
Operating Temperature	ÿ10 ° C ~ 60 ° C

Package Contents

Operating Instructions

Interface Overview

2.After connecting, the Web UI should open automatically. If it doesn’t open within 10–20 seconds, access `192.168.254.1` manually in your browser.

3.Select your language and tap "Next".

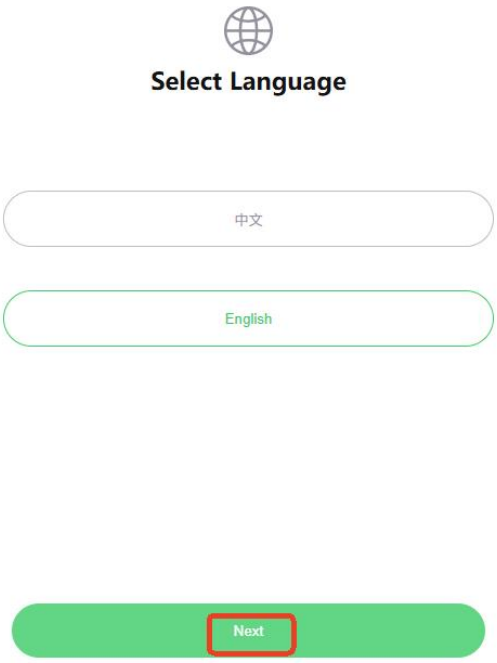

4.The interface will display available Wi-Fi networks. Choose the same Wi-Fi your printer uses. If your network isn’t listed, tap "Scan" to refresh.

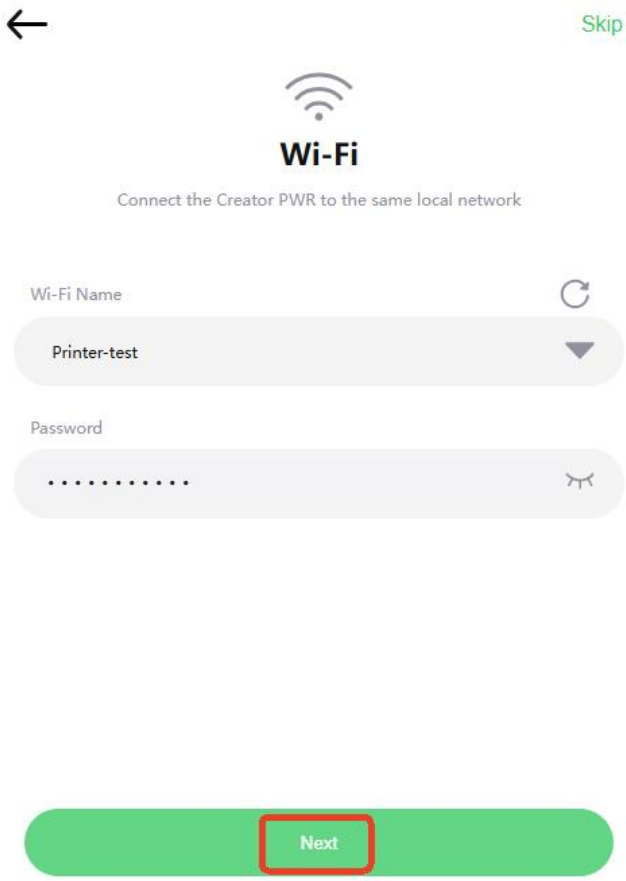

5.Once connected, an IP confirmation popup will appear, tap "Confirm".

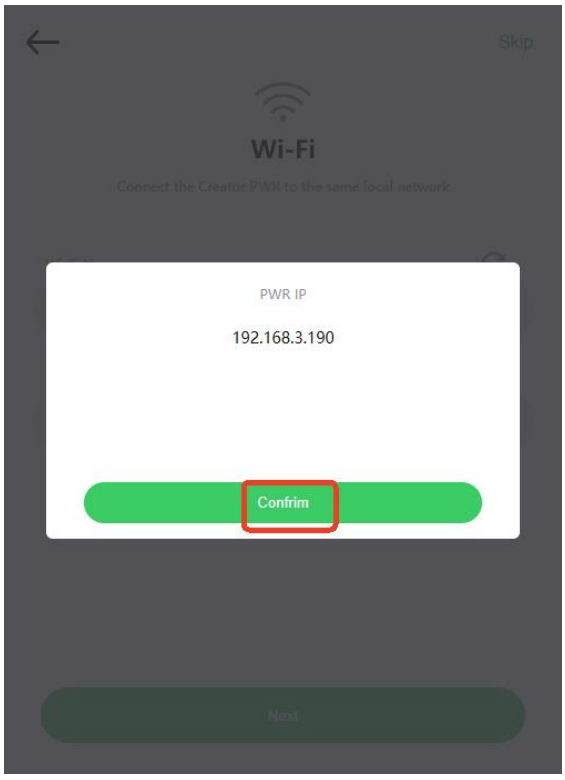

6.Enter your preferred printer name, printer IP address, and port **4408**, then tap "Connect". When `Connection Successful` appears, tap "OK".

Web UI Operation Guide

Power Control

BASIC CONTROL

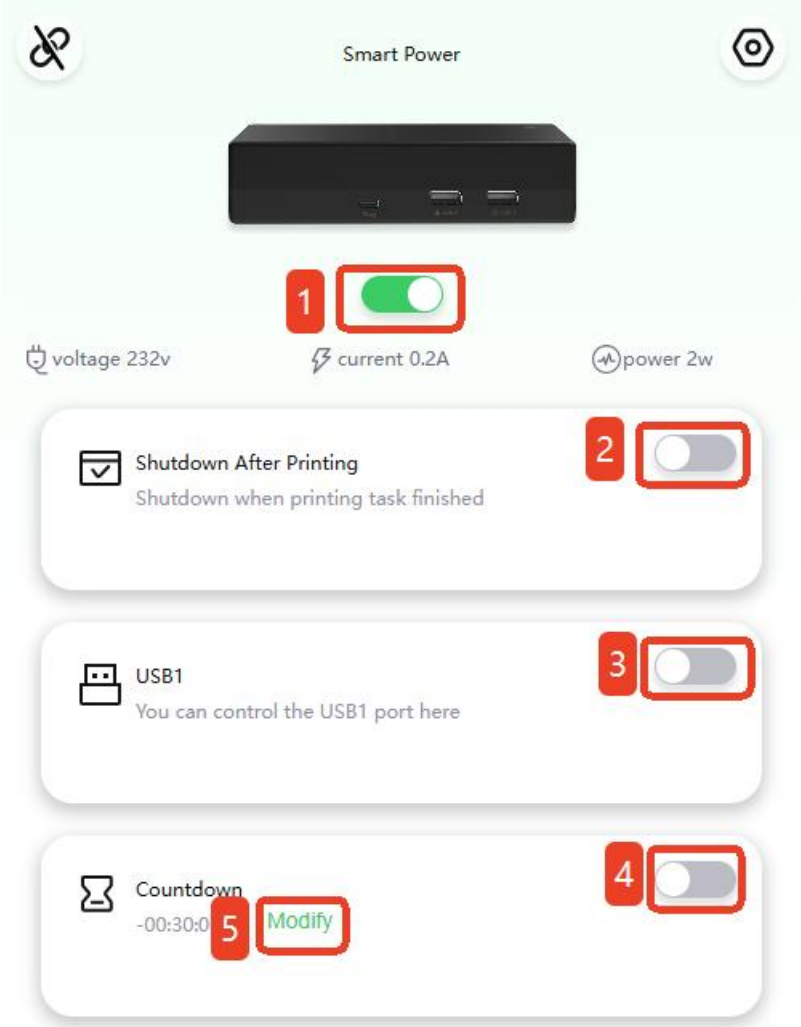

- 1.Turn the 220 V output on or off.
- 2.Toggle **Auto Power-Off After Print Completion** — when enabled, the printer powers off automatically after printing is done (the toggle resets afterward).
- 3.Turn **USB1 output** on or off.
- 4.Enable or disable the **Countdown** function.
- 5.Set the **Countdown Duration**.

POWER PARAMETERS

Displays real-time **voltage**, **current**, and **power** supplied to external devices.

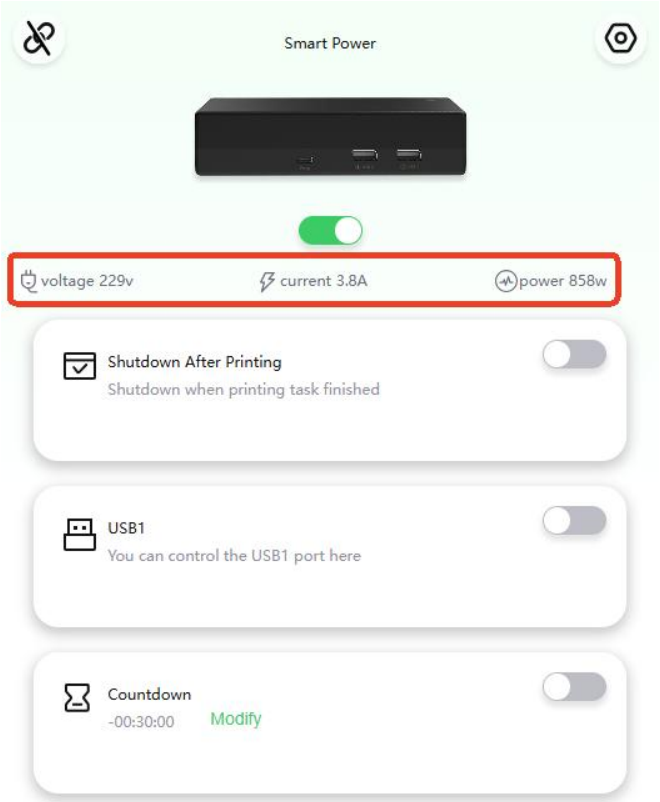

COUNTDOWN SETTINGS

Tap "Modify" to open the timer popup. Set your desired time and tap "Save".

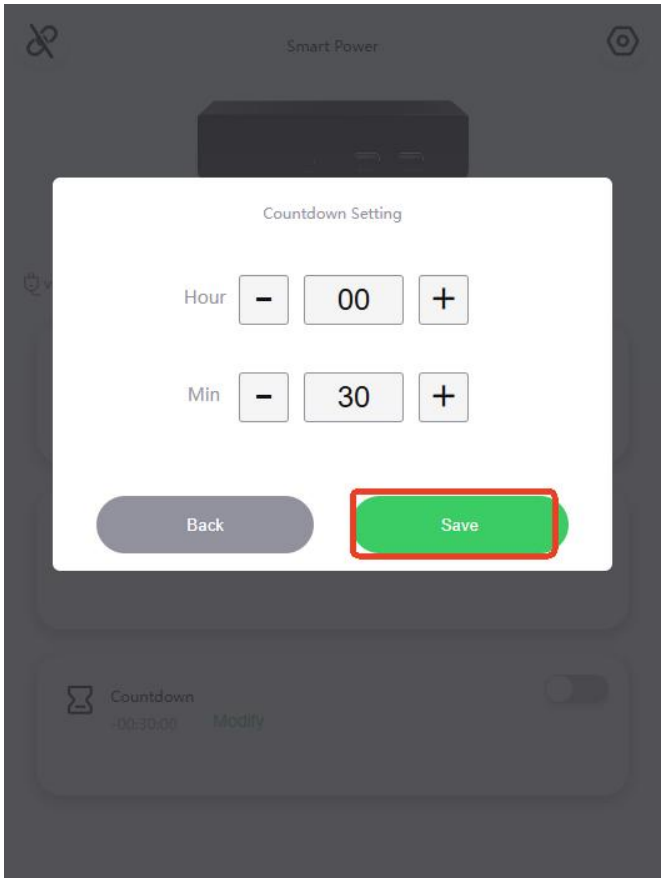

Your configured time will appear on the main interface.

Accessing the Settings Page

Tap the "settings icon" in the top-right corner of the Power Control page.

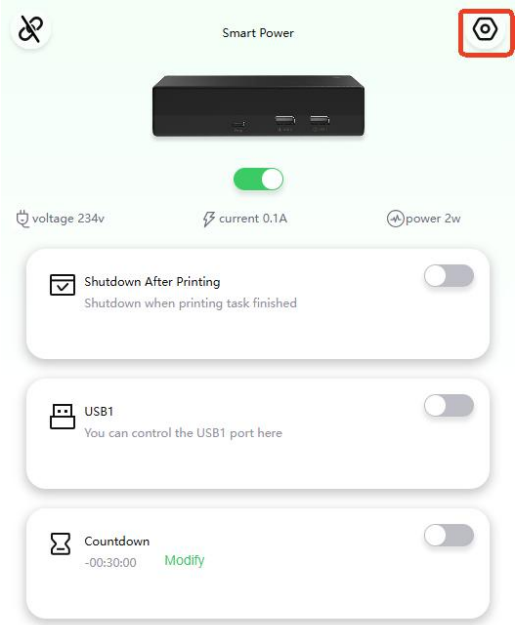

Safe Power Configuration

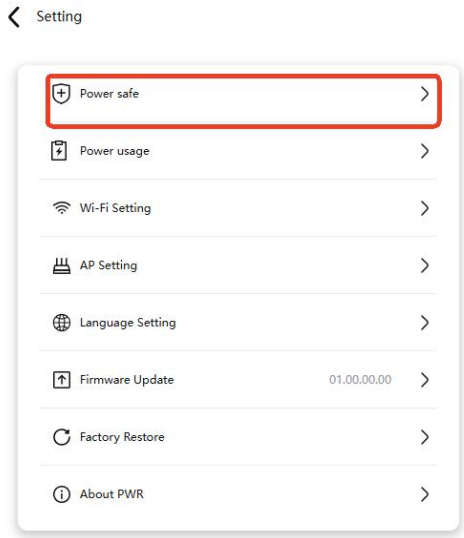

Enter maximum and minimum power limits.
Enable the toggle switches to activate protection.
When power exceeds or drops below these thresholds, the 220 V supply automatically shuts off.

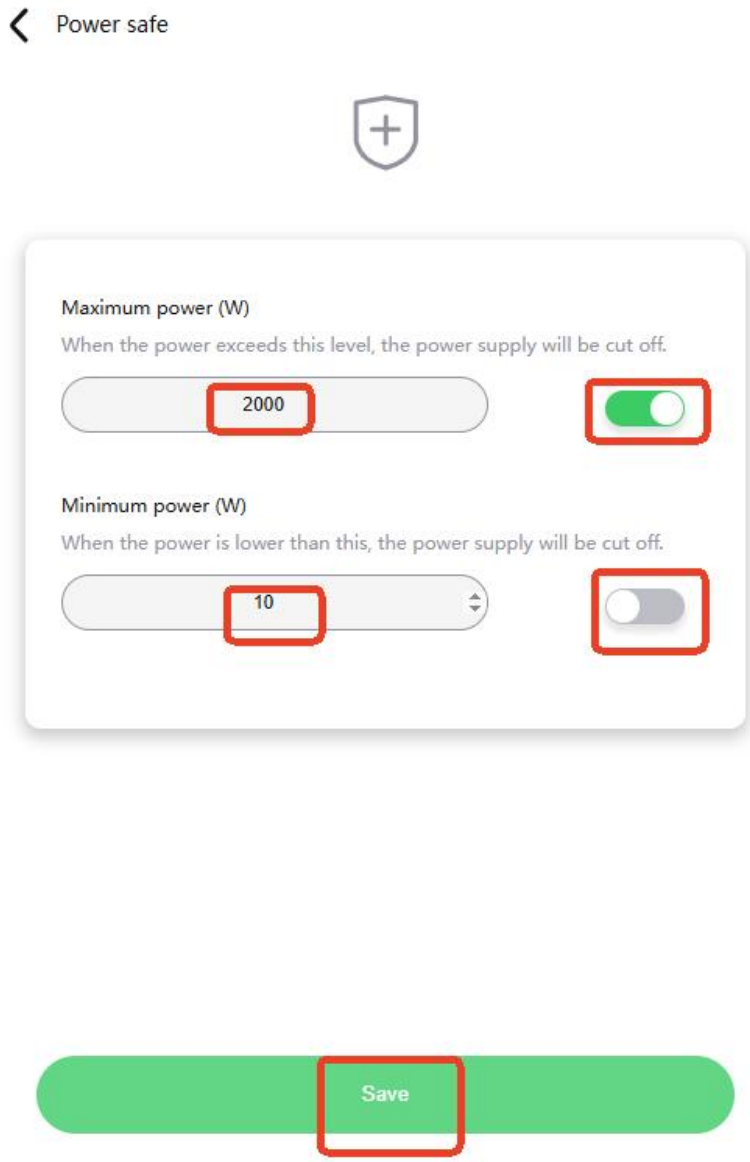

Power Usage Records

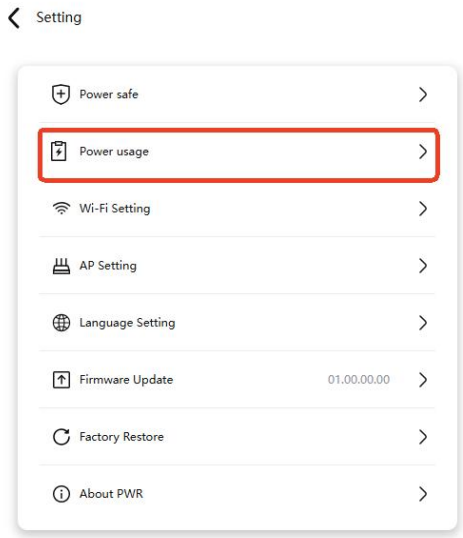

Displays cumulative energy consumption and total printing time.
Tap "Clear" to clear data.

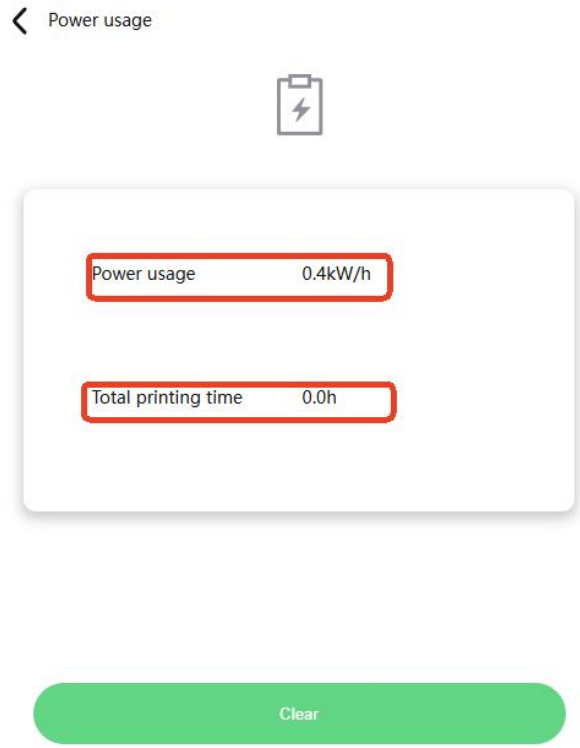

Modify Wi-Fi Settings

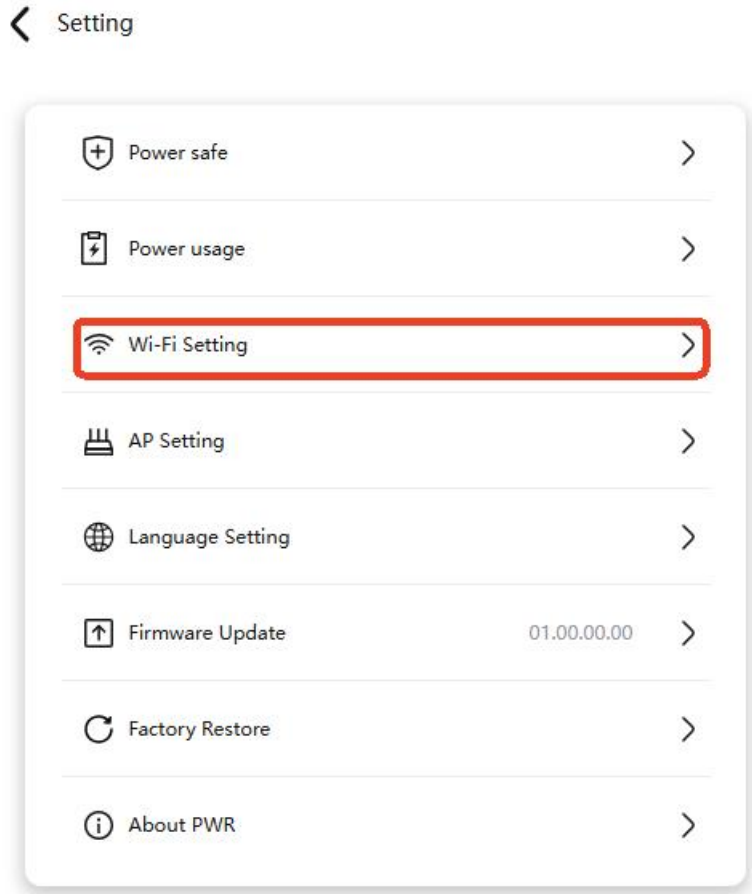

- Navigate to this page from the Settings page.
  J. Tap on this icon to detect available networks.
  J/ Select your Wi-Fi.
  J0 Enter the password.
  J1 Tap "Connect".

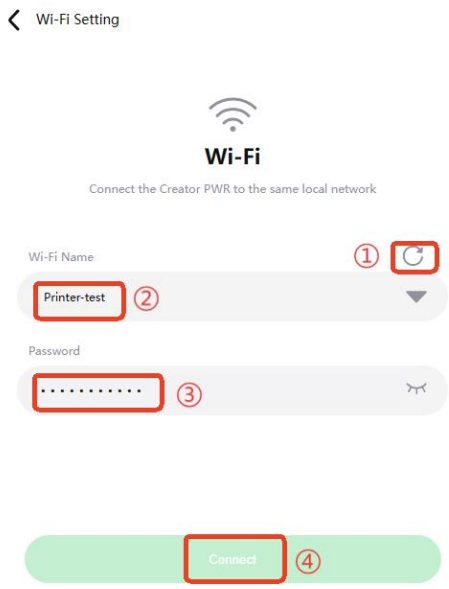

Modify AP Settings

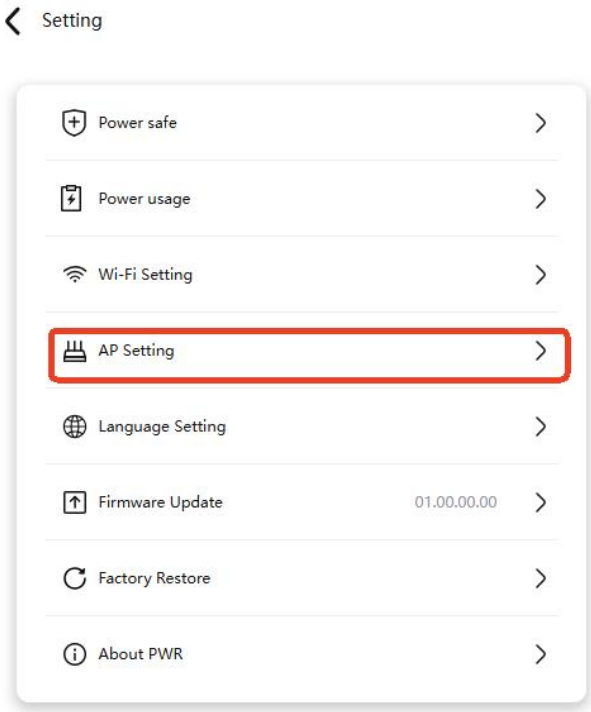

Customize the AP name and password generated by Creator PWR.
If you forget the password, press and hold the Bind button for 8 seconds to reset the device.

Change Language

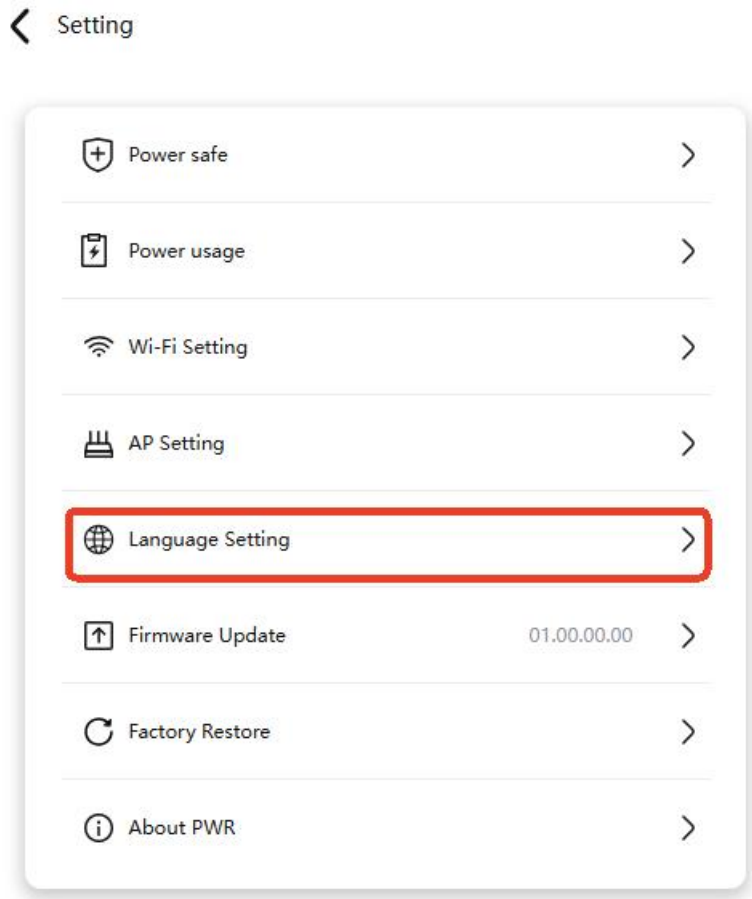

Select Chinese or English, then tap "Confirm" to apply.

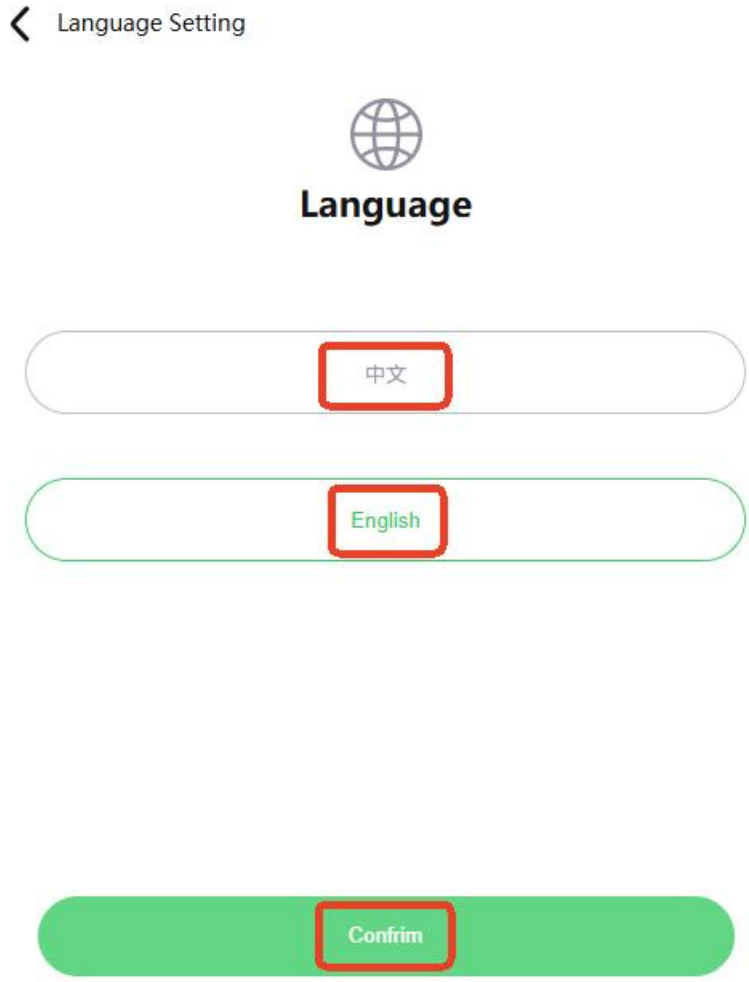

Firmware Update

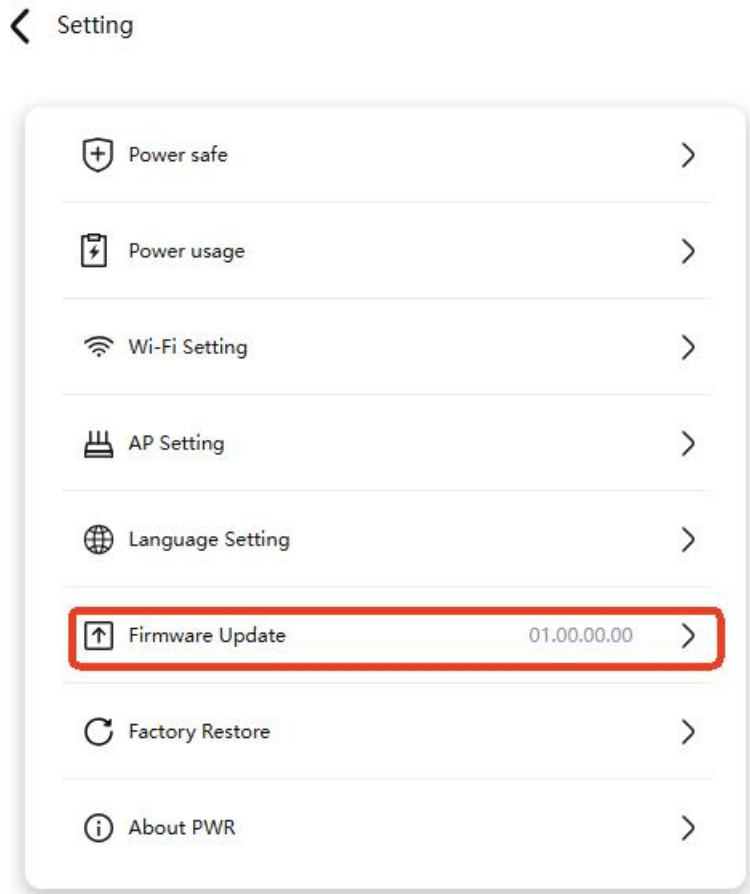
Setting
Power safe
Power usage
Wi-Fi Setting
AP Setting
Language Setting
Firmware Update
01.00.00.00
Factory Restore
About PWR

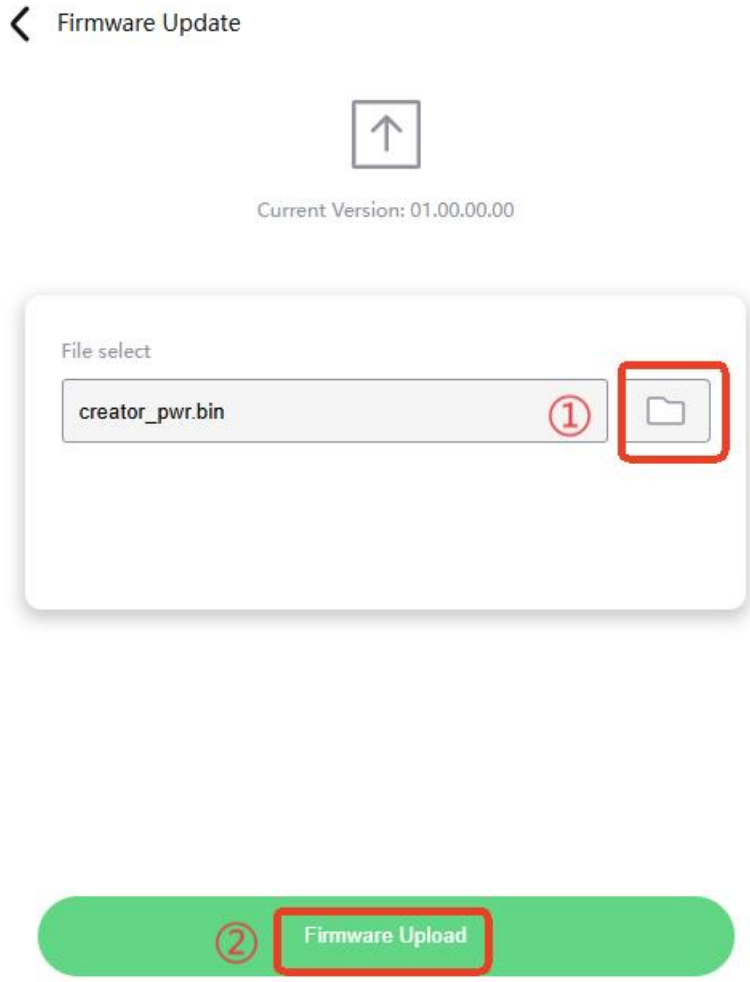

- Navigate to this page from the Settings page.
  J. Tap "Choose File Icon" to upload your `.bin` firmware.
  J/ Tap "Firmware Upload" to begin the update.

Restore Factory Settings¶

Method 1: In the Settings page, tap "Factory Restore".

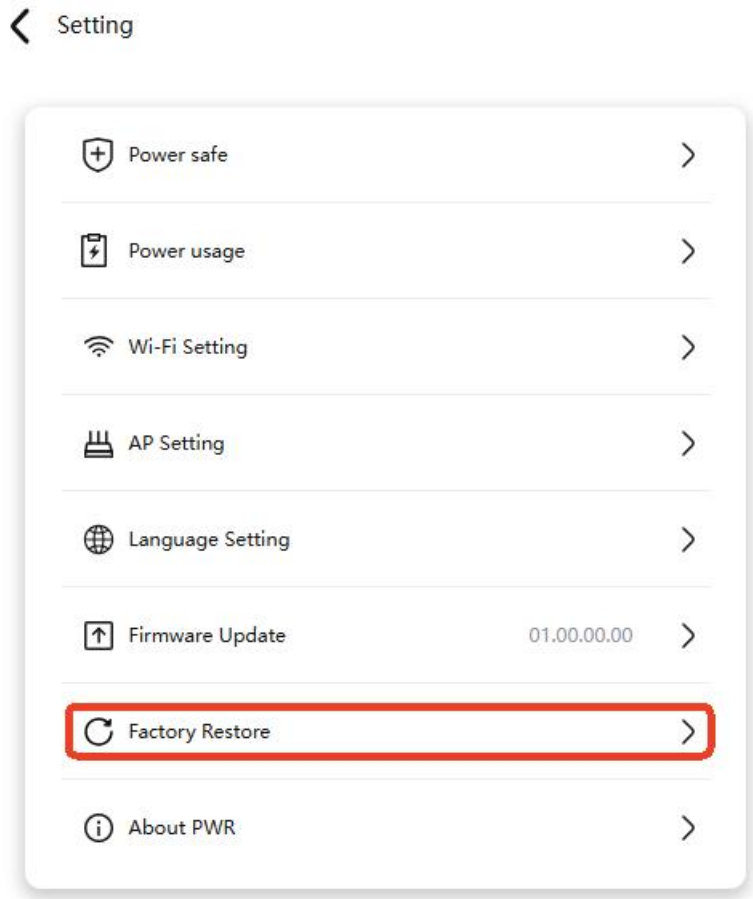

Optionally clear the device's power usage history.
After resetting, AP credentials return to default:
* **SSID:** `Creator_PWR_xxxxxxxxxxx` * **Password:** `987654321`

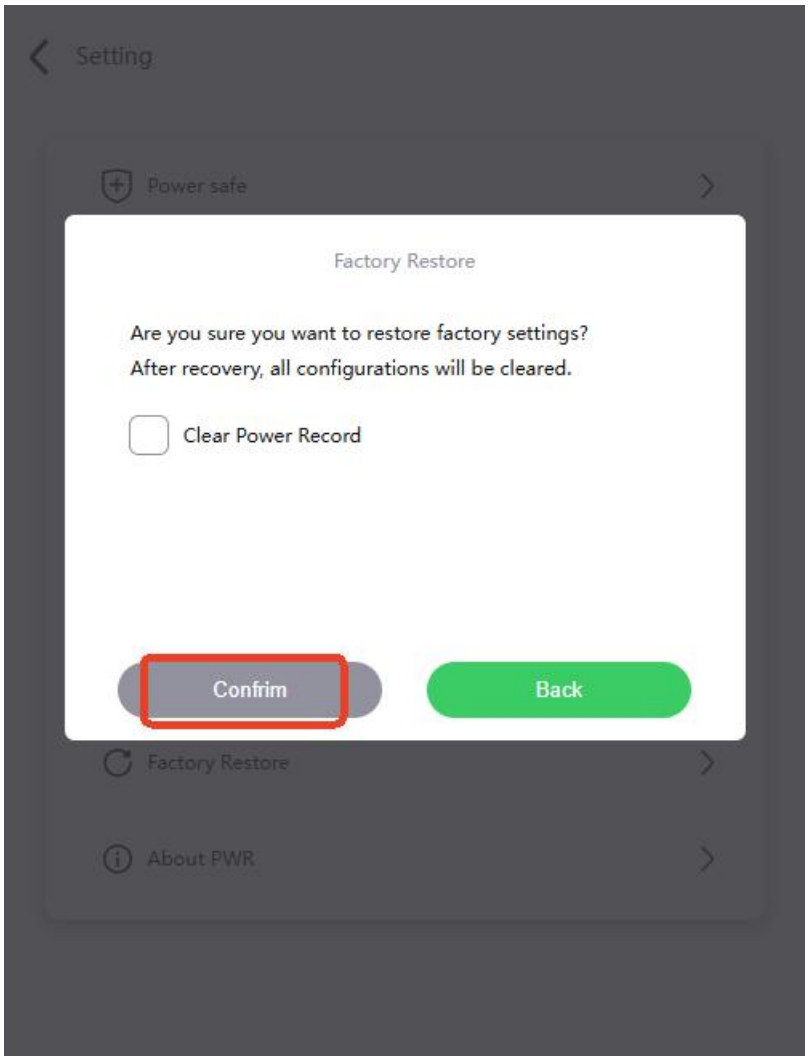

Method 2: Press and hold the **Bind button** for approximately 8 seconds until the indicator flashes red.

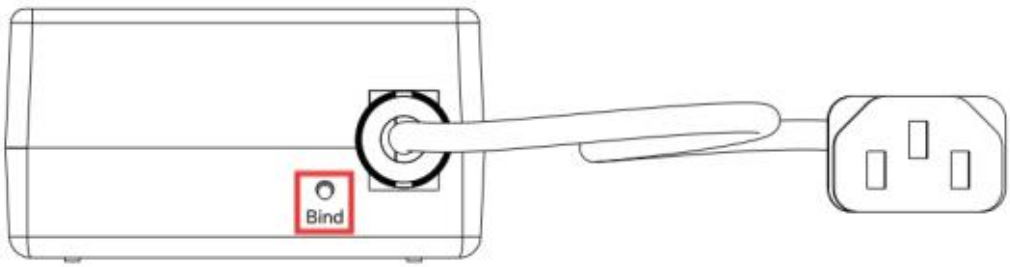

About PWR

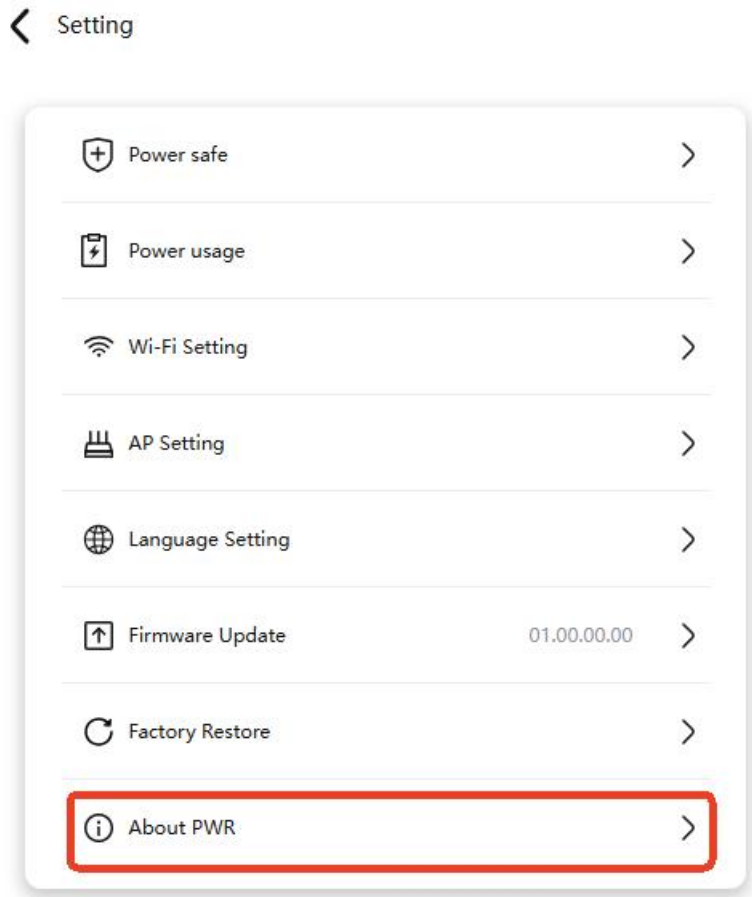
Setting
Power safe
Power usage
Wi-Fi Setting
AP Setting
Language Setting
Firmware Update
01.00.00.00
Factory Restore
About PWR

About PWR

Name	Creator PWR
PWR IP	192.168.3.190
SN	C18FCE8C02BF288