

Important Usage Information

- Store the product in a **dry** environment. Do not use it in humid conditions.
- When connecting a **220 VAC input**, **always connect the input wires to the PWR module first**, then plug the cable into the wall outlet.
- The **TYPE-C port** is for **input only**.
- The **USB-A port** is for **output only**.

FCC Warning

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference; and (2)

This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not officially approved will void your warranty and your authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a **Class B digital device** pursuant to part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, try to correct the interference by one or more of the following measures:




- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To comply with FCC RF exposure requirements, maintain a minimum distance of **20 cm (8 inches)** between the transmitter and your body during installation and operation. Use only the antenna supplied with the device.

Technical Specifications

Wi-Fi Module	ESP8684-MINI-1-H4
Memory	RAM - 272KB, Flash - 4MB
Connectivity	2.4G Wi-Fi (IEEE 802.11 b/g/n)
Operating Temperature	-10 °C ~ 60 °C

Package Contents

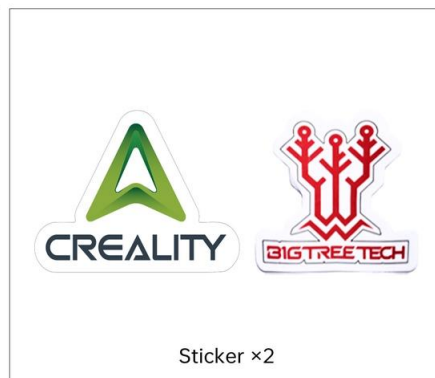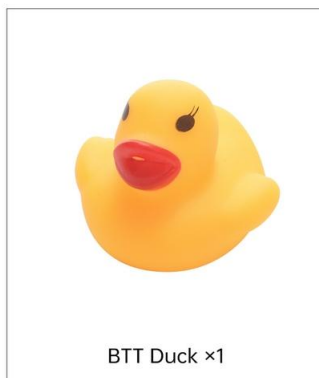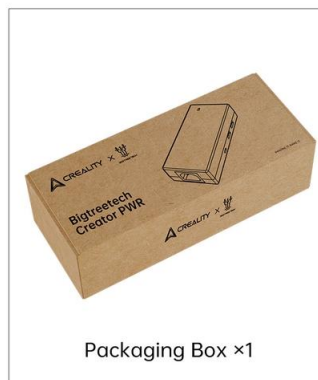

Operating Instructions

Interface Overview



USB Ports

- **USB1**

5 V controllable output; suitable for devices requiring power control (e.g., USB light strips).


- **USB2**

5 V fixed output (always on).

- **TYPE-C**

For firmware updates and factory reset.

Bind Button Functions

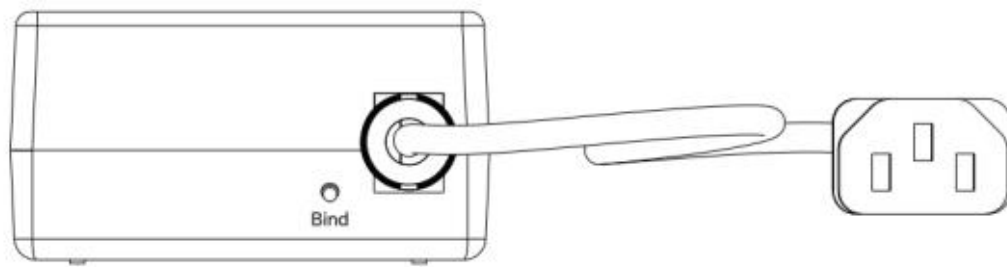

- Countdown Function :

Press and hold for 1 second to enable or disable countdown mode.

- Toggle 220 V Output :

Double-click the Bind button.

- Restore Factory Settings :

Press and hold for approximately 8 seconds until the indicator flashes red.

-

Indicator Light Description¶

- Green (steady): Power on
- Blue (breathing): Countdown active
- Red (breathing): Factory reset in progress

Initial Connection¶


WiFi Connection Guide¶

1.Connect to Creator PWR's hotspot using your mobile phone or computer.

Default credentials :

SSID: Creator_PWR_XXXXXXXXXX

Password: 987654321

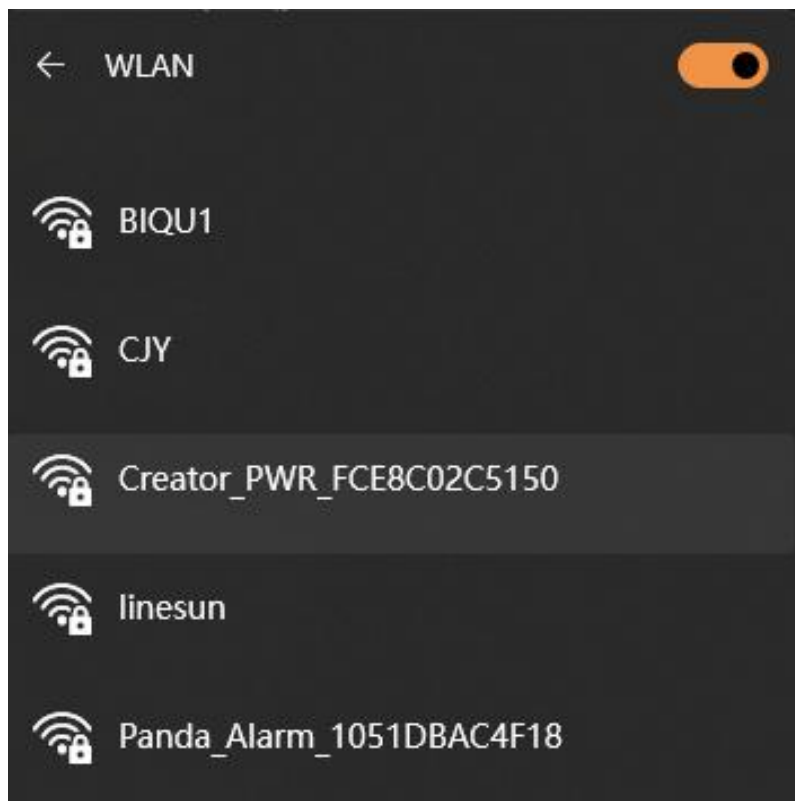

2.After connecting, the Web UI should open automatically.

If it doesn't open within 10–20 seconds,

access 192.168.254.1 manually in your browser.



Welcome to Creator PWR

Start

3. Select your language and tap "Next".



Select Language

中文

English

Next

4. The interface will display available Wi-Fi networks.
Choose the same Wi-Fi your printer uses. If your network isn't listed, tap "Scan" to refresh.



Skip



Wi-Fi

Connect the Creator PWR to the same local network

Wi-Fi Name



Printer-test



Password

.....



Next

5. Once connected, an IP confirmation popup will appear, tap "Confirm".



6. Enter your preferred printer name, printer IP address, and port **4408**, then tap "Connect". When `Connection` `Successful` appears, tap "OK".

[Skip](#)

Please Connect a Printer

Printer Name

User Printer

Printer IP

192.168.3.140

Printer Port


4408

Connect

[Web UI Operation Guide ¶](#)

[Power Control ¶](#)


[BASIC CONTROL ¶](#)

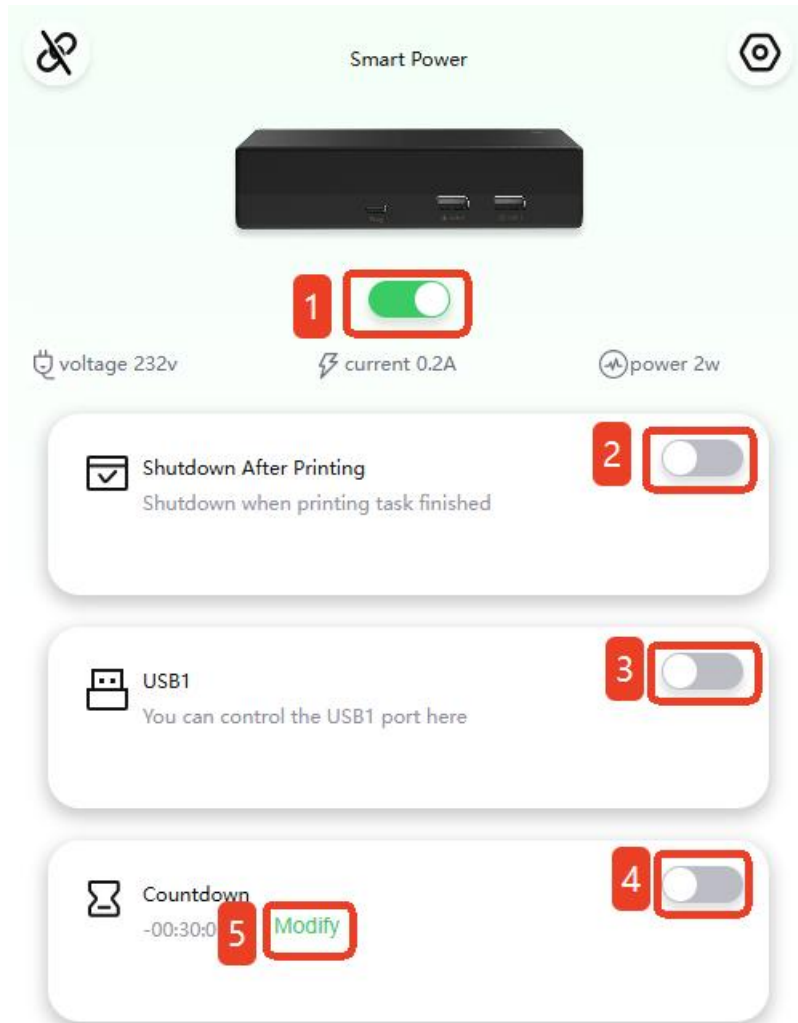

- 1. Turn the 220 V output on or off.
- 2. Toggle **Auto Power-Off After Print Completion** — when enabled, the printer powers off automatically after printing is done (the toggle resets afterward).
- 3. Turn **USB1 output** on or off.
- 4. Enable or disable the **Countdown** function.
- 5. Set the **Countdown Duration**.


POWER PARAMETERS

Displays real-time **voltage**, **current**, and **power** supplied to external devices.

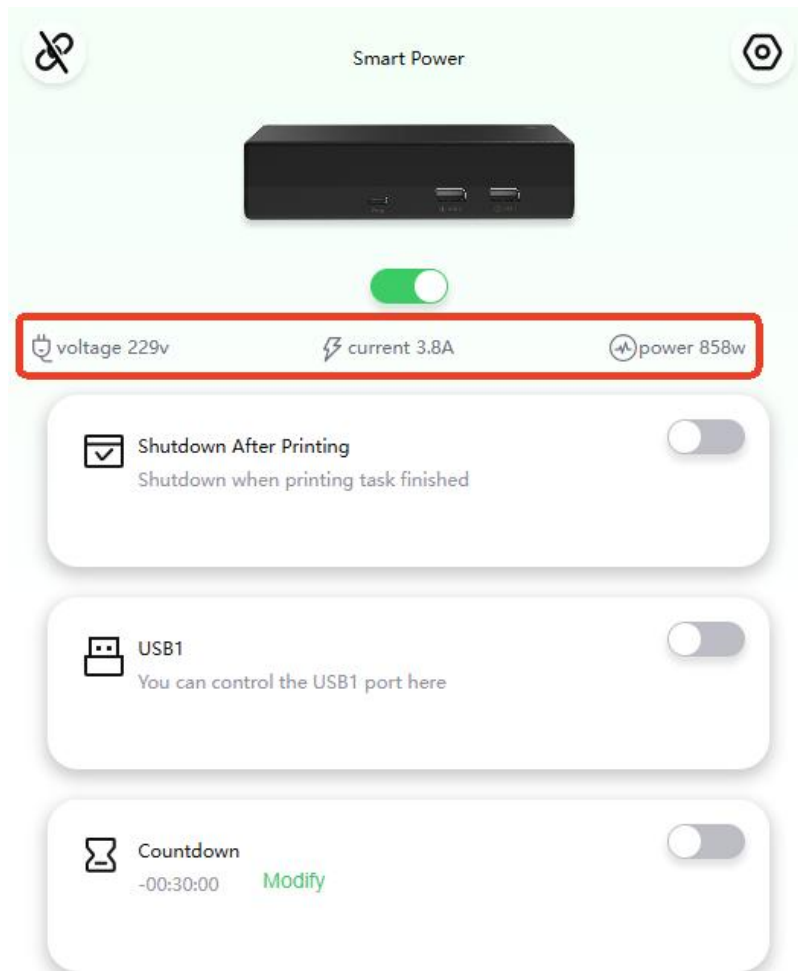


COUNTDOWN SETTINGS

Tap "Modify" to open the timer popup. Set your desired time and tap "Save".

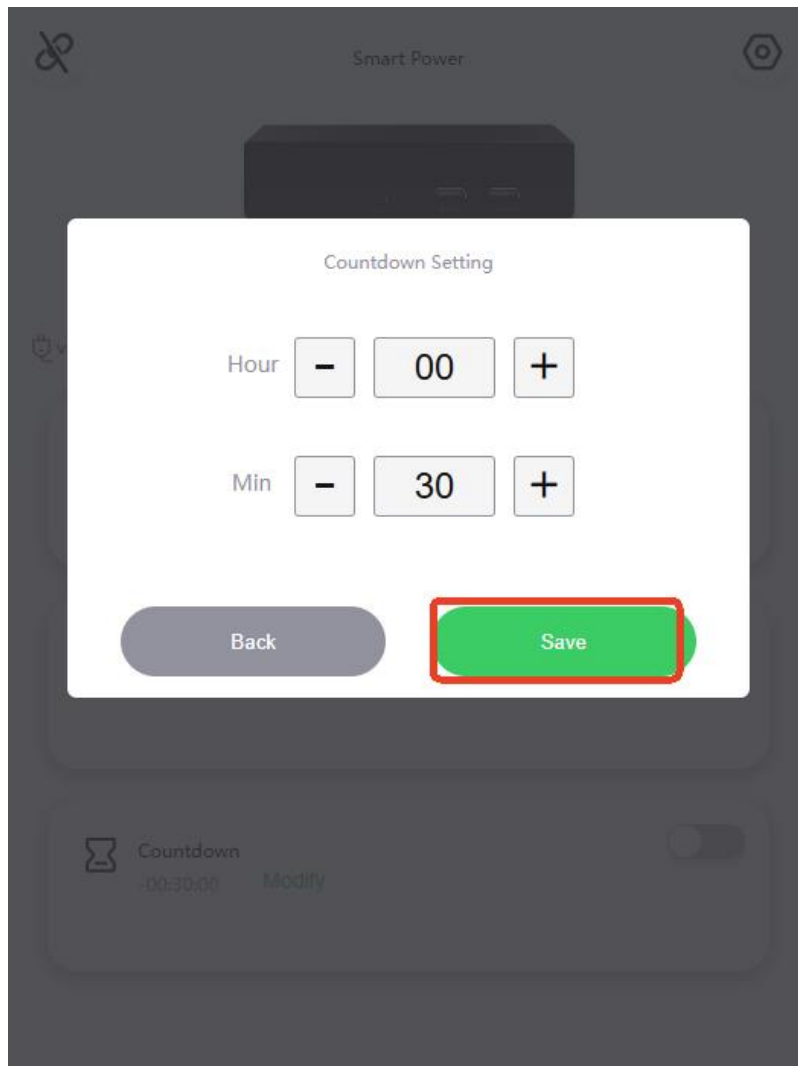


Your configured time will appear on the main interface.

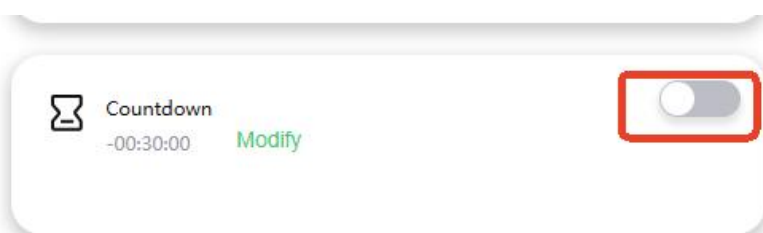


Accessing the Settings Page

Tap the "settings icon" in the top-right corner of the Power Control page.

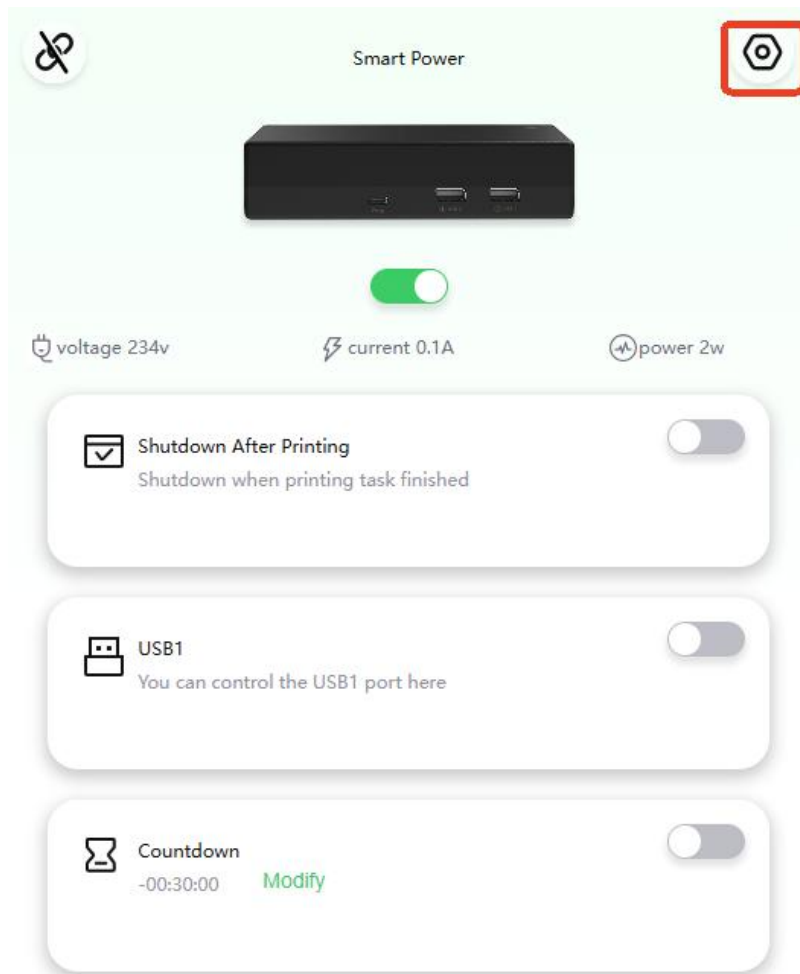

Safe Power Configuration

< Setting

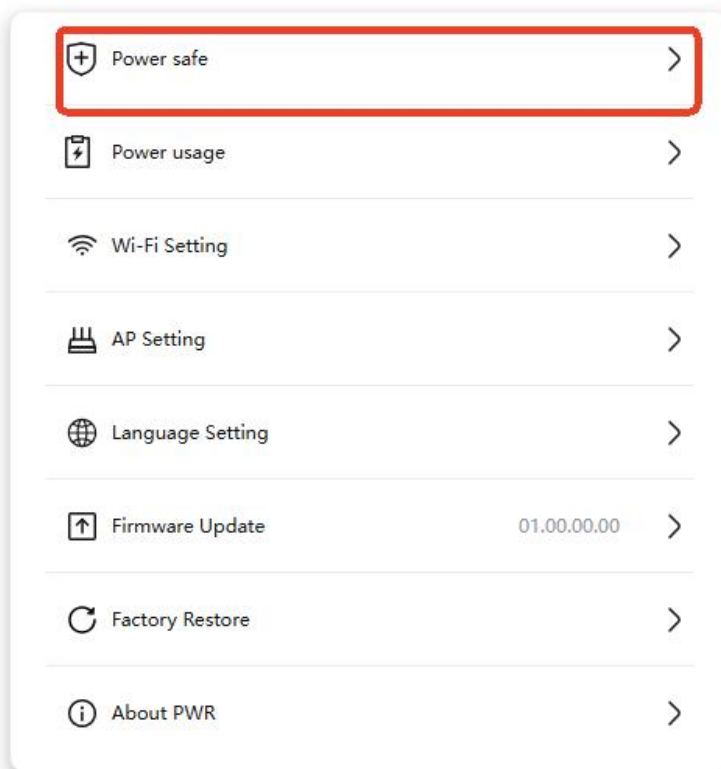

Enter **maximum** and **minimum** power limits.

Enable the toggle switches to activate protection.

When power exceeds or drops below these thresholds, the 220 V supply automatically shuts off.

< Power safe



Maximum power (W)

When the power exceeds this level, the power supply will be cut off.

2000



Minimum power (W)

When the power is lower than this, the power supply will be cut off.


10



Save

Power Usage Records

< Setting

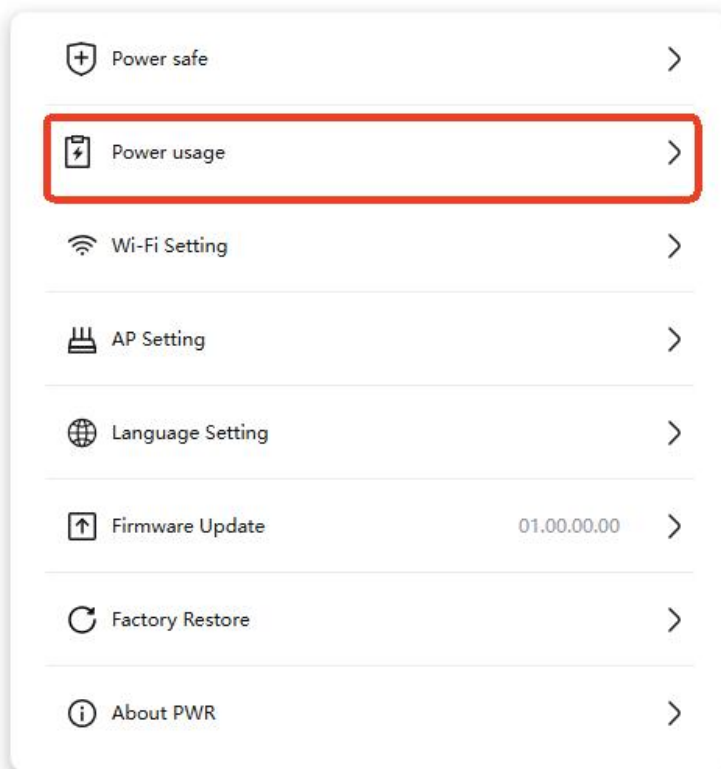

Displays cumulative **energy consumption** and **total printing time**.

Tap "Clear" to clear data.

< Power usage




Power usage 0.4kW/h

Total printing time 0.0h

Clear

Modify Wi-Fi Settings

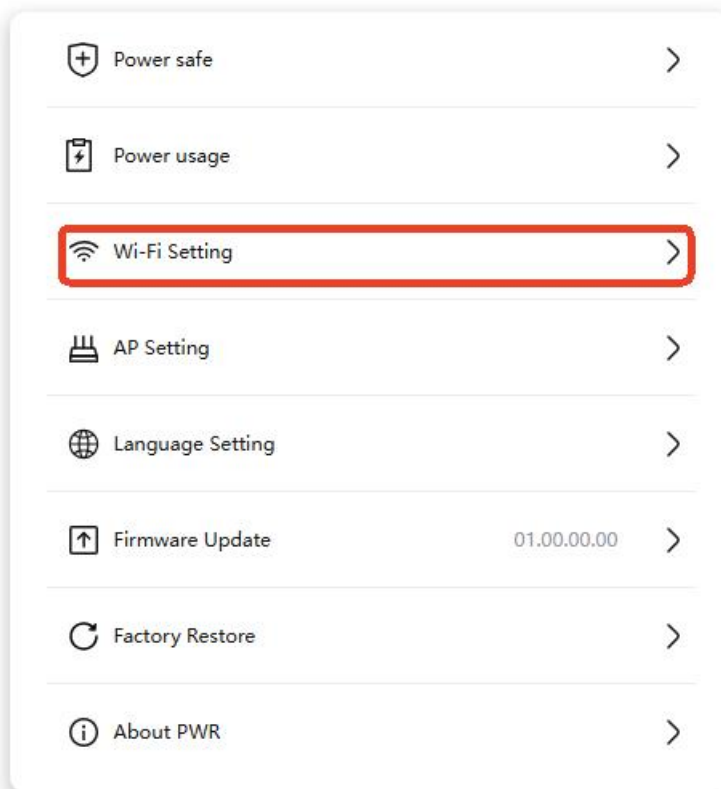

- Navigate to this page from the Settings page.
 - ① Tap on this icon to detect available networks.
 - ② Select your Wi-Fi.
 - ③ Enter the password.
 - ④ Tap "Connect".

< Wi-Fi Setting



Wi-Fi

Connect the Creator PWR to the same local network

Wi-Fi Name

①



Printer-test

②

Password

.....

③




Connect

④

Modify AP Settings

< Setting

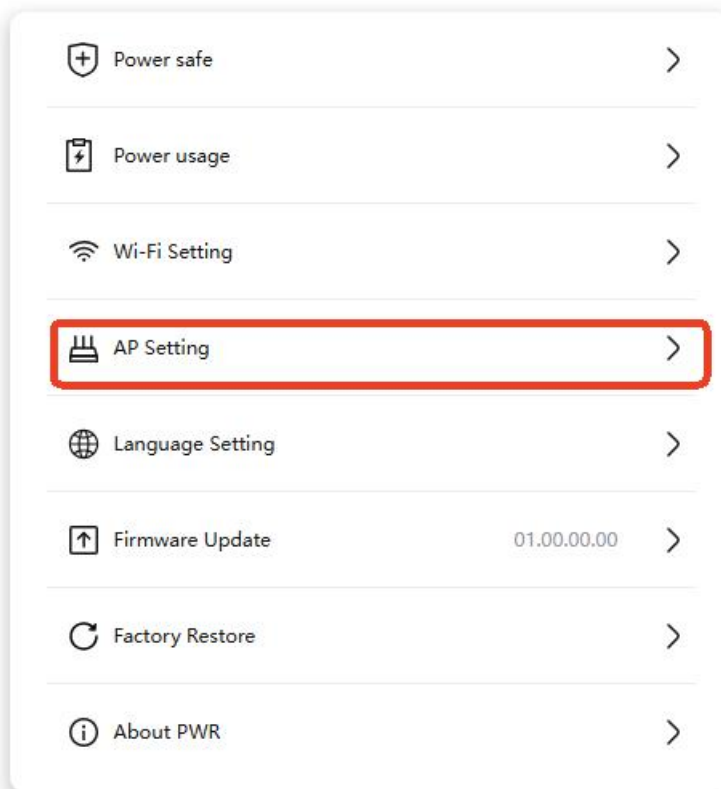

Customize the AP name and password generated by Creator PWR.

If you forget the password, press and hold the **Bind button** for 8 seconds to reset the device.

< AP Setting



AP Name

Creator_PWR_FCE8C02BF288

Please use the "AP Name" field to set the PWR AP name.

APP assword


987654321

Suggest changing the default AP password. Forgot password, please use the Butom key to reset it to factory mode.

Submit

Change Language🇺🇸

< Setting

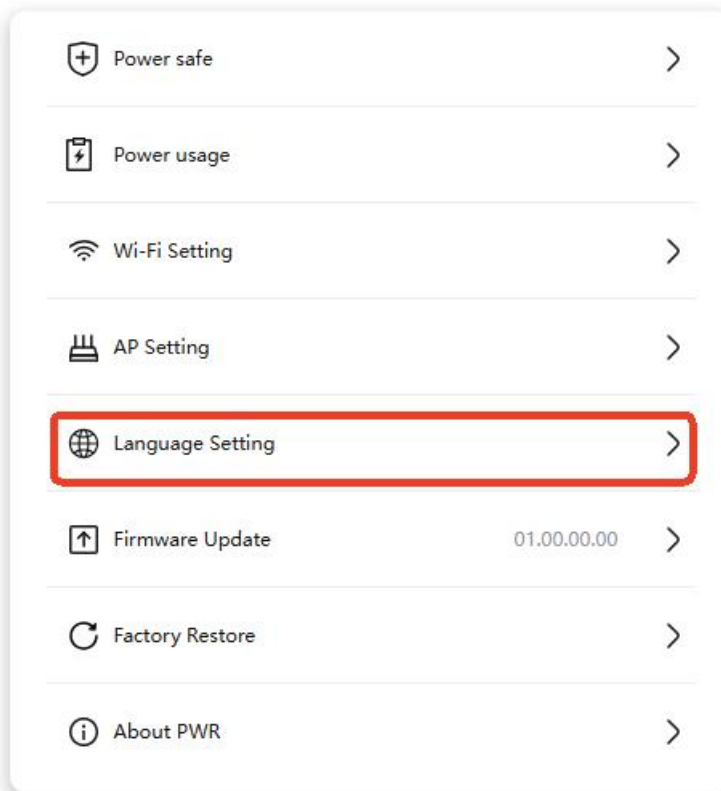

Select **Chinese** or **English**, then tap "Confirm" to apply.

< Language Setting



Language

中文

English

Confirm

Firmware Update

< Setting

 Power safe >

 Power usage >

 Wi-Fi Setting >

 AP Setting >

 Language Setting >

 Firmware Update 01.00.00.00 >

 Factory Restore >

 About PWR >

< Firmware Update



Current Version: 01.00.00.00

File select

creator_pwr.bin

①




② **Firmware Upload**

- Navigate to this page from the Settings page.
 - ① Tap "Choose File Icon" to upload your `.bin` firmware.
 - ② Tap "Firmware Upload" to begin the update.

Restore Factory Settings

Method 1: In the Settings page, tap "Factory Restore".


< Setting

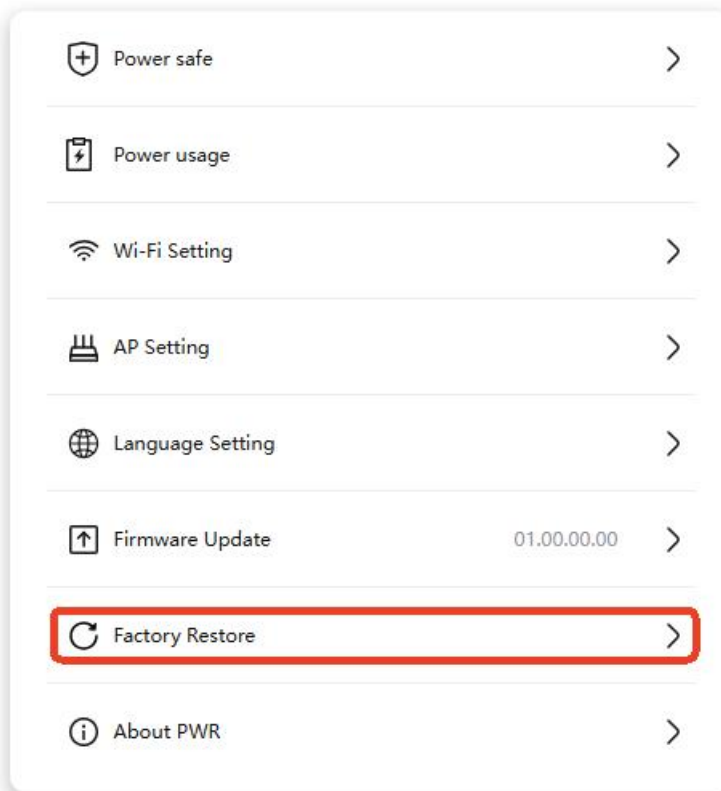


Optionally clear the device's power usage history.

After resetting, AP credentials return to default:

* **SSID:** Creator_PWR_XXXXXXXXXX * **Password:** 987654321

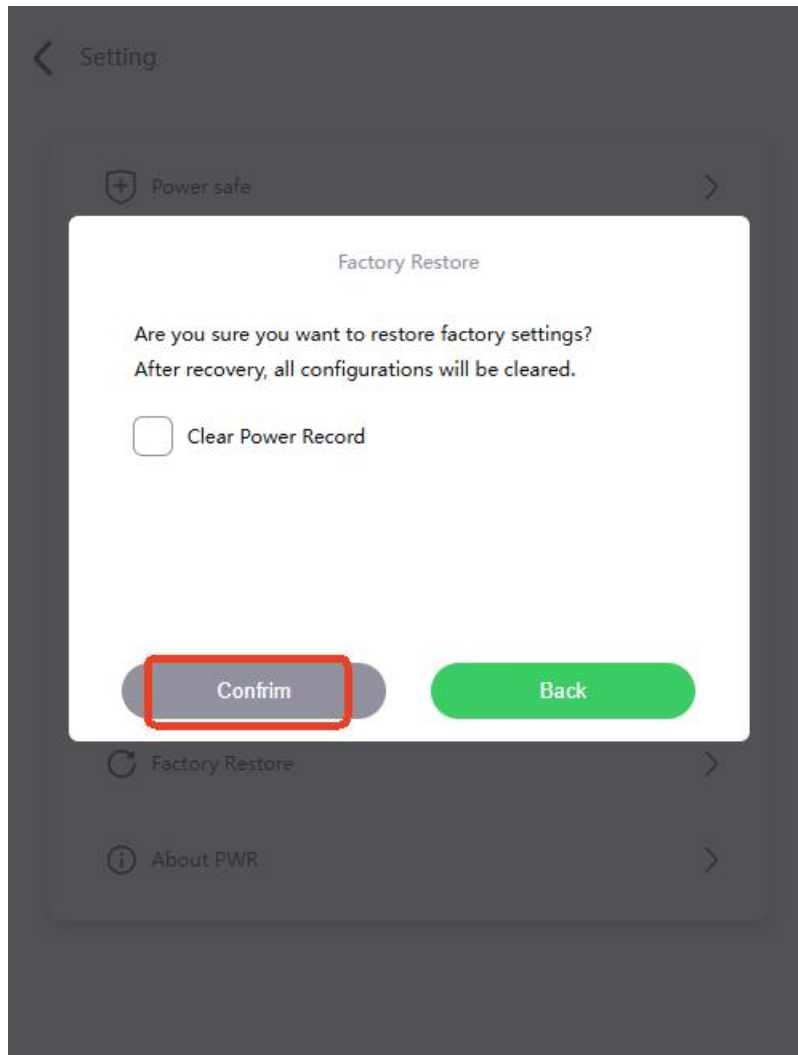


Method 2: Press and hold the **Bind button** for approximately 8 seconds until the indicator flashes red.

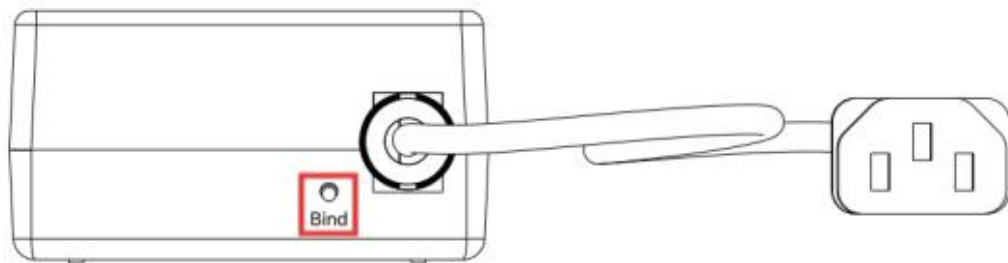

About PWR

< Setting

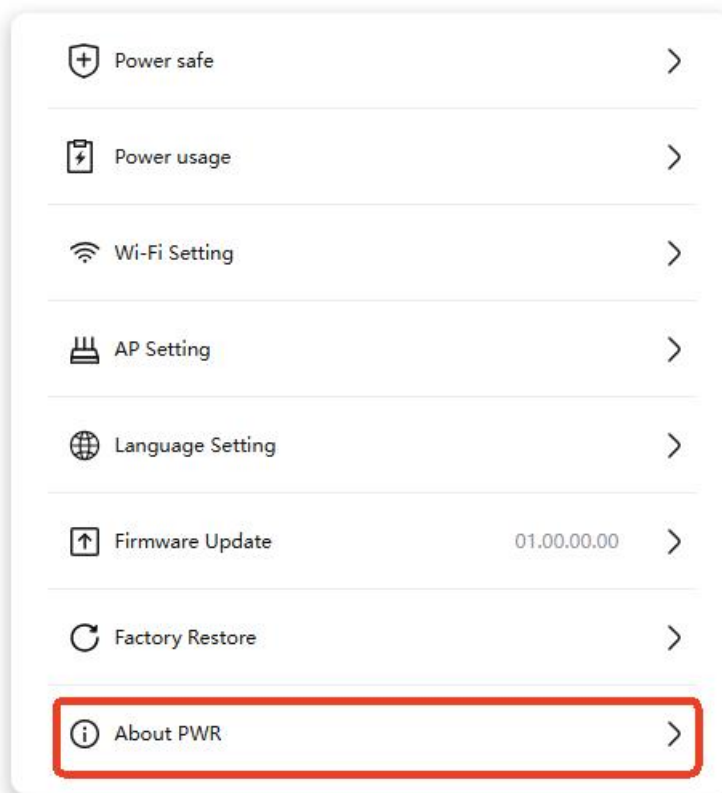

Displays the device's **IP Address** and **Serial Number (SN)**.



Name	Creator PWR
PWR IP	192.168.3.190
SN	C18FCE8C02BF288

Controlling USB1 and 220 V Power via Custom Macros¶

- Download the configuration file [creator_pwr.cfg](#)
- Upload it to **/config**.
- Add to **printer.cfg**.

```
[include creator_pwr.cfg]
```

Firmware¶

Firmware History¶

01.00.00.00¶

- Initial release.