


- U1 Front Door Courtesy Light Switch Assembly LH
- U5 Tire Pressure Warning ECU and Receiver
- V1 Rear Differential Lock Position Switch
- V2 Differential Lock Shift Actuator
- V3 Rear Speed Sensor (Skid Control Sensor Wire)
- W1 Fuel Tank Solenoid Return Valve Assembly
- W2 Fuel Tank Solenoid Main Valve Assembly
- X1 Fuel Sender Gage Assembly (Rear)
- X2 Fuel Pump (Sub)
- Y1 No. 3 Room Light Assembly
- Y2 No. 3 Room Light Assembly
- Y3 Center Stop Light Assembly
- Y4 No. 2 Room Light Assembly
- Y5 No. 1 Room Light Assembly
- a1 Rear Wiper Motor Assembly
- b1 Back Door Lock Assembly
- b3 Back Door Courtesy Light Switch Assembly
- b4 License Plate Light Assembly
- c1 Rear Window Defogger (Back Door Glass RH)
- c2 Rear Window Defogger (Back Door Glass RH)
- d1 Rear Window Defogger (Back Door Glass LH)
- e1 License Plate Light Assembly
- f1 Rear Window Defogger (Back Door Glass LH)
- i1 Outer Rear View Mirror Assembly LH
- j1 Outer Rear View Mirror Assembly RH

Position of Parts in Body (LHD 2-Door Except Pick-Up)

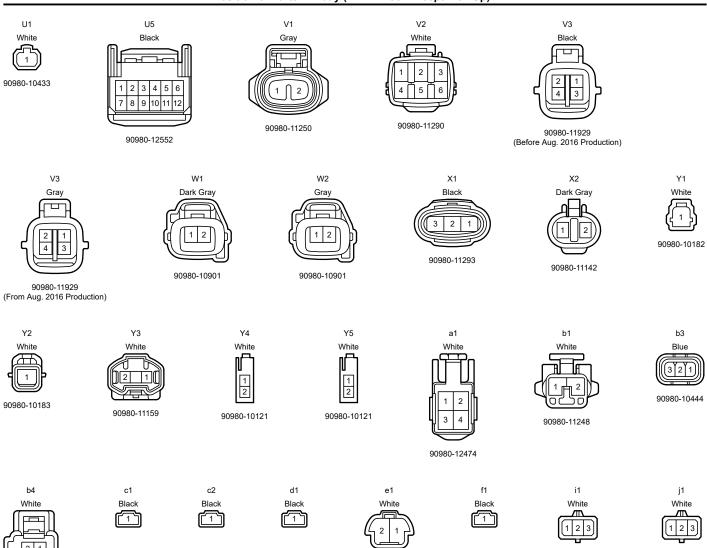

90980-10354

90980-10905

90980-10395

90980-10395