


- L27 Spiral Cable Sub-Assembly
- L28 Transponder Key Amplifier
- L29 Spiral Cable Sub-Assembly
- L30 Transponder Key ECU Assembly
- L31 Door Control ECU with Receiver Assembly
- L34 No. 26 Junction Connector
- L36 No. 28 Junction Connector
- L37 No. 29 Junction Connector
- L38 No. 30 Junction Connector
- L39 No. 31 Junction Connector
- L40 Option Connector (Auto Antenna)
- L47 Steering Sensor (Spiral Cable with Sensor Sub-Assembly)
- L49 VSC Off Switch
- L50 Combination Meter Assembly
- L52 No. 30 Junction Connector
- L53 No. 31 Junction Connector
- L55 No. 29 Junction Connector
- L56 Tire Pressure Warning Reset Switch
- L57 No. 37 Junction Connector
- L58 No. 38 Junction Connector
- L59 Transponder Key Coil
- L62 Spiral Cable Sub-Assembly
- M1 Hazard Warning Signal Switch Assembly
- N1 Front Passenger Side Squib Circuit (Instrument Panel Passenger Airbag Assembly)
- z1 Horn Button Wire Sub-Assembly, Spiral Cable Sub-Assembly
- z2 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z3 Cruise Control Switch Wire , Spiral Cable Sub-Assembly

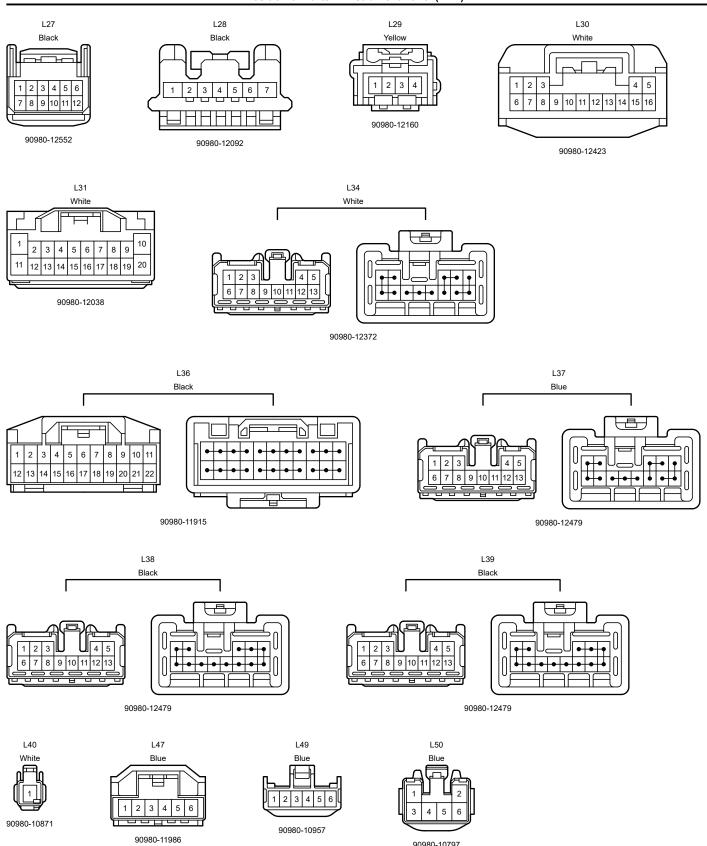

90980-10797

