


- S3 Parking Brake Switch Assembly
- Front Door Courtesy Light Switch Assembly RH S4
- Front Door Courtesy Light Switch Assembly LH S6
- No. 3 Room Light Assembly S7
- No. 3 Room Light Assembly S8
- S12 Front Seat Inner Belt Assembly RH
- S15 Parking Brake Switch Assembly
- S18 Front Seat Outer Belt Assembly RH
- Front Seat Inner Belt Assembly RH S19
- Front Door Courtesy Light Switch Assembly RH S20
- Curtain Shield Airbag Assembly RH S22
- Door Side Airbag Sensor RH S23
- S25 Curtain Shield Airbag Assembly LH
- Door Side Airbag Sensor LH S26
- Front Seat Outer Belt Assembly LH S27
- Front Seat Inner Belt Assembly LH S28
- Front Door Courtesy Light Switch Assembly LH S29
- Forward Recognition Camera S34
- Forward Recognition With Heater Hood Sub-Assembly S35
- Т3 Fuel Pump
- Fuel Sender Gage Assembly (Rear) T4
- T10 **Trailer Socket**
- **Back Buzzer Assembly** T11
- License Plate Light Assembly RH T12
- License Plate Light Assembly RH T13
- Rear Combination Light Assembly RH T14
- License Plate Light Assembly LH T15
- T16 License Plate Light Assembly LH
- T17 Rear Combination Light Assembly LH
- T18 Rear Fog Light Socket & Wire
- Fuel Sender Gage Assembly (Rear) T19
- V1 Rear Differential Lock Position Switch
- Differential Lock Shift Actuator V2
- V3 Rear Speed Sensor (Skid Control Sensor Wire)
- W1 Fuel Tank Solenoid Return Valve Assembly
- W2 Fuel Tank Solenoid Main Valve Assembly
- X1 Fuel Sender Gage Assembly (Rear)
- Χ2 Fuel Pump (Sub)

Position of Parts in Body (RHD 2-Door Pick-Up)

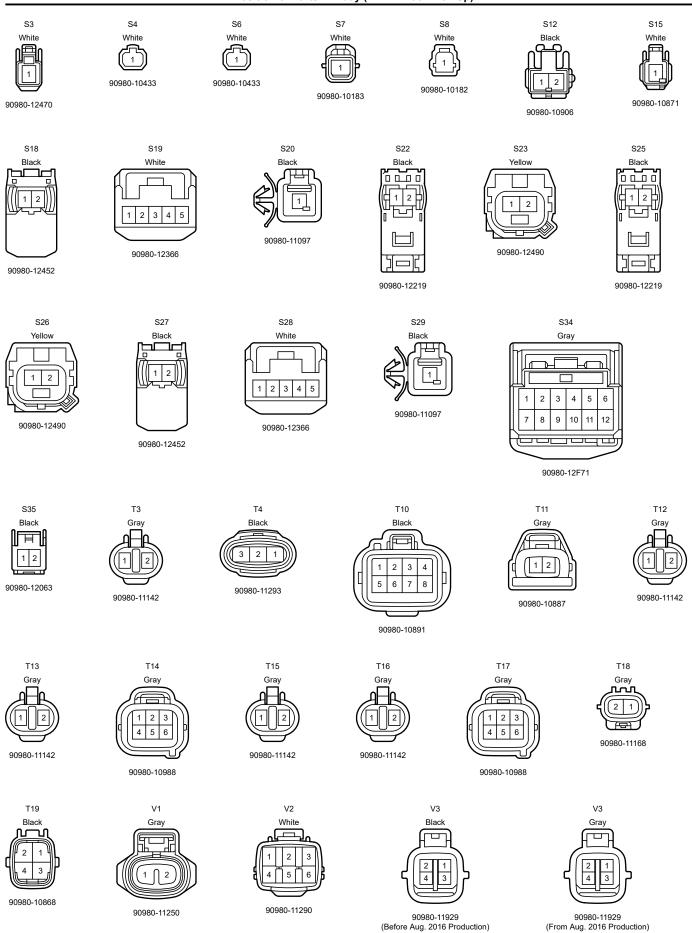

Position of Parts in Body (RHD 2-Door Pick-Up)









-4-