



- A1 Headlight Assembly LH
- A2 Windshield Washer Motor and Pump Assembly
- A3 Headlight Assembly LH
- A4 Low Pitched Horn Assembly
- A5 High Pitched Horn Assembly
- A6 A/C Pressure Switch (Cooler Refrigerant Liquid Pipe B)
- A7 Headlight Assembly LH
- A9 Fuel Sediment Switch
- A10 Antenna with Holder Assembly
- A11 Side Turn Signal Light Assembly LH
- A12 Windshield Wiper Motor Assembly
- A13 Front Airbag Sensor LH
- A16 Fuel Heater
- A18 No. 1 Vacuum Switching Valve (A/C Idle-Up)
- A20 Brake Actuator Assembly
- A21 Front Speed Sensor LH (Skid Control Sensor Wire LH)
- A22 No. 1 Junction Connector
- A23 No. 2 Junction Connector
- A25 Brake Vacuum Check Valve Assembly
- A26 Brake Vacuum Check Valve Assembly
- A27 Brake Vacuum Check Valve Assembly
- A28 Brake Vacuum Check Valve Assembly
- A35 Battery (Main)
- A36 Battery (Main)
- A37 Battery (Sub)
- A38 Headlight Assembly LH
- A39 Windshield Wiper Motor Assembly
- A41 No. 1 Vacuum Switching Valve (A/C Idle-Up)
- B1 No. 2 Differential Lock Shift Actuator
- B2 Front Differential Lock Position Switch

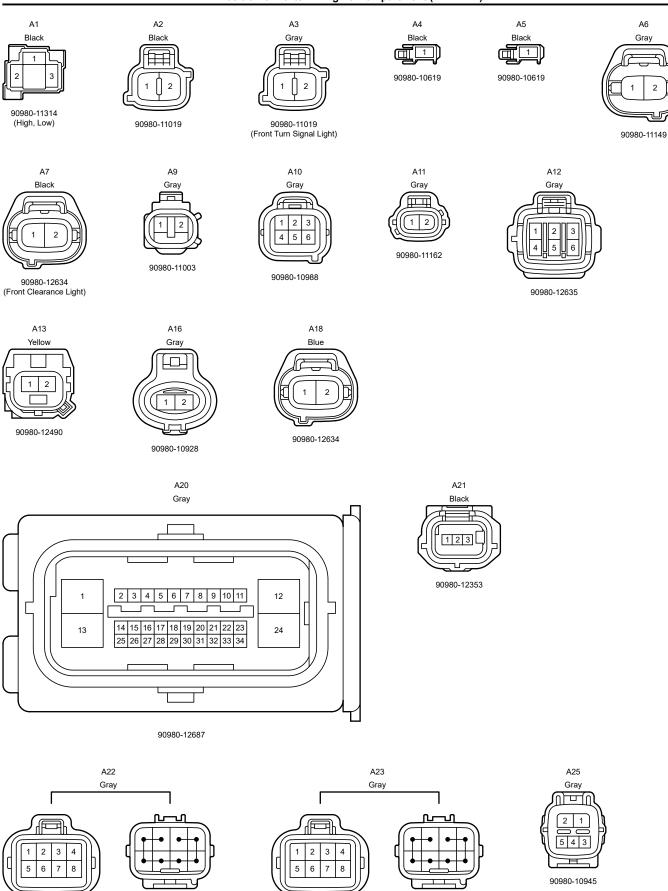


90980-10897

90980-10897

## Position of Parts in Engine Compartment (RHD 1HZ)

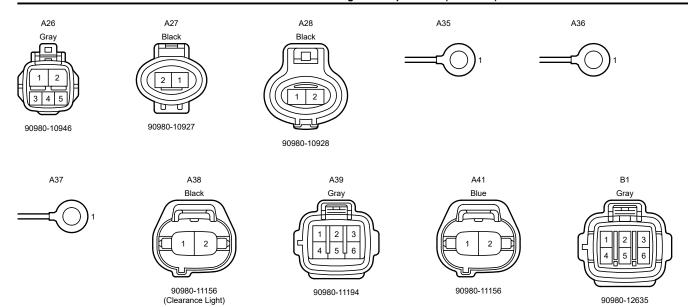



90980-11250